# Quick Reference Guide For Partner Plus R1 – System Programming

<u>System Programming</u> – From extension 10 (MLS-12D only) dial **Feature** 00, then press the **Left Intercom** button 2 times to enter **System Programming**. The numbers in parentheses after the program item heading are the factory default values. To end the **System Programming** session dial **Feature** 00.

### **System Date (010100)**

Dial #101

Dial date (MMDDYY)

#### **System Time (0000)**

Dial #103

Dial time (HHMM) in 24-hour format

#### **Transfer Return Rings (4)**

Dial #105

Dial return rings (0-9), 0=No return

#### Recall Timer (18=450msec)

Dial #107

Dial recall interval (01-80)

Each increment of 1 = 25msec

#### **Outside Conference Denial (1)**

Dial #109

1=Allowed, 2=Disallowed

#### Line Type (1)

Dial #202

Dial line number (1-8)

1=C.O., 2=PBX

#### **Line Assignment**

Dial #301

Dial extension (10-33)

Dial line number (1-8)

1=Assigned, 2=Not assigned

#### System Day (1)

Dial #102

Dial day (1-7, 1=Sun, 7=Sat)

#### **Number of Outside Lines**

Dial #104

Dial number of lines (1-8)

#### **PBX Dial-Out Code (9)**

Dial #106

Dial dial-out code (0-9)

#### **Rotary Dial Timeout (2)**

Dial #108

1=4 sec, 2=8 sec, 3=12 sec

#### Dial Mode (1)

Dial #201

Dial line number (1-8)

1=Touchtone, 2=Rotary

### **Hold Disconnect Timer (1)**

Dial #203

Dial line number (1-8)

1=Long (450msec), 2=Short (50ms)

#### **Line Access Restriction (1)**

Dial #302

Dial extension (10-33)

Dial line number (1-8)

1=No restriction, 2=Out only,

3=In only, 4=No access

# Quick Reference Guide For Partner Plus R1 – System Programming

Language (1)

Dial #303

1=English, 2=Spanish, 3=French

**Automatic Extension Privacy (2)** 

Dial #304

Dial extension (10-33)

1=Assigned, 2=Not assigned

Abbreviated Ring (1)

Dial #305

Dial extension (10-33) 1=Active, 2=Not active **Copy Settings** 

Dial #399

Dial source extension (10-33)

Dial target extension (10-33)

**Outgoing Call Restriction (1)** 

Dial #401

Dial extension (10-33)

1=No restriction, 2=Inside only, 3=Local only

Toll Call Prefix (1)

Dial #402

1 = 0/1 + Area Code,

2=Area Code only

**System Password** 

Dial #403

Dial 4 digits to set password

**Disallowed Phone Number List** 

Dial #404

Dial list number (1-4)

Dial list entry (01-10)

Dial phone number (12 digits max.)

Press Enter

**Disallowed List Assignment (2)** 

Dial #405

Dial extension (10-33)

Dial list number (1-4)

1=Assigned, 2=Not assigned

**Emergency Phone Number List** 

Dial #406

Dial list entry (01-10)

Dial phone number (12 digits max.)

Press Enter

**Allowed Phone Number List** 

Dial #407

Dial list number (1-4)

Dial list entry (01-10)

Dial phone number (12 digits max.)

**Press Enter** 

**Allowed List Assignment (2)** 

Dial #408

Dial extension (10-33)

Dial list number (1-4)

1=Assigned, 2=Not assigned

**Pickup Group Extensions (1)** 

Dial #501

Dial extension (10-33)

1=Assigned, 2=Not assigned

**Calling Group Extensions (1)** 

Dial #502

Dial extension (10-33)

1=Assigned, 2=Not assigned

# Quick Reference Guide For Partner Plus R1 – System Programming

### Night Service Button (Ext. 10 Only) (2)

Dial #503

1=Assigned to next available button w/lights 2=Not assigned

#### Fax Extension (2)

Dial #601

Dial extension (10-33)

1=Assigned, 2=Not assigned

#### Hotline

Dial #603

Dial hotline extension (11-33)

Dial alerted extension (10-33)

#### **Doorphone 2 Extension**

Dial #605

Dial extension (12-15, 18-21, 24-27 or 30-33 only)

#### **System Reset**

Dial #728

All calls disconnected, all programming saved

# Night Service Group (1)

Dial #504

Dial extension (10-33)

1=Assigned, 2=Not assigned

#### Music-On-Hold (1)

Dial #602

1=Active, 2=Not active

#### **Doorphone 1 Extension**

Dial #604

Dial extension (12-15, 18-21, 24-27, or 30-33 only)

#### **Doorphone Alert Extensions (1)**

Dial #606

Dial extension (10-33)

1=No Alert, 2=Door 1 Alert,

3=Door 2 Alert, 4=Door 1&2 Alert

#### **System Initialization**

Dial #989

Display "Restart – Defaults"

Dial 25327 (CLEAR)

System is returned to factory default

# Quick Reference Guide For Partner Plus R1 – Centralized Programming

<u>Centralized Programming</u> – From extension 10 (MLS-12D only) dial **Feature** 00, press the **Left Intercom** button 2 times, then press the **Right Intercom** button 1 time to enter **Centralized Programming**. The following station features can <u>only</u> be changed in **Centralized Programming**. To program another extension, press the **Right Intercom** button. Dial **Feature** 00 to end the programming session.

<u>Automatic Line Selection</u> (Do this procedure first before programming other features) Dial extension (10-33)

Dial \*\*

Touch line buttons in the order of desired selection. (To select intercom dial tone, touch the **Left Intercom** button first, then touch line buttons in the order of desired selection.) Dial \*\* to end

### **Line Ringing**

Dial extension (10-33)

Observe the green lights for each line assigned to the extension.

Immediate Ring = Steady light
Delayed Ring = Slow flashing light
No Ring = Fast fluttering light

Press each line button until the desired ring option is set.

# **Partner Plus R1 – Station Features**

To program a feature to a station button follow one of the following procedures:

# Station Programming (At the station being programmed)

Dial Feature 00

Press the button to be programmed

Press the **Feature** button, then dial a feature code listed below

Program another button, or Dial Feature 00 to end

#### Centralized Programming (At extension 10 only)

Dial extension (10-33) to be programmed

Press the button to be programmed

Press the Feature button, then dial a feature code listed below

Program another button, or Dial Feature 00 to end

#### **Feature Codes**

\***Do Not Disturb** = 01

Exclusive Hold = 02

**Recall** (Flash) = 03

Saved Number Redial = 04

Last Number Redial = 05

Conference Drop = 06

\*Privacy = 07

**Touchtone Enable** = 08

Message Light On = 09

Message Light Off = 10

\* = Requires a button with lights

#### **Additional Features**

# Enter Station Programming, or Centralized Programming

Press button to be programmed

**Call Pickup Individual** = Press **Left Intercom**, dial 6, dial extension (10-33)

Call Pickup Group = Press Left Intercom, dial 66

**Loudspeaker Paging = Press Left Intercom**, dial 70

**Group Calling** (Internal Paging) = Press **Left Intercom**, dial 71

# Quick Reference Guide For Partner Plus R1 – Auto/Speed Dialing

#### **Auto Dial – Inside** (Station DSS/BLF)

Enter Station Programming, or Centralized Programming

Press the button to be programmed

Press the **Left Intercom** button

Dial an extension (10-33)

Note: Dial \* before the extension to make this a voice call instead of a ringing call

#### <u>Auto Dial – Outside</u>

### Enter Station Programming, or Centralized Programming

Press the button to be programmed

Dial outside phone number (Up to 20 digits including special dialing characters)

#### **Personal Speed Dial**

#### **Enter Station Programming or Centralized Programming**

Press the **Feature** button

Dial a 2-Digit Code (80-99)

Dial outside phone number (Up to 20 digits including special dialing characters.)

### **System Speed Dial (Note: NOT Done In System Programming)**

At extension 10, dial Feature 00

Press **Feature** followed by a 2-digit speed dial code (20-79)

Dial phone number (Up to 20 digits including special dialing characters)

#### **Special Dialing Characters**

**Touchtone Enable = Press Transfer button** 

**Stop Dialing** = Press **Mic** button

**Pause** (1.5 seconds) = Press **Hold** button

**Recall** (Flash) = Press **Spkr** button

**Restriction Override** = Dial \* before the phone number

Dial Feature 00 to end

J & J Communications 770-795-5462 or 888-552-6665 www.jandjcommunications.com