

# AT&T MLC-6

Cordless Telephone Quick Reference

## DISPLAY AND CONTROLS

- This card describes the MLC-6 cordless phone's display and controls only.
- To use the MLC-6 phone with your AT&T PARTNER™ Plus or PARTNER Communications System, follow call handling and programming instructions for the MLS-6™ phone in the *Quick Reference* card provided with the system.

The MLC-6 cordless and MLS-6 corded phones work similarly with these systems. Just remember to press the On/Off button to turn on your cordless phone before pressing any other buttons.

### HELP!

For more information, see *MLC-6 Cordless Telephone: Installation and Troubleshooting*. If you need assistance, call the AT&T Helpline at 1 800 628-2888.

 


PARTNER and MLS-6 are trademarks of AT&T.

## Handset Controls

### Directory Card

Write important phone numbers, extension numbers, or Speed Dial numbers on this card (behind the cover containing the User Instructions)

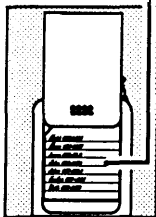

### Earpiece Volume Control Switch

Slide switch to adjust volume of earpiece  
Two positions:  
Normal and High.

### Intercom Buttons (2)

Press either button to make or answer an intercom (inside) call.

### Status

Press to turn on display when handset is off, or to update display when STAT indicator appears.

### On/Off

To turn handset on, press once. ON indicator appears in display. To turn off, press again. Turn on to make or answer a call, and turn off to "hang up."

### Conf (Conference)

Press to conference in (add) another party to your call.

### User Instructions

A quick reference to most important cordless phone features.

### Antenna

Extend telescoping type completely when making or answering calls. (Optional flexible antenna [included] does not extend or retract.)

### Handset Display

Displays status of lines, channels, and range. For detailed description, see inset figure.

### Outside Line/Programmable Buttons (4)

Connected to outside lines—press to make and receive calls. On PARTNER Plus system only, a button not connected to an outside line can be programmed to store an autodial number or a dial-code feature (such as Recall).

### Channel Button

Press to change channels when you hear noise on a call.

### Hold

Press to put a call on hold.

### Feat (Feature)

Press to enter program mode or to use dial-code features.

 
### Trans (Transfer)

Press to transfer a call to another extension.

### Handset Extension Label

Write the extension number on this label using a pencil or ball-point pen only.


## Handset Display

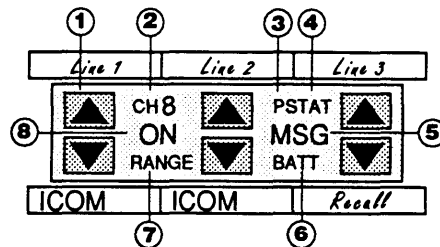


- Line status indicators show status of outside lines (Lines 1-3 and Recall) and intercom lines (ICOM). Arrow or rectangle "points" to the line button it represents and flashes in different patterns to show activity on the line (see inset below).
- CH# shows the Channel (0-9) being used. Press Channel button to change channel. When handset enters channel program mode, C appears in the # position.
- P appears when in program mode.
- STAT appears to indicate that the display is not updated and potentially incorrect. (Press Status to update display.)
- MSG appears when someone else signals you via the Message Light On feature (PARTNER Plus only).
- BATT appears when there are only a few minutes of conversation time left. Handset gives 4 short beeps. Place handset on base to recharge.
- Range appears (and handset beeps twice) if you press handset buttons when handset is out of the base's range. To make or receive calls, move handset closer to base.
- ON appears when the handset is turned on after pressing On/Off.

## Line Status Indicators

 Arrows (▲ or ▼) indicate activity at YOUR extension.

Rectangle  indicates activity at ANOTHER extension.

Steady on  Indicates busy line.

Off (off continuously)  Indicates idle line.


Flash Long on, long off indicates a ringing call.

Wink Long on, short off indicates a call on hold.

Flutter Short on, short off indicates a call on exclusive hold (PARTNER Plus only).

Broken flutter Short on and off followed by long off indicates problem or error (PARTNER Plus only).

# Base Unit Controls

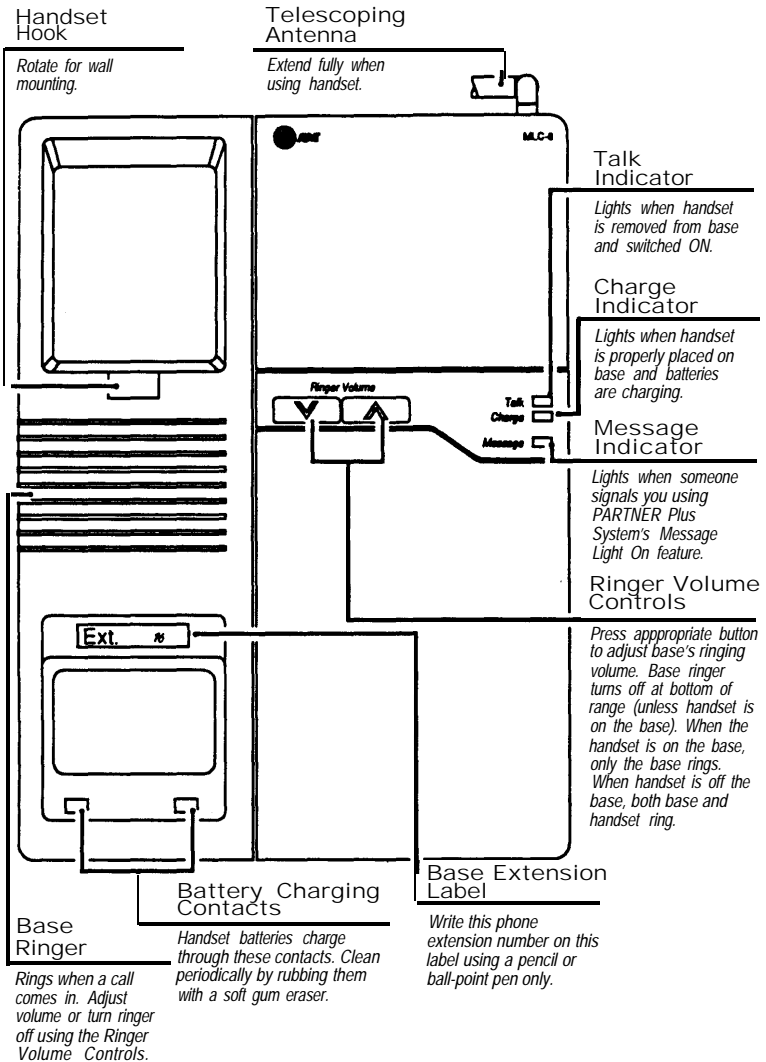 

**Using more than one cordless phone**  
When using more than one MLC-6 phone, program each to operate on different channels. See Installation and Troubleshooting guide.