

OmniAccess 780 Hardware Users Guide

Release 2.2



26801 West Agoura Road

Calabasas, CA 91301

(818) 880-3500

FAX (818) 880-3505

support@ind.alcatel.com

US Customer Support—(800) 995-2696

International Customer Support—(818) 878-4507

Internet—service.esd.alcatel-lucent.com

Website: www.alcatel-lucent.com

Copyright

The Specifications and Information regarding the products in this manual are subject to change without notice. All statements, information, and recommendations in this manual are believed to be accurate but are presented without warranty of any kind, express or implied. Users must take full responsibility for their application of any products.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE.

This equipment has been tested and found to comply within the limits pursuant to the (Centre for Telecom) rules. These limits are designed to provide protection against harmful interference when the equipment is operated in a commercial environment.

The following information is for the Users of the OmniAccess 780: If it is not installed in accordance with the installation instructions, it may not function exactly to the said specifications. Modifying the equipment without Alcatel-Lucent's written authorization may result in the equipment no longer complying with the said dimensions.

Copyright © 2007, Alcatel-Lucent. All rights reserved.

Notwithstanding any other warranty herein, all hardware and software are provided "as is" with all faults. Alcatel-Lucent disclaim all warranties, expressed or implied, including, without limitation, those of merchantability, fitness for a particular purpose and non-infringement or arising from a course of dealing, usage, or trade practice. In no event shall Alcatel-Lucent be liable for any indirect, special, consequential, or incidental damages, including, without limitation, lost profits or loss or damage to data arising out of the use or inability to use this manual, even if Alcatel-Lucent have been advised of the possibility of such damages.

Table of Contents

1 Preface	3
About This Guide	3
Chapter Description	3
Audience	3
Document Organization	4
Document Conventions	4
Obtaining Documentation	5
Reference Publications	5
Obtaining Technical Assistance	5
Documentation Feedback	5
2 OmniAccess 780 Overview	7
Introduction	7
OA-780 Overview	8
Package Contents	8
Hardware Overview	9
The OA-780	9
User Modules	16
System Specifications	31
Valid System Configuration	32
3 Installing the OmniAccess 780	33
Preparing for Installation	34
Required Tools and Equipment	34
Installation Checklist	35
Safety Measures	36
Preventing Injury	36
Equipment Guidelines	36
Lifting Safely	37
Safety With Electricity	38
Preventing Electrostatic Discharge Damage	39
Site Requirement Guidelines	40
Power Supply Overview	41
Power Supply Specifications	41
Plant Wiring	43
General Installation	44
Rack-Mounting the OA-780	45
Parts Required	46
Installing the OA-780 in the Rack	47
Installing User Modules	48
Installing Switch Fabric	48
Installing Line Cards	49
Installing Fan Tray	51

Installing Power Tray	52
Installing Fillers	53
4 Starting the OmniAccess 780	55
Introduction	55
Checking Conditions Prior to System Startup	56
Starting the OA-780	56
Connecting to the System Console Port	59
Performing Basic Configuration Tasks	61
Accessing OA-780 Through CLI	61
Connecting the System to the Network	67
Connecting Through the Internal Network	67
Connecting Through External Network	70
Site Log	71
Appendix A Regulatory Compliance and Safety Information	1
Declaration of Conformity: CE Mark	1
Waste Electrical and Electronic Equipment (WEEE) Statement	2
China RoHS: Hazardous Substance Table	3
Standards Compliance	5
Safety	5
EMC	5
Telecom	5
Declaration of Conformity Addendum	6
FCC Class A, Part 15	7
Canada Class A Statement	8
JATE	8
CISPR22 Class A warning	8
VCCI	8
Class A Warning for Taiwan and Other Chinese Markets	9
Translated Safety Warnings	10
Instrucciones de seguridad en español	16
Appendix B AC Power Specifications	19
Appendix C Pin Connector Details for OmniAccess 780	21
RJ-11 Modem Connector Pin Assignments	21
RJ-45 Console Connector Pin Assignments	22
T1E1 Connector Pin Assignments	23
SE/L2GE Connector Pin Assignments	24
Serial Card (V.35/X.21) Connector Pin Assignments	25

List of Figures

The OA-780 Chassis	10
Air Flow Through the OA-780	11
Front Panel	12
Rear Panel	12
OA-780 (8-Slot Chassis)	13
Switch Fabric	16
Services Engine	17
4-port T1E1 Line Card	19
GigE Line Card	21
Serial Line Card (V.35/X.21)	24
Fan Tray	27
Ports on Fan Tray	28
Power Tray	30
Connecting Power Cord	42
Rack Mounting the OA-780	47
Installing Switch Fabric	48
Installing Services Engine	49
Installing Line Cards	50
Installing Fan Tray	51
Installing Power Tray	52
Connecting to the System Console	59
Connecting to Internal Network	68
Connecting through External Network	70
RJ-11 Connector	21
RJ-45 Connector	22
Serial Card (V.35/X.21) Connector	25

List of Tables

OA-780 Chassis Physical Specifications	11
Slot Numbers	13
LED Status Table	14
Cable Connections Table	15
Switch Fabric LEDs	16
SE Card LEDs	18
LEDs for Ethernet Port on SE Card	18
T1/ E1 Card LEDs	20
T1/ E1 Port LEDs	20
T1E1 Mode LEDs	21
GigE Card LEDs	22
LEDs for each Port on GigE Card	22
Serial Card (V.35/X.21) LEDs	25
Serial (V.35/X.21) Port LEDs	25
Serial Card (V.35/X.21) Cable Part Numbers	26
Fan Tray LEDs	29
Environmental Specifications	31
Power Specifications	31
Physical Specifications	31
Valid System Configuration	32
Environmental Site Requirements	40
LED Status	57
Console Properties	60
AC Power Supply Specifications	19
Pin Connector Details for RJ-11 Connector	21
Pin Connector Details for RJ-45 Connector	22
T1/E1 Card Port Connector Pin Assignment	23
10/100/1000 Mbps Port Connector Pin Assignment on SE/L2GE Card	24
Pin Connector Details for Serial Line Card	25

CHAPTER 1

PREFACE

ABOUT THIS GUIDE

This hardware users guide explains the initial hardware installation and configuration procedures for the OmniAccess 780 (OA-780). It contains procedures for unpacking and installing the OA-780 hardware, starting up the system, and creating a basic configuration. After completing the installation and basic configuration procedures covered in this guide, use the appropriate companion publications to completely configure your system.

CHAPTER DESCRIPTION

This chapter explains the objectives, intended audience, and organization of the OA-780 Hardware Users Guide, and defines the conventions used to convey instructions and information.

AUDIENCE

This book is intended for networking professionals who are responsible for designing, implementing, and managing enterprise networks. This book aims to provide unique technologies and effective practices that deliver value on the networking perspective.

The user is expected to have, at minimum, an introductory understanding of the following:

- Networking applications
- Telecommunication networks
- Hardware configuration

DOCUMENT ORGANIZATION

This hardware users guide is organized into the following chapters and appendix:

Chapter 2 *OmniAccess 780 Overview* describes the functional description of the OA-780 and provides a functional overview of the system.

Chapter 3 *Installing the OmniAccess 780* is a preparatory chapter that describes safety considerations, tools required, an overview of the installation, and hardware installation procedures.

Chapter 4 *Starting the OmniAccess 780* provides procedure for starting the OA-780 and performing basic configuration tasks, and connecting the system to the internal and external networks.

Appendix Provides additional information on the regulatory compliances and safety, AC power supply, and Pin Connector details for the OA-780.

DOCUMENT CONVENTIONS

The following conventions are used to attract the attention of the reader:



Note: Means reader take note. Notes contain helpful suggestions/information/references to materials. Take a note of instructions provided here.



Caution: Means reader be careful. Failure to observe the cautionary note could result in equipment damage or loss of data.

Safety Warnings:



Warning: FOLLOW THE IMPORTANT SAFETY INSTRUCTIONS.
Means reader be extremely cautious. Failure to observe the warning note could result in injury to the user, equipment damage, and/or loss of data.

This warning means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

OBTAINING DOCUMENTATION

Alcatel-Lucent provides several ways to obtain technical assistance and other technical resources. Documents can be downloaded from our support site service.esd.alcatel-lucent.com

REFERENCE PUBLICATIONS

The following publications are part of the Alcatel-Lucent documentation suite:

- OmniAccess 700 CLI Command Reference Guide (Release 2.2)
- OmniAccess 700 CLI Configuration Guide (Release 2.2)
- OmniAccess 700 Web GUI Users Guide (Release 2.2)
- OmniAccess 700 Getting Started Guide (Release 2.2)
- OmniAccess 740 Hardware Users Guide (Release 2.2)

OBTAINING TECHNICAL ASSISTANCE

For all customers, partners, resellers, and distributors who hold valid Alcatel-Lucent service contracts, the Alcatel-Lucent Technical Support Team provides 24-hour-a-day, technical support services online and over the phone.

For Customer issues and help, contact:

Alcatel-Lucent

US Customer Support: (800) 995-2696

International Customer Support: (818) 878-4507

E-mail: support@ind.alcatel.com

Website: service.esd.alcatel-lucent.com

DOCUMENTATION FEEDBACK

We value your comments and suggestions about our documentation. If you have comments about this book, please enter them through the feedback link on the Alcatel-Lucent Website. We will use your feedback to improve the documentation.

CHAPTER 2

OMNIACCESS 780 OVERVIEW

INTRODUCTION

This chapter provides physical and functional overview of the OmniAccess 780 (OA-780). It contains functional descriptions of the OA-780 hardware, its major components, and related features. Descriptions and examples of software commands are included only when they are necessary for replacing, installing, configuring, or maintaining the OA-780 hardware.

This chapter contains the following sections:

- [OA-780 Overview](#)
- [Package Contents](#)
- [Hardware Overview](#)
- [System Specifications](#)

OA-780 OVERVIEW

The OA-780 is designed to provide most commonly used network services, such as routing, switching, wide area network (WAN) connectivity, network security with firewall, and related services.

PACKAGE CONTENTS

1. The OA-780
 - 8-slot Chassis that includes
 - Services Engine (SE) - 2-port 10/100/1000 Mbps Ethernet
 - Switch Fabric (built-in)
 - Fan Tray (built-in)
 - Power Supply (built-in)
2. Optional Modules
 - Services Engine (second unit for redundancy)
 - Switch Fabric (second unit for redundancy)
 - Power Supply Tray (second unit for redundancy or for load sharing)
 - 4-port T1E1 Line Card
 - 8-port 10/100/1000 Mbps Gigabit Ethernet (GigE) Line Card
 - 4-port Serial Line card (V.35/X.21)
3. Miscellaneous
 - AC Power Cord
 - Console Cable
 - Rack Mount Screws
 - 19-inch Rack Mount Ears
 - 512 MB USB Memory Flash
 - Product Documentation CD ROM

HARDWARE OVERVIEW

The following section provides a detailed overview of the hardware components of the OA-780:

THE OA-780

The OA-780 has 8 line card slots, numbered 0 to 7 from left to right, 2 Switch Fabric slots, a Fan Tray slot in the front, and 2 Power Tray slots in the rear. All OA-780 cards support Online Insertion and Removal (OIR) feature.

The OA-780 base system has the following components:


- OA-780 Chassis
- Switch Fabric
- SE
- Fan Tray
- Power Tray

THE OA-780 CHASSIS

The OA-780 chassis is a rigid sheet metal structure that houses the other hardware components. The 3 rack-unit (RU) chassis has a front panel, a rear panel, and perforated side panels for air flow.

The chassis is of 5.25-inch (13.3 cm) height, 17.5-inch (44.5 cm) width, and 17-inch (43.2 cm) depth. It weighs approximately 50 lbs (22.7 kgs).

Figure 1 shows a OA-780 chassis.

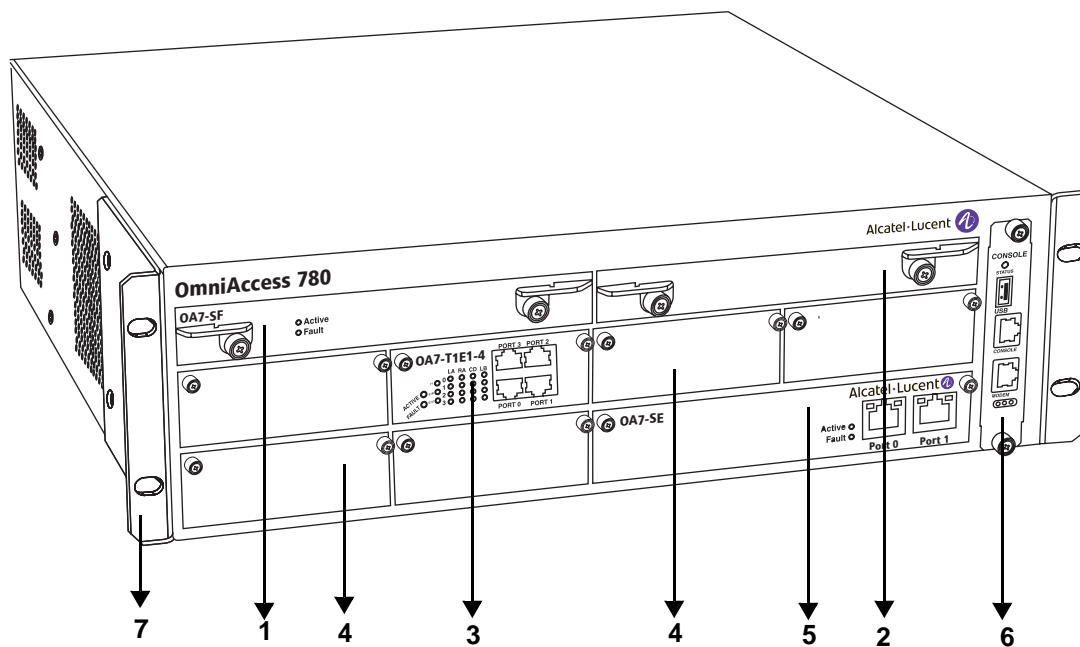

1. Switch Fabric
2. Switch Fabric Filler
3. T1E1 Line Card
4. Line Card Filler
5. SE
6. Fan Tray
7. Rack Mount Flange

Figure 1: The OA-780 Chassis

Table 1 summarizes the physical specifications for the OA-780 chassis.

Table 1: OA-780 Chassis Physical Specifications

Parameter	Value
Chassis height	5.2-inch (13.3 cm)
Chassis width	17.5-inch (44.5 cm) 19.5-inch (48.3 cm) with rack mount brackets
Chassis depth	17-inch (43.2 cm)
Chassis weight	50 lbs (22.7 kgs) maximum configuration

Figure 2 shows the air flow pattern through the OA-780 chassis.

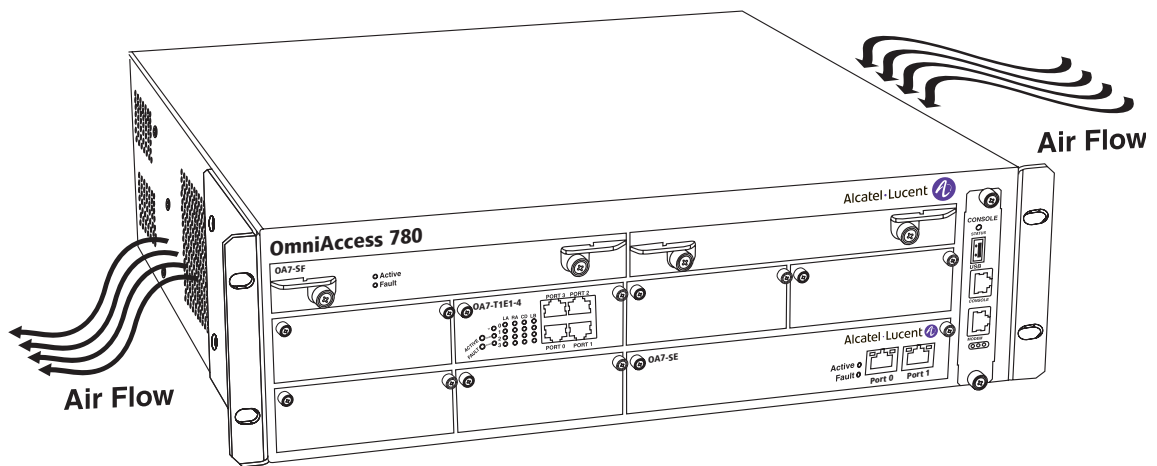


Figure 2: Air Flow Through the OA-780

The front panel houses Switch Fabric, SE, line cards, fan tray, status LEDs, communication ports, and card ejectors. The communication ports on the front panel provide LAN/WAN and console connectivity to the system. The LEDs on the front panel show the status of connectivity and activities of the system components. All the cards in the front panel dock into the respective slots in the back plane. The front panel also houses rack-mount flanges that help the system to be loaded on to a 19-inch rack.

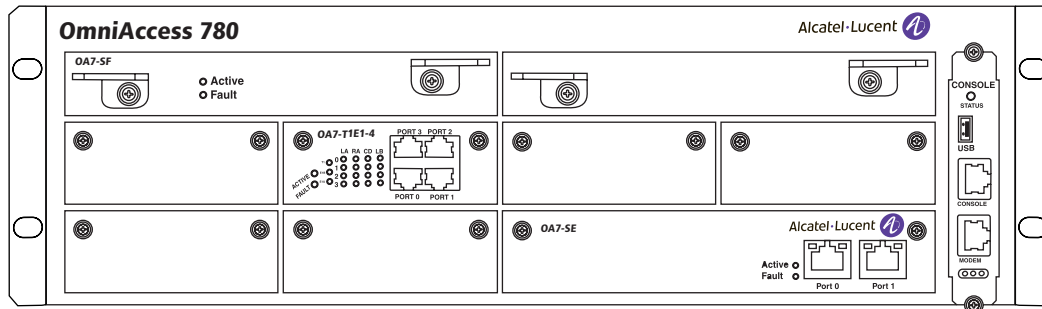


Figure 3: Front Panel

The rear panel houses the power supply tray and provides the power supply connectivity to the system. The rear panel accommodates two power trays for load sharing and power redundancy.

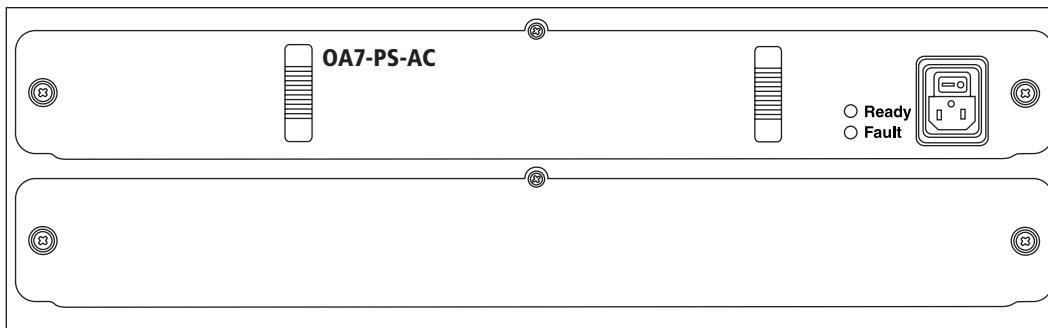


Figure 4: Rear Panel

SLOT NUMBERS

The slots in front panel are numbered 0 through 3, from left to right on the top row, 4 through 7 from left to right on the bottom row, 24 and 25 for the left and right Switch Fabric cards. The slots in rear panel are numbered 22 and 23 for each power tray on the rear panel.

The table below lists the slot number and the component associated with it.

Table 2: Slot Numbers

Slot Number	Location	Slot Type	Card Associated With the Slot Number
0	Front Panel	Single	Line Card
1	Front Panel	Single	Line Card
2	Front Panel	Dual	SE
3	Front Panel	Dual	SE
4	Front Panel	Single	Line Card
5	Front Panel	Single	Line Card
6	Front Panel	Dual	SE
7	Front Panel	Dual	SE
22	Rear Panel	—	Power Supply
23	Rear Panel	—	Power Supply
24	Front Panel	Dual	Switch Fabric
25	Front Panel	Dual	Switch Fabric
26	Front Panel— Fan Tray	—	—

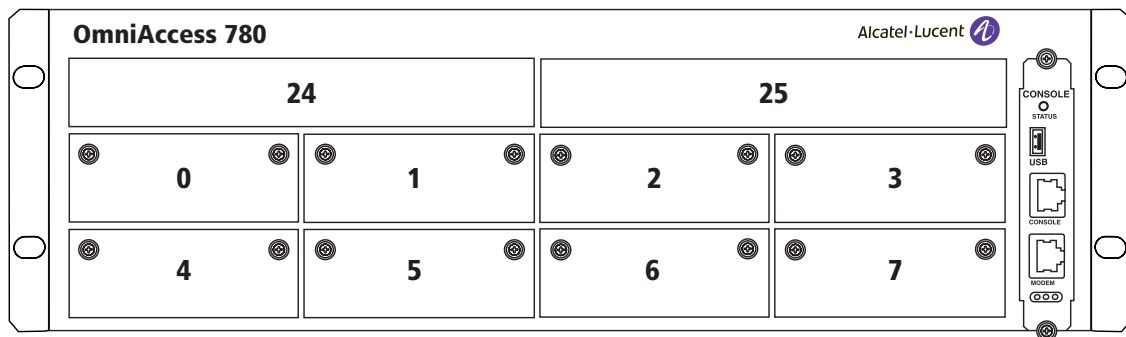


Figure 5: OA-780 (8-Slot Chassis)

LED INFORMATION

The following table shows the state of main LEDs after startup.

Table 3: LED Status Table

LED	Status	Description
SE LEDs		
Active	Off	Power up status. This is the default display when the system is first powered on and before the software is loaded.
	Green	SE card is active.
	Yellow	Indicates transient conditions (e.g., booting).
Switch Fabric LEDs		
Active	Off	Power up status. This is the default display when the system is first powered on and before the software is loaded.
	Green	Switch Fabric is active.
Fan Tray Status LED (Tricolor LED)		
	Off	Power up status. This is the default display when the system is first powered on and before the software is loaded.
	Red	Some component of the system is not being managed by the Chassis Manager, or the Chassis Manager has exited, or the system was "reloaded", or the Chassis Manager has not yet restarted.
	Amber	Indicates transient conditions (e.g., booting).
	Green	Bootup completed, and system is ready to use.
Fan Tray LEDs (3 Uni-color Port LEDs) representing USB, Console, and Modem ports		
	Off	System is not working.
Console LED	Green	Console is accessible.

CABLE CONNECTION TABLE

The following table summarizes the cable connections for the OA-780.

Table 4: Cable Connections Table

Port or Module	Port Type	Connect To
Power Tray	IEC 60320 (320) C-14 Power Inlet	Main power supply
Ethernet	RJ-45	Ethernet hub or switch
T1E1	RJ-45	T1E1 network
Console	RJ-45	PC or VT100
Modem	RJ-11	Telephone Line
Serial	68 pin VHDCI Connector	V.35/X.21 modem


USER MODULES

This section provides description about the modules/components that can be installed.

SWITCH FABRIC

The Switch Fabric provides the default management control for all the line cards. The Switch Fabric also performs management functions like chassis management, fan speed control, temperature and voltage monitoring, and maintaining general health of the system.

The Switch Fabric can be accessed through the RS232 console interface on the fan tray front panel. The front panel LEDs on Switch Fabric indicates Active and Fault condition. The default slot for the Switch Fabric is slot 24 on the top row. A secondary Switch Fabric can be installed in slot 25 on the top row.

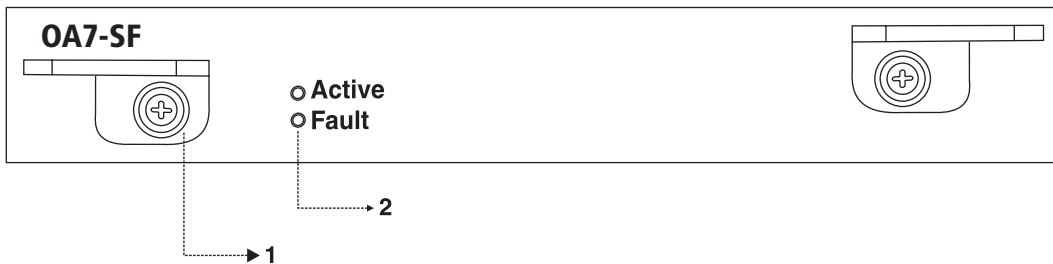

- 1 Ejector Lock
- 2 Switch Fabric LEDs

Figure 6: Switch Fabric

Switch Fabric LEDs

The Switch Fabric has two LEDs that show the status of the Switch Fabric.

Table 5: Switch Fabric LEDs

LED	Status	Description
Active	Green	Switch Fabric is active.
Fault	Red	Reload in progress.

LINE CARDS

All the line cards can be mounted on a single slot except SE that require two slots. Next generation SE line cards may occupy a single slot only. An overview of the line cards is given below.


SE (SERVICES ENGINE)

The SE card is the main data processing center in the chassis. The SE card has two external auto-negotiable copper GigE ports. The GigE interfaces can auto-negotiate, transmit, and receive data packets at rates of 10/100/1000 Mbps.

The LEDs on the SE card indicate Active or Fault conditions. The LEDs on the Gigabit Ethernet ports of the SE card indicate Link Status and Activity. The SE card is a dual slot line card, and can be installed in slots 2, 3 or slot 6, 7.



Note: By default, the SE card is installed in slots 6, 7.

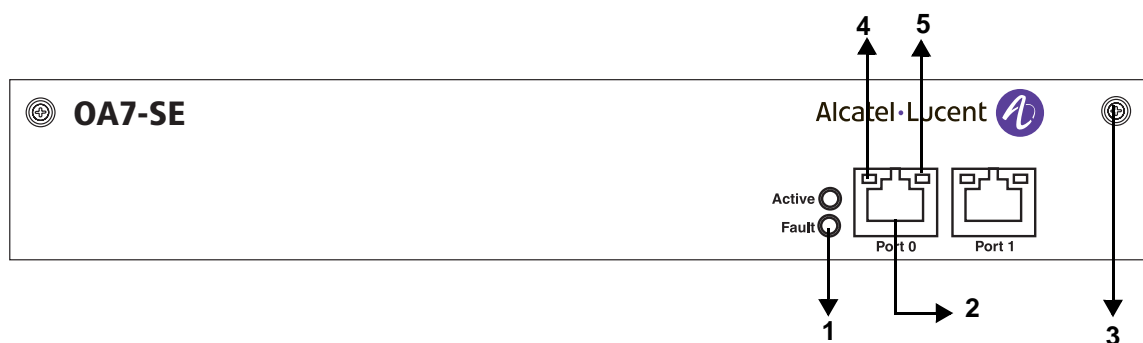

1. SE LEDs
2. GigE Ports
3. Thumb Screw
4. Left LED on the Ethernet Port
5. Right LED on the Ethernet Port

Figure 7: Services Engine

SE Card LEDs

SE card has status LEDs for the card and for each of its Ethernet ports.

Table 6: SE Card LEDs

LED	Status	Description
Active	Green	SE card is active
Fault	Red	Reload in progress


Table 7: LEDs for Ethernet Port on SE Card

LED	Status	Description
Left LED	Green	Link Speed is 1000/10 Mbps
	Yellow	Link Speed is 100 Mbps
	Off	Link is not active
Right LED	Amber	Traffic is active
	Off	Traffic is not active

4-PORT T1E1 LINE CARD

The 4-port T1E1 line card supports American and European (International) digital transmission standards. The line card can be installed in any of the line card slots of the chassis. (i.e., 0, 1, 2, 3, 4, or 5). The 4-port T1E1 line card has 4 RJ-45 interfaces. Each interface can support data rates of 1.544 or 2 Mbps depending on the type of connectivity.

Figure 9 shows the 4-port T1E1 line card as an example.

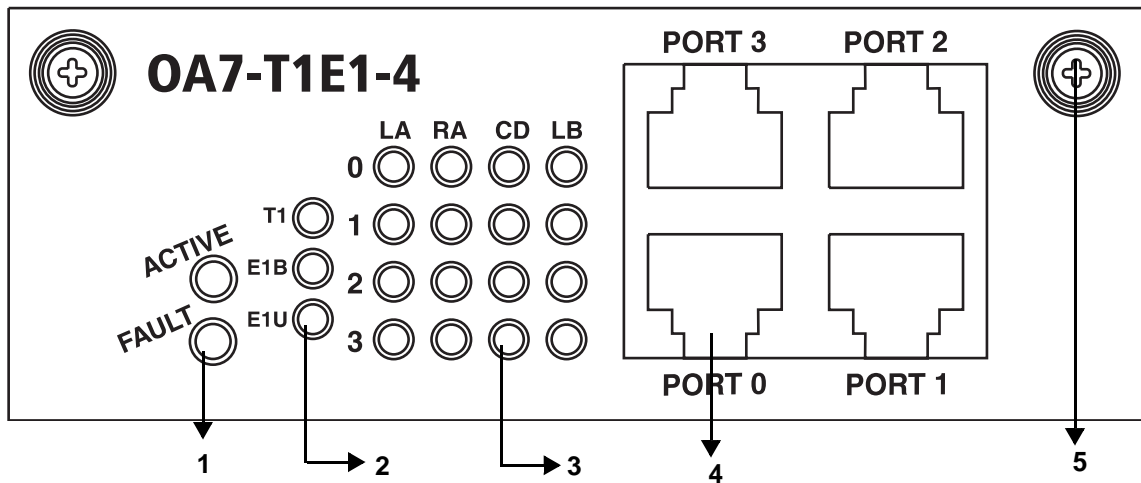

1. T1E1 Card LEDs
2. T1E1 Mode LEDs
3. T1E1 Port LEDs
4. RJ-45 Interfaces
5. Thumb Screw

Figure 8: 4-port T1E1 Line Card

4-port T1E1 Line Card LEDs

The LEDs on the 4-port T1E1 line card indicate Active or Fault condition, T1 mode, E1 Balanced (E1B) mode, and E1 Unbalanced (E1U) mode. The 4x4 LEDs on the front of the card indicate Local Alarm, Remote Alarm, Carrier Detect, and Loop Back for the four ports.

The following tables describe the status of LEDs on the T1/ E1 card.

Table 8: T1/ E1 Card LEDs

LED	Status	Description
Active	Green	T1/ E1 card is active.
	Yellow	Indicates transient conditions (e.g., booting).
Fault	Red	Reload in progress.

Table 9: T1/ E1 Port LEDs

LED	Status	Description
Local Alarm (LA)	On	Indicates either Red or Yellow alarm present or Transmitting Blue/AIS alarm
	Off	Indicates neither Red nor Yellow alarm is present and transmitter also not transmitting AIS/Blue Alarm.
Remote Alarm (RA)	On	Remote System is transmitting Blue/ AIS alarm.
	Off	Remote system is not transmitting any alarm.
Carrier Detect (CD)	On	Carrier detected (cable plugged in)
	Off	Carrier not detected (cable plugged out)
Loopback (LB)	On	Indicates port is in any of the local or network Loopback mode.
	Off	Port is not in Loopback mode.




Note: You will see LED activity only when the port is administratively up.

Table 10: T1E1 Mode LEDs

T1	E1B	E1U	Description
On	Off	Off	Line card configured in T1 mode.
Off	On	Off	Line Card Configured in E1 balance mode.
Off	Off	On	Line Card Configured in E1 unbalance mode.
Off	Off	Off	No mode configured on line card.

L2 8-PORT GIGABIT ETHERNET LINE CARD

The 8-port GigE line card provides Layer-2 switching functions. The line card can be installed in any of the line card slots of the chassis. (i.e., 0, 1, 2, 3, 4, or 5). The GigE card has 8 RJ-45 interfaces. These interfaces can auto-negotiate, transmit, and receive data packets at rates of 10/100/1000 Mbps.

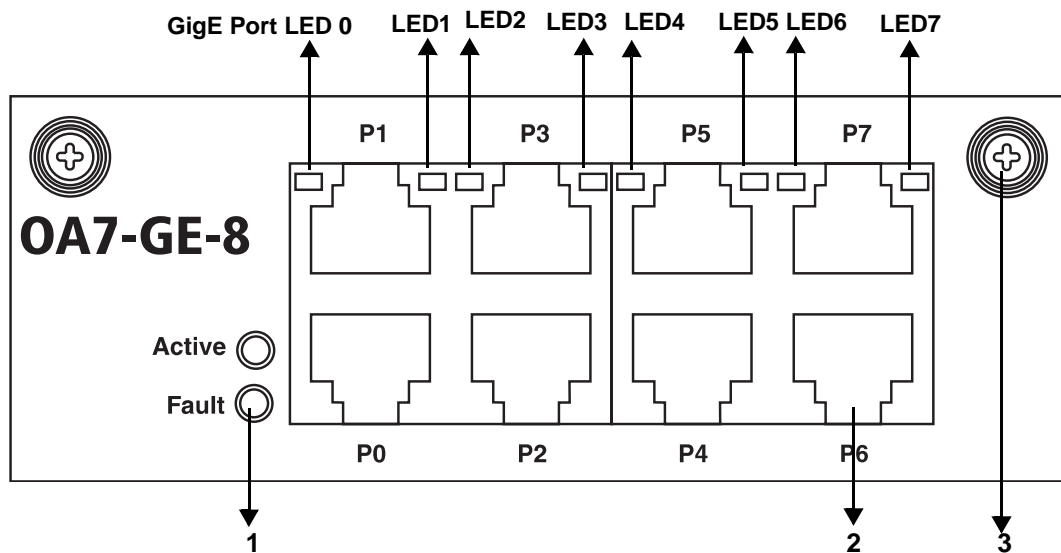

1. GigE Card LEDs
2. RJ-45 Interfaces
3. Thumb Screw

Figure 9: GigE Line Card

GigE Line Card LEDs

The LEDs on the GigE line card indicate Active or Fault conditions. The LEDs on each of the card's ports indicate Link Status and Activity.

The following tables describe the status of LEDs on the GigE card.

Table 11: GigE Card LEDs

LED	Status	Description
Active	Green	GigE card is active.
	Yellow	Indicates transient conditions (e.g., booting).
Fault	Red	Reload in progress.

Table 12: LEDs for each Port on GigE Card

LED	Status	Description
LED 0	Off	Port 0 link is not active.
	Solid Green	Port 0 link is active.
	Blinking Green	Port 0 link and traffic is active.
LED 1	Off	Port 1 link is not active.
	Solid Green	Port 1 link is active.
	Blinking Green	Port 1 link and traffic is active.
LED 2	Off	Port 2 link is not active.
	Solid Green	Port 2 link is active.
	Blinking Green	Port 2 link and traffic is active.
LED 3	Off	Port 3 link is not active.
	Solid Green	Port 3 link is active.
	Blinking Green	Port 3 link and traffic is active.
LED 4	Off	Port 4 link is not active.
	Solid Green	Port 4 link is active.
	Blinking Green	Port 4 link and traffic is active.

LED	Status	Description
LED 5	Off	Port 5 link is not active.
	Solid Green	Port 5 link is active.
	Blinking Green	Port 5 link and traffic is active.
LED 6	Off	Port 6 link is not active.
	Solid Green	Port 6 link is active.
	Blinking Green	Port 6 link and traffic is active.
LED 7	Off	Port 7 link is not active.
	Solid Green	Port 7 link is active.
	Blinking Green	Port 7 link and traffic is active.

SERIAL LINE CARD (V.35/X.21)

Serial Card (V.35/X.21) provides WAN termination for four ports over serial sync interfaces. The line card can be installed in any of the line card slots of the chassis. (i.e., 0, 1, 2, 3, 4 or 5). The card allows full duplex operation on a single copper pair and operates in either DTE or DCE mode depending on the cable attached.

V.35 and X.21 are well known communication protocols over synchronous serial lines.


V.35 Interface

The V.35 interface was originally specified by CCITT as an interface for 48kbps line transmissions. It has been adopted for all line speeds above 20kbps.

V.35 is a mixture of balanced and common earth signal interfaces. The control lines including DTR, DSR, DCD, RTS, and CTS are single wire common earth interfaces. The data and clock signals are balanced signals.

X.21 Interface

The physical interface between the DTE and the DCE is defined in ITU-T recommendation as X.21. The DCE provides a full-duplex, bit-serial, synchronous transmission path between the DTE and the local PSE. It can operate at data rates from 600bps.

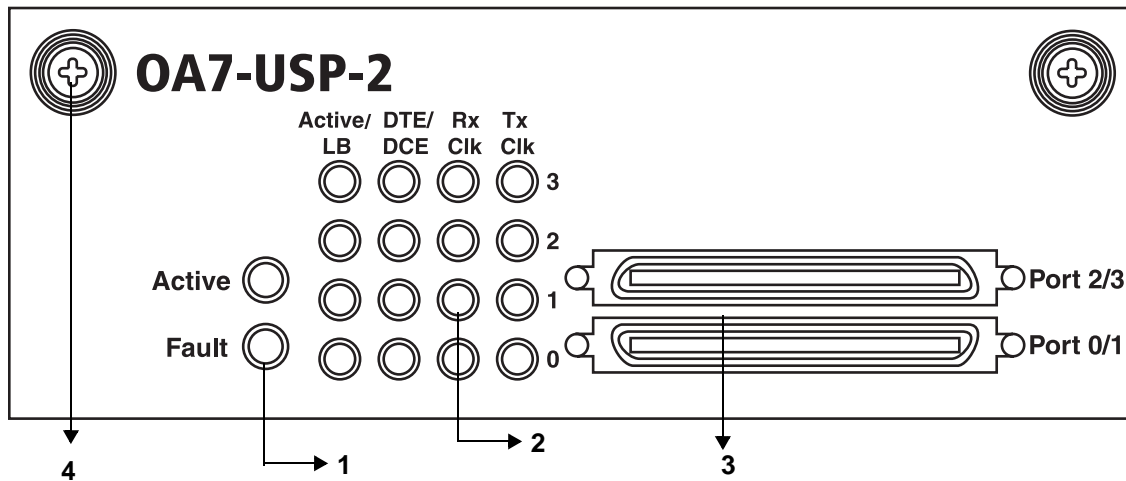

1. V.35/X.21 Card LEDs
2. V.35/X.21 Port LEDs
3. 68 pin VHDCI Connector
4. Thumb Screw

Figure 10: Serial Line Card (V.35/X.21)

Serial Card (V.35/X.21) LEDs

The LEDs on the Serial line card indicates Active or Fault condition. The 4x4 LEDs on the front of the card indicates the Active Loopback, DTE/DCE, Receive Clock, and Transmit Clock for the 4 ports.

The following tables describe status of LEDs on the Serial card.

Table 13: Serial Card (V.35/X.21) LEDs

LED	Status	Description
Active	Green	Serial card is active.
	Yellow	Indicates transient conditions (e.g., booting).
Fault	Red	Reload in progress.

Table 14: Serial (V.35/X.21) Port LEDs

LED	Status	Description
Active/LB	Green - On	Indicates ports are ready and interfaces are enabled.
	Green - Off	Indicates ports are not ready and interfaces are disabled.
	Yellow - On	Ports in Loopback Mode.
	Yellow - Off	Ports are not in Loopback Mode.
DTE/DCE	Green - On	DTE cables are plugged-in.
	Yellow - On	DCE cables are plugged-in.
	Off	Cables not plugged in.
RX Clk	Green - Flashing	DTE Receive Clock In. DCE Receive Clock Out.
	Off	No Receive Clock.
TX Clk	Green - Flashing	DTE Transmit Clock In. DCE Transmit Clock In.
	Off	No Transmit Clock.

Serial Card (V.35/X.21) Cable Details

The following table lists the part numbers for the Alcatel specific V.35/X.21 cables:

Table 15: Serial Card (V.35/X.21) Cable Part Numbers

Part No.	Description
5100-0010-00	Cable ASSY V.35 DTE Cable with Male Connector (68 Pin SCSI Connector to V.35 DTE Male Connector)
5100-0011-00	Cable ASV.35 DCE Cable with Female Connector (68 Pin SCSI Connector to V.35 DCE Female Connector)
5100-0012-00	Cable ASSY X.21 DTE Cable with Male Connector (68 Pin SCSI Connector to X.21 DB15 Male Connector)
5100-0013-00	Cable AX.21 DCE Cable with Female Connector (68 Pin SCSI Connector to X.21 DB15 Female Connector)

FAN TRAY

The Fan tray houses two adjustable speed fans for efficient chassis cooling. The Switch Fabric controls or adjusts the fan speed based on the chassis air temperature. In addition, the front panel of the fan tray has the following user interface ports, top through bottom.

- **USB Port** - This port is used to connect an USB device for software upgrades, configuration backup, and restoring data.
- **Console Port** - The RS232 serial interface allows the user to access the system console at 9600 baud.
- **Modem Port** - A built-in V.90 modem allows the user to remotely access the OA-780 through the RJ-11 port at speeds up to 56 Kbps.


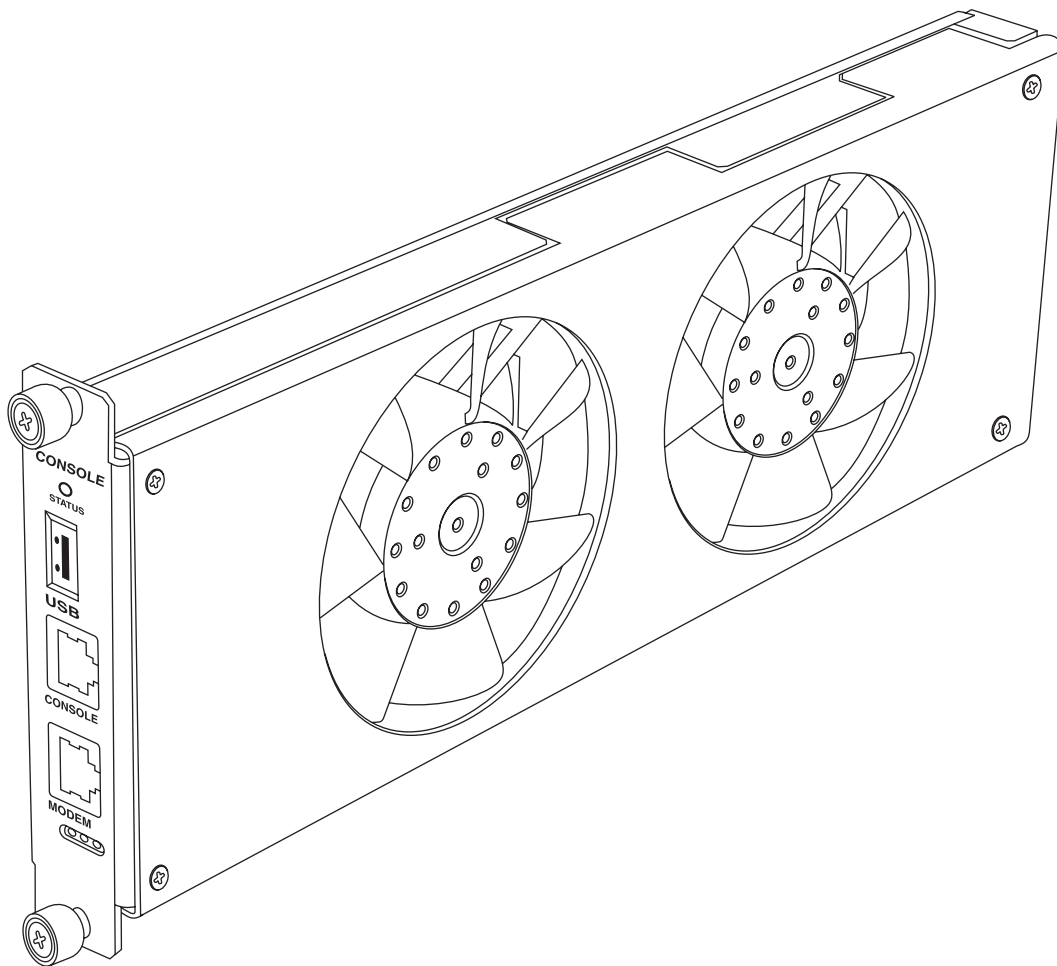


Figure 11: Fan Tray

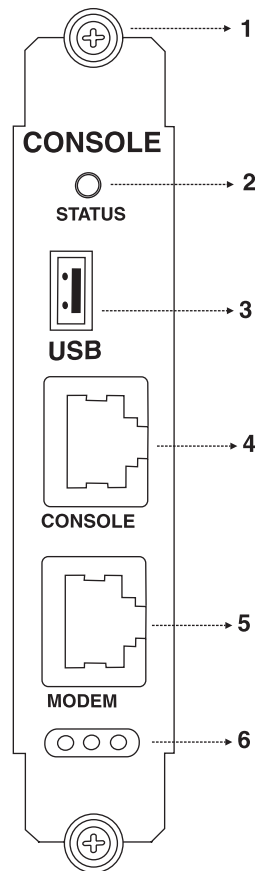

- 1 Thumb Screw
- 2 Status LED
- 3 USB Port
- 4 Console Port
- 5 Modem Port
- 6 Port LEDs

Figure 12: Ports on Fan Tray

FAN TRAY LEDs

The fan tray consists of a single tri-color LED on the top that denotes the status of the system, and a set of three single-color LEDs at the bottom that denotes status of the modem port, console port, and the USB port (left to right).

The following table describes the status of LEDs on the fan tray.


Table 16: Fan Tray LEDs

LED	Description
Fan Tray Status LED (Tricolor LED)	
Off	Power up status. This is the default display when the system is first powered on and before the software is loaded.
Red	Some component of the system is not being managed by the Chassis Manager, or the Chassis Manager has exited, or the system was "reloaded", or the Chassis Manager has not yet restarted.
Amber	Indicates transient conditions (e.g., booting).
Green	Bootup completed, and system is ready to use.
Fan Tray LEDs (3 Uni-color Port LEDs) representing USB, Console, and Modem ports	
OFF	System is not working.
Console LED - Green	Console is accessible.

POWER TRAY

The power tray manages all the power requirement of the OA-780. The OA-780 can accommodate two power trays in the rear panel. Each power supply can handle up to 350 Watts of power consumption. Normally, the chassis will be shipped with a single power supply tray mounted on the top row of the rear panel. An additional power supply tray can be used for load sharing or to meet redundancy requirements.

The power tray has two semi-circular holders on its face which helps in inserting and removing the power tray. The power tray also has a plug and an ON/OFF switch. The power tray is secured to the chassis using three thumb screws.

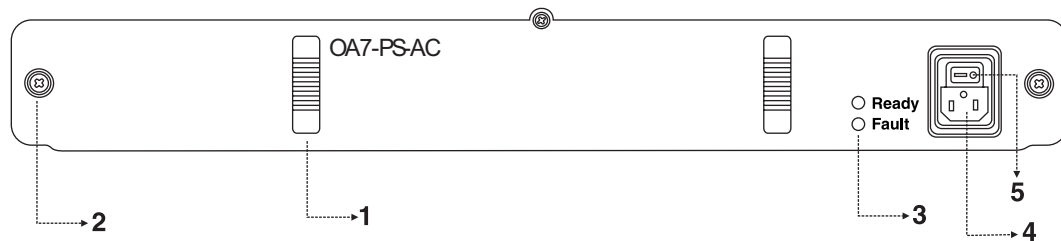

- 1 Semi-circular Holder
- 2 Thumb Screw
- 3 Power Tray LEDs
- 4 Power Plug
- 5 Power ON/OFF Switch

Figure 13: Power Tray

SYSTEM SPECIFICATIONS

The tables below provide environmental, power, and physical specifications that are required for the smooth operation of your OA-780.

Table 17: Environmental Specifications

Parameter	Value
Temperature, operating	0 to 45°C
Temperature, non-operating	-25 to 70°C
Humidity, operating	10 - 90% (non-condensing)
Altitude, operating	10,000 ft
Altitude, non-operating	15,000 ft

Table 18: Power Specifications

Parameter	Value
AC-input voltage range	100-240 Volts
AC-input current	6 AMP
Power Consumption	350 Watts

Table 19: Physical Specifications

Parameter	Value
Dimensions (H x W x D)	(5.25 x 17.5 x 17) in. (13.3 x 44.5 x 43.2) cm
Weight	50 lbs (22.7 kgs)
Height in Rack Units (RU)	3 Rack Units (RU)

VALID SYSTEM CONFIGURATION

The table below lists the minimum and maximum number of components that can be used in the OA-780.

Table 20: Valid System Configuration

	Services Engine	Switch Fabric	Line Card	Fan Tray	Power Tray
Minimum Configuration	1	1	0 - 4	1	1
Maximum Configuration	1	1	0 - 6	1	2

CHAPTER 3

INSTALLING THE OMNIACCESS 780

This chapter guides you through the process of preparing your OmniAccess 780 (OA-780) for installation.

This chapter describes the equipment, tools, power, and site requirements for installing the OA-780. It contains the following sections:

- **Preparing for Installation**
- **Installation Checklist**
- **Safety Measures**
- **Site Requirement Guidelines**
- **Power Supply Overview**
- **General Installation**
- **Rack-Mounting the OA-780**
- **Installing User Modules**

Before installing your OA-780, you should consider the power and cabling requirements that must be in place at your installation site. Other factors to consider would be the environmental conditions; the installation site must meet to maintain normal and safe operation of the system.

PREPARING FOR INSTALLATION

The OA-780 is shipped with all the user modules installed in the chassis. However, optional modules may be shipped in a separate package from the main system.

If you wish to install the components on your own, you need to understand the proper installation procedure and the safety guidelines involved in performing the same.

If you notice any deviations in the contents received as against the order, contact Alcatel-Lucent Technical Support immediately.

REQUIRED TOOLS AND EQUIPMENT

You need the following items to install the OA-780:

- ESD-preventive wrist strap
- Antistatic mat
- No. 2 Phillips screwdriver
- 1/4-in. flat-blade screwdriver
- Tape measure (optional)
- Level (optional)
- A total of 12 M5 x 10-mm Phillips flathead screws to secure the brackets to the chassis
- A total of 16 slotted 10-32 x 3/8 screws for rack installation

INSTALLATION CHECKLIST

To achieve a successful hardware installation, use the following checklist as a guideline before commencing with the installation.

Step 1: Unpack the system.

Open the carton the right way up, carefully remove contents in the package. Carefully remove the chassis from the carton.



Warning: Note that the OA-780 is heavy.



Note: Do not discard the shipping container. You will need the container if you move or ship the OA-780 in future.

Step 2: Verify the contents of the package.

Verify that the following contents are included in the shipping container (the accessories box might be separate):

- One OA-780, fully assembled
- One or more accessories boxes (some or all may be shipped separately)



Note: The entire OA-780 documentation set is shipped with each system. These documents can also be downloaded from the Alcatel-Lucent Website.

Step 3: Verify the cards installed.

Verify that the line cards and Switch Fabrics installed in your OA-780 match the card types on the packing list.

Step 4: Have the tools to mount the chassis on the rack.

Keep tools, such as power screw-drivers, screws, cable guides/ties, etc., ready with you for mounting the chassis on the rack.

SAFETY MEASURES

The sections below describe the safety instructions to be followed while using the OA-780.



Note: This equipment has been designed to the highest quality standards of materials, workmanship, and safety. Do not bypass any of the safety features of this equipment or operate this in an improper environment.

PREVENTING INJURY



Warning: Observe the following safety warnings to prevent accidental injury while working with the OA-780.

Follow the guidelines given below to avoid injury while working with the OA-780:

- To avoid injury, be careful when lifting the chassis out of the shipping box.
- Never attempt to rack mount the OA-780 chassis unaided. Ask an assistant to help you hold the chassis.
- Never operate the OA-780 with exposed power-supply units.
- Never operate the OA-780 if the chassis becomes wet or the area where the chassis is installed is wet.

EQUIPMENT GUIDELINES

The following guidelines will help to ensure your safety and protect the equipment. This list does not cover all potentially hazardous situations. However, Alcatel-Lucent advises you to observe caution while working with the system.



Warning: To avoid hazard from electrical shock and/or fire, adhere to safety practices listed in this section and identified within instructions of this document.



Warning: Do not turn ON/OFF the OA-780 without following the stated procedure.



Warning: Potentially hazardous voltage inside. Service should be performed only by qualified personal.

- The OA-780 is in compliance with national and local electrical codes.
- Review the safety warnings, before installing, configuring, or maintaining the OA-780.
- Keep the system area clean and dust-free during and after installation.
- Keep tools and rack shelf components away from walk areas.
- Do not wear loose clothing, jewelry, or other items that could get caught in the rack shelf. Fasten your tie or scarf and sleeves.
- The equipment grounding should be in accordance with local and national electrical codes.
- Input and earth wiring must be provided at the installation site and protected in accordance with local and national wiring regulations.
- The OA-780 operates safely when it is used in accordance with its marked electrical ratings and product usage instructions.

LIFTING SAFELY

A fully configured OA-780 weighs approximately 50 lbs or 22.68 kgs.

Whenever you lift any heavy object, follow the below guidelines:



Warning: Keep your back straight while lifting the OA-780 to prevent injury.

- Ensure that the system is powered OFF.
- Disconnect all external cables before lifting or moving.
- Do not attempt to lift by yourself; have someone assist you.
- Ensure that your footing is solid, and balance the weight of the object between your feet.
- Lift the system slowly; never move suddenly or twist your body as you lift.
- Lift the chassis from the bottom; grasp the underside of the chassis exterior with both hands.

SAFETY WITH ELECTRICITY

The power tray is designed to be removed and replaced while the system is operating without presenting an electrical hazard or damage to the system. Also the system has the feature of OIR. However, Alcatel-Lucent advises you to follow the guidelines given below as a measure of safety.



Warning: To avoid shock, do not open or attempt to service the unit or its associated power supply cards.



Caution: When connecting the power supply to the system and grounding, ensure that it presents no threat, harm, or non-compliance to operating staff or property. Verify that the unit is grounded properly and protected from voltage surges and static charges.



Caution: Observe all regional and national building and safety regulations.

Follow these basic guidelines when working with any electrical equipment:

- Disconnect all power cables and external cables before installing or removing the OA-780.
- Do not work alone when potentially hazardous conditions exist.
- Never assume that power has been disconnected from a circuit; always check.
- Do not perform any action that creates a potential hazard to people or that makes the equipment unsafe.
- Never install/work with equipment that appears damaged.
- Carefully examine your work area for possible hazards, such as moist floors, ungrounded power extension cables, and missing safety grounds.



Warning: Explosive Device Proximity Warning—Do not operate the OA-780 near unshielded blasting caps or in an explosive environment unless the unit has been modified especially to be qualified for such use.

In addition, use these appropriate guidelines while working with any equipment that is disconnected from a power source, but still connected to the telephone wiring or other network cabling:

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch un-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

PREVENTING ELECTROSTATIC DISCHARGE DAMAGE

Electrostatic discharge (ESD) damage, which occurs when electronic cards or components are improperly handled, can result in complete or intermittent system failures. The line cards consist of printed circuit boards with Integrated Circuits (IC) and should be handled at edges or faceplate only.



Warning: Always tighten the captive tabs and levers on all the devices. These tabs and levers prevent accidental removal, provide proper grounding for the system, and help ensure that the cards are properly fitted in the shelf.

Follow the guidelines given below for preventing ESD damage:

- Always use an ESD wrist strap or ankle strap and ensure that it makes good skin contact and is properly grounded.
- Do not touch the printed circuit board, and avoid contact between the printed circuit board and your clothing.
- Ensure the line cards are fully inserted in their respective chassis slots and the thumb screws are tightened.



Warning: For safety, periodically check the resistance value of the antistatic strap. The measurement should be in 1 and 10 mega ohms range.

SITE REQUIREMENT GUIDELINES

The guidelines in this section help you to maintain and protect your OA-780 and its components from potential damage from over-voltage, extreme temperature conditions, and other adverse conditions. To assure normal operation and avoid unnecessary maintenance, plan your site configuration and prepare your site before installing the OA-780.

Follow these general precautions when planning your equipment locations and connections:

- Make sure the site maintains an ambient temperature between 15°C and 25°C, and keep the area around the system clean and dust-free.
- Ensure that the cooling vents are not blocked and there is adequate air flow due to ample clearances around the OA-780.
- Alcatel-Lucent recommends keeping the OA-780 off the floor and out of any area that tends to collect dust.
- Follow ESD prevention procedures to avoid damage to equipment. Damage from static discharge can cause immediate or intermittent equipment failure.

The table below lists the operating and non-operating environmental site requirements. The ranges listed are those within which the OA-780 will continue to operate; however, a measurement that is approaching the minimum or maximum of a range indicates a potential problem. You can maintain normal operation by anticipating and correcting environmental anomalies before they approach minimum or maximum operating range.

Table 21: Environmental Site Requirements

Specification	Minimum	Maximum
Temperature, operating	0°C	45°C
Temperature, non-operating	-25°C	70°C
Humidity (non-condensing), operating	10%	90%
Altitude, operating	Sea level	10,000 ft. (3048 m)
Altitude, non-operating	Sea level	15,000 ft. (4572 m)
Clearance, air intake and exhaust	20 inches (50.8 cm)	—

POWER SUPPLY OVERVIEW

The following sections provide power supply requirements for the OA-780.

POWER SUPPLY SPECIFICATIONS

The OA-780 requires 100/240V and 6A (RMS) @115V, 3A (RMS) @230V AC power. A fully loaded OA-780 consumes approximately 350 W of power.

For more details on power supply specifications, see '[AC Power Specifications](#)'.

The following section provides the procedure for connecting input power to your OA-780.



Warning: Read the installation instructions before you connect the system to its power source.

CONNECTING AC INPUT POWER



Warning: When installing the system, the ground connection must always be made first and disconnected last.

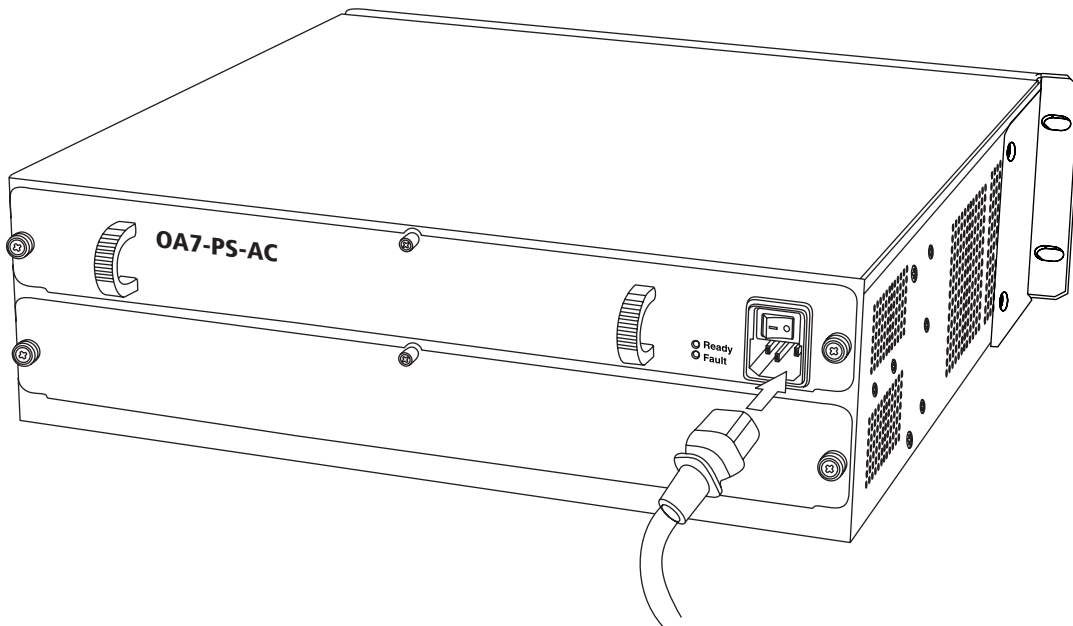


Figure 14: Connecting Power Cord

- Use the specified power cord to power your system.
- Connect the system end of the connector to the OA-780, as shown in above figure.
- Connect the power plug to the utility power socket.
- Be sure that the power cable is not left in a hazardous position that may restrict movement of personnel or that may fray due to movement of other equipment near the system.

PLANT WIRING

The following are guidelines for setting up the plant wiring and cabling at your site. When planning the location of the new system, consider the distance limitations for signaling, electromagnetic interference (EMI), and connector compatibility, as described in the sections below:

INTERFERENCE CONSIDERATIONS

Interference can occur when wires are run for any significant distance in an electromagnetic field. To prevent damages caused by interference, do the following:

- Ensure that there is no radio interference emanating from the plant wiring.
- Ensure that there is no electrical hazard by conducting power surges through lines and into equipment caused by EMI.
- Use a high-quality twisted-pair cable with one ground conductor for each data signal, when applicable.
- Give special consideration to the effect of a lightning strike near the system location. The electromagnetic pulse caused by lightning or other high-energy phenomena can destroy electronic devices.

DISTANCE LIMITATIONS AND INTERFACE SPECIFICATIONS

The size of your network and the distances between connections depend on signal type, and speed, and on transmission media. For example, standard coaxial cable has a greater channel capacity than twisted-pair cable.

When preparing your site for network connections to the OA-780, you should consider the following:

- Type of cabling required (fiber, shielded twisted-pair, or unshielded twisted-pair)
- Distance limitations
- Cables needed for interface connections
- Any additional interface equipment required, such as transceivers, hubs, switches, modems, etc.

PRECAUTIONS TO BE TAKEN WHILE FIXING POWER CABLES

Follow these precautions and recommendations when planning power connections to the OA-780:

- Check the power at your site before installation and periodically after installation to ensure that you are receiving uninterrupted power.
- Install a power conditioner if necessary.
- Install proper grounding to avoid damage from lightning and power surges.

GENERAL INSTALLATION

Planning a proper location for the OA-780 and the layout of your equipment rack or wiring cabinet are essential for successful operation of the system. Equipment placed too close together or inadequately ventilated can cause system over-temperature conditions, which may lead to system failure. Follow the precautions given below to avoid problems during installation and ongoing operation.

The OA-780 should be installed as per guidelines provided in the **“Site Requirement Guidelines”** section of this document. Please follow the guidelines in choosing a suitable and safe location.

When installing the system, ensure that the location is clean and safe, and that you have considered the following:

- The OA-780 requires at least 3 inches of clearance on the right and left sides.
- The OA-780 should be installed off the floor. (Excessive dust inside the system can cause over-temperature conditions and component failures.)
- There must be approximately 20 inches (50.8 cm) of clearance in the front and rear of the OA-780 for installing and replacing the system units, or accessing network cables or equipment.
- Line card and power supply filler panels are installed.
- The OA-780 receives adequate ventilation (it should not be installed in an enclosed cabinet where ventilation is inadequate).
- Adequate ground (earth) connection for your OA-780 is provided.

RACK-MOUNTING THE OA-780

The OA-780 is mounted on a standard 19-inch equipment rack. To easily access the electrical cables while the system is installed in a rack, ensure that you have easy access to the front and rear of the system, and that there is about 20 inch clearance at the front and rear of the rack.

You can also mount the OA-780 on an equipment shelf provided that the rack dimensions allow you to secure the system to the shelf. However, Alcatel-Lucent recommends rack-mounting the OA-780.

To rack-mount the OA-780, consider the following guidelines:

- **Maximum recommended operating temperature**
The maximum recommended operating temperature for the OA-780, indoor is 45° C. Determine a suitable operating environment based on this recommendation.
- **Elevated operating ambient temperature**
If the unit is installed in a closed or multi-unit rack assembly, the operating temperature of the rack environment may be greater than the ambient temperature of the room. Keep this in mind when installing the OA-780.
- **Reduced Airflow**
Install the OA-780 shelf in the rack so that the amount of airflow required for safe operation of the equipment is not compromised.
- **Mechanical Loading**
Mount the OA-780 in the rack so as to avoid a potentially hazardous condition due to uneven mechanical loading.
- **Circuit Overloading**
When you connect the OA-780 to the supply circuit, consider the effect that overloading of the circuits might have on over current protection and supply wiring.
- **Reliable Grounding**
Maintain reliable grounding for the OA-780 and all rack-mounted equipment, giving particular attention to supply circuits.



Note: Alcatel-Lucent strongly recommends that you provide a ground connection to the OA-780.

PARTS REQUIRED

The following tools and parts are required to rack-mount the OA-780:

- AC power supply unit
- One 6-gauge ground cable
- Two hex nuts and M4 screws
- Four 10-32 x 3/8-inch slotted screws
- 3/8-inch nut driver
- No. 2 Phillips screwdriver
- 1/4-inch flat-blade screwdriver
- Cable ties, if necessary

INSTALLING THE OA-780 IN THE RACK



Caution: Fully loaded, the OA-780 weighs 50 lbs (22.68 kgs). Do not try to mount the OA-780 chassis in the rack unassisted.



Caution: To prevent injury, review the safety precautions in the **“Safety Measures”** section before installing the OA-780 in the rack.

To install the OA-780 chassis in the rack, complete the following steps:

Step 1: Ensure that the rack is stable, and verify that your path to the rack is unobstructed.

Step 2: Ensure that the rack mount brackets are in the same level.

Step 3: Position the OA-780 chassis in front of the rack.

Step 4: Lift the OA-780 by the side of the chassis, and slide the chassis into the rack. Push it back until the brackets meet the mounting strips or posts on both sides of the equipment rack. When the chassis is slid back all the way, make one or two people hold the chassis in place.

Step 5: Insert the slotted screws (two screws per bracket) through the brackets and into the mounting strip. Tighten all the screws.

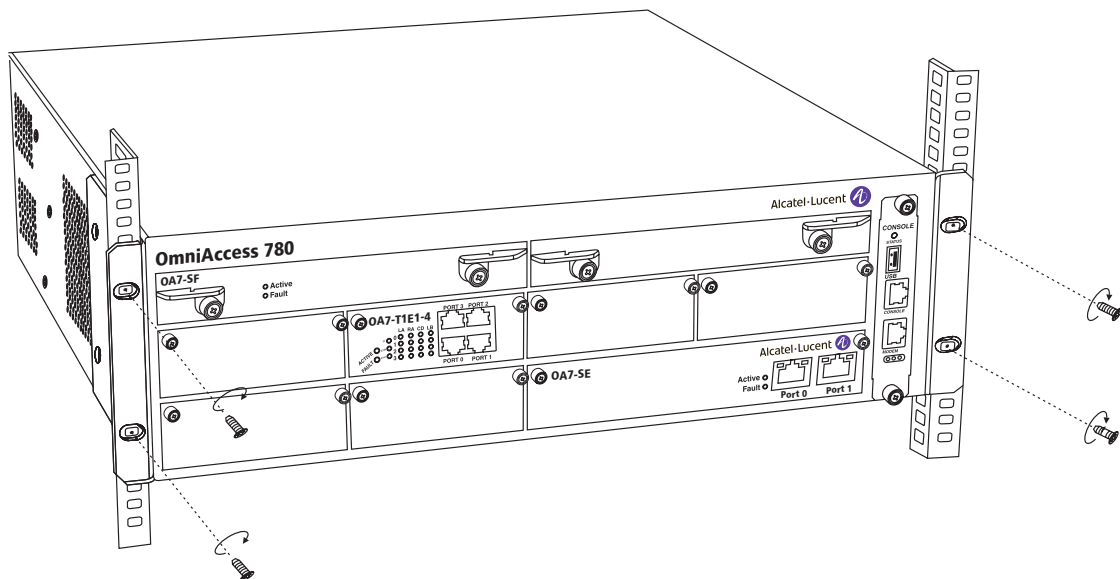


Figure 15: Rack Mounting the OA-780

INSTALLING USER MODULES

The following sections describe the procedure to install user modules in your OA-780.

INSTALLING SWITCH FABRIC

Follow the procedure detailed below to install a Switch Fabric.



Caution: Always handle the Switch Fabric by the edges and handle; do not touch its components or connector pins.

Step 1: Insert the Switch Fabric in slot 24 or slot 25 for redundancy.

Step 2: Verify that the Switch Fabric is rested on the guide and it rides smoothly in the slot.

Step 3: Push the Switch Fabric firmly and hard enough that the ejector lever on the Switch Fabric locks the Switch Fabric with the slot.

Step 4: Once the Switch Fabric is locked with the slot, rest the ejector lever on the face of Switch Fabric and fasten the ejector screws to secure the Switch Fabric with the slot.

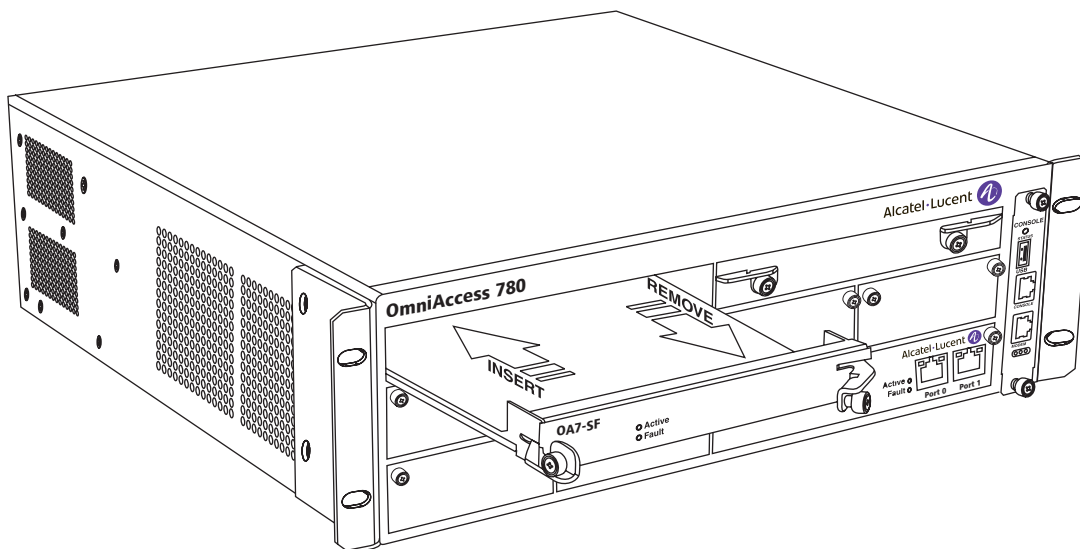


Figure 16: Installing Switch Fabric

REMOVING SWITCH FABRIC

To remove the Switch Fabric, unfasten the ejector screws and open the ejector levers in the opposite direction to eject the Switch Fabric from the slot. Once the Switch Fabric is ejected, pull the Switch Fabric out of the slot.

INSTALLING LINE CARDS

Follow the procedure detailed below to install the line cards.



Caution: Always handle the line cards by the edges and handle; do not touch the components or connector pins.

Step 1: Insert the line cards in their respective slots.

By default, the SE card is installed in slots 6, 7.

The other line cards can be installed in slots 0, 1, 2, 3, 4, or 5.

Step 2: Verify that the line card is rested on the guide and it rides smoothly in the slot.

Step 3: Push the line card firmly and ensure that the card is fully inserted in its respective slot and tighten the thumb screws.

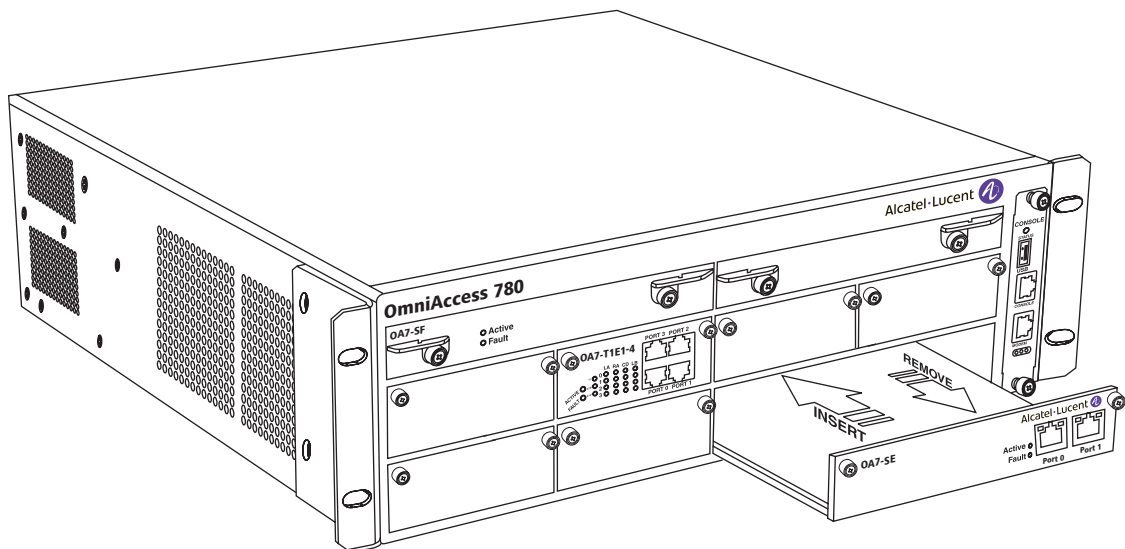


Figure 17: Installing Services Engine

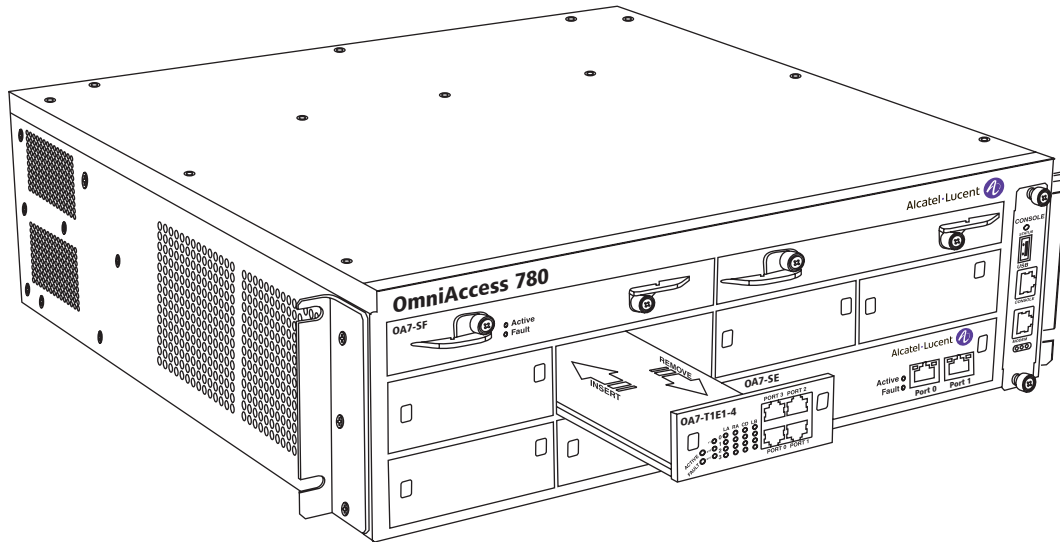


Figure 18: Installing Line Cards

REMOVING THE SINGLE SLOT LINE CARDS

To remove the line card, loosen the thumb screws provided on the line card and pull the line card out of the slot.

INSTALLING FAN TRAY

Follow the procedure given below to install the fan tray:



Caution: Always handle the fan tray by the edges and handle; do not touch the fan, its components, or connector pins.

Step 1: Ensure that power supply to the system is switched OFF.

Step 2: Insert the fan tray in the fan tray slot (slot 26) provided in the front panel of the system.

Step 3: Verify that the fan tray is rested on the guide and it rides smoothly in the slot.

Step 4: Push the fan tray firmly in the slot.

Step 5: Secure the fan tray with the chassis using the thumb screw.

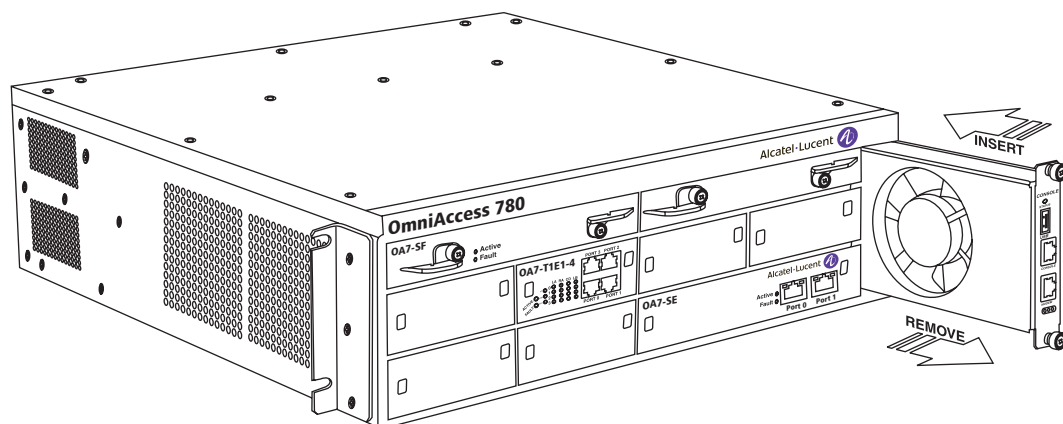


Figure 19: Installing Fan Tray

REMOVING FAN TRAY

To remove the fan tray follow the procedure given below:

Step 1: Ensure that the power supply to the system is switched OFF.

Step 2: Remove any connectors from the Console port, Modem port, and USB port.

Step 3: Unscrew the thumb screws.

Step 4: Pull the fan tray out of the OA-780.

INSTALLING POWER TRAY

Follow the procedure given below to install the power tray:



Caution: Always handle the power tray by the edges and handle; do not touch its components or connector pins.

Step 1: Ensure that you have power supply as specified in the “**Power Supply Specifications**” section of this document.

Step 2: Ensure that you have proper grounding provided at the site.

Step 3: Insert the power tray in the power tray slot provided in the rear panel of the system.

Step 4: Verify that the power tray is rested on the guide and it rides smoothly in the slot.

Step 5: Push the power tray firmly in the slot.

Step 6: Secure the power tray with the chassis with the thumb screw.

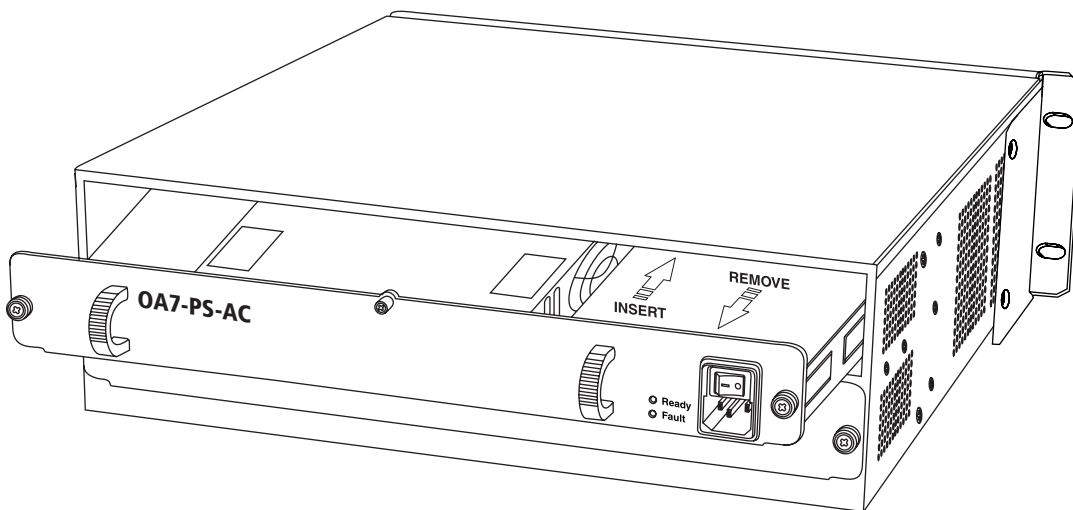


Figure 20: Installing Power Tray

REMOVING POWER TRAY



Warning: Before completing any of the following steps, and to prevent short-circuit or shock hazards, ensure that power supply is switched OFF.

Follow the procedure given below to remove the power tray:

Step 1: Switch OFF the power supply to the OA-780.

Step 2: Disconnect the power cord from the power supply tray.

Step 3: Unscrew the thumb screw.

Step 4: Pull the power tray out of the OA-780.

INSTALLING FILLERS

Fillers are used to cover empty unused slots. The procedure to install different types of fillers is outlined below.

Step 1: Insert the filler in the empty slot.

Step 2: Verify that the filler is rested on the guide and it rides smoothly in the slot.

Step 3: Push the filler firmly and ensure that the filler is fully inserted in its respective slot and tighten the screws.

Step 4: (Only for Switch Fabric) Once the filler is locked with the slot, rest the ejector lever on the face of the Switch Fabric filler and fasten the ejector screws to secure the Switch Fabric filler with the slot.

REMOVING FILLERS

To remove the filler for the line card slots, loosen the thumb screws provided on the line card and pull the filler out of the slot.

To remove the filler for Switch Fabric, unfasten the lock screws and open the ejector levers in the opposite direction to eject the Switch Fabric filler from the slot. Once the Switch Fabric filler is ejected, pull the Switch Fabric filler out of the slot.

CHAPTER 4

STARTING THE OMNIAccess 780

INTRODUCTION

This chapter explains the procedure for starting the OmniAccess 780 (OA-780), and connecting to the system console port for Command Line Interface (CLI) access to perform basic configuration tasks.

- [Checking Conditions Prior to System Startup](#)
- [Starting the OA-780](#)
- [Connecting to the System Console Port](#)
- [Performing Basic Configuration Tasks](#)
- [Connecting the System to the Network](#)
- [Site Log](#)

CHECKING CONDITIONS PRIOR TO SYSTEM STARTUP

Before you power ON the OA-780, check the following:

1. Ensure that the power supply tray is securely inserted into the chassis.
2. Ensure that the utility power cable is connected to a valid power source and power is available from this source.
3. Ensure that the Switch Fabric and the SE modules are correctly and securely installed.
4. Ensure that a PC or VT100 terminal is connected to the console port, using the appropriate console cable. (If the system is not connected to a console, see [“Connecting to the System Console Port”](#) section of this document to connect the system to a console.)

STARTING THE OA-780

After installing your OA-780 and connecting cables, follow the procedure given below to start the system:

Step 1: Power ON the OA-780.

Power on the OA-780 by turning on the external power switch located near the power cable on the power supply tray. If power supply is available, you can hear the rotation of system fans, and the system begins the bootup sequence.

Step 2: Monitor the system for various bootup messages.

Once the system begins to startup, monitor the front panel LEDs for various stages of booting process.

In addition to the LEDs, monitor the system console for various bootup text messages. While a console access is not always required for system startup, it is a good idea to monitor the console at least the first time the system is booted and initial configurations completed.

The following table shows the state of the main LEDs after startup.

Table 22: LED Status

LED	Status	Description
Services Engine LEDs		
Active	Off	Power up status. This is the default display when the system is first powered on and before the software is loaded.
	Green	SE card is active.
	Yellow	Indicates transient conditions (e.g., booting).
Switch Fabric LEDs		
Active	Off	Power up status. This is the default display when the system is first powered on and before the software is loaded.
	Green	Switch Fabric is active.
Fan Tray Status LED (Tricolor LED)		
	Off	Power up status. This is the default display when the system is first powered on and before the software is loaded.
	Red	Some component of the system is not being managed by the Chassis Manager, or the Chassis Manager has exited, or the system was "reloaded", or the Chassis Manager has not yet restarted.
	Amber	Indicates transient conditions (e.g., booting).
	Green	Bootup completed, and system is ready to use.
Fan Tray LEDs (3 Uni-color Port LEDs) representing USB, Console, and Modem ports		
	Off	System is not working.
Console LED	Green	Console is accessible.

Step 3: Configure the system.

Once the system bootup is complete, the system enters the “initial configuration setup” mode, which is an interactive mode for configuring the system. Follow the prompts on the screen to input the required information.

For further customizing and changing the configuration, it would be necessary to use the full-fledged CLI access to the system. To use the CLI and to know more about its usage, refer to the “**OmniAccess 700 CLI Configuration Guide**”.

Step 4: If all the activities have proceeded normally and if the initial configuration is complete, the OA-780 is installed, and is now ready for deployment in your network.

CONNECTING TO THE SYSTEM CONSOLE PORT

The OA-780 has a RJ-45 console port connector. A RJ-45 - RJ-45 “roll-over” cable along with RJ-45 to DB-9 (female) adapter is provided with the system to access the console port via a DTE (computer/terminal). Refer to [“Pin Connector Details for OmniAccess 780”](#) for detailed information on cable pin connection.

To connect the OA-780 to the console, perform the following steps:

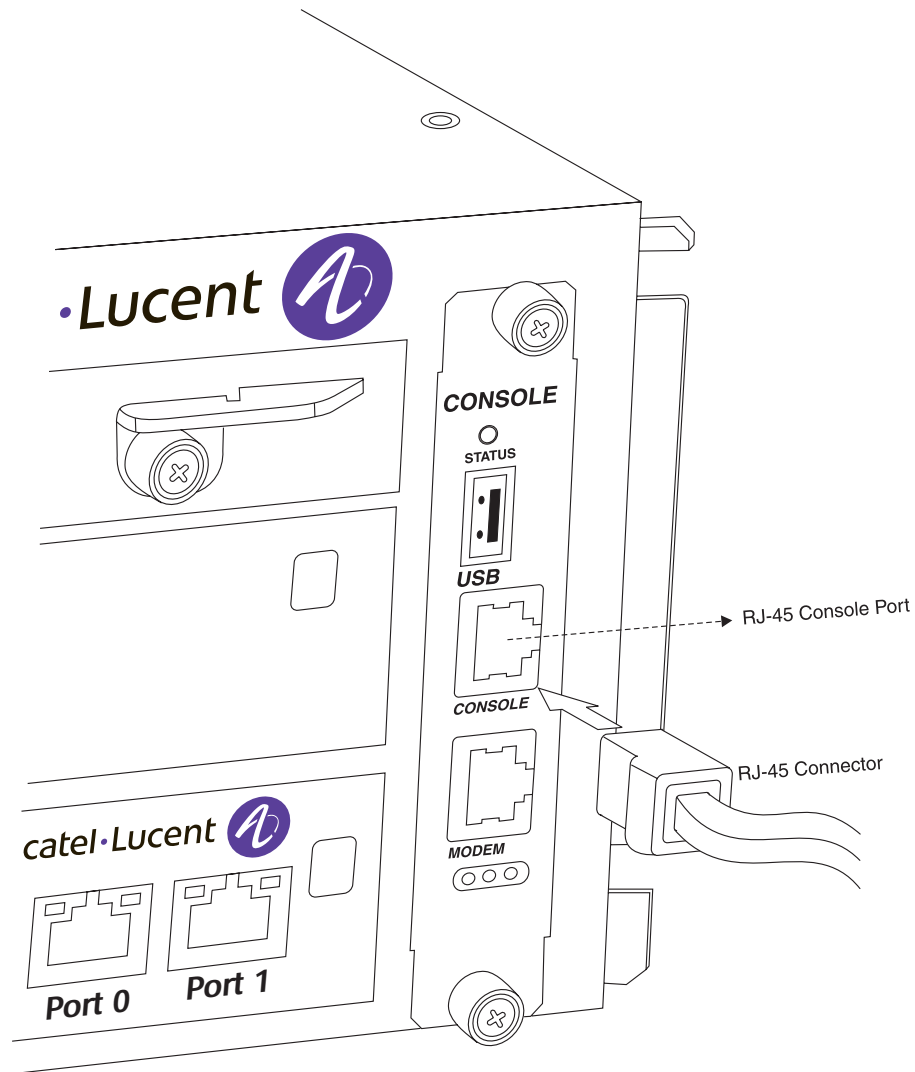


Figure 21: Connecting to the System Console

Step 1: Connect the RJ-45 end of the console cable to the front-panel console port on the OA-780 and the DB-9 end to the serial-port (COM) on your computer/terminal.

Step 2: Start your terminal emulation software.

Example: *kermit* or *hyperterm* terminal (if you are using Microsoft Windows operating system) or *minicom* terminal (if you are using Unix/Linux operating system).

Step 3: Set the console session as follows:

Table 23: Console Properties

Parameter	Value
Baud rate	9600
Parity	None
Data Bits	8
Stop Bit	1
Flow control	None

Step 4: Watch for console message output or press the **Enter** key to get the device prompt.

PERFORMING BASIC CONFIGURATION TASKS

Once you boot the OA-780 and connect to the console, you can start configuring your OA-780 either through CLI or Graphical User Interface (GUI).

ACCESSING OA-780 THROUGH CLI

The CLI is the primary interface to access the OA-780 through the console. The CLI allows you to configure, monitor, and troubleshoot the system, and enables network connectivity.

To perform initial configuration of your system, follow the procedure given below:

Step 1: Once the system bootup is complete, you are asked to configure the password for a special user - **superadmin**. Superadmin is authorized to execute any command. You need to set the superadmin password when the following prompt is displayed:

Enter the new password for superadmin:

Once you enter the password for the superadmin, you will be asked to reconfirm the password, with the following prompt:

Retype the new password:

After confirming the password, you will be asked to login using a username. The below prompt appears.

Username:

Enter the user name as superadmin. Now, you will be prompted for a password.

Password:

Enter the newly configured superadmin password.



Note:

If you have any pre-existing user account, you can enter at the user name and password prompts, else use the superadmin user account.

Step 2: After entering the correct user name and password, the ALU> prompt is displayed. If the prompt is not seen, press the **Enter** key a few times.

ALU>

By default, the host name is "**ALU**". (To configure a different host name, use the configure "hostname <name>" command in the Configuration mode.)

Step 3: At the **ALU** prompt, enter the **enable** command to enter the Super User Mode (SUM).

Example:

```
ALU> enable
ALU#
```

Step 4: From **SUM**, you can enter the Configuration Mode (CM). The CM is used to configure the system globally, to enter specific configuration modes, or to configure specific elements, such as interfaces or protocols.

Enter the **configure terminal** command to enter the Configuration mode.

Example:

```
ALU# configure terminal
ALU(config)#
```

The above steps are enough to configure the OA-780 via console.

Step 5: To configure the system remotely (Telnet, SSH, and Modem), you need to configure basic Authentication, Authorization, and Accounting (AAA) configuration. AAA is a system in IP-based networking to control which users have access to the system, what resources users have access to, and to keep track of the activity of users over a network.

To enable the AAA services on your system, enter the **aaa services** command in Configuration mode.

Example:

```
ALU(config)# aaa services
```

Step 6: Set the enable password (system password). To set the system password, enter the following command:

```
enable {secret|password} [5] <password>
```

Example:

```
ALU(config)# enable secret test
Secret for level 15 is set
```



Note: By default, only the console session is available without the enable password configuration.

Step 7: Establish authentication for new users by configuring new user accounts.

To configure new user account, use the following command:

```
username <user-name> {password [5] <password>|nopassword|
secret [5] <password>}
```

Example:

```
ALU(config)# username user1 password pass1
```

Step 8: Configuring an interface. Enter the following command to enter the Interface Configuration mode:

```
interface <name> <slot/port>
```

Example:

```
ALU(config)# interface GigabitEthernet 7/0
ALU(config-interfaceGigabitEthernet7/0)#
```

(For more information on configuring interfaces, refer to the 'The Command Line Interface' chapter in the **OmniAccess 700 CLI Configuration Guide**.)

Step 9: Administratively bring up the interface by using the 'no shutdown' command:

Example:

```
ALU(config-if GigabitEthernet7/0)# no shutdown
```

Step 10: Configure an IP address for the interface by entering the following command. Enter the IP address in the valid IP address format A.B.C.D.

```
ip address {<ip-address subnet-mask>|<ip-address/prefix-
length>}
```

Example:

```
ALU(config-if GigabitEthernet7/0)# ip address 192.168.1.1/24
```



Note:

In the above example, 192.168.1.1 is assumed to be the GigE 7/0 LAN facing interface and IP address. You can configure the IP address based on your topology.

Step 11: Enable SSH and Telnet for in-band Management. The following command enables SSH/Telnet connection to a remote computer:

- **Secure Shell (ssh)** is a program for logging in to a remote machine that provides secure communication between two systems.

```
ssh {enable|disable}
```

Example:

```
ALU(config)# ssh enable
```

- **Telnet** is a user command and an underlying TCP/IP protocol for accessing remote computers. Telnet is a program that enables connection to foreign or remote host computers, and provides access to information on them.

```
telnet {enable|disable}
```

Example:

```
ALU(config)# telnet enable
```

Step 12: Enable HTTP & HTTPS for web-based management.

- HTTP is the primary protocol used for the transfer of files over the World Wide Web. You can access the OA-700 using HTTP through a web browser after being authenticated.

```
http {enable|disable}
```

Example:

```
ALU(config)# http enable
```

- HTTPS, in addition to the normal HTTP uses SSL encryption for secure transmission of files.

Example:

```
ALU(config)# https enable
```

Step 13: Enable Modem for Out of Band Management.

```
modem {enable|disable}
```

Example:

```
ALU(config)# modem enable
```

Step 14: Show Chassis - The 'show chassis' command provides a physical inventory of the running chassis components for a specific slot or for the entire system.

Example:

```
ALU> show chassis
```

```
Physical inventory at Tue Oct 30 06:33:47 2007  
System started approximately Tue Oct 30 06:30:26 2007  
Uptime is 0 days 0 hours 4 minutes 20 seconds
```

```
L2 - 8-port copper Gige (active)
```

```
Slot number: 0  
Part number: 902603-90  
Manufacturer: ALU  
Description: 8-port copper Gige  
Serial number: DD0512560340  
Version: 00  
Revision: 01  
Deviation: 0000  
Loader version: 2.27  
ALU-OS version: 2.2.52  
MDC  
Serial number: WL0534000127  
Deviation: 0001  
Revision: A1  
Version: 01
```

```
SE - Service engine (active)
```

```
Slot number: 3  
Part number: 902601-90  
Manufacturer: ALU  
Description: Service engine  
Serial number: DD0538002048  
Version: 01  
Revision: 04
```

Deviation: 0001
CPU Version: 1 (Low Power Opteron)
Opteron CPU Version: 1
Opteron CPU Frequency: 2193 MHz
Loader version: 2.30
ALU-OS version: 2.2.64
MDC
Serial number: WL0529000008
Deviation: 0002
Revision: 05
Version: 01

PB - Power tray (passive)
Slot number: 22
Part number: 902612-90
Manufacturer: ALU
Description: Power tray
Serial number: DD0536004050
Version: 00
Revision: 01
Deviation: 0000

SC - Switch card (active)
Slot number: 24
Part number: 902613-90
Manufacturer: ALU
Description: Switch card
Serial number: DD0536054350
Version: 00
Revision: 54
Deviation: aaaa
LoL firmware version: 2.2.56
Loader version: 2.29
ALU-OS version: 2.2.52

FP - Fan tray (passive)
Slot number: 26
Part number: 902614-90
Manufacturer: ALU
Description: Fan tray
Serial number: DD0545027001
Version: 00
Revision: 01
Deviation: 0000

BP - ALU OA780 chassis (passive)
Slot number: 29
Part number: 902611-90
Manufacturer: ALU
Description: ALU OA780 chassis
Serial number: DD0546005005
Version: 00
Revision: 01
Deviation: 0000
Base MAC: 00:11:8b:00:72:00

Step 15: Save the running configuration to the startup configuration.

Example:

```
ALU(config)# write mem
```



Note: Be sure to save the running configuration. If this is not done, when the system reboots, the configuration is lost.

For further configuration of your OA-780, refer to the **OmniAccess 700 CLI Configuration Guide** provided in the OA-780 Documentation CD along with your system.

CONNECTING THE SYSTEM TO THE NETWORK

This section details the procedure to connect to your OA-780 system through the internal network or external network.

CONNECTING THROUGH THE INTERNAL NETWORK

To access the OA-780 through hosts in internal network/LAN, you can use the following:

- [Accessing OA-780 Through GUI](#)
- [Connecting Through Telnet](#)
- [Connecting Through SSH](#)

ACCESSING OA-780 THROUGH GUI

Follow the procedure given below to access and configure the OA-780 through a GUI.



Note: To access the OA-780 through the GUI, an IP interface must be configured in your system.

Step 1: Configure IP address of an interface.

To configure an IP address of a given interface, follow the steps detailed in the [“Accessing OA-780 Through CLI”](#) section of this document.

Step 2: Open a Web browser from your PC.

Step 3: In the address bar/field, type the IP address of the interface and press the **Enter** key.

Example:

```
http://<ip address>  
http://192.168.1.1/24
```

The login page for the Web GUI is displayed in the browser window.

Step 4: Enter the user name and the password, and press the **Enter** key. This will launch a web interface to configure your OA-780.

For further configuration of your OA-780, refer to the **“OmniAccess 700 Web GUI User Guide”** provided in the Documentation CD ROM along with your system.

CONNECTING THROUGH TELNET

Telnet is a user command and an underlying TCP/IP protocol for accessing remote computers. Telnet allows you log on as a regular user with preset privileges to the specific application and data on that remote computer.

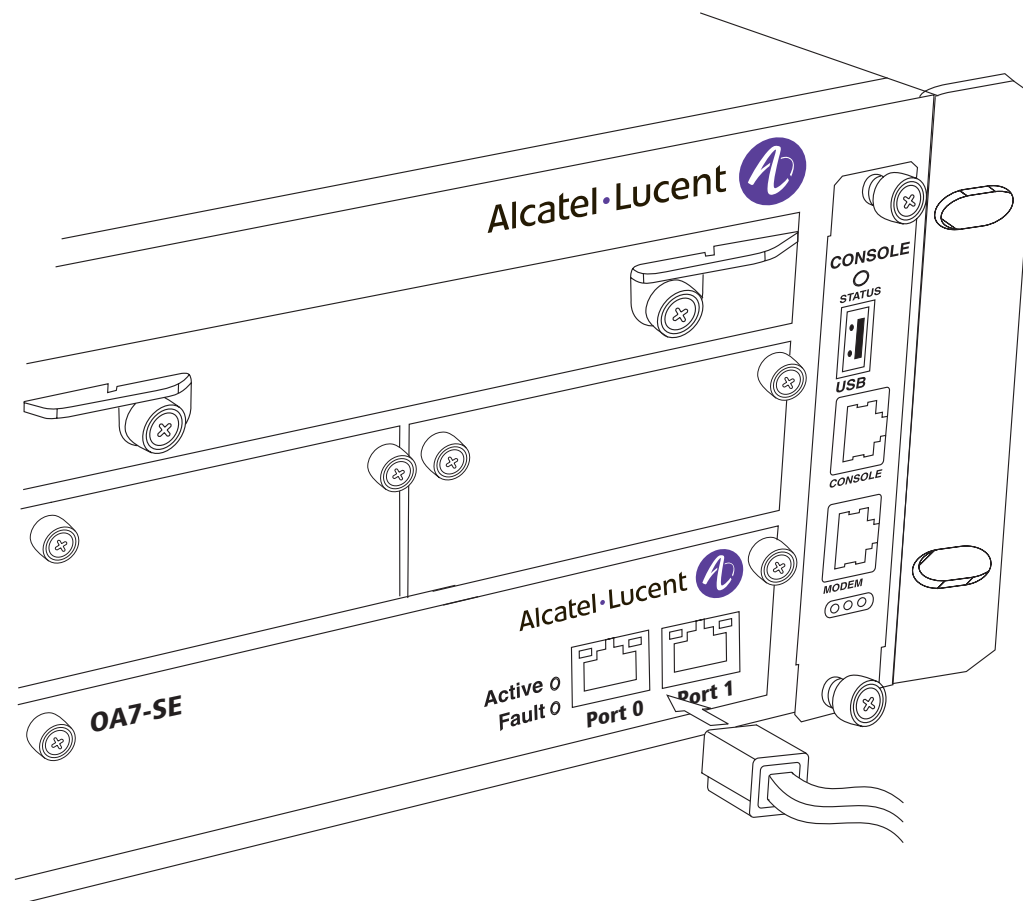


Figure 22: Connecting to Internal Network

To establish a Telnet session with the OA-780, follow the procedure below:

Step 1: Connect an RJ-45 cable from the Ethernet port in SE card on the front panel of the OA-780 to the internal router, switch, or hub in your LAN.

Step 2: Open a Telnet session, for example, to **192.168.1.1**.

- From Windows host, click **Start > Run**, type **telnet 192.168.1.1**, and click **OK**.
- From the Unix/Linux host, from the terminal window, type **telnet 192.168.1.1** and press the **Enter** key.

Step 3: Enter the username and password at the prompt.

Step 4: You are now ready to access the OA-780 using a Telnet session.

CONNECTING THROUGH SSH

Secure Shell (SSH) is a Unix-based command interface and protocol for securely getting access to a remote computer. SSH uses the RSA public key cryptography for both connection and authentication.

To establish a SSH session with the OA-780, follow the procedure below:

Step 1: Connect an RJ-45 cable from the Ethernet port in the SE card on the front panel of the OA-780 to the router, switch, or hub in your internal network/LAN.

Step 2: Open an SSH session, for example, to **192.168.1.1**.

From Unix/Linux host, from the terminal window, type **ssh** **<username>@192.168.1.1** and press the **Enter** key.

Step 3: Enter the username and password at the prompt. You are now ready to access the OA-780 using a SSH session.

CONNECTING THROUGH EXTERNAL NETWORK

To establish a link between the OA-780 and the external network (WAN/Internet), connect the RJ-11 jack from the external modem to the modem port provided in the fan tray on the front panel of the OA-780.

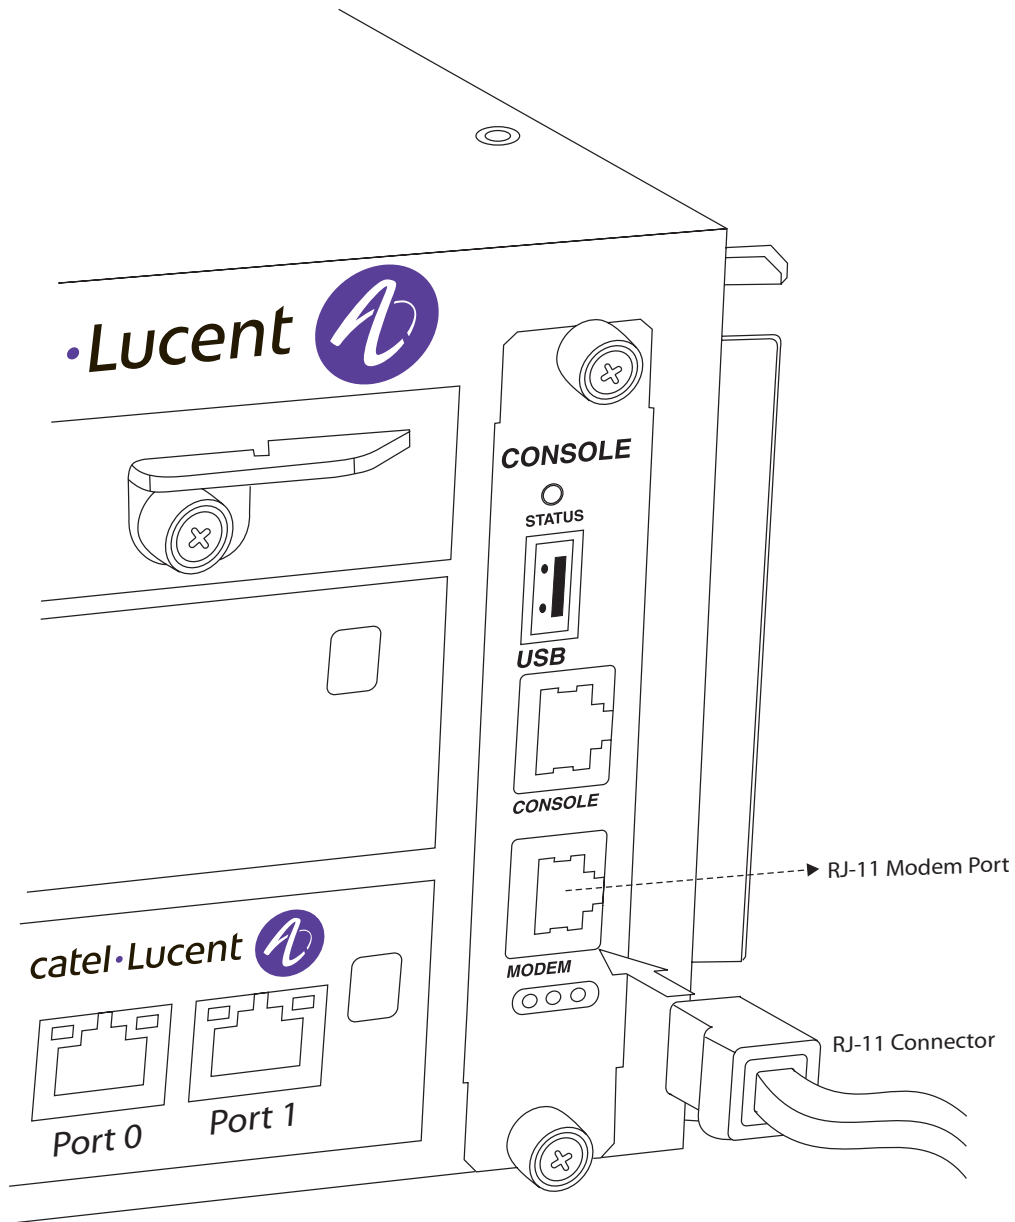


Figure 23: Connecting through External Network

SITE LOG

It is a good practice to maintain a log of the OA-780 to track all activities related to the system. This information also provides valuable history and service record for service personnel. Keep your site log in a common place, near the rack shelf, where anyone who performs tasks has access to it.

Site log entries might include the following:

- Installation progress -Make a copy of the System Installation Checklist and insert it into the site log. Make entries on the Installation Checklist as each procedure is completed.
- Upgrades and removal/replacement procedures - Use the site log as a record of system maintenance and expansion history. Each time a procedure is performed on the system, update the site log to reflect the following:
 - Any line card removed and replaced
 - Power supply removals and changes
 - Configuration changes
 - Software upgrades
 - Corrective maintenance procedures performed
- Related comments.

Appendix A

Regulatory Compliance and Safety Information

This appendix provides information on regulatory agency compliance and safety for the OmniAccess 780 (OA-780).

DECLARATION OF CONFORMITY: CE MARK

This equipment is in compliance with the essential requirements and other provisions of Directive 73/23/EEC and 89/336/EEC as amended by Directive 93/68/EEC.


Français: Ce matériel est conformément aux conditions essentielles et à d'autres dispositions de 73/23/EEC et de 89/336/EEC directifs comme modifié par Directive 93/68/EEC.

Deutsch: Konformitätserklärung: CE Kennzeichnung Diese Anlage ist gemäß den wesentlichen Anforderungen und anderen Bestimmungen richtungweisenden 73/23/EEC und des 89/336/EEC, wie von Directive 93/68/EEC geändert.

Español: Este directivo equipo está en conformidad con los requisitos esenciales y otras provisiones 73/23/EEC y 89/336/EEC según la enmienda prevista por Directive 93/68/EEC.

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) STATEMENT

The product at end of life is subject to separate collection and treatment in the EU Member States, Norway and Switzerland and therefore marked with the symbol:

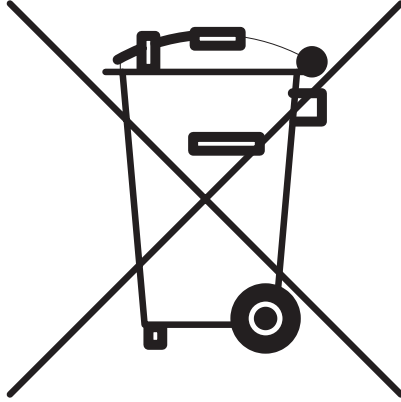

Treatment applied at end of life of the product in these countries shall comply with the applicable national laws implementing directive 2002/96EC on waste electrical and electronic equipment (WEEE).

CHINA ROHS: HAZARDOUS SUBSTANCE TABLE


产品说明书附件 SUPPLEMENT TO PRODUCT INSTRUCTIONS

这个文件涉及的是在中华人民共和国境内进口或销售的电子信息产品
Include this document with all Electronic Information Products imported or sold in the People's Republic of China


部件名称 (Parts)	有毒有害物质或元素 (Hazardous Substance)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电路模块 (Circuit Modules)	×	○	○	○	○	○
电缆及电缆组件 (Cables & Cable Assemblies)	×	○	○	○	○	○
金属部件 (Metal Parts)	×	○	○	○	○	○
塑料和聚合物部件 (Plastic and Polymeric parts)	○	○	○	○	○	○
对于交付时集成了电池的电子信息产品 For electronic information products delivered with integrated functional batteries:						
电池 (Batteries)	○	○	○	○	○	○
<p>○： 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。 Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.</p> <p>×： 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。 Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard.</p> <p>对销售之日的所售产品, 本表显示, 阿尔卡特朗讯公司供应链的电子信息产品可能包含这些物质。注意: 在所售产品中可能会也可能不会含有所有列出的部件。 This table shows where these substances may be found in the supply chain of Alcatel-Lucent electronic information products, as of the date of sale of the enclosed product. Note that some of the component types listed above may or may not be a part of the enclosed product.</p>						

除非另外特别的标注, 此标志为针对所涉及产品的环保使用期标志。某些零部件会有一个不同的环保使用期(例如, 电池单元模块)贴在其产品上。
 此环保使用期限只适用于产品是在产品手册中所规定的条件下工作。
 The Environment-Friendly Use Period (EFUP) for all enclosed products and their parts are per the symbol shown here, unless otherwise marked. Certain parts may have a different EFUP (for example, battery modules) and so are marked to reflect such. The Environment-Friendly Use Period is valid only when the product is operated under the conditions defined in the product manual.

Products are packaged using one or more of the following packaging materials:

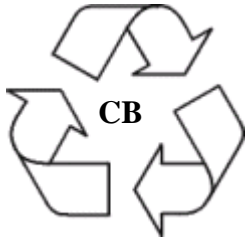

Corrugated Cardboard

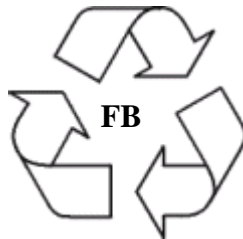

Corrugated Fiberboard



LDPE

Low-Density Polyethylene

STANDARDS COMPLIANCE

The product bears the CE mark. In addition it is in compliance with the following other safety and EMC standards:

All hardware switching modules used in an OA-780 comply with Class A standards. Modules with copper connectors meet Class A requirements using unshielded (UTP) cables.

SAFETY

- UL60950-1:2003
- CSA 22.2 No. 60950-1:2003
- EN 60950
- IEC 60950-1:2001

EMC

- FCC Part 15, Subpart B
- ICES 003
- EN 55022:1998/A1:2000
- EN 55024
- AS/NZS 3548:1995+A1:1997+A2:1997
- VCCI V-3/2000.04

TELECOM

- 47, CFR Part 68 AND ACTA, Adopted Technical Criteria
- CS 03 Issue 8, Part II
- TBR 12 AND TBR 13
- AS/ACTF S016: 2001
- T1(DS1) JATE - 1.544 Mbit/sec Digital Interface
- E1 JATE - 2.048 Mbit/sec Digital Interface

DECLARATION OF CONFORMITY ADDENDUM

Application of Council Directive(s)	89/336/EEC 73/23/EEC 1999/5/EEC
Manufacturer's Name	Alcatel-Lucent
Manufacturer's Address	26801 West Agoura Road Calabasas, CA 91301 Tel: 818-880-3500 Fax: 818-880-3505 Website: www.alcatel-lucent.com
Conformance to Directive(s)/ Product Standards	EC Directive 89/336/EEC EC Directive 73/23/EEC EC Directive 1999/5/EEC EN 55022:1998+A1:2000+A2:2003 EN 61000-3-2:2000 EN 61000-3-3:1995+A1:2001 EN 55024:1998+A1:2001 EN 61000-4-2:2001 EN 61000-4-3:2002 EN 61000-4-4:1995+A1:2000+A2:2001 EN 61000-4-5:2001 EN 61000-4-6:2001 EN 61000-4-8:2001 EN 61000-4-11:2001 EN 55024:1998+A1:2001 EN60555-2: 1995 EN 60950-1:2001+A11 CB Scheme ETSI EN 300 386 v1.4.1(2000-2003) ETSI TBR 012 ETSI TBR 013

FCC CLASS A, PART 15

This equipment has been tested and found to comply with the limits for Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions in this guide, may cause interference to radio communications. Operation of this equipment in a residential area is likely to cause interference, in which case the user will be required to correct the interference at his own expense.

The user is cautioned that changes and modifications made to the equipment without approval of the manufacturer could void the user's authority to operate this equipment. It is suggested that the user use only shielded and grounded cables to ensure compliance with FCC Rules.

If this equipment does cause interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Relocate the equipment with respect to the receiver.
- Move the equipment away from the receiver.
- Plug the equipment into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.

CANADA CLASS A STATEMENT

This equipment does not exceed Class A limits per radio noise emissions for digital apparatus, set out in the Radio Interference Regulation of the Canadian Department of Communications.

AVIS DE CONFORMITÉ AUX NORMES DU MINISTÈRE DES COMMUNICATIONS DU CANADA

Cet équipement ne dépasse pas les limites de Classe A d'émission de bruits radioélectriques pour les appareils numériques, telles que prescrites par le Règlement sur le brouillage radioélectrique établi par le ministère des Communications du Canada.

JATE

This equipment meets the requirements of the Japan Approvals Institute of Telecommunications Equipment (JATE).

CISPR22 CLASS A WARNING

This is a Class A product. In a domestic environment, this product may cause radio interference. Under such circumstances, the user may be requested to take appropriate countermeasures.

VCCI

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

CLASS A WARNING FOR TAIWAN AND OTHER CHINESE MARKETS

This is a Class A Information Product. When used in a residential environment, it may cause radio frequency interference. Under such circumstances, the user may be requested to take appropriate countermeasure.

警告使用者：
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

TRANSLATED SAFETY WARNINGS

CHASSIS LIFTING WARNING

Two people are required when lifting the chassis. Due to its weight, lifting the chassis unassisted can cause personal injury. Also be sure to bend your knees and keep your back straight when assisting with the lifting of the chassis.

Français: Le châssis doit être soulevé par deux personnes au minimum. Pour éviter tout risque d'accident, maintenez le dos droit et poussez sur vos jambes. Ne soulevez pas l'unité avec votre dos.

Deutsch: Sicherheitshinweise

Hinweise zur Anhebung des Chassis

Zum Anheben des Chassis werden zwei Personen benötigt. Aufgrund des Gewichts kann das Anheben ohne Unterstützung zu Personenschäden führen. Heben Sie das Chassis aus den Knien und halten Sie den Rücken gerade wenn Sie beim Anheben des Chassis assistieren.

Español: Se requieren dos personas para elevar el chasis. Para evitar lesiones, mantenga su espalda en posición recta y levante con sus piernas, no con su espalda.

BLANK PANELS WARNING

Because they regulate airflow and help protect internal chassis components, blank cover plates should remain installed at empty module slots and power supply bays at all times.

Français: Les caches blancs remplissent trois fonctions importantes : ils évitent tout risque de choc électrique à l'intérieur du châssis, ils font barrage aux interférences électromagnétiques susceptibles d'altérer le fonctionnement des autres équipements et ils dirigent le flux d'air de refroidissement dans le châssis. Il est vivement recommandé de vérifier que tous les caches, modules d'alimentation et plaques de protection sont en place avant d'utiliser le système.

Deutsch: Hinweise zu Abdeckungen

Die leeren Modulblenden schützen interne Komponenten und leiten den Luftstrom. Deshalb müssen in allen unbelegten Slots die Modulblenden immer installiert bleiben.

Español: Las tapaderas blancas regulan la circulación de aire y ayudan a proteger componentes internos del chasis y siempre deben estar instaladas en las ranuras vacías del chasis y fuentes de alimentación.

ELECTRICAL STORM WARNING

To avoid a shock hazard, do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.

Français: Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

Deutsch: Hinweise bei Unwetter

Um elektrische Schläge zu vermeiden dürfen während eines Gewitters and diesem Gerät keine Kabel angeschlossen oder gelöst werden, sowie keinerlei Installationen, Wartungen oder Konfigurationen vorgenommen werden.

Español: Para evitar peligro de descargas, no conecte o desconecte ningún cable, ni realice ninguna instalación, mantenimiento o reconfiguración de este producto durante una tormenta eléctrica.

INSTALLATION WARNING

Only personnel knowledgeable in basic electrical and mechanical procedures should install or maintain this equipment.

Français: Toute installation ou remplacement de l'appareil doit être réalisée par du personnel qualifié et compétent.

Deutsch: Installationshinweise

Dieses Gerät soll nur von Personal installiert oder gewartet werden, welches in elektrischen und mechanischen Grundlagen ausgebildet ist.

Español: Estos equipos deben ser instalados y atendidos exclusivamente por personal adecuadamente formado y capacitado en técnicas eléctricas y mecánicas.

INVISIBLE LASER RADIATION WARNING

Lasers emit invisible radiation from the aperture opening when no fiber-optic cable is connected. When removing cables do not stare into the open apertures. In addition, install protective aperture covers to fiber ports with no cable connected.

Français: Des radiations invisibles à l'œil nu pouvant traverser l'ouverture du port lorsque aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures. Installez les caches connecteurs prévus à cet effet.

Deutsch: Hinweise zur unsichtbaren Laserstrahlung

Die Laser strahlen an der Blendenöffnung unsichtbares Licht ab, wenn keine Glasfaserkabel angeschlossen sind. Blicken Sie nicht in die Öffnungen und installieren Sie unverzüglich die Abdeckungen über den Glasfaseranschlüssen.

Español: Debido a que la apertura del puerto puede emitir radiación invisible cuando no hay un cable de fibra conectado, procurar no mirar directamente a las aperturas para no exponerse a la radiación.

BATTERY WARNING

There is a danger of explosion if the battery in your chassis is incorrectly replaced. Replace the battery only with the same or equivalent type of battery recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions. The manufacturer's instructions are as follows: Return the module with the battery to Alcatel-Lucent. The battery will be replaced at Alcatel-Lucent's factory.

Français: Il y a un danger d'explosion si la batterie dans votre châssis est remplacée avec une autre ne correspondant pas aux préconisations constructeur. Il faut donc renvoyer le module en réparation chez Alcatel-Lucent qui se chargera de remplacer la batterie.

Deutsch: Hinweise Batterie

Bei falschem Einsetzen der batterie in das Gerät besteht die Gefahr der Explosion. Bitte ersetzen Sie die Batterie nur durch den gleichen bzw. gleichwertigen Typ, empfohlen durch den Hersteller. Benutzte Batterien entsorgen sie bitte wie folgt: Bitte senden Sie das Modul zurück zu Alcatel-Lucent. Dort wird die gebrauchte Batterie ersetzt.

Español: Si substituye las pilas de litio en su chasis, siempre utilice el mismo modelo o el tipo equivalente de pila recomendada por el fabricante. Deshágase de las pilas usadas según las instrucciones del fabricante. Devuelva el módulo con la pila de litio a Alcatel-Lucent. La pila de litio será substituida en la fábrica de Alcatel-Lucent.

Dansk: ADVARSEL! batteri--Eksplodingsfare ved fejlagtig handling. Udskiftning ma kun ske batteri af samme fabrikat og type. Lever det brugte batteri tilbage tilleverandoren.

OPERATING VOLTAGE WARNING

To reduce the risk of electrical shock, keep your hands and fingers out of power supply bays and do not touch the backplane while the switch is operating.

Français: Pour réduire tout risque électrique, gardez vos mains et doigts hors des alimentations et ne touchez pas au fond de panier pendant que le commutateur fonctionne.

Deutsch: Hinweise gegen elektrischen Schlag

Um die Gefahr des elektrischen Schlages zu verringern, greifen sie bitte nicht in die Spannungsversorgung und berühren sie nicht die Rückwandplatine während das Gerät arbeitet.

Español: Para reducir el riesgo de descargas eléctricas, no meta sus manos y dedos dentro del chasis de la fuente de alimentación y no toque componentes internos mientras que el interruptor está conectado.

POWER DISCONNECTION WARNING

Your switch is equipped with multiple power supplies. To reduce the risk of electrical shock, be sure to disconnect all power connections before servicing or moving the unit.

Français: Il se peut que cette unité soit équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.

Deutsch: Hinweise zur Spannungsfreischaltung
Ihr Gerät ist mit mehreren Netzteilen ausgerüstet. Um die Gefahr des elektrischen Schlages zu verringern, stellen sie sicher, daß alle Netzverbindungen getrennt sind bevor das Gerät gewartet oder bewegt wird.

Español: Antes de empezar a trabajar con un sistema, asegúrese que el interruptor está cerrado y el cable eléctrico desconectado.

PROPER EARTHING REQUIREMENT WARNING

To avoid shock hazard:

- The power cord must be connected to a properly wired and earth receptacle.
- Any equipment to which this product will attached must also be connected to properly wired receptacles.

Français:

Pour éviter tout risque de choc électrique:

- Ne jamais rendre inopérant le conducteur de masse ni utiliser l'équipement sans un conducteur de masse adéquatement installé.
- En cas de doute sur la mise à la masse appropriée disponible, s'adresser à l'organisme responsable de la sécurité électrique ou à un électricien.

Deutsch: Hinweise zur geforderten Erdung des Gerätes

Aus Sicherheitsgründen:

- darf das Netzkabel nur an eine Schutzkontaktsteckdose angeschlossen werden.
- dürfen für den Anschluß anderer Geräte, welche mit diesem Gerät verbunden sind, auch nur Schutzkontaktsteckdosen verwendet werden.

Español:

Para evitar peligro de descargas:

- Para evitar peligro de descargas asegúrese de que el cable de alimentación está conectado a una toma de alimentación adecuadamente cableada y con toma de tierra.
- Cualquier otro equipo a cual se conecte este producto también debe estar conectado a tomas de alimentación adecuadamente cableadas.

READ IMPORTANT SAFETY INFORMATION WARNING

The *Getting Started Guide* that accompanied this equipment contains important safety information about which you should be aware when working with hardware components in this system. You should read this guide before installing, using, or servicing this equipment.

Français: Avant de brancher le système sur la source d'alimentation, consultez les directives d'installation disponibles dans le "Getting Started Guide".

Deutsch: Bitte lesen - Sicherheitshinweise

Der Getting Started Guide, welcher diese Anlage beiliegt, enthält wichtige Sicherheitsinformationen, über die sie sich beim Arbeiten mit den Hardwareeinheiten bewußt sein sollten. Sie sollten diese Hinweise lesen, bevor sie installieren, reparieren oder die Anlage verwenden.

Español: La 'Getting Started Guide' que acompañó este equipo contiene información importante de seguridad sobre la cual usted debe estar enterado al trabajar con los componentes de dotación física en este sistema. Usted debe leer esta guía antes de instalar, usar o mantener este equipo.

RESTRICTED ACCESS LOCATION WARNING

This equipment should be installed in a location that restricts access. A restricted access location is one where access is secure and limited to service personnel who have a special key, or other means of security.

Français: Le matériel doit être installé dans un local avec accès limité ou seules les personnes habilitées peuvent entrer.

Deutsch: Hinweis zu Umgebungen mit beschränktem Zutritt

Die Anlage sollte an einem Standort mit beschränktem Zutritt installiert sein. Ein Standort mit beschränktem Zutritt stellt sicher, daß dort nur Servicepersonal mit Hilfe eines Schlüssels oder eines anderen Sicherheitssystems Zugang hat.

Español: Este equipo se debe instalar en un sitio con acceso restringido. Un sitio con el acceso restringido es uno seguro y con acceso limitado al personal de servicio que tiene una clave especial u otros medios de seguridad.

WRIST STRAP WARNING

Because electrostatic discharge (ESD) can damage switch components, you must ground yourself properly before continuing with the hardware installation. For this purpose, Alcatel-Lucent provides a grounding wrist strap and a grounding lug located near the top-right of the chassis. For the grounding wrist strap to be effective in eliminating ESD, the power supplies must be installed in the chassis and plugged into grounded AC outlets.

Français: L'électricité statique (ESD) peut endommager les composants du commutateur. Pour cette raison Alcatel-Lucent joint à l'envoi du châssis un bracelet antistatique à brancher sur la prise mise à la terre située en bas à droite du commutateur. Vous devrez mettre ce bracelet avant toute intervention hardware.

Deutsch: Hinweise zur ESD (Elektrostatischen Aufladung)
Weil elektrostatische Aufladung (ESD) Teile der Anlage beschädigen könnten, müssen sie sich selbst erden, bevor sie mit der Hardware Installation beginnen. Zu diesem Zweck stellt Alcatel-Lucent ein Erdungsarmband und eine Erdungsöse an der oberen rechten Seite des Chassis zur Verfügung. Um eine sichere Erdungsfunktion des Erdungsarmbandes sicherzustellen, müssen die Netzteile installiert und mit dem Schutzleiter des Versorgungsstromkreises verbunden sein.

Español: La descarga electrostática (ESD) puede dañar componentes electrónicos. Usted debe asegurarse que está en contacto con tierra antes de hacer la instalación del equipo. Con este fin, Alcatel-Lucent proporciona una pulsera de muñeca para conectar al chasis en la toma de tierra situada en la parte superior derecha del chasis. Para que la correa de muñeca sea eficaz en la eliminación de ESD, las fuentes de alimentación deben estar instaladas en el chasis y conectadas a enchufes CA con tierra adecuada.

INSTRUCCIONES DE SEGURIDAD EN ESPAÑOL

ADVERTENCIA SOBRE EL LEVANTAMIENTO DEL CHASIS

Se requieren dos personas para levantar el chasis. Debido a su peso, la elevación del chasis sin ayuda puede causar daños corporales. También es seguro doblar sus rodillas y guardar su espalda derecho al ayudar a levantar el chasis.

ADVERTENCIA DE LAS TAPADERAS EN BLANCO

Porque regulan la circulación de aire y ayudan a proteger componentes internos del chasis, las tapaderas en blanco deben seguir instaladas en las ranuras vacías del módulo y la fuente de alimentación siempre.

ADVERTENCIA EN CASO DE TORMENTA ELÉCTRICA

Para evitar peligro de descargas, no conecte o desconecte ningún cable, ni realice ninguna instalación, mantenimiento o reconfiguración de este producto durante una tormenta eléctrica.

ADVERTENCIA DE INSTALACIÓN

Solamente el personal bien informado en procedimientos eléctricos y mecánicos básicos debe instalar o mantener este equipo.

ADVERTENCIA DE RADIACIÓN LÁSER INVISIBLE

Los lasers emiten radiación invisible de la apertura abierta cuando no se conecta ningún cable de fibra óptica. Al quitar los cables no mire fijamente en las aberturas abiertas. Además, instale las cubiertas protectoras de la apertura a las salidas de la fibra sin el cable conectado.

ADVERTENCIA DE LA BATERÍA DE LITIO

Hay un peligro de la explosión si la batería del litio en su chasis se substituye incorrectamente. Substituya la batería solamente por el mismo o el equivalente de tipo de batería recomendado por el fabricante. Deseche las baterías usadas según las instrucciones del fabricante. Las instrucciones del fabricante son como sigue: Devuelva el módulo con la batería del litio a Alcatel-Lucent. La batería del litio será substituida en la fábrica de Alcatel-Lucent.

ADVERTENCIA SOBRE LA TENSIÓN DE OPERACIÓN

Para reducir el riesgo del choque eléctrico, mantenga sus manos y dedos fuera de la fuente de alimentación y no toque la placa madre mientras que el interruptor está funcionando.

ADVERTENCIA SOBRE LA DESCONEXIÓN DE LA FUENTE

Su interruptor esta equipado por fuentes de alimentación múltiples. Para reducir el riesgo de choque eléctrico, asegúrese desconectar todas las conexiones de alimentación antes de mantener o de mover la unidad.

ADVERTENCIA SOBRE UNA APROPIADA CONEXIÓN A TIERRA

Para evitar peligro de descargas:

- El cable de alimentación debe estar conectado a una toma de alimentación adecuadamente cableada y con toma de tierra.

Cualquier equipo al cual se conecte este producto debe estar también conectado a tomas de alimentación adecuadamente cableadas.

LEER “INFORMACIÓN IMPORTANTE DE SEGURIDAD”

La *Guía de “Comenzando a Usar”* que acompaña este equipo contiene información importante de seguridad sobre la cual usted debe saber al trabajar con los componentes de dotación física en este sistema. Usted debe leer esta guía antes de instalar, de usar, o de mantener este equipo.

ADVERTENCIA DE ACCESO RESTRINGIDO

Este equipo se debe instalar en una ubicación que restrinja el acceso. Una ubicación con acceso restringido es una donde está seguro y limitado el acceso al personal de servicio que tiene un clave especial, u otros medios de la seguridad.

ADVERTENCIA DE PULSERA ANTIESTÁTICA

Debido a que la descarga electrostática (ESD) puede dañar componentes del interruptor, usted debe conectarse a tierra correctamente antes de continuar con la instalación del equipo. Para este propósito, Alcatel-Lucent proporciona una pulsera antiestática y un terminal que pone a tierra situados cerca de la parte superior derecha del chasis. Para que la pulsera antiestática sea eficaz en la eliminación de ESD, las fuentes de alimentación se deben instalar en el chasis y enchufar en las salidas de CA con descarga a tierra.

CLASE DE SEGURIDAD

Cumple con 21CFR 1040.10 y 1040.11 ó sus equivalentes.

ADVERTENCIA DE FUENTES DE PODER

Las unidades OmniAccess 780 pueden estar equipadas con tres cordones para fuente de poder. Para reducir el riesgo de un choque eléctrico, desconecte todos los cordones de fuente de poder antes de dar servicio a la unidad.

Appendix B

AC Power Specifications

The OA-780 requires AC-input power supply in the range between 100 and 240V. The AC-input power supply uses a power factor correction that complies to EN61000-3-2.

Table 1 lists the AC-input power supply specifications.

Table 1: AC Power Supply Specifications

Description	Specification
Input	
Input voltage	100 to 240 VAC
Input frequency	47 to 63 Hz
Output	
Power output	350 W
Efficiency	65% at minimum measured at nominal AC main voltage and frequency with maximum load on all output
Environmental Characteristics	
Power Supply Dimensions (H x W x D)	3.9 x 1.6 x 8.7 inches (10 x 4.05 x 22 centimeters)
Temperature, operating	0 to 40°C
Temperature, non-operating (storage and shipping)	-25 to 70°C
Humidity	10 - 90% (non-condensing)

Description	Specification
Regulatory compliance	
Agency approvals	UL 1950, CSA C22.2 Level 3, TUV EN60950 or VDE EN60950, NEMKO EN60950 (CB Report), CE Complies with FCC part 15 subpart J Class B and CISPR 22 Class B

Appendix C

Pin Connector Details for OmniAccess 780

This section describes pin connection details for the OmniAccess 780 (OA-780).

RJ-11 MODEM CONNECTOR PIN ASSIGNMENTS

This section details modem connector pin (RJ-11) details for the OA-780.

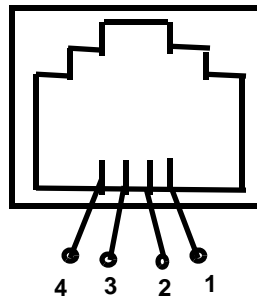


Figure 1: RJ-11 Connector

Table 1: Pin Connector Details for RJ-11 Connector

RJ-11 Connector Pin Number	Signal Name
1	NC
2	Tip or Ring
3	Ring or Tip
4	NC

RJ-45 CONSOLE CONNECTOR PIN ASSIGNMENTS

This section details console connector pin (RJ-45) details for the OA-780.

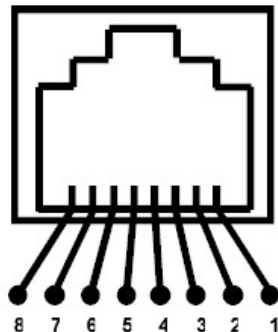


Figure 2: RJ-45 Connector

Table 2: Pin Connector Details for RJ-45 Connector

RJ-45 Connector Pin #	Signal Name
1	Connected to pin 8
2	Connected to pin 7
3	Transmit
4	Signal ground
5	Signal ground
6	Receive
7	Connected to pin 2
8	Connected to pin 1

T1E1 CONNECTOR PIN ASSIGNMENTS

The following table details the T1/E1 connector pin details for the OA-780:

Table 3: T1/E1 Card Port Connector Pin Assignment

Pin #	Signal Name
1	Receive Ring
2	Receive Tip
3	NC (No Connection)
4	Transmit Ring
5	Transmit Tip
6	NC
7	NC
8	NC

SE/L2GE CONNECTOR PIN ASSIGNMENTS

The following table details the SE/L2GE connector pin details for the OA-780:

Table 4: 10/100/1000 Mbps Port Connector Pin Assignment on SE/L2GE Card

Pin #	In 10 Base-T and 100 Base-Tx Mode	In 1000 Base-Tx Mode
1	TX +	TD0 +
2	TX -	TD0 -
3	RX +	TD1 +
4	NC (No Connection)	TD2 +
5	NC	TD2 -
6	RX -	TD1 -
7	NC	TD3 +
8	NC	TD3 -

SERIAL CARD (V.35/X.21) CONNECTOR PIN ASSIGNMENTS

This section details the Serial Card connector pin (V.35/X.21) details for OA-780 system.

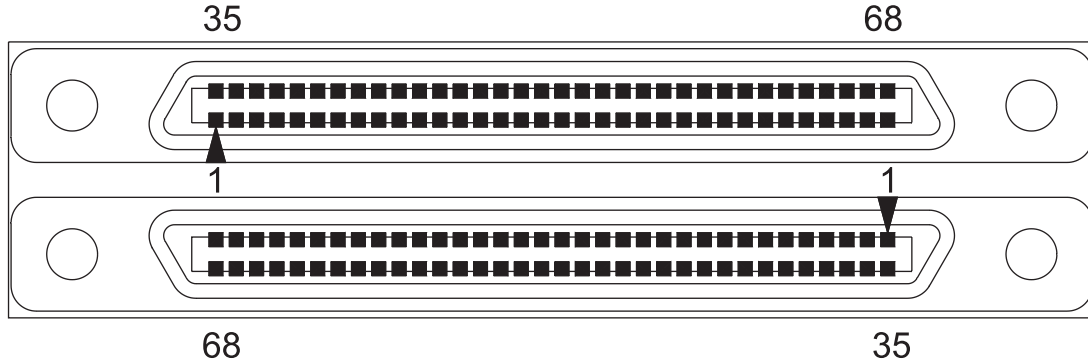


Figure 3: Serial Card (V.35/X.21) Connector

Table 5: Pin Connector Details for Serial Line Card

Pin#	Signal Name	Pin#	Signal Name
A1	CHASSIS_GND	A35	Signal Ground
A2	PORT1_RTS_B	A36	PORT1_RTS_A
A3	PORT1_CTS_B	A37	PORT1_CTS_A
A4	PORT1_DSR_B	A38	PORT1_DSR_A
A5	PORT1_DCD_B	A39	PORT1_DCD_A
A6	PORT1_DTR_B	A40	PORT1_DTR_A
A7	PORT1_RI	A41	PORT1_RL
A8	PORT1_TM	A42	PORT1_LL
A9	PORT1_RxD_B	A43	PORT1_RxD_A
A10	No Connect	A44	No Connect
A11	PORT1_TxD_B	A45	PORT1_TxD_A
A12	No Connect	A46	No Connect
A13	PORT1_RxTiming_B	A47	PORT1_RxTiming_A
A14	No Connect	A48	Signal Ground
A15	PORT1_TxTiming_B	A49	PORT1_TxTiming_A

Pin#	Signal Name	Pin#	Signal Name
A16	Signal Ground	A50	Signal Ground
A17	PORT1_TXC_B	A51	PORT1_TXC_A
A18	CHASSIS_GND	A52	Signal Ground
A19	PORT0_RTS_B	A53	PORT0_RTS_A
A20	PORT0_CTS_B	A54	PORT0_CTS_A
A21	PORT0_DSR_B	A55	PORT0_DSR_A
A22	PORT0_DCD_B	A56	PORT0_DCD_A
A23	PORT0_DTR_B	A57	PORT0_DTR_A
A24	PORT0_RI	A58	PORT0_RL
A25	PORT0_TM	A59	PORT0_LL
A26	PORT0_RxD_B	A60	PORT0_RxD_A
A27	P0P1_CMODE0	A61	P0P1_CMODE1
A28	PORT0_TxD_B	A62	PORT0_TxD_A
A29	P0P1_CMODE2	A63	P0P1_CMODE3
A30	PORT0_RxTiming_B	A64	PORT0_RxTiming_A
A31	P0P1_CMODE4	A65	Signal Ground
A32	PORT0_TxTiming_B	A66	PORT0_TxTiming_A
A33	Signal Ground	A67	Signal Ground
A34	PORT0_TXC_B	A68	PORT0_TXC_A
B1	CHASSIS_GND	B35	Signal Ground
B2	PORT2_RTS_B	B36	PORT2_RTS_A
B3	PORT2_CTS_B	B37	PORT2_CTS_A
B4	PORT2_DSR_B	B38	PORT2_DSR_A
B5	PORT2_DCD_B	B39	PORT2_DCD_A
B6	PORT2_DTR_B	B40	PORT2_DTR_A
B7	PORT2_RI	B41	PORT2_RL
B8	PORT2_TM	B42	PORT2_LL
B9	PORT2_RxD_B	B43	PORT2_RxD_A
B10	P2P3_CMODE0	B44	P2P3_CMODE1

Pin#	Signal Name	Pin#	Signal Name
B11	PORT2_TxD_B	B45	PORT2_TxD_A
B12	P2P3_CMODE2	B46	P2P3_CMODE3
B13	PORT2_RxTiming_B	B47	PORT2_RxTiming_A
B14	P2P3_CMODE4	B48	Signal Ground
B15	PORT2_TxTiming_B	B49	PORT2_TxTiming_A
B16	Signal Ground	B50	Signal Ground
B17	PORT2_TXC_B	B51	PORT2_TXC_A
B18	CHASSIS_GND	B52	Signal Ground
B19	PORT3_RTS_B	B53	PORT3_RTS_A
B20	PORT3_CTS_B	B54	PORT3_CTS_A
B21	PORT3_DSR_B	B55	PORT3_DSR_A
B22	PORT3_DCD_B	B56	PORT3_DCD_A
B23	PORT3_DTR_B	B57	PORT3_DTR_A
B24	PORT3_RI	B58	PORT3_RL
B25	PORT3_TM	B59	PORT3_LL
B26	PORT3_RxD_B	B60	PORT3_RxD_A
B27	No Connect	B61	No Connect
B28	PORT3_TxD_B	B62	PORT3_TxD_A
B29	No Connect	B63	No Connect
B30	PORT3_RxTiming_B	B64	PORT3_RxTiming_A
B31	No Connect	B65	Signal Ground
B32	PORT3_TxTiming_B	B66	PORT3_TxTiming_A
B33	Signal Ground	B67	Signal Ground
B34	PORT3_TXC_B	B68	PORT3_TXC_A

