

# Canon

## Digital Video Camcorder Instruction Manual

**English**


## Camescope vidéo numérique Manuel d'instruction

**Français**

## Videocámara digital Manual de Instrucciones

**Español**

# ZR70 MC / ZR65 MC / ZR60

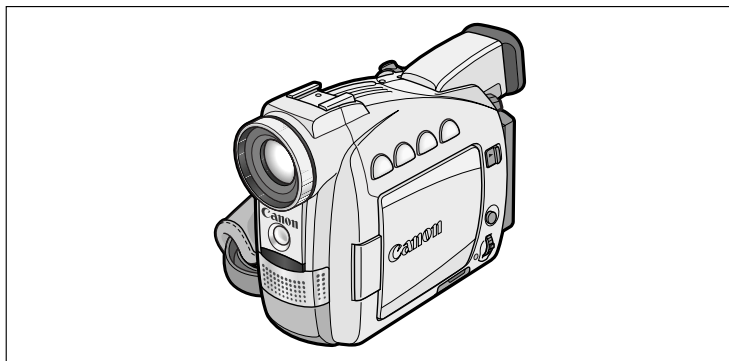

This instruction manual covers the ZR70 MC, ZR65 MC and ZR60. Please note that illustrations and explanation in this manual are based on the ZR70 MC.

Ce manuel d'instruction traite des modèles ZR70 MC, ZR65 MC et ZR60. Veuillez noter que les illustrations et les explications contenues dans ce manuel sont basées sur le ZR70 MC.

Este manual de instrucciones cubre la ZR70 MC, la ZR65 MC, y la ZR60. Tenga en cuenta que las ilustraciones y las explicaciones de este manual se basan en la ZR70 MC.

**NTSC**

# Important Usage Instructions

E

## WARNING:



**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

## WARNING:



**TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.**

## COPYRIGHT WARNING:

**Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.**

Digital Video Camcorder, ZR70 MC/ZR65 MC/ZR60 systems

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and use in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516)328-5600

## CAUTION:

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

## Important Warning



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION:

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.


# IMPORTANT SAFETY INSTRUCTIONS

In these safety instructions the word “product” refers to the Canon Digital Video Camcorder ZR70 MC/ZR65 MC/ZR60 A and all its accessories.

1. Read Instructions — All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions — The safety and operating instructions should be retained for future reference.
3. Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions — All operating and maintenance instructions should be followed.
5. Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
6. Accessories — Do not use accessories not recommended in this manual as they may be hazardous.
7. Avoid magnetic or electric fields — Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
8. Water and Moisture — Hazard of electric shock — Do not use this product near water or in rainy/moist situations.
9. Placing or Moving — Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.  
A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Power Sources — The CA-570 Compact Power Adapter should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
11. Polarization — The CA-570 Compact Power Adapter is equipped with a polarized 2-prong plug (a plug having one blade wider than the other).  
The 2-prong polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power Cord Protection — Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cords exit the product.
13. Outdoor Antenna Grounding — If an outside antenna is connected to the product, be sure the antenna is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI / NFPA No. 70—1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure 1.



Fig. 1

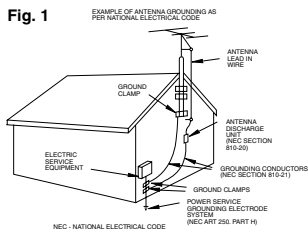

14. **Lightning** — For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
15. **Overloading** — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
16. **Objects and Liquid Entry** — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
17. **Servicing** — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. **Damage Requiring Service** — Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If any liquid has been spilled onto, or objects have fallen into, the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e. If the product has been dropped or the cabinet has been damaged.
  - f. When the product exhibits a distinct change in performance. This indicates a need for service.
19. **Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
20. **Safety Check** — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.

When replacement of power supply is required, please return it to the responsible nearest Canon Service Center and please replace it with the same type number CA-570.

The Adapter can be used with a power supply between 100 and 240 V AC. For areas where 120 V AC power is not used, you will need a special plug adapter. Contact your nearest Canon Service Center for further information.

# Reference Guide

---

The following manuals are supplied with the camcorder:

○ **Digital Video Camcorder ZR70 MC/ZR65 MC/ZR60 Instruction Manual**

This manual explains the camcorder operations from basic video recording to the use of the full range of features.

○ **Windows XP Users Only**

**DV NETWORK SOLUTION DISK Software Instruction Manual**

This manual explains how to download/upload images from/to the memory card using a DV (IEEE1394) cable. You can also perform videoconference and file transfer over the Internet using the provided software. Available functions depend upon the camcorder model and networking environment.

○ **ZR70 MC ZR65 MC**

**DIGITAL VIDEO SOLUTION DISK Software Instruction Manual**

This manual explains how to download images from the memory card to a computer using the supplied USB cable. You can add sample images for Card Mix and My Camera settings from the supplied DIGITAL VIDEO SOLUTION DISK.

## Trademark Acknowledgements

- Canon is a registered trademark of Canon Inc.
- Mini  is a trademark.
-  logo is a trademark.
- Macintosh is a trademark of Apple Computer Inc., registered in the United States and other countries.
- Windows® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

# Table of Contents

---

## Introduction

---

Reference Guide .....	5
Thank You for Choosing a Canon .....	9
Introducing the ZR70 MC/ZR65 MC/ZR60 .....	10
Components Guide .....	11

## Mastering the Basics

---

### Preparations

Using a Household Power Source .....	15
Attaching and Charging the Battery Pack .....	16
Installing the Backup Battery .....	19
Preparing the Camcorder .....	20
Loading a Cassette .....	22
Using the Wireless Controller .....	24
Setting the Time Zone, Date and Time .....	25

### Basic Recording

Recording Movies on a Tape .....	28
Zooming .....	30
Using the LCD Screen.....	32
Searching and Reviewing when Recording .....	35
Tips for Making Better Videos .....	36

### Basic Playback

Playing Back a Tape .....	37
Playing Back on a TV Screen.....	41

## Using the Full Range of Features

---

### General

Menus and Settings .....	44
Changing the Remote Sensor Mode .....	49
Customizing the Camcorder .....	50
<b>ZR70 MC</b> Setting the Light-up Buttons .....	51
Other Camcorder Settings .....	52

### Recording

Changing the Recording Mode (SP/LP) .....	54
Recording Still Images on a Tape.....	55
Using the Recording Programs.....	57
Using Digital Effects.....	61
Using the Multi-Image Screen .....	67
Turning Off the Image Stabilizer .....	69
Recording With the Self-Timer .....	70
Audio Recording .....	71
<b>ZR70 MC</b> Using the VL-3 Video Light (Optional) .....	73
<b>ZR70 MC</b> Using the DM-50 Microphone (Optional).....	74

### Manual Adjustments

Adjusting the Focus Manually .....	75
------------------------------------	----

Adjusting the AE Shift .....	77
Setting the Shutter Speed .....	78
Setting the White Balance .....	80

## Playback

Magnifying the Image .....	82
Displaying the Data Code .....	83
Photo Search/Date Search .....	85
Returning to a Pre-marked Position .....	86

## Editing

Recording to a VCR or Digital Video Device .....	87
Recording from Analog Video Devices (VCR, TV or Camcorder) .....	89
Recording from Digital Video Devices (DV Dubbing) .....	90
Converting Analog Signals into Digital Signals (Analog-Digital Converter) .....	92
Replacing Existing Scenes (AV Insert) .....	94
Audio Dubbing .....	96
Connecting to a Computer Using a DV (IEEE1394) Cable .....	99

## **ZR70 MC ZR65 MC** Using a Memory Card

Inserting and Removing the Memory Card .....	100
Selecting the Image Quality/Size .....	101
Recording Still Images on a Memory Card .....	104
Recording Panoramic Images (Stitch Assist Mode) .....	107
<b>ZR70 MC</b> Recording Motion JPEG Movies on a Memory Card .....	109
Playing Back a Memory Card .....	111
Protecting Images .....	114
Erasing Images .....	115
Selecting Still Images for Printing (Print Order) .....	116
Printing with the Direct Print Function .....	118
Combining Images (Card Mix) .....	122
Copying Still Images .....	126
Formatting a Memory Card .....	128
Connecting to a Computer Using a USB Cable .....	129
Creating a Start-up Image .....	130
Memory Card Information .....	131

## Additional Information

Screen Displays .....	134
List of Messages .....	138
Maintenance .....	141
Troubleshooting .....	145
System Diagram .....	148
Optional Accessories .....	149
Specifications .....	152
Index .....	154

## Conventions Used in This Manual

### Operating Modes

Operating Mode	Position of the POWER Switch	Position of the TAPE/CARD Switch
CAMERA	CAMERA	TAPE
PLAY (VCR)	PLAY (VCR)	TAPE
CARD CAMERA	CAMERA	CARD
CARD PLAY (VCR)	PLAY (VCR)	CARD






Shaded area : ZR70 MC and ZR65 MC only.

Available functions depend upon the operating mode. It is indicated as follows:

 : Function can be used in this mode.

 : Function cannot be used in this mode.

### Other Symbols and References

-  : Reference page number.
-  : Functions to be operated on the body of the camcorder.
-  : Functions to be operated on the wireless controller.
-  : Additional topics that complement the basic operating procedures.
-  : Precautions related to the camcorder operation.
- Capital letters are used to refer to buttons on the camcorder or the wireless controller.
- [ ] are used to refer to menu items displayed on the screen.
- “Screen” refers to the LCD and the viewfinder screen.

The serial number of this product can be found at the battery attachment unit of the camcorder. Write down the number and other information here and retain this book as a permanent record of your purchase to aid identification in case of theft.

Date of Purchase:

Model Name: ZR70 MC/ZR65 MC/ZR60

Purchased From:

Serial No.:

Dealer Address:

Dealer Phone No.:

 
 



 





 
 


# Thank You for Choosing a Canon

The Canon ZR70 MC/ZR65 MC/ZR60 provides a full range of options and functions. We recommend reading this manual thoroughly before you use the camcorder. It will help you to become more familiar with your camcorder, and learn how to operate it properly.

We suggest that you master the basic operations of the camcorder first, before moving on to its full range of features.

## Checking Supplied Accessories

<p><b>ZR70 MC ZR65 MC</b> WL-D79 Wireless Controller, <b>ZR60</b> WL-D80 Wireless Controller</p> 	<p>Two AA Batteries</p> 	<p>Lens Cap and Lens Cap Cord</p> 	<p>SS-800 Shoulder Strap</p> 
<p>Lithium Button Battery CR1616</p> 	<p><b>ZR70 MC</b> BP-512 Battery Pack, <b>ZR65 MC ZR60</b> BP-508 Battery Pack</p> 	<p>CA-570 Compact Power Adapter (incl. power cord)</p> 	<p><b>ZR70 MC</b> WA-30.5 Wide Attachment</p> 
<p>STV-250N Stereo Video Cable</p> 	<p><b>ZR70 MC ZR65 MC</b> IFC-300PCU USB Cable</p> 	<p><b>ZR70 MC ZR65 MC</b> SDC-8M SD Memory Card (containing sample images)</p> 	<p><b>ZR70 MC ZR65 MC</b> Hard Case for SD Memory Card</p> 
<p>DV NETWORK SOLUTION DISK <b>ZR70 MC ZR65 MC</b> DIGITAL VIDEO SOLUTION DISK</p> 			

# Introducing the ZR70 MC/ZR65 MC/ZR60

E

**22× Optical and  
440× Digital Zoom (ZR70 MC)**

**20× Optical and  
400× Digital Zoom (ZR65 MC)**

**18× Optical and  
360× Digital Zoom (ZR60)**

## **Image Stabilizer**

Stabilizes your recordings even in long telephoto shots (in Camera mode).

## **Night Mode**

Allows recording even in dark places. The Night mode adjusts automatically to the optimum shutter speed.

## **Super Night Mode and Low Light Plus Mode (ZR70 MC)**

With the ZR70 MC's Super Night mode (in Camera mode) and Low Light Plus mode (in Card Camera mode), you can keep on shooting without turning the lights on. The assist lamp (White LED) lights up to illuminate the subject.

## **Still Images**

Just press the photo button to capture still images like photographs.

## **My Camera Settings**

You can personalize your camcorder by customizing the start-up image and camcorder sounds.

## **Analog Line-in Recording/ Audio Dubbing/AV Insert Editing**

## **Advanced Accessory Shoe (ZR70 MC)**

Simply slide Canon's DM-50 Directional Stereo Microphone or VL-3 Video Light into the accessory shoe; the camcorder will automatically provide power and connections.

## **Digital Effects**

Show your creativity by using the special effects and faders. The multi-image screen captures moving subjects in 4, 9 or 16 sequences of still images.

## **Memory Card (ZR70 MC/ZR65 MC)**

You can record images on a SD Memory Card or MultiMediaCard. Images recorded in Stitch Assist mode can be merged into one panoramic scene with the supplied software.

## **Direct Print (ZR70 MC/ZR65 MC)**

You can print still images by connecting to a Canon Bubble Jet Printer with Direct Print function.

## **USB Terminal (ZR70 MC/ZR65 MC)**


Allows transfer of memory card data to a computer with built-in USB port. You can organize and edit images on your computer using the supplied software.

## **IEEE1394 DV Terminal**


The DV terminal allows high-quality transfer with virtually no deterioration in quality of images. You can edit images by connecting the camcorder to a PC with IEEE1394 terminal. Windows XP Users can use the supplied software to perform videoconference and file transfer over the Internet.

# Components Guide


## ZR70 MC/ZR65 MC/ZR60

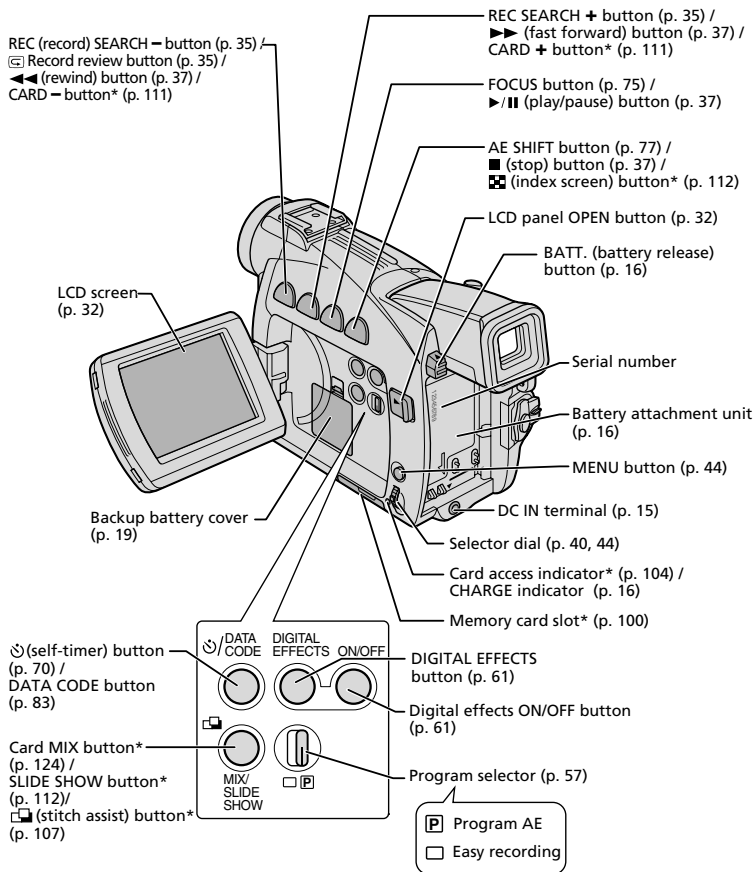

\* ZR70 MC and ZR65 MC only.

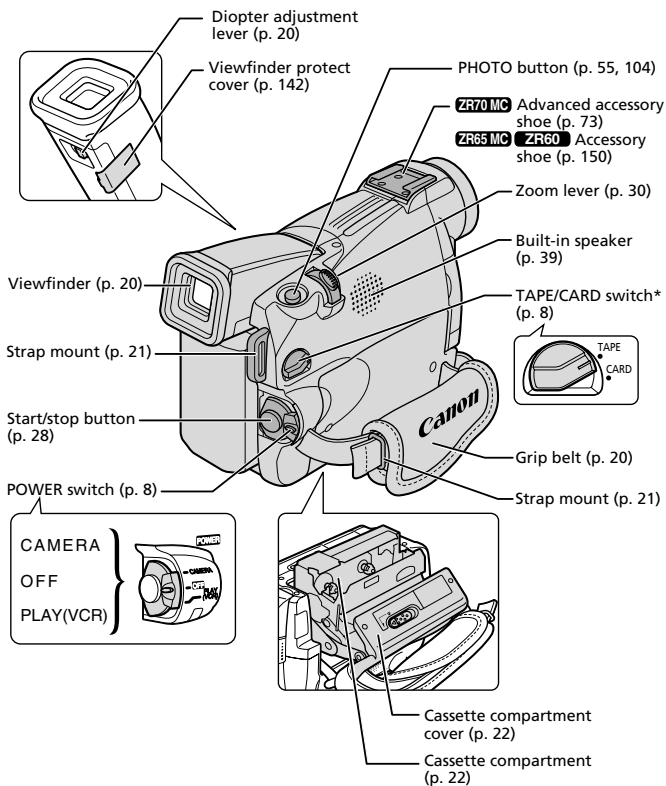


\* ZR70 MC and ZR65 MC only.

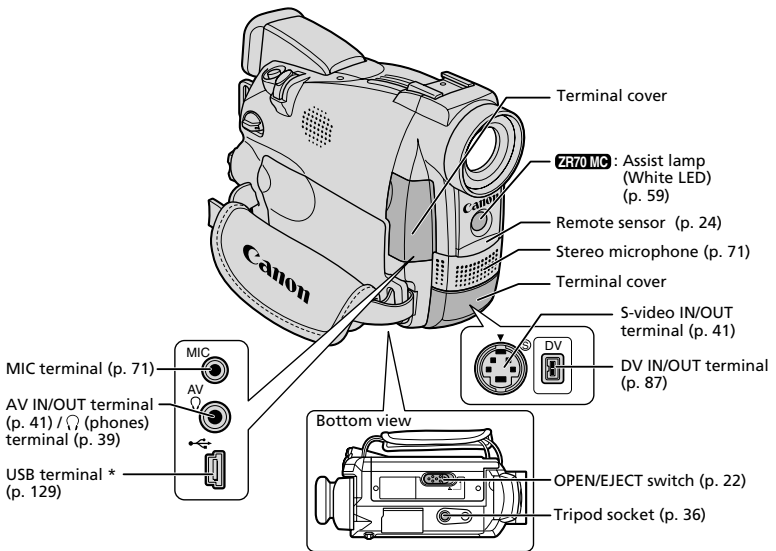


\* **ZR70 MC** and **ZR65 MC** only.

ZR70 MC ZR65 MC WL-D79

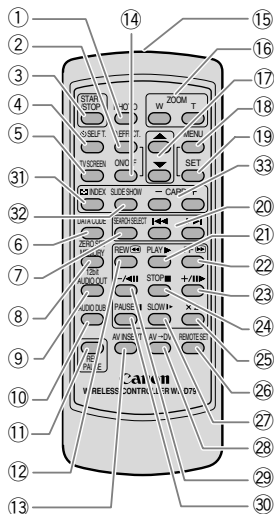

ZR60 WL-D80

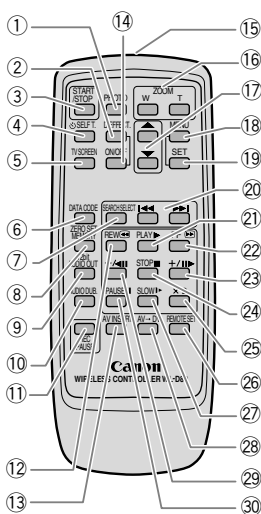

- ① PHOTO button (p. 55, 104)
- ② D. EFFECTS (Digital effects) button (p. 61)
- ③ START/STOP button (p. 28)
- ④ SELF T. button (p. 70)
- ⑤ TV SCREEN button (p. 134)
- ⑥ DATA CODE button (p. 83)
- ⑦ SEARCH SELECT button (p. 85)
- ⑧ ZERO SET MEMORY button (p. 86)
- ⑨ 12bit AUDIO OUT button (p. 98)
- ⑩ AUDIO DUB. button (p. 97)
- ⑪ REC PAUSE button (p. 89)
- ⑫ REW◀◀ button (p. 37)
- ⑬ AV INSERT button (p. 95)
- ⑭ Digital effects ON/OFF button (p. 61)
- ⑮ Transmitter
- ⑯ Zoom buttons (p. 30)
- ⑰ Controller buttons (p. 44)


- ⑱ MENU button (p. 44)
- ⑲ SET button (p. 44)
- ⑳ Search buttons (p. 85)
- ㉑ PLAY ▶▶ button (p. 37)
- ㉒ FF ▶▶▶▶ button (p. 37)
- ㉓ +/||▶▶ button (p. 38)
- ㉔ STOP ■ button (p. 37)
- ㉕ × 2 button (p. 38)
- ㉖ REMOTE SET button (p. 49)
- ㉗ SLOW ▶▶▶▶ button (p. 38)
- ㉘ AV → DV button (p. 93)
- ㉙ -/◀◀▶▶ button (p. 38)
- ㉚ PAUSE || button (p. 38)
- ㉛ INDEX button\* (p. 112)
- ㉜ SLIDE SHOW button\* (p. 112)
- ㉝ CARD -/+ buttons\* (p. 111)

\* ZR70 MC and ZR65 MC only.

## Using a Household Power Source

You can operate the camcorder from a household power source using the supplied power adapter. The power adapter converts current from a power outlet (100-240 V AC, 50/60 Hz) to the DC current used by the camcorder.

1. Turn the **POWER** switch to **OFF**.
2. Connect the power cord to the power adapter.
3. Plug the power cord into a power outlet.
4. Connect the power adapter to the camcorder's DC IN terminal.

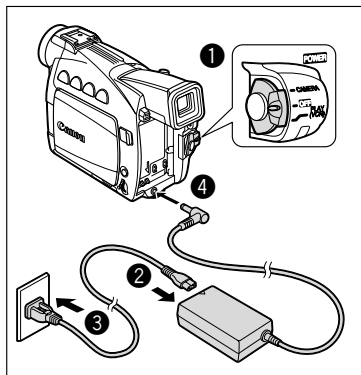

5. After use, disconnect the power adapter from the camcorder. Unplug the power cord from the power outlet and disconnect it from the adapter.



- Turn off the camcorder before connecting or disconnecting the power adapter.
- If the adapter is used close to a TV, it may cause picture interference. Move the adapter away from the TV or the antenna cable.
- Do not connect any products that are not expressly recommended to the camcorder's DC IN terminal or to the power adapter.
- You may hear some noise from the power adapter during use. This is not a malfunction.


# Attaching and Charging the Battery Pack

E


Charge the battery pack with the supplied power adapter before you use the camcorder for the first time and subsequently when the message "CHANGE THE BATTERY PACK" appears.

1. Turn the **POWER** switch to **OFF**.
2. Move the **viewfinder** upward.
3. Attach the battery pack to the camcorder.

- Remove the terminal cover of the battery pack.
- Align the end of the battery pack with the line on the camcorder, press lightly and slide it in the direction of the arrow until it clicks.

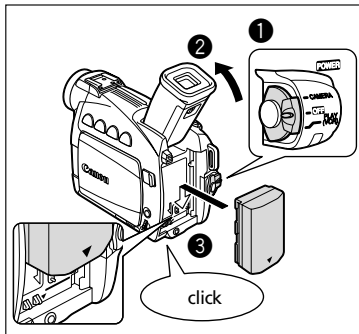

4. Connect the power cord to the adapter.
  5. Plug the power cord into a power outlet.
  6. Connect the power adapter to the camcorder's DC IN terminal.
7. When charging is complete, disconnect the power adapter from the camcorder. Unplug the power cord from the power outlet and disconnect it from the adapter.

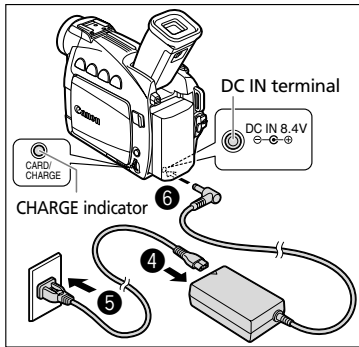

8. Remove the battery pack after use.

Press the **BATT.** button to remove the battery.



- The battery pack may be defective when the **CHARGE** indicator flashes rapidly.
- The **CHARGE** indicator informs you about the charge status.
  - 0-50%: Flashes once every second
  - More than 50%: Flashes twice every second
  - 100%: Glows steadily
- Do not disconnect and reconnect the power cord while charging a battery pack. The battery pack may not be charged correctly even if the **CHARGE** indicator glows steady. The battery pack may also not be charged correctly when a power outage occurs during charging. Remove the battery pack and attach it back to the camcorder.



## Charging, Recording and Playback Time

Below times are approximate and vary according to the charging, recording or playback conditions.

### Charging Time

Battery Pack	Charging Time
BP-508 (ZR65 MC/ZR60)	110 min.
BP-512 (ZR70 MC/optional)	120 min.
BP-511 (Optional)	120 min.
BP-522 (Optional)	210 min.
BP-535 (Optional)	310 min.

- Charge the battery pack in temperatures between 41° F and 104° F (5° C and 40° C).
- A lithium ion battery pack can be charged at any charge state. Unlike conventional battery packs, you do not need to completely use or discharge it before charging.

### Recording Time

Battery Pack	Maximum Recording Time		Typical Recording Time*	
	Using the Viewfinder	Using the LCD	Using the Viewfinder	Using the LCD
BP-508 (ZR65 MC/ZR60)	100 min.	75 min.	55 min.	40 min.
BP-512 (ZR70 MC/optional)	180 min.	140 min.	95 min.	75 min.
BP-511 (Optional)	180 min.	140 min.	95 min.	75 min.
BP-522 (Optional)	370 min.	295 min.	195 min.	155 min.
BP-535 (Optional)	590 min.	470 min.	315 min.	250 min.

\* Approximate times for recording with repeated operations such as start/stop, zooming, power on/off. Actual time may be shorter.

 
- We recommend that you prepare battery packs 2 to 3 times longer than you think you might need.
- To conserve battery charge, turn off the camcorder instead of leaving it in record pause mode.

### Playback Time

Battery Pack	Playback Time
	Using the LCD
BP-508 (ZR65 MC/ZR60)	70 min.
BP-512 (ZR70 MC/optional)	125 min.
BP-511 (Optional)	125 min.
BP-522 (Optional)	250 min.
BP-535 (Optional)	400 min.

## How much power is left?

The battery symbols indicate the charge status of the battery pack.

When the battery pack is empty, "CHANGE THE BATTERY PACK" appears for 4 seconds and  starts flashing.

The battery charge indicators are not constant – they vary according to the condition under which battery pack and camcorder are used.



## Battery Pack Handling Precautions

### DANGER!

**Treat the battery pack with care.**



- Keep it away from fire (or it might explode.)
- Do not expose the battery pack to temperature higher than 140° F (60° C). Do not leave it near a heater or inside a car in hot weather.
- Do not try to disassemble or modify it.
- Do not drop or knock it.
- Do not get it wet.

- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
- Attach the terminal cover whenever a battery pack is not in use. Contact to metallic objects may cause a short circuit and damage the battery pack.
- Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.
- Since storing a charged battery pack for a long time (about 1 year) can shorten its lifecycle or affect performance, we recommend to discharge the battery pack fully and to store it in a dry place at temperatures no higher than 86° F (30° C). If you do not use the battery pack for long periods, charge and discharge it fully at least once a year. If you have more than 1 battery pack, perform these precautions at the same time for all battery packs.
- Although the battery pack's operating temperature range is from 32° F to 104° F (0° C to 40° C), the optimal range is from 50° F to 86° F (10° C to 30° C). At cold temperatures, performance will temporarily decline. Warm it in your pocket before use.
- Replace the battery pack if the usable time after full charge diminishes substantially at normal temperatures.

# Installing the Backup Battery

The backup battery allows the camcorder to retain date, time and other camcorder settings while the power source is disconnected. Power the camcorder from a household power source or with a battery pack when replacing the backup battery.

1. Open the backup battery cover.
2. Insert the lithium battery with the + side facing outward.
3. Close the cover.

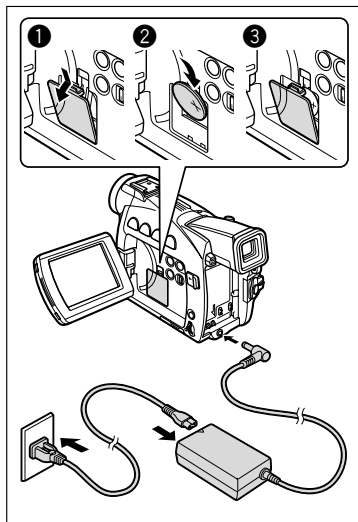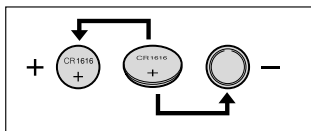


## WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 212° F (100° C) or incinerate the battery.
- Replace the battery with a CR1616 made by Panasonic, Hitachi Maxell, Sony, Toshiba, Varta or Renata. Use of other batteries may present a risk of fire or explosion.



- Do not pick up the battery using tweezers or other metal tools as this will cause a short circuit.
- Wipe the battery with a clean dry cloth to ensure proper contact.
- Keep the battery out of reach of children. If it is swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may damage stomach and intestines.
- Do not disassemble, heat or immerse the battery in water to avoid the risk of explosion.




The backup battery has a life span of about a year.  flashes to inform you that it needs to be replaced.

# Preparing the Camcorder

E

## Adjusting the Viewfinder (Diopter Adjustment)

1. Turn on the camcorder and keep the LCD panel closed to adjust the viewfinder.
2. Adjust the diopter adjustment lever.

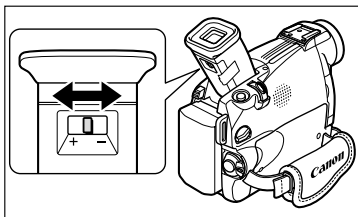


Do not leave the viewfinder exposed to direct sunlight as it may melt (due to concentration of light by the lens). Adjust the angle of the viewfinder to prevent sunlight from entering.

Mastering  
the Basics

## Attaching the Lens Cap

1. Attach the cord to the lens cap.
2. Pass the grip belt through the loop on the cord.


Press the buttons on the lens cap when attaching/removing it. Hook the lens cap on the grip belt while you are recording, and place it over the lens when you have finished.

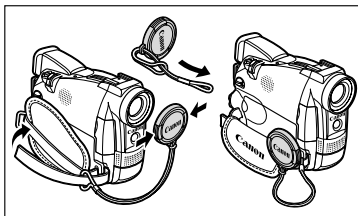

## Fastening the Grip Belt

Hold the camcorder with your right hand and adjust the belt with your left.


Adjust the grip belt so that you can reach the zoom lever and photo button with your index finger, and the start/stop button with your thumb.

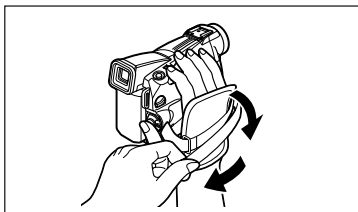

## Attaching the Shoulder Strap

For extra security and portability, attach the shoulder strap before using the camcorder.


**Pass the ends through the strap mount and adjust the length of the strap.**

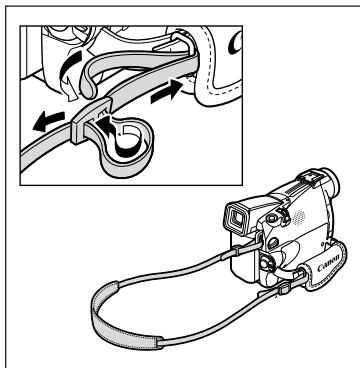

## ZR70 MC Mounting the Wide Attachment

The WA-30.5 Wide Attachment gives you a wide perspective for indoor shots or panoramic views (0.6 $\times$ ). The wide attachment is for use at maximum wide-angle.

**Screw the wide attachment fully into the lens filter thread.**

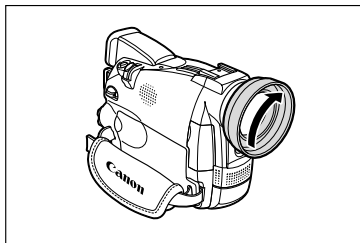

- If you zoom to telephoto, the picture will not be in focus.
- Do not look directly at the sun or other strong light sources through the wide attachment. It could damage your eyesight.
- When recording in wide angle with the wide attachment, the outer periphery of the image may become curved.
- Filters cannot be used with the wide attachment.
- If dust accumulates on the wide attachment or on the camcorder lens, clean both lenses gently with a blower brush.
- The wide attachment may obstruct the remote sensor (the range of the wireless controller narrows), or may cause a shadow to appear on the picture when recording with a video light or the assist lamp (White LED).
- Do not touch the lens to avoid smudges and fingerprints.
- Do not store the wide attachment in a humid place as it may mold.

# Loading a Cassette

E

Use only videocassettes marked with the Mini DV logo.

## Loading and Unloading

### 1. Slide and hold the OPEN/EJECT switch and open the cassette compartment cover.

The cassette compartment opens automatically.



### 2. Load/unload the cassette.

- Load the cassette with the window facing the grip belt and the REC/SAVE tab facing upward.
- Unload the cassette by pulling it straight out.

### 3. Press the **PUSH** mark on the cassette compartment until it clicks.


Wait for the cassette compartment to retract automatically.

### 4. Close the cassette compartment cover.

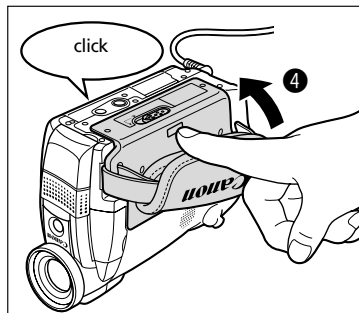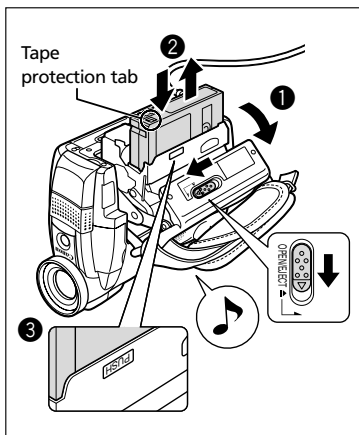


- Do not interfere with the cassette compartment while it is opening or closing automatically or attempt to close the cover until the cassette compartment has fully retracted.
- Be careful not to get your fingers caught in the cassette compartment cover.




- If the camcorder is connected to a power source, cassettes can be loaded/unloaded even if the POWER switch is set to OFF.
-  flashes if no cassette is inserted when turning on the power (in CAMERA and PLAY (VCR) mode).
- With some types of tapes, the remaining tape display may not be accurate.

## Protecting Tapes from Accidental Erasure

To protect your recordings from accidental erasure, slide the tab on the cassette to the left. (This switch position is usually labeled SAVE or ERASE OFF.)

If you load a protected cassette in CAMERA mode, the message "THE TAPE IS SET FOR ERASURE PREVENTION" appears for approx. 4 seconds and  starts flashing. If you wish to record on that cassette, slide the tab back to the right.

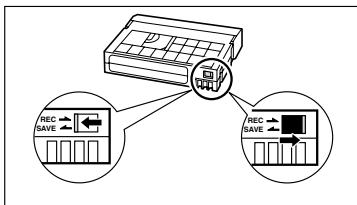


## Cassette Handling Precautions

- Rewind tapes after use. If the tape becomes slack and damaged, it may cause picture and sound distortion.
- Return cassettes in the case and store them upright.
- Do not leave the cassette in the camcorder after use.
- Do not use cassettes with spliced tapes or nonstandard cassettes as they may damage the camcorder.
- Do not insert anything into the small holes of the cassette, or cover them with cellophane tape.
- Handle cassettes with care. Do not drop or subject them to severe impact as this may damage the cassettes.
- Rewind tapes from time to time if they are stored for a long time.
- With cassettes equipped with a memory function, metal plated terminals may become dirty with use and the cassette's memory function may not work properly. Clean the terminals with a cotton swab after about 10 times of loading/unloading.

# Using the Wireless Controller

E

You can operate the camcorder with the supplied wireless controller from a distance of up to 16 feet (5 m). Point it at the camcorder's remote sensor when you press the buttons.

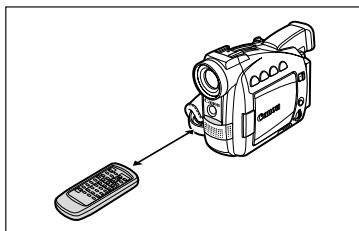

Following functions cannot be operated without the wireless controller:


- Some special playback modes (📖 38)
- Photo/date search (📖 85)
- Zero set memory (📖 86)
- Analog line-in (📖 89)
- DV dubbing (📖 90)
- AV Insert (📖 94)
- Audio dubbing (📖 96)



- The wireless controller may not work properly in bright places, such as outdoors under direct sunlight, or when used too close to the camcorder.
- The operable range of the wireless controller may shorten when the camcorder's remote sensor is exposed to strong light.
- When the batteries run out, replace both at the same time.

## Inserting Batteries

The wireless controller operates with two AA batteries.

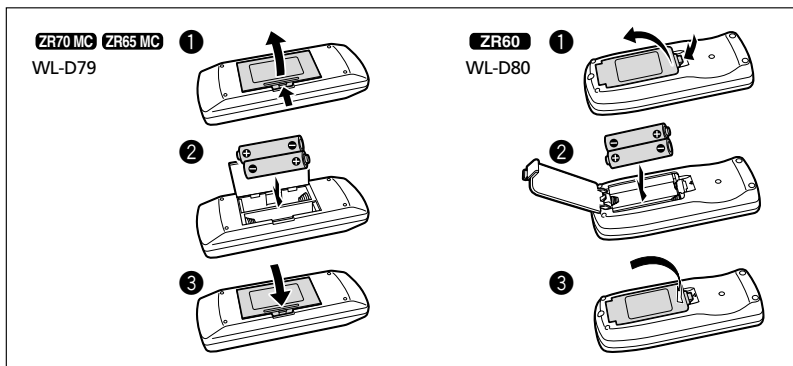

1. Open the battery cover.
2. Insert the batteries following the + and - markings.
3. Close the battery cover.



# Setting the Time Zone, Date and Time



Set the time zone, date and time when you first start using your camcorder. Install the backup battery before you begin (📖 19).

E

## Setting the Time Zone/Daylight Saving Time

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


**MENU**

(📖 44)

SYSTEM

T.ZONE / DST ••• N.Y.

1. Press the MENU button to open the menu.

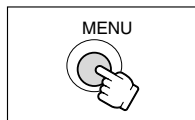

2. Turn the selector dial to select [SYSTEM] and press the selector dial.

 
 
3. Turn the selector dial to select [T.ZONE/DST] and press the selector dial.

- The time zone setting appears.
- The default setting is New York. Select your time zone and daylight saving time (DST) setting if necessary.


4. Turn the selector dial to select the setting option that represents your time zone.

To adjust for daylight saving time, select the time zone with the ☀ next to the area.

5. Press the MENU button to close the menu.



Mastering  
the Basics

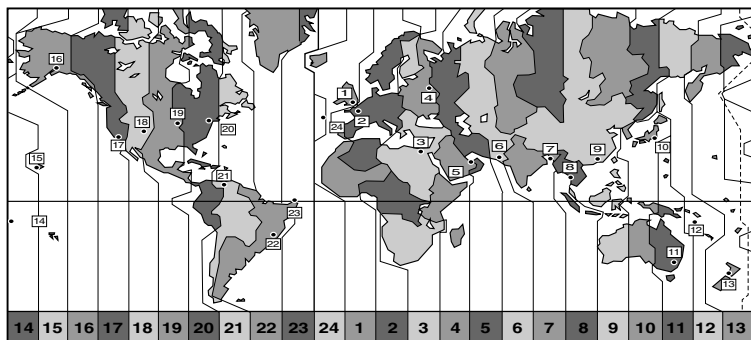

No.	Time zone	No.	Time zone
1	LONDON	13	WELLGTN (Wellington)
2	PARIS	14	SAMOA
3	CAIRO	15	HONOLU. (Honolulu)
4	MOSCOW	16	ANCHOR. (Anchorage)
5	DUBAI	17	L.A. (Los Angeles)
6	KARACHI	18	DENVER
7	DACCA	19	CHICAGO
8	BANGKOK	20	N.Y. (New York)
9	H. KONG (Hong Kong)	21	CARACAS
10	TOKYO	22	RIO (Rio de Janeiro)
11	SYDNEY	23	FERNAN. (Fernando de Noronha)
12	SOLOMON	24	AZORES



- Once you have set time zone, date and time, you do not need to reset the clock each time you travel to another time zone. Just set the time zone to the one of your destination, and the camcorder automatically adjusts the clock.
- Days per month and leap years will be automatically adjusted.

## Setting the Date and Time

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

 
**MENU**

( 44 )


SYSTEM

D/TIME SET... JAN. 1, 2003  
12:00 PM

1. Press the MENU button to open the menu.




- Turn the selector dial to select [SYSTEM] and press the selector dial.
- Turn the selector dial to select [D/TIME SET] and press the selector dial.

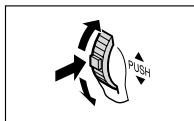

The year display starts to flash.

- Turn the selector dial to select the year, and press the selector dial.
  - The next part of the display starts flashing.
  - Set the month, day, hours and minutes in the same way.
- Press the MENU button to close the menu and start the clock.

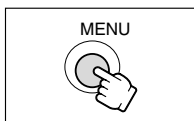

Time zone, date and time appear for 4 seconds each time you turn the power on.



- To change a part of the date or time, press the selector dial at step 4, and move to the part you wish to change.
- The date can be set to any year between 2003 and 2030.

## Displaying Date and Time during Recording

You can display time zone, date and time in the lower left corner of the screen (the time zone disappears after 4 seconds). The 4-second display will no longer appear when you turn the power on. The date and time display will not be superimposed on your recordings.

CAMERA

PLAY (VCR)

CARD CAMERA


CARD PLAY (VCR)

**MENU**  
(book 44)



DISPLAY SET UP

D/T DISPLAY OFF

- Press the MENU button to open the menu.

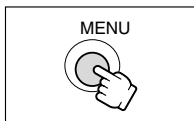

 - Turn the selector dial to select [DISPLAY SET UP] and press the selector dial.
- Turn the selector dial to select [D/T DISPLAY] and press the selector dial.
- Turn the selector dial to select [ON].
- Press the MENU button to close the menu.

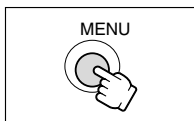


# Recording Movies on a Tape



E

You can use the LCD screen or the viewfinder when recording.

## Before You Begin Recording

 
Make a test recording first to check if the camcorder operates correctly. Before you make important recordings, clean the video heads ( 142).


## Preparations

Connect a power source. Load a cassette.


## Recording

1. Remove the lens cap.
2. Set the camcorder to **CAMERA** mode.

If you have not set the time zone, date and time, "SET THE TIME ZONE, DATE AND TIME" appears. See *Setting the Time Zone, Date and Time* ( 25).

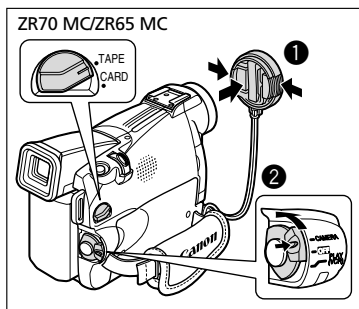

 3. Open the LCD panel ( 32).


To use the viewfinder, keep the LCD panel closed or rotate it so that the screen faces in the same direction of the lens ( 33).

4. Press the start/stop button to begin recording.

Wait until the tape counter came to a complete stop before you begin recording.

5. Press the start/stop button again to pause recording.

Restart recording by pressing the start/stop button.

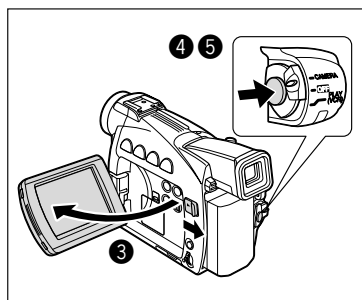

## When You Have Finished Recording



 

---

1. Turn the POWER switch to OFF.
  2. Close the LCD panel.
  3. Replace the lens cap.
  4. Unload the cassette.
  5. Disconnect the power source.
- 



When recording outdoors or through a window, do not leave LCD screen, viewfinder or lens exposed to direct sunlight as it may cause damage.




- Turn the power off if you do not intend to use the camcorder for a longer time.
- The camcorder will shut off after 5 minutes when left in record pause mode to protect tape and video heads. To continue recording, turn the POWER switch to OFF and then back to CAMERA.
- For when to use the  (Easy Recording) or  (program AE) mode, see *Using the Recording Programs* ( 57).
- When you do not remove the cassette, you can record the next scene without producing any noise or blank sections between the recordings even if you turn the camcorder off.
- About the built-in microphone: When recording near loud sounds (such as fireworks, drums or concerts), sound may become distorted or may be recorded not in the actual sound level.
- For extra recording time, see *Changing the Recording Mode* ( 54).

# Zooming



E

The camcorder's zoom lens allows you to choose the best picture angle for your recordings. The camcorder automatically switches between optical zooming and digital zooming. Image resolution is slightly lower with the digital zoom.

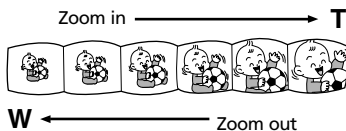


## Optical Zoom

ZR70 MC	ZR65 MC	ZR60
22× optical zoom	20× optical zoom	18× optical zoom

Move the zoom lever toward **W** to zoom out (wide-angle). Move it toward **T** to zoom in (telephoto).

- Press the zoom lever slightly for a slow zoom. Press harder for a faster zoom.
- You can also use the T and W buttons on the wireless controller. However, you cannot control the zoom speed.

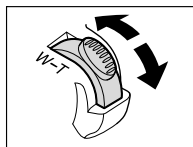

## Digital Zoom

ZR70 MC	ZR65 MC	ZR60
88×/440× digital zoom	80×/400× digital zoom	72×/360× digital zoom

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


**MENU**

( 44)

CAMERA SET UP

D.ZOOM.....88×


1. Press the **MENU** button to open the menu.

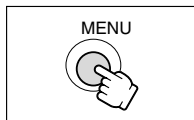


2. Turn the selector dial to select [CAMERA SET UP] and press the selector dial.

3. Select [D.ZOOM] and press the selector dial.

4. Select a setting option.

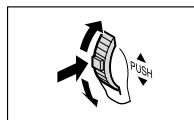

## 5. Press the MENU button to close the menu.

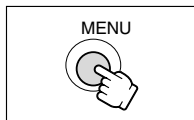

E



- Keep at least 3.28 ft. (1m) to the subject. At wide-angle, you can focus on a subject as close as 0.39 in. (1cm).
- A zoom indicator appears for 4 seconds. It extends in light blue when the digital zoom is set to 88×/80×/72×, and extends further in dark blue when set to 440×/400×/360×.
- Digital zoom cannot be used in the Night mode and Super Night (ZR70 MC) mode.
- Digital zoom cannot be used when the multi-image screen is selected.
- **ZR70 MC** **ZR65 MC** Because the image stabilizer cannot be used in CARD CAMERA mode, we recommend mounting the camcorder on a tripod at large magnifications.

# Using the LCD Screen

E

## 1. Push the OPEN button at the LCD panel and open the LCD panel.



The LCD screen switches on and the viewfinder switches off.

## 2. Rotate the LCD panel and choose the angle of the screen.

You can rotate the LCD panel so that the screen faces in the same direction as the lens (□ 33), or push it flat against the camcorder with the screen facing outward.

## 3. Close the LCD panel after use.

- Close the LCD panel firmly until it clicks.
- The LCD screen switches off and the viewfinder switches on.

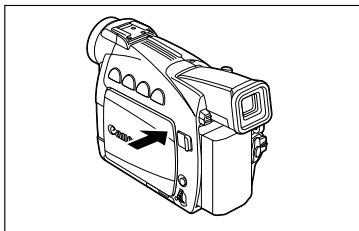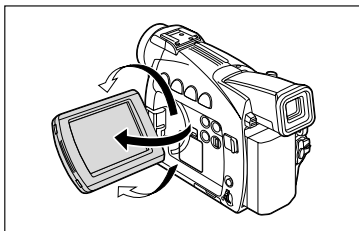

- Make sure to open the LCD panel at 90 degrees before rotating it.
- Rotate the LCD panel in the vertical position before closing the LCD panel.
- When recording outdoors or through a window, do not leave the LCD screen, viewfinder or lens exposed to direct sunlight as it may cause damage.
- Do not hold the camcorder by the LCD panel or the viewfinder.



- About the LCD Screen: The LCD screen is produced with extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black or green dots. This has no effect on the recorded image and does not constitute a malfunction.
- Bright light or reflected light may cause a vertical light bar to appear on the screen. This is not a malfunction.
- Bright light may make it difficult to use the LCD screen. In such case, use the viewfinder instead.



## Adjusting the Brightness of the LCD Screen



CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


### MENU

( 44)

DISPLAY SET UP


BRIGHTNESS •• +

1. Press the MENU button to open the menu.

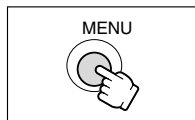

2. Turn the selector dial to select [DISPLAY SET UP] and press the selector dial.


3. Turn the selector dial to select [BRIGHTNESS] and press the selector dial.

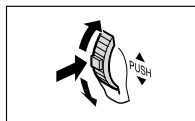

4. Turn the selector dial and adjust the level.

Turn the selector dial up to make the screen brighter and down to make it darker.


5. Press the MENU button to close the menu.

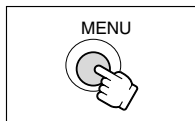

Changing the brightness of the LCD screen does not affect that of the viewfinder or the recordings.

## Allowing the Subject to Monitor the LCD Screen

You can rotate the LCD panel so that the screen faces in the same direction as the lens. The viewfinder switches on allowing you to use the viewfinder while the subject can monitor the screen.

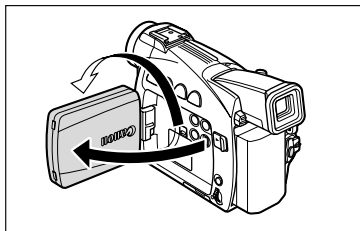

When you rotate the screen so that the screen faces in the same direction as the lens, the image appears mirror reversed (LCD MIRROR ON). However, you can choose to display the image as it is being recorded (LCD MIRROR OFF).

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

E

**MENU**

( 44 )

DISPLAY SET UP

▶▶ LCD MIRROR · · ON

1. Press the **MENU** button to open the menu.
2. Turn the selector dial to select [**DISPLAY SET UP**] and press the selector dial.
3. Turn the selector dial to select [**LCD MIRROR**] and press the selector dial.
4. Turn the selector dial to select [**OFF**].
5. Press the **MENU** button to close the menu.




When [LCD MIRROR] is set to [ON], most screen displays appear mirror reversed.

# Searching and Reviewing when Recording



E

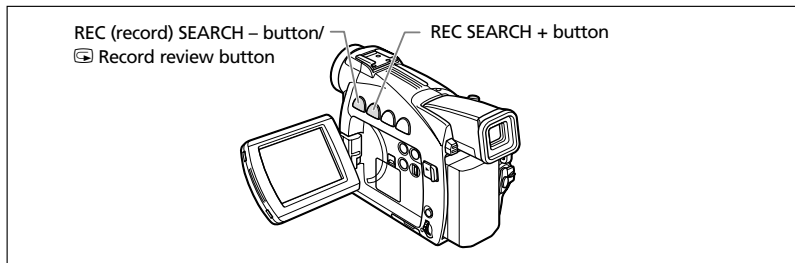

## Record Review


CAMERA

PLAY (VCR)

 
CARD CAMERA

CARD PLAY (VCR)

In record pause mode, this function allows you to review the last few seconds of your recording to check if it has been recorded properly.

**Press and release the  (record review) button.**

The camcorder rewinds the tape, plays back the last few seconds, and returns to record pause mode.



## Record Search

CAMERA

PLAY (VCR)

 
CARD CAMERA

CARD PLAY (VCR)

In record pause mode, this function allows you to play back the tape (forward or reverse) to locate the point where you wish to begin recording.

**Press and hold the REC SEARCH + button (forward) or - button (reverse).**

- Release the button at the point you wish to begin recording.
- The camcorder returns to record pause mode.



- Noise may appear on the screen when you play back the tape in reverse.
- There will be no sound during Record Review and Record Search.

# Tips for Making Better Videos

E

## Holding the Camcorder

For maximum stability, grip the camcorder in your right hand and keep your right elbow pressed against your body. If necessary, support the camcorder with your left hand. Be careful that your fingers do not touch the microphone or lens.

High-angle Recording



Low-angle Recording



## For More Stability

Lean against a wall



Put the camcorder on a table



Lie on your elbow




Use a tripod



## Lighting

When recording outdoors, we recommend recording with the sun at your back.

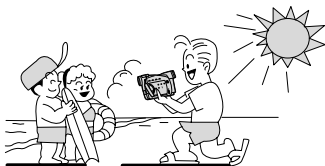

- When using a tripod, do not leave the viewfinder exposed to direct sunlight as it may melt (due to concentration of the light by the lens).
- Do not use tripods with fastening screws longer than 0.2 inch (5.5 mm) as it may damage the camcorder.

# Playing Back a Tape



When you use the LCD screen for playback, the camcorder plays back the sound via built-in speaker. The built-in speaker is monaural. Use headphones for stereo sound or when using the viewfinder for playback.


E

## Preparations

Connect a power source. Load a cassette.

## Playback

1. Set the camcorder to **PLAY (VCR)** mode.

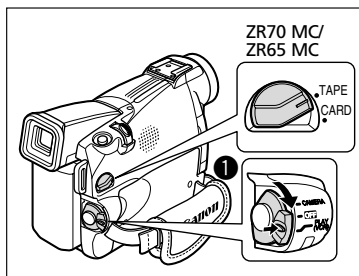

2. Open the LCD panel.


You can also close the LCD panel with the screen facing outward.

3. Press the **◀◀** button to rewind the tape.

To fast forward the tape, press the **▶▶** button. To stop playback, press the **■** button.

4. Press the **▶/||** button to begin playback.

5. Press the **■** button to stop playback.

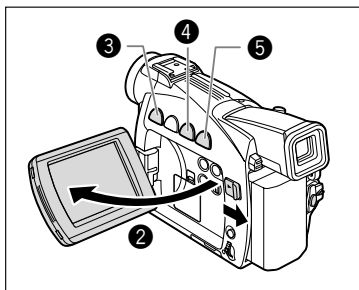


- If the playback picture is distorted, clean the video heads using a Canon Head Cleaning Cassette or a commercially available digital video head-cleaning cassette.
- To use the viewfinder, close the LCD panel. The built-in speaker does not sound. Use headphones when using the viewfinder ( 39).
- For displaying the date and time during playback, see *Displaying the Data Code* ( 83).

## Special Playback Modes

Special playback modes (except of playback pause and fast/rewind playback) can only be operated with the wireless controller.

E

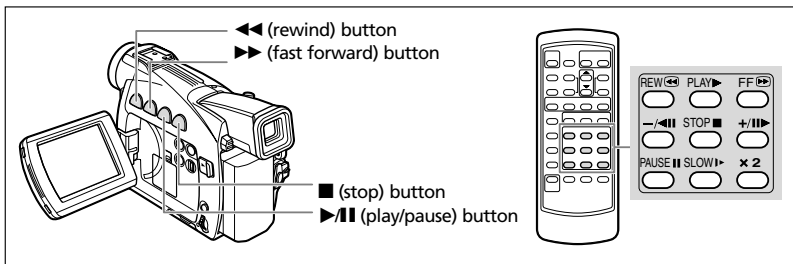

### ▶|| (Playback Pause)

To pause playback, press the ▶|| button. Press the ▶|| button to resume playback. The camcorder goes into stop mode after 5 minutes in playback pause mode.

### ▶▶ (Fast Forward Playback) / ◀◀ (Rewind Playback)

Plays back the tape at 9.5 times normal speed (forward or reverse). Press and hold the button during normal playback or fast forward.

### +/▶▶ (Frame Advance) / -/◀◀ (Frame Reverse)

Plays back frame-by-frame. Press the button repeatedly during playback pause. Press and hold it to play back continuous frame advance/frame reverse.

### SLOW ▶ (Slow Forward)/(Slow Reverse)

Plays back at about 1/3 normal speed. For slow forward playback, press the SLOW ▶ button. For slow reverse playback, press the -/◀ button followed by the SLOW ▶ button. Press the ▶ (play) button to return to normal playback.

### -/◀ (Reverse Playback)


Plays back in reverse at normal speed. Press the button during normal playback. Press the ▶ (play) button return to normal playback. The camcorder goes into stop mode after 5 minutes in reverse playback pause.

### × 2 (Forward× 2 Playback)/(Reverse 2× Playback)

Plays back at 2 times normal speed. Press the button during normal or reverse playback. Press the ▶ (play) button return to normal playback.




- There is no sound during special playback.
- The picture may become distorted during some special playback modes.

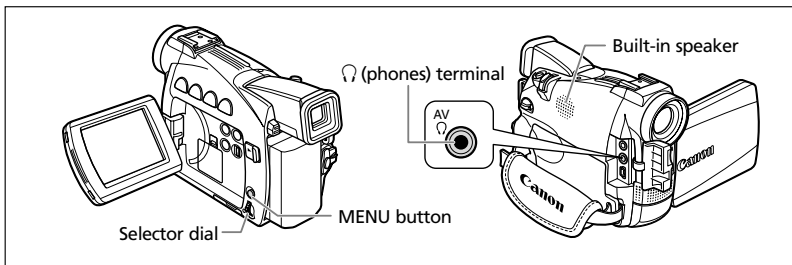


When using the built-in speaker, make sure that “🔊” is not displayed on the screen. When using the headphones, make sure that “📞” is displayed. Change the setting as necessary following the procedure below.


## Switching the AV/Headphones Terminal

 

1. Press the MENU button to open the menu.

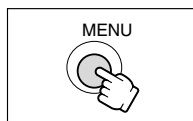


2. Turn the selector dial to select [VCR SET UP] and press the selector dial.

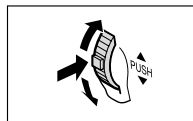

3. Turn the selector dial to select [AV/PHONES] and press the selector dial.

4. Turn the selector dial to select [AV] or [PHONES 📞].

5. Press the MENU button to close the menu.

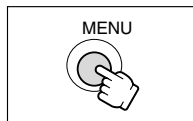

- The built-in speaker does not sound when “🔊” is displayed.
- Do not connect headphones unless “📞” is displayed as it produces noise.
- The built-in speaker is monaural. Use headphones for stereo sound.
- The built-in speaker turns off when the camcorder is set to a mode other than the PLAY (VCR) mode or when you use the headphones.

## Adjusting the Volume

---

CAMERA\*

PLAY (VCR)

CARD CAMERA\*

 
CARD PLAY (VCR)

E

\*Headphone volume only.

**Turn the selector dial up to increase the volume, and down to lower the volume.**

- A volume bar appears for 4 seconds.
- You can turn off the volume completely by turning the selector dial down until OFF appears. Turn the selector dial up to increase the volume again.



- Sound may become distorted when the volume is turned up too high.
- The headphone volume can be adjusted in all operating modes.
- The camcorder retains the setting even if you turn it off (separately for headphones and built-in speaker).






### 3. Connect the STV-250N Stereo Video Cable to the camcorder's AV terminal and the audio terminals of the TV/VCR.

Connect the white plug to the white AUDIO terminal L (left), and the red plug to the red AUDIO terminal R (right). Do not connect the yellow plug.

### 4. If connecting to a TV, set the input selector to VIDEO. If connecting to a VCR, set the input selector to LINE.

## TVs with Audio/Video Terminals

Refer also to the TV or VCR instruction manual.

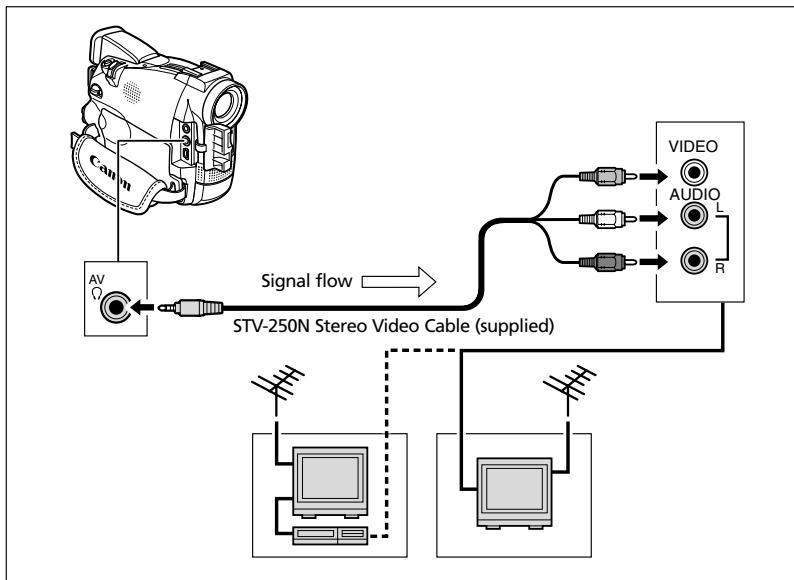

### 1. Turn off all devices before starting the connections.

### 2. Connect the STV-250N Stereo Video Cable to the camcorder's AV terminal and the audio/video terminals on the TV/VCR.

Connect the white plug to the white audio terminal L (left), the red plug to the red audio terminal R (right) and the yellow plug to the yellow video terminal VIDEO.

### 3. If connecting to a TV, set the input selector to VIDEO. If connecting to a VCR, set the input selector to LINE.


## Selecting the Audio Output Channel



You can select the output channels when playing back a tape with audio recorded on two channels.




1. Press the MENU button to open the menu.

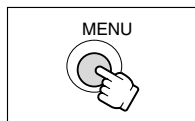

2. Turn the selector dial to select [AUDIO SET UP] and press the selector dial.


3. Turn the selector dial to select [OUTPUT CH] and press the selector dial.

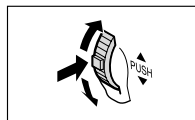

4. Turn the selector dial to select a setting option.

- L/R: Stereo: L+R channels, Bilingual: Main+Sub.
- L/L: Stereo: L channel, Bilingual: Main.
- R/R: Stereo: R channel, Bilingual: Sub.

5. Press the MENU button to close the menu.

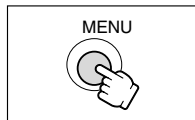


The setting resets to the L/R setting when you turn the camcorder off.




Many of the camcorder's advanced functions are selected from menus that appear on the screen.

## Selecting Menus and Settings

### 1. Set the camcorder to the correct operating mode.

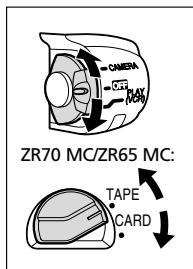


### 2. Press the MENU button to open the menu.

 

### 3. Turn the selector dial to select a submenu and press the selector dial.

 
### 4. Turn the selector dial to select a menu item and press the selector dial.



### 5. Turn the selector dial to select a setting option.

### 6. Press the MENU button to close the menu.

When setting the white balance or shutter speed, press the selector dial first before pressing the MENU button.

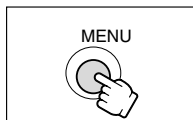

- Pressing the MENU button at any time closes the menu.
- Selecting [← RETURN] takes you back one level.
- Items that are not available appear in purple.
- You may find it more convenient to use the wireless controller to operate the menu. Press the MENU button on the wireless controller to open or close the menu. Use the arrow keys in place of the selector dial and press the SET button in place of pressing the selector dial.

## Menu and Default Settings

Default settings are shown in boldface.

### CAMERA Menu (CAM. MENU)

Submenu	Menu Item	Setting Options	
→ CARD MIX *2	MIX TYPE	<b>CARD CHROMA</b> , CARD LUMI., CAM. CHROMA, C. ANIMATION	122
	ANIMAT. TYPE	<b>CORNER</b> , STRAIGHT, RANDOM	123
	MIX LEVEL		122
CAMERA SET UP	SHUTTER	<b>AUTO</b> , 1/60, 1/100, 1/250, 1/500, 1/1000, 1/2000	78
	D. ZOOM	ZR70 MC      ZR65 MC      ZR60 OFF, 88×, 440× OFF, 80×, 400× OFF, 72×, 360×	30
	IMAGE S. (📷)	<b>ON</b> , OFF	69
	16:9	<b>ON</b> , OFF	52
	WHITE BAL.	<b>AUTO</b> , SET 📷, INDOOR 🏠, OUTDOOR 🌳	80
VCR SET UP	REC MODE	<b>SP</b> , LP	54
	AV/PHONES	<b>AV</b> , PHONES 📞	39
AUDIO SET UP	WIND SCREEN	<b>ON</b> , OFF	71
	AUDIO MODE	16bit, <b>12bit</b>	71
DISPLAY SET UP	BRIGHTNESS		33
	LCD MIRROR	<b>ON</b> , OFF	34
	TV SCREEN	<b>ON</b> , OFF	134
	D/T DISPLAY	<b>ON</b> , OFF	27
	DEMO MODE	<b>ON</b> , OFF	53
SYSTEM	BUTTONLIGHT *1	<b>ON</b> , PUSH ON, OFF	51
	LIGHT COLOR *1	<b>GREEN</b> , ORANGE, BLUE, YELLOW, <b>TURQUOISE</b> , PURPLE	51
	WL. REMOTE	📺1, 📺2, OFF 📺	49
	BEEP	<b>ON</b> , OFF	52
	T.ZONE/DST	See list of time zones	25
	D/TIME SET		26
MY CAMERA	S-UP IMAGE *3	<b>ON</b> , OFF	50
	SHTR SOUND *2	<b>PATTERN1</b> , PATTERN2, PATTERN3	50
	S-UP SOUND	<b>PATTERN1</b> , PATTERN2, PATTERN3	50
	S/STOP SOUND	<b>PATTERN1</b> , PATTERN2, PATTERN3	50
	SELF-T SOUND	<b>PATTERN1</b> , PATTERN2, PATTERN3	50

\*1 **ZR70 MC**, \*2 **ZR70 MC** and **ZR65 MC**, \*3 **ZR60**

## PLAY (VCR) Menu (VCR MENU)

CAMERA

PLAY (VCR)

CARD CAMERA

CARD CAMERA

E

Submenu	Menu Item	Setting Options	
VCR SET UP	REC MODE	SP, LP	54
	AV/PHONES	AV, PHONES	39
	AV → DV OUT	ON, OFF	93
AUDIO SET UP	OUTPUT CH	L/R, L/L, R/R	43
	AUDIO DUB.	AUDIO IN, MIC. IN	97
	WIND SCREEN	ON, OFF	71
	AUDIO MODE	16bit, 12bit	71
	12bit AUDIO	STEREO1, STEREO2, MIX/FIXED, MIX/VARI.	98
	MIX BALANCE		98
CARD SET UP *2	SI QUALITY	SUPER FINE, FINE, NORMAL	101
	MOVIE SIZE *1	320 × 240, 160 × 120	102
	FILE NOS.	RESET, CONTINUOUS	103
CARD OPERATIONS *2	COPY  →	CANCEL, EXECUTE	126
DISPLAY SET UP	BRIGHTNESS		33
	DISPLAYS	ON, OFF <PLAYBK>	134
	6SEC. DATE	ON, OFF	84
	DATA CODE	DATE/TIME, CAMERA DATA, CAM. & D/T	84
	D/TIME SEL.	DATE, TIME, DATE & TIME	84
	SYSTEM	BUTTONLIGHT *1	ON, PUSH ON, OFF
	LIGHT COLOR *1	GREEN, ORANGE, BLUE, YELLOW, TURQUOISE, PURPLE	51
	WL. REMOTE	1,  2, OFF	49
	BEEP	ON, OFF	52
	T.ZONE/DST	See list of time zones	25
	D/TIME SET		26
MY CAMERA	S-UP IMAGE*3	ON, OFF	50
	SHTR SOUND *2	PATTERN1, PATTERN2, PATTERN3	50
	S-UP SOUND	PATTERN1, PATTERN2, PATTERN3	50
	S/STOP SOUND	PATTERN1, PATTERN2, PATTERN3	50
	SELF-T SOUND	PATTERN1, PATTERN2, PATTERN3	50

\*1 ZR70 MC, \*2 ZR70 MC and ZR65 MC, \*3 ZR60








**ZR70 MC ZR65 MC CARD CAMERA Menu (C. CAM. MENU)**

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

Submenu	Menu Item	Setting Options	<input type="checkbox"/>
CAMERA SET UP	SHUTTER	AUTO, 1/60, 1/100, 1/250	78
	WHITE BAL.	AUTO, SET  , INDOOR  , OUTDOOR 	80
CARD SET UP	SI QUALITY	SUPER FINE, FINE, NORMAL	101
	SI SIZE	1024 × 768, 640 × 480	101
	MOVIE SIZE *1	320 × 240, 160 × 120	102
	FILE NOS.	RESET, CONTINUOUS	103
VCR SET UP	AV/PHONES	AV, PHONES 	39
AUDIO SET UP *1	WIND SCREEN	ON, OFF	71
DISPLAY SET UP	BRIGHTNESS		33
	LCD MIRROR	ON, OFF	34
	TV SCREEN	ON, OFF	134
	D/T DISPLAY	ON, OFF	27
	DEMO MODE	ON, OFF	53
SYSTEM	BUTTONLIGHT *1	ON, PUSH ON, OFF	51
	LIGHT COLOR *1	GREEN, ORANGE, BLUE, YELLOW, TURQUOISE, PURPLE	51
	WL. REMOTE	 1,  2, OFF 	49
	BEEP	ON, OFF	52
	T.ZONE/DST	See list of time zones	25
	D/TIME SET		26
MY CAMERA	SHTR SOUND	PATTERN1, PATTERN2, PATTERN3	50
	S-UP SOUND	PATTERN1, PATTERN2, PATTERN3	50
	S/STOP SOUND	PATTERN1, PATTERN2, PATTERN3	50
	SELF-T. SOUND	PATTERN1, PATTERN2, PATTERN3	50

\*1 **ZR70 MC**

E

Using the Full Range  
of Features

**ZR70 MC ZR65 MC CARD PLAY (VCR) Menu (C.PLAY MENU)**






 

 

 

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

E

Submenu	Menu Item	Setting Options	
CARD OPERATIONS (Single Image Display)	COPY  	CANCEL, EXECUTE	127
	 PRINT ORDERS ALL ERASE	YES, NO	117
	IMAGE ERASE	CANCEL, SINGLE, ALL	115
	FORMAT	CANCEL, EXECUTE	128
CARD OPERATIONS (Index Screen)	 PROTECT 		114
	 PRINT ORDER		116
VCR SET UP	REC MODE	SP, LP	54
	AV/PHONES	AV, PHONES 	39
DISPLAY SET UP	BRIGHTNESS		33
	DISPLAYS	ON, OFF	134
	D/TIME SEL.	DATE, TIME, DATE & TIME	84
SYSTEM	BUTTONLIGHT *1	ON, PUSH ON, OFF	51
	LIGHT COLOR *1	GREEN, ORANGE, BLUE, YELLOW, TURQUOISE, PURPLE	51
	WL. REMOTE	 1,  2, OFF 	49
	BEEP	ON, OFF	52
	T.ZONE/DST	See list of time zones	25
	D/TIME SET		26
MY CAMERA	CREATE START-UP IMAGE		130
	SEL. S-UP IMG	NO IMAGE, CANON LOGO, MY IMAGE	50
	SHTR SOUND	PATTERN1, PATTERN2, PATTERN3	50
	S-UP SOUND	PATTERN1, PATTERN2, PATTERN3	50
	S/STOP SOUND	PATTERN1, PATTERN2, PATTERN3	50
	SELF-T SOUND	PATTERN1, PATTERN2, PATTERN3	50
 PRINT	Appears when connecting a printer with direct print function.		118

\*1 **ZR70 MC**




# Changing the Remote Sensor Mode



 
Two remote sensor modes and an off setting are available to prevent interference from other Canon wireless controllers being used nearby.

E


## Turning the Remote Sensor Off



Open the menu and select [SYSTEM]. Select [WL. REMOTE], set it to [OFF (OFF)] and close the menu. [OFF] appears.

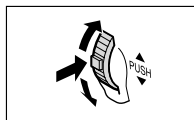

## Changing the Remote Sensor Mode



 


1. On the camcorder, open the menu and select [SYSTEM]. Select [WL. REMOTE], set it to [2] and close the menu.

The selected mode appears for 4 seconds.

2. On the wireless controller, press and hold the REMOTE SET button. Set the mode to the same of the camcorder. Press the ZOOM T button for mode 2. Keep the button pressed for over 2 seconds.

  If you have set the camcorder to mode 1, press the ZOOM W button for mode 1.

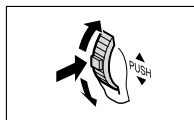

- The wireless controller returns to mode 1 when you replace the batteries. Change the mode if necessary.
- Make sure that camcorder and wireless controller are set to the same mode. Display the camcorder's mode by pressing any button on the wireless controller (except of the REMOTE SET button) and set the wireless controller's mode to the same mode. Change the batteries if the wireless controller still does not work.

Using the Full Range of Features


# Customizing the Camcorder

E

You can personalize your camcorder by customizing the start-up image and the sound it makes for start-up, shutter\*, start/stop and self-timer (collectively called the My Camera settings).

\* ZR70 MC and ZR65 MC only. With the ZR70 MC and ZR65 MC, you can also create your own start-up image. See *Creating a Start-up Image* (📖 130).

## Changing the My Camera Settings

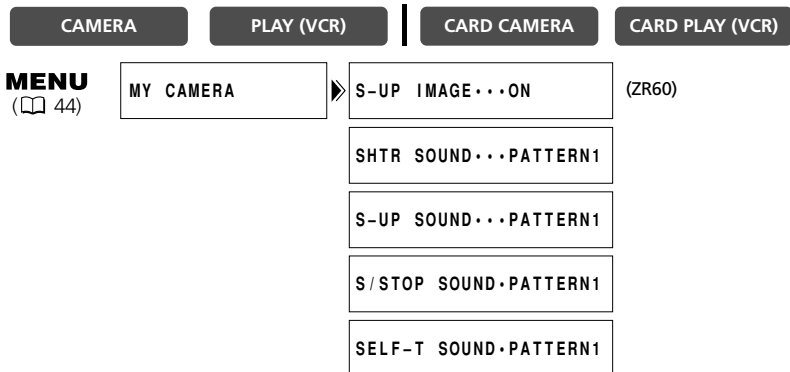

Using the Full Range  
of Features

1. Open the menu and select **[MY CAMERA]**.

2. Select the menu item you wish to change.

- **ZR70 MC** **ZR65 MC** When selecting a start-up image (only in CARD PLAY (VCR) mode): [NO IMAGE], [CANON LOGO] and [MY IMAGE] appears.
- **ZR60** When selecting a start-up image: [OFF] and [ON] appears.
- When selecting a sound: [PATTERN1], [PATTERN2] and [PATTERN3] appear.


3. Select a setting option and close the menu.

## ZR70 MC Setting the Light-up Buttons



The buttons above the LCD panel light up when the camcorder's power is on, or when you press a button. This is helpful if, for example, you wish to play back a tape in dark places.

You can select the color of the light-up buttons from green, orange, blue, yellow, turquoise and purple.

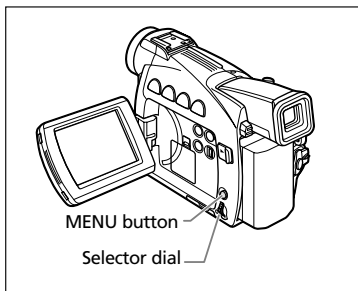

E

### Selecting the Light-up Setting

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

( 44)

SYSTEM

▶▶ BUTTONLIGHT • ON

Open the menu and select [SYSTEM]. Select [BUTTONLIGHT], set it to [PUSH ON] or [OFF] and close the menu.

- ON: The buttons light up while the camcorder is turned on. The color changes when you press a button and turns back when you release the button.
- PUSH ON: The buttons light up when you press a button and turn off when you release the button.
- OFF: Buttons do not light up.

### Selecting the Color of the Buttons

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

( 44)

SYSTEM

▶▶ LIGHT COLOR • TURQUOISE

Open the menu and select [SYSTEM]. Select [LIGHT COLOR], set it to the desired color and close the menu.



You cannot change the color of the buttons when [BUTTONLIGHT] is set to [OFF].

## Other Camcorder Settings



E

### Beep

You will hear a beep upon camcorder operations such as power on/off, start/stop, self-timer countdown, automatic shut-off, and unusual conditions of the camcorder. The beep will not be recorded.

If you turn off the beep, all camcorder sounds including the ones of the My Camera settings will be turned off.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

#### MENU

( 44)

SYSTEM

BEEP.....ON

To turn the beep off, open the menu and select [SYSTEM]. Select [BEEP], set it to [OFF] and close the menu.

### Recording in 16:9 (Wide Screen TV Recording)

You can record in the 16:9 format for playback on wide screen TVs.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

#### MENU

( 44)

CAMERA SET UP

16:9.....OFF

To switch 16:9 on, open the menu and select [CAMERA SET UP]. Select [16:9], set it to [ON] and close the menu.


"16:9" appears.



- The 16:9 mode cannot be selected in the Easy Recording mode.
- The multi-image screen cannot be used when the 16:9 format is selected.
- If you play back a 16:9 recording on a normal TV, the image appears vertically "squashed" (compressed).
- If you connect the camcorder to a TV with an S1 terminal or Video ID-1 system, recordings made in the 16:9 mode will be automatically played back in wide screen mode.

## Demonstration Mode

The demonstration mode displays the camcorder's main features. It starts automatically when you leave the camcorder turned on without loading a cassette (ZR70 MC/ZR65 MC: and without inserting a memory card) for more than 5 minutes. You can also start the demonstration mode through the menu.

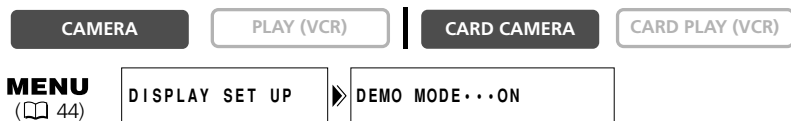

**With no cassette (ZR70 MC/ZR65 MC: and memory card) inserted, open the menu and select [DISPLAY SET UP]. Select [DEMO MODE], set it to [OFF] and close the menu.**

To cancel the demo mode, press any button, turn off the camcorder, load a cassette (ZR70 MC/ZR65 MC: or insert a memory card).

## Changing the Recording Mode (SP/LP)



E

You can choose from SP (standard play) and LP (long play). LP extends the tape usage by 1.5 times.



- Tapes recorded in LP mode cannot be used for audio dubbing (📖 96) or AV insert (📖 94).
- Depending on the nature and usage condition of the tape, picture and sound recorded in LP mode may be distorted. We recommend using the SP mode for important recordings.
- We recommend recording in SP mode if you plan to transfer the images to a computer.
- If you record in both SP and LP modes on the same tape, the playback picture may become distorted and the time code may not be written correctly.
- If you play back a tape that has been recorded in LP mode with another digital device on this camcorder, or vice versa, picture and sound may become distorted.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

(📖 44)

VCR SET UP


▶▶ REC MODE . . . . SP

To change to LP mode, open the menu and select [VCR SET UP]. Select [REC MODE], set it to [LP] and close the menu.

# Recording Still Images on the Tape



You can record still images on the tape. Starting your recording with a still image allows you to easily locate the beginning of the recording with the Photo Search function (📖 85).

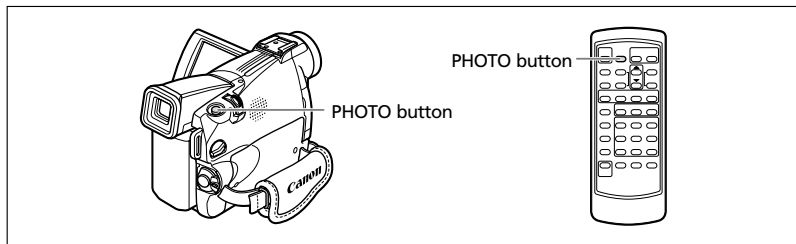

CAMERA

PLAY (VCR)


CARD CAMERA

CARD PLAY (VCR)

## In Record Pause Mode


### 1. Press the PHOTO button halfway.

- Autofocus: ● flashes in white and turns green when focus is adjusted.
- Manual focus: ● flashes in green. Adjust the focus with the selector dial.
- Exposure is locked.
- When you press the PHOTO button on the wireless controller, recording starts immediately.

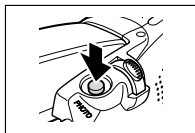

### 2. Press the PHOTO button fully.


- ● disappears.
- The camcorder records the still image for approx. 6 seconds. During this time, the camcorder displays the still image and keeps recording the sound.
- The camcorder returns to record pause mode.

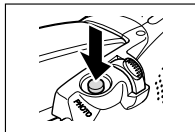

## During Recording

### 1. Press the PHOTO button fully.

- The camcorder records the still image for approx. 6 seconds. During this time, the camcorder displays the still image and keeps recording the sound
- The camcorder returns to record pause mode.

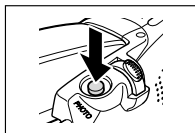



- When you turn the POWER switch to OFF while the camcorder is recording the still image, it will not turn off until recording is complete.
- Record still images under sufficient lighting condition (in which you can identify the subject on the screen).
- If a subject is unsuitable for autofocus, ● continues to flash. Keep the PHOTO button pressed halfway and adjust the focus with the selector dial.



# Using the Recording Programs



The camcorder is equipped with the Easy Recording program and several program AE modes. The availability of functions differs depending on the selected mode.

E

## Availability of Functions in Each Mode:

Position of the Program Selector	<input type="checkbox"/>	P										
Recording Program	<input type="checkbox"/>									*1	*1	
Digital Zoom	<input type="radio"/>	<input type="radio"/>							×			
Shutter Speed	A	<input type="radio"/>	A									
Focus		<input type="radio"/>										
White Balance		<input type="radio"/>										
AE Shift		<input type="radio"/>										
Image Stabilizer*2	ON	<input type="radio"/>								×		
Digital Effects	×	<input type="radio"/> *4										
16:9	×	<input type="radio"/>										
Card Mix*3	×	<input type="radio"/>								×		

A: Auto setting    : Available    ×: Not available

\*1 ZR70 MC only.

\*2 The image stabilizer cannot be used in CARD CAMERA mode.

\*3 ZR70 MC and ZR65 MC only.

\*4 Available effects depend upon the program AE mode.

## Easy Recording Program

The camcorder adjusts focus, exposure and other settings automatically, allowing you to just point and shoot.



## Program AE Modes

### Auto

The camcorder adjusts focus, exposure and other settings automatically. However, you have the option of adjusting the settings manually.



## Sports

Use this mode to record sports scenes (such as tennis or golf), moving objects (such as roller coasters) or when recording from a moving car.



- This mode is set at a high shutter speed and should therefore be used in sufficient light.
- This mode is mainly intended for frame-by-frame or slow playback. The picture may not appear smooth when played back in normal speed.

## Portrait

Use this mode to give accent to your subject by blurring the background or foreground.



- The blur effect increases the more you zoom to telephoto.
- This mode is set at a higher shutter speed. The picture may not appear smooth when played back.

## Spotlight

Use this mode to record spotlighted scenes such as shows, recitals or fireworks.



## Sand & Snow

Use this mode in bright places such as a sunny beach or ski resort. It prevents the subject from being underexposed.



- The subject may become overexposed in dark surroundings. Check the image on the screen.
- This mode is set at a higher shutter speed. The picture may not appear smooth when played back.

## Low Light

Use this mode to record in dimly lit places. The shutter is fixed at a slow shutter speed.



- Moving subjects may leave a trailing afterimage.
- Picture quality may not be as good as in other modes.
- The camcorder may have difficulty to focus automatically.

## Night

Use this mode to record in dark places. The shutter speed is adjusted automatically. It is useful when recording in places with changing light conditions (such as in amusement parks).



- ZR70 MC** **ZR65 MC** Night mode cannot be used in CARD CAMERA mode.
- Moving subjects may leave a trailing afterimage.
- Picture quality may not be as good as in other modes.
- White points may appear on the screen.
- Autofocus may not work as well as in other modes. In such case, adjust the focus manually.

## **ZR70 MC**

### Super Night (CAMERA mode)

In CAMERA mode, use this mode to record in very dark places. The shutter speed is adjusted automatically. The White LED lights up automatically illuminating the subject in the center of the screen, allowing you to record brightly in color.



### Low Light Plus (CARD CAMERA mode)

In CARD CAMERA mode, use this mode to record in dark places. The shutter is fixed at a slow shutter speed. The White LED lights up illuminating the subject in the center of the screen, allowing you to record brightly in color.



- The range of the White LED is limited. Check the image on the screen when recording.
- Use this mode for recordings at close range (up to 6.6 ft (2m)).
- Moving subjects may leave a trailing afterimage.
- Picture quality may not be as good as in other modes.
- White points may appear on the screen.
- Autofocus may not work as well as in other modes. In such case, adjust the focus manually.

## Selecting the Program AE Mode

CAMERA

 
PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


E

### 1. Slide the program selector to **P** (program AE).




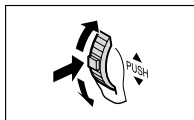
### 2. Press the selector dial.


A list of the program AE modes appears.

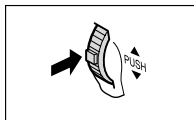

### 3. Select a mode and press the selector dial.

The symbol of the mode appears on the upper left corner of the screen.  (Auto) disappears after 4 seconds.



- Do not change the mode during recording as the brightness of the image may change abruptly.
- The setting resets to the Auto mode when you switch the program selector to .
- Bright light in a dark scene may cause a vertical light bar to appear. This is not a malfunction.

# Using Digital Effects



You can use the digital effects during recording and playback.

Faders (📄 62): Begin or end scenes with a fade to or from black.

Effects (📄 65): Add flavor to your recordings.

Multi-image screen (📄 67)

## Availability of Digital Effects by Operating Modes:

	CAMERA		PLAY (VCR)	ZR70 MC/ZR65 MC: CARD CAMERA	ZR70 MC/ZR65 MC: CARD PLAY (VCR)
	Movies	Still Images			
Faders	○	×	○	×	×
Effects	○	○	○	○*1	×
Multi-image screen	○*2	○*2	○	×	×

○: Available    ×: Not available

\*1: Black and White only

\*2: Cannot be used in Night and Super Night (ZR70 MC) mode.



○ Turn off the digital effect when you do not use it.

Press the DIGITAL EFFECTS button to open the menu. Select [D.EFFECTS ] and press the ON/OFF button.

○ The camcorder retains the setting even if you turn it off or change the program AE mode.

○ The digital effect turns off if you switch the program selector to .

○ Digital effects can be selected but not activated on a blank blue screen (appears in PLAY (VCR) mode).

○ Digital effects activated during playback do not change the recording.

○ Digital effects cannot be used during DV dubbing and photo/date search.


○ Digital effects can also be set with the wireless controller.

## Faders

### Fade Trigger (FADE-T)

E

The image gradually fades in.

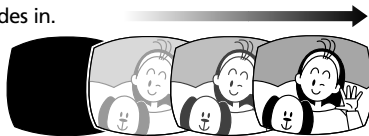

The image gradually fades out.

### Wipe (WIPE)

The image begins as a vertical line in the center and expands sideways until it fills the whole screen.



The image is wiped off from the sides of the screen.

### Corner Wipe (CORNER)


The image appears from the corners until it fills the whole screen.



The image is wiped off from the corners.

### Jump (JUMP)

A small image appears from the left, jumps into the center and enlarges until it fills the whole screen.

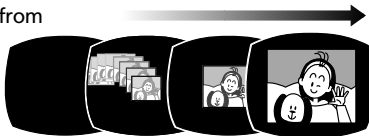

The image shrinks, jumps from the center to the left and disappears.

### Flip (FLIP)


The image flips into the screen.



The image flips out of the screen.

## **Puzzle (PUZZLE)**


The image appears in 16 pieces.  
The pieces move around until the puzzle is solved.

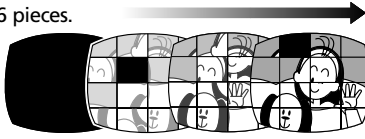

The image is divided into 16 pieces. The pieces move around and disappear.

## **Zigzag (ZIGZAG)**


The image appears in zigzag from the top of the screen.

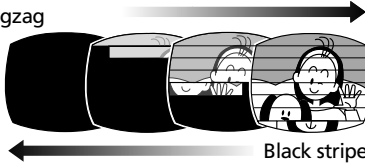

Black stripes appear in zigzag from the bottom of the screen until they cover the whole image.

## **Beam (BEAM)**


The screen turns yellow, forms a beam that becomes thinner and the image appears.

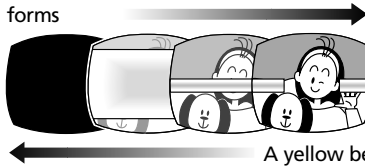

A yellow beam appears in the center of the screen and expands until it covers the whole image.

## **Tide (TIDE)**

The image appears from both sides like tides.

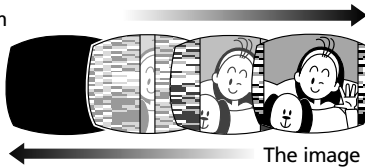

The image disappears from both sides like tides.

## Selecting a Fader

E


CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. In CAMERA mode, set the program selector to **P**.

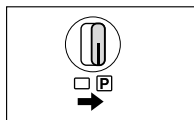

2. Press the **DIGITAL EFFECTS** button.

[D.EFFECTS **OFF**], [FADER], [EFFECT] and [MULTI-S] appear.




3. Select **[FADER]**.

4. Select the fader option.

5. Press the **DIGITAL EFFECTS** button.

The name of the selected fader flashes.

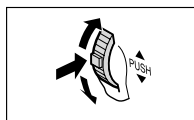


CAMERA mode:

6. **Fade in:** In record pause mode, press the **ON/OFF** button and begin recording by pressing the **start/stop** button.

**Fade out:** During recording, press the **ON/OFF** button and pause recording by pressing the **start/stop** button.

 The fader can be activated/deactivated by pressing the **ON/OFF** button.




PLAY (VCR) mode:

6. **Fade in:** In playback pause mode, press the **ON/OFF** button and begin playback by pressing the **▶/||** button.

**Fade out:** During playback, press the **ON/OFF** button and pause playback by pressing the **▶/||** button.

The fader can be activated/deactivated by pressing the **ON/OFF** button.

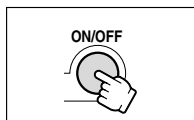


**ZR70 MC** **ZR65 MC** Faders cannot be selected when Card Mix is activated.



## Effects
 
### Art (ART)

The image becomes like a paint (solarization).



### Black and White (BLK & WHT)

The image becomes black and white.




### Sepia (SEPIA)

The image becomes monochrome with a brownish tint.



### Mosaic (MOSAIC)

The image is blurred through enlarging the size of some pixels.

 

### Ball (BALL)

The image becomes like a ball.



### Cube (CUBE)

The image becomes a cube and rotates.



### Wave (WAVE)

Both ends of the image sway in waves.




### Color Masking (COLOR M.)

The image becomes a rhombus surrounded by a masking frame that changes the colors.



### Mirror (MIRROR)

Creates a symmetrical image as if there would be a mirror in the center of the screen.

 

## Selecting an Effect

E

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

### 1. Press the DIGITAL EFFECTS button.

[D.EFFECTS OFF], [FADER], [EFFECT] and [MULTI-S] appear.



### 2. Select [EFFECT].

### 3. Select the effect.



### 4. Press the DIGITAL EFFECTS button.

The name of the selected effect flashes.



### 5. Press the ON/OFF button.

- The name of the selected effect stops flashing.
- The effect can be activated/deactivated by pressing the ON/OFF button.



## ZR70 MC ZR65 MC Selecting an Effect in CARD CAMERA Mode

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

### 1. Press the DIGITAL EFFECTS button.

"BLK&WHT" flashes.



### 2. Press the ON/OFF button.

- "BLK&WHT" stops flashing.
- The effect can be activated/deactivated by pressing the ON/OFF button.



# Using the Multi-Image Screen



E

The multi-image screen captures moving subjects in 4, 9 or 16 sequences of still images with the Image Capture feature and displays them at one time. Sound will be recorded normally. This feature can be used in CAMERA and PLAY (VCR) mode.

You can choose the transition speed at which to capture the subject from manual, fast (every 4 frames), moderate (every 6 frames\*) or slow (every 8 frames\*).

\* In Low Light mode: moderate (every 8 frames), slow (every 12 frames).

## Selecting the Multi-Image Screen


CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. Set the program selector to **P**.

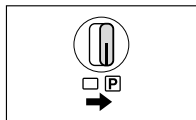

2. Press the **DIGITAL EFFECTS** button.

[D.EFFECTS **OFF**], [FADER], [EFFECT] and [MULTI-S] appear.




3. Select **[MULTI-S]**.

[S.SPEED] and [S.SPLIT] appears.

4. Select **[S.SPEED]**.

[MANUAL], [FAST], [MOD.] and [SLOW] appear.

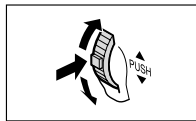

5. Select the transition speed.

6. Select **[MULTI-S]** again.

[S.SPEED] and [S.SPLIT] appears.

7. Select **[S.SPLIT]**.

[4], [9], [16] settings appear.

8. Select the number of sequences.

9. Press the **DIGITAL EFFECTS** button.

[MULTI-S] flashes.



Using the Full Range  
of Features

## Capturing

---

### E

#### 10. Press the ON/OFF button.

- **MANUAL:** Images will be captured each time you press the ON/OFF button. The blue frame indicating the next sequence disappears after the last image. To cancel the last captured image, press and hold the ON/OFF button. To cancel the multi-image screen, press and release the ON/OFF button.
- **FAST, MODERATE, SLOW:** The set number of images will be captured at the set speed. To cancel the multi-image screen, press the ON/OFF button.

#### 11. Press the start/stop button begin recording.

The multi-image screen is recorded on the tape.



- The multi-image screen cannot be operated in Night and Super Night (ZR70 MC) mode.
- You can operate the multi-image screen only in the following playback modes:
  - When [S.SPEED] is set to [MANUAL]: Playback pause, slow forward/reverse playback
  - When [S.SPEED] is set to [FAST], [MOD.] or [SLOW]: Playback pause
- The multi-image screen can be operated in record or record pause mode.
- **ZR70 MC** **ZR65 MC** The multi-image screen cannot be selected when Card Mix is activated.
- In PLAY (VCR) mode: Pressing any tape operation button (such as play or pause), or performing date/photo search cancels the multi-image screen.

## Turning Off the Image Stabilizer



E

The image stabilizer allows you to obtain steady recordings even at telephoto. There is no need to turn off the image stabilizer during normal recording. However, the camcorder tries to compensate for horizontal movements and you may therefore decide to turn it off during panning. The image stabilizer cannot be turned off when the program selector is set to □.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

### MENU

( 44)

CAMERA SET UP

▶ IMAGE S. () • ON

Open the menu and select [CAMERA SET UP]. Select [IMAGE S. ()], set it to [OFF] and close the menu.

() disappears.



- We recommend turning off the image stabilizer when you mount the camcorder on a tripod.
- The image stabilizer is designed to compensate a normal degree of camcorder shake.
- **ZR70 MC** **ZR65 MC** The image stabilizer cannot be used in CARD CAMERA mode.
- The image stabilizer might not be as effective in Low Light, Night and Super Night (ZR70 MC) mode.

# Recording With the Self-Timer




E

CAMERA

PLAY (VCR)


CARD CAMERA

CARD PLAY (VCR)

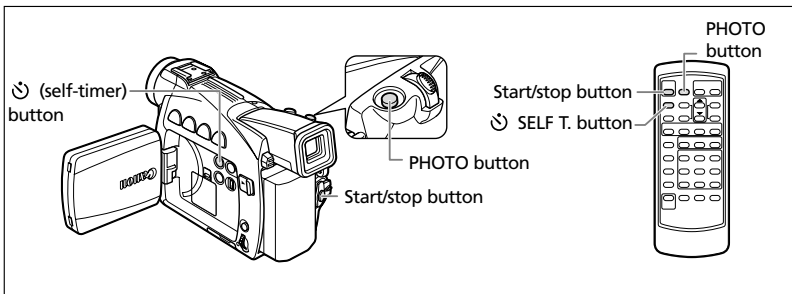

## 1. Press the (self-timer) button.

" " appears.

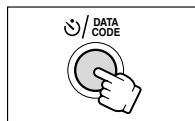


## When recording movies

### 2. Press the start/stop button.

The camcorder starts recording after a 10-second countdown (2 seconds when using the wireless controller). The count down appears on the screen.

### 3. Press the start/stop button to stop recording.


The camcorder returns to record pause mode

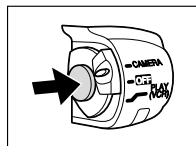

## When recording still images

### 2. Press the PHOTO button.

- The camcorder adjusts the focus 2 seconds before recording begins. ● flashes in white and turns green when focus and exposure are adjusted.
- The camcorder records the still image for approx. 6 seconds and returns to record pause mode (ZR70 MC/ZR65 MC: In CARD CAMERA mode, it displays the still image when recording is complete).

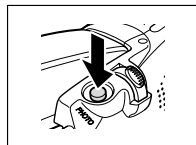

- To cancel the self-timer, press the (self-timer) button, start/stop button (when recording movies) or PHOTO button (when recording still images).
- The self-timer will be canceled when you turn off the camcorder.



## Changing the Audio Mode

You can record sound in two audio modes—16-bit and 12-bit. The 12-bit mode records sound on two channels (stereo 1), leaving 2 channels free (stereo 2) for adding new sound later. Select the 16-bit mode for higher sound quality.



Open the menu and select **[AUDIO SET UP]**. Select **[AUDIO MODE]**, set it to **[16bit]** and close the menu.


“16 bit” appears for approximately 4 seconds.



For adding new sound, see *Audio Dubbing* (📖 96).

## Recording with an External Microphone

You can use an external microphone for recording. Almost all stereo microphones with a plug diameter of 0.14 inch (3.5 mm) can be connected to the MIC terminal. Use a microphone with a built-in power supply (condenser microphone).

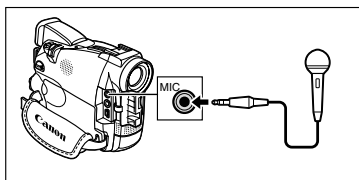

- The audio level differs from that of the built-in microphone.
- Be careful with long microphones as they may appear in the picture.
- **ZR70 MIC** See also *Using the DM-50 Microphone* (📖 74).

## Wind Screen

You can reduce the wind noise when recording in windy places.



Open the menu and select **[AUDIO SET UP]**. Select **[WIND SCREEN]**, set it to **[ON]** and close the menu.

“WS ON” appears when you turn the wind screen on.

**E**

- Low sound may be reduced together with the wind noise. We recommend turning off the wind screen for normal recordings.
- The wind screen function cannot be turned on/off during recording.
- The wind screen function can also be used for audio dubbing (when [AUDIO DUB.] is set to [MIC. IN] in the [AUDIO SET UP] submenu).
- The wind screen function cannot be used when an external microphone is connected to the MIC terminal (ZR70 MC: or when the DM-50 Microphone is attached to the advanced accessory shoe).



## ZR70 MC Using the VL-3 Video Light (Optional)

This video light enables you to record brightly in color even in dark places. This VL-3 Video Light attaches to the camcorder's "S" advanced accessory shoe for cable-free operation and is powered by the camcorder's power supply.

Refer also to the VL-3 Video Light instruction manual.



- Always turn off the camcorder before attaching/removing the video light.
- Do not touch or place flammable material or plastic close to the lamp or the surrounding parts during or immediately after use; they become very hot.
- Do not look directly at the lamp while the video light is on.
- Do not carry the camcorder by the video light.


### 1. Slide the video light into the accessory shoe until it clicks.


### 2. Tighten the fastening screw.

Be careful that the video light does not come off when tightening the screw.

### 3. Set the camcorder to CAMERA or CARD CAMERA mode.

### 4. Turn the video light's power switch to AUTO or ON.

-  (Connection) appears.
- ON: The video light stays on.
- AUTO: The video light turns on and off automatically.

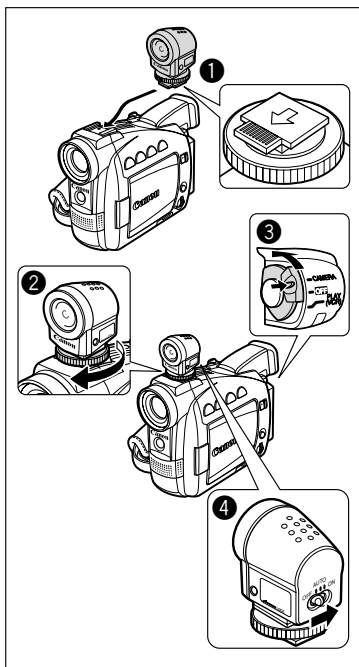

## ZR70 MG Using the DM-50 Microphone (Optional)

E

The high sensitive Directional Stereo Microphone DM-50 attaches to the “S” advanced accessory shoe for cable-free operation and is powered by the camcorder’s power supply. Use it for recording or dubbing audio. Refer also to the DM-50 Microphone instruction manual.



- Always turn the camcorder off before attaching/removing the microphone.
- Do not connect any microphone to the MIC terminal when the DM-50 Microphone is connected.
- Do not carry the camcorder by the microphone.

### 1. Slide the microphone into the accessory shoe until it clicks.

### 2. Tighten the fastening screw.


Be careful that the microphone does not come off when tightening the screw.

### 3. Set the camcorder to CAMERA or CARD CAMERA mode.

**C** (Connection) appears.

### 4. Set the microphone’s directivity switch.

- SHOTGUN: For recording clear sound from the front (monaural).
- STEREO 1: For recording sound from the front and surrounding area.
- STEREO 2: For recording surrounding sound in a wider range than in STEREO 1.

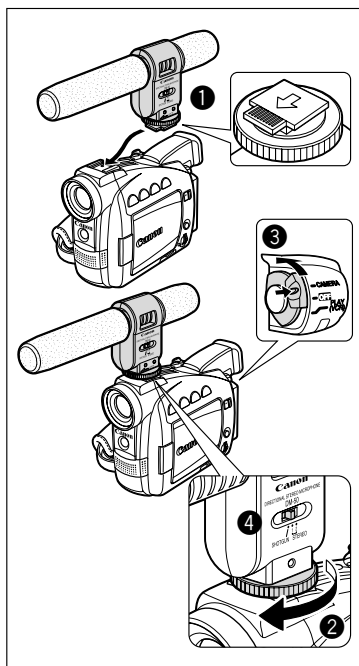

# Adjusting the Focus Manually



Some subjects may not be suitable for autofocus. In such case, focus manually.

E

Autofocus may not work well on the following subjects:

Reflective surfaces



Through dirty or wet windows



Subjects with low contrast (e.g. White Wall)



Different Distances



Fast Moving Subjects



Dark Subjects



Horizontal Stripes



Night Scenes




CAMERA

PLAY (VCR)

CARD CAMERA


CARD PLAY (VCR)

## 1. Set the program selector to **P**.

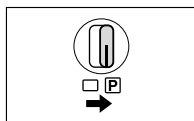


## 2. Adjust the zoom.

When you operate the zoom after adjusting the focus, the subject may not stay in focus. Adjust the zoom before the focus.

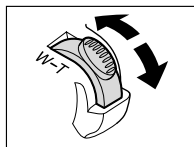


## 3. Press the FOCUS button.

 "MF" appears in light blue.




## 4. Turn the selector dial to adjust the focus.

- Turn the selector dial up or down until the image appears focused.
- If "AE ±0" appears in light blue, focus cannot be adjusted. Press the FOCUS button again to display "MF" in light blue.

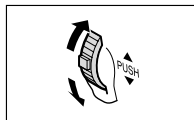

## 5. Press the FOCUS button to return to autofocus.

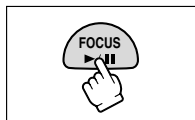

E



The setting resets to autofocus when you switch the program selector to .

## Infinity Focus

---

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

### Press the focus button more than 3 seconds in step 3.

"MF ∞" appears. When you operate the zoom or turn the selector dial when "MF ∞" is displayed in light blue, "∞" disappears and the camcorder changes to manual focus.



# Adjusting the AE Shift

You can adjust the AE (auto exposure) function to lighten or darken the image. This allows you to compensate for backlit or overexposed scenes. Available Levels: -2 to +2, in 0.25 intervals (excluding -1.75 and +1.75).

E

 
CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


1. Set the program selector to **P**.



2. Set the program AE mode to **Auto**, **Sports**, **Portrait**, **Low Light** or **Low Light Plus (ZR70 MC) mode**.

3. Press the AE SHIFT button.

 
"AE ±0" appears in light blue.



4. Turn the selector dial to adjust the AE shift level.

- Turn the selector dial up to lighten the image and down to darken the image.
- If "MF" is displayed in light blue, AE shift cannot be adjusted.

 Press the AE SHIFT button again to display "AE ±0" in light blue.



- The camcorder retains the setting even if you turn it off or change the program AE mode.
- The camcorder resets to the auto setting when you switch the program selector to **P**.

# Setting the Shutter Speed



E

In the Auto mode, you can adjust the shutter speed manually to make stable shots of fast moving subjects.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

( 44)

CAMERA SET UP

▶ SHUTTER.....AUTO

1. Set the program selector to .
2. Set the program AE mode to the (AUTO) mode.
3. Open the menu and select [CAMERA SET UP].
4. Select [SHUTTER].
5. Select the shutter speed and press the selector dial.

CAMERA Mode	<b>ZR70 MC</b> , <b>ZR65 MC</b> CARD CAMERA Mode
AUTO	AUTO
1/60	1/60
1/100	1/100
1/250	1/250
1/500	
1/1000	
1/2000	

6. Close the menu.



- Do not point the camcorder directly at the sun when the shutter speed is set to 1/1000 or higher.
- The image may flicker when recording with high shutter speeds.
- The setting resets to the auto setting when you switch the program selector to , or change the program AE mode.
- **ZR70 MC** **ZR65 MC** If the shutter speed is set to 1/500 or higher in CAMERA mode and you switch to CARD CAMERA mode, it automatically changes to 1/250.
- Recording under fluorescent lights: When the camcorder is set to (Easy Recording) or when the program AE mode is set to Auto, Night or Super Night (ZR70 MC) mode, it automatically detects the flicker of fluorescent lighting and adjusts the shutter speed accordingly. However, if the brightness of the screen starts to flicker, select Auto mode and set the shutter speed to 1/100.

○ Guidelines for Recording with High Shutter Speeds:

- Outdoor sports such as golf or tennis: 1/2000
- Moving objects such as cars or roller coasters: 1/1000, 1/500 or 1/250
- Indoor sports such as basketball: 1/100







 

# Setting the White Balance



E

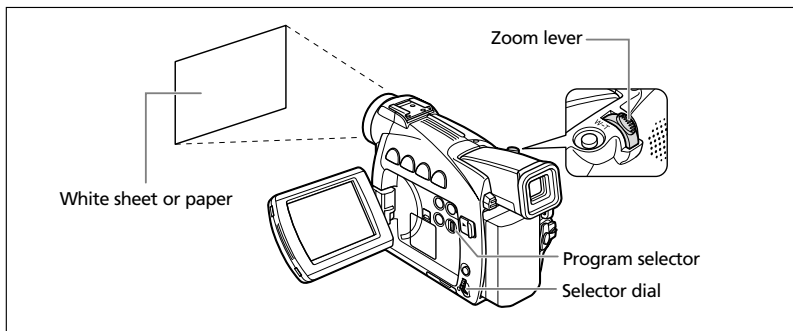The camcorder's auto white balance system adjusts the colors to appear natural for different lighting conditions. However, you can use the preset modes to reproduce colors more accurately, or set a custom white balance to obtain the optimal setting.



- When the program selector is set to , white balance is preset to [AUTO].  
Indoor, outdoor and custom white balance cannot be selected.
- The camcorder retains the setting even if you turn it off.
- When you have set the custom white balance:
  - Reset the white balance when the lighting condition changes.
  - Turn off the digital zoom.
- Setting the white balance manually may provide better results in the following cases.
  - Changing lighting conditions
  - Close-ups
  - Subjects in a single color (sky, sea or forest)
  - Under mercury lamps or certain types of fluorescent lights
- Use the  Indoor or  Outdoor mode in the following cases:
  -  Indoor:
    - Changing lighting condition
    - Under video light
    - Under sodium lamps
  -  Outdoor Mode
    - For night scenes or fireworks
    - Sunrise or sunset
  - \* Use the auto setting for normal outdoor scenes.




 



**MENU**

( 44)





CAMERA SET UP

▶ WHITE BAL. . . AUTO

**For  (Indoor) or  (Outdoor) Setting:**

1. Set the program selector to .
2. Open the menu and select [CAMERA SET UP].
3. Select [WHITE BAL.].
4. Select  (indoor) or  (outdoor).  
 or  appears.
5. Close the menu.

**For Custom White Balance:**

1. Set the program selector to .
2. Open the menu and select [CAMERA SET UP].
3. Select [WHITE BAL.].
4. Point the camcorder at a white object (such as a sheet of paper), zoom in until it fills the whole screen and select [SET ].
  -  flashes and stops flashing when settings is complete.
  - Depending on the light source,  may keep flashing. The result will still be better than with the auto setting.
5. Close the menu.

# Magnifying the Image



E

The playback image can be magnified by 2 times.

CAMERA


PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


## 1. Move the zoom lever toward T.

- The image is magnified by 2 times.
- A frame appears indicating the position of the enlarged part.

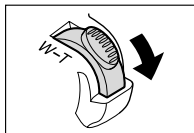

## 2. Move the image.

 - Turn the selector dial to move the image to the right and left, or up and down. Pressing the selector dial switches between the directions.
- To cancel the magnification, move the zoom lever toward W.




**ZR70 MC** Movies played back from a memory card cannot be magnified.

# Displaying the Data Code



E

Once date and time are set, the camcorder maintains a data code containing recording date and time and other camera data such as shutter speed and exposure (f-stop). (ZR70 MC/ZR65 MC: Only date and time appear when playing back a memory card).

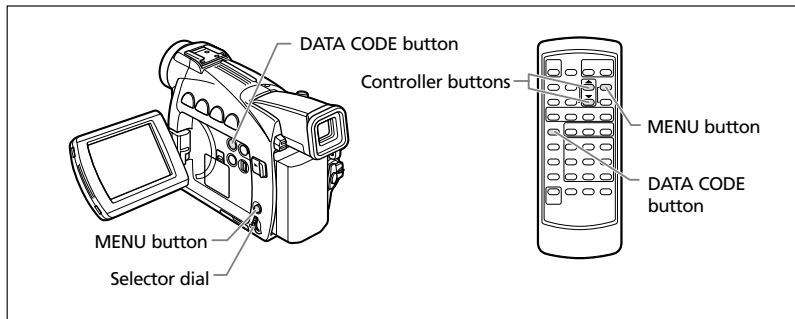

- The data code display turns off when you turn the camcorder off.
- The data code may not be displayed if a recording made with this camcorder is played back on a different digital camcorder.
- The data code cannot be displayed in frame advance/reverse playback. Camera data may not appear in some special playback modes.
- When the TV screen displays are hidden (134), the displays still appear on the LCD screen. If you turn on the data code, displays other than the data code will disappear from the LCD screen.

Using the Full Range of Features

## Available Data Code Combinations (in PLAY (VCR) mode):

DATA CODE (tape only) D/TIME SEL.	Date/Time	Camera data	Date/Time & Camera data
Date	JAN. 1, 2003	F1.8 1/250	F1.8 1/250 JAN. 1, 2003
Time	12:00:00 PM	F1.8 1/250	F1.8 1/250 12:00:00 PM
Date & Time	12:00 PM JAN. 1, 2003	F1.8 1/250	F1.8 1/250 12:00 PM JAN. 1, 2003

## Selecting the Date/Time Display Combination



Open the menu and select [DISPLAY SET UP]. Select [D/TIME SEL.], set it to [DATE] or [TIME] and close the menu.

## Selecting the Data Code Display Combination



Open the menu and select [DISPLAY SET UP]. Select [DATA CODE], set it to [DATE/TIME], [CAMERA DATA] or [CAM. & D/T] and close the menu.

## Displaying the Data Code



Press the DATA CODE button.

Only date and time appear in CARD PLAY (VCR) mode.

## Six-Second Auto Date

Date and time appear for 6 seconds when you begin playback, or to indicate that date or time zone has changed.




Open the menu and select [DISPLAY SET UP]. Select [6SEC.DATE], set it to [ON] and close the menu.

# Photo Search/Date Search



You can search for a still image recorded anywhere on the tape with the photo search function, or locate the change of the date/time zone with the date search function.

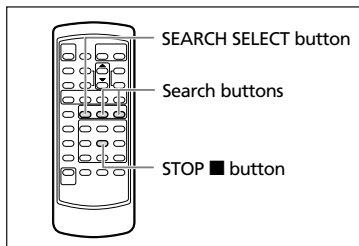

E

CAMERA


PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


## 1. Press the SEARCH SELECT button to choose between photo search and date search.

"PHOTO SEARCH" or "DATE SEARCH" appears.

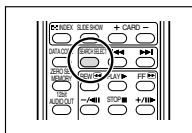

## 2. Press the ►► or ◀◀ button to begin searching.

- Press the ►► button to search forward and the ◀◀ button to search backward.
- Press more than once to search for further still images or date changes (up to 10 times).
- Press the ►► or ◀◀ button to change the search direction.
- Press the ■ (stop) button stop searching.

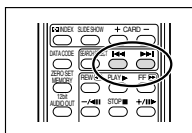

- Photo search: A still image recorded very close to the point you start the search may not be detected.
- Date search: A recording of longer than a minute per date/area is required.
- Date search: Playback may start slightly before or after the date change.
- Date search may not function if the data code is not correctly displayed.


Using the Full Range  
of Features

# Returning to a Pre-marked Position



E

If you wish to return to a particular scene later, mark the point with the zero set memory and the tape will stop at that point when you rewind/fast forward the tape.

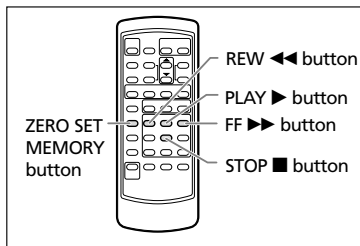

CAMERA

PLAY (VCR)

CARD CAMERA


CARD PLAY (VCR)

## 1. Press the ZERO SET MEMORY button at the point you wish to return to later.

- "0:00:00 M" appears.
- To cancel, press the ZERO SET MEMORY button again.

## 2. When you have finished playback, fast forward or rewind the tape.

- "RTN ▶▶" or "◀◀ RTN" appears.
- The tape stops automatically at "0:00:00".
- The tape counter changes to time code.

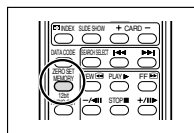

- Time code and tape counter display may not match accurately.
- The zero set memory may not function correctly when blank sections exist on the tape.
- If you remove the tape, the zero set memory is canceled and the counter display shows the time code.

## Recording to a VCR or Digital Video Device



You can copy your recordings by connecting the camcorder to a VCR or a digital video device. If you connect a digital video device, you can copy recordings with virtually no generation loss in image and sound quality.

E



When connecting a VCR:

- Make sure that “V” is not displayed on the screen. If “V” is displayed, change the setting ( 39).
- The quality of the edited tape will be slightly lower than that of the original.

When connecting a digital video device:

- You can connect only one device to the camcorder with the DV cable.
- Blank sections may be recorded as anomalous picture.
- If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.

### Example: Recording to a VCR

CAMERA

PLAY (VCR)

CARD CAMERA

CARD CAMERA

#### 1. Connect the camcorder to the VCR.

See *Playing Back on a TV Screen* ( 41).

#### 2. Set the camcorder to **PLAY (VCR)** mode and load a recorded cassette.

#### 3. Connected device: Load a blank cassette and set the device to record pause mode.

#### 4. Locate the scene you wish to copy and pause playback shortly before the scene.

#### 5. Play back the tape.


#### 6. Connected device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.

#### 7. Stop playback.

## Connecting a Digital Video Device

Refer also to the instruction manual of the digital video device.

E

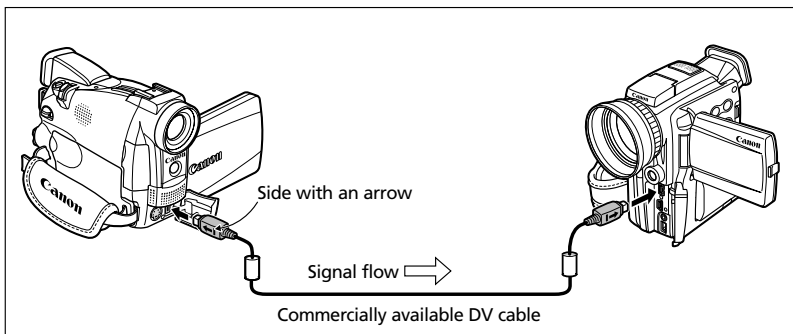




## Recording from Analog Video Devices (VCR, TV or Camcorder)

You can record videos or TV programs from a VCR or analog camcorder on the tape in the camcorder.



- Anomalous signals sent from the connected device may be recorded as anomalous picture (although it may not appear so on the screen), or it may not be recorded at all.
- You cannot record from tapes with copyright protective signals.
- Headphones cannot be used during analog line-in recording. If the AV/headphones terminal set to [PHONES ], it will automatically switch to [AV].

CAMERA

PLAY (VCR)

CARD CAMERA

CARD CAMERA

### 1. Connect the camcorder to the analog video device.

See *Playing Back on a TV Screen* (41).

### 2. Set the camcorder to **PLAY (VCR)** mode and load a blank cassette.

 
### 3. Connected device: Load the recorded cassette.

### 4. Press the **REC PAUSE** button on the wireless controller.

In record pause mode and during recording, you can check the picture on the screen.

### 5. Connected device: Play back the tape.



### 6. Press the **PAUSE** button on the wireless controller when the scene you wish to record appears.



### 7. Press the **STOP** button on the wireless controller to stop recording.

- Press the PAUSE button on the wireless controller to pause recording.
- Press the PAUSE button again to restart recording.
 
### 8. Connected device: Stop playback.

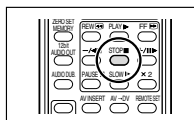

# Recording from Digital Video Devices (DV Dubbing)



E

You can record from other digital video devices equipped with a DV terminal with virtually no loss in picture and sound quality.



- When recording from digital video devices, make sure that “AV → DV” is not displayed on the screen. If “AV → DV” is displayed, change the setting (📖 93).
- Anomalous signals sent from the connected device may be recorded as anomalous picture (although it may not appear so on the screen), or it may not be recorded at all.
- Copyright protected signals cannot be recorded.
- Blank sections may be recorded as anomalous picture.
- If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.



- You can connect only one device with the DV cable.
- You can use the camcorder for playback and recording without reconnecting the DV cable.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD CAMERA

## 1. Connect the camcorder to the digital video device.

See *Connecting a Digital Video Device* (📖 88).

## 2. Set the camcorder to **PLAY (VCR)** mode and load a blank cassette.

“DV IN” appears.


## 3. Connected device: Load the recorded cassette.

## 4. Press the **REC PAUSE** button on the wireless controller.

In record pause mode and during recording, you can check the picture on the screen

## 5. Connected Device: Play back the tape.



## 6. Press the **PAUSE** button on the wireless controller when the scene you wish to record appears.

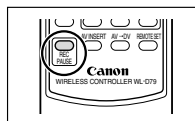

## 7. Press the **STOP** button on the wireless controller to stop recording.

- Press the **PAUSE** button on the wireless controller to pause recording.
- Press the **PAUSE** button again to restart recording.
 
## 8. Connected Device: Stop playback.

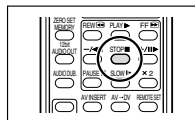

## Copyright Signal

---

Certain software tapes are copyright protected. If you attempt to play back such tape, "COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED" appears and you will not be able to view the contents of the tape. If you attempt to record from such tape via the DV terminal, "COPYRIGHT PROTECTED DUBBING RESTRICTED" appears and you will not be able to record the contents of the tape.

# Converting Analog Signals into Digital Signals (Analog-Digital Converter)



E

By connecting the camcorder to a VCR or 8mm video camcorder, you can convert analog video/audio signals to digital signals and output the digital signals via the DV terminal. The DV terminal serves as output terminal only.




- Headphones cannot be used during analog-digital conversion.
- Unload the tape from the camcorder.
- Turn off all devices before starting the connections.
- Depending on the signal sent from the connected device, the conversion from analog to digital signals might not work properly (e.g., signals that include copyright protective signals or anomalous signals such as ghost signals, etc.)



We recommend powering the camcorder from a household power source.

## Connecting the Devices

This illustration shows how to connect using a S-video cable. You can also connect the yellow plug of the stereo video cable to the VIDEO terminal. Refer also to the instruction manual of the connected device.

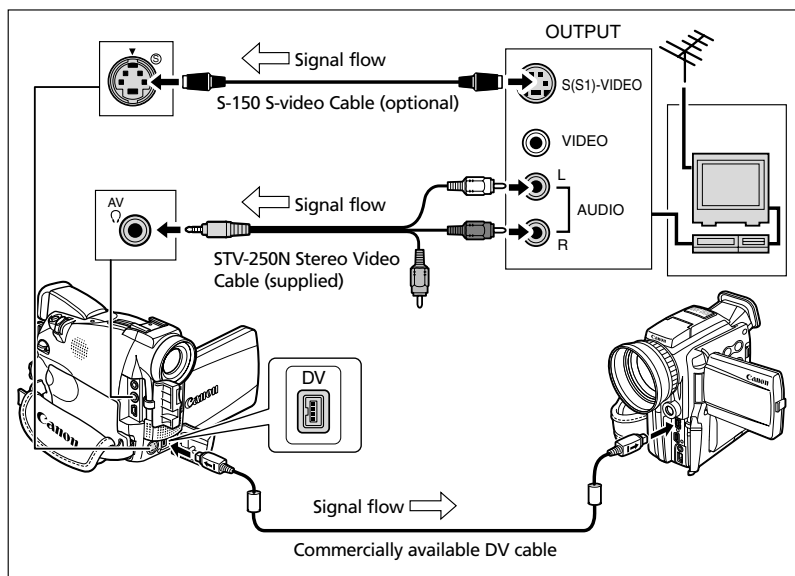

Editing

## Turning On the Analog-Digital Converter

CAMERA

PLAY (VCR)

CARD CAMERA

CARD CAMERA

E

Press the **AV → DV** button on the wireless controller.

OR

**MENU**

( 44)

VCR SET UP



AV → DV OUT · · OFF

Open the menu and select **[VCR SET UP]**. Select **[AV → DV OUT]**, set it to **[ON]** and close the menu.




- For normal use, set **[AV → DV OUT]** to **[OFF]** (so that “**AV → DV**” does not appear on the screen). If it is set to **[ON]**, digital signals cannot be input via the camcorder's DV terminal.
- Depending on the software and the specifications of your computer, you may not be able to transfer converted signals via the DV terminal.

# Replacing Existing Scenes (AV Insert)



E

You can insert and replace images/audio on the tape of the camcorder with images/audio from other video devices connected via AV terminal or DV terminal.

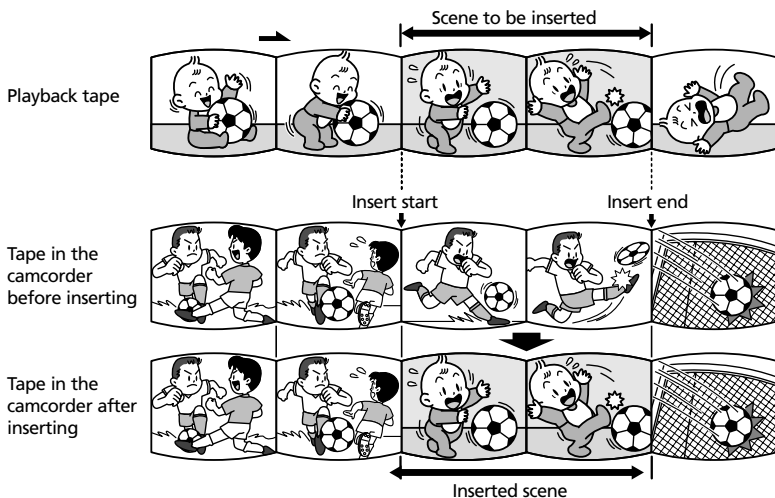

○ Make sure that "⚠" is not displayed on the screen. If "⚠" is displayed, change the setting ( 39).

○ You cannot insert from a TV program when the synchronized signals are distorted.

Camcorder:

○ Use only tapes recorded in SP mode.

○ AV insert will stop if the camcorder detects a blank section or a section not recorded in SP mode on the tape.

Connected device:

○ Use only tapes without blank sections.

○ AV insert may not work correctly if the tape has a blank section or changes in the recording mode.

○ AV insert cannot be performed when the quality of the recording is poor, or during special playback such as fast forward, rewind, playback pause, slow playback etc.

## Example: AV Insert from a VCR

CAMERA

PLAY (VCR)

CARD CAMERA

CARD CAMERA

E

### 1. Connect the camcorder to the VCR.

See *Playing Back on a TV Screen* ( 41).

### 2. VCR: Load a recorded cassette. Locate the scene you wish to insert and pause playback shortly before the scene.

### 3. Set the camcorder to PLAY (VCR) mode and load a recorded cassette.

Make sure the tape-protect switch is set to allow recording.

### 4. Locate the scene you wish to replace and pause playback shortly before the scene.


 
You can use the playback buttons on the camcorder or the special playback buttons on the wireless controller.

### 5. Press the AV INSERT button on the wireless controller.

“AV INSERT” and “●||” appear.

### 6. VCR: Play back the tape.


### 7. Press the PAUSE || button on the wireless controller when the scene you wish to insert appears.

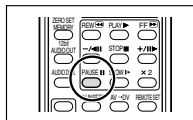

### 8. Press the STOP button on the wireless controller to stop inserting.

Press the PAUSE || button on the wireless controller to pause inserting.

### 9. VCR: Stop playback.

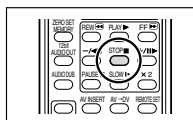

Set the zero set memory at the end of the scene you wish to replace. The camcorder will automatically stop AV insert at that point.

# Audio Dubbing




E

You can add sound from audio devices (AUDIO IN) or with the built-in or an external microphone (MIC. IN).



- Use only tapes recorded in SP mode 12-bit audio sound with this camcorder. Audio dubbing will stop if the tape has a blank section or a section recorded in LP mode, 16-bit or 12-bit 4-channel sound. In above case, create a copy in SP mode 12-bit audio sound using the analog line-in function.
- Do not connect/disconnect any cable to/from the camcorder while dubbing.
- You cannot use the DV terminal for audio dubbing.
- If you add sound to a tape not recorded with this camcorder, sound quality may decrease.
- Sound quality may decrease when you add sound to the same scene for more than 3 times.

## Connecting an Audio Device

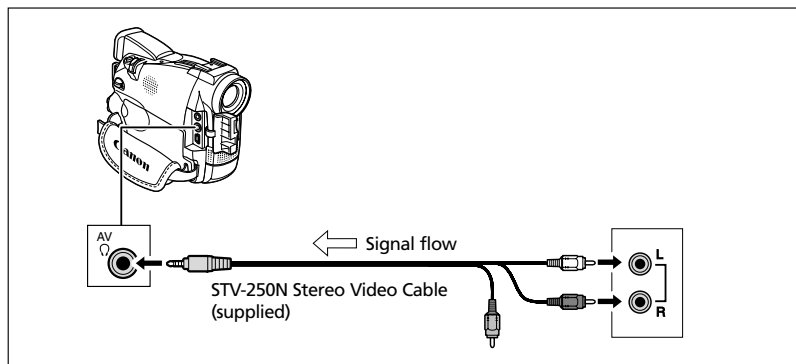


Editing



- Make sure that "⊘" is not displayed on the screen. If "⊘" is displayed, change the setting ( 39).
- You can monitor the picture on the LCD screen or a TV connected via the S-video terminal, and check the sound with the built-in speaker.



## Using a Microphone

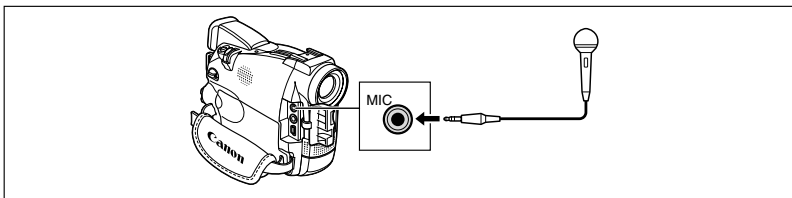

- When using the built-in microphone: do not connect any cables to the microphone terminal or the accessory shoe.
- When using an external microphone: Connect it to the microphone terminal.
- **ZR70 MC** When using the DM-50 Microphone: Do not connect any cables to the microphone terminal.
- When you connect a TV via the S-video terminal, you can check the picture on the TV screen and the sound with headphones connected to the camcorder. When you connect a TV via the AV terminal, you can check the picture on the TV screen but you cannot check the sound with headphones.

## Dubbing

CAMERA

PLAY (VCR)

CARD CAMERA





CARD CAMERA




**MENU**

(44)

AUDIO SET UP


AUDIO DUB...AUDIO IN

1. Set the camcorder to **PLAY (VCR)** mode and load a recorded cassette.
2. Open the menu and select **[AUDIO SET UP]**. Select **[AUDIO DUB.]**, set it to **[AUDIO IN]** or **[MIC. IN]** and close the menu.
3. Locate the scene you wish audio dubbing to start.
4. Press the **PAUSE**  button on the wireless controller.
5. Press the **AUDIO DUB.** button on the wireless controller.
  - "AUDIO DUB." and "  " appear.
  - **ZR70 MC** If the optional DM-50 microphone is attached,  (Connection) appears.
6. Press the **PAUSE**  button on the wireless controller to begin dubbing.
  - Audio device: Begin playback.
  - Microphone: Direct your voice to the microphone.

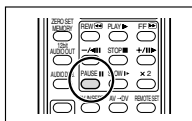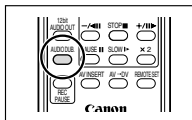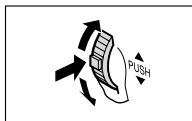

## 7. Press the STOP ■ button on the wireless controller to stop dubbing.

 Audio device: Stop playback.




Set the zero set memory at the end of the scene you wish to dub audio. The camcorder will automatically stop audio dubbing at that point.

## Playing Back the Added Sound



You can select to play back Stereo 1 (original sound), Stereo 2 (added sound), or adjust the balance of both sounds.

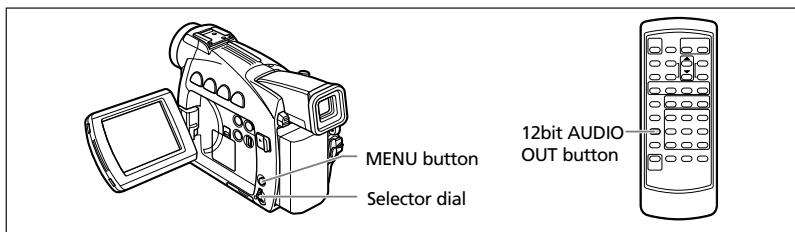

### 1. Open the menu and select [AUDIO SET UP]. Select [12bit AUDIO OUT], select a setting and close the menu.

- STEREO 1: Plays back the original sound.
- STEREO 2: Plays back the added sound.
- MIX/FIXED: Plays back stereo 1 and stereo 2 in the same level.
- MIX/VARI.: Plays back stereo 1 and stereo 2. The mix balance can be adjusted.

### 2. If you have selected [MIX/VARI.], adjust the mix level: Open the menu and select [AUDIO SET UP]. Select [MIX BALANCE], adjust the balance with the selector dial and close the menu.

Turn the selector dial down to increase the volume of Stereo 1 and up to increase the volume of Stereo 2.




○ The camcorder resets to [STEREO 1] when you turn the camcorder off. However, the mix balance is memorized by the camcorder.

○ You can also press the 12bit AUDIO OUT button on the wireless controller to select the audio output. However, the mix balance can only be adjusted in the menu.

## Connecting to a Computer Using a DV (IEEE1394) Cable

You can transfer recordings to a computer equipped with a DV (IEEE1394) terminal or IEEE1394 capture board (optional software required).

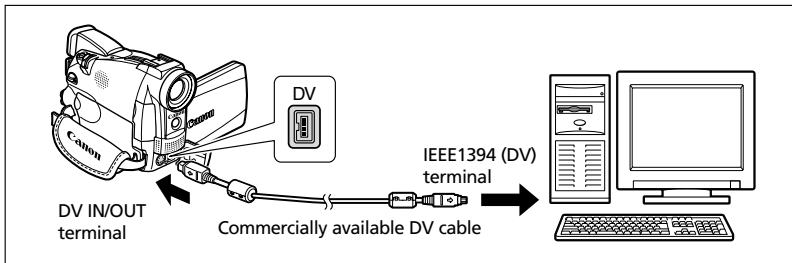

- Do not disconnect the DV cable, or turn off the camcorder or computer while data is being transferred to the computer.
- Operation may not work correctly depending on the software and the specifications/settings of your computer.



- We recommend powering the camcorder from a household power source while it is connected to the computer.
- Refer also to the instruction manual of the computer.
- Optional software required. Refer also to the instruction manual of the software.
- **ZR70 MC** **ZR65 MC** For transferring recordings from a memory card to the computer using a USB cable, see p. 129.

### DV NETWORK SOLUTION DISK (Windows XP Users)

Windows XP users can use the software on the supplied DV NETWORK SOLUTION DISK to perform videoconference and file transfer over the Internet, or upload files from the computer to the memory card and use the camcorder as card reader/writer. The available functions depend upon the camcorder model and the networking environment. For details, refer to the DV NETWORK SOLUTION DISK Software Instruction Manual.



#### **ZR70 MC** **ZR65 MC**


- Do not disconnect the DV cable, remove the memory card or turn off the camcorder or computer while data is being transferred to the computer (while the camcorder's card access indicator is flashing). Doing so may damage the memory card's data.
- The image files on your memory card and the image files saved on the hard disk drive of your computer are your valuable, original data files. If you wish to use image files on your computer, be sure to make copies of them first, retaining the original.

# Inserting and Removing the Memory Card

E

The chapter *Using a Memory Card* (📖 100-133) refers to functions of the ZR70 MC and ZR65 MC only.

You can use  SD Memory Cards or a commercially available MultiMediaCards with this camcorder. The SD Memory Card has a protect switch for prevent accidental erasure.

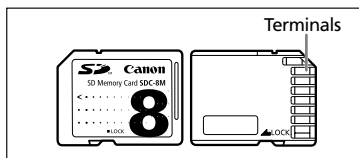


- This camcorder is compatible with SD Memory Cards or MultiMediaCards only. Do not use any other types of memory cards.
- Turn off the camcorder before inserting or removing the memory card. Otherwise it may result in data damage.
- Do not touch the memory card terminals.
- If you use memory cards other than the supplied one, make sure to format them with the camcorder (📖 128).
- For instructions on how to connect the camcorder to the computer, see *Connecting to a Computer using a USB Cable* (📖 129).

## Inserting the Card

1. Turn off the camcorder.
2. Open the cover.
3. Insert the memory card all the way into the memory card slot.
4. Close the cover.


Do not close the cover forcefully without having the card correctly inserted.

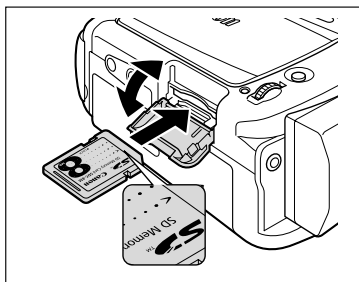

## Removing the Card

Do not forcefully remove the memory card without first pushing it in.

1. Turn off the camcorder.  
Make sure that the card access indicator is not flashing.
2. Open the cover.
3. Push the memory card to release it.  
Remove the memory card.
4. Close the cover.

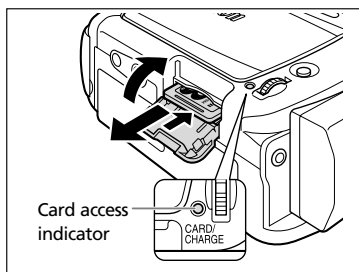

# Selecting the Image Quality/Size



## Changing the Still Image Quality

You can choose between Superfine, Fine and Normal.



### MENU

( 44)

CARD SET UP

SI QUALITY •• FINE

Open the menu and select [CARD SET UP]. Select [SI QUALITY], set it to [SUPER FINE] or [NORMAL] and close the menu.

## Changing the Still Image Size

You can choose between 1024 × 768 pixels and 640 × 480 pixels.



### MENU

( 44)

CARD SET UP

SI SIZE ••••• 1024×768

Open the menu and select [CARD SET UP]. Select [SI SIZE], set it to [640 × 480] and close the menu.



- Still images recorded in 1024 × 768 pixels may not be displayed correctly in a camcorder not supporting this size.
- Still images are compressed and recorded in the JPEG (Joint Photographic Experts Group) format.
- Depending on subject and recording condition, changing the image quality may not show a significant difference.
- Estimated Capacity of a 8 MB Memory Card and File Size per Image:

Image Size	1024 × 768		640 × 480	
	No. of Images	File Size per Image	No. of Images	File Size per Image
Superfine	14 images	440 KB	35 images	175 KB
Fine	20 images	300 KB	52 images	120 KB
Normal	39 images	160 KB	86 images	65 KB

These figures are approximate. They vary according to the recording condition and the subject. Sample images already recorded on the supplied SD Memory Card are to be included in the total number.

- Remaining Image Capacity:
  - flashing in red: No card
  - in green: 6 or more images
  - in yellow: 1 to 5 images
  - in red: No more images

E

Using a Memory Card

- The indication may not decrease even though a recording has been made, or may decrease by 2 images at once.
- All indicators are displayed in green when a memory card is played back.
- **ZR70 MC** The remaining image capacity indicates the number of still images, even when movies are recorded.

## **ZR70 MC** Changing the Movie Size

You can choose between 320 × 240 pixels and 160 × 120 pixels.



### **MENU**

( 44)

CARD SET UP

▶ MOVIE SIZE • 320×240

Open the menu and select [CARD SET UP]. Select [MOVIE SIZE], set it to [160 × 120] and close the menu.



- Movies are recorded in the Motion JPEG format.
- Maximum continuous recording time:

Image Size	Max. Continuous Recording Time	Total File Size	File Size per Second
320 × 240	10 sec.	2.7 MB	270 KB/sec.
160 × 120	30 sec.	2.7 MB	90 KB/sec.

## File Numbers

Images are automatically assigned file numbers from 0101 to 9900 and stored in folders containing up to 100 images. Folders are assigned numbers from 101 to 998. (The sample images on the supplied memory card are saved in the [100canon] folder.)

You can choose to use consecutive file numbers (CONTINUOUS) or to reset the file number each time a different memory card is inserted (RESET). We recommend setting the file numbers to CONTINUOUS.


### CONTINUOUS

The camcorder memorizes the file number of the last image and assigns the consecutive file number to the next image, even when a new memory card is inserted. (If a higher file number already exists on the memory card, the consecutive number will be assigned.) There will be no duplication of file numbers. This is useful for organizing images on a computer.

### RESET

The file number will be reset each time a new memory card is inserted, starting with 101-0101. If the memory card already contains image files, the consecutive file number will be assigned.

When you record 3 images on the supplied memory card.

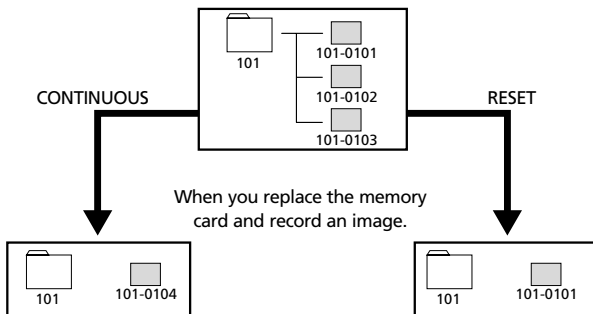

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

( 44 )

CARD SET UP

FILE NOS. . . . CONTINUOUS

To change the setting, open the menu and select [CARD SET UP]. Select [FILE NOS.], set it to [RESET] and close the menu.


E

# Recording Still Images on a Memory Card



E

You can record still images with the camcorder, from a tape in the camcorder (📖 105), or from devices connected via the DV terminal or AV terminal (📖 106).

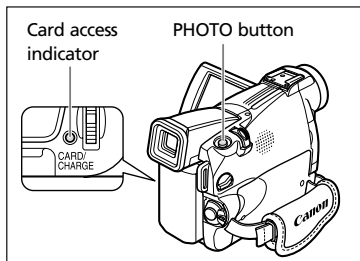

- Do not turn off the camcorder, disconnect the power source or remove the memory card while the card access display (<<< or >>>) in the upper right corner of the screen or the card access indicator is flashing. Doing so could result in data damage.
- When you are using a SD Memory Card, make sure that the protect switch is set to allow recording.



Make sure to insert a memory card with enough remaining capacity.

## Recording with the Camcorder

CAMERA

PLAY (VCR)

CARD CAMERA


CARD PLAY (VCR)

### 1. Set the camcorder to **CARD CAMERA** mode.

The remaining image capacity and other information appear.


### 2. Press the **PHOTO** button halfway.

- ● flashes in white and turns green when focus is adjusted.
- Exposure is locked.
- When you press the PHOTO button on the wireless controller, recording starts immediately.

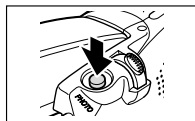

### 3. Press the **PHOTO** button fully.

- You hear a shutter sound, and the screen appears as if a shutter has been released.
- The card access indicator flashes.
- The still image shown on the screen will be recorded on the memory card.

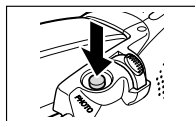

To use the self-timer (📖 70), press the ⏸ (self-timer) button before step 2 and press the PHOTO button fully.



## Recording from a Tape in the Camcorder

You can record images from a tape in the camcorder as still images on a memory card.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

E

**1. Set the camcorder to PLAY (VCR) mode.**

**2. Play back the tape.**

**3. Press the PHOTO button halfway when the scene you wish to record appears.**

- The camcorder pauses playback. The remaining image capacity and other information appear.
- When you press the PHOTO button on the wireless controller, recording starts immediately.

**4. Press the PHOTO button fully.**

- The card access indicator flashes.
- The still image shown on the screen will be recorded on the memory card.
- You can also record a still image by pressing the PHOTO button fully when the tape is in playback pause mode.



- A still image recorded from an image in 16:9 format will be vertically compressed.
- The data code of the still image will reflect the date and time it has been recorded on the memory card.
- There will be no shutter sound in PLAY (VCR) mode.
- The image size of a still image recorded from a tape in the camcorder will be 640 x 480.

## Recording from Other Video Devices

You can record images from devices connected via the S-video terminal or AV terminal (analog line-in function), or via the DV terminal as still images on a memory card.

E



When recording via the AV terminal, make sure that "AV → DV" is displayed on the screen. When recording via the DV terminal, make sure that "AV → DV" is not displayed. Change the setting as necessary (📖 93).

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

### 1. Connect the camcorder to the video device.

- S-video/AV terminal: See *Playing Back on a TV Screen* (📖 41).
- DV terminal: See *Connecting a Digital Video Device* (📖 88).

### 2. Set the camcorder to PLAY (VCR) mode.

If a cassette is loaded, make sure the tape is stopped.

### 3. Connected device: Load a recorded cassette and play back the tape.

### 4. Press the PHOTO button halfway when the scene you wish to record appears.

- The still image, remaining image capacity and other information appear.
- When you press the PHOTO button on the wireless controller, recording starts immediately.

### 5. Press the PHOTO button fully.

- The card access indicator flashes.
- The still image shown on the screen will be recorded on the memory card.



- A still image recorded from an image in 16:9 format will be vertically compressed.
- The data code of the still image will reflect the date and time it has been recorded on the memory card.
- There will be no shutter sound in PLAY (VCR) mode.
- The image size of a still image recorded from other video devices will be 640 × 480.

# Recording Panoramic Images (Stitch Assist Mode)



You can shoot a series of overlapping images and merge them into one large panoramic scene using the supplied software (PhotoStitch) on a computer.

E

## When Recording in Stitch Assist Mode:

PhotoStitch detects the overlapping portion of adjoining images and merges them. Try to include a distinctive item (landmark, etc.) in the overlapping portion.



CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

 
### 1. Set the camcorder to CARD CAMERA mode.

### 2. Press the button.



### 3. Select the direction with the CARD +/- button.

CARD + button: clockwise. CARD - button: anticlockwise.




### 4. Select the program AE mode and zoom on the subject.

Adjust focus and AE shift manually as necessary. Once the sequence has started, you cannot change the program AE mode, AE shift, zoom or focus.

### 5. Press the PHOTO button to record the first image.

 Direction and number of recorded images appear.



### 6. Record the second image so that it overlaps a portion of the first image.

- Minor discrepancies in the overlapped area can be corrected with the software.
- You can retake an image by pressing the CARD - button to return to the previous image.
- A maximum of 26 images can be recorded.

### 7. Press the button after the last image.

For details on how to merge these images, refer to the DIGITAL VIDEO SOLUTION DISK Software Instruction Manual.





- Compose each image so that it overlaps 30 to 50% of the adjoining image. Try to keep the vertical misalignment within 10%.
- Do not include moving subject in the overlapping portion.
- Do not try to stitch images that include both distant and close subjects. They may appear warped or doubled up.

E



You can record Motion JPEG movies with the camcorder, from a tape in the camcorder (📖 110), or from devices connected via the AV terminal (analog line-in) or the DV terminal (📖 110).



- Do not turn off the camcorder, disconnect the power source or remove the memory card while the card access display (<<< or >>>) in the upper right corner of the screen or the card access indicator is flashing. Doing so could result in data damage.
- When you are using a SD Memory Card, make sure that the protect switch is set to allow recording.
- Do not load/unload a cassette during recording.



- Make sure to insert a memory card with enough remaining capacity.
- The sound of a movie recorded on a memory card will be monaural.

## Recording with the Camcorder

CAMERA


PLAY (VCR)

**CARD CAMERA**

CARD PLAY (VCR)

- 1. Set the camcorder to CARD CAMERA mode.**
- 2. Press the start/stop button to begin recording.**

You can record up to 10 seconds in 320 × 240 and up to 30 seconds in 160 × 120.

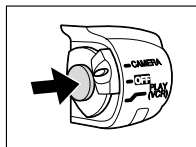

- 3. Press the start/stop button to stop recording.**

The camcorder starts writing the movie on the memory card.



To use the self-timer, press the ⏸ (self-timer) button before step 2 (📖 70) and press the start/stop button.

## Recording from a Tape in the Camcorder

You can record movies from a tape in the camcorder on a memory card.

E

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. Set the camcorder to **PLAY (VCR)** mode.
2. Play back the tape.
3. Press the start/stop button when the scene you wish to record appears.  
You can record up to 10 seconds in 320 × 240 and up to 30 seconds in 160 × 120.
4. Press the start/stop to stop recording.



- A movie recorded from an image in 16:9 format will be vertically compressed.
- The data code of the movie will reflect the date and time it has been recorded on the memory card.

## Recording from Other Video Devices

You can record movies from devices connected via the S-video terminal or AV terminal (analog line-in function), or via the DV terminal on a memory card.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. Connect the camcorder to the video device.
  - S-video/AV terminal: See *Playing Back on a TV Screen* (□ 41).
  - DV terminal: See *Connecting a Digital Video Device* (□ 88).
2. Set the camcorder to **PLAY (VCR)** mode.  
If a cassette is loaded, make sure the tape is stopped.
3. Connected device: Load a recorded cassette and play back the tape.
4. Press the start/stop button when the scene you wish to record appears.  
You can record up to 10 seconds in 320 × 240 and up to 30 seconds in 160 × 120.
5. Press the start/stop button to stop recording.



- A movie recorded from an image in 16:9 format will be vertically compressed.
- The data code of the movie will reflect the date and time it has been recorded on the memory card.

# Playing Back a Memory Card



You can play back memory card images on the LCD screen, viewfinder screen, or on a connected TV screen (see *Playing Back on a TV Screen* (📖 41)).

E

You can display a single image (single image display 📖 111), 6 at one time (index screen 📖 112), or one after another (slide show 📖 112). Use the Card Jump function to quickly locate an image without displaying them one by one (📖 113).



- Images not recorded with this camcorder, uploaded from a computer (except the sample images 📖 132), edited on a computer and images whose file names have been changed may not be played back correctly.
- Still images not recorded with this camcorder may not be printed correctly on a Bubble Jet Printer with direct print function.
- Do not turn off the camcorder, disconnect the power source or remove the memory card while the card access display (<<<) in the upper right corner of the screen or the card access indicator is flashing. Doing so could result in data damage.



- Make sure to insert a memory card that contains images.
- Only date and time will be displayed when pressing the DATA CODE button.
- You can enlarge still images by 2 times during playback (📖 82).

## Single Image Display

CAMERA

PLAY (VCR)

CARD CAMERA

 
CARD PLAY (VCR)

### 1. Set the camcorder to CARD PLAY (VCR) mode.

- The last recorded image appears.
- **ZR70 MC** Movies are displayed with the first scene as a still image indicated by "▶/||".


### 2. Press the CARD+/- button to move between images.

Press the CARD + button to display the next image and the CARD - button to display the previous image.



### 3. **ZR70 MC** To play back a movie, press the ▶/|| button.

 The last scene appears as a still image when playback is complete.



## Index Screen

CAMERA


PLAY (VCR)

 
CARD CAMERA

CARD PLAY (VCR)


E

### 1. In single image display, press the (index screen) button.

- Up to 6 images appear.
- **ZR70 MC** Movies are displayed with the first scene as a still image indicated by “”.




### 2. Press the CARD +/- button to change the image selection.

 


### 3. Move the mark to the image you wish to view.

 - Turn the selector dial up to move to the next image and down to move to the previous image.
- Turning the selector dial up on the last image displays the next index screen. Turning the selector dial down on the first image displays the previous index screen.



### 4. Press the (index screen) button.

 The index screen is canceled and the selected image appears in single image display.



## Slide Show

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

### 1. In single image display, press the SLIDE SHOW button.

Images are played back one after another.



### 2. Press the SLIDE SHOW button to stop the slide show.



## Card Jump Function

You can locate still images/movies without displaying them one by one. The number in the upper right of the screen indicates the image number of the current image by the total number of images.

CAMERA


PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**In single image display, press and hold the CARD + or CARD – button.**

 - Press the CARD + button to jump forward and the CARD – button to jump backward.
- When you release the button, the still image/movie of the displayed image number appears.



# Protecting Images



E

You can protect important images from accidental erasure during single image display or index screen display.



If a memory card is formatted, all images, even protected ones, will be erased permanently.



- The sample images recorded on the supplied SD Memory Card are already protected.
- ZR70 MC** Movies can only be protected when the first or last scene is displayed as a still image. They cannot be protected during playback pause.
- Make sure to insert a memory card that contains images.

## Protecting during Single Image Display

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. Select the image you wish to protect.
2. Press the selector dial to open the FILE OPERATION menu.
3. Select [PROTECT  $\odot$ ].
  - “ $\odot$ ” appears and now the image cannot be erased.
  - To cancel the protection, press the selector dial.
4. Select [ $\leftarrow$  RETURN] to close the menu.

## Protecting during Index Screen Display

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

( $\square$  44)

CARD OPERATIONS

$\rightarrow$  PROTECT  $\odot$

1. In single image display, press the  $\square$  (index screen) button.  
Up to 6 images appear.
2. Open the menu and select [CARD OPERATIONS].
3. Select [ $\rightarrow$  PROTECT  $\odot$ ].
4. Select the image you wish to protect and press the selector dial.
  - “ $\odot$ ” appears on the image.
  - Repeat this step to protect more images.
  - To cancel the protection, press the selector dial.
5. Press the MENU button.



To cancel the protection, press the selector dial in step 4. “ $\odot$ ” disappears and the image can now be erased.

# Erasing Images



You can erase images singly or all at once.



Be careful when erasing images. Erased images cannot be recovered.



- Protected images cannot be erased.
- **ZR70 MC** Movies can only be erased when the first or last scene is displayed as a still image. They cannot be erased in playback pause mode.
- Make sure to insert a memory card that contains images.

## Erasing a Single Image

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. Select the image you wish to erase.
2. Press the selector dial to open the **FILE OPERATION** menu.
3. Select **[IMAGE ERASE]**.
  - “ERASE THIS IMAGE?”, [NO] and [YES] appears.
  - If an image is protected, [YES] appears in purple.
4. Select **[YES]**.

The image is erased and the previous image appears.

5. Select **[← RETURN]** to close the menu.

## Erasing a Single Image/All Images

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**  
( 44)

CARD OPERATIONS


▶ IMAGE ERASE

1. Open the menu and select **[CARD OPERATIONS]**.
2. Select **[IMAGE ERASE]**.
3. Select **[SINGLE]** or **[ALL]**.

- When erasing a single image: “ERASE THIS IMAGE?” [NO] and [YES] appears. If an image is protected, [YES] appears in purple.
- When erasing all images: “ERASE ALL IMAGES? [EXCEPT FOR IMAGES]”, [NO] and [YES] appears.

4. Select **[YES]** and close the menu.

- When erasing a single image: The image is erased and the previous image appears. To erase another image, select the image with the **CARD +/-** button and select [YES].
- When erasing all images: All images with exception of the protected images are erased.

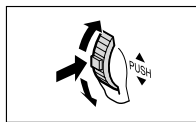

## Selecting Still Images for Printing (Print Order)



E

You can select still images for printing and set the number of copies. These print order settings are compatible with the Digital Print Order Format (DPOF) standards.



- Make sure to insert a memory card that contains images.
- A maximum of 200 still images can be selected.
- **ZR70 MC** Movies cannot be printed.

### Selecting in Single Image Display

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. Select the still image you wish to print.
2. Press the selector dial to open the FILE OPERATION menu.
3. Select [**PRINT ORDER**].
4. Select the number of copies.
  - “**PRINT ORDER**” appears on the image.
  - To cancel the print order, set the number of copies to 0.
5. Select [**RETURN**] to close the menu.

### Selecting in Index Screen Display

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

( 44)

CARD OPERATIONS

**PRINT ORDER**

1. In single image display, press the (index screen) button.  
Up to 6 images appear.
2. Open the menu and select [**CARD OPERATIONS**].
3. Select [**PRINT ORDER**].
4. Select the still image you wish to print and press the selector dial.
5. Set the number of copies with the selector dial and close the menu.
  - “**PRINT ORDER**” appears on the image.
  - To cancel the print order, set the number of copies to 0.
  - Repeat steps 4 and 5 to continue the print order setting.

## Erasing All Print Orders

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

### MENU

( 44)

CARD OPERATIONS

▶▶ PRINT ORDERS ALL ERASE

1. In single image display, open the menu and select [CARD OPERATIONS].
2. Select [▶▶ PRINT ORDERS ALL ERASE].  
“ERASE ALL ▶▶ PRINT ORDERS?”, [NO] and [YES] appears.
3. Select [YES].  
All “▶▶” disappear.
4. Select [◀ RETURN] to close the menu.

E

# Printing with the Direct Print Function



E

You can print still images by connecting the camcorder to a Canon Bubble Jet Printer with Direct Print function. The Direct Print function can also be used with the print order settings (📖 116).



○ Observe the following precautions during printing, otherwise printing may not be performed correctly.


- Do not turn off the camcorder or the printer.
- Do not change the position of the TAPE/CARD switch.
- Do not detach the cable.
- Do not remove the memory card.



○ Canon Bubble Jet Printers with Direct Print function (as of January 2003): S830D, S820D, S530D.

- We recommend powering the camcorder from a household power source.
- Refer also to the instruction manual of the respective printer.

## Connecting the Printer to the Camcorder

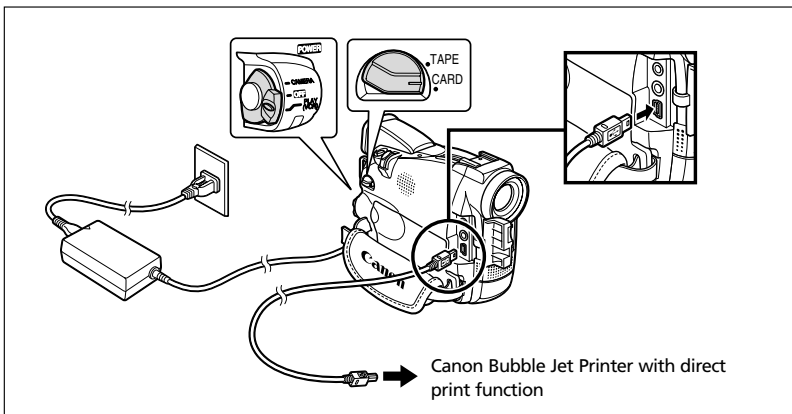

1. Turn off the camcorder and insert a memory card that contains images.
2. Connect a power source to the printer and turn on the printer.
3. Set the camcorder to **CARD PLAY (VCR)** mode.  
Wait until the card access indicator stops flashing.
4. Connect the camcorder to the printer using the cable.

**Print** **SET** appears when the printer is properly connected to the camcorder. (Does not appear with movies, or still images that cannot be played back with the camcorder.)

## Printing

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

1. In single image display, select the still image you wish to print and press the selector dial.

The print setting menu appears.

2. Set the number of copies and the print style.

- *Selecting the Number of Copies.*
- *Setting the Print Style.*

3. Select [Print] and press the selector dial.

Printing starts. The print setting menu disappears when printing is complete.



If an error message appears, see *Printing Errors* (📖 121) and *Direct Print Related Messages* (📖 140).

## Selecting the Number of Copies

A maximum of 9 copies can be selected for one still image.

1. In the print setting menu, turn the selector dial so that **9** appears next to [Copies] and press the selector dial.



2. Turn the selector dial to select the number of copies and press the selector dial.

## Setting the Print Style


Paper Size		Card #1*, Card #2*, Card #3*, LTR, A4 For details on paper type, refer to the Bubble Jet Printer User Guide.
Borders	Borderless	Prints right to the edges of the page
	Bordered	Prints with a border

\* Recommended paper size

### Selecting the paper size:

1. In the print setting menu, turn the selector dial to select [Style] and press the selector dial.



2. Make sure that  is selected and press the selector dial.



3. Turn the selector dial to select the paper size and press the selector dial.

4. Press the MENU button.

You return to the print setting menu.

### Selecting the Borders:

1. In the print setting menu, turn the selector dial to select [Style] and press the selector dial.



2. Select  and press the selector dial.



3. Select a setting option and press the selector dial.

4. Press the MENU button.

You return to the print setting menu.



- Bordered: The image area remains relatively unchanged from the recorded image when it is printed.
- Borderless: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.



## Printing with Print Order Settings

You can print still images you have selected with the Print Order function. If you wish to print more than 1 copy, set the number of copies in the print order (☞ 116).

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)


**MENU**  
(☞ 44)

 PRINT

**1. Connect the printer to the camcorder (☞ 118).**

**2. Press the MENU button.**

**3. Select [] PRINT].**

- The print setting menu appears.
- “Set print order” appears, when you connect a printer with direct print function and select  PRINT without having set the print order.
- The total number of prints set in the print order is displayed on the upper left of the screen.

**4. Set the print style.**

*Setting the Print Style (☞ 119).*


**5. In the print setting menu, select [OK] and press the selector dial.**


Printing starts. The print setting menu disappears when printing is complete.



○ Cancel Printing

Press the selector dial while “Now Printing” is displayed. A confirmation dialog appears. Select [OK] and press the selector dial. Printing stops even if it is incomplete and the paper is fed through.

○ Restarting Printing (with  print order only)

Open the CARD PLAY (VCR) menu and select [] PRINT]. Select [Restart] in the print setting menu and press the selector dial. The remaining images will be printed.

Printing cannot be restarted in the following cases:

- When you change the print order settings.
- When you delete a still image with print order settings.

○ Printing Errors

If an error occurs during the printing process, an error message appears (☞ 140). With most errors, printing resumes automatically after you correct the error. If the error persists, press the selector dial to cancel printing.

○ Follow below procedure when disconnecting the interface cable:

1. Disconnect the cable from the camcorder and printer.
2. Turn off the camcorder.

# Combining Images (Card Mix)



E

You can produce effects not possible with just a tape with the Card Mix function. Choose one of the sample images provided on the supplied SD Memory Card (such as picture frames, backgrounds and animations) and combine it with the live video recording.



○ Card Mix cannot be used in the Night and Super Night (ZR70 MC) mode.

○ **ZR70 MC** Movies recorded on a memory card cannot be combined with camcorder recordings.



○ Make sure to load a cassette and to insert a memory card that contains card mix images.

○ Additional sample images are provided on the supplied DIGITAL VIDEO SOLUTION DISK. For instructions on how to upload them to the memory card, refer to *Adding Still Images from Your Computer to the Memory Card* in the DIGITAL VIDEO SOLUTION DISK Software Instruction Manual.

○ Reselect the card mix image when you have turned off the camcorder or changed the position of the program selector.

## Card Mix Effects

You can select from the following 4 types of Card Mix effects:

### Card Chroma Key (CARD CHROMA)

Combines frames with your recordings. The live video recording will appear in place of the blue area of the card mix image. If you create your own frame, make sure that the area the live recording should appear is blue.


Mix level adjustment: blue area of the still image.



### Card Luminance Key (CARD LUMI.)

Combines illustrations or title with your recordings. The live video recording will appear in place of the light area of the card mix image. You can create your own title or illustration by drawing on a white paper and recording it to the memory card.


Mix level adjustment: light area of the still image.

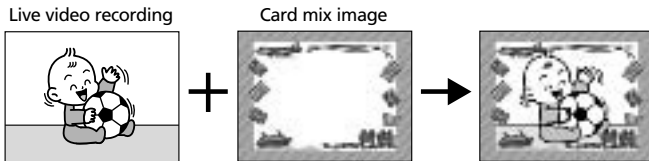

### Camera Chroma Key (CAM. CHROMA)

Combines backgrounds with your recordings. Record your subject in front of a blue curtain, and the subject not blue will be superimposed on the card mix image.

Mix level adjustment: blue area of the live video recording.

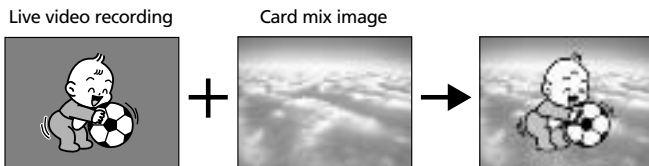

### Card Animation (C. ANIMATION)


Combines animations with your recordings. You can choose from 3 types of card animation effects.

Corner: Animation appears on the upper left and the lower right corner of the screen.

Straight: Animation appears on the top and bottom of the screen and moves to the right and left.

Random: Animation moves randomly in the display.

Mix level adjustment: blue area of the card animation image.

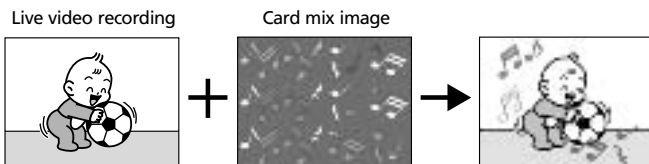

## Selecting the Card Mix Effect

E

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**


(book 44)

→ CARD MIX

▶ MIX TYPE...CARD CHROMA

▶▶ MIX LEVEL...


1. Set the program selector to **P**.

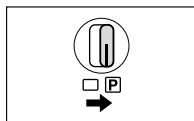

2. Open the menu and select **[⇒ CARD MIX]**.

The card mix menu appears.

3. Select the image you wish to combine with the **CARD +/-** button.

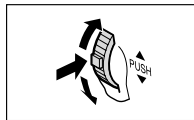

4. Select **[MIX TYPE]**.

[CARD CHROMA], [CARD LUMI.], [CAM. CHROMA] and [C. ANIMATION] appears.

5. Select the mix type matching the image you have selected (**book 132**).

- The screen shows the combined image.
- When you have selected [C. ANIMATION], select [ANIMAT. TYPE] and select between [CORNER], [STRAIGHT] and [RANDOM].

6. To adjust the mix level, select **[MIX LEVEL]** and adjust it with the selector dial.

7. Close the menu.

"CARD MIX" flashes.



## Activating the Card Mix Effect

1. Press the **CARD MIX** button.

- "CARD MIX" stops flashing.
- The combined image appears.
- You can activate and deactivate the card mix effect by pressing the CARD MIX button.




## Recording with the Card Mix Effect

---

Movie:

### 1. Press the start/stop button to begin recording.

The combined image is recorded on the tape.

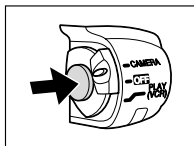


E

### 2. Press the start/stop button to end recording.

 Still Image:


### 1. Press the PHOTO button halfway.

- flashes in white and turns green when focus is adjusted.



### 2. Press the PHOTO button fully.

 - The camcorder records the still image on the tape for approx. 6 seconds. During this time, the camcorder displays the still image and keeps recording the sound.
- The camcorder returns to record pause mode.



# Copying Still Images



E

You can copy still images from tape to memory card, or from memory card to tape.



- All still images from the selected still image onward will be copied.
- The image size of a still image copied from tape to memory card will be 640 × 480.
- The data code of the still image reflects the date and time it has been copied.

## Copying Still Images from Tape to Memory Card

Insert a memory card with enough remaining capacity, and load a recorded cassette.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**


( 44)

CARD OPERATIONS

COPY [ → ]

### 1. Locate the still image you wish to copy on the tape and stop the tape shortly before the still image.

- You can also use the photo search function to easily locate the still image.
- To copy all still images from the tape, rewind the tape to the beginning.

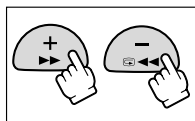


### 2. Open the menu and select [CARD OPERATIONS].

### 3. Select [COPY [ → ]].


[CANCEL] and [EXECUTE] appears.

### 4. Select [EXECUTE].

- "NOW COPYING" appears.
- The still image being copied is shown on the screen.
- Copying stops when the tape reaches the end or the memory card is full ("CARD FULL" appears).

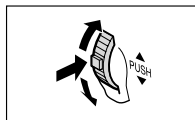

### 5. Press the (stop) button to end copying.

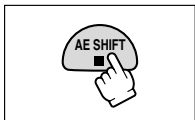

## Copying Still Images from Memory Card to Tape

Load a cassette with enough free space, and insert a recorded memory card. Make sure that the protect tab on the cassette is set to allow recording.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**


( 44)

CARD OPERATIONS

COPY [ → ]

### 1. Select the first still image you wish to copy with the **CARD +/-** buttons.


To copy all still images from the memory card, select the first still image.

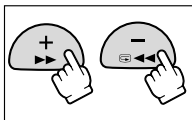

### 2. Open the menu and select [CARD OPERATIONS].

### 3. Select [COPY [ → ]].


[CANCEL] and [EXECUTE] appears.

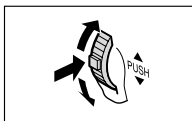

### 4. Select [EXECUTE].

- “NOW COPYING” appears.
- It takes about 6 seconds per still image to be copied to the tape.
- Copying stops when all still images are copied or the tape is full.

### 5. Press the (stop) button to end copying.

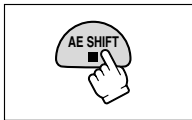

E

# Formatting a Memory Card



E

Format new memory cards, or when you get the message "CARD ERROR". You can also format a memory card to erase all images recorded on it.

The camcorder formats memory cards in the Design rule for Camera File system (DCF) standard.



- Formatting a memory card erases all data, including protected images.
- Images erased by formatting cannot be recovered.
- If you use a memory card other than the supplied one, format it with the camcorder.
- Makes sure to insert the memory card you wish to format into the camcorder.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY (VCR)

**MENU**

( 44)

CARD OPERATIONS

▶ **FORMAT**

**1. Open the menu and select [CARD OPERATIONS].**

**2. Select [FORMAT].**

[CANCEL] and [EXECUTE] appears.

**3. Select [EXECUTE].**

[FORMAT THIS CARD?], [NO] and [YES] appears.


**4. Select [YES] and close the menu.**

- Formatting starts.
- Selecting [NO] brings you back to step 3.




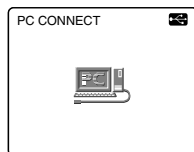
## Connecting to a Computer Using a USB Cable

You can download images from the memory card to a computer using the supplied USB cable. With the supplied software, you can easily download, browse and archive images, and arrange still images for printout.

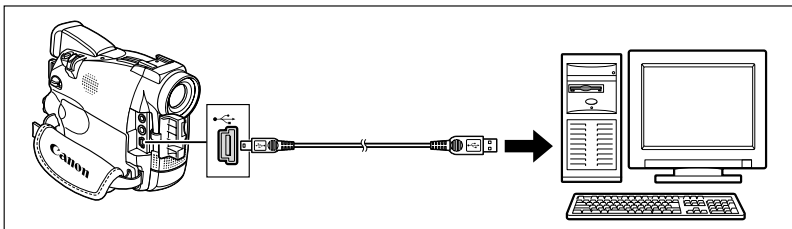

For instructions on how to connect the camcorder to the computer, and install and operate the software, refer to the **DIGITAL VIDEO SOLUTION DISK Software Instruction Manual**.

- Refer also to the computer instruction manual.
- “PC CONNECT ” appears to indicate that the camcorder is connected to the computer via USB cable.



- Do not disconnect the USB cable, remove the memory card, change the position of the POWER switch or turn off the camcorder and computer while data is being transferred to the computer (while the camcorder's card access indicator is flashing). Doing so may damage the memory card's data.
- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- The image file on your memory card and the image files saved on the hard disk drive of your computer are valuable, original data files. If you wish to use image files on your computer, make copies of them first, and use the copied file, retaining the original.
- We recommend powering the camcorder from a household power source while it is connected to the computer.
- **ZR70 MC** The light-up buttons turn off during USB connection.
- For transferring recordings from to a computer using a DV cable, see p. 99.
- Still images/movies recorded on a tape cannot be transferred to a computer via USB interface.



# Creating a Start-up Image

E

You can create a start-up image using a still image on the memory card or a sample start-up image provided on the DIGITAL VIDEO SOLUTION DISK and save it as [MY IMAGE].



- Make sure to insert a memory card with enough remaining capacity.
- Before you create a start-up image, you need to record a still image on the memory card.
- Retain the original data of the still image you have set as the start-up image on your computer or removable disk.

## Preparations

**Record a still image on the memory card.**

**OR**

**Upload a still image from your computer to the memory card using the software in the DIGITAL VIDEO SOLUTION DISK.**

For instruction on how to upload a still image to the memory card, refer to *Adding Still Images from Your Computer to the Memory Card* in the DIGITAL VIDEO SOLUTION DISK Software Instruction Manual.

## Setting the Still Image as Start-up Image



**1. Open the menu.**

**2. Select [MY CAMERA].**

**3. Select [CREATE START-UP IMAGE].**

[SET THIS AS START-UP IMAGE?], [YES] and [NO] appears.

**4. Select a still image with the CARD +/- buttons and select [YES].**

[OVERWRITE MY IMAGE?], [YES] and [NO] appears.

**5. Select [YES].**

The still image will be saved, and the image that was saved to [MY IMAGE] is erased.

# Memory Card Information

---

Images recorded on a memory card with this camcorder can be transferred to a computer using the following products for SD Memory Cards or MultiMediaCards:

**PC Card Adapter:** An adapter to insert a memory card into the card slot on the computer.

**USB Reader/Writer:** Connects to the USB port of a computer for direct access to the memory card.

**FD Adapter:** An adapter to insert a memory card into the floppy disk drive on the computer.

## Memory Cards that are confirmed to operate with this camcorder (as of January 2003):

**SD Memory Card:** Panasonic: 16 MB, 32 MB, 64 MB, 128 MB, 256 MB, 512 MB

SanDisk: 16 MB, 32 MB, 64 MB

**MultiMediaCard:** SanDisk: 16 MB, 32 MB, 64 MB

However, we cannot guarantee that all of these memory cards work properly.

## Memory Card Handling Precautions

---


- Format new memory cards with the camcorder. Memory cards formatted with other devices such as a computer may not operate correctly.
- We recommend saving backups of memory card images on your computer's hard drive or other external memory device. Image data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon Inc. makes no warranties for corrupted or lost data.
- Do not turn off the camcorder, disconnect the power source or remove the memory card while the card access indicator is flashing.
- Do not use memory cards in places subject to strong magnetic fields.
- Do not leave memory cards in places subject to high humidity and high temperature.
- Do not disassemble memory cards.
- Do not bend, drop, or subject memory cards to shocks and do not expose them to water.
- Moving a memory card rapidly between hot and cold temperatures may cause condensation to form on its external and internal surfaces. If condensation forms on the card, put it aside until the droplets have evaporated completely.
- Do not touch or expose the terminals to dust or dirt.
- Store and carry memory cards in the supplied case to protect the terminals.
- Check the direction before inserting the memory card. Forcing a memory card backwards into the slot may damage the memory card or the camcorder.
- Do not remove the label from the memory card, or affix other labels on the memory card. If you wish to add labels, affix them to the case.

## Sample Images

27 sample images are pre-recorded on the supplied SD Memory Card: 8 card chroma key images, 5 card luminance key images, 2 camera chroma key images and 12 card animation images.

E


### Card Chroma Key

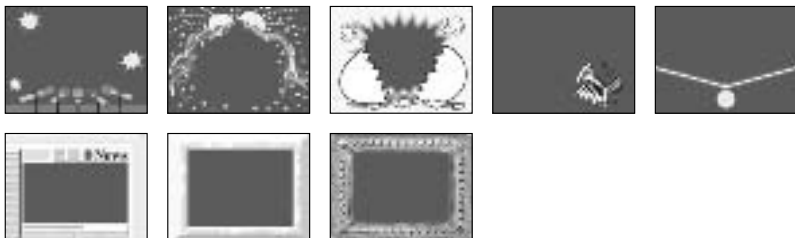


### Card Luminance Key


 
### Camera Chroma Key



### Card Animation

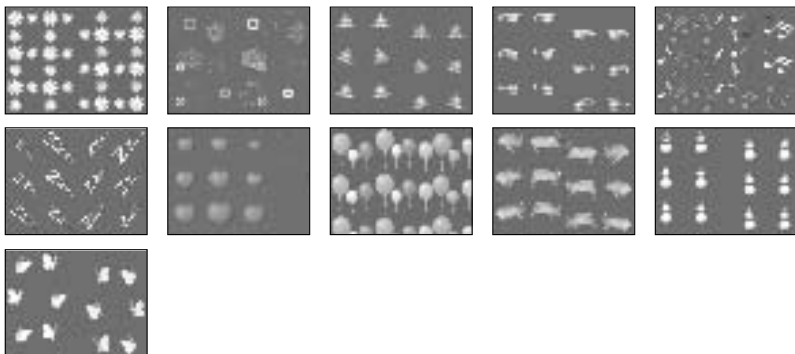



The sample images recorded on the supplied SD Memory Card are intended only for the personal use with this camcorder. Do not use these sample images for other purposes.



If you have mistakenly erased the Card Mix sample images on the supplied SD Memory Card, they can be downloaded from the homepage <http://www.canondv.com>.

For details on how to add the downloaded images to the memory card, refer to Adding Still Images from Your Computer to the Memory Card in the DIGITAL VIDEO SOLUTION DISK Software Instruction Manual.

If you cannot use the USB cable to connect the camcorder to a computer, you will need a PC Card Adapter to upload the images to a memory card.

#### PhotoEssentials – Royalty Free Stock Photography

The PhotoEssentials suite of royalty-free images on CD-ROM features premium quality assignment photography and is ideally suited for use in advertising, brochures, reports, multimedia, websites, books, packaging and more.

For more information, please visit their website [www.photoessentials.com](http://www.photoessentials.com)



## LCD Screen Displays

You can hide the displays on the LCD screen to have a clear screen for playback.



Open the menu and select **[DISPLAY SET UP]**. Select **[DISPLAYS]**, set it to **[OFF <PLAYBK>]** and close the menu.

- The LCD screen will become completely blank (also the TV screen if connected).
- Warning messages still appear, and the data code appears if turned on.
- Tape operation displays appear for 2 seconds.
- **ZR70 MC** **ZR65 MC** Displays cannot be hidden on the index screen.

 
## TV Screen Displays

When you connect a TV for recording/playback, you can hide the displays on the TV screen. For connecting instructions, see *Playing Back on a TV Screen* ( 41).



Press the **TV SCREEN** button on the wireless controller.

- When the POWER switch is set to CAMERA: The displays disappear from the TV screen and appear when you press the button again.
- When the POWER switch is set to PLAY (VCR): The displays appear on the connected TV screen and disappear when you press the button again. The setting resets to the OFF setting when you turn the camcorder off.




When the TV screen displays are hidden, the displays still appear on the LCD screen. If you turn on the data code, displays other than the data code will disappear from the LCD screen.

You can also change the setting in the menu during recording:




Open the menu and select **[DISPLAY SET UP]**. Select **[TV SCREEN]**, set it to **[OFF]** and close the menu.

## Screen Displays during Basic Recording/Playback

 indicates flashing.


CAMERA mode (battery pack attached):

 


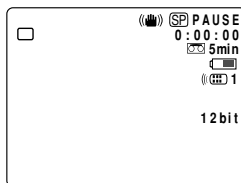


 



- Remote sensor mode and audio mode disappear after 4 seconds.

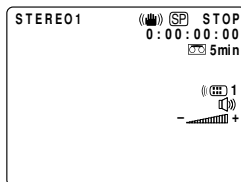


PLAY (VCR) mode:

 - Remote sensor mode and volume bar disappear after 4 seconds.



REC		: Fast forward playback/ rewind playback (□38)	RTN 	: Zero set memory (forward and reverse) (□86)
PAUSE		: Playback pause (forward and reverse) (□38)		: AV insert editing (□94)
STOP		: Playback stop		: Audio dubbing (□96)
EJECT		: Eject tape		
▶		: Playback		
FF ▶▶		: Fast forward playback		
◀◀ REW		: Rewind playback		

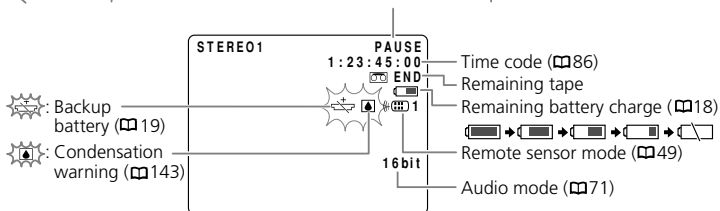


# Screen Displays during Advanced Recording/Playback


## CAMERA Mode

E

\* ZR70 MC

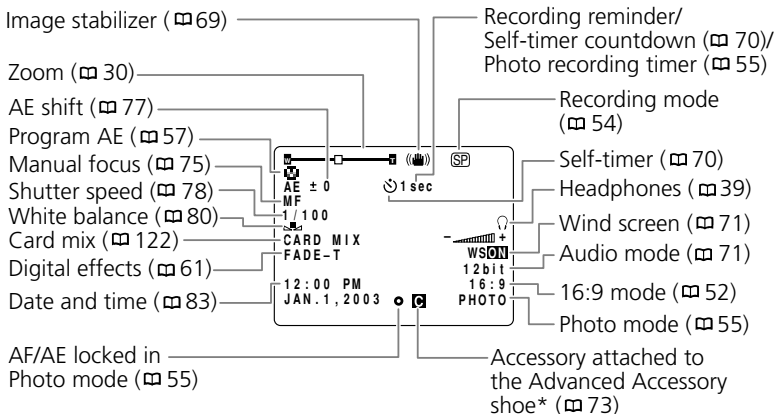


## PLAY (VCR) Mode

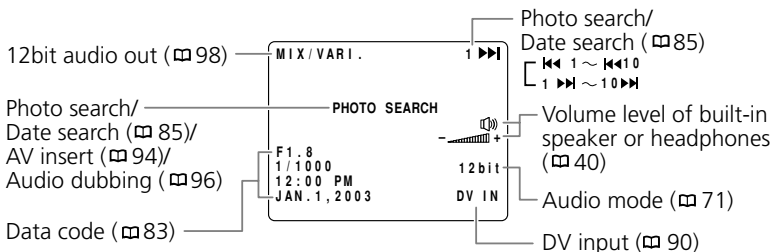




## ZR70 MC ZR65 MC CARD CAMERA Mode

\* ZR70 MC

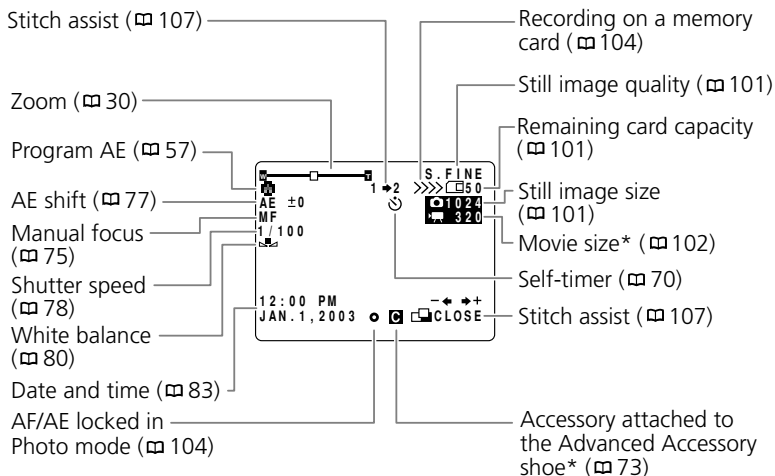


## ZR70 MC ZR65 MC CARD PLAY (VCR) Mode


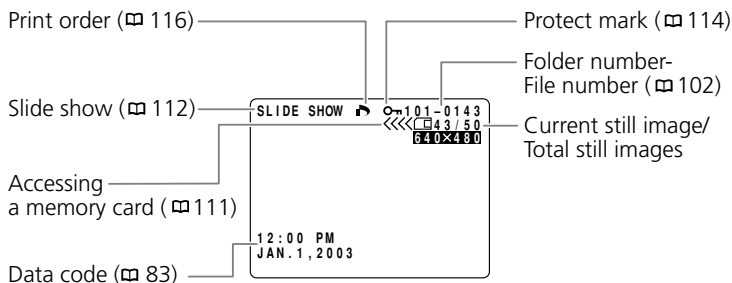



# List of Messages

**E**

Message	Explanation	
SET THE TIME ZONE, DATE AND TIME	You have not set the time zone, date and time. This message appears each time you turn the power on until you set the time zone, date and time.	25
CHANGE THE BATTERY PACK	Battery pack is exhausted. Replace or charge the battery pack.	16
THE TAPE IS SET FOR ERASURE PREVENTION	Cassette is protected. Replace the cassette or change the position of the protect switch.	23
REMOVE THE CASSETTE	Camcorder stopped operating to protect the tape. Unload and reload the cassette.	22
CHECK THE DV INPUT	DV cable is not connected, or the connected digital device is turned off.	90
CONDENSATION HAS BEEN DETECTED	Condensation has been detected in the camcorder.	143
TAPE END	Tape reached the end. Rewind the tape or replace the cassette.	22
CHECK THE CASSETTE [REC MODE]	You attempted to perform audio dubbing or AV insert on a tape recorded in a mode other than the SP mode.	54
CHECK THE CASSETTE [AUDIO MODE]	You attempted to perform audio dubbing on a tape recorded in 16-bit or 12-bit 4-channel sound.	96
CHECK THE CASSETTE [BLANK]	You attempted to perform audio dubbing or AV insert on a tape with a blank section.	94
COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED	You attempted to play back a copyright protected tape.	91
COPYRIGHT PROTECTED DUBBING RESTRICTED	You attempted to dub a copyright protected tape. May also appear when an anomalous signal is received during analog line-in recording, or during analog-digital conversion of a copyright protected tape.	91

  **ZR70 MC ZR65 MC Memory Card Related Messages**

Message	Explanation	📖
NO CARD	Memory card not inserted into the camcorder.	100
THE TAPE IS SET FOR ERASURE PREVENTION	SD Memory Card is set for erasure prevention. Replace the card or change the position of the protect switch.	100
NO IMAGES	No images are recorded on the memory card.	111
CARD ERROR	A memory card error occurred. The camcorder cannot record or play back the image. The error may be temporary. If the message disappears after 4 seconds and  flashes red, turn the camcorder off, remove the card and reinsert the card. If  changes to green, you can continue recording/playback.	100
CARD FULL	No remaining capacity on the memory card. Replace with another card or erase images.	115
NAMING ERROR	File or folder number has reached the maximum value.	102
UNIDENTIFIABLE IMAGE	Image is recorded in a not compatible JPEG format or another format not compatible with the camcorder, or the image file is corrupted.	111
 PRINT ORDER ERROR	You attempted to set more than 200 still images in the print order.	116
THIS IMAGE CANNOT BE RECORDED	Some analog images cannot be recorded on the memory card depending on the signal.	106

**E**


Message	Explanation
No Paper	Paper cassette is not correctly inserted or is out of paper.
Paper Jam	The paper jammed during printing.
No Ink	The ink cartridge is not inserted or is out of ink.
Communication Error	The printer is experiencing a data transmission error.
Could not print X images	You attempted to use the print order settings to print X images that were made with another camcorder, have a different format or were edited on a computer.
Cannot Print!	You attempted to print an image that was made with another camcorder, has a different format, or was edited on a computer.
Set print order	You attempted to print an image from the Card Play menu [⇒ PRINT] without having set the print order.
Printer in use	The printer is printing from a computer or a memory card inserted into the printer. It automatically starts printing from the camcorder when current prints are complete.
Printer warming up	Printer is warming up. The printer automatically starts printing when it is ready.
No printhead	No print head is installed in the printer.
Printer cover open	Printer cover is open. Close the printer cover securely.
Media type error	Wrong paper. Cancel printing and set the paper you chose in the print settings menu.
Paper lever error	Paper lever error occurred. Adjust the paper selection lever to the proper position.
Low ink level	The ink tank needs to be replaced soon. Prepare a new ink tank. If you select [Continue] in the error screen, you can restart printing.
Waste tank full	Waste tank is full. You can restart printing by pressing the RESUME/CANCEL button on the Bubble Jet Printer. Request replacement of the waste tank at the shop where you purchased the printer or the nearest Canon customer support center listed in the Bubble Jet Quick Start Guide.
Printer error	Turn off the printer and turn it back on. If the error persists, consult the nearest Canon customer support center listed in the Bubble Jet Quick Start Guide.

# Maintenance

---

## Camcorder Handling Precautions

---

- Do not carry the camcorder by the LCD panel or viewfinder.
  - Do not leave the camcorder in places subject to high temperatures, such as a sun-heated car, and high humidity.
  - Do not use the camcorder in places subject to magnetic or electric fields such as near the TV transmitters or portable communication devices.
  - Do not point the lens or viewfinder at strong light sources. Do not leave the camcorder pointed at a bright subject.
  - Do not use the camcorder in dusty or sandy places. Dust or sand getting inside the cassette or camcorder may cause damage. Dust and sand can also damage the lens. Attach the lens cap after use.
  - The camcorder is not waterproof. Water, mud or salt getting inside the cassette or camcorder may cause damage.
  - Be careful of heat generated by lighting equipment.
  - Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
  - Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.
  - Avoid sudden changes in temperature. Moving the camcorder rapidly between hot and cold temperatures may cause condensation to form on its internal surfaces.
- ( 143)

## Storage

---

- If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 86°F (30°C).
- After storage, check the functions of your camcorder to make sure that the camcorder is still working properly.

## Cleaning

---

### Camcorder Body and Lens

- Use a soft, dry cloth to clean the camcorder body and lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

### LCD Screen


- Clean the LCD screen using a commercially available cleaning cloth for glasses.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

- At cold temperatures, the screen may be darker than usual. This is not a malfunction. The screen returns to normal when the camcorder warms up.

## E

### Viewfinder

- Rotate the viewfinder upward. Remove the protect cover and clean the glass with a cotton swab. Reattach the protect cover when finished.
- Be careful not to scratch the glass when cleaning.

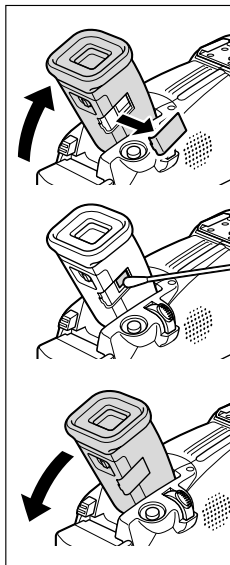

### Video Heads

- When the playback picture becomes distorted, the video heads need to be cleaned.
- To maintain the best picture quality, we recommend cleaning the video heads frequently with the Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available dry cleaning cassette.
- Do not use wet type cleaning cassettes as this may damage the camcorder.

 


## Condensation


Moving the camcorder rapidly between hot and cold temperature may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

### Condensation may form in the following cases:


When the camcorder is moved from an air-conditioned room to a warm, humid place



When the camcorder is moved from a cold place to a warm room

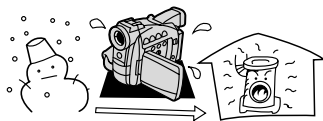

When the camcorder is left in a humid room

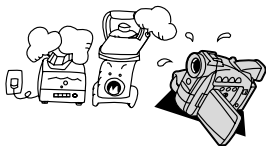



When a cold room is heated rapidly



### How to avoid condensation:

- Unload the cassette, place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

### When condensation is detected:

- The camcorder stops operating and the warning message "CONDENSATION HAS BEEN DETECTED" appears for approx. 4 seconds and  starts flashing.
- If a cassette is loaded, the warning message "REMOVE THE CASSETTE" appears and  starts flashing. Remove the cassette immediately and leave the cassette compartment open. Leaving the cassette in the camcorder may damage the tape.
- A cassette cannot be loaded when condensation is detected.

### Resuming use:

- It takes about 1 hour until the water droplets evaporate. After the condensation warning stops flashing, wait for 1 more hour before resuming use.

## Using the Camcorder Abroad

---

### Power Sources

E

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult the Canon Service Center for information on plug adapters for overseas use.

### Playback on a TV Screen

You can only play back your recordings on TVs with NTSC system. The NTSC system is used in the following countries/areas:

American Samoa, Antigua, Aruba, Bahamas, Barbados, Bermuda, Bolivia, Canada, Chile, Columbia, Costa Rica, Cuba, Ecuador, El Salvador, Guam, Guatemala, Greenland, Haiti, Honduras, Jamaica, Japan, Korea, Mexico, Micronesia, Myanmar, Nicaragua, Panama, Peru, Philippines, Puerto Rico, Saint Kitts and Nevis, Saint Lucia, Saint Vincent and the Grenadines, Surinam, Taiwan, Trinidad and Tobago, USA, Venezuela, Virgin Islands.



# Troubleshooting

If you have a problem with your camcorder, refer to this checklist. Consult your dealer or a Canon Service Center if the problem persists.

**E**

## Power Source

Problem	Cause	Solution	📖
Camcorder will not turn on.	Battery pack is exhausted.	Replace or charge the battery pack.	16
	Battery pack is not correctly attached.	Attach the battery pack correctly.	16
The camcorder switches off by itself.	Battery pack is exhausted.	Replace or charge the battery pack.	16
	Power save function has been activated.	Turn on the camcorder.	28
Cassette compartment will not open.	Battery pack is exhausted.	Replace or charge the battery pack.	16
	Cassette compartment cover is not fully open.	Open the cassette compartment cover fully.	22
Cassette compartment stopped during loading/unloading.	Battery pack is exhausted.	Replace or charge the battery pack.	16
	The camcorder malfunctions.	Consult a Canon Service Center.	–
LCD/viewfinder switches on and off.	Battery pack is exhausted.	Replace or charge the battery pack.	16

## Recording/Playback

Buttons will not work.	Camcorder is not turned on.	Turn on the camcorder.	28
	Cassette is not loaded.	Load a cassette.	22
🔊 flashes on the screen.	Battery pack is exhausted.	Replace or charge the battery pack.	16
🌫️ flashes on the screen.	Condensation is detected.	See reference page.	143
“Remove the cassette” appears on the screen.	Camcorder stopped operating to protect the tape.	Unload and reload the cassette.	22
The wireless controller will not work.	Camcorder and wireless controller are not set to the same remote sensor mode.	Change the remote sensor modes.	49
	Batteries of the wireless controller are exhausted.	Replace the batteries.	24



## Recording

Problem	Cause	Solution	📖
Image will not appear on the screen.	Camcorder is not set to CAMERA mode.	Set the camcorder to CAMERA mode.	28
“Set the time zone, date and time” appears on the screen.	Time zone, date and time are not set, or the backup battery is exhausted.	Set the time zone, date and time, or replace the backup battery and reset the date and time.	25
Pressing the start/stop button will not start recording.	Camcorder is turned off.	Turn on the power.	28
	Cassette is not loaded.	Load a cassette.	22
	Tape reached the end (END flashes on the screen).	Rewind the tape or replace the cassette.	22
	Cassette is protected (protect flashes on the screen).	Replace the tape or change the position of the protect switch.	23
	Camcorder is set to a mode other than the CAMERA mode.	Set the camcorder to CAMERA mode.	28
Camcorder will not focus.	Autofocus does not work on that subject.	Focus manually.	75
	Viewfinder is not adjusted.	Adjust the viewfinder with the diopter adjustment lever.	20
	Lens is dirty.	Clean the lens.	141
A vertical light bar appears on the screen.	Bright light in a dark scene may cause a vertical light bar (smear) to appear. This is not a malfunction.	---	-
Sound is distorted or recorded in a lower volume than the actual volume.	When recording near loud sound (such as fireworks, drums or concerts), sound may become distorted or may not be recorded in the actual sound level. This is not a malfunction.	---	-
Viewfinder picture is blurred.	Viewfinder is not adjusted.	Adjust the viewfinder with the diopter adjustment lever.	20

## Playback


Pressing the playback button does not start playback.	Camcorder is turned off, or is not set to PLAY (VCR) mode.	Set the camcorder to PLAY (VCR) mode.	37
	Cassette is not loaded.	Load a cassette.	22
	Tape reached the end (END flashes on the screen).	Rewind the tape.	37
Image will not appear on the TV screen.	[AV/PHONES] is set to [PHONES] in the menu.	Set [AV/PHONES] to [AV] in the menu.	39
	[AV → DV OUT] is set to [ON].	Set [AV → DV OUT] to [OFF].	93
Tape is running, but image will not appear on the TV screen.	TV/VIDEO selector on the TV is not set to VIDEO.	Set the selector to VIDEO.	42
	Video heads are dirty.	Clean the video heads.	142
	You attempted to play back or dub copyright protected tape.	Stop playback/dubbing.	91
No sound from the built-in speaker.	Speaker volume is turned off.	Adjust the volume with the selector dial.	40

**ZR70 MC ZR65 MC Memory Card Operation**

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>	
Memory card cannot be inserted.	Memory card was not facing the correct direction.	Turn the memory card over and reinsert it.	100
Memory card cannot be recorded.	Memory card is full.	Replace the memory card or erase images.	115
	Memory card is not formatted.	Format the memory card.	128
	Memory card is not inserted.	Insert a memory card.	100
	File number reached maximum value.	Set [FILE NUMBERS] to [RESET] and insert a new memory card.	102
	SD Memory Card is protected.	Change the position of the protect switch.	100
Memory card cannot be played back.	Camcorder is not set to CARD PLAY (VCR) mode.	Set the camcorder to CARD PLAY (VCR) mode.	111
	Memory card is not inserted.	Insert a memory card.	100
Image cannot be erased.	Image is protected.	Cancel the protection.	114
	SD memory card is protected.	Change the position of the protect switch.	100
 flashes red.	Card error occurred.	Turn off the camcorder. Remove and reinsert the memory card. Format the memory card if flashing persists.	128

# System Diagram (Availability differs from area to area)

E

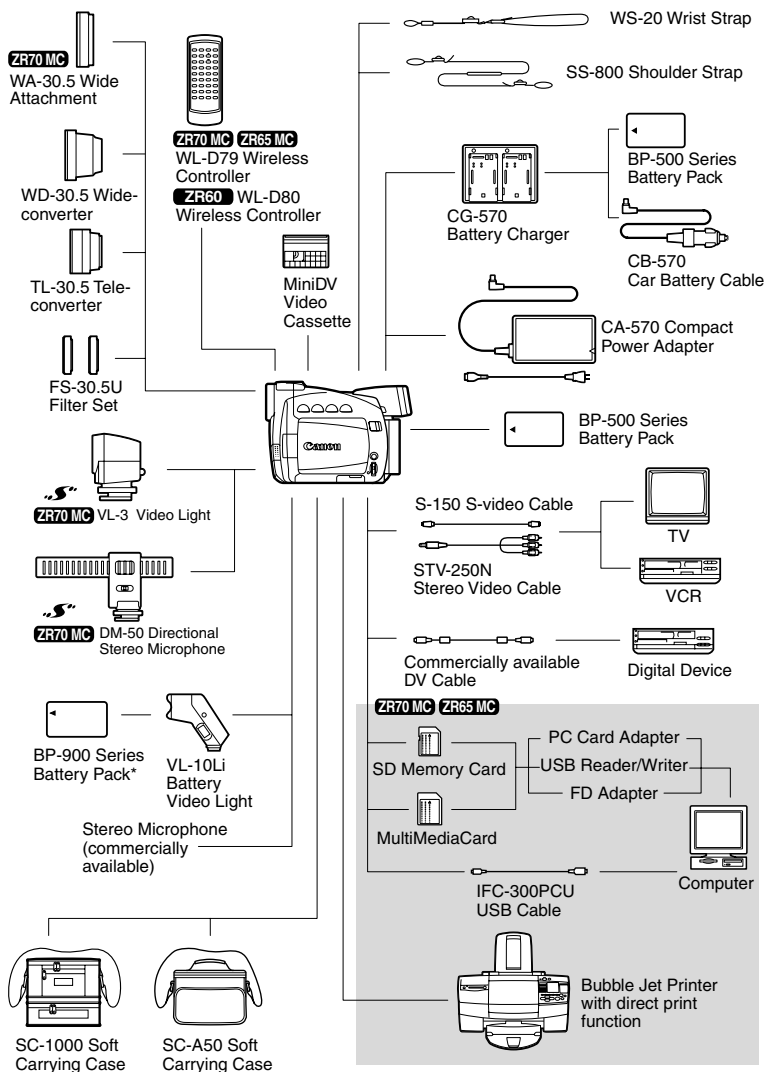

Additional Information

\* Charging with the CA-920 Compact Power Adapter or CH-910 Dual Battery Charger/Holder (both optional)


## Optional Accessories

Call or visit your local retailer/dealer for genuine Canon video accessories. You can also obtain genuine accessories for your Canon camcorder by calling: 1-800-828-4040, Canon U.S.A. Information Center.

E


### BP-500 Series Battery Packs

When you need extra battery packs, select from the following: BP-511, BP-512, BP-522 or BP-535.

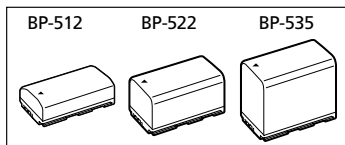

### CG-570 Battery Charger


The battery charger can be used with the supplied CA-570 Compact Power Adapter or the optional CB-570 Car Battery Cable to charge BP-500 series battery packs.

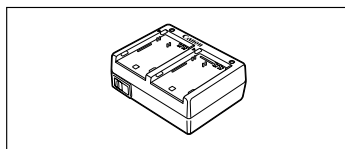

Battery Pack	Charging Time
BP-508 (ZR65 MC/ZR60)	55 min.
BP-512 (ZR70 MC/Optional)	95 min.
BP-511 (Optional)	95 min.
BP-522 (Optional)	140 min.
BP-535 (Optional)	205 min.

### CB-570 Car Battery Cable


Use the car battery cable with the CG-570 Battery Charger to charge battery packs on the move. The car battery cable plugs into your car's cigarette lighter and runs off a 12-24 V DC negative ground battery.

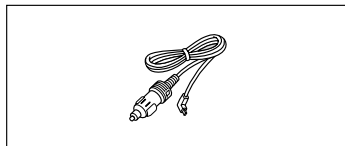

### TL-30.5 Tele-converter


This tele-converter lens increases the focal length of the camcorder lens by a factor of 1.9.

- The image stabilizer is not as effective when the tele-converter is attached.
- The image quality may be degraded at the telephoto side.
- The minimum focusing distance with the Tele-converter is 13.1 ft (4 m); 1.6 in. (4 cm) on maximum wide angle.

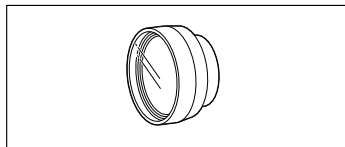


**WD-30.5 Wide-converter**

This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views.

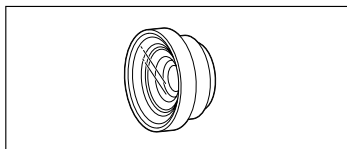
**FS-30.5U Filter Set**

Neutral density and MC protector filters help you to control difficult lighting conditions.

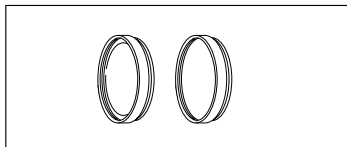
**VL-10Li Battery Video Light**

This compact yet powerful video light can be used for both indoor and outdoor shooting. The video light is powered by BP-900 series battery packs.


- Approximate usage time: BP-915: 60 min., BP-930: 120 min., BP-945: 170 min.
- BP-900 series battery packs are charged with the CA-920 Compact Power Adapter (optional).

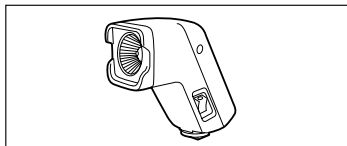**ZR70 MC VL-3 Video Light**


This video light enables you to record brightly in color even in dark places. It attaches to the camcorder's advanced accessory shoe for cable-free operation.

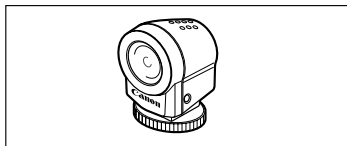**ZR70 MC DM-50 Directional Stereo Microphone**

This highly sensitive, super-directional microphone attaches to the camcorder's advanced accessory shoe. It can be used as directional microphone (monaural) or stereo microphone.

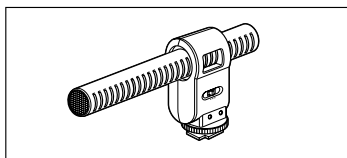
**WS-20 Wrist Strap**

Use this for extra additional protection for active shooting.

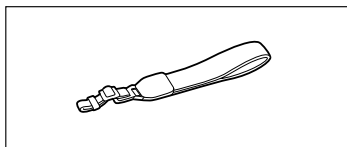

## SC-1000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.

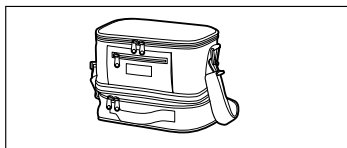

E

## SC-A50 Soft Carrying Case

This lightweight bag keeps the camcorder within easy reach without weighing you down or getting in the way.



This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



### Provided Accessories:

WL-D79 Wireless Controller (ZR70 MC/ZR65 MC)	D83-0622-000
WL-D80 Wireless Controller (ZR60)	D83-0652-000
SS-800 Shoulder Strap	D81-1430-000
Lens Cap	D52-0220-000
CA-570 Compact Power Adapter	8468A002AA
BP-512 Battery Pack (ZR70 MC)	6760A002AA
BP-508 Battery Pack (ZR65 MC/ZR60)	D85-1360-000
STV-250N Stereo Video Cable	3067A002AA (D82-0590-201)
IFC-300PCU USB Cable (ZR70 MC/ZR65 MC)	6906A001AA
WA-30.5 Wide Attachment	D55-0170-000

### Optional Accessories:

BP-511 Battery Pack	3055A002AA (D85-1112-201)
BP-522 Battery Pack	3174A002AA (D85-1122-201)
BP-535 Battery Pack	6741A002AA
SC-1000 Soft Carrying Case	3083A002AA (D81-1200-201)
SC-A50 Soft Carrying Case	D81-1302-201
WD-30.5 Wide-converter	6739A002AA
TL-30.5 Tele-converter	6740A002AA
F-30.5U Filter Set	6738A002AA
DM-50 Directional Stereo Microphone	3176A002AA (D84-0120-201)
VL-3 Video Light	3175A002AA (D86-0121-201)
VL-10Li Battery Video Light	3140A002AA (D86-0081-201)
JR 7.2V 10WF Halogen Bulb	3141A002AA (D86-0090-201)
WS-20 Wrist Strap	3118A002AA (D81-0190-202)
DVM-CL DV Cleaning Cassette	3134A002AA (D36-0032-201)

# Specifications

**E**

## ZR70 MC/ZR65 MC/ZR60

<b>Power supply (rated):</b>	7.4 V DC
<b>Power consumption (AF turned on):</b>	2.9 W (Using viewfinder), 3.8 W (Using LCD screen)
<b>Television system:</b>	EIA standard (525 lines, 60 fields) NTSC color signal
<b>Video recording system:</b>	2 rotary heads, helical scanning DV system (Consumer digital VCR SD system); Digital component recording
<b>Audio recording system:</b>	PCM digital sound: 16 bit (48 kHz/2 ch); 12 bit (32 kHz/4 ch)
<b>Image sensor:</b>	1/6" CCD (charge coupled device), approx. 680,000 pixels (Effective pixels: tape: approx. 340,000 pixels, card*1: approx. 447,000 pixels)
<b>Tape format:</b>	Videocassettes bearing the "MiniDV" mark.
<b>Tape speed:</b>	SP: 0.74 ips (18.81 mm/s), LP: 0.49 ips (12.56 mm/s)
<b>Maximum recording time (80 min. cassette):</b>	SP: 80 min., LP: 120 min.
<b>Fast forward/rewind time:</b>	Approx. 2 min. 20 sec. (with a 60 min. cassette)
<b>Lens:</b>	ZR70 MC: F1.6-3.6, 22x power zoom, f=2.8-61.6 mm; ZR65 MC: F1.6-3.2, 20x power zoom, f=2.8-56 mm; ZR60 MC: F1.6-2.9, 18x power zoom, f=2.8-50.4 mm
<b>Focusing system:</b>	TTL autofocus, manual focusing possible
<b>Minimum focusing distance:</b>	3.3 ft. (1 m), 0.39 in. (1 cm) on maximum wide angle
<b>Maximum shutter speed:</b>	1/2,000 sec. (1/250 sec. when using a memory card)
<b>Minimum illumination:</b>	1.6 lx (using the Night mode in CAMERA mode)
<b>Recommended illumination:</b>	More than 100 lx
<b>Filter diameter:</b>	30.5 mm
<b>Viewfinder:</b>	0.33 in., TFT color LCD, approx. 113,000 pixels
<b>LCD screen:</b>	2.5 in., TFT color, approx. 112,000 pixels
<b>Microphone:</b>	Stereo electret condenser microphone
<b>Recording media*1:</b>	SD Memory Card, MultiMediaCard
<b>Number of recording pixels*1:</b>	Still image: 1024 x 768, 640 x 480 pixels Movie*2: 320 x 240 pixels (approx. 10 sec.), 160 x 120 pixels (approx. 30 sec.), 15 frames/sec. The figures in brackets represent the maximum length of one movie clip.
<b>Estimated SD Memory Card SDC-8M capacities*1:</b>	1024 x 768: Superfine: 14 images/Fine: 20 images/Normal 39 images; 640 x 480: Superfine: 35 images/Fine 52 images/Normal 86 images
	The actual number varies according to the images. Sample images recorded on the supplied SD Memory Card are to be included in the total number.
<b>File format*1:</b>	Design rule for Camera File system (DCF), Exif 2.2 compliant, Digital Print Order Format (DPOF) compliant (still images only)
	This camcorder supports Exif 2.2 (also called "Exif Print"). Exif Print is a standard for enhancing the communication between camcorders and printers. By connecting to an Exif Print-compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints.
<b>Image format*1:</b>	Still image: JPEG (Compression mode: Superfine, Fine, Normal), Movie: Motion JPEG

\*1 ZR70 MC/ZR65 MC only \*2 ZR70 MC only



<b>USB terminal*1:</b>	mini-B
<b>DV terminal input/output:</b>	Special 4-pin connector (IEEE 1394 compliant)
<b>AV terminal input/output:</b>	ø3.5 mm minijack Audio input: -10 dBV/40 kohms or more Audio output: -10 dBV (47 kohm load)/3 kohms or less Video: 1 Vp-p/75 ohms unbalanced
<b>S-video terminal input/output:</b>	1 Vp-p/75 ohms (Y signal), 0.286 Vp-p/75 ohms (C signal)
<b>MIC terminal input:</b>	ø3.5 mm stereo mini-jack -57 dBV (with 600 ohm mic)/5 kohms or more
<b>Headphone terminal:</b>	ø3.5 mm stereo minijack
<b>Operating temperatures:</b>	32 – 104°F (0 – 40°C)
<b>Dimensions:</b>	4.1 × 2.3 × 5.8 in. (103 × 58 × 147 mm)
<b>Weight:</b>	ZR70 MC: 1.2 lb. (525 g), ZR65 MC/ZR60: 1.2 lb. (520 g)

\*1 ZR70 MC/ZR65 MC only

## CA-570 Compact Power Adapter

<b>Power supply:</b>	100 – 240 V AC, 50/60 Hz
<b>Power consumption:</b>	17 W
<b>Rated output:</b>	8.4 V DC, 1.5 A
<b>Operating temperature:</b>	32 – 104°F (0 – 40°C)
<b>Dimensions:</b>	2.1 × 3.5 × 1.1 in. (52 × 90 × 29 mm)
<b>Weight:</b>	4.8 oz. (135 g)

## BP-512/BP-508 Battery Pack

<b>Battery type:</b>	Rechargeable Lithium Ion Battery
<b>Rated voltage:</b>	7.4 V DC
<b>Operating temperature:</b>	32 – 104°F (0 – 40°C)
<b>Battery capacity:</b>	BP-512: 1100 mAh, BP-508: 800 mAh
<b>Dimensions:</b>	1.5 × 0.83 × 2.2 in. (38 × 21 × 55 mm)
<b>Weight:</b>	BP-512: 2.5 oz. (70g), BP-508: 2.3 oz. (65g)

## SDC-8M SD Memory Card

<b>Capacity:</b>	8 MB
<b>Interface:</b>	SD Memory Card standard
<b>Operating temperature:</b>	32 – 104°F (0 – 40°C)
<b>Dimensions:</b>	1.3 × 0.94 × 0.08 in. (32 × 24 × 2.1 mm)
<b>Weight:</b>	0.07 oz. (2 g)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

# Index

E

12bit audio	98
16:9 wide screen	52
6-second auto date	84

## A

Abroad, using the camcorder	144
Accessories	9, 149
Accessory shoe	150
Advanced accessory shoe *1	73
Analog line-in	89
Analog-digital converter	92
Assist lamp *1	59
Audio dubbing	96
Audio mode	71
Auto	57
Autofocus	75
AV insert	94
AV→DV	92
AV/headphones terminal	39, 41

## B

Backup battery	19
Battery charger	149
Battery pack	16
Beep	52
Brightness	33

## C

Card animation *2	123
Card mix *2	122
Computer	99, 129
Condensation	143
Connections - TV	41
Connections - VCR	41
Copyright signals	91
Copying still images*2	126

## D

Data code	83
Date and time	25
Date search	85
Demo mode	53
Digital effects	61

Digital zoom	30
Direct print function *2	118
DV dubbing	90
DV terminal	88, 99

## E

Easy recording	57
Effects	65
Erasing still images *2	115
Exposure	77

## F

Faders	62
Fast forward	37
File numbers *2	103
Focusing	75
Formatting *2	128

## G

Grip belt	20
-----------	----

## H

Headphones	39
------------	----

## I

Image quality *2	101
Image stabilizer	69
Index screen *2	112

## L

LCD mirror mode	33
LCD screen	32
Lens cap	20
Light-up buttons *1	51
Low light mode	58
Low light plus mode *1	59
LP mode	54

## M

Magnifying the image	82
Maintenance	141
Manual focus	75
Memory card *2	101

\*1 ZR70 MC, \*2 ZR70 MC ZR65 MC

Menus . . . . .	44	Search select . . . . .	85
Microphone . . . . .	71	Self-timer . . . . .	70
MIC terminal . . . . .	71	Shutter sound *2 . . . . .	105
Movie size *1 . . . . .	102	Shutter speed . . . . .	78
MultiMediaCard *2 . . . . .	101	Slide show *2 . . . . .	112
Multi-image screen . . . . .	67	SP mode . . . . .	54
My Camera settings . . . . .	50	Speaker . . . . .	39
		Sports mode . . . . .	58
<b>N</b>		Spotlight mode . . . . .	58
Night mode . . . . .	59	Still image quality *2 . . . . .	101
		Still image size *2 . . . . .	101
<b>O</b>		Stitch Assist mode *2 . . . . .	107
Output channel . . . . .	43	Super Night mode *1 . . . . .	59
		S-video/S1-video . . . . .	41
<b>P</b>			
Photo search . . . . .	85	<b>T</b>	
Playback - Memory card *2 . . . . .	111	Tape protection . . . . .	23
Playback - Tape . . . . .	37	Telephoto . . . . .	30
Playback pause . . . . .	38	Time code . . . . .	86
Portrait mode . . . . .	58	Time zone . . . . .	25
Power adapter . . . . .	15	Tripod . . . . .	36
Print order *2 . . . . .	116	Troubleshooting . . . . .	145
Protect *2 . . . . .	114	TV Screen . . . . .	41, 134
<b>R</b>		<b>U</b>	
Recording to a VCR . . . . .	87	USB terminal *2 . . . . .	129
Record pause mode . . . . .	29		
Record review . . . . .	35	<b>V</b>	
Record search . . . . .	35	Video . . . . .	41
Recording Movies (tape) . . . . .	28	Video heads . . . . .	142
Recording Movies (memory card) *1 . . . . .	109	Video ID-1 system . . . . .	41
Recording Still Images (tape) . . . . .	55	Video light . . . . .	73, 150
Recording Still Images (memory card) *2 . . . . .	104	Videocassettes . . . . .	22
Recording programs . . . . .	57	Viewfinder . . . . .	20
Remote sensor . . . . .	24		
Rewind . . . . .	37	<b>W</b>	
		White balance . . . . .	80
<b>S</b>		Wide screen . . . . .	52
S1 video terminal . . . . .	41	Wireless controller . . . . .	24
Sample images *2 . . . . .	132		
Sand & Snow mode . . . . .	58	<b>Z</b>	
Screen displays . . . . .	134	Zero set memory . . . . .	86
SD Memory Card *2 . . . . .	101	Zooming . . . . .	30

U.S.A.

E

## CANON® ZR70 MC/ZR65 MC/ZR60 DIGITAL VIDEO CAMCORDER LIMITED WARRANTY

The limited warranty set forth below is given by Canon U.S.A., Inc. ("CUSA") with respect to each Canon ZR70 MC/ZR65 MC/ZR60 Digital Video Camcorder ("DV Camcorder") purchased and used in the United States.

Each Canon DV Camcorder, when delivered to you in new condition in its original container, is warranted against defective material or workmanship as follows: for a period of one (1) year from the date of original purchase (three (3) months in the case of the video head part), defective parts or DV Camcorders returned to a CUSA factory service center ("CUSA Center") or an authorized DV Camcorder service facility ("Service Facility"), and proven to be defective upon inspection, will be repaired or exchanged for new or comparable rebuilt parts or DV Camcorders. The warranty period for repaired or replacement parts or DV Camcorders shall begin upon shipment of the same, but shall in no event exceed the original warranty period of the defective part or DV Camcorder.

**Non-Canon brand peripheral equipment and software which may be distributed with Canon DV Camcorders are sold "AS IS", without warranty of any kind by CUSA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such non-Canon brand items is given by the manufacturer or producer thereof.**

CUSA shall have no responsibility under this limited warranty for use of Canon DV Camcorders in conjunction with incompatible peripheral equipment and incompatible software.

In order to obtain warranty service, contact the authorized Canon retail dealer from whom you purchased the DV Camcorder or call the CANON INFORMATION CENTER AT 1-800-828-4040 (which is open from 9:00 a.m. to 5:00 p.m. (E.S.T.), Monday through Friday, excluding holidays). Have your unit serial number and your date of purchase available when you make the call to expedite service. In either case you will be directed to ship the DV Camcorder, postage prepaid, to the CUSA Center or Service Facility nearest to you. You must include a copy of the proof of purchase (bill of sale) and a complete explanation of the problem. DV Camcorders covered by this limited warranty will be repaired and returned to you without charge by the CUSA Center or the Service Facility. Repairs not under warranty will be at such cost as the CUSA Center or Service Facility may from time to time generally establish.

This limited warranty covers all defects encountered in normal use of the DV Camcorder, and does not apply in the following cases:

- Loss of or damage to the DV Camcorder due to abuse, mishandling, improper packaging by you, alteration, accident, leaking batteries, exterior nicks, scratches or dents, electrical current fluctuations, failure to follow operating instructions, maintenance and environmental instructions prescribed in CUSA's instruction manual, or service performed by other than a CUSA Center or Service Facility.
- Use of parts or supplies (other than those sold by CUSA) which cause damage to the DV Camcorder or cause abnormally frequent service calls or service problems.
- If any DV Camcorder has had its serial number or dating altered or removed.

This limited warranty does not apply to accessories or consumables for the DV Camcorder, which are sold "AS IS", without warranty of any kind by CUSA.

**NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE DV CAMCORDER AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THE DV CAMCORDER SHALL BIND CUSA. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU) CUSA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE DV CAMCORDER, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CUSA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CUSA BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE DV CAMCORDER SOLD BY CUSA AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE THE DV CAMCORDER NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CUSA. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF ANY DV CAMCORDER, OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT, AND STATES YOUR EXCLUSIVE REMEDY.**

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Canon U.S.A., Inc.  
One Canon Plaza  
Lake Success, New York 11042

**CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY**

The limited warranty set forth below is given by Canon Canada Inc. ("Canon Canada") with respect to Canon digital video equipment purchased in Canada. This limited warranty is only effective upon presentation of a bill of sale or other proof of purchase for this Canon digital video equipment to a Canon Service Facility when repairs are required.

Canon consumer video digital equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

**Parts:** Defective parts will be exchanged for new parts or, at Canon Canada's option, comparable rebuilt parts for a period of one year from the date of original purchase, except Video Heads which will be exchanged for a period of 3 months from the date of purchase.

**Labour:** For a period of one year from the date of original purchase, labour will be provided free of charge by our Canon Service Facilities in Canada.

This limited warranty covers all defects except where:

(a) The loss or damage to the product results from:

- i) accident, natural disaster, mishandling, abuse, neglect, unauthorized product modification or failure to follow instructions contained in the instruction manual;
- ii) the use of accessories, attachments, products, supplies, parts or devices with this Canon product that do not conform to Canon specifications or that cause abnormally frequent service problems;
- iii) repairs or services performed by any party other than a Canon Service Facility;
- iv) defective batteries or any exposure to water, sand or dirt;
- v) shipping (claim must be presented to the shipper);

(b) Any serial number on the video equipment is altered or removed.

(c) The digital video equipment is used for commercial, professional or industrial purposes.

This limited warranty does not cover the cabinet (exterior finish) of the digital video equipment, video cassette tapes, head cleanings, nor does it apply to digital video equipment purchased outside Canada.

**TO OBTAIN WARRANTY SERVICE**

Ship your Canon digital video equipment in its original carton, box or equivalent, properly packed, fully insured with shipping charges prepaid, together with a copy of your bill of sale or other proof of purchase and a description of the problem to any of the Canon Service Facilities in Canada.

**LIMITATIONS**

Except as otherwise required by applicable legislation, this warranty is in lieu of all other warranties, conditions, guarantees or representations, express or implied, statutory or otherwise, relative to this Canon product, including implied warranties or conditions of merchantability or fitness for a particular purpose.

Canon Canada assumes no liability for special, consequential or incidental damages or loss that may arise, whether on account of negligence or otherwise, from the use, misuse or inability to use this Canon product (including loss of profit, revenue, video tapes or enjoyment) or from failure to conform to any express or implied warranties, conditions, guarantees or representations. Any recovery under this limited warranty shall not exceed the purchase price of the product. Canon Canada does not assume or authorize any other person to assume for Canon Canada any other liability with respect to this Canon product.

This warranty does not extend to any person other than the original purchaser of this Canon product or the person for whom it was purchased as a gift and states your exclusive remedy.

**NOTICE TO CONSUMER**

If you plan to take important videos or if the product has not been used for some time, please check all functions with the instruction book before using it.

# Canon

## CANON INC.

**U.S.A.** ————— **CANON U.S.A., INC. NEW JERSEY OFFICE**  
100 Jamesburg Road, Jamesburg, NJ 08831 USA

**CANON U.S.A., INC. CHICAGO OFFICE**  
100 Park Blvd., Itasca, IL 60143 USA

**CANON U.S.A., INC. LOS ANGELES OFFICE**  
15955 Alton Parkway, Irvine, CA 92618 USA

**CANON U.S.A., INC. HONOLULU OFFICE**  
210 Ward Avenue, Suite 200, Honolulu, HI 96814 USA

- **If you have any questions, call the Canon U.S.A. Information Center toll-free at 1-800-828-4040 (U.S.A. only).**

**CANADA** ————— **CANON CANADA INC. NATIONAL HEADQUARTERS**  
6390 Dixie Road, Mississauga, Ontario L5T 1P7

**CANON CANADA INC. CALGARY**  
2828, 16th Street, N.E. Calgary, Alberta T2E 7K7

**CANON CANADA INC. MONTREAL**  
5990 Côte de Liesse, Quebec H4T 1V7

- **If you have any questions, call the Canon Canada Information Center toll-free at 1-800-828-4040. (Canada only)**

- **Si vous avez des questions, veuillez téléphoner sans frais au Canada 1-800-828-4040. (Canada seulement)**

**MEXICO** ————— **CANON MEXICANA, S. DE R.L. DE C.V.**  
Periferico Sur No. 4124 Col. Ex-Rancho de Anzaldo C.P. 01900  
México, D.F., México

**CENTRO Y SURAMÉRICA** ————— **CANON LATIN AMERICA, INC.**  
703 Waterford Way Suite 400 Miami, FL 33126 USA

**ASIA** ————— **CANON HONGKONG COMPANY LTD.**  
9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong



Printed on 100% reused paper.  
Document réalisé avec du papier recyclé à 100%.  
El papel aqui utilizado es 100% reciclado.