



## ***User's Guide***

*for Kyocera 2100 Series Phones*



***en***

80-B7732-1ES, Rev. A

[www.kyocera-wireless.com](http://www.kyocera-wireless.com)

## User's Guide for Kyocera 2100 Series Phones

This manual is based on the production versions of Kyocera 2100 Series phones. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. patents:

4,901,307	5,056,109	5,099,204	5,101,501	5,103,459
5,107,225	5,109,390	5,193,094	5,228,054	5,257,283
5,265,119	5,267,261	5,267,262	5,280,472	5,283,536
5,289,527	5,307,405	5,309,474	5,337,338	5,339,046
5,341,456	5,383,219	5,392,287	5,396,516	D356,560
5,408,697	5,414,728	5,414,796	5,416,797	5,426,392
5,437,055	D361,065	5,442,322	5,442,627	5,452,473
5,461,639	5,469,115	5,469,471	5,471,497	5,475,870
5,479,475	5,483,696	5,485,486	5,487,175	5,490,165
5,497,395	5,499,280	5,504,773	5,506,865	5,509,015
5,509,035	5,511,067	5,511,073	5,513,176	5,515,177
5,517,323	5,519,761	5,528,593	5,530,928	5,533,011
5,535,239	5,539,531	5,544,196	5,544,223	5,546,459
5,548,812	5,559,881	5,559,865	5,561,618	5,564,083
5,566,000	5,566,206	5,566,357	5,568,483	5,574,773
5,574,987	D375,740	5,576,662	5,577,022	5,577,265
D375,937	5,588,043	D376,804	5,589,756	5,590,069
5,590,406	5,590,408	5,592,548	5,594,718	5,596,570
5,600,754	5,602,834	5,602,833	5,603,096	5,604,459
5,604,730	5,608,722	5,614,806	5,617,060	5,621,752
5,621,784	5,621,853	5,625,876	5,627,857	5,629,955
5,629,975	5,638,412	5,640,414	5,642,398	5,644,591
5,644,596	5,646,991	5,652,814	5,654,979	5,655,220
5,657,420	5,659,569	5,663,807	5,666,122	5,673,259
5,675,581	5,675,644	5,680,395	5,687,229	D386,186
5,689,557	5,691,974	5,692,006	5,696,468	5,697,055
5,703,902	5,704,001	5,708,448	5,710,521	5,710,758
5,710,768	5,710,784	5,715,236	5,715,526	5,722,044
5,722,053	5,722,061	5,722,063	5,724,385	5,727,123
5,729,540	5,732,134	5,732,341	5,734,716	5,737,687

5,737,708	5,742,734	D393,856	5,748,104	5,751,725
5,751,761	5,751,901	5,754,533	5,754,542	5,754,733
5,757,767	5,757,858	5,758,266	5,761,204	5,764,687
5,774,496	5,777,990	5,778,024	5,778,338	5,781,543
5,781,856	5,781,867	5,784,406	5,784,532	5,790,589
5,790,632	5,793,338	D397,110	5,799,005	5,799,254
5,802,105	5,805,648	5,805,843	5,812,036	5,812,094
5,812,097	5,812,538	5,812,607	5,812,651	5,812,938
5,818,871	5,822,318	5,825,253	5,828,348	5,828,661
5,835,065	5,835,847	5,839,052	5,841,806	5,842,124
5,844,784	5,844,885	5,844,899	5,844,985	5,848,063
5,848,099	5,850,612	5,852,421	5,854,565	5,854,786
5,857,147	5,859,612	5,859,838	5,859,840	5,861,844
5,862,471	5,862,474	5,864,760	5,864,763	5,867,527
5,867,763	5,870,427	5,870,431	5,870,674	5,872,481
5,872,774	5,872,775	5,872,823	5,877,942	5,878,036
5,870,631	5,881,053	5,881,368	5,884,157	5,884,193
5,884,196	5,892,178	5,892,758	5,892,774	5,892,816
5,892,916	5,893,035	D407,701	5,898,920	5,903,554
5,903,862	D409,561	5,907,167	5,909,434	5,910,752
5,911,128	5,912,882	D410,893	5,914,950	5,915,235
5,917,708	5,917,811	5,917,812	5,917,837	5,920,284
D411,823	5,923,650	5,923,705	5,926,143	5,926,470
5,926,520	5,926,786	5,930,230	5,930,692	

Other patents pending.

T9 Text Input is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554, Canadian Pat. 1,331,057 and patents pending worldwide.

Kyocera is a registered trademark of Kyocera Corporation. QCP is a trademark of Kyocera Wireless Corp. Brick Attack is a trademark of Kyocera Wireless Corp. Openwave is a registered trademark of Openwave Systems Incorporated. T9 is a registered trademark of Tegic Communications, Inc. Other product and brand names may be trademarks or registered trademarks of their respective owners.

Copyright © 2001 Kyocera Wireless Corp. All rights reserved. Printed in the United States of America.

80-B7732-1ES, Rev. A

## FCC/IC Notice for Kyocera 2119

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC radiation exposure requirements, use of this device for body-worn operational configurations is limited to accessories tested and approved by Kyocera Wireless Corp. Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 26.7mm separation distance including the antenna and the user's body. Other accessories that have not been tested for body-worn SAR may not comply with FCC radiation exposure limits and should be avoided.

### **THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set

by the FCC is 1.6W/kg.\* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.39 W/kg and when worn on the body, as described in this user guide, is 0.649 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID OVFKWC-2119.

## **FCC/IC Notice for Kyocera 2135**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC radiation exposure requirements, use of this device for body-worn operational configurations is limited to accessories tested and approved by Kyocera Wireless Corp. Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 26.7mm separation distance including the antenna and the user's body. Other accessories that have not been tested for body-worn SAR may not comply with FCC radiation exposure limits and should be avoided.

### **THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set

by the FCC is 1.6W/kg.\* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.33 W/kg and when worn on the body, as described in this user guide, is 0.77 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID OVFKWC-2135.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

### **Caution**

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

### **Warning**

Use only Kyocera approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

### **Optimize your phone's performance**

Use the guidelines on pages 1 and 10 to learn how to optimize the performance and life of your phone, antenna, and battery.

### **Air bags**

If you have an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

### **Potentially unsafe areas**

**Posted facilities**—Turn your phone off in any facility when posted notices require you to do so.

**Aircraft**—FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off before boarding aircraft.

**Vehicles**—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

**Blasting areas**—Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

**Potentially explosive atmospheres**—Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

## Use with care

Use only in normal position (to ear). Don't bend the antenna or touch it unnecessarily. Pull out the antenna when on a call and push it in when the phone is not in use. Avoid dropping, hitting, bending, or sitting on the phone.

## Keep phone dry

If the phone gets wet, turn the power off immediately and return it to the dealer for service.

## Resetting the phone

If the screen seems frozen and the keypad does not respond to keypresses, reset the phone by completing the following steps (see page 1 for detailed instructions):

1. Remove the battery door.
2. Remove and replace the battery.

If the problem persists, return the phone to the dealer for service.

## Qualified service

See "Frequently Asked Questions" on page 38 if you are experiencing problems with your phone.

If you have additional questions, contact your service provider for technical support. If the problem persists, return the phone with all accessories and packaging to the dealer for qualified service.

## Accessories

Use only Kyocera-approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

To shop online for a Hands-free Car Kit and other phone accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store).

To order by phone, call (800) 211-1537 (U.S.A. only) or (510) 683-4004.

## Radio frequency (RF) energy

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- ANSI C95.1 (American National Standards Institute, 1992)
- NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)
- ICNIRP (International Commission on Non-Ionizing Radiation Protection, 1996)

Your phone complies with the standards set by these reports and the FCC guidelines.



**093 453 037**

### **Kyocera Wireless Corp.**

10300 Campus Point Drive  
San Diego, CA 92121 U.S.A.

Visit us at [www.kyocera-wireless.com](http://www.kyocera-wireless.com)

To purchase accessories, visit  
[www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store)

# CONTENTS

---

<b>1</b>	<b>Getting Started</b> .....	<b>1</b>	Display .....	26	
	Installing the battery .....	1	Security .....	27	
	Removing the battery .....	1	Call Information .....	28	
	Getting to know your phone .....	2	Network .....	29	
	Screen icons .....	3	Extras .....	30	
	Menus .....	4	Messaging .....	31	
	Basic functions .....	5	Convenience features .....	33	
<b>2</b>	<b>Battery</b> .....	<b>9</b>	<b>6</b>	<b>Tools</b> .....	<b>34</b>
<b>3</b>	<b>Contacts</b> .....	<b>11</b>	Alarm Clock .....	34	
	Working with contacts .....	11	Tip Calculator .....	34	
	Speed dialing and 1-Touch Dialing .....	13	Calculator .....	34	
	Working with the Recent Calls list .....	14	Countdown Timer .....	35	
	Entering letters, numbers, and symbols ..	15	Stopwatch .....	35	
<b>4</b>	<b>Messages</b> .....	<b>18</b>	Brick Attack™ .....	35	
	Retrieving messages .....	18	<b>7</b>	<b>Web Browser</b> .....	<b>36</b>
	Sending messages .....	19	Using the Web Browser .....	36	
	Message delivery options .....	21	Indicators and alerts .....	37	
	Erasing messages .....	22	<b>8</b>	<b>Frequently Asked Questions</b> .....	<b>38</b>
	Troubleshooting messages .....	23	<b>Index</b> .....	<b>40</b>	
<b>5</b>	<b>Settings</b> .....	<b>24</b>			
	Silence All .....	25			
	Keyguard .....	25			
	Sounds .....	25			

# 1 GETTING STARTED

 
---

This document describes the Kyocera 2135 trimode phone, with CDMA digital service at 800 MHz and 1900 MHz, and analog service at 800 MHz; and the Kyocera 2119 single-mode phone, with CDMA digital service at 1900 MHz. For additional information, visit [www.kyocera-wireless.com](http://www.kyocera-wireless.com)

## Installing the battery

1. Hold the phone face down.
2. Place the battery with the metal contacts facing down and towards the bottom of the phone.
3. Align the battery door to the grooves on the side of the phone.
4. Slide the battery door on while pressing down firmly, ensuring that the battery door clicks into place. Repeat if the battery door is not aligned.


**Do not force.**





5. Connect the AC Adapter to the proper jack on the bottom of the phone, then connect the adapter's plug to a wall outlet. **Fully charge the battery before using the phone** (for more information, see page 9).




## Removing the battery

  
1. Turn off the phone by holding down  until "Powering off" appears.
2. Hold the phone face down.
3. Using your thumb, slide the battery door down until it stops.
4. Lift the battery door off the phone.
5. Lift the battery up and out of the phone.





## Getting to know your phone

 - 1 Jack for **Hands-free headset** (sold separately) only.
  - 2 Home screen. Press **OK** to select **Menu**.
  - 3 **OK key** selects a menu item or option.
  - 4 **Navigator key** adjusts volume when in a call; scrolls up, down, left, or right through lists and menus; and positions the cursor during text entry. For more options, see page 7.
  - 5 **Send/Talk key** starts or answers a call.
  - 6 Use the **keypad** to enter numbers, letters, or symbols.
  - 7 **Shift key** changes the text mode in text entry.
  - 8 Fully extend the **antenna** to make or answer a call. Push in the **antenna** completely when the phone is not in use.
  - 9 **Clear key** erases the last character in text entry, or returns to the previous menu.
  - 10 **End/Power key** turns on and turns off the phone, ends a call, or returns to the home screen.
  - 11 **Space key** enters a space during text entry.
  - 12 **0 key** cycles through word choices during T9<sup>®</sup> Text Input rapid text entry (available in English only).
  - 13 Jacks for **AC Adapter** (included) and **data cable** (sold separately).
-  **Warning:** Inserting an accessory into the incorrect jack will damage the phone.

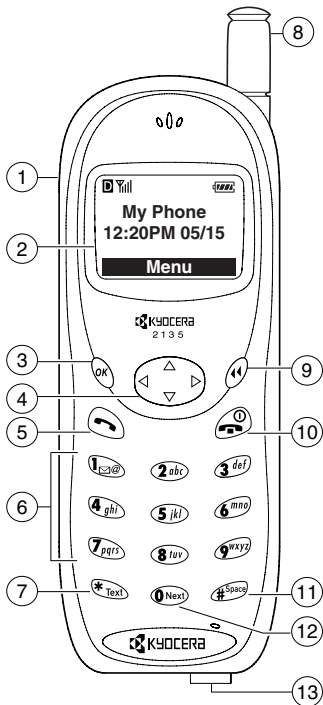

## Screen icons

The following icons may appear on your phone screen:



The phone is operating in CDMA digital mode. If **D** does not appear, the phone is operating in analog mode (2135 only).



The phone is receiving a signal. You can make and receive calls.



The phone is not receiving a signal. You cannot make or receive calls.



A call is in progress.



The alarm clock is set.




The phone vibrates or lights up instead of ringing.



The phone is roaming outside of its home service area.



You have a text message, voicemail, or page. ( indicates an urgent text message, voicemail, or page.)



The battery is fully charged. The more black bars you see, the greater the charge.



Enhanced CDMA voice privacy is on, if available from your service provider, *or* you are in a secure web browser session.




Press  up.



Press  down.



Press  to clear an item.



Enter text using rapid text entry (available in English only).



Enter text using normal alpha text entry.



Capitalize the next letter when entering text.



Capitalize every letter when entering text.



Capitalize the first letter of each word when entering text, or the first letter of each sentence in a text message.






Enter symbols.



Enter numbers.

## Menus

Press  from the home screen to see these menus. Press  left or right to see different menus. To change the appearance of the menus you see when you select **Menu**, refer to page 27. (The menus below appear in **Large Icons** view.) From any menu, press  to select an option.



### Contacts

View All  
Add New  
Find Name  
Speed Dial List  
Business List  
Personal List  
Information



### Messages

Voicemail  
Send New  
Text InBox  
Net Alerts  
Text OutBox  
Filed  
Erase Msgs  
Msg Settings



### Recent Calls



### Settings

Silence All  
Keyguard  
Sounds  
Display  
Security  
Call Information  
Network  
Extras  
Messaging  
Accessories



### Tools

Alarm Clock  
Tip Calculator  
Calculator  
Countdown  
Stopwatch  
Brick Attack










### Phone Info

Phone Number  
Roaming/Service Status (appears only if roaming)



### Web Browser




## Using menus

- From the home screen, press  to select **Menu**, then press  left or right to see menus. (**Note**—If you have **Main Menu View** set to **List Menus**, press  up or down to see menus.)
- Press  to select a menu or menu item.
- Once you have selected a menu, press  up or down to scroll through the menu items.
- Press  to return to the top level of the current menu.
- Press  to return to the home screen.


In this guide, → tells you to select an option from a menu. For example, **Menu** → **Settings** means select **Menu**, then select **Settings**.

## Basic functions

### To turn on the phone

- Press .  appears on the home screen when the phone is turned on and ready to make or receive a call.  appears if the phone is operating in CDMA digital mode.


### To turn off the phone

- Hold down  until “Powering off” appears (about three seconds).


### To find your phone number

- From the home screen, select **Menu** → **Phone Info**. Your phone number appears.


### To make a call

1. Fully extend the antenna.
2. Enter the phone number.
3. Press .



### To end a call

- Press .

### To answer a call




- Press .

## To silence the ringer or alert


- To silence the ringer or stop the vibration alert during an incoming call, press . Press  to answer the call.

**Note**—To silence all sounds and set the phone to vibrate or light up instead of ringing, see “Silence All” on page 25.

## To mute and unmute during a call




- To turn **Mute** on, press  right, then press  to select **Mute**.
- To turn **Mute** off, press  to select **UnMute**.

## To adjust the volume manually

- To adjust the earpiece volume manually during a call, press  up or down.





## To adjust the volume automatically (Smart Sound)

- To set the phone to adjust the earpiece volume automatically based on the amount of noise around you or the other person’s voice volume level:
  - Place a call from a quiet environment.


- Press  up or down to set the volume to a comfortable level.
- Select **Menu** → **Settings** → **Sounds** → **Smart Sound**.
- Select one of the following:
  - Enabled**—Adjust the volume automatically. The volume you have just set is used as a baseline. You can manually adjust the volume during a call.
  - Disabled**—Keep the volume level the same unless you adjust it using .
- Press  to save the setting.

## To access voicemail

For details on how to set up your voicemail and access voicemail messages, contact your service provider. Once your voicemail is set up and you know how to access it, you can do any of the following from the home screen:

- Press and hold .
- Press  → .
- Select **Menu** → **Messages** → **Voicemail** → .

## To lock the keypad





- To protect your phone from accidental keypresses when a call is not in progress, press  left and hold.

## To unlock the keypad


- Press  →  →  in this order.





## To use a shortcut key

Three shortcut keys are automatically programmed into your phone. You can set up the fourth shortcut key yourself by following the steps in “To create a shortcut key.” To use a shortcut key from the home screen, do the following:


- Press  right and hold to silence all sounds (see “Silence All” on page 25).
- Press  down to view the Contacts list.
- Press  left and hold to lock the keypad.
- Press  up to access a predefined shortcut key (see “To create a shortcut key”).

## To create a shortcut key


You can create a shortcut key that allows you to quickly access a specific menu item by pressing  up from the home screen. To create a shortcut key, complete the following steps from the home screen:

- Press  up.
- Press  to select **Define**.
- Press  up or down to scroll through the options, and press  to select an option from the list:
  - Text InBox** accesses your **Text InBox**.
  - Send New Msg** sends a new text message.
  - Ringer Volume** adjusts the ringer volume.
  - Recent Calls** opens the Recent Calls list.
  - Business List** opens a list of phone numbers classified as **Business**.
  - Personal List** opens a list of phone numbers classified as **Personal**.
  - Web Browser** opens the Web Browser.

## To modify a shortcut key

The shortcut key accessed by pressing  up may have been set up by your service provider. Complete the following steps to modify it:

1. Select **Menu** → **Settings** → **Display** → **Shortcut Key**.
2. Select a shortcut key option from the list.



This shortcut key can now be used by pressing  up from the home screen.

**Note**—If you select **None**, you can reset the shortcut key and assign a new option to it by following the steps in “To create a shortcut key” on page 7.


## To redial the last number called

- Press  twice.


## To save a phone number

1. From the home screen, enter the phone number you want to save.
2. Press  to **Save New**.
3. Enter a name. If you need to know how to use the keypad to enter letters, see page 15.
4. Press  to **Save**.

## To set a speed dialing location

1. Open a saved contact (to create a contact, see “To save a phone number”).
2. Select the phone number to assign to a speed dialing location.
3. Select **Speed Dialing**.
4. Select a speed dialing location between 2 and 99. (Location 1 is reserved for your voicemail number.)
5. Press  to **Assign**.

## To speed dial

- From the home screen, enter the one- or two-digit speed dialing number and press .

## For more information

For more information on your phone, including an online tutorial, online help, and a detailed Kyocera 2100 Series Phones Reference Guide, visit [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

## To purchase accessories

To purchase accessories online, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store).

## 2 BATTERY

---


Your phone comes with an internal/removable lithium ion (LiIon) battery. To learn how to install the battery, see page 1.

The battery is partially charged when you receive the phone. **Before using your phone, fully charge the battery.**

### To charge the battery


Connect the AC Adapter to the proper jack on the bottom of the phone as shown below, then connect the adapter's plug to a wall outlet.



**Note**—You must have at least a partial charge in the battery to make or receive calls, regardless of whether or not the AC Adapter is connected to the phone. The battery icon is animated as the battery is charging. The battery is fully charged when the battery icon looks like . You can safely

recharge the battery at any time, even if it has a partial charge.

### Power-save mode

Your phone changes to power-save mode when it cannot locate a signal. When the phone is in power-save mode, you cannot make or receive calls, and “Power Save Mode” and  appear on the screen. Press any key to return to normal operating mode.

### Battery guidelines


- Do not take apart, puncture, or short-circuit the battery.
- If you have not used the battery for more than a month, recharge it before using your phone.
- Avoid exposing the battery to extreme temperatures, direct sunlight, and high humidity.
- Never dispose of any battery in or near a fire. It could explode.



## Tips for improving battery performance

Before using your phone, fully charge the battery.

The following functions drain the battery more quickly, and adversely affect talk and standby times:

- Backlighting is frequently on. (To adjust backlighting, see page 26.)
  - The phone is frequently used in analog mode. If **D** is not visible on the home screen, the phone is in analog mode. (To set your phone to operate in different modes, see “Roam Option” on page 30).
  - You are far away from a base station or cell site when in digital mode.
  - Data cables or accessories, such as the Hands-free headset, are connected to the phone.
  - No service is available, or service is available intermittently. The phone requires more power to acquire service than to maintain consistent service.
- The earpiece and ringer volume settings are high. To adjust the earpiece volume, see “To adjust the volume manually” on page 6. To adjust the ringer volume, select **Settings** → **Sounds** → **Ringer Volume**, and press  left to lower the volume.
  - Check how often voicemail notifications, pages, and text messages are received, and how quickly they are acknowledged. To use power most efficiently, acknowledge notifications and messages promptly after receiving them.






## 3 CONTACTS


---

Use your phone's Contacts directory like a set of phone index cards to store information about a person or company. Before using the Contacts directory, see "Entering letters, numbers, and symbols" on page 15.


### Working with contacts

#### To save a phone number



1. From the home screen, enter the phone number you want to save.
2. Press  to **Save New**.
3. Enter a name for the contact. If you need to know how to enter letters, see page 15.
4. Press  to **Save**.  
-or-  
Press  right, then press  to select **Options**. Press  up or down to select an option from the list:
  - **Save**—Save information and return to the home screen.

- **Number Type**—Select **work**, **home**, **mobile**, **pager**, or **fax**.
  - **Speed Dialing**—Select a speed dialing location from the list.
  - **Secret**—Select **Yes** to lock the phone number. If a phone number is locked, you must enter your four-digit lock code (see page 27) to view or edit the number. Select **No** to leave the number unchanged.
  - **Primary Number**—Classify this number as the primary number for the contact.
  - **Classify Contact**—Classify the contact as **business** or **personal**. (**Tip**—See page 26 for information about setting up business or personal ringers.)
5. If finished, press  to select **Save**. A message appears: "Contact Successfully Saved!"  
-or-  
If you want to continue entering information, select another option.


You can also save a phone number through the Contacts directory as follows:

1. From the home screen, select **Menu** → **Contacts** → **Add New** → **Phone Number**.
2. Enter the phone number up to as many digits as will fit on the screen.
3. Press  to select **Next**.
4. Go to step 3 in “To save a phone number” on page 11.

## To edit a contact


1. From the home screen, select **Menu** → **Contacts**.
2. To find the contact you want to edit, select either **View All** or **Find Name**.
3. Press  to select the contact to edit.
4. Select **Options** to edit the entire contact, or select the specific information (such as the phone number) you want to edit.
5. Enter the new information.
6. If finished, press  to select **Save**.




## To erase information from a contact

1. From the home screen, select **Menu** → **Contacts** → **View All**.
2. Press  to select a card.
3. Select **Options** → **Erase Contact** to erase the entire contact.  
-or-  
Select the phone number, then **Erase Number** to erase the phone number.
4. Select **Yes** to erase or **No** to cancel.



## To search the Contacts directory

The Contacts directory lists entries alphabetically. You can search through a list of all contacts, speed dialing entries, or cards of a specific type, or you can enter the name you are searching for.

1. From the home screen, select **Menu** → **Contacts**.
2. Press  down to select a search method:
  - To view a list of names, select **View All**, **Speed Dialing List**, **Business List**, or **Personal List**.-or-

- To search for a specific name, select **Find Name**. Enter all or part of the name and select **Find**. A list of matching names appears.
3. Press  down until you find the name you want.
    - To call the contact, select the number and press .
    - To display the full contact, press .


## To call from the Contacts directory

1. From the home screen, press  down.
2. Select a name from the list.
3. Select the number and press .





## Speed dialing and 1-Touch Dialing

Speed dialing and 1-Touch Dialing allow you to quickly dial a stored phone number by entering the memory location. 1-Touch Dialing is the fastest way to speed dial.


## To set a speed dialing location

1. Open a saved contact.
2. Select the phone number to assign a speed dialing location.
3. Select **Speed Dialing**.
4. Select a speed dialing location. (Speed dialing location “1” is reserved for your voicemail number.)
5. Press  to **Assign**.


## To remove a speed dialing location

1. From the home screen, select **Menu** → **Contacts** → **Speed Dial List**.
2. Select a speed dialing location and press .
3. Select a number to remove and press .
4. Select **Speed Dialing**.
5. Press  right to select **Remove**.
6. Press .

## To speed dial


- From the home screen, enter the one- or two-digit speed dialing number and press .

## To call your voicemail number



- From the home screen after receiving a notification, press and hold your voicemail speed dialing number. (  is the default.)
- For other ways to call your voicemail, see page 6.

## To enable 1-Touch Dialing

1-Touch Dialing allows you to press and hold a speed dial location to call a phone number.

1. Select **Menu** → **Settings** → **Extras** → **1-Touch Dialing** → **Enabled**.
2. Press .

## To use 1-Touch Dialing

- Enter the one- or two-digit speed dialing number and hold down the last number. For example, if the speed dialing number is 15, press , then press and hold .

## To redial the last number called

- Press  twice.

## Working with the Recent Calls list

The Recent Calls list shows the last 15 unique calls. Calls are identified by type. (Some types may not be available on all phones. Check with your service provider.)



Call to



Call from



Three-way call



Forwarded call



Missed call

## To view the Recent Calls list

1. From the home screen, select **Menu** → **Recent Calls**.
2. To view details about a call, select a call entry.
3. Select an option:
  - If the call is from a number that has not been saved as a contact, select **Time**, **Number**, **Save New**, or **Add to**.

- If the call is from a number already saved as a contact, select **Time, Number, or View Contact**.

**Note**—If the number has been saved as “secret,” you must enter your four-digit lock code to view or edit the number. To make a phone number secret, see “To save a phone number” on page 11.

## To dial from the Recent Calls list

1. From the home screen, select **Menu** → **Recent Calls**.
2. Select the call entry in the list, and press to display the call detail.
3. Press to call the number.

## Entering letters, numbers, and symbols

You can enter letters, numbers, and symbols in a contact or text message. The default text entry mode is **abc**. You can switch to (rapid text entry), **123** (number), or **&?!** (symbol) mode.

- To enter spaces, press .
- To move the cursor, press right or left.
- To erase single characters, press .

- To erase all characters, press and hold .
- To change cases, press and hold until you see the appropriate symbol:

Capitalize the first letter of each word, or the first letter of each sentence in a new text message (see page 19).

Capitalize the next letter.

Capitalize every letter.

## To change text entry modes

1. From the text entry screen, press to highlight the options at the bottom of the screen.
2. Press right to highlight the current text entry mode.
3. Press to select it.
4. A list of text entry modes appears. Press down to scroll through the list.
5. Press to select a text entry mode.

### Shortcuts






- To change text entry modes, press .
- To change capitalization modes, press and hold .




## To use text entry modes


### To enter letters in a<sub>b</sub>c mode:

1. Press the key once for the first letter, twice for the second letter, and so on.
2. After the cursor moves right, enter the next letter.



### To enter words in rapid text entry mode (available in English only):

1. Press each letter key once. For example, to enter the word “any,” press keys  →  →  .
2. Press  to cycle through words.
3. Press  right when you see the word you want.

**Tip**—If you want to enter a symbol, press  . Press  to cycle through symbols, and press  to select the one you want.

For more information on how to save words in the  database, refer to the *Reference Guide for Kyocera 2100 Series Phones* at [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

### To enter symbols in &?! mode:

1. Press  down through the list of symbols.
2. Press the number key corresponding to the symbol you want.
3. To exit the list without entering a symbol, press  .

### To enter numbers in 1<sup>2</sup>3 mode:

- Press a key once to enter the number on the key.






### To enter numbers in a<sub>b</sub>c or mode:

- Press and hold a number key until the number on the key appears on the screen.






## Languages and special characters

Your phone may support English, Spanish, and French languages. If you select English, enter the letters printed on the keys. If you select another language, you can also enter letters with other marks as shown here:


## Spanish

	A Á B C 2
	D E É F 3
	G H I Í 4
	M N Ñ O Ó 6
	T U Ü Ú V 8

## French

	A À Â B C Ç 2
	D E È É Ê F 3
	G H I Î 4
	M N O Ô Æ 6
	T U Ü Ú V 8

## To select a language





1. From the home screen, select **Menu** → **Settings** → **Display** → **Language**.
2. Select the language and press .
3. Press the appropriate keys to enter special characters.

## To enter pauses

You can include a pause in a phone number. A **timed pause** causes the phone to stop dialing for two seconds. A **hard pause** causes the phone to stop dialing until you select **Release**.

**Note**—You can enter multiple pauses in a phone number.

When you save the phone number of an automated service, such as voicemail, you may include a pause where you would be required to select an option or enter a password. For example, you could enter a phone number, then a pause, then a voicemail extension or calling card number.

1. Enter the first portion of the phone number.
2. Press  right through the options at the bottom of the screen.
3. Press  to select a type of pause.  
 indicates a **timed pause**.  
 indicates a **hard pause**.
4. Enter the remaining numbers.





## 4 MESSAGES

---






You can receive, send, and erase messages from your phone, depending on what is available in your area. (Check with your service provider.)

- The features and menus described in this chapter may vary depending on services available in your area.
- New, unread messages are stored in your **Text InBox** and appear in **bold**.
- Once you have read a message, you can save it to your **Filed** folder, erase it, or leave it in your **Text InBox**.
- Once you have sent or scheduled a message, it is stored in your **Text OutBox**.
- All of the following procedures start at the home screen unless otherwise indicated.




### Retrieving messages

When a text message, page, or voicemail is received,  appears on your phone screen. The  flashes if the message is marked “Urgent.”



You can retrieve messages in any of the following ways:

- When a new message is received, press  to select **View** or **Ignore** from the bottom of the screen.
- Press  →  , or press and hold  to call your voicemail number.  
**Note**—A voicemail number may have been programmed into your phone for your convenience. Check with your service provider.
- Select **Menu** → **Messages** → **Voicemail** and press  .

### To view text messages

1. Select **Menu** → **Messages** → **Text InBox**.
2. Press  up or down to scroll through the list of messages.
3. Press  to read a message.  indicates an “Urgent” message.
4. Read the message and select an option from the bottom of the screen:
  - **Reply** to the sender, if their address is available.
  - **Erase** the current message.

- **Save** the message to your **Filed** folder.
- **Sender** allows you to view the sender's information. You can select an option to save it to the Contacts directory.
- **Forward** the message.
- **Done** returns you to the **Text InBox**.

Press  to see information such as callback number, email address, or URL. (If a callback number is included with the message, press  again to call the number.)



## Sending messages

- To learn how to enter text, see “Entering letters, numbers, and symbols” on page 15.
- Scheduled, pending, and sent messages are stored in your **Text OutBox**.
- If you are sending a message to more than one person, enter a space or a comma between each phone number or email address. If you are sending to more than one contact, the phone automatically inserts a comma after each contact. The messages are sent one at a time, once to each addressee. You can send the message to up to 10 contacts.

**Note**—Usage charges may apply to each message; check with your service provider.

- If you are creating a new message and receive an incoming call, do either of the following:
  - If you answer the call, you can continue working on the message when you are finished with the call by selecting **Menu** → **Messages** → **Text OutBox** and opening the message.
  - If you select **Ignore** from the bottom of the screen, the call is silenced and the previous screen you were working in appears.

## To send a new message

1. Select **Menu** → **Messages** → **Send New**.
2. Enter the phone number or email address of the person to whom you are sending the message, or select **Contacts** to select a phone number or email address from a contact.
3. Press  twice to select **Next**.
4. Enter your message and press  to select **Next**.

-or-

To send a preformatted message, press **OK** , then press **↔** right to highlight **AutoMsg**.

- a. Press **OK** to select **AutoMsg**.
  - b. Press **↔** up or down to scroll through the list of preformatted messages, such as **Call me**, **Need directions**, or **I'm delayed**.
  - c. Press **OK** to select a message. You can enter additional text, or press **OK** , then press **↔** left to scroll to **Next**.
5. Press **↔** up or down and press **OK** to select an option:
- **Send Message** sends the message immediately and saves it in your **Text OutBox**.
  - **Callback Number** adds a callback number to the message. For more details, see “To add a callback number to a message” on page 21.
  - **Delivery Receipt** sends a notification to your phone when the recipient receives the message.
  - **Priority** marks the message **Normal** or **Urgent**.

- **Send Later** schedules delivery of this message. See “To send a scheduled message” on page 21.
- **Save Message** saves the message in your **Filed** folder.
- **Exit** exits without saving.

**Note**—If you have selected an option such as **Callback Number** or **Priority**, the **Options** screen appears. Select another option such as **Send Message** to send the message.

## To send a saved message

1. Select **Menu** → **Messages** → **Filed**.
2. Press **↔** up or down through the list of messages.
3. Press **OK** to select a message.
4. Select an option from the bottom of the screen (**Reply**, **Erase**, **Sender**, **Forward**, or **Done**).
5. Enter the phone number or email address of the person to whom you are sending the message, or select **Contact** to select a phone number or email address from a contact.
6. Press **OK** to select **Next**.

7. Press **OK** to select **Next** again, or select an option from the bottom of the screen.
8. Press **↕** up or down and press **OK** to select an option (see page 19 for options).

## Message delivery options

### To add a callback number to a message

After creating a message and selecting the **Callback Number** option, follow these steps:

- To send your own phone number, press **OK** to select **Yes** from the options at the bottom of the screen.

To enter a specific phone number:

1. Press **OK**, then press **→** right to select **Other** from the options at the bottom of the screen.
2. Enter the phone number.
3. Press **OK** to select **Done**. To change the text entry mode, see page 15.

To ensure that no callback number is sent:

1. Press **↕** right.

2. Press **OK** to select **No** from the options at the bottom of the screen.

### To send a scheduled message

After creating a new or preformatted message (See “To send a new message” on page 19), you can select when to send it. Once the **Send Later** option is selected, complete these steps:


1. Select from a list of options for when to send the message (**30 minutes, 1 hour, 2 hours, 12 hours, 1 day, 2 days, or 3 days**). The message is scheduled for delivery and stored in your **Text OutBox**.
2. Press **↕** up and select **Send Message**.

The message is sent from your phone immediately, then is held by your service provider’s network for the specified period of time before it is sent.


**Note**—You can erase a scheduled message from the **Text OutBox**, but you cannot cancel delivery of the message.

### Additional information about scheduled messages


Symbols appear next to messages in your **Text OutBox**, indicating the message status.

1. Select **Menu** → **Messages** → **Text OutBox**.
2. Press  up or down through the list of messages. One of the following symbols appears next to each message:


---

 The message is pending and will be sent when possible. You can cancel delivery of the message.

---

 The message is scheduled to be sent at a scheduled time. You cannot cancel delivery of the message.

---

 The message cannot be sent because service is not available. An alert appears on your phone if the message cannot be sent.

---

The scheduled message has been sent and will be delivered as scheduled. You cannot cancel delivery of the message.

---



The message has been received by the recipient you have specified.

---

The message has never been sent, or has not been sent since it was last modified. You can cancel delivery of the message.



---

## Erasing messages

1. Select **Menu** → **Messages** → **Erase Msgs**.
2. Press  up or down and press  to select an option:
  - **No** cancels and returns to the **Messages** screen.
  - **Entire InBox** erases *all* messages in your **Text InBox**.
  - **Old InBox** erases *read* messages in your **Text InBox**.
  - **Entire OutBox** erases *all* messages in your **Text OutBox**.
  - **Filed** erases all messages in your **Filed** folder.
3. A message appears: “Erase ALL?” Select **Yes** to erase messages or **No** to cancel.

**Tip**—To learn how to erase messages automatically, see page 32.

## To erase messages one at a time

1. Select **Menu** → **Messages**.
2. Press  down and press  to select the type of message you want to erase (**Text InBox**, **Text OutBox**, or **Filed**).

3. Press **OK** to select the message to erase.
4. Select **Erase** to erase the message. A message appears: “Erase this message?”
5. Select **Yes** to erase the message, or **No** to cancel.

**Note**—You can erase a scheduled message from the **Text OutBox**, but you cannot cancel delivery of the message.

## Troubleshooting messages

### Low memory

If your phone is low on memory or is out of memory, you may not be able to receive new messages. An alert appears every time memory is more than 75% full: “WARNING! Memory is nearly full!” Do the following to clear the alert:

1. Press **OK** or press **↩**.
2. Erase contacts or text messages to free up more memory. See “To erase information from a contact” on page 12 or “Erasing messages” on page 22.

### If you cannot send messages

Sometimes you may not be able to send a message because service is not available. Your phone tries to send the message again later. If a message cannot be sent, an alert appears. Do one of the following to clear the alert:

- Press **OK** to select **OK** from the options at the bottom of the screen.
- Press **↩** to return to the home screen.

### For more information

For more detailed information about messages, refer to the Kyocera 2100 Series Reference Guide at [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

## 5 SETTINGS

---

The Settings menu includes the following options.

### **Silence All**

- No, normal
- Yes, vibrate only
- Yes, lights only

### **Keypad**

- Guard Now
- 30s auto-guard
- 1m auto-guard
- 5m auto-guard
- Auto-guard off

### **Sounds**

- Call Ring/Vibe
- Ringer Volume
- Ringer Type
- Business Call Ring
- Personal Call Ring
- Roaming Ringer

### **Earpiece Volume**

- Key Beep Volume
- Key Beep Length
- Key Beep Sound
- Missed Call Alert
- Smart Sound (see page 6)
- Minute Alert

### **Display**

- Backlighting
- My Banner
- Shortcut Key
- Main Menu View
- Auto-Hyphenation
- Language
- Time/Date Format
- Display Contrast

### **Security**

- Lock Phone
- Limit Calls Out
- Change Lock Code
- Erase All Contacts
- Erase Recent Calls
- Phone Reset

### **Call Information**

- Recent Calls Timer
- All Calls Timer
- Browser Timer

### **Network**

- Data/Fax Calls In
- Privacy Alert
- Roam/Srvc Alert
- Roam Option
- Digital or Analog

### **Extras**

- Fast Find
- 1-Touch Dialing
- Browser Prompt

### **Messaging**




- Voicemail Number
- Auto-Erase Text
- Msg Auto-Save
- Voicemail Alert
- Page Alert
- Message Alert
- Net Alerts

### **Accessories**

- Power Backlighting
- Headset Ringing
- Auto-Answer

## Silence All

You can silence all phone sounds, including the ringer and all alerts, and set the phone to vibrate or light up for incoming calls, messages, and alerts.

1. Select **Menu** → **Settings** → **Silence All**. (Or from the home screen, press  right and hold to enable **Silence All**.)
2. Select an option (**Normal** turns on the ringer.)  
 indicates the phone is in **Silence All** mode.
3. Press  to save your selection.


**Note**—If your phone is attached to an external power source, such as a charger, it will not vibrate or light up.


## Keypadguard

The Keypadguard locks your keypad to protect your phone against accidental keypresses when the phone is turned on and a call is not in progress. You can still answer or silence an incoming call when Keypadguard is activated.

**Note**—Keypadguard is only available when the phone is turned on.

## To turn keypadguard on

1. Select **Menu** → **Settings** → **Keypadguard**.
2. Highlight an option and press  to save:
  - **Guard Now** locks the keypad now.
  - **30s auto-guard** locks the keypad if no keys are pressed for 30 seconds.
  - **1m auto-guard** locks the keypad if no key is pressed for one minute.
  - **5m auto-guard** locks the keypad if no key is pressed for five minutes.
  - **Auto-guard off** unlocks the keypad and returns it to normal.

**Shortcut**—To turn keypadguard on from the home screen, press  left and hold.

## To turn keypadguard off

- Press  →  →  in this order.

## Sounds

You can change your phone's alert sounds.

- Select **Menu** → **Settings** → **Sounds**, then the setting you want. For information about automatic volume adjustment (Smart Sound), see page 6.



## To change the ringer

1. Select **Menu** → **Settings** → **Sounds** → **Ringer Type**.
2. Select a ringer from the list.

## To set up business or personal ringers

If a contact has been saved as **business** or **personal**, you can choose from 15 different ringers. A sample plays as you select the ringer.

**Tip**—To learn how to save contacts as **business** or **personal**, see page 11.

1. Select **Menu** → **Settings** → **Sounds** → **Business Call Ring** or **Personal Call Ring**.
2. Select a ringer from the list.

Calls received from contacts marked as **business** or **personal** ring with the ringer you selected.

## To import ringers

You can import ringers into your Kyocera 2135 or 2119 phone using the Kyocera Phone Desktop (sold separately). To purchase this tool and other accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store).

## Display

You can change the appearance of your phone's screen and adjust backlighting.

- Select **Menu** → **Settings** → **Display**, then the option you want.

## To adjust backlighting

1. Select **Menu** → **Settings** → **Display** → **Backlighting**.
2. Select an option from the list:
  - **10 seconds** turns backlighting on for 10 seconds after your last keypress.
  - **30 seconds** turns backlighting on for 30 seconds after your last keypress.
  - **10 sec. & in call** turns backlighting on during a call, and for 10 seconds after your last keypress.
  - **30 sec. & in call** turns backlighting on during a call, and for 30 seconds after your last keypress.

**Note**—Keeping backlighting on during a call drains the battery more quickly and reduces talk and standby times.

## To change the main menu view

To change the appearance of the menus you see when you select **Menu** from the home screen, select **Main Menu View**, then the option you want:

**Small Icons**

**Large Icons**

**List Menus**

## Security

You must enter your four-digit lock code (typically 0000 or the last 4 digits of your phone number) to set any of the options on the **Security** menu.

## To lock and unlock the phone

When you have locked your phone, you can only call a number your service provider has set up as an emergency number, a service provider number, or a priority number. You can still receive incoming calls.

### To lock the phone

1. Select **Menu** → **Settings** → **Security** → **Lock Phone Use**.
2. Select an option:
  - **Never** does not lock the phone.

- **On power up** locks the phone every time you turn it on.
- **Now** locks the phone immediately.

3. Press **OK** .

### To unlock the phone

- Select **Unlock** and enter your four-digit lock code.

### To limit calls out

- Select **Menu** → **Settings** → **Security** → **Limit Calls Out**. Select **No** for unlimited calls, or select **Yes, to Contacts** to allow calls to contacts only.

### To change your lock code

1. Select **Menu** → **Settings** → **Security**.
2. Enter your lock code and select **Change Lock Code**. A message appears: “Change Lock Code?”
3. Select **Yes** and enter a new code, then press **OK** . Enter your new lock code again.  
-or-  
Select **Exit** to leave your lock code unchanged.

## To erase all contacts

- Select **Menu** → **Settings** → **Security** → **Erase All Contacts**.
  - Select **Yes** to erase all contacts. A message appears: “Erase ALL contacts?” Select **No** to cancel or **Yes** to erase all contacts.
  - Select **No** to leave contacts unchanged.

## To erase recent calls

- Select **Menu** → **Settings** → **Security** → **Erase Recent Calls**.
  - Select **Yes** to erase all recent calls. A message appears: “Erase ALL recent calls list entries?” Select **No** to cancel or **Yes** to erase all recent calls.
  - Select **No** to leave the Recent Calls list unchanged.

## To reset the phone

- Select **Menu** → **Settings** → **Security** → **Phone Reset**.
  - Select **Yes** to reset the phone. A message appears: “Reset ALL phone settings?” Select **No** to cancel or **Yes** to reset the phone.
  - Select **No** to cancel.

**Note**—Your four-digit lock code, Recent Calls list, Contacts directory, InBox and OutBox contents, memos, and service programming are not reset when you reset your phone.

## Call Information

These settings allow you to set calling options.

### Recent Calls Timer

This timer displays the total number and duration of recent calls you have made and received since the last time you reset the timer. Press **OK** to select **Reset**. This resets the timer to zero.

### All Calls Timer

This timer displays the total number and duration of all calls you have made and received. You cannot reset this timer.

### Browser Timer

This timer displays the total duration of data calls you have made since the last time you reset the timer. Press **Reset** to reset the timer to zero.

## Network

Use these settings to view or change options such as roaming and privacy alerts. Some settings may not be available on all phones.

### Data/Fax Calls In

These settings tell the phone how to handle voice and data calls.

1. Select **Menu** → **Settings** → **Network** → **Data/Fax Calls In**.
2. Press **OK** to select an option:
  - **Voice Only** allows only voice calls.
  - **Fax, next call** sets the phone to fax mode for the next incoming call or the next ten minutes.
  - **Data, next call** sets the phone to data mode for the next incoming call or the next ten minutes.
  - **Fax, until off** forces the phone into fax mode until the phone is turned off.
  - **Data, until off** forces the phone into data mode until the phone is turned off.

**Note**—You cannot receive voice calls while the phone is in **Fax** or **Data** mode.

## Privacy Alert

You can set your phone to sound an alert if enhanced CDMA voice privacy is on (check with your service provider to see if CDMA voice privacy is available in your area).

1. Select **Menu** → **Settings** → **Network** → **Privacy Alert**.
2. Press **OK** to select an option:
  - **Disabled** does not play any alerts.
  - **Enabled** plays an audible alert whenever enhanced privacy is lost or regained and a call is in progress. **PA** appears on your phone screen.

**Note**—An alert message always shows on the screen, regardless of these settings.

### Roam/Service Alert


Use this setting if you want the phone to alert you if you roam outside of your home service area.

1. Select **Menu** → **Settings** → **Network** → **Roam/Srvc Alert**.
2. Press **OK** to select an option:
  - **Disabled** does not alert you if you roam outside your home service area.


- **When no service** alerts you with three tones, decreasing in intensity, when service is lost. When service is acquired again, you hear three tones increasing in intensity.
- **On roam change** alerts you with two tones, decreasing in intensity, when roaming service is acquired. When home area service is acquired again, you hear two tones, increasing in intensity.
- **On any change** alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if service is lost.

## Roam Option

This setting sets the signals your phone accepts.

1. Select **Menu** → **Settings** → **Network** → **Roam Option**.
2. Press  to select an option:
  - **Automatic (recommended setting)** accepts any system the phone service supports.
  - **No Roaming** does not allow calls outside of your home service area.

## Digital or Analog

1. Select **Menu** → **Settings** → **Network** → **Digital or Analog**.
2. Press  to select an option:
  - **Automatic** automatically switches the phone between digital and analog.
  - **Analog only** sets the phone to work in analog mode only.
  - **Analog call** forces a call into analog mode for the next call.
  - **Digital only** sets the phone to work in digital mode only.

## Extras

### Fast Find



You can use Fast Find to find a contact quickly.




- To enable Fast Find, select **Menu** → **Settings** → **Extras** → **Fast Find** → **Enable**.

### To use Fast Find

From the home screen, do the following:

1. Press the keys corresponding to the letters of the contact name you want to find.

2. The phone searches for contacts with names beginning with the letters you entered.  
Matching contacts appear on the screen.
3. Press  up or down through the list to find the contact you want.
4. Press  to call the contact.


**Note**—Speed dial locations matching the numbers you entered appear first. For example, if you enter the numbers  →  →  to find a contact named “Jane,” and you have phone numbers assigned to speed dial locations 5 and 2, those contacts appear first.

## 1-Touch Dialing

See “To enable 1-Touch Dialing” on page 14.

## Browser Prompt

You can receive a prompt whenever you start or exit the browser.

1. Select **Menu** → **Settings** → **Extras** → **Browser Prompt**.
2. Press  to select an option:
  - **At Start** prompts you when you start the browser.

- **At End** prompts you when you exit the browser.
- **Both** prompts you when you start the browser and exit the browser.
- **No Prompts** does not use any prompts.

## Messaging

These settings allow you to set how the phone handles incoming and outgoing messages.

### To change your voicemail number

You can change the phone number assigned to speed dialing location “1” by doing the following:

1. Select **Menu** → **Messages** → **Msg Settings** → **Voicemail Number**.
2. Select **Edit** to change the number that is currently assigned to speed dial location “1.”
3. Enter the new number, then select an option:
  - **Save** saves the new number.
  - **Time Pause** enters a time pause in the number. See “To enter pauses” on page 17.
  - **Hard Pause** enters a hard pause in the number. See “To enter pauses” on page 17.

## To erase messages automatically (Auto-Erase Text)

Use this setting to erase old messages when memory is low, and allow for incoming messages.

1. Select **Menu** → **Settings** → **Messaging** → **Auto-Erase Text**.
2. Press **OK** to select an option:
  - **Disabled** does not erase messages.
  - **Old InBox** automatically erases old, read messages when memory is low.

## To save messages automatically (Msg Auto-Save)

Use this setting to automatically save messages.

1. Select **Menu** → **Settings** → **Messaging** → **Msg Auto-Save**.
2. Press **OK** to select an option:
  - **Always (default)** saves all messages to the **Text OutBox**.
  - **Ask before save** asks you whether you want to save the message to the **Text OutBox**.
  - **Disabled** does not save messages.

## Alerts

You can choose how you want to receive alerts for voicemail, pages, text messages, and the Web Browser.

**Note**—If a message is received while you are on a call, the phone does not vibrate to alert you.

1. Select **Menu** → **Settings** → **Messaging**, then the type of alert (**Voicemail Alert**, **Page Alert**, **Message Alert**, or **Net Alert**).
2. Press **OK** to select an option:
  - **Disabled** does not alert you when a message is received.
  - **Vibrate once** sets the phone to vibrate once when a new message is received.
  - **Vibe & remind** sets the phone to vibrate once when a new message is first received, and once every five minutes. To stop the reminder, press **OK** to select **Ignore**.
  - **Soft beep once** sets the phone to beep softly once when a message is received.
  - **Soft beeps** sets the phone to beep softly approximately every five minutes. To stop this reminder, press **OK** to select **Ignore**.

- **Loud beep once** sets the phone to beep once loudly when a message is received.
- **Loud beeps** sets the phone to beep loudly approximately every five minutes. To stop this reminder, press **OK** to select **Ignore**.

## Convenience features

Your phone comes with several features for additional convenience.

### Power Backlighting

This allows backlighting to remain on when external power, such as a travel charger, is used with the phone.

**Note**—**Power Backlighting** may not be available with some accessories. Check with your service provider.

1. Select **Menu** → **Settings** → **Accessories** → **Power Backlighting**.
2. Select **Normal** to keep the default setting, or **Always on** to keep backlighting on. (The battery charges more slowly when backlighting is set to **Always on**.)

## Headset Ringing

When a headset (sold separately) is attached to the phone, alert sounds can originate from the phone or the headset.

1. Select **Menu** → **Settings** → **Accessories** → **Headset Ringing**.
2. Select **Out of phone** to have the alerts originate from the phone, or **Out of headset** to have alerts originate from the headset.

If your phone is attached to a Hands-free Car Kit (sold separately), you can set it to answer an incoming call after five seconds.

- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **After 5 seconds**.






## 6 TOOLS

---



The Tools menu offers a variety of helpful items.




### Alarm Clock

Use the Alarm Clock to set an alert for a specific time. The alert occurs only if the phone is on.

1. Select **Menu** → **Tools** → **Alarm Clock** → **Set**.
  - Press  up or down to select an hour and minutes.
  - Press  left or right to switch between hours, minutes, and a.m./p.m.
  - Enter numbers using the phone keypad.
2. Press  to save.
3. When the alarm rings, select **Snooze** to silence the alarm for 10 minutes, or select **Off** to turn off the alarm.


### Tip Calculator



1. Select **Menu** → **Tools** → **Tip Calculator**.
2. Enter the amount of your bill and press .
3. Select the amount you want to include as a tip (15%, 18%, 20%, 10%, 5%, Other) and press . Your total bill appears, including tip.

4. If you want to split the bill, press  right and press  to select **Split**.
5. Enter the number of guests and press .
6. The amount each guest pays appears.

### Calculator




Use the calculator for basic mathematical equations.


1. Select **Menu** → **Tools** → **Calculator**.
2. Use the keypad to enter numbers.
3. Press  to select mathematical operations.
  - = Performs the **equals** function.
  - ÷ Inserts the **division** character after the last number entered.
  - Inserts the **subtraction** character after the last number entered.
  - + Inserts the **addition** character after the last number entered.
  - X Inserts the **multiplication** character after the last number entered.
  - Inserts the decimal point after the last number entered.

- C** Clears all numbers entered and displays a zero.
- MR** Displays the value currently stored in memory.
- M+** Adds the displayed digit to the value stored in memory.
- MC** Clears the value currently stored in memory.
- ±** Changes the sign of the displayed number.
-  Clears one function or one digit from the screen and returns the calculator to digit entry mode. Hold down to clear all of the digits and operations and display a zero.
-  Exits the calculator and returns to the home screen.


## Countdown Timer

This timer counts down for a specified amount of time. It beeps, using the volume set for alerts, when that amount of time has elapsed.




1. Select **Menu** → **Tools** → **Countdown Timer**.
2. Press  to select **Set**.
3. Press  up or down to set the hours, minutes, and seconds. To move the cursor, press  left or right.
4. Select **Start** to begin the countdown.  
Select **Stop** to pause the countdown.


5. When the alarm rings, press  to silence it.

## Stopwatch

1. Select **Menu** → **Tools** → **Stopwatch**.
2. Select **Start** to have the stopwatch begin counting.
3. Select **Stop** to stop counting.
4. Select **Reset** to set the counter back to zero and have the stopwatch begin counting again.
5. Press  when finished.

## Brick Attack™

1. Select **Menu** → **Tools** → **Brick Attack**.
2. To start the game, press  to select **New**.
3. To pause the game, press , then press  to **Resume**.

The goal of this game is to eliminate bricks arranged in levels. To do this, you send a moving ball upward using a paddle at the bottom of the screen. To move the paddle, press  left or right. If an incoming call alert is received, the game is paused and exited. You can return to play once the incoming call alert is ended. The game cannot be paused while the phone is off.

## 7 WEB BROWSER

---

You can use your phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area.

### Using the Web Browser



To learn how to enter text in the Web Browser, see “Entering letters, numbers, and symbols” on page 15.

**Note**—You cannot receive incoming calls while you are in the Web Browser and a data call is in progress.


### To start the Web Browser

- From the home screen, select **Menu** → **Web Browser**.

### To exit the Web Browser

- Press  .  
-or-  
Press  from the Web Browser home screen.

### To go back

- Press  to go back one screen.






### Web Browser options

 
The following options may appear on your screen:

- **Home** returns you to the main Web Browser window, or home page.
- **Mark Site** saves the current location as a bookmark for easy access.
- **Bookmarks** displays a list of your saved web sites.
- **Setup**
  - **Show URL** displays the entire URL.
  - **Openwave™** displays information about your Web Browser version.
  - **Encryption** should not be used unless you are instructed to do so by your service provider.
  - **UP.Link** selects a different browser server. You can use this option if you have more than one Web Browser account, such as one for business and one for personal use.
  - **Restart** restarts the Web Browser.

## Indicators and alerts

### Web Browser screen

- The  appears in a secure Web Browser session.
- If you have several URLs bookmarked, a list appears. Press  up or down to scroll through the list. Press  to select a URL and go to that site.
- An underline and an arrow indicate that there is more text. Press  down to go to the next screen of text. Press  up to move back one screen.

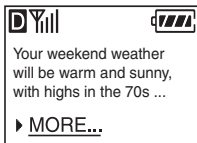

## Net Alerts

If your service provider activated Internet services on your phone and you are in an area that provides over-the-air Internet access, you may receive Net Alerts. These short messages allow you to quickly access information on the Internet.

## 8 FREQUENTLY ASKED QUESTIONS

---

### **What is my lock code?**

The default lock code is usually either 0000 or the last four digits of your phone number. If you forget your lock code, call your service provider.

### **How do I lock and unlock the phone?**

See “Security” on page 27.

### **How do I turn my ringer on?**

Select **Menu** → **Settings** → **Silence All** → **No, normal**.


### **How do I change the ringer volume or type?**

See “Sounds” on page 25.


### **How do I save a phone number?**

See “To save a phone number” on page 11.

### **How do I change my banner?**

Select **Menu** → **Settings** → **Display** → **My Banner**. Enter your text and press .

### **How do I speed dial?**

Enter the one- or two-digit speed dial number and press .

### **How do I use Fast Find?**

See “To use Fast Find” on page 30.

### **How do I change a shortcut key?**

Select **Menu** → **Settings** → **Display** → **Shortcut Key**, then select a shortcut key option from the list.

### **What do the icons on the top of the screen mean?**

See page 3 for screen icon descriptions.

### **My phone displayed the message “Reading Info. Please wait ...” when I turned it on. What does this mean?**

Your phone is performing routine maintenance. This normally takes a few minutes.

### **My phone is out of memory. What do I do?**

Erase old messages or contacts. See “To erase messages automatically (Auto-Erase Text)” on page 32 and “To erase information from a contact” on page 12.

### **How do I import ringers to my phone?**

See “To import ringers” on page 26.

### **How do I improve my phone’s battery performance?**

See “Tips for improving battery performance” on page 10.

### **How do I get accessories for my phone?**

To shop for phone accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store), or call (800) 211-1537 (U.S.A. only) or (510) 683-4004.

### **How do I become a product evaluator?**

To participate in the testing and evaluation of Kyocera Wireless Corp. products, including cellular or PCS phones, visit [beta.kyocera-wireless.com](http://beta.kyocera-wireless.com).

### **Where to find help**

Your service provider's customer support department may be accessible directly from your phone when you dial a number such as \*611 (check with your service provider). They can answer questions about your phone, phone bill, call coverage area, and specific features available to you, such as call forwarding or voice mail.

For questions about the phone features, refer to the materials provided with your phone, or visit [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

For additional questions, you may contact the Kyocera Wireless Corp. Customer Care Center in any of the following ways:

- Web site: [www.kyocera-wireless.com](http://www.kyocera-wireless.com)
- Email: [phone-help@kyocera-wireless.com](mailto:phone-help@kyocera-wireless.com)
- Phone: (800) 349-4478 (U.S.A. and Canada only) or (858) 882-1401.

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.
- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The phone's electronic serial number (ESN).  
To find the ESN:
  - a. Remove the battery (see "Removing the battery" on page 1).
  - b. Locate the white label on the back of the phone.
  - c. Your phone's 11-digit ESN begins with "D" and is located under the bar code on the label.

# INDEX

---

## Numerics

1-Touch Dialing, 13

## A

Alarm Clock, 34

alerts, 29, 32, 37

analog mode, 30

answering calls, 5

## B

backlighting, 24, 26

    power, 24, 33

battery

    care and safety, 9

    performance, 10

    removing, 1

    replacing, 1

## C

calls

    answering, 5

    ending, 5

    making, 5

    muting, 6

    unmuting, 6

CDMA, enhanced voice privacy, 3, 29

characters

    Spanish, 16

Clear key, 2

contact

*see also* phone book

    business, 11

    calling, 13

    classifying, 11

    creating new, 8, 11

    editing, 12

    erasing, 12

    finding, 12

    personal, 11

    saving a phone number as, 8, 12

    searching for, 12

Contacts directory

*see also* phone book

    calling from, 13

    searching, 12

Countdown Timer, 35

## D

data/fax setup, 29

dialing

    1-Touch, 13

- from Recent Calls list, 15
- speed, 8, 13
- digital mode, 30

**E**

- End/Power key, 2
- ending calls, 5
- enhanced CDMA voice privacy, 3, 29

**F**

- Fast Find, 30

**H**

- hanging up, 5
- hard pause, 17

**I**

- icons, 3
- InBox, Text, 18
- Internet browser, 36

**K**

- Keyguard, 25
  - shortcut to, 7
- keypad
  - locking, 7, 25
    - shortcut to, 7
  - unlocking, 7, 25

**L**

- languages, 16
- letters
  - entering, 15
  - special characters, 16
- locking
  - keypad, 7, 25
  - phone, 27

**M**

- making calls, 5
- messages
  - adding a callback number to, 21
  - erasing, 22
    - automatically, 32
  - receiving new, 18
  - retrieving, 18
  - sending
    - new, 18
  - status of, 21
  - storing
    - scheduled, 18
    - sent, 18
  - troubleshooting, 23
- messaging
  - two-way, 18
- mode
  - analog, 30



digital, 30  
mute, 6

## **N**

navigator key, 2  
    shortcuts, 7  
Net Alerts, 37

## **O**

OutBox, Text, 18, 21

## **P**

pauses  
    hard, 17, 31  
    timed, 17, 31  
phone  
    locking, 27  
    unlocking, 27  
phone book  
    calling from, 13  
    finding a number in, 12  
    saving a phone number to, 8, 12  
    searching, 12  
phone number  
    adding new, 8, 12  
    finding, 12  
        quickly (Fast Find), 30  
        your own, 5  
primary, 11

    saving, 8, 12  
    type of, 11  
power-save mode, 9  
privacy  
    alert, 29  
    enhanced CDMA, 3, 29

## **R**

Recent Calls list, dialing from, 15  
redialing last number called, 8, 14  
resetting the phone, vi  
ringers, changing, 26  
roaming, 30

## **S**

safety, vi  
saving a phone number, 8, 11  
screen icons, 3  
Shift key, 2  
shortcut keys  
    creating, 7  
    modifying, 8  
    using, 7  
silence  
    all sounds, 7, 25  
    ringer, 6  
Silence All mode, 25  
Smart Sound, 6

Sounds, 25  
    ringer type, 26  
Space key, 2  
special characters, 16  
speed dialing, 8, 13  
    assigning to phone numbers, 8

## **T**

text  
    entering, 15  
    entry modes, 15  
Text InBox, 18  
Text OutBox, 18, 21  
timed pause, 17  
two-way messaging, 18

## **U**

unlocking  
    keypad, 25  
    phone, 27  
unmute, 6

## **V**

voice privacy, enhanced CDMA, 3, 29  
voicemail  
    calling, 6, 14  
    changing number, 31  
volume  
    adjusting automatically (Smart Sound), 6

adjusting manually, 6

## **W**

Web Browser, 36