# Using the NEC IntraMail Utility (P/N 80054-V01.\*\*.\*\*)

## Use the NEC IntraMail Utility to:

- Determine the version of system voice prompts currently installed on the IntraMail CompactFlash card. See *Selecting the CompactFlash Card on page 2*.
- Back up the system voice prompts as well as recorded names, messages and greetings stored on the IntraMail CompactFlash card to your PC hard disk. *See page 3*.
- Restore the system voice prompts as well as recorded names, messages, and greetings stored on the your PC hard disk to the IntraMail CompactFlash card. See page 4.
- Update the system voice prompts stored on the IntraMail CompactFlash Card (required for feature upgrades). See page 5.
- Optionally initialize (completely erase) the IntraMail CompactFlash card and load the latest system voice prompts. See page 6.

#### Minimum Requirements

- Pentium 330 MHz with 128 MByte RAM, 256 Color 800 x 600 display, USB port.
- Windows 2000 or XP and above.
- CompactFlash Card Reader (*SimpleTech STI-UCF-100* or equivalent), or, if your PC has a PCMCIA slot, PC Card Adapter for Type I CompactFlash Cards (*SimpleTech STI-CFAD* or equivalent).

#### Part 1: Installation

1. Insert your IntraMail Utility CD or double-click the installer file (e.g., *intramail\_utility\_install.exe.*) Once the installer starts, you see:



**3.** When you see the screen at right, click **Install>** to accept the displayed information.

🕼 NEC IntraMail Utility - Ins	tallShield Wizard 🛛 🕅
Ð	InstallShield Wizard Completed
1	The InstallShield Wizard has successfully installed NEC IntraMail Utility. Click Finish to exit the wizard.
	< Back Finish Cancel

2. When you see the screen at left, click Next>.

谩 NEC IntraMail Utility - InstallShield Wizard	$\mathbf{X}$
Ready to Install the Program The wizard is ready to begin installation.	
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard. Current Settings:	
Setup Type:	
Destination Folder:	
C:\Program Files\NEC\Intramail\	
User Information:	
Name: IBM USER	
Company: IBM CUSTOMER	
InstallShield	

4. When you see the screen at left, click **Einish** to complete the installation.

## Part 2: Starting the IntraMail Utility

- 1. Turn off your telephone system and access the IntraMail PCB. (Refer to the *IntraMail Quick Setup Guide* that came with your IntraMail for additional instructions, if required.)
- **2.** Following proper anti-static precautions, remove the IntraMail CompactFlash Card from your IntraMail PCB.
- 3. Insert the IntraMail CompactFlash Card into your PC's CompactFlash Card reader.

To check the utility version number, click here then

**4.** Double-click the *IntraMail Utility* shortcut on your PC desktop. You see the **Main Screen**.

select About NEC IntraMail Utility	
MEC IntraMail Utility	
IntraMail Card Status Card Not Selected Type Device Prompt Version	Select your CompactFlash Reader and display important IntraMail CompactFlash card information.
Messages         Backup       Save all messages, greetings, recorded names, and system prompts to a backup file. The Caller-ID information for messages will be lost.         Restore       Restore all messages, greetings, recorded names, and system prompts from a backup file. All data currently on the card will be lost	<b>Backup</b> to your PC and <b>restore</b> the voice prompts as well as recorded names, messages and greet- ings stored on the IntraMail CompactFlash Card.
Prompts Update Replace the system prompts with a newer version. The messages, greetings, and recorded names will not be affected.	<i>Update</i> the voice prompts stored on the IntraMail CompactFlash Card (required for feature upgrades).
File System Initialize Re-format the card and install the system prompts. All data currently on the card will be lost. Ready	Optionally <i>initialize</i> (completely erase) the IntraMail CompactFlash card and load the latest voice prompts

#### Part 3: Selecting the CompactFlash Card

After inserting the IntraMail CompactFlash Card into your reader, you must select it.

1. To select the card, click Select. you see:



- If you change the IntraMail CompactFlash Card in the middle of an IntraMail Utility session, click Select to read the new card.
- 2. Use the drop-down box to select the card and click **OK**. The *IntraMail Card* portion of the **Main Screen** will update with your card's information.



Indicates that the IntraMail Utility is ready to use the installed card.

The card reader drive ID or volume label (if any).

#### Part 4: Backing Up the IntraMail CompactFlash Card

You can back up the voice prompts as well as the recorded names, messages and greetings stored on the IntraMail CompactFlash Card to your PC's hard drive

1. To back up your IntraMail CompactFlash Card, click Backup. You see:

Save As								?×
Save in:	🗁 Backup				•	+ €	r 🖬	
My Recent Documents Desktop								
My Documents								
My Computer								
	File name:	*.imb					•	Save
My Network Places	Save as type:	IntraMai	Greeting &	Data Files	(*.imb)	l	•	Uancel

- The default backup directory is C:\NEC\Intramail\Backup.
- You can create a directory for your backup anywhere on your PC's hard drive. If you are maintaining several customer sites, consider making a separate folder for each site.
- Caller ID data stored as part of an incoming voice message is not retained during the backup. This information is lost.
- After the backup, messages stored in Subscriber Mailboxes may be restored as new messages.
- 2. Select the location on your PC hard drive in which you want to store the backup files and click **Save**. The backup may take several minutes. When the backup completes, you see:



3. Click OK.

## Part 5: Restoring a Backed-up Database to the IntraMail CompactFlash Card

You can restore the system voice prompts as well as the recorded names, messages and greetings backed-up on your PC's hard drive to the IntraMail CompactFlash Card.

1. To restore your backed-up data to your IntraMail CompactFlash Card, click Restore. You see:

Open					?×
Look in:	🔁 Backup	<b>_</b>	<b>←</b> €	-11	
My Recent Documents					
Desktop					
My Documents					
My Computer					
My Network	File name:	*.imb		• [	Open
Places	Files of type:	NEC Intramail Greeting & Data Files	(*.imb)	•	Cancel

- Restoring a database to an IntraMail Compact Flash Card will erase all the data currently stored on the card.
- Be sure you restore your backed-up database to an Intramail CompactFlash Card of the same capacity (4 hour vs. 8 hour).
- Do not attempt to restore an 8 hour database to a 4 hour IntraMail CompactFlash Card.
- 2. Select the previously backed up database on your PC's hard drive and click OK.
  - The restore will take several minutes.
- **3.** When the restore completes, you see:



4. Click OK.

## Part 6: Updating the System Prompts

You may need to update the IntraMail system prompts on the IntraMail CompactFlash Card to be able to use new features. The documentation that came with your new software will tell you when this is required.

1. To update your system prompts, click Update. You see:

Open						?×
Look in:	Prompts		•	+ Ē (		
My Recent Documents Desktop	PromptUpdate	.imp				
My Documents						
My Computer						
My Network Places	File name:	*.imp			-	Open
	Files of type:	NEC Intramail Greeting & Data	Files (	*.imp)	•	Cancel

- The default location for the system prompt file is C:\NEC\Intramail\Prompts.
- Recorded names, messages and greetings are not lost when you update the system voice prompts.
- 2. Select the file *PromptUpdate.imp* and click **Open**. When the prompt update completes, you see:

NEC IntraMail Utility 🛛 🗙				
	Prompt Update complete.			
	ОК			

• If the system voice prompt set currently on the IntraMail CompactFlash Card is newer than the prompt set you are trying to send, you see a message similar to:.

NEC Intr	aMail Utility	
	The Prompt Update is version $1.10~{\rm and}$ the IntraMail Card prompts are version $1.2~1.10?$	0. Would you like to replace the IntraMail Card prompts with version
	Yes No	

Click Yes to overwrite the newer prompt set or No to cancel the update.

• Overwriting a newer system voice prompt set with an older set may disable certain IntraMail features.

## Part 7: Initializing the Intramail CompactFlash Card

The IntraMail Utility provides you with the option of initializing (reformatting) the IntraMail CompactFlash Card. *Initializing* completely erases the card and loads the latest system voice prompts. All recorded names, messages and greetings are permanently erased during initialization.

1. To initialize the IntraMail CompactFlash Card, click Initialize. You see:

NEC Inti	raMail Utility 🛛 🔀
	You are about to re-format the IntraMail card. Do you want to continue?
	Yes No

2. Click Yes to continue with the initialization or No to cancel. If you click Yes, you see:

NEC IntraMail Utility				
	The next dialog will show the Format options. IntraMail card will not work in the system.	Please select the 'FAT' (not 'FAT32') for the File System type.	The 'FAT' option must be selected or the	
		OK		

• This screen instructs you to select the FAT format option in step 3 below. Click **OK** to continue. You see the Format Screen:

Format Removable Disk (F:)	<ul> <li><i>Capacity</i> indicates the storage capacity of your IntraMail CompactFlash Card.</li> <li><i>You cannot change this option</i>.</li> </ul>
61.1 MB	For File system, you must choose FAT. If you choose FAT32, your IntraMail CompactFlash Card will not work in your IntraMail PCB.
Allocation unit size Default allocation size	You cannot change the <i>Allocation unit size</i> option. It should be set as shown.
Volume label Format options Quick Format Enable Compression Create an MS-DOS startup dist	To help identify an Intramail CompactFlash Card, optionally enter a <i>Volume label</i> . The label can be up to 11 characters, and typically represents a site or customer. The IntraMail Utility will display the volume label in the <i>IntraMail Card: Device</i> field.
Start Close	The setting for the <i>Quick Format</i> option does not matter. Leave it either checked or unchecked.
	<ul> <li>Optionally click <i>Close</i> to abort the initialization.</li> </ul>

**3.** Once you have made the proper selections in step 2 above, click **Start**. You see:



4. Click OK to initialize the IntraMail CompactFlash Card, or Cancel to exit without initializing.

## Part 7: Initializing the Intramail CompactFlash Card (Cont'd)

**5.** When the initialization is complete, you see:



- 6. Click OK to return to the *Format Screen*, then **Close** to return to the *Main Screen*.
  - The system voice prompts will automatically be restored to the IntraMail CompactFlash Card after you click Close.



