

PAGEPAC CONNECTIONS


FOR THE

MERLIN PLUS


AUGUST 1994


TABLE OF CONTENTS

	PAGE
PAGEPAC 6 WITH TRUNK ADAPTER	1
PAGEPAC 6 WITH PORTSAVER (ONE SHARED LINE PORT)	2
PAGEPAC 6 (PAGE VIA PAGE PORT)	3
PAGEPAC 6 PLUS (ONE DEDICATED LINE PORT)	4
PAGEPAC 6 PLUS (ONE SHARED LINE PORT)	5
PAGEPAC 6 PLUS (TWO SHARED LINE PORTS)	6
PAGEPAC 20 WITH TRUNK ADAPTER	7
PAGEPAC 20 (PAGE VIA PAGE PORT)	8
PAGEPAC 20 AND TALKMATE	9
PAGEPAC 20 AND TALKMATE (PAGE VIA PAGE PORT)	10
PAGEPAC 20 AND ZONEMATE	11
PAGEPAC VS	12
PAGEPAC 50, 100, AND 200	13
AMPLICENTER (PAGE VIA PAGE PORT)	14
AMPLICENTER WITH TRUNK ADAPTER	15
PAGEPAC PLUS D-SERIES AMPLICENTER	16
PAGEPAC PLUS D-SERIES AMPLICENTER (PAGE VIA PAGE PORT)	17
PAGEPAC PLUS D-SERIES AMPLICENTER WITH CONTROLLER	18

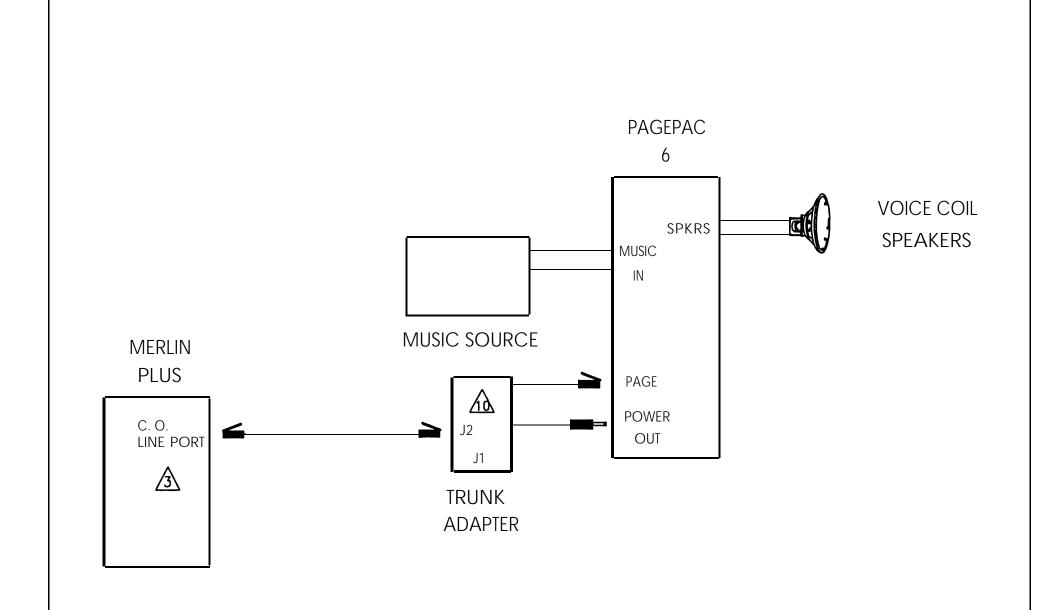





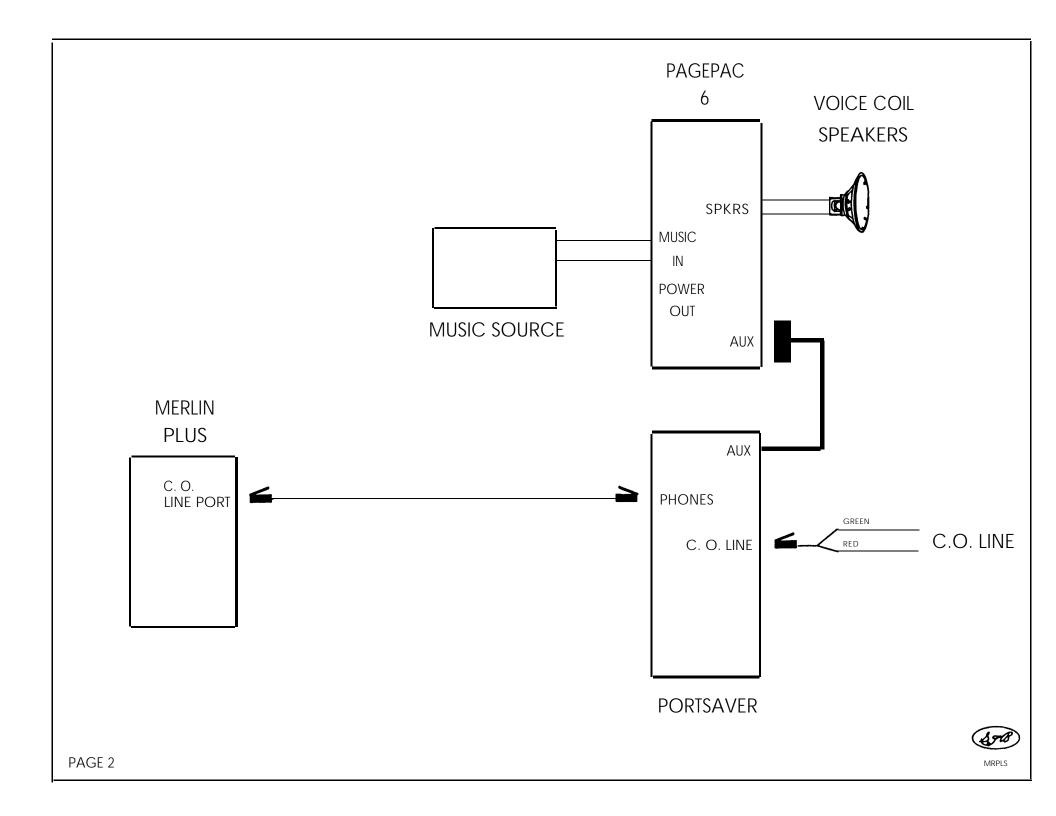

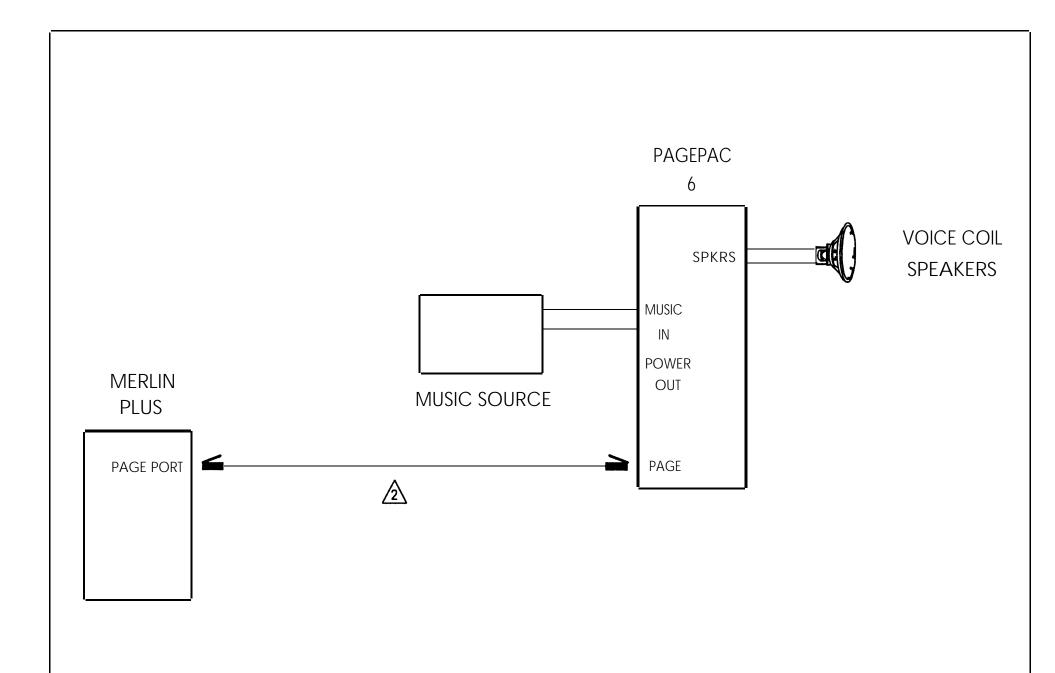





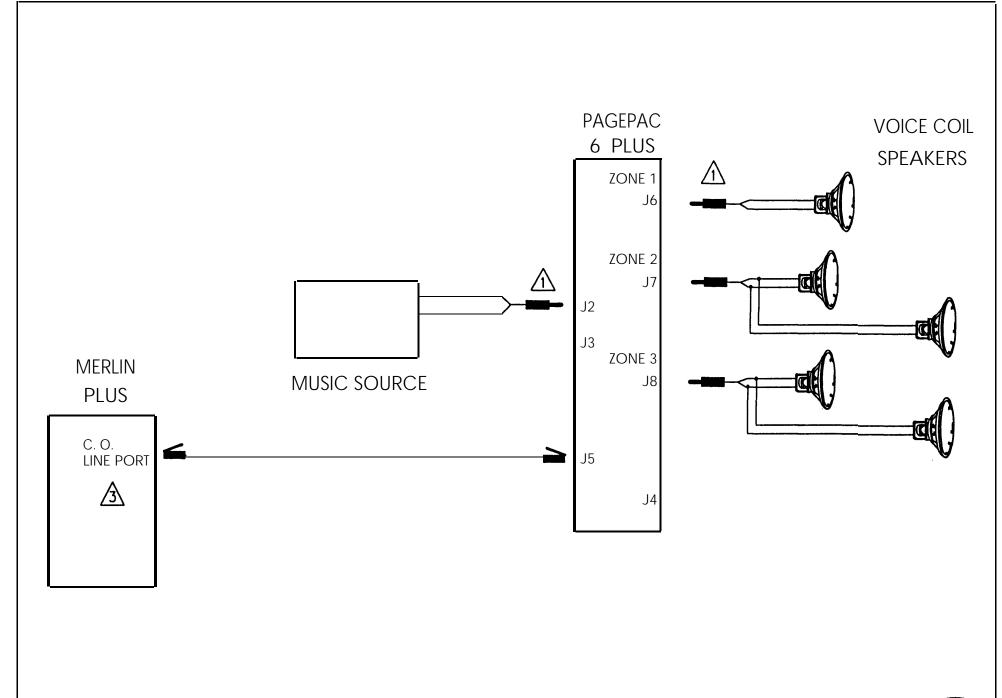

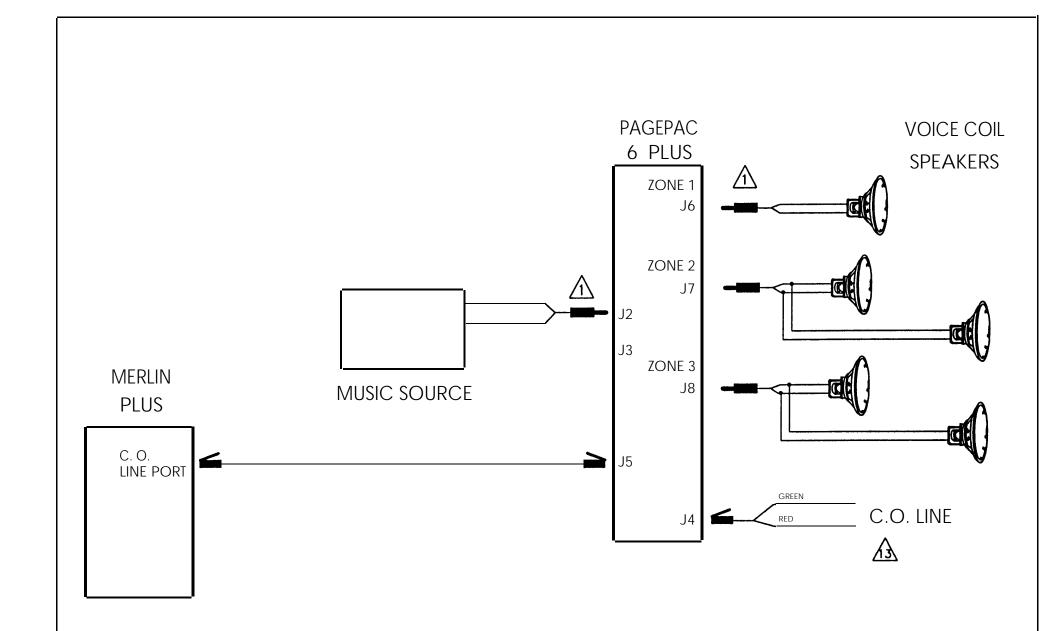





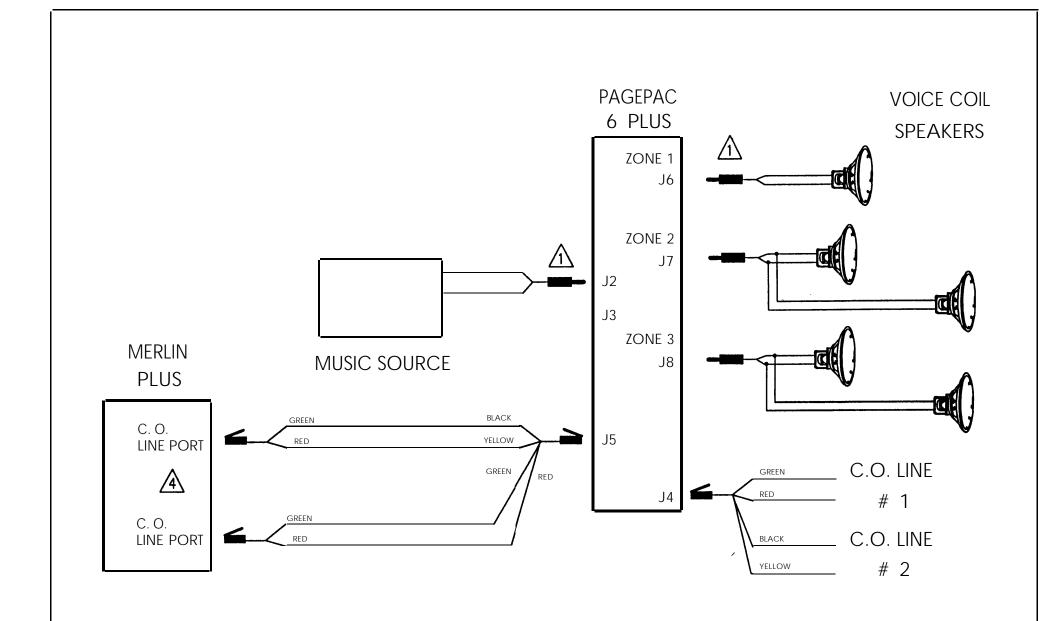


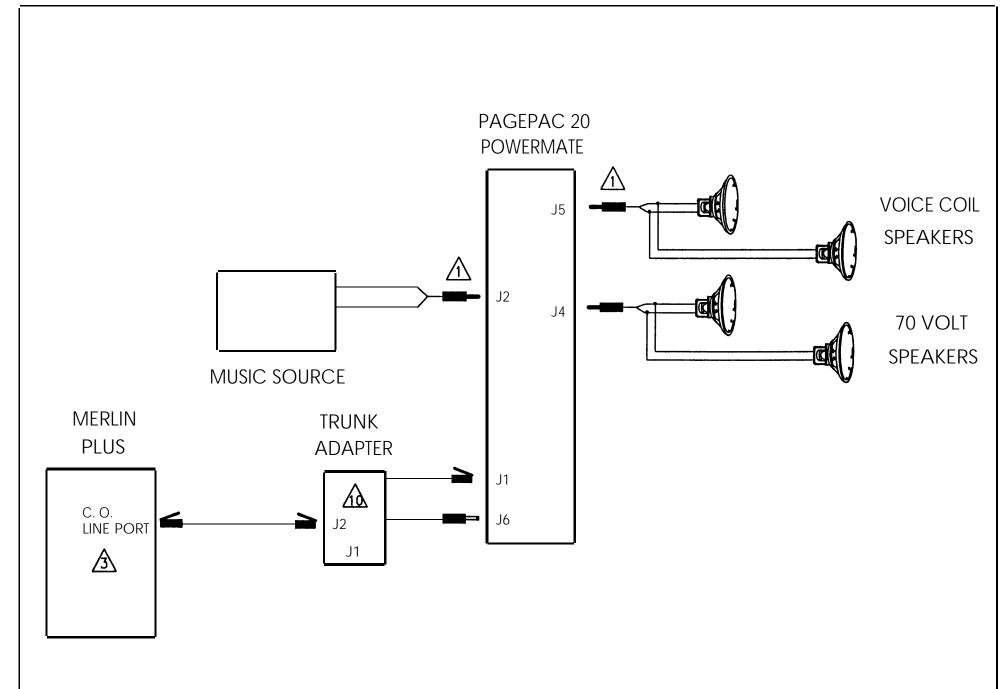





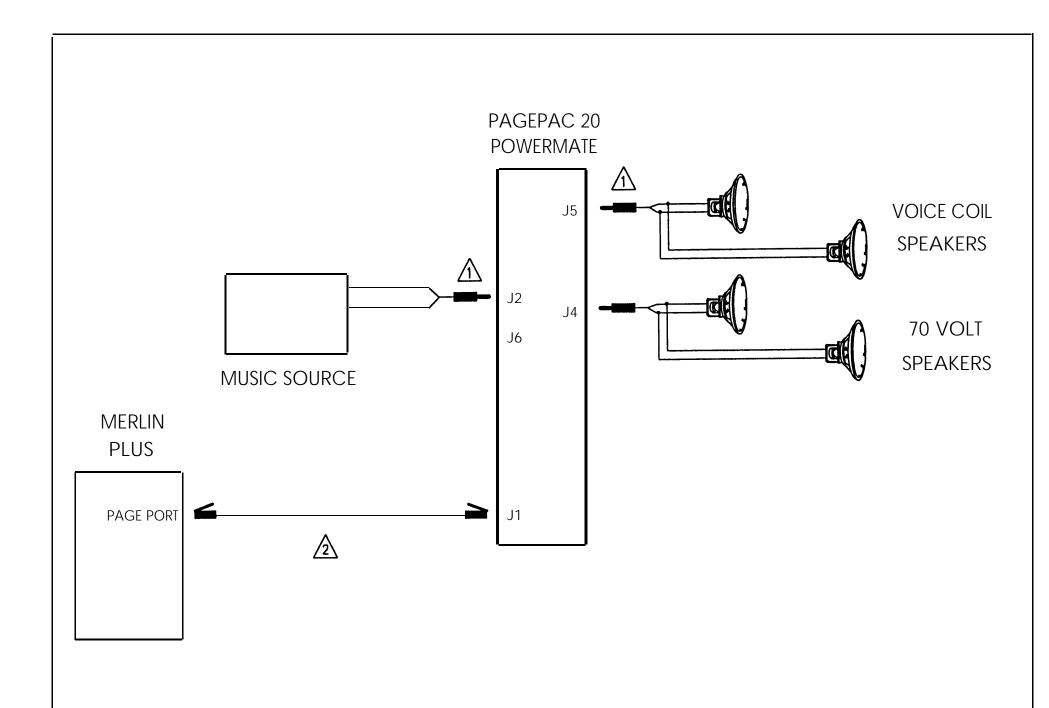

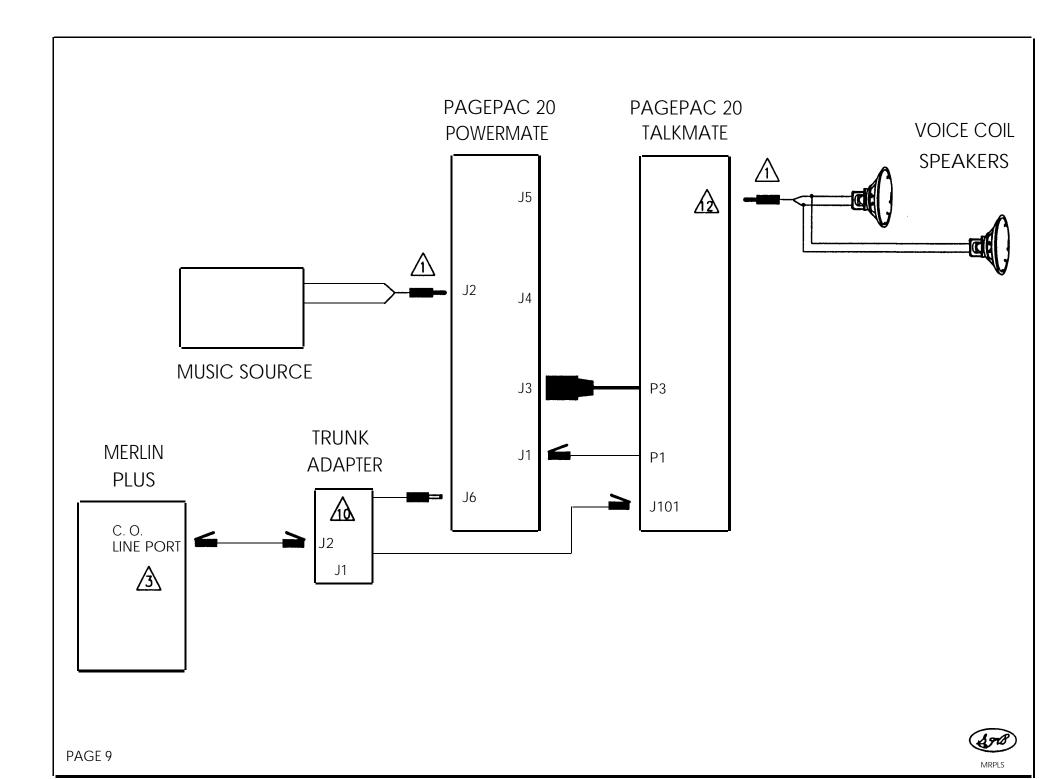


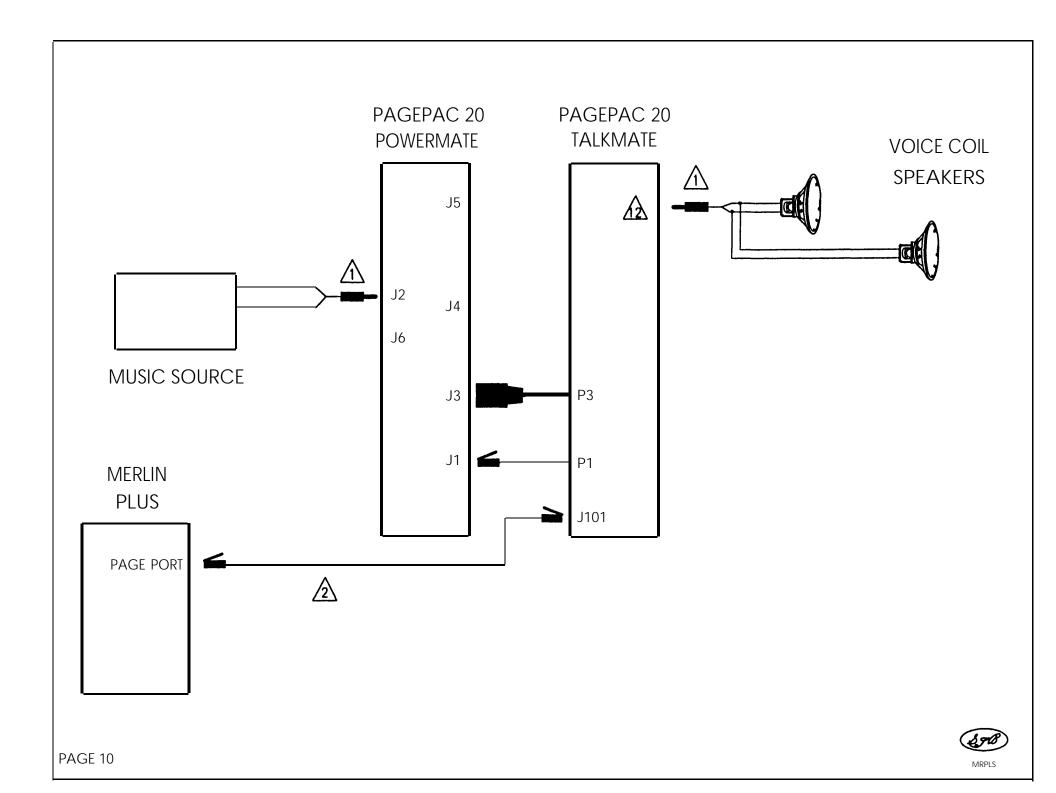

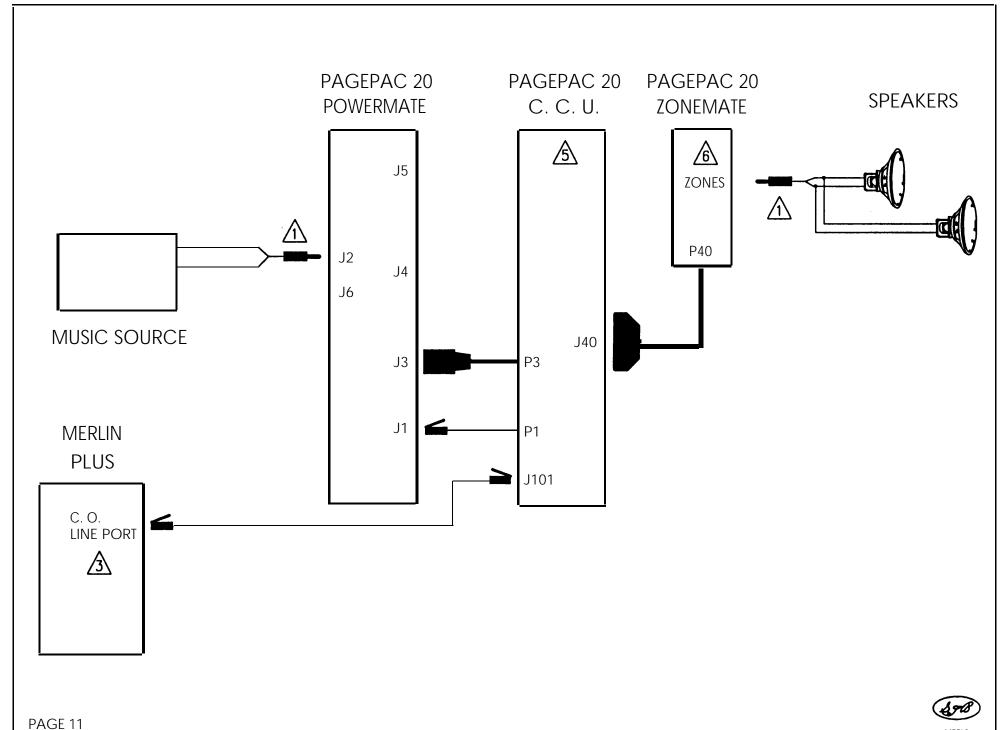


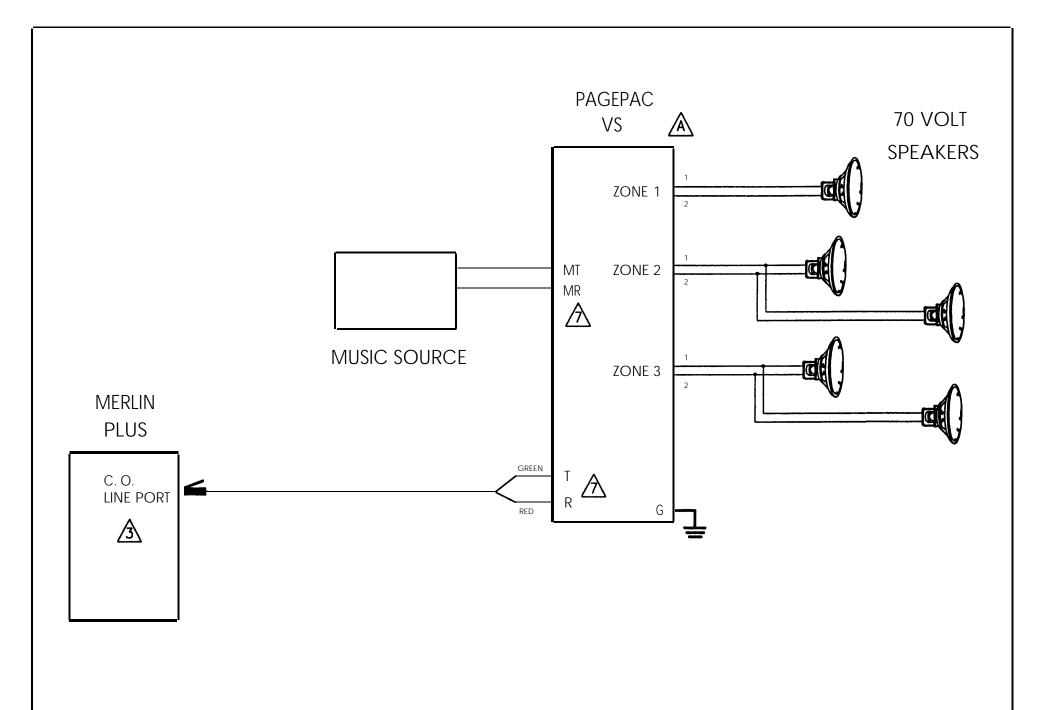




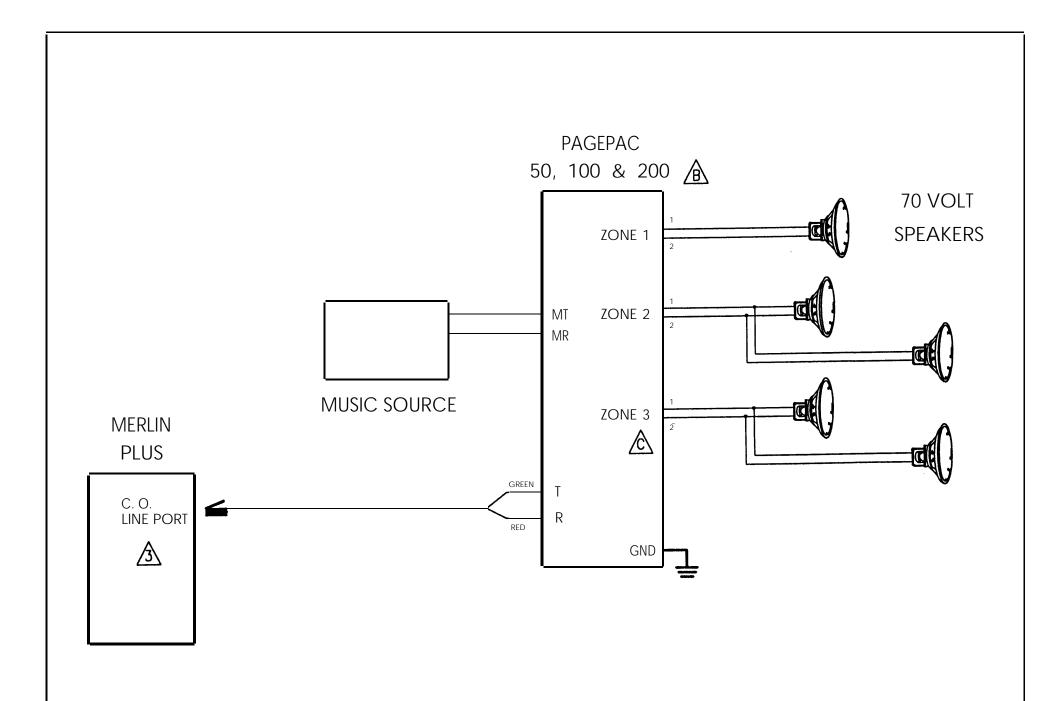




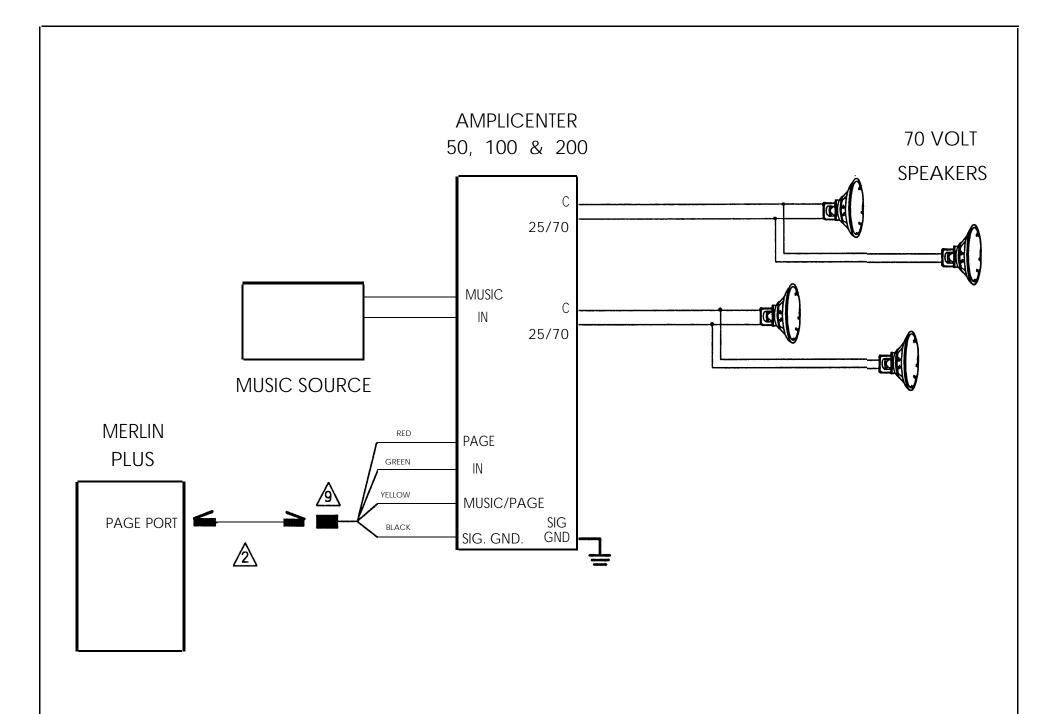




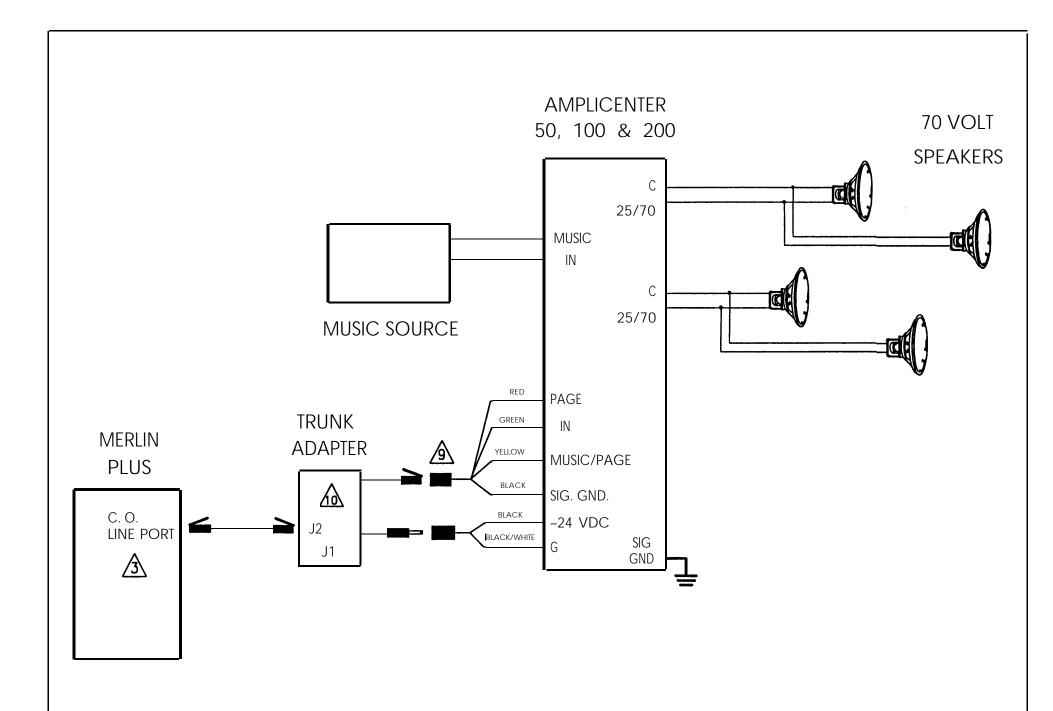


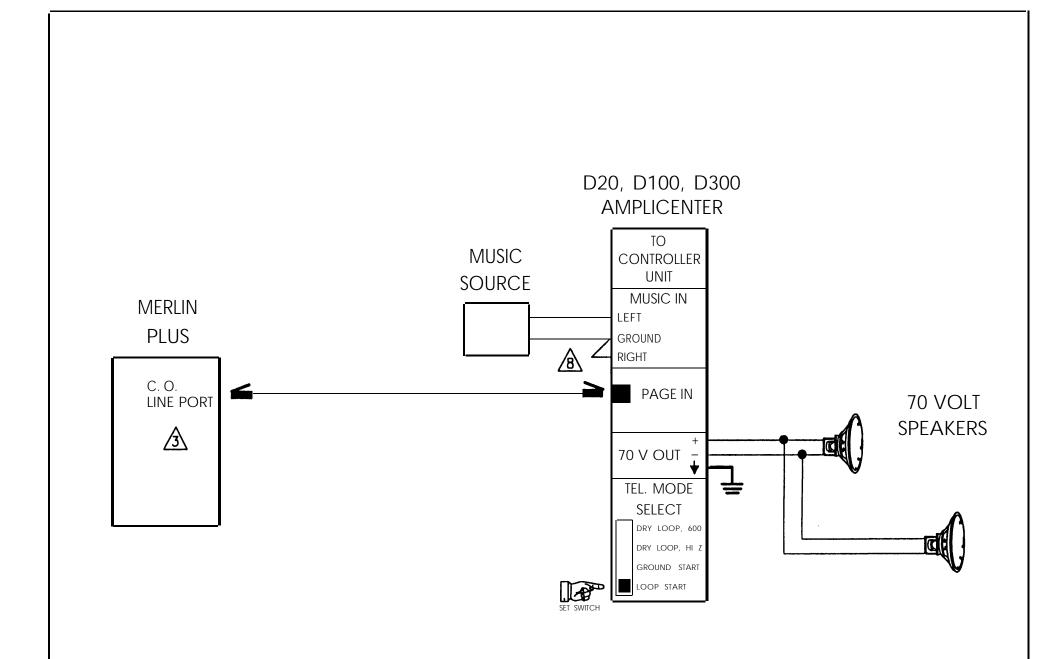



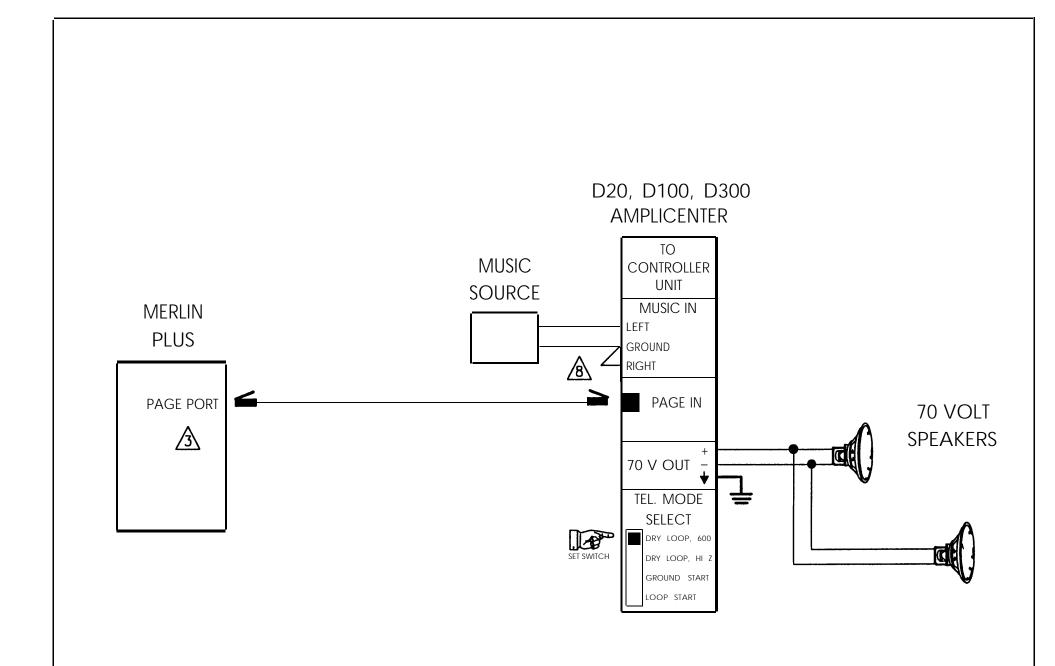



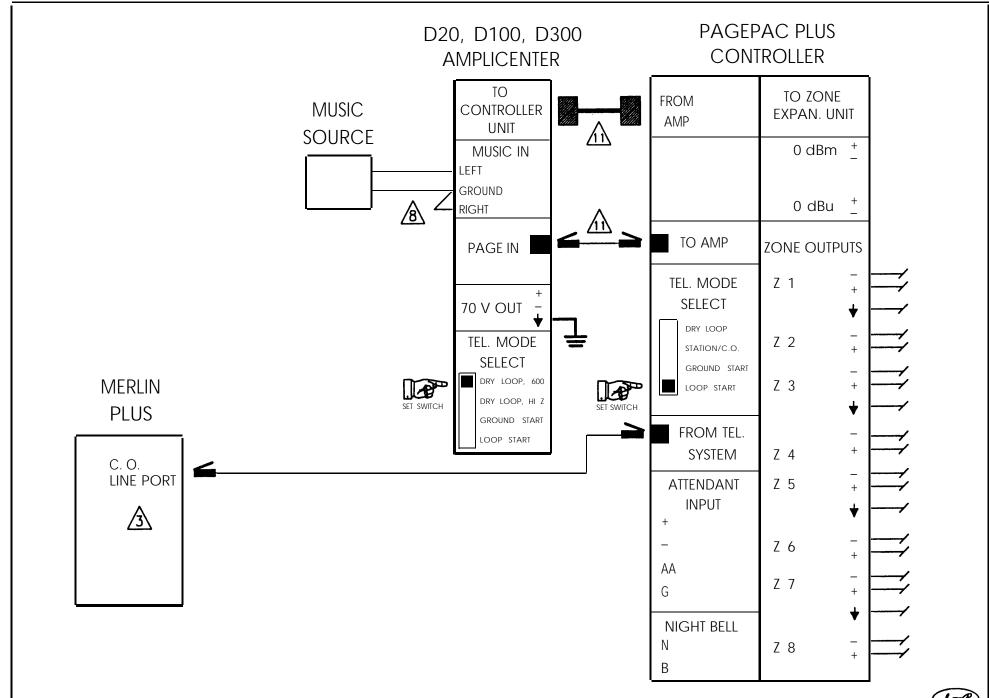

NOTES:



RCA PLUGS.



A FOUR-CONDUCTOR MODULAR CORD MUST BE USED.



LINE PORT IS DEDICATED TO PAGING ONLY.



THESE CONNECTIONS ALLOW BOTH C.O. LINE PORTS TO ACCESS PAGING AND/OR OUTSIDE LINES.



PAGEPAC 20 COMMON CONTROL UNIT (C.C.U.) SET TO THE LOOP START (LS) POSITION.



CAN BE EITHER A ZONEMATE 9 OR A ZONEMATE 39. THE ZONEMATE 9 CAN BE CONFIGURED FOR 9 "VOICE COIL" ZONES OR 6 "VOICE COIL" ZONES AND 3 "70 VOLT" ZONES. ALL 39 ZONES OF THE ZONEMATE 39 ARE "VOICE COIL" OUTPUTS ONLY. TALKBACK CAN ONLY BE PROGRAMMED INTO "VOICE COIL" ZONES ON THESE SYSTEMS.



THE "MUSIC IN" PORT (MT/MR) IS FOUND ON "TB1" OF THE "UNIVERSAL INTERFACE CARD" (U.I.C.). THE "TIP/RING" PORT (T/R) IS FOUND ON "TB2" OF THE U.I.C.



STRAP TOGETHER.



ADAPTER CABLE SET P/N 22050-902 SUPPLIED WITH EACH AMPLICENTER.



LOOP START TRUNK ADAPTER.



USE ONLY THE CABLES PROVIDED WITH THE EQUIPMENT.



JACK LABELLED "TALKBACK VOICE COIL OUT".



THESE CONNECTIONS ALLOW ONE C.O. LINE PORT TO ACCESS PAGING AND/OR OUTSIDE LINES.



NOTES:



THE PAGEPAC VS COMES EQUIPPED WITH A "UNIVERSAL INTERFACE CARD" (U.I.C.). THE PAGEPAC VS WILL ONLY SUPPORT 3 ZONES, WITH AN ALL-CALL, OF PAGING. THE U.I.C. MUST BE OPTIONED FOR THE LOOP START ACCESS MODE.



THE PAGEPAC 50, 100 AND 200 WATT UNITS ALL COME EQUIPPED WITH A "C" APPLIQUE CARD AND A MASTER ZONE CARD. THE "C" APPLIQUE CARD MUST BE OPTIONED FOR THE LOOP START ACCESS MODE. WITH THESE TWO CARDS, THE PAGEPACS WILL SUPPORT 4 ZONES, WITH AN ALL-CALL, OF PAGING. THE ADDITION OF 5 AUXILIARY ZONE CARDS WILL BRING THE PAGEPACS UP TO THEIR MAXIMUM OF 24 ZONES.



ONLY CONNECTIONS FOR THE FIRST 3 ZONES ARE SHOWN HERE.

