

HARRIS
DRACON DIVISION

Technical Support Group

PAGEPAC CONNECTIONS


FOR THE


PARTNER

NOVEMBER 1994

TABLE OF CONTENTS


	PAGE
PAGEPAC 6 WITH TRUNK ADAPTER	1
PAGEPAC 6 WITH PORTSAVER (ONE SHARED LINE PORT)	2
PAGEPAC 6 PLUS (ONE DEDICATED LINE PORT)	3
PAGEPAC 6 PLUS (ONE SHARED LINE PORT)	4
PAGEPAC 6 PLUS (TWO SHARED LINE PORTS)	5
PAGEPAC 20 WITH TRUNK ADAPTER	6
PAGEPAC 20 WITH TRUNK ADAPTER AND TALKMATE	7
PAGEPAC 20 AND ZONEMATE	8
PAGEPAC VS	9
PAGEPAC 50, 100, AND 200	10
AMPLICENTER WITH TRUNK ADAPTER	11
PAGEPAC PLUS D-SERIES AMPLICENTER	12
PAGEPAC PLUS D-SERIES AMPLICENTER WITH CONTROLLER	13

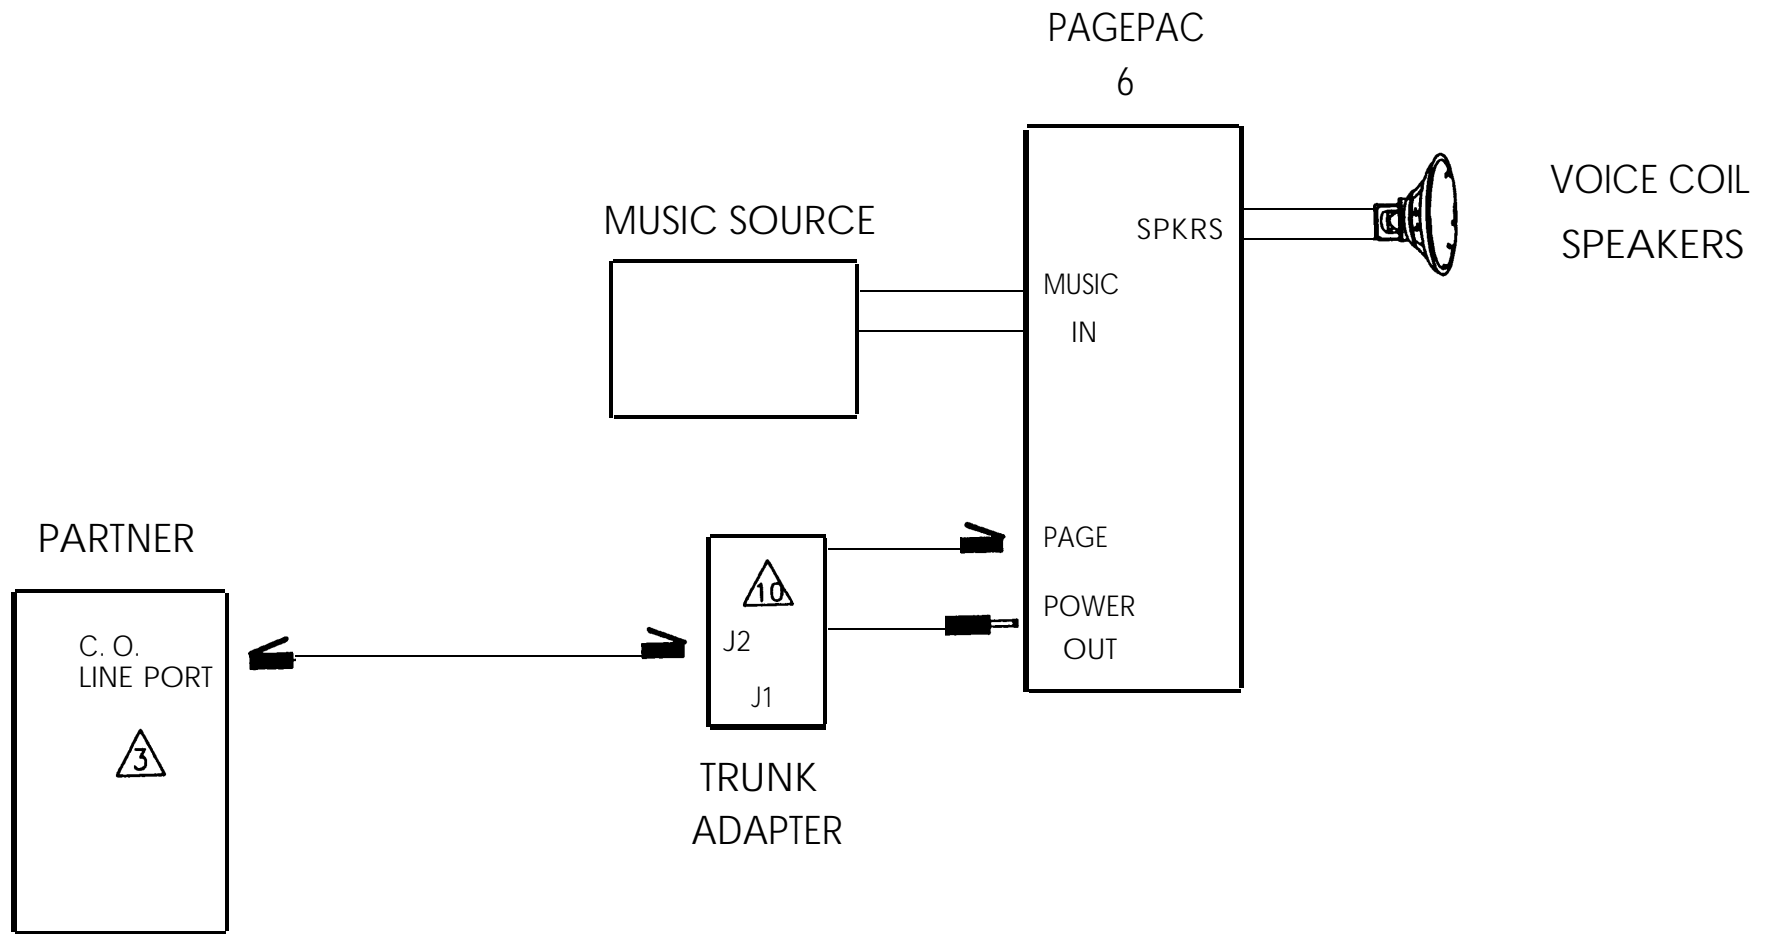


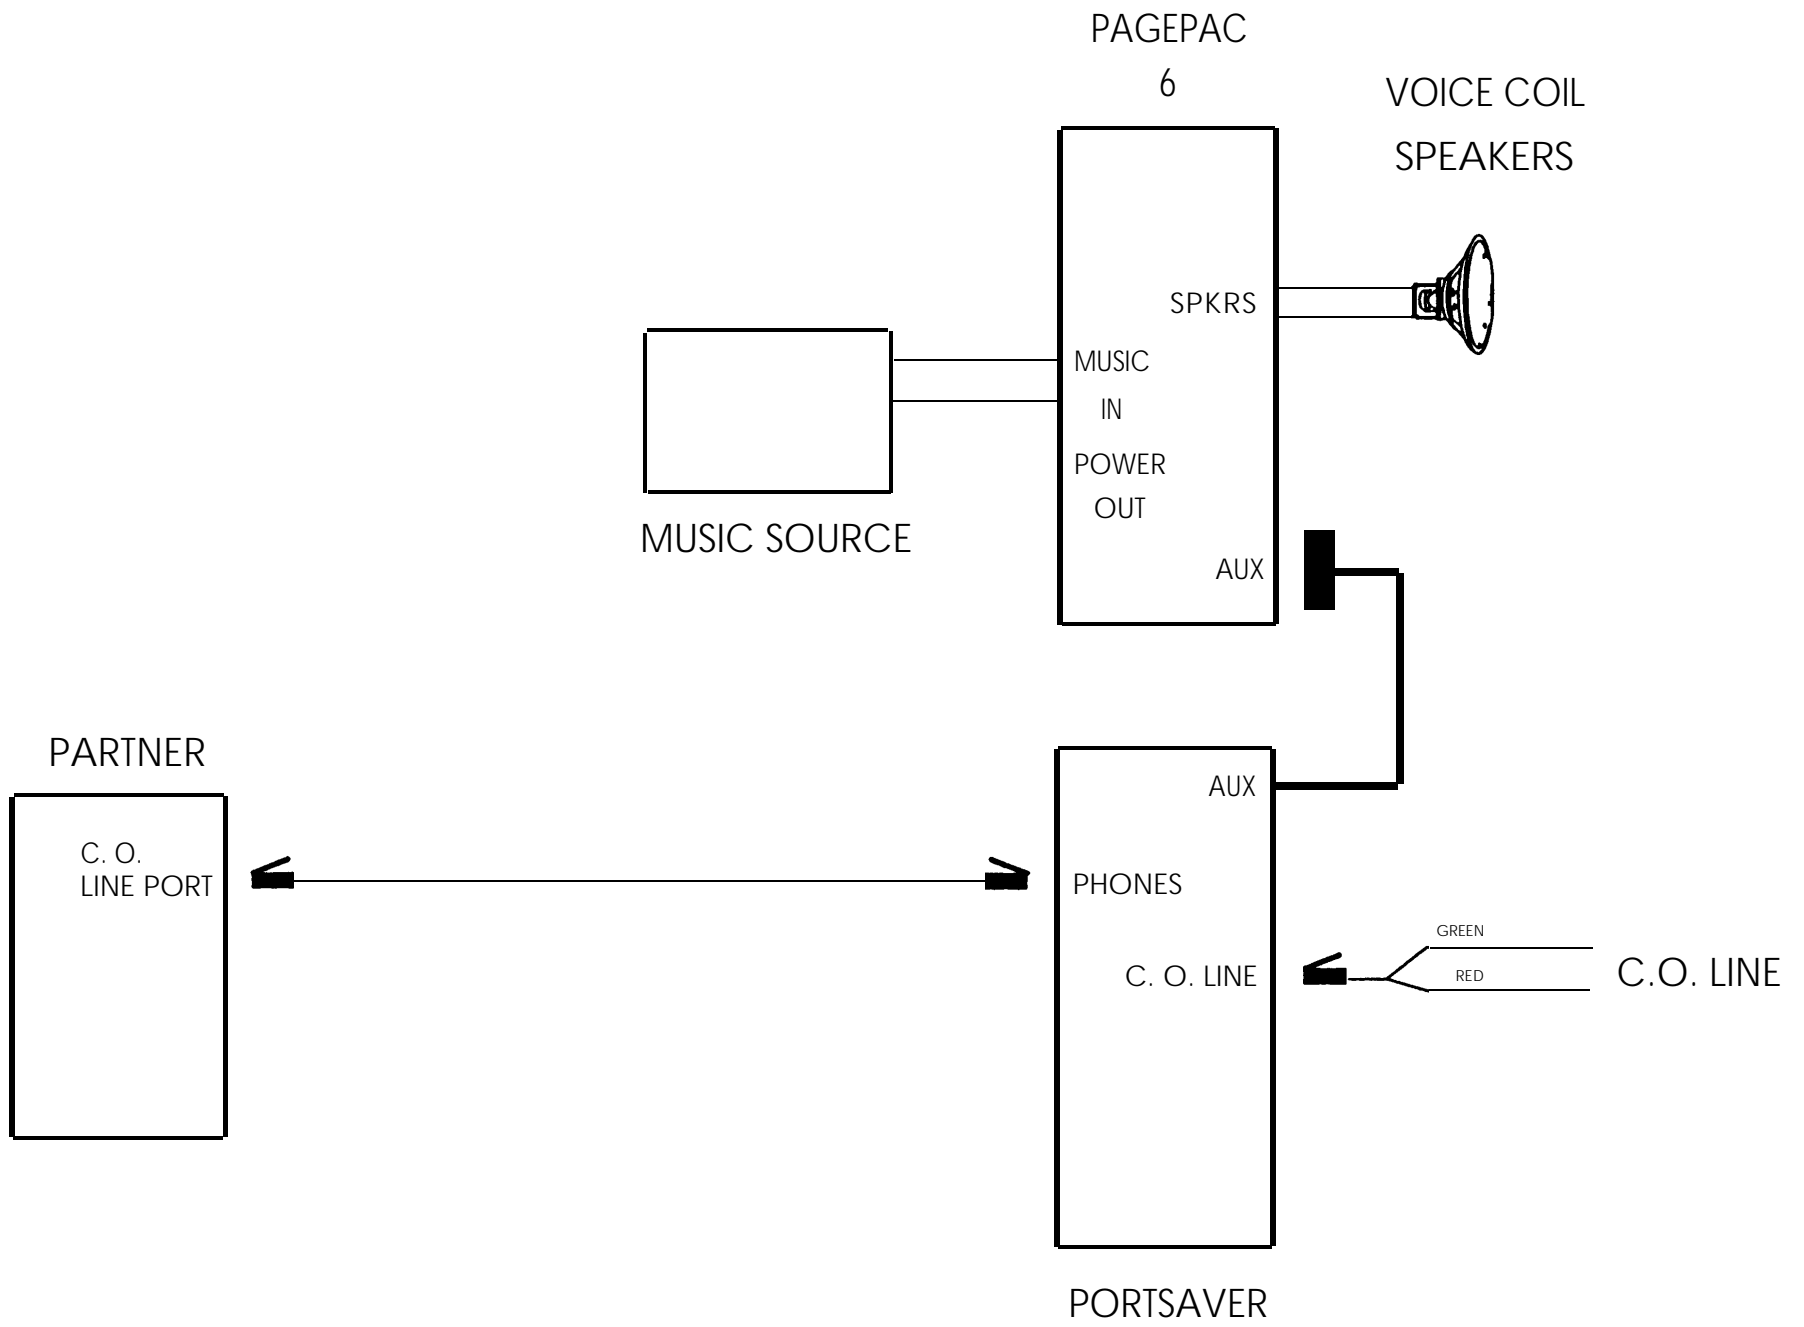

PAGEPAC
6 PLUS


VOICE COIL
SPEAKERS

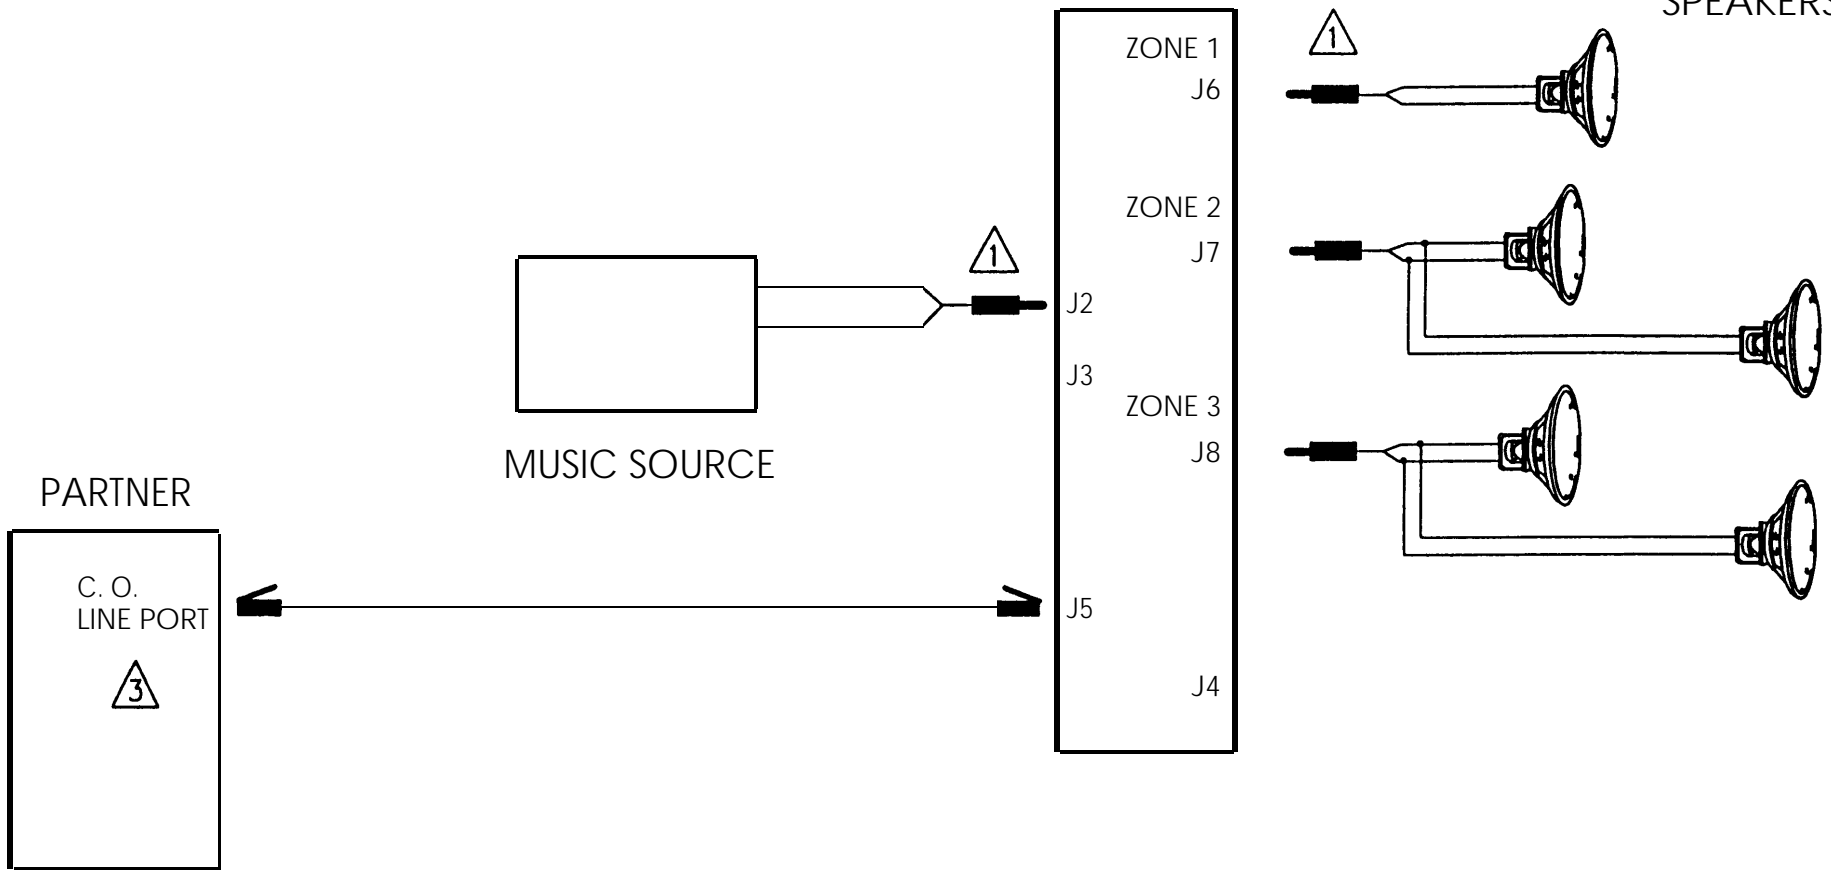



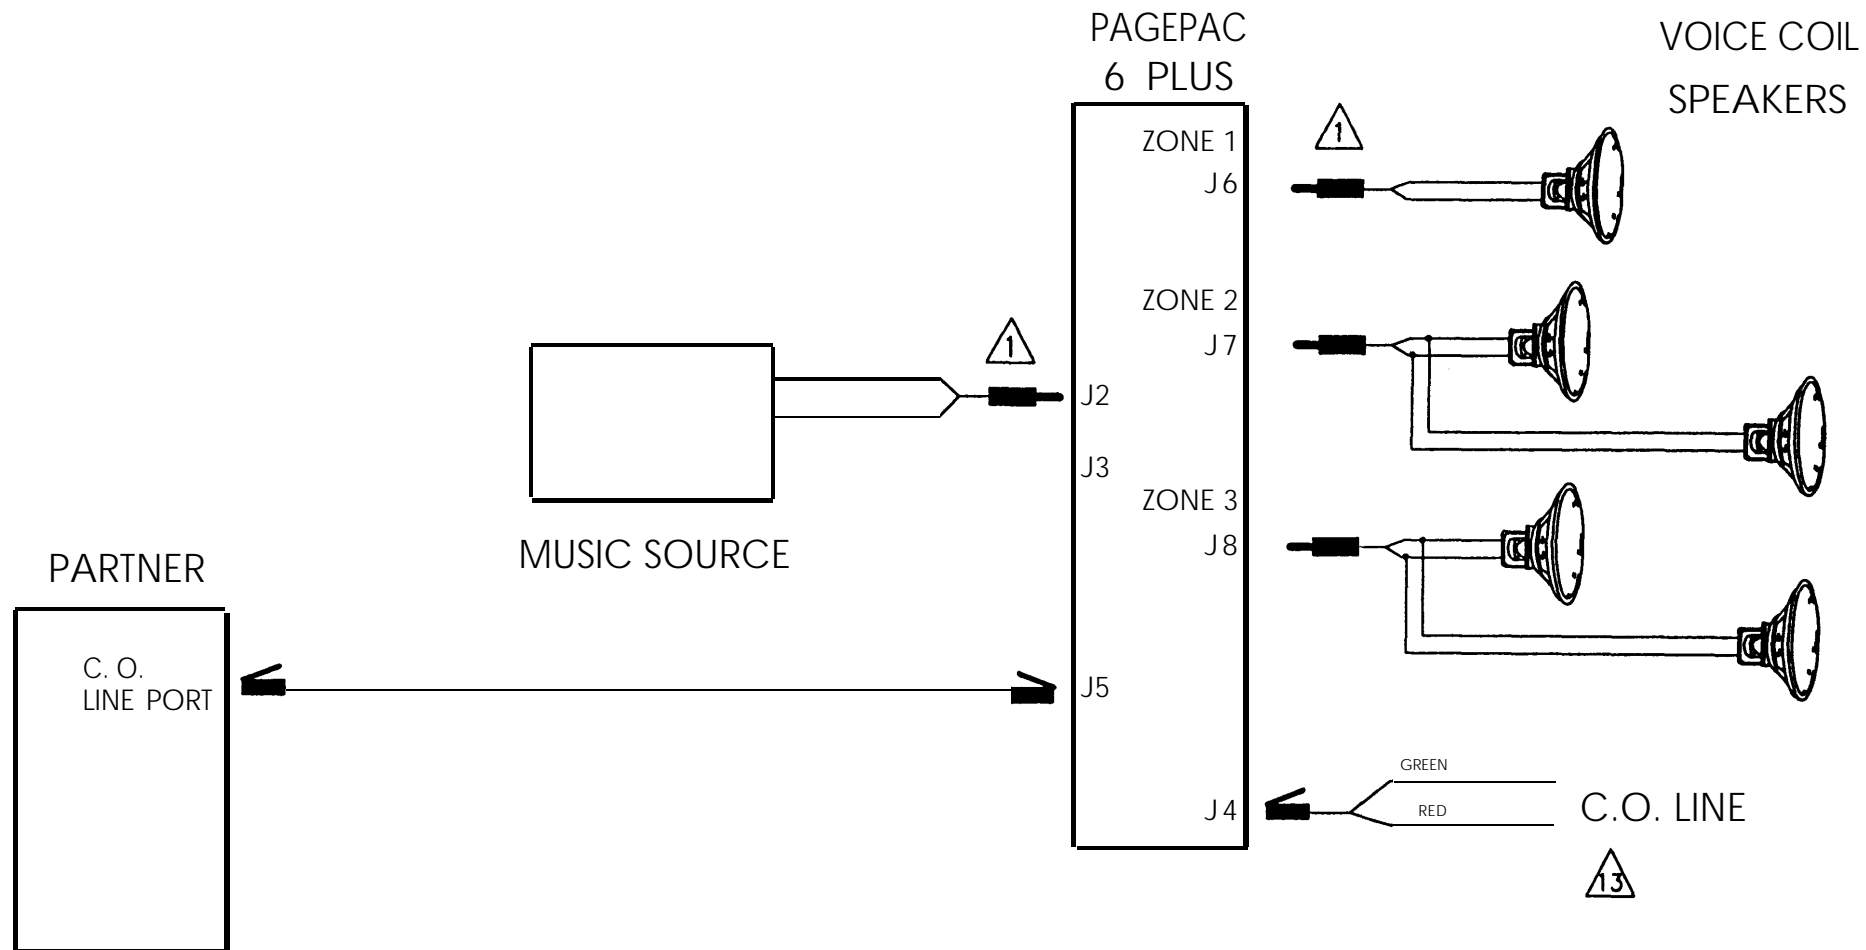


PAGEPAC
6 PLUS

VOICE COIL
SPEAKERS


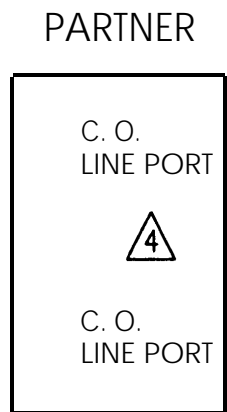


MUSIC SOURCE

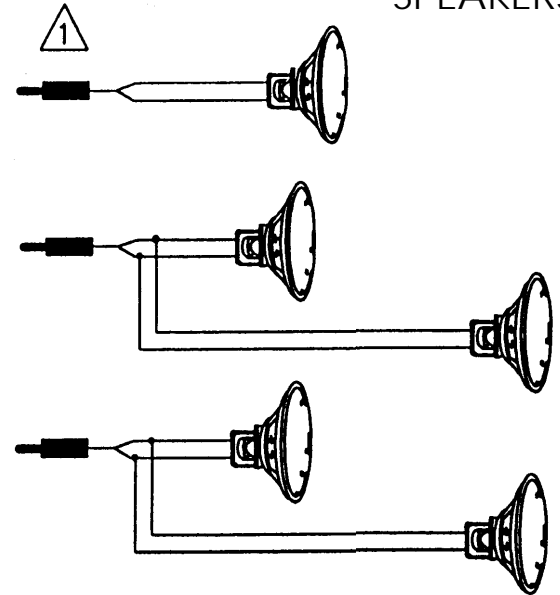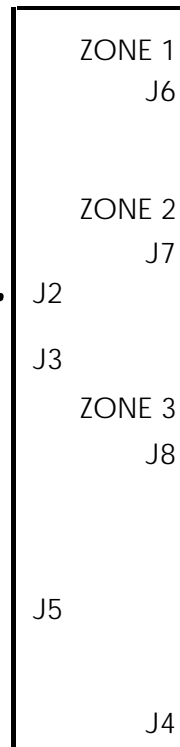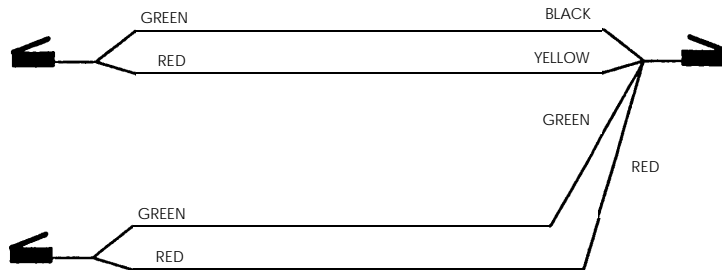

PAGEPAC 20
POWERMATE


MUSIC SOURCE

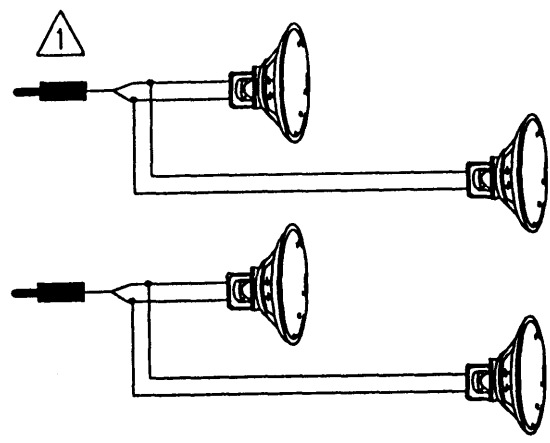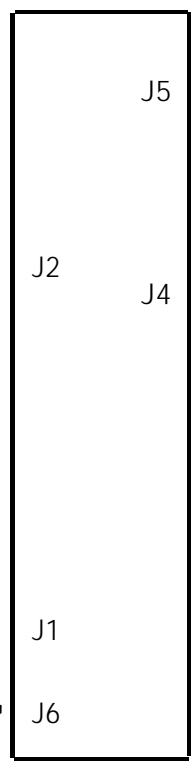


VOICE COIL
SPEAKERS

70 VOLT
SPEAKERS

PARTNER

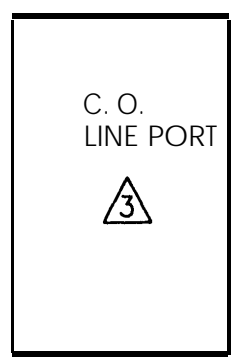

TRUNK
ADAPTER

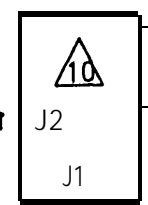

PAGEPAC 20
POWERMATE

PAGEPAC 20
TALKMATE





VOICE COIL
SPEAKERS


MUSIC SOURCE

PARTNER

TRUNK
ADAPTER

C. O.
LINE PORT

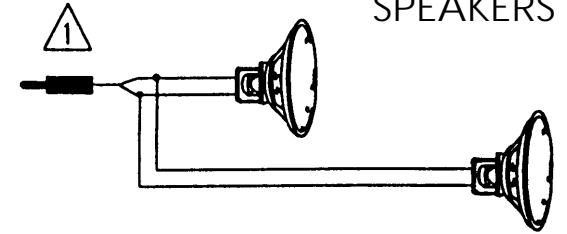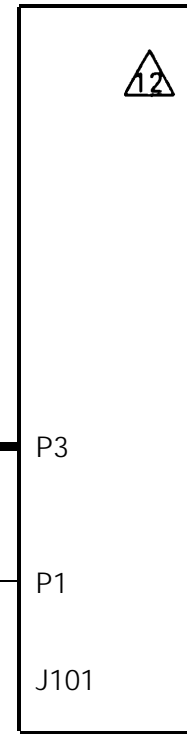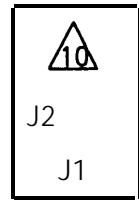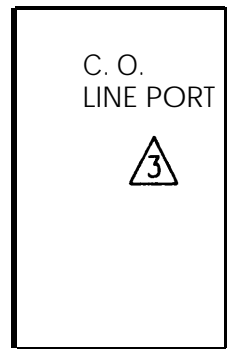


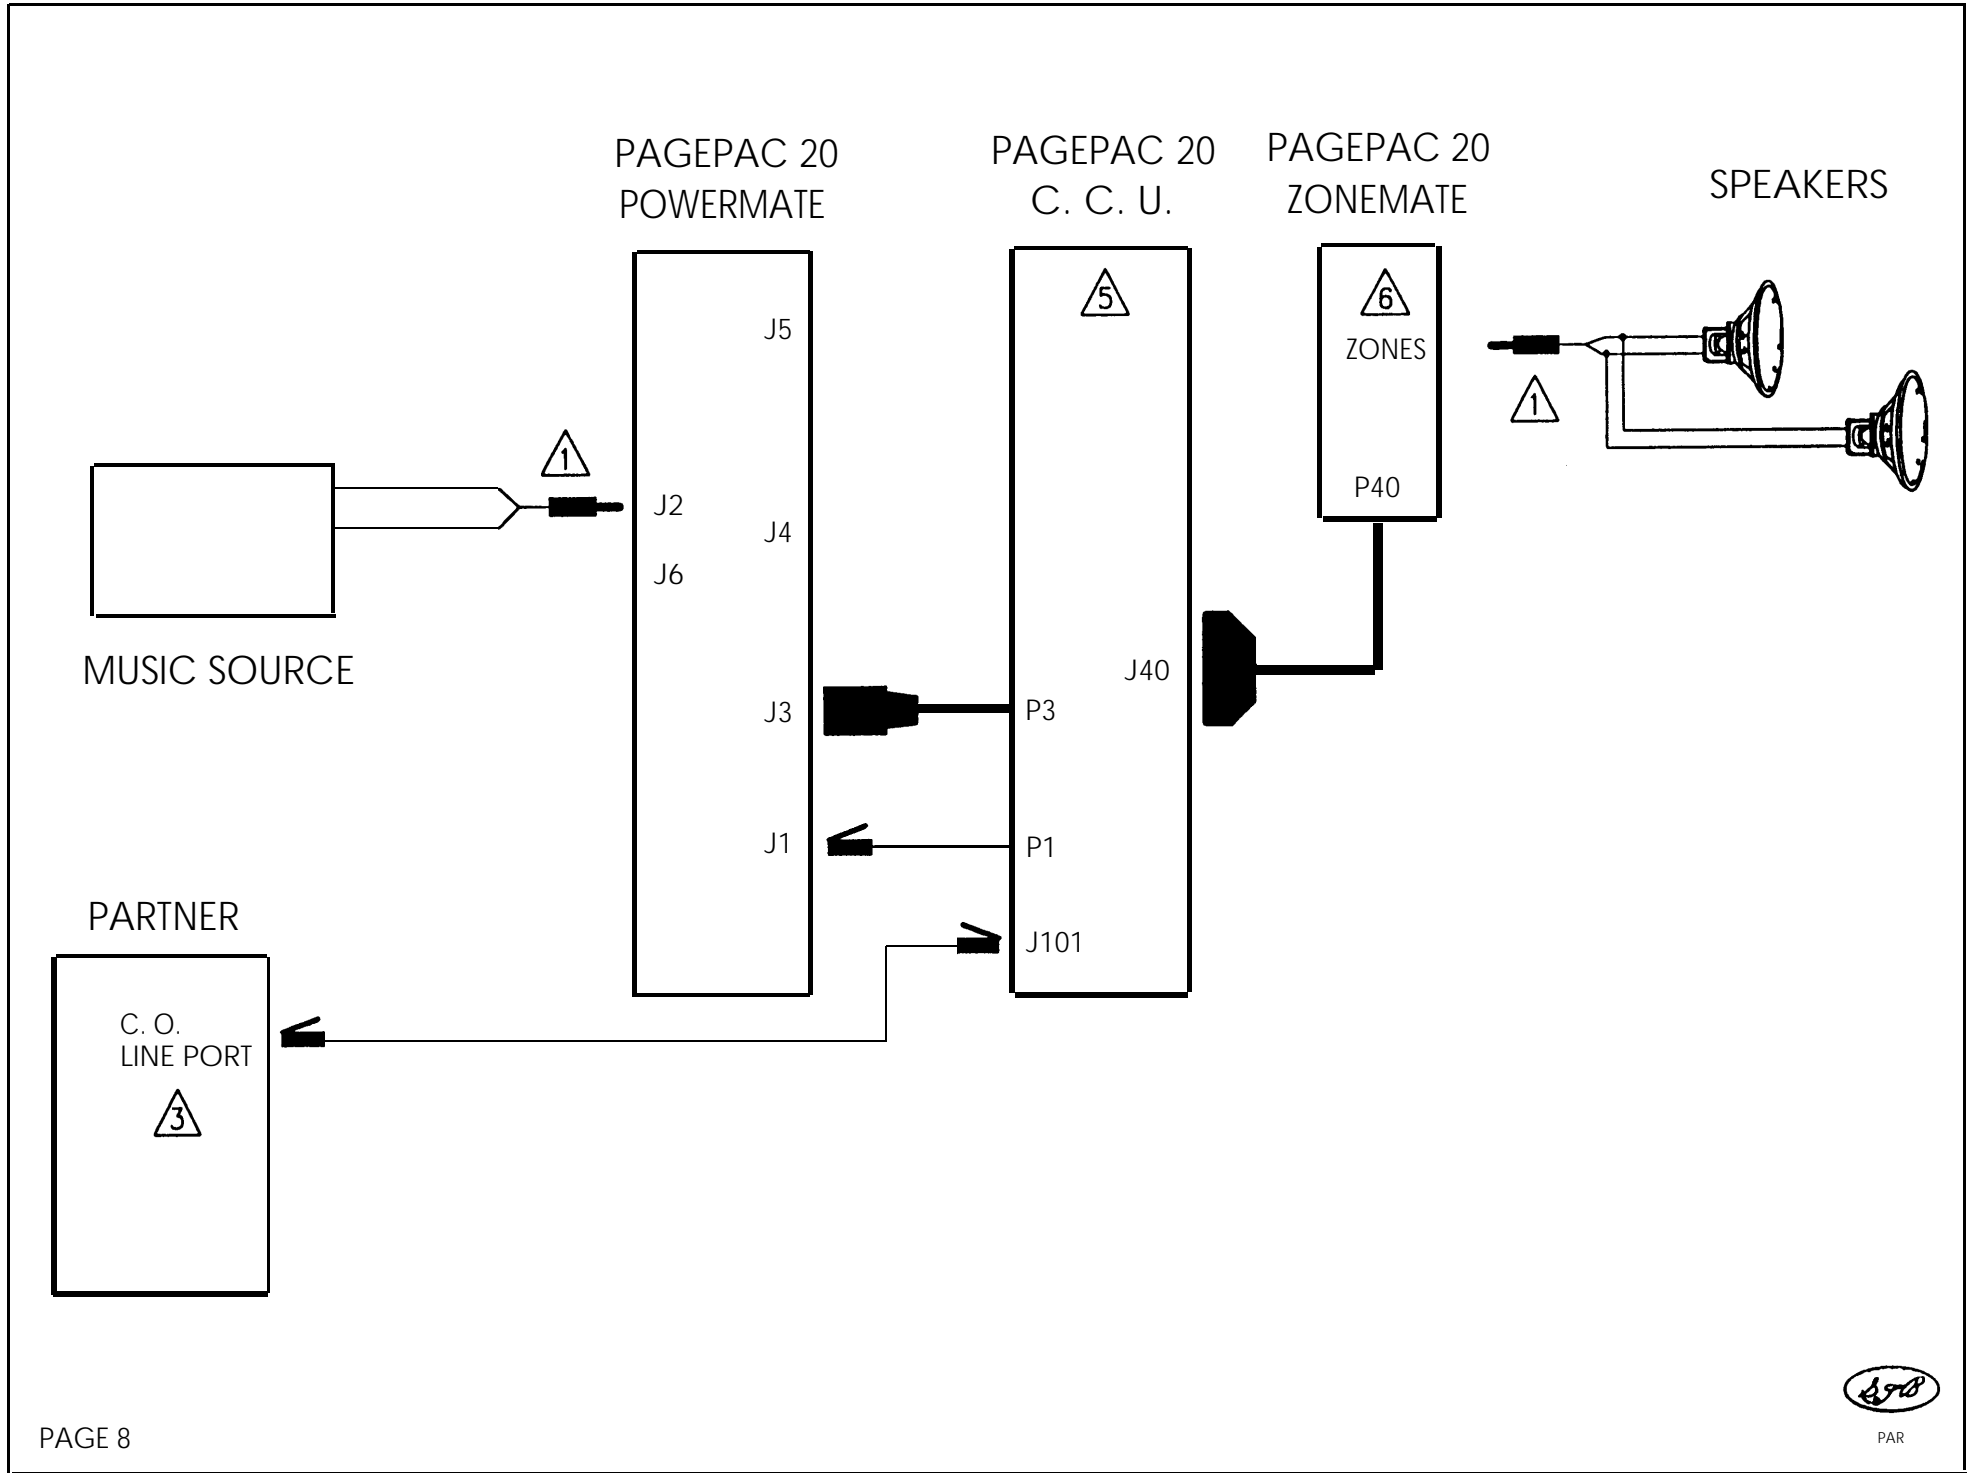


PAGEPAC
VS



70 VOLT
SPEAKERS

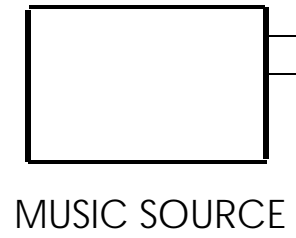

MUSIC SOURCE

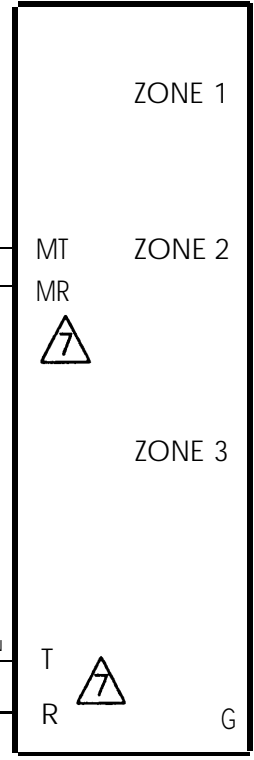

ZONE 1

ZONE 2

ZONE 3

 
MT
MR




T
R




1
2



1
2

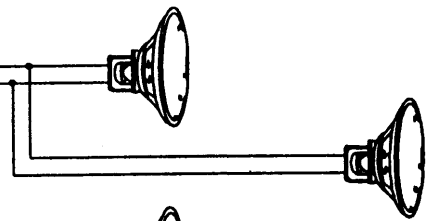


1
2

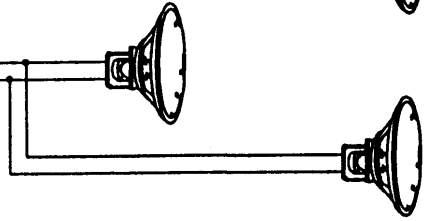


G




PARTNER

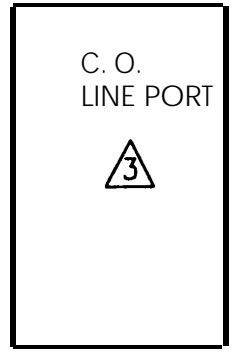


 C. O.
LINE PORT




PAGEPAC
50, 100 & 200 

70 VOLT
SPEAKERS

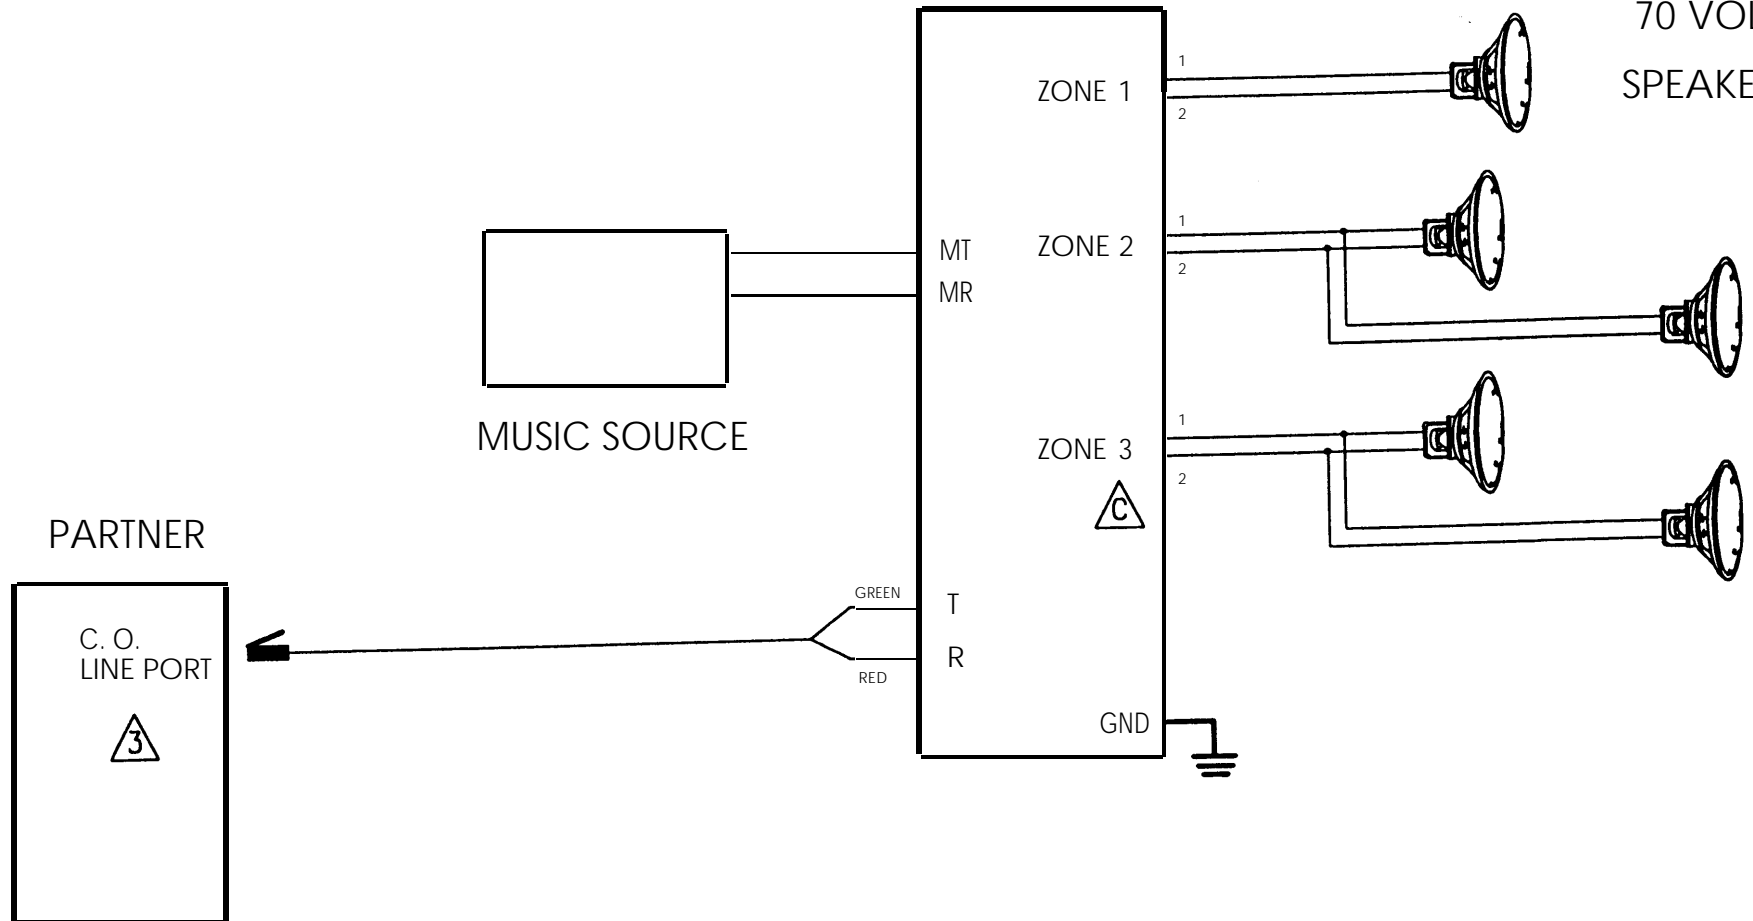


AMPLICENTER
50, 100 & 200

70 VOLT
SPEAKERS

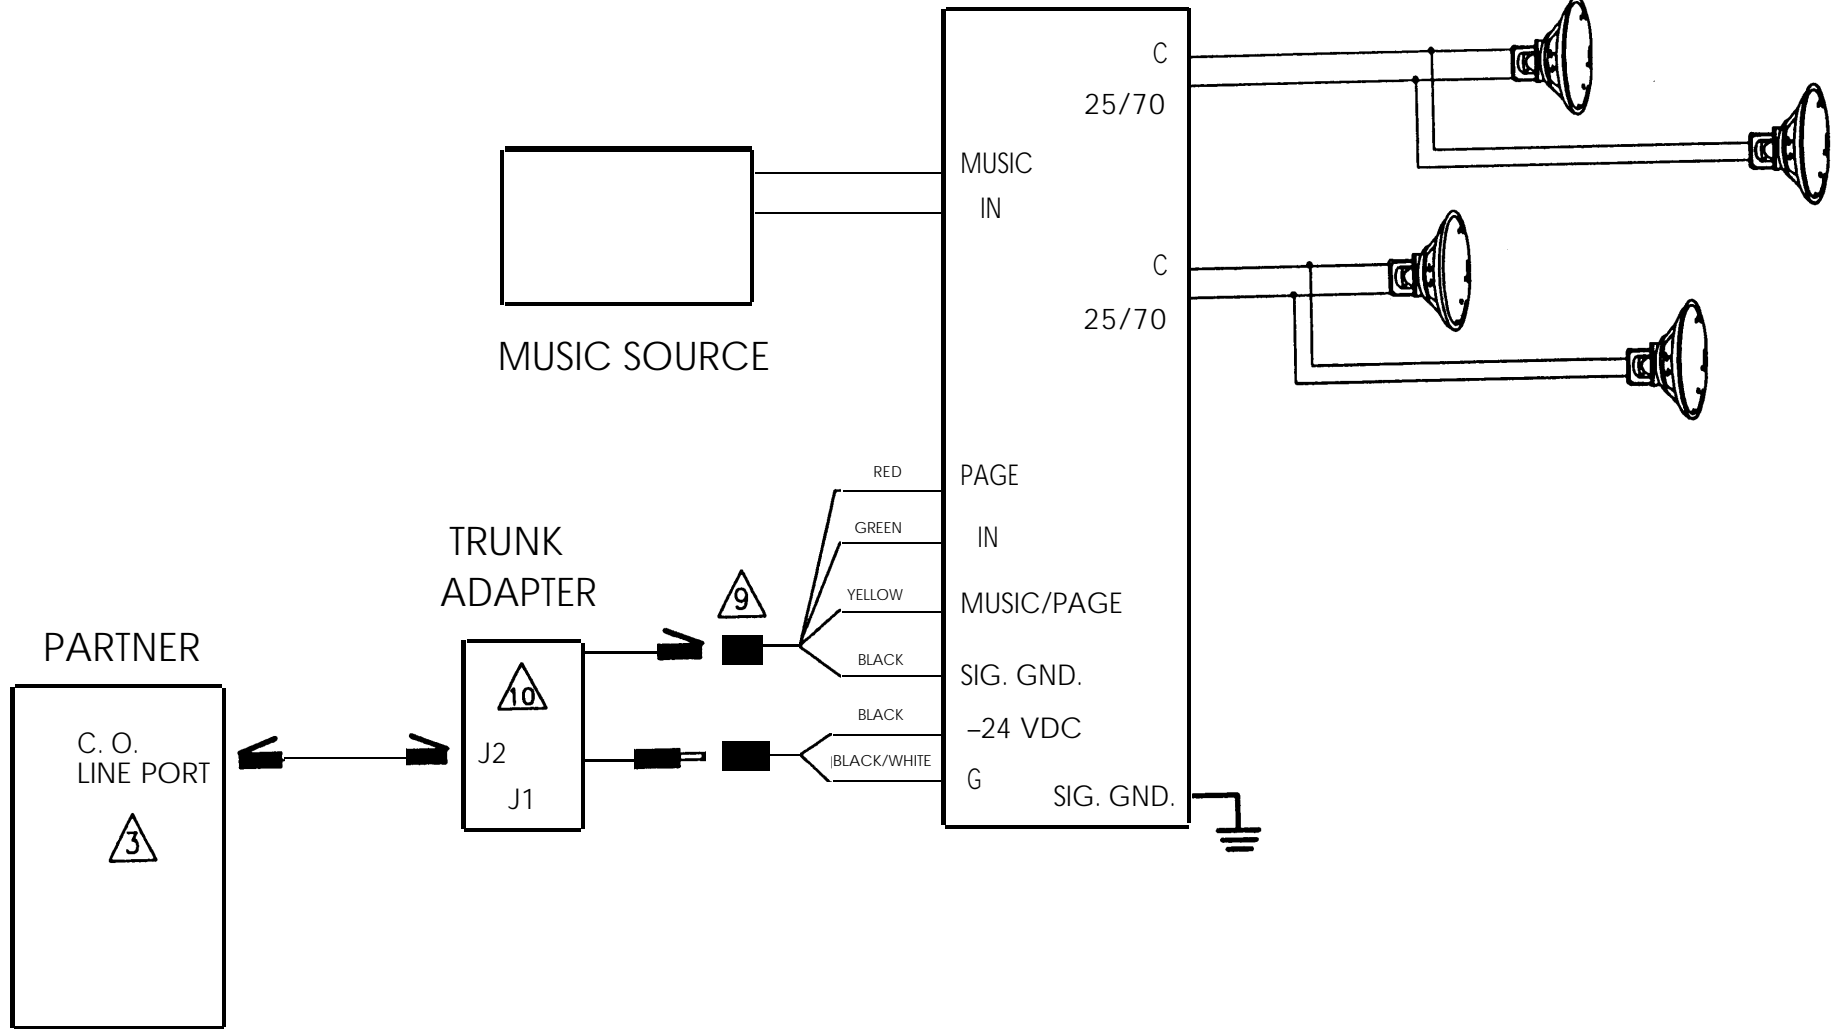


PAR

D20, D100, D300
AMPLICENTER

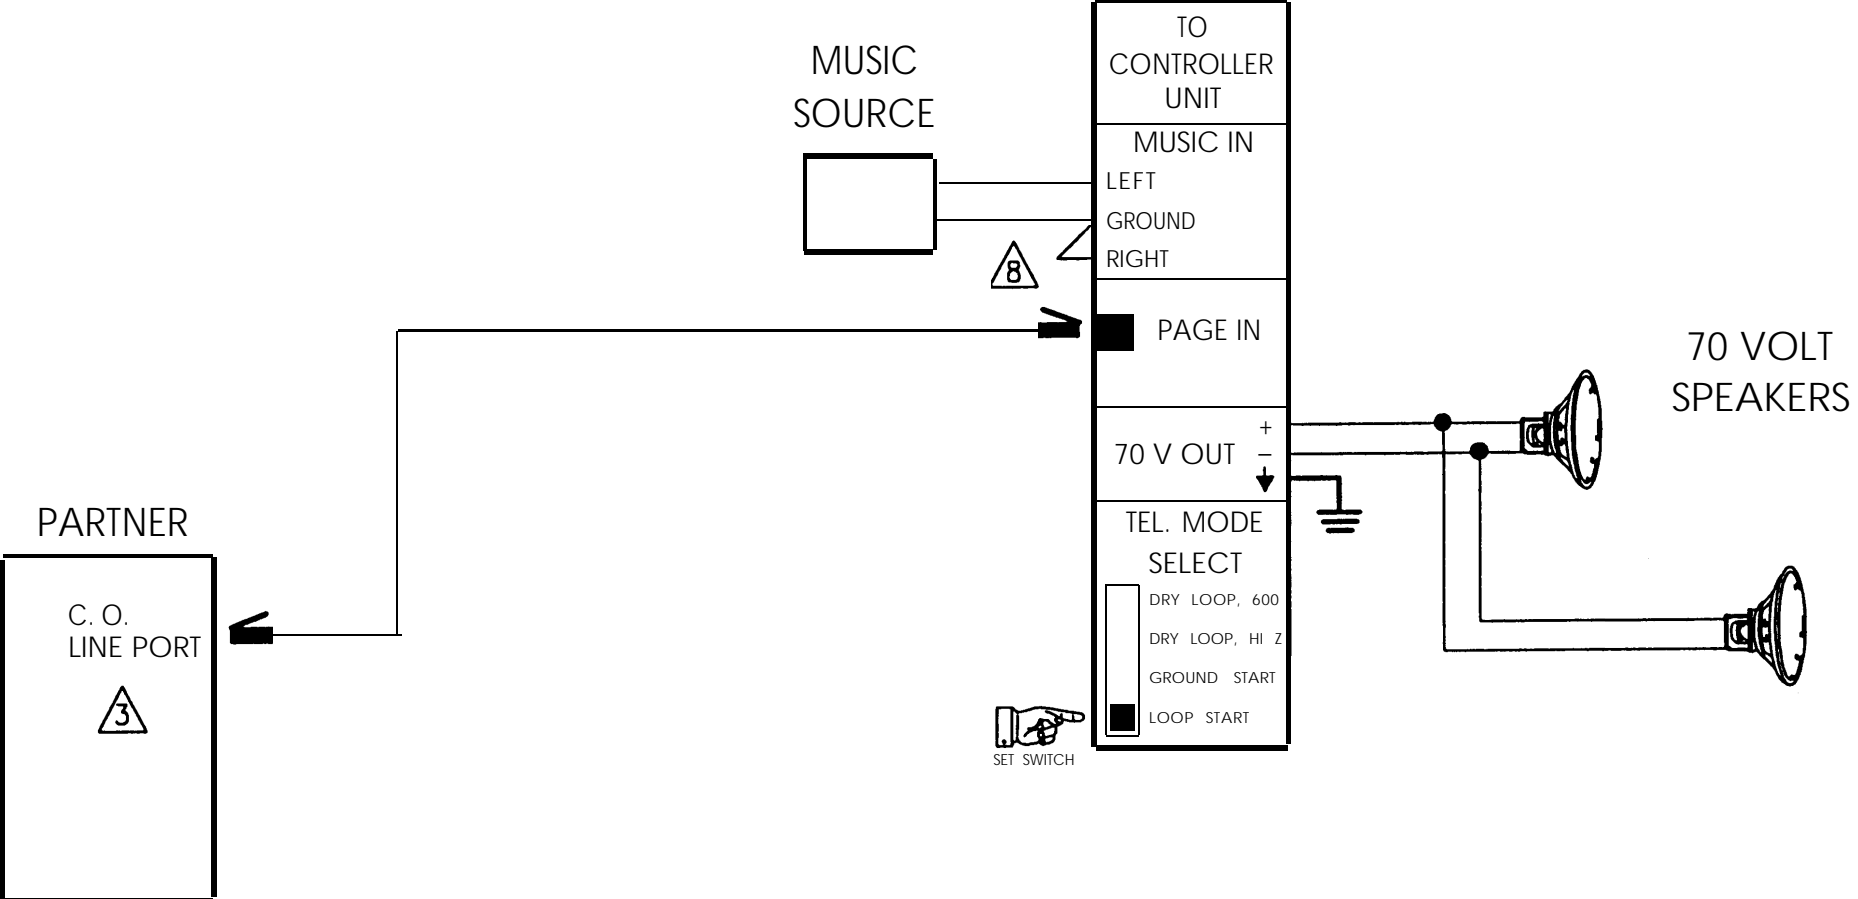

D20, D100, D300 AMPLICENTER

PAGEPAC PLUS CONTROLLER

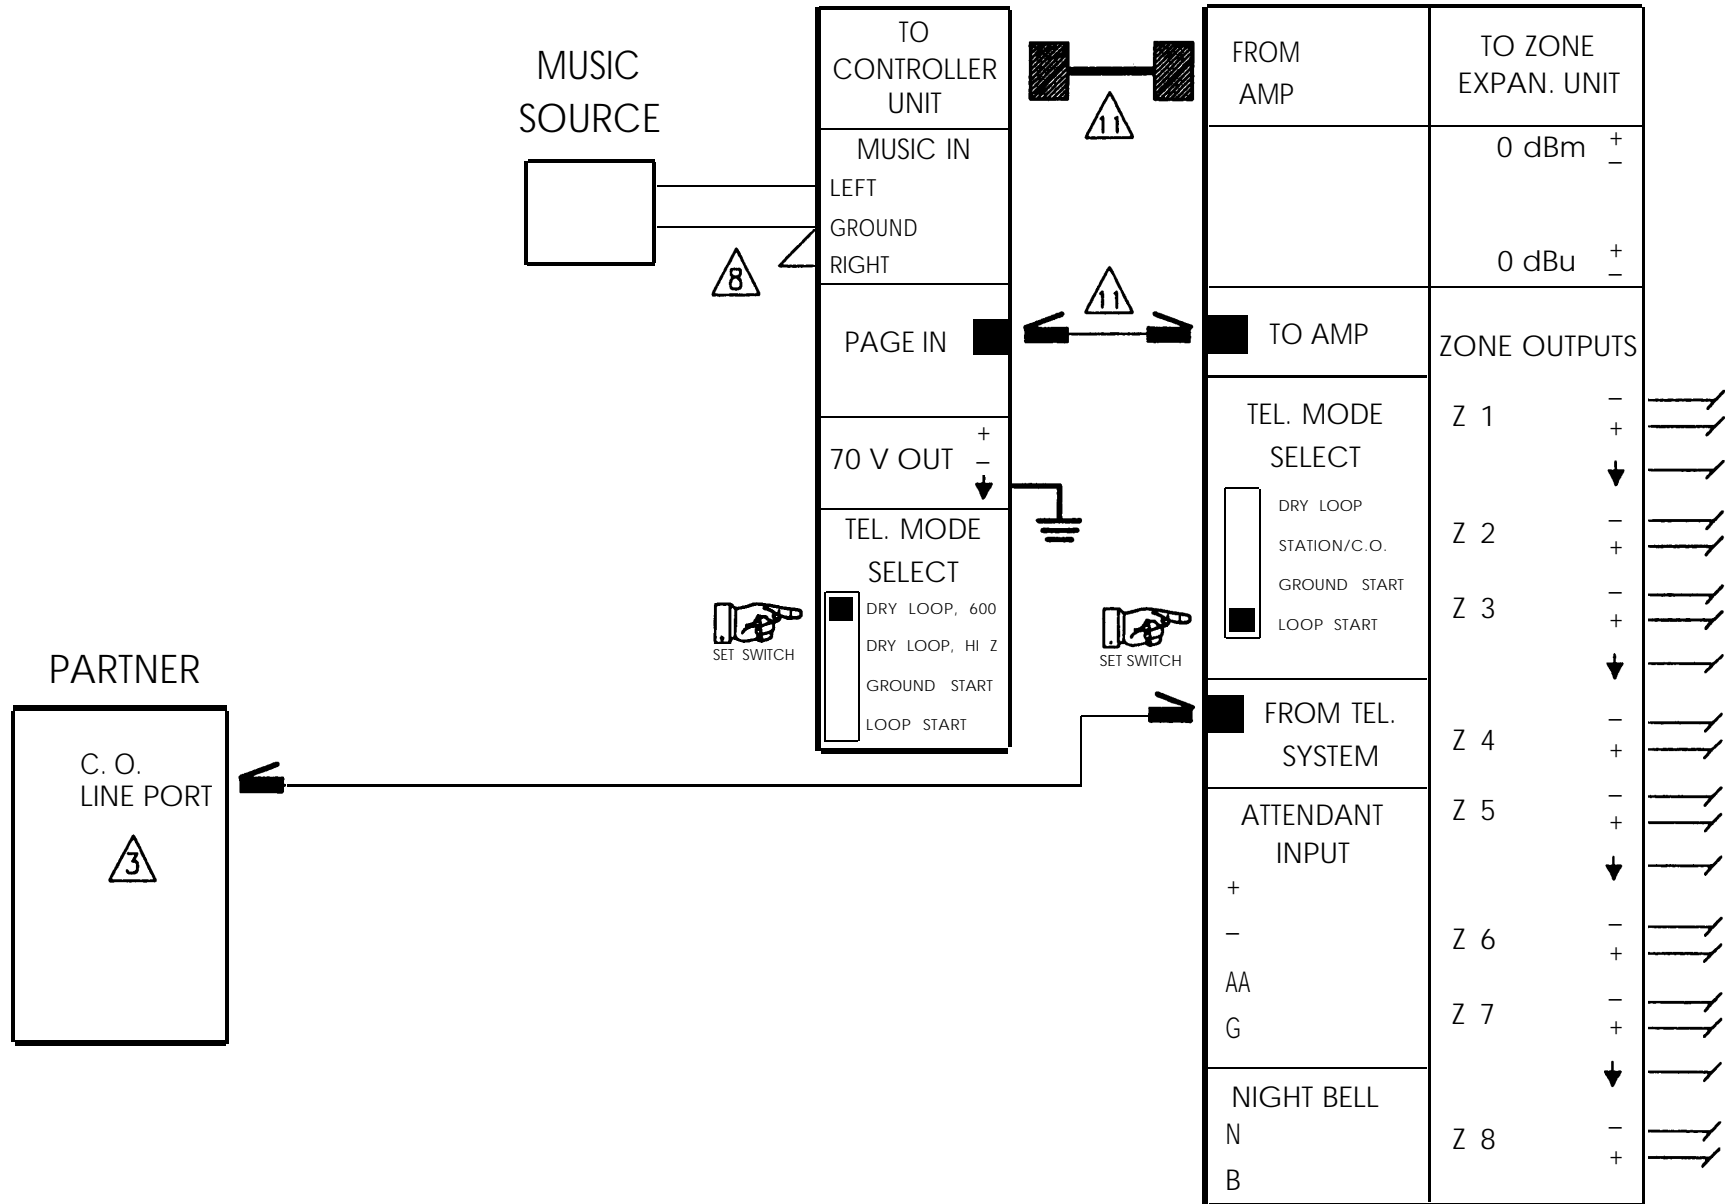

NOTES:

- 1 RCA PLUGS.
- 2 A FOUR-CONDUCTOR MODULAR CORD MUST BE USED.
- 3 LINE PORT IS DEDICATED TO PAGING ONLY.
- 4 THESE CONNECTIONS ALLOW BOTH C.O. LINE PORTS TO ACCESS PAGING AND/OR OUTSIDE LINES.
- 5 PAGEPAC 20 COMMON CONTROL UNIT (C.C.U.) SET TO THE LOOP START (LS) POSITION.
- 6 CAN BE EITHER A ZONEMATE 9 OR A ZONEMATE 39. THE ZONEMATE 9 CAN BE CONFIGURED FOR 9 "VOICE COIL" ZONES OR 6 "VOICE COIL" ZONES AND 3 "70 VOLT" ZONES. ALL 39 ZONES OF THE ZONEMATE 39 ARE "VOICE COIL" OUTPUTS ONLY. TALKBACK CAN ONLY BE PROGRAMMED INTO "VOICE COIL" ZONES ON THESE SYSTEMS.
- 7 THE "MUSIC IN" PORT (MT/MR) IS FOUND ON "TB1" OF THE "UNIVERSAL INTERFACE CARD" (U.I.C.). THE "TIP/RING" PORT (T/R) IS FOUND ON "TB2" OF THE U.I.C.
- 8 STRAP TOGETHER.
- 9 ADAPTER CABLE SET P/N 22050-902 SUPPLIED WITH EACH AMPLICENTER.
- 10 LOOP START TRUNK ADAPTER.
- 11 USE ONLY THE CABLES PROVIDED WITH THE EQUIPMENT.
- 12 JACK LABELLED "TALKBACK VOICE COIL OUT".
- 13 THESE CONNECTIONS ALLOW ONE C.O. LINE PORT TO ACCESS PAGING AND/OR OUTSIDE LINES.



NOTES:



THE PAGEPAC VS COMES EQUIPPED WITH A "UNIVERSAL INTERFACE CARD" (U.I.C.). THE PAGEPAC VS WILL ONLY SUPPORT 3 ZONES, WITH AN ALL-CALL, OF PAGING. THE U.I.C. MUST BE OPTIONED FOR THE LOOP START ACCESS MODE.



THE PAGEPAC 50, 100 AND 200 WATT UNITS ALL COME EQUIPPED WITH A "C" APPLIQUE CARD AND A MASTER ZONE CARD. THE "C" APPLIQUE CARD MUST BE OPTIONED FOR THE LOOP START ACCESS MODE. WITH THESE TWO CARDS, THE PAGEPACS WILL SUPPORT 4 ZONES, WITH AN ALL-CALL, OF PAGING. THE ADDITION OF 5 AUXILIARY ZONE CARDS WILL BRING THE PAGEPACS UP TO THEIR MAXIMUM OF 24 ZONES.



ONLY CONNECTIONS FOR THE FIRST 3 ZONES ARE SHOWN HERE.

