

Repeat Last Number Dialed:

RND or **# 7**

Station Speed Dial:

To store (handset on-hook): **SDC** (or **# # 3**) + SD address code (0 ~ 9) + Trunk access + pause (**#**) + Number + **SDC**

To use: **SDU** (or **# 3**) or **SDC** (or **# # 3**) + SD address code (0 ~ 9)

System Speed Dial:

SDS (or **# 5**) + SDS address code (10 ~ 99)

Call Functions:

Automatic Callback: **ACB** (or **CONF + * 7**)

To cancel: **ACB** (on-hook) or *** * 7**

Call Forward:

All Call: **CFD** + Number + **CFD**
(or **# 9** + Number + **#**)

Busy: **CFBY** + Number + **CFBY**
(or **# 1 0** + Number + **#**)

No Answer: **CFNA** + Number + **CFNA**
(or **# 1 1** + Number + **#**)

Busy/No Answer: **CFBD** + Number + **CFBD**
(or **# 1 2** + Number + **#**)

Call Forward System:

Busy: **CFSB** + '0' + **CFSB**
(or **# 1 3** + Number + **#**)

Busy/No Answer: **CFSN** + '0' + **CFSN**
(or **# 1 4** + Number + **#**)

Call Forward Cancel: **CFD**, **CFBY**, **CFNA**, **CFBD**,
CFSB, **CFSN** or *** * 9**

Call Pickup Directed: **CPD** + Number
(or **# 6** + Number)

Call Pickup Group: **CPG** (or *** 4**)

Conferencing: **CONF** + Number + **CONF**

Consultation Call: **CONF** + Number

Do Not Disturb:

To set: **DND** (or **# 2**)

To cancel: **DND** (or **# # 2**)

Messaging:

Station-to-Station Messaging:

To set (station-to-station): Number + **SSM**

To respond: **SSM**

To cancel (from calling station): Number + **SSM**

To cancel (from called station): **SSM** (on-hook)

Alphanumeric Message:

To set: **MES** or **# 1 7** (on-hook) + 0 ~ 9 + **MES**

To cancel: **MES** or **# 1 7** (on-hook)

Message Waiting:

To respond: **MSG**

To cancel: **MSG** or **# 5** (on-hook)

Call Holding and Transfer:

To park: **PARK** (or **CONF + * 3**)

To reconnect: **DN** + **PARK** (or *** 3**)

To hold: **HOLD**

To reconnect: **DN**

To transfer: **CONF** + Number (hang up)

Paging:

All zone: Access code

Single zone: Access code

Voice page: **VCP**

Miscellaneous Features:

Account Number Recording during conversation:

CONF + **CRG** (or **# 9**) + Account code

Automatic Wake-up: **# 8 0** + 4-digit time

To cancel: **# 8 0** + **0 0 0 0**

Call Waiting: **CWT** (or **CONF # 4**)

To return to held call: **DN**

Executive Override: **OVR** (or **CONF + * 0**)

Manual Signal: **SIG** (on-hook)

Privacy Release: **PRS** (joining station: **DN**)

Universal Night Answer: **UNA** or *** 1**

Voice Mail:

See manufacturer's literature for instructions on using Voice Mail. The following instructions may vary slightly, depending on the Voice Mail system used.

To Call Forward to Voice Mail: Call Forward button or access code (see Call Forward) + Voice Mail number + your mailbox number + Call Forward button (or **#** if access code is used)

To cancel: Call Forward button or *** * 9**

Message Waiting:

To set **MSG** button to automatically retrieve your messages (on-hook): **MSG** + Voice Mail number + your message retrieval sequence + **MSG**

To respond: **MSG**