

If you are installing more than one Venture telephone, Line 1 must be the same telephone number for all sets!


- ❶ Disconnect any equipment, such as other phones, faxes or modems from the lines you will be using for your Venture system.
- ❷ Review the configuration drawing or see the User Guide for detailed configuration instructions.
- ❸ Install and check one Venture phone at a time.
- ❹ Check to see that your Venture system is properly installed and communicating.
- ❺ Reconnect any equipment disconnected in ❶.

Use up to three separate telephone lines and jacks

OR

Three separate lines contained on one jack


Ports 2 and 3 may be used for an optional fax or modem

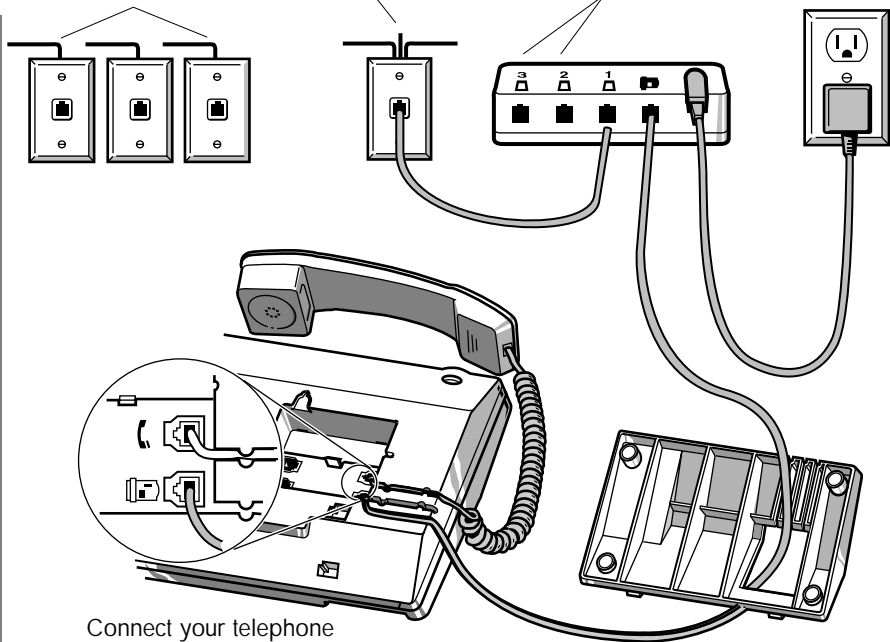


Connect your telephone and handset

Ensure that the Port 1 line cord is routed through the Base stand

Venture's Standard Functional Keys

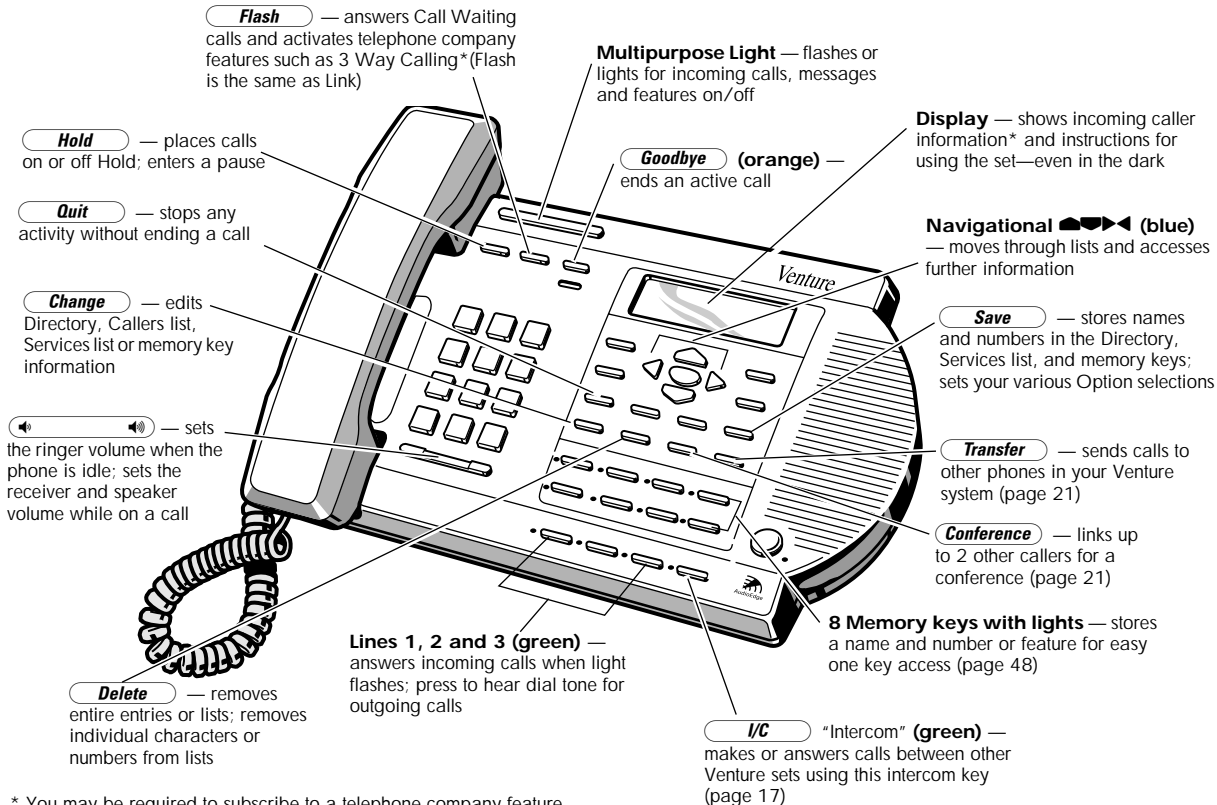



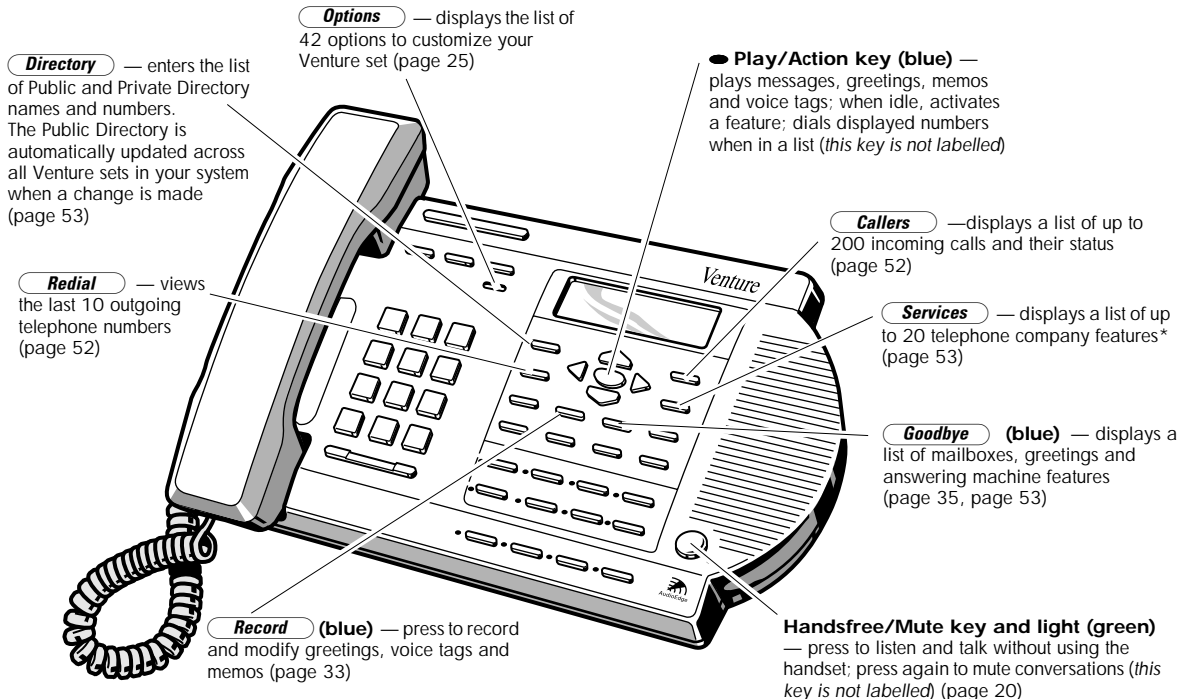


Venture's Answering Device and List Keys



*You may be required to subscribe to or pay a charge for the features.

TIPS

- ☞ Review the instructions and the illustrations on pages 9, 10 and 11 as well as pages 71, 72 and 73.
- ☞ Line 1 **MUST** be the same telephone number for all installed phones in the system.
- ☞ Install one phone at a time and verify the installation of each set before moving on to the next phone.
- ☞ To verify, first lift the handset and press the line 1 key on any ONE set. You should hear a dial tone and the line 1 light should be lit—leave the handset off hook. Next, move to each Venture set in the system. If the line 1 indicator light is lit on all sets, you have successfully installed your Venture system!
- ☞ If you want to change the volume of the handset receiver permanently, set “14 Hndset deflt” on page 28 to on.
- ☞ If your display shows **Key is locked**, see option “22 Lock lists” on page 29.
- ☞ If you experience problems, verify the installation (pages 8 through 15), check the option settings (beginning on page 25), and then review the Troubleshooting section (pages 63 through 66).
- ☞ The answering device default is On. To turn off the answering device, see “31 Answr machne” on page 30.
- ☞ To hear all messages press  (Play) twice.
- ☞ To hear a specific message press  and use  or  to display the message; press  (Play).
- ☞ If your greeting always plays twice, ensure that Option “32 Auto attend” on page 31 is set to off.

You hear...

Messages, voice tags, mailbox tags and memos.

Callers hear...

Greetings, general and mailbox specific.