



# Catalyst 6500 Series Command Reference

Release 7.4

Corporate Headquarters  
Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 526-4100

Customer Order Number: DOC-7814885=  
Text Part Number: 78-14885-01



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCIP, the Cisco Arrow logo, the Cisco *Powered* Network mark, the Cisco Systems Verified logo, Cisco Unity, Follow Me Browsing, FormShare, iQ Breakthrough, iQ Expertise, iQ FastTrack, the iQ Logo, iQ Net Readiness Scorecard, Networking Academy, ScriptShare, SMARTnet, TransPath, and Voice LAN are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, Discover All That's Possible, The Fastest Way to Increase Your Internet Quotient, and iQuick Study are service marks of Cisco Systems, Inc.; and Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, the Cisco IOS logo, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherSwitch, Fast Step, GigaStack, Internet Quotient, IOS, IP/TV, LightStream, MGX, MICA, the Networkers logo, Network Registrar, *Packet*, PIX, Post-Routing, Pre-Routing, RateMUX, Registrar, SlideCast, StrataView Plus, Stratm, SwitchProbe, TeleRouter, and VCO are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

All other trademarks mentioned in this document or Web site are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0208R)

*Catalyst 6500 Series Command Reference*  
Copyright © 1999–2002, Cisco Systems, Inc.  
All rights reserved.



<b>Preface</b>	<b>xxiii</b>
Audience	xxiii
Organization	xxiii
Related Documentation	xxiii
Conventions	xxiv
Obtaining Documentation	xxv
World Wide Web	xxv
Documentation CD-ROM	xxv
Ordering Documentation	xxv
Documentation Feedback	xxv
Obtaining Technical Assistance	xxvi
Cisco.com	xxvi
Technical Assistance Center	xxvi

---

CHAPTER 1

<b>Command-Line Interfaces</b>	<b>1-1</b>
Switch CLI	1-1
Accessing the Switch CLI	1-1
Operating the Switch CLI	1-3
ROM Monitor CLI	1-13
Accessing the ROM Monitor CLI	1-13
Operating the ROM Monitor CLI	1-13

---

CHAPTER 2

<b>Switch and ROM Monitor Commands for the Catalyst 6500 Series Switches</b>	<b>2-1</b>
alias	2-2
boot	2-4
cd	2-5
clear alias	2-6
clear arp	2-7
clear banner motd	2-8
clear boot auto-config	2-9
clear boot device	2-10
clear boot system	2-11
clear cam	2-12

clear channel statistics	2-13
clear config	2-14
clear config pvlan	2-16
clear cops	2-17
clear counters	2-19
clear crypto key rsa	2-20
clear dot1x config	2-21
clear gmrp statistics	2-22
clear grp statistics	2-23
clear igmp statistics	2-24
clear ip alias	2-25
clear ip dns domain	2-26
clear ip dns server	2-27
clear ip permit	2-28
clear ip route	2-30
clear kerberos clients mandatory	2-31
clear kerberos credentials forward	2-32
clear kerberos creds	2-33
clear kerberos realm	2-34
clear kerberos server	2-35
clear key config-key	2-36
clear l2protocol-tunnel cos	2-37
clear l2protocol-tunnel statistics	2-38
clear lacp-channel statistics	2-39
clear lda	2-40
clear log	2-42
clear log command	2-43
clear logging buffer	2-44
clear logging level	2-45
clear logging server	2-47
clear mls cef	2-48
clear mls entry	2-49
clear mls entry cef adjacency	2-51
clear mls exclude protocol	2-52
clear mls multicast statistics	2-53

clear mls nde flow	2-54
clear mls statistics	2-55
clear mls statistics entry	2-57
clear module password	2-59
clear multicast router	2-60
clear ntp server	2-61
clear ntp timezone	2-62
clear pbf	2-63
clear port broadcast	2-64
clear port cops	2-65
clear port host	2-66
clear port qos cos	2-67
clear port security	2-68
clear pvlan mapping	2-69
clear qos acl	2-70
clear qos config	2-72
clear qos cos-dscp-map	2-73
clear qos dscp-cos-map	2-74
clear qos ipprec-dscp-map	2-75
clear qos mac-cos	2-76
clear qos map	2-77
clear qos policed-dscp-map	2-79
clear qos policer	2-80
clear qos statistics	2-82
clear radius	2-83
clear rcp	2-84
clear rgmp statistics	2-85
clear security acl	2-86
clear security acl capture-ports	2-88
clear security acl log flow	2-89
clear security acl map	2-90
clear snmp access	2-92
clear snmp community	2-93
clear snmp group	2-94
clear snmp notify	2-95

clear snmp targetaddr	2-96
clear snmp targetparams	2-97
clear snmp trap	2-98
clear snmp user	2-99
clear snmp view	2-100
clear spantree mst	2-101
clear spantree portcost	2-102
clear spantree portinstancecost	2-103
clear spantree portinstancepri	2-105
clear spantree portpri	2-106
clear spantree portvlancost	2-107
clear spantree portvlanpri	2-109
clear spantree root	2-110
clear spantree statistics	2-112
clear spantree uplinkfast	2-114
clear tacacs key	2-115
clear tacacs server	2-116
clear timezone	2-117
clear top	2-118
clear trunk	2-119
clear vlan	2-120
clear vlan counters	2-121
clear vlan mapping	2-122
clear vmps rcp	2-123
clear vmps server	2-124
clear vmps statistics	2-125
clear vtp pruneeligible	2-126
clear vtp statistics	2-127
commit	2-128
commit lda	2-130
configure	2-131
confreg	2-133
context	2-135
copy	2-137
delete	2-143

dev 2-144

dir—ROM monitor 2-145

dir—switch 2-146

disable 2-148

disconnect 2-149

download 2-150

enable 2-154

format 2-155

frame 2-157

history—ROM monitor 2-158

history—switch 2-159

l2trace 2-160

meminfo 2-163

ping 2-164

pwd 2-167

quit 2-168

reconfirm vmps 2-169

reload 2-170

repeat 2-171

reset—ROM monitor 2-173

reset—switch 2-174

restore counters 2-177

rollback 2-178

session 2-179

set 2-180

set accounting commands 2-181

set accounting connect 2-182

set accounting exec 2-183

set accounting suppress 2-185

set accounting system 2-186

set accounting update 2-188

set aclmerge algo 2-189

set aclmerge bdd 2-190

set alias 2-191

set arp 2-192

[set authentication enable](#) 2-194  
[set authentication login](#) 2-197  
[set authorization commands](#) 2-199  
[set authorization enable](#) 2-201  
[set authorization exec](#) 2-203  
[set banner lcd](#) 2-205  
[set banner motd](#) 2-206  
[set banner telnet](#) 2-207  
[set boot auto-config](#) 2-208  
[set boot config-register](#) 2-209  
[set boot config-register auto-config](#) 2-212  
[set boot device](#) 2-215  
[set boot sync now](#) 2-217  
[set boot system flash](#) 2-218  
[set cam](#) 2-220  
[set cdp](#) 2-222  
[set channelprotocol](#) 2-224  
[set channel vlancost](#) 2-226  
[set config acl nvram](#) 2-228  
[set config mode](#) 2-229  
[set cops](#) 2-230  
[set crypto key rsa](#) 2-232  
[set default portstatus](#) 2-233  
[set dot1q-all-tagged](#) 2-234  
[set dot1x](#) 2-235  
[set enablepass](#) 2-238  
[set errdisable-timeout](#) 2-239  
[set errordetection](#) 2-241  
[set feature agg-link-partner](#) 2-243  
[set feature mdg](#) 2-244  
[set garp timer](#) 2-245  
[set gmrp](#) 2-246  
[set gmrp fwdall](#) 2-247  
[set gmrp registration](#) 2-248  
[set gmrp timer](#) 2-249

- set gvrp 2-251
- set gvrp applicant 2-252
- set gvrp dynamic-vlan-creation 2-253
- set gvrp registration 2-254
- set gvrp timer 2-256
- set igmp 2-258
- set igmp fastleave 2-259
- set igmp leave-query-type 2-260
- set igmp mode 2-261
- set igmp querier 2-262
- set igmp ratelimit 2-264
- set inlinepower defaultallocation 2-266
- set interface 2-267
- set ip alias 2-270
- set ip dns 2-271
- set ip dns domain 2-272
- set ip dns server 2-273
- set ip fragmentation 2-274
- set ip http port 2-275
- set ip http server 2-276
- set ip permit 2-277
- set ip redirect 2-279
- set ip route 2-280
- set ip unreachable 2-282
- set kerberos clients mandatory 2-283
- set kerberos credentials forward 2-284
- set kerberos local-realm 2-285
- set kerberos realm 2-286
- set kerberos server 2-287
- set kerberos srvtab entry 2-288
- set kerberos srvtab remote 2-290
- set key config-key 2-291
- set l2protocol-tunnel cos 2-292
- set lacp-channel system-priority 2-293
- set lcperroraction 2-294

set lda 2-295  
set length 2-298  
set logging buffer 2-299  
set logging console 2-300  
set logging history 2-301  
set logging level 2-302  
set logging server 2-305  
set logging session 2-307  
set logging telnet 2-308  
set logging timestamp 2-309  
set logout 2-311  
set mls agingtime 2-312  
set mls bridged-flow-statistics 2-314  
set mls cef load-balance 2-315  
set mls exclude protocol 2-316  
set mls flow 2-317  
set mls nde 2-319  
set mls statistics protocol 2-323  
set mls verify 2-324  
set module 2-326  
set module name 2-328  
set module power 2-329  
set module shutdown 2-330  
set msfcautostate 2-331  
set msmautostate 2-332  
set multicast router 2-333  
set ntp broadcastclient 2-334  
set ntp broadcastdelay 2-335  
set ntp client 2-336  
set ntp server 2-337  
set ntp summertime 2-338  
set ntp timezone 2-340  
set password 2-341  
set pbf 2-342  
set port auxiliaryvlan 2-343

[set port broadcast](#) 2-345

[set port channel](#) 2-347

[set port cops](#) 2-350

[set port debounce](#) 2-351

[set port disable](#) 2-353

[set port dot1qtunnel](#) 2-354

[set port dot1x](#) 2-356

[set port duplex](#) 2-358

[set port enable](#) 2-359

[set port errdisable-timeout](#) 2-360

[set port flowcontrol](#) 2-361

[set port gmrp](#) 2-363

[set port gvrp](#) 2-364

[set port host](#) 2-366

[set port inlinepower](#) 2-367

[set port jumbo](#) 2-368

[set port l2protocol-tunnel](#) 2-369

[set port lacp-channel](#) 2-371

[set port membership](#) 2-373

[set port name](#) 2-375

[set port negotiation](#) 2-376

[set port protocol](#) 2-377

[set port qos](#) 2-379

[set port qos cos](#) 2-381

[set port qos policy-source](#) 2-382

[set port qos trust](#) 2-384

[set port qos trust-device](#) 2-386

[set port qos trust-ext](#) 2-387

[set port rsvp dsbm-election](#) 2-388

[set port security](#) 2-389

[set port speed](#) 2-391

[set port sync-restart-delay](#) 2-392

[set port trap](#) 2-393

[set port voice interface dhcp](#) 2-394

[set power redundancy](#) 2-396

set prompt 2-397

set protocolfilter 2-398

set pvlan 2-399

set pvlan mapping 2-401

set qos 2-403

set qos acl default-action 2-404

set qos acl ip 2-406

set qos acl ipx 2-411

set qos acl mac 2-414

set qos acl map 2-416

set qos bridged-microflow-policing 2-418

set qos cos-dscp-map 2-419

set qos drop-threshold 2-420

set qos dscp-cos-map 2-422

set qos lpprec-dscp-map 2-423

set qos mac-cos 2-425

set qos map 2-426

set qos policed-dscp-map 2-429

set qos policer 2-430

set qos policy-source 2-432

set qos rsvp 2-434

set qos rxq-ratio 2-436

set qos statistics export 2-438

set qos statistics export aggregate 2-439

set qos statistics export destination 2-440

set qos statistics export interval 2-441

set qos statistics export port 2-442

set qos txq-ratio 2-443

set qos wred 2-445

set qos wrr 2-447

set radius deadtime 2-449

set radius key 2-450

set radius retransmit 2-451

set radius server 2-452

set radius timeout 2-453

set rcp username	2-454
set rgmp	2-455
set rspan	2-456
set security acl adjacency	2-459
set security acl capture-ports	2-460
set security acl ip	2-461
set security acl ipx	2-466
set security acl log	2-469
set security acl mac	2-470
set security acl map	2-472
set snmp	2-474
set snmp access	2-476
set snmp community	2-478
set snmp extendedrmon netflow	2-480
set snmp group	2-481
set snmp notify	2-482
set snmp rmon	2-483
set snmp rmonmemory	2-484
set snmp targetaddr	2-485
set snmp targetparams	2-487
set snmp trap	2-489
set snmp user	2-491
set snmp view	2-493
set span	2-495
set spantree backbonefast	2-498
set spantree bpdu-filter	2-499
set spantree bpdu-guard	2-500
set spantree bpdu-skewing	2-501
set spantree channelcost	2-502
set spantree channelvlancost	2-504
set spantree defaultcostmode	2-505
set spantree disable	2-507
set spantree enable	2-509
set spantree fwddelay	2-511
set spantree global-default	2-513

set spantree guard	2-515
set spantree hello	2-517
set spantree macreduction	2-519
set spantree maxage	2-520
set spantree mode	2-522
set spantree mst config	2-524
set spantree mst link-type	2-526
set spantree mst maxhops	2-527
set spantree mst redetect-protocol	2-528
set spantree mst vlan	2-529
set spantree portcost	2-530
set spantree portfast	2-532
set spantree portfast bpdu-filter	2-534
set spantree portfast bpdu-guard	2-535
set spantree portinstancecost	2-536
set spantree portinstancepri	2-538
set spantree portpri	2-540
set spantree portvlancost	2-541
set spantree portvlanpri	2-543
set spantree priority	2-545
set spantree root	2-547
set spantree uplinkfast	2-550
set summertime	2-552
set system baud	2-554
set system contact	2-555
set system core-dump	2-556
set system core-file	2-557
set system countrycode	2-558
set system crossbar-fallback	2-559
set system highavailability	2-560
set system highavailability versioning	2-561
set system location	2-563
set system modem	2-564
set system name	2-565
set system switchmode allow	2-566

set tacacs attempts 2-568  
set tacacs directedrequest 2-569  
set tacacs key 2-570  
set tacacs server 2-571  
set tacacs timeout 2-572  
set test diaglevel 2-573  
set time 2-574  
set timezone 2-575  
set traffic monitor 2-576  
set trunk 2-577  
set udd 2-579  
set udd aggressive-mode 2-581  
set udd interval 2-582  
set vlan 2-583  
set vlan mapping 2-587  
set vmpls downloadmethod 2-589  
set vmpls downloadserver 2-590  
set vmpls server 2-591  
set vmpls state 2-593  
set vtp 2-594  
set vtp pruneeligible 2-596  
show accounting 2-597  
show aclmerge 2-600  
show alias 2-601  
show arp 2-602  
show authentication 2-603  
show authorization 2-604  
show banner 2-605  
show boot 2-606  
show boot device 2-607  
show cam 2-608  
show cam agingtime 2-610  
show cam count 2-611  
show cam msfc 2-612  
show cdp 2-613

show channel 2-617

show channel group 2-622

show channel hash 2-626

show channel mac 2-627

show channelprotocol 2-628

show channel traffic 2-629

show config 2-630

show config mode 2-635

show config qos acl 2-636

show cops 2-637

show counters 2-640

show crypto key 2-646

show default 2-647

show dot1q-all-tagged 2-648

show dot1x 2-649

show dvlan statistics 2-650

show environment 2-651

show errdisable-timeout 2-656

show errordetection 2-657

show fabric channel 2-658

show file 2-661

show flash 2-662

show garp timer 2-665

show gmrp configuration 2-667

show gmrp statistics 2-668

show gmrp timer 2-669

show gvrp configuration 2-670

show gvrp statistics 2-672

show ifindex 2-674

show igmp leave-query-type 2-675

show igmp mode 2-676

show igmp querier information 2-677

show igmp ratelimit-info 2-678

show igmp statistics 2-679

show imagemib 2-681

[show interface](#) 2-682

[show ip alias](#) 2-684

[show ip dns](#) 2-685

[show ip http](#) 2-687

[show ip permit](#) 2-689

[show ip route](#) 2-691

[show kerberos](#) 2-693

[show l2protocol-tunnel statistics](#) 2-695

[show lacp-channel](#) 2-697

[show lcperroraction](#) 2-701

[show lda](#) 2-702

[show log](#) 2-706

[show log command](#) 2-708

[show logging](#) 2-709

[show logging buffer](#) 2-711

[show mac](#) 2-712

[show microcode](#) 2-715

[show mls](#) 2-716

[show mls acl-route](#) 2-718

[show mls cef interface](#) 2-719

[show mls cef mac](#) 2-721

[show mls cef summary](#) 2-722

[show mls entry](#) 2-724

[show mls entry cef](#) 2-730

[show mls entry netflow-route](#) 2-734

[show mls exclude protocol](#) 2-736

[show mls multicast](#) 2-737

[show mls nde](#) 2-742

[show mls netflow-route](#) 2-743

[show mls statistics](#) 2-744

[show mls verify](#) 2-748

[show module](#) 2-749

[show moduleinit](#) 2-752

[show msfcautostate](#) 2-754

[show msmautostate](#) 2-755

[show multicast group](#) 2-756

[show multicast group count](#) 2-758

[show multicast protocols status](#) 2-759

[show multicast router](#) 2-760

[show netstat](#) 2-762

[show ntp](#) 2-769

[show pbf](#) 2-771

[show port](#) 2-774

[show port auxiliaryvlan](#) 2-782

[show port broadcast](#) 2-784

[show port capabilities](#) 2-786

[show port cdp](#) 2-791

[show port channel](#) 2-793

[show port cops](#) 2-799

[show port counters](#) 2-801

[show port debounce](#) 2-803

[show port dot1qtunnel](#) 2-804

[show port dot1x](#) 2-805

[show port errdisable-timeout](#) 2-807

[show port flowcontrol](#) 2-809

[show port inlinepower](#) 2-811

[show port jumbo](#) 2-812

[show port l2protocol-tunnel](#) 2-813

[show port lacp-channel](#) 2-814

[show port mac](#) 2-817

[show port mac-address](#) 2-819

[show port negotiation](#) 2-821

[show port protocol](#) 2-822

[show port qos](#) 2-823

[show port rsvp](#) 2-826

[show port security](#) 2-827

[show port spantree](#) 2-829

[show port status](#) 2-830

[show port sync-restart-delay](#) 2-831

[show port trap](#) 2-832

[show port trunk](#) 2-833

[show port voice](#) 2-835

[show port voice active](#) 2-838

[show port voice fdl](#) 2-842

[show port voice interface](#) 2-844

[show proc](#) 2-845

[show protocolfilter](#) 2-849

[show pvlan](#) 2-850

[show pvlan capability](#) 2-852

[show pvlan mapping](#) 2-854

[show qos acl editbuffer](#) 2-856

[show qos acl info](#) 2-857

[show qos acl map](#) 2-859

[show qos acl resource-usage](#) 2-861

[show qos bridged-packet-policing](#) 2-862

[show qos info](#) 2-863

[show qos mac-cos](#) 2-868

[show qos maps](#) 2-870

[show qos policer](#) 2-873

[show qos policy-source](#) 2-875

[show qos rsvp](#) 2-876

[show qos statistics](#) 2-878

[show qos statistics export info](#) 2-880

[show qos status](#) 2-881

[show radius](#) 2-882

[show rcp](#) 2-884

[show reset](#) 2-885

[show rgmp group](#) 2-886

[show rgmp statistics](#) 2-887

[show rspan](#) 2-888

[show running-config](#) 2-890

[show security acl](#) 2-893

[show security acl capture-ports](#) 2-896

[show security acl log](#) 2-897

[show security acl map](#) 2-900

show security acl resource-usage 2-901

show snmp 2-902

show snmp access 2-904

show snmp community 2-906

show snmp context 2-908

show snmp counters 2-909

show snmp engineid 2-913

show snmp group 2-914

show snmp notify 2-916

show snmp rmonmemory 2-918

show snmp targetaddr 2-919

show snmp targetparams 2-921

show snmp user 2-923

show snmp view 2-925

show span 2-927

show spantree 2-929

show spantree backbonefast 2-932

show spantree blockedports 2-933

show spantree bpdu-filter 2-934

show spantree bpdu-guard 2-935

show spantree bpdu-skewing 2-936

show spantree conflicts 2-938

show spantree defaultcostmode 2-940

show spantree guard 2-941

show spantree mapping 2-943

show spantree mistp-instance 2-945

show spantree mst 2-947

show spantree mst config 2-949

show spantree portfast 2-951

show spantree portinstancecost 2-952

show spantree portvlancost 2-953

show spantree statistics 2-954

show spantree summary 2-961

show spantree uplinkfast 2-964

show startup-config 2-966

[show summertime](#) 2-969  
[show system](#) 2-970  
[show system highavailability](#) 2-973  
[show system switchmode](#) 2-974  
[show tacacs](#) 2-975  
[show tech-support](#) 2-977  
[show test](#) 2-980  
[show time](#) 2-985  
[show timezone](#) 2-986  
[show top](#) 2-987  
[show top report](#) 2-989  
[show traffic](#) 2-991  
[show trunk](#) 2-992  
[show udld](#) 2-995  
[show users](#) 2-997  
[show version](#) 2-998  
[show vlan](#) 2-1001  
[show vlan counters](#) 2-1006  
[show vmps](#) 2-1008  
[show vmps mac](#) 2-1010  
[show vmps statistics](#) 2-1011  
[show vmps vlan](#) 2-1013  
[show vtp domain](#) 2-1014  
[show vtp statistics](#) 2-1016  
[slip](#) 2-1018  
[squeeze](#) 2-1019  
[stack](#) 2-1020  
[switch](#) 2-1021  
[switch console](#) 2-1022  
[switch fabric](#) 2-1023  
[sync](#) 2-1024  
[sysret](#) 2-1025  
[telnet](#) 2-1026  
[test snmp trap](#) 2-1027  
[traceroute](#) 2-1028

- unalias 2-1031
- undelete 2-1032
- unset=varname 2-1033
- varname= 2-1034
- verify 2-1035
- wait 2-1036
- whichboot 2-1037
- write 2-1038
- write tech-support 2-1041

---

APPENDIX A

**Acronyms** A-1

---

INDEX



## Preface

---

This preface describes the audience, organization, and conventions of this publication and provides information on how to obtain related documentation.

For definitions of terms and acronyms listed in this publication, see [Appendix A “Acronyms.”](#)

## Audience

This publication is for experienced network administrators who are responsible for configuring and maintaining Catalyst 6500 series switches.

## Organization

This publication is organized as follows:

Chapter	Title	Description
Chapter 1	<a href="#">Command-Line Interfaces</a>	Describes the two types of CLIs found on Catalyst 6500 series switches.
Chapter 2	<a href="#">Switch and ROM Monitor Commands for the Catalyst 6500 Series Switches</a>	Lists alphabetically and provides detailed information for all Catalyst 6500 series switch and ROM-monitor commands.
Appendix A	<a href="#">Acronyms</a>	Defines the acronyms used in this publication.

## Related Documentation

Other documents in the Catalyst 6500 series switch documentation set include:

- *Catalyst 6000 Family Installation Guide*
- *Catalyst 6000 Family Module Installation Guide*
- *Catalyst 6500 Series Software Configuration Guide*

- *System Message Guide—Catalyst 6500 Series, 4000 Family, Catalyst 2948G, and Catalyst 2980G Switches*
- *Catalyst 6500 Series Quick Software Configuration Guide*
- *ATM Software Configuration Guide and Command Reference for the Catalyst 5000 Family and 6500 Series Switches*
- *Release Notes for Catalyst 6500 Series*

For information about MIBs, refer to:

<http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml>

## Conventions

This publication uses the following conventions:

Convention	Description
<b>boldface font</b>	Commands, command options, and keywords are in <b>boldface</b> .
<i>italic font</i>	Arguments for which you supply values are in <i>italics</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
screen font	Terminal sessions and information the system displays are in screen font.
<b>boldface screen font</b>	Information you must enter is in <b>boldface screen font</b> .
<i>italic screen font</i>	Arguments for which you supply values are in <i>italic screen font</i> .
^	The symbol ^ represents the key labeled Control—for example, the key combination ^D in a screen display means hold down the Control key while you press the D key.
< >	Nonprinting characters, such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Notes use the following conventions:



Note

---

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the publication.

---

## Obtaining Documentation

These sections explain how to obtain documentation from Cisco Systems.

### World Wide Web

You can access the most current Cisco documentation on the World Wide Web at this URL:

<http://www.cisco.com>

Translated documentation is available at this URL:

[http://www.cisco.com/public/countries\\_languages.shtml](http://www.cisco.com/public/countries_languages.shtml)

### Documentation CD-ROM

Cisco documentation and additional literature are available in a Cisco Documentation CD-ROM package, which is shipped with your product. The Documentation CD-ROM is updated monthly and may be more current than printed documentation. The CD-ROM package is available as a single unit or through an annual subscription.

### Ordering Documentation

You can order Cisco documentation in these ways:

- Registered Cisco.com users (Cisco direct customers) can order Cisco product documentation from the Networking Products MarketPlace:  
[http://www.cisco.com/cgi-bin/order/order\\_root.pl](http://www.cisco.com/cgi-bin/order/order_root.pl)
- Registered Cisco.com users can order the Documentation CD-ROM through the online Subscription Store:  
<http://www.cisco.com/go/subscription>
- Nonregistered Cisco.com users can order documentation through a local account representative by calling Cisco Systems Corporate Headquarters (California, U.S.A.) at 408 526-7208 or, elsewhere in North America, by calling 800 553-NETS (6387).

### Documentation Feedback

You can submit comments electronically on Cisco.com. In the Cisco Documentation home page, click the **Fax** or **Email** option in the “Leave Feedback” section at the bottom of the page.

You can e-mail your comments to [bug-doc@cisco.com](mailto:bug-doc@cisco.com).

You can submit your comments by mail by using the response card behind the front cover of your document or by writing to the following address:

Cisco Systems  
Attn: Document Resource Connection  
170 West Tasman Drive  
San Jose, CA 95134-9883

We appreciate your comments.

## Obtaining Technical Assistance

Cisco provides Cisco.com as a starting point for all technical assistance. Customers and partners can obtain online documentation, troubleshooting tips, and sample configurations from online tools by using the Cisco Technical Assistance Center (TAC) Web Site. Cisco.com registered users have complete access to the technical support resources on the Cisco TAC Web Site.

### Cisco.com

Cisco.com is the foundation of a suite of interactive, networked services that provides immediate, open access to Cisco information, networking solutions, services, programs, and resources at any time, from anywhere in the world.

Cisco.com is a highly integrated Internet application and a powerful, easy-to-use tool that provides a broad range of features and services to help you with these tasks:

- Streamline business processes and improve productivity
- Resolve technical issues with online support
- Download and test software packages
- Order Cisco learning materials and merchandise
- Register for online skill assessment, training, and certification programs

If you want to obtain customized information and service, you can self-register on Cisco.com. To access Cisco.com, go to this URL:

<http://www.cisco.com>

### Technical Assistance Center

The Cisco Technical Assistance Center (TAC) is available to all customers who need technical assistance with a Cisco product, technology, or solution. Two levels of support are available: the Cisco TAC Web Site and the Cisco TAC Escalation Center.

Cisco TAC inquiries are categorized according to the urgency of the issue:

- Priority level 4 (P4)—You need information or assistance concerning Cisco product capabilities, product installation, or basic product configuration.
- Priority level 3 (P3)—Your network performance is degraded. Network functionality is noticeably impaired, but most business operations continue.

- Priority level 2 (P2)—Your production network is severely degraded, affecting significant aspects of business operations. No workaround is available.
- Priority level 1 (P1)—Your production network is down, and a critical impact to business operations will occur if service is not restored quickly. No workaround is available.

The Cisco TAC resource that you choose is based on the priority of the problem and the conditions of service contracts, when applicable.

## Cisco TAC Web Site

You can use the Cisco TAC Web Site to resolve P3 and P4 issues yourself, saving both cost and time. The site provides around-the-clock access to online tools, knowledge bases, and software. To access the Cisco TAC Web Site, go to this URL:

<http://www.cisco.com/tac>

All customers, partners, and resellers who have a valid Cisco service contract have complete access to the technical support resources on the Cisco TAC Web Site. The Cisco TAC Web Site requires a Cisco.com login ID and password. If you have a valid service contract but do not have a login ID or password, go to this URL to register:

<http://www.cisco.com/register/>

If you are a Cisco.com registered user, and you cannot resolve your technical issues by using the Cisco TAC Web Site, you can open a case online by using the TAC Case Open tool at this URL:

<http://www.cisco.com/tac/caseopen>

If you have Internet access, we recommend that you open P3 and P4 cases through the Cisco TAC Web Site.

## Cisco TAC Escalation Center

The Cisco TAC Escalation Center addresses priority level 1 or priority level 2 issues. These classifications are assigned when severe network degradation significantly impacts business operations. When you contact the TAC Escalation Center with a P1 or P2 problem, a Cisco TAC engineer automatically opens a case.

To obtain a directory of toll-free Cisco TAC telephone numbers for your country, go to this URL:

<http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml>

Before calling, please check with your network operations center to determine the level of Cisco support services to which your company is entitled: for example, SMARTnet, SMARTnet Onsite, or Network Supported Accounts (NSA). When you call the center, please have available your service agreement number and your product serial number.





# Command-Line Interfaces

---

This chapter describes the command-line interfaces (CLI) available on the Catalyst 6500 series switches and contains these sections:

- [Switch CLI, page 1-1](#)
- [ROM Monitor CLI, page 1-13](#)

For information regarding the ATM CLI and commands, refer to the *ATM Software Configuration Guide and Command Reference—Catalyst 5000 Family and 6500 Series Switches* publication.

For information regarding the IDSM CLI and commands, refer to the *Catalyst 6000 Intrusion Detection System Module Installation and Configuration Note* publication.

## Switch CLI

Catalyst 6500 series switches are multimodule systems. Commands you enter from the CLI can apply to the entire system or to a specific module, port, or VLAN.

You can configure and maintain the Catalyst 6500 series switches by entering commands from the switch CLI. The CLI is a basic command-line interpreter similar to the UNIX C shell. Using the CLI **session** command, you can access the router configuration software and perform tasks such as history substitution and alias creation.



Note

The Catalyst 6500 series consists of the Catalyst 6500 and 6000 series switches. The Catalyst 6500 series consists of the Catalyst 6506, 6509, 6509-NEB, and 6513 switches; the Catalyst 6000 series consists of the Catalyst 6006 and 6009 switches. Throughout this publication and all Catalyst 6500 series documents, the phrase *Catalyst 6500 series switches* refers to these switches, unless otherwise noted.

## Accessing the Switch CLI

You can access the switch CLI from a console terminal connected to an EIA/TIA-232 port or through a Telnet session. The CLI allows fixed baud rates. Telnet sessions disconnect automatically after remaining idle for a user-defined time period.



Note

EIA/TIA-232 was known as RS-232 before its acceptance as a standard by the Electronic Industries Alliance and Telecommunications Industry Association.

## Accessing the Switch CLI through the Console Port (EIA/TIA-232)

To access the switch through the console (EIA/TIA-232) port, perform these steps:

	Task	Command
Step 1	From the Cisco Systems Console prompt, press <b>Return</b> .	
Step 2	At the prompt, enter the system password. The Console> prompt appears indicating that you have accessed the CLI in normal mode.	<i>&lt;password&gt;</i>
Step 3	Enter the necessary commands to complete your desired tasks.	Appropriate commands
Step 4	When finished, exit the session.	<b>quit</b>

After connecting through the console port, you see this display:

```
Cisco Systems Console
Enter password:
Console>
Console>
```

## Accessing the Switch CLI through Telnet

To access the switch through a Telnet session, you must first set the IP address for the switch. You can open multiple sessions to the switch via Telnet.

To access the switch from a remote host with Telnet, perform these steps:

	Task	Command
Step 1	From the remote host, enter the <b>telnet</b> command and the name or IP address of the switch you want to access.	<b>telnet</b> <i>hostname   ip_addr</i>
Step 2	At the prompt, enter the password for the CLI. If no password has been configured, press <b>Return</b> .	<i>&lt;password&gt;</i>
Step 3	Enter the necessary commands to complete your desired tasks.	Appropriate commands
Step 4	When finished, exit the Telnet session.	<b>quit</b>

After connecting through a Telnet session, you see this display:

```
host% telnet cat6000-1.cisco.com
Trying 172.16.44.30 ...
Connected to cat6000-1.
```

## Operating the Switch CLI

This section describes command modes and functions that allow you to operate the switch CLI.

### Accessing the Command Modes

The CLI has two modes of operation: normal and privileged. Both are password-protected. Use normal-mode commands for everyday system monitoring. Use privileged commands for system configuration and basic troubleshooting.

After you log in, the system enters normal mode, which gives you access to normal-mode commands only. You can enter privileged mode by entering the **enable** command followed by the enable password. Privileged mode is indicated by the word “enable” in the system prompt. To return to normal mode, enter the **disable** command at the prompt.

The following example shows how to enter privileged mode:

```
Console> enable
Enter password: <password>
Console> (enable)
```

### Using Command-Line Processing

Switch commands are not case sensitive. You can abbreviate commands and parameters as long as they contain enough letters to be different from any other currently available commands or parameters. You can scroll through the last 20 commands stored in the history buffer, and enter or edit the command at the prompt. (See [Table 1-1](#).)

**Table 1-1** Command-Line Processing Keystroke

Keystroke	Function
Ctrl-A	Jumps to the first character of the command line.
Ctrl-B or the left arrow key	Moves the cursor back one character.
Ctrl-C	Escapes and terminates prompts and tasks.
Ctrl-D	Deletes the character at the cursor.
Ctrl-E	Jumps to the end of the current command line.
Ctrl-F or the right arrow key <sup>1</sup>	Moves the cursor forward one character.
Ctrl-K	Deletes from the cursor to the end of the command line.
Ctrl-L; Ctrl-R	Repeats current command line on a new line.
Ctrl-N or the down arrow key <sup>1</sup>	Enters next command line in the history buffer.
Ctrl-P or the up arrow key <sup>1</sup>	Enters previous command line in the history buffer.
Ctrl-U; Ctrl-X	Deletes from the cursor to the beginning of the command line.
Ctrl-W	Deletes last word typed.

**Table 1-1** Command-Line Processing Keystroke (continued)

Keystroke	Function
Esc B	Moves the cursor back one word.
Esc D	Deletes from the cursor to the end of the word.
Esc F	Moves the cursor forward one word.
Delete key or Backspace key	Erases mistake when entering a command; reenter command after using this key.

1. The arrow keys function only on ANSI-compatible terminals such as VT100s.

## Using the Command-Line Editing Features

Catalyst 6500 series switch software includes an enhanced editing mode that provides a set of editing key functions similar to those of the Emacs editor. You can enter commands in uppercase, lowercase, or a mix of both. Only passwords are case sensitive. You can abbreviate commands and keywords to the number of characters that allow a unique abbreviation.

For example, you can abbreviate the **show** command to **sh**. After entering the command at the system prompt, press **Return** to execute the command.

### Moving Around on the Command Line

Perform one of these tasks to move the cursor around on the command line for corrections or changes:

Task	Keystrokes
Move the cursor back one character.	Press <b>Ctrl-B</b> or press the left arrow key <sup>1</sup> .
Move the cursor forward one character.	Press <b>Ctrl-F</b> or press the right arrow key <sup>1</sup> .
Move the cursor to the beginning of the command line.	Press <b>Ctrl-A</b> .
Move the cursor to the end of the command line.	Press <b>Ctrl-E</b> .
Move the cursor back one word.	Press <b>Esc B</b> .
Move the cursor forward one word.	Press <b>Esc F</b> .

1. The arrow keys function only on ANSI-compatible terminals such as VT100s.

### Completing a Partial Command Name

If you cannot remember a complete command name, press the **Tab** key to allow the system to complete a partial entry. To do so, perform this task:

Task	Keystrokes
Complete a command name.	Enter the first few letters and press the <b>Tab</b> key.

If your keyboard does not have a Tab key, press **Ctrl-I** instead.

In the following example, when you enter the letters **conf** and press the **Tab** key, the system provides the complete command:

```
Console> (enable) conf<Tab>
```

```
Console> (enable) configure
```

If you enter a set of characters that could indicate more than one command, the system beeps to indicate an error. Enter a question mark (?) to obtain a list of commands that begin with that set of characters. Do not leave a space between the last letter and the question mark (?). For example, three commands in privileged mode start with co. To see what they are, enter co? at the privileged prompt. The system displays all commands that begin with co, as follows:

```
Console> (enable) co?
configure connect copy
```

### Pasting in Buffer Entries

The system provides a buffer that contains the last ten items you deleted. You can recall these items and paste them in the command line by performing this task:

Task	Keystrokes
Recall the most recent entry in the buffer.	Press <b>Ctrl-Y</b> .
Recall the next buffer entry.	Press <b>Esc Y</b> .

The buffer contains only the last ten items you have deleted or cut. If you press **Esc Y** more than ten times, you cycle back to the first buffer entry.

### Editing Command Lines That Wrap

The new editing command set provides a wraparound feature for commands that extend beyond a single line on the screen. When the cursor reaches the right margin, the command line shifts ten spaces to the left. You cannot see the first ten characters of the line, but you can scroll back and check the syntax at the beginning of the command. To scroll back, perform this task:

Task	Keystrokes
Return to the beginning of a command line to verify that you have entered a lengthy command correctly.	Press <b>Ctrl-B</b> or the left arrow key repeatedly until you scroll back to the beginning of the command entry, or press <b>Ctrl-A</b> to return directly to the beginning of the line <sup>1</sup> .

1. The arrow keys function only on ANSI-compatible terminals such as VT100s.

Use line wrapping with the command history feature to recall and modify previous complex command entries. See the [“Using History Substitution” section on page 1-8](#) for information about recalling previous command entries.

The system assumes your terminal screen is 80 columns wide. If your screen has a different width, enter the terminal width command to tell the router the correct width of your screen.

## Deleting Entries

Perform one of these tasks to delete command entries if you make a mistake or change your mind:

Task	Keystrokes
Erase the character to the left of the cursor.	Press the <b>Delete</b> or <b>Backspace</b> key.
Delete the character at the cursor.	Press <b>Ctrl-D</b> .
Delete from the cursor to the end of the command line.	Press <b>Ctrl-K</b> .
Delete from the cursor to the beginning of the command line.	Press <b>Ctrl-U</b> or <b>Ctrl-X</b> .
Delete the word to the left of the cursor.	Press <b>Ctrl-W</b> .
Delete from the cursor to the end of the word.	Press <b>Esc D</b> .

## Scrolling Down a Line or a Screen

When you use the help facility to list the commands in a particular mode, the list is often longer than the terminal screen can display. In such cases, a ---More--- prompt is displayed at the bottom of the screen. To view the next line or screen, perform these tasks:

Task	Keystrokes
Scroll down one line.	Press the <b>Return</b> key.
Scroll down one screen.	Press the <b>Spacebar</b> .



### Note

The ---More--- prompt is used for any output that has more lines than can be displayed on the terminal screen, including **show** command output.

## Scrolling to Specified Text

If you enter */text* and press the **Return** key at the --More-- prompt, the display starts two lines above the line containing the *text* string. If the text string is not found, "Pattern Not Found" is displayed. You can also enter "**n**" at the --More-- prompt to search for the last entered *text* string. You can use this search method on all **show** commands that use the more buffer to display screen by screen output. The following is a list of **show** commands that do not use the more buffer and do not support this feature:

- **show cam**
- **show mls**
- **show tech-support**

## Redisplaying the Current Command Line

If you enter a command and the system suddenly sends a message to your screen, you can recall your current command line entry. To do so, perform this task:

Task	Keystrokes
Redisplay the current command line.	Press <b>Ctrl-L</b> or <b>Ctrl-R</b> .

## Transposing Mistyped Characters

If you mistype a command entry, you can transpose the mistyped characters by performing this task:

Task	Keystrokes
Transpose the character to the left of the cursor with the character located at the cursor.	Press <b>Ctrl-T</b> .

## Controlling Capitalization

You can change words to uppercase or lowercase, or capitalize a set of letters, with simple keystroke sequences:

Task	Keystrokes
Capitalize at the cursor.	Press <b>Esc C</b> .
Change the word at the cursor to lowercase.	Press <b>Esc L</b> .
Capitalize letters from the cursor to the end of the word.	Press <b>Esc U</b> .

## Designating a Keystroke as a Command Entry

You can use a particular keystroke as an executable command. Perform this task:

Task	Keystrokes
Insert a code to indicate to the system that the keystroke immediately following should be treated as a command entry, <i>not</i> an editing key.	Press <b>Ctrl-V</b> or <b>Esc Q</b> .

## Using Command Aliases

Like regular commands, aliases are not case sensitive. However, unlike regular commands, some aliases cannot be abbreviated. See [Table 1-2](#) for a list of switch CLI aliases that cannot be abbreviated.

**Table 1-2** Switch CLI Command Aliases

Alias	Command
<b>batch</b>	<b>configure</b>
<b>di</b>	<b>show</b>
<b>earl</b>	<b>cam</b>
<b>exit</b>	<b>quit</b>
<b>logout</b>	<b>quit</b>

## Using History Substitution

Commands that you enter during each terminal session are stored in a history buffer, which stores the last 20 commands you entered during a terminal session. History substitution allows you to access these commands without retyping them by using special abbreviated commands. (See [Table 1-3](#).)

**Table 1-3** History Substitution Commands

Command	Function
<b>To repeat recent commands:</b>	
!!	Repeat the most recent command.
!-nn	Repeat the nnth most recent command.
!n	Repeat command n.
!aaa	Repeat the command beginning with string aaa.
!?aaa	Repeat the command containing the string aaa.
<b>To modify and repeat the most recent command:</b>	
^aaa^bbb	Replace string aaa with string bbb in the most recent command.
<b>To add a string to the end of a previous command and repeat it:</b>	
!!aaa	Add string aaa to the end of the most recent command.
!n aaa	Add string aaa to the end of command n.
!aaa bbb	Add string bbb to the end of the command beginning with string aaa.
!?aaa bbb	Add string bbb to the end of the command containing string aaa.

## Accessing Command Help

To see a list of top-level commands and command categories, type **help** in normal or privileged mode. Context-sensitive help (usage and syntax information) for individual commands can be seen by appending **help** to any specific command. If you enter a command using the wrong number of arguments or inappropriate arguments, usage and syntax information for that command is displayed. Additionally, appending **help** to a command category displays a list of commands in that category.

### Top-Level Commands and Command Categories

In normal mode, use the **help** command to display a list of top-level commands and command categories, as follows:

```
Console> help
Commands:
-----
cd                Set default flash device
dir              Show list of files on flash device
enable          Enable privileged mode
help            Show this help screen
history         Show contents of history substitution buffer
l2trace         Layer2 trace between hosts
ping            Send echo packets to hosts
pwd            Show default flash device
quit           Exit from the Admin session
session        Tunnel to ATM or Router module
set            Set commands, use 'set help' for more info
show          Show commands, use 'show help' for more info
traceroute    Trace the route to a host
verify        Verify checksum of file on flash device
wait          Wait for x seconds
whichboot     Which file booted
Console>
```

In privileged mode, enter the **help** command to display a list of top-level commands and command categories, as follows:

```
Console> (enable) help
Commands:
-----
cd                Set default flash device
clear            Clear, use 'clear help' for more info
commit          Commit ACL to hardware and NVRAM
configure       Configure system from network
copy            Copy files between TFTP/RCP/module/flash devices
delete          Delete a file on flash device
dir              Show list of files on flash device
disable         Disable privileged mode
disconnect      Disconnect user session
download        Download code to a processor
enable          Enable privileged mode
format          Format a flash device
help            Show this help screen
history         Show contents of history substitution buffer
l2trace         Layer2 trace between hosts
ping            Send echo packets to hosts
pwd            Show default flash device
quit           Exit from the Admin session
reconfirm       Reconfirm VMPS
reload          Force software reload to linecard
reset           Reset system or module
rollback        Rollback changes made to ACL in editbuffer
```

```

session          Tunnel to ATM or Router module
set              Set commands, use 'set help' for more info
show            Show commands, use 'show help' for more info
slip            Attach/detach Serial Line IP interface
squeeze         Reclaim space used by deleted files
switch          Switch to standby <clock|supervisor>
telnet          Telnet to a remote host
test            Test command, use 'test help' for more info
undelete        Undelete a file on flash device
upload          Upload code from a processor
verify          Verify checksum of file on flash device
wait            Wait for x seconds
whichboot       Which file booted
write           Write system configuration to terminal/network
Console> (enable)

```

## Command Categories

On some commands (such as **clear**, **set**, and **show**), typing **help** after the command provides a list of commands in that category. For example, this display shows a partial list of commands for the **clear** category:

```
Console> (enable) clear help
```

```
Clear commands:
```

```

-----
clear alias          Clear aliases of commands
clear arp            Clear ARP table entries
clear banner         Clear Message Of The Day banner
clear boot           Clear booting environment variable
clear cam            Clear CAM table entries
clear channel        Clear PAgP statistical information
.
.
.

```

## Context-Sensitive Help

Usage and syntax information for individual commands can be seen by appending **help** to any specific command. For example, the following display shows usage and syntax information for the **set length** command:

```

Console> set length help
Usage: set length <screenlength> [default]
       (screenlength = 5..512, 0 to disable 'more' feature)
Console>

```

## Designating Modules, Ports, and VLANs

The Catalyst 6500 series modules (module slots), ports, and VLANs are numbered starting with 1. The supervisor engine module is module 1, residing in the top slot. On each module, port 1 is the leftmost port. To reference a specific port on a specific module, the command syntax is *mod/port*. For example, **3/1** denotes module 3, port 1. In some commands, such as **set trunk**, **set cam**, and **set vlan**, you can enter lists of ports and VLANs.

You can designate ports by entering the module and port number pairs, separated by commas. To specify a range of ports, use a dash (-) between the module number and port number pairs. Dashes take precedence over commas. The following examples show several ways of designating ports:

Example 1: **2/1,2/3** denotes module 2, port 1 and module 2, port 3.

Example 2: **2/1-12** denotes module 2, ports 1 through 12.

Example 3: **2/1-2/12** also denotes module 2, ports 1 through 12.

Each VLAN is designated by a single number. You can specify lists of VLANs the same way you do for ports. Individual VLANs are separated by commas (,); ranges are separated by dashes (-). In the following example, VLANs 1 through 10 and VLAN 1000 are specified:

```
1-10,1000
```

## Designating MAC Addresses, IP and IPX Addresses, and IP Aliases

Some commands require a MAC address that you must designate in a standard format. The MAC address format must be six hexadecimal numbers separated by hyphens, as shown in this example:

```
00-00-0c-24-d2-fe
```

Some commands require an IP address. The IP address format is 32 bits, written as four octets separated by periods (dotted decimal format). IP addresses are made up of a network section, an optional subnet section, and a host section, as shown in this example:

```
126.2.54.1
```

If DNS is configured properly on the switch, you can use IP host names instead of IP addresses. For information on configuring DNS, refer to the *Catalyst 6500 Series Software Configuration Guide*.

If the IP alias table is configured, you can use IP aliases in place of the dotted decimal IP address. This is true for most commands that use an IP address, except commands that define the IP address or IP alias.

When entering the IPX address syntax, use the following format:

- IPX net address—1..FFFFFFFE
- IPX node address—x.x.x where x is 0..FFFF
- IPX address—ipx\_net.ipx\_node (for example 3.0034.1245.AB45, A43.0000.0000.0001)

## Using Command Completion Features

The command completion features consist of these functions:

- [Using Command Self-Repeat](#)
- [Using Keyword Lookup](#)
- [Using Partial Keyword Lookup](#)
- [Using Command Completion](#)

### Using Command Self-Repeat

Use the command self-repeat function to display matches to all possible keywords if a string represents a unique match. If a unique match is not found, the longest matching string is provided. To display the matches, enter a space after the last parameter and enter ?. Once the matches are displayed, the system comes back to the prompt and displays the last command without the ?. In the following example, notice how the system repeats the command entered without the ?.

```

Console> (enable) set mls nde
  disable          Disable multilayer switching data export filter
  enable          Enable multilayer switching data export filter
  engineer        Engineer setting of the export filter
  flow            Setting multilayer switching export filter
  <collector_ip> IP address
Console> (enable) set mls nde

```

## Using Keyword Lookup

Use the keyword-lookup function to display a list of valid keywords and arguments for a command. To display the matches, enter a space after the last parameter and enter `?`. For example, five parameters are used by the `set mls` command. To see these parameters, enter `set mls ?` at the privileged prompt. In the following example, notice how the system repeats the command entered without the `?`:

```

Console> (enable) set mls ?
  agingtime      Set agingtime for MLS cache entry
  exclude        Set MLS excluded protocol ports
  flow           Set minimum flow mask
  nde            Configure Netflow Data Export
  statistics     Add protocols to protocol statistics list
Console> (enable) set mls

```

## Using Partial Keyword Lookup

Use the partial keyword-lookup function to display a list of commands that begin with a specific set of characters. To display the matches, enter `?` immediately after the last parameter. For example, enter `co?` at the privileged prompt to display a list of commands that start with `co`. The system displays all commands that begin with `co` and repeats the command entered without the `?`:

```

Console> (enable) co?
  commit          Commit ACL to hardware and NVRAM
  configure       Configure system from network
  copy            Copy files between TFTP/RCP/module/flash devices
Console> (enable) CO

```

## Using Command Completion

Use the command completion function to complete a command or keyword. When you enter a unique partial character string and press **Tab**, the system completes the command or keyword on the command line. For example, if you enter `co` at the privileged prompt and press **Tab**, the system completes the command as `configure` because it is the only command that matches the criteria.

If no completion can be done, no action is carried out and the system returns to the prompt and the last command. The cursor appears immediately after the keyword, allowing you to enter additional information.

# ROM Monitor CLI

The ROM monitor is a ROM-based program that executes upon platform power-up, reset, or when a fatal exception occurs.

## Accessing the ROM Monitor CLI

The system enters ROM-monitor mode if the switch does not find a valid system image, if the NVRAM configuration is corrupted, or if the configuration register is set to enter ROM-monitor mode. From the ROM-monitor mode, you can load a system image manually from Flash memory, from a network server file, or from bootflash. You can also enter ROM-monitor mode by restarting the switch and pressing the **Break** key during the first 60 seconds of startup.

**Note**

---

Break is always enabled for 60 seconds after rebooting the system, regardless of whether Break is configured to be off by configuration register settings.

---

To connect through a terminal server, escape to the Telnet prompt, and enter the **send break** command to break back to the ROM-monitor mode.

## Operating the ROM Monitor CLI

The ROM monitor commands are used to load and copy system images, microcode images, and configuration files. System images contain the system software. Microcode images contain microcode to be downloaded to various hardware devices. Configuration files contain commands to customize Catalyst 6500 series software.

The manual **boot** command has the following syntax:

**Note**

---

Enter the **copy file-id { tftp | flash | file-id }** command to obtain an image from the network.

---

- **boot**—Boot from ROM
- **boot [-xv] [device:][imagename]**—Boot from the local device. If you do not specify an image name, the system defaults to the first valid file in the device. The image name is case sensitive.

Once you are in ROM-monitor mode, the prompt changes to rommon 1>. While you are in ROM-monitor mode, each time you enter a command, the number in the prompt increments by one.





## Switch and ROM Monitor Commands for the Catalyst 6500 Series Switches

---

This chapter contains an alphabetical listing of all switch and ROM monitor commands available on the Catalyst 6500 series switches.

For information regarding ATM module-related commands, refer to the *ATM Software Configuration Guide and Command Reference for the Catalyst 5000 Family and 6500 Series Switches*.

For information regarding IDS module-related commands, refer to the *Catalyst 6000 Intrusion Detection System Module Installation and Configuration Note*.

Except where specifically differentiated, the Layer 3 switching engine refers to either:

- Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC (Policy Feature Card)
- Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2)

# alias

Use the **alias** command to set and display command aliases.

**alias** [*name=value*]

Syntax Description	<i>name=</i>	(Optional) Name you give to the alias.
	<i>value</i>	(Optional) Value of the alias.

**Defaults** This command has no default settings.

**Command Types** ROM monitor command.

**Command Modes** Normal.

**Usage Guidelines** If *value* contains white space or other special (shell) characters, you must use quotation marks. If *value* has a space as its last character, the next command line word is checked for an alias (normally, only the first word on a command line is checked).

Without an argument, this command prints a list of all aliased names with their values.

An equal sign (=) is required between the name and value of the alias.

You must issue a **sync** command to save your change. If you do not issue a **sync** command, the change is not saved and a **reset** removes your change.

**Examples** This example shows how to display a list of available **alias** commands and how to create an alias for the **set** command:

```
rommon 1 > alias
r=repeat
h=history
?=help
b=boot
ls=dir
i=reset
k=stack
rommon 2 > alias s=set
rommon 3 > alias
r=repeat
h=history
?=help
b=boot
ls=dir
i=reset
```

```
k=stack
s=set
rommon 4 > s
PS1=rommon ! >
BOOT=bootflash:RTSYNC_llue_11,1;slot0:f1,1;
=====
```

---

**Related Commands**    [unalias](#)

# boot

Use the **boot** command to boot up an external process.

```
boot [-x] [-v] [device:][imagename]
```

Syntax Description	
<b>-x</b>	(Optional) Load the image but do not execute.
<b>-v</b>	(Optional) Toggle verbose mode.
<i>device:</i>	(Optional) ID of the device.
<i>imagename</i>	(Optional) Name of the image.

**Defaults** This command has no default settings.

**Command Types** ROM monitor command.

**Command Modes** Normal.

**Usage Guidelines** If you do not enter any arguments, the **boot** command boots the first image in bootflash. To specify an image, enter the image name. To specify the device, enter the device ID.

If a device is not entered with an image name, the image is not booted.

If a device name is not recognized by the monitor, the monitor passes the device ID to the boot helper image.

This command will not boot the MSFC if the PFC is not present in the Catalyst 6500 series switch.

**Examples** This example shows how to use the **boot** command:

```
rommon 2 > boot bootflash:cat6000-sup.6-1-1.bin
cccccccccccccccccccccccccccccccccccccccccccccccccccccccccccc
Uncompressing file:
#####
#####
#####
```

# cd

Use the **cd** command to set the default Flash device for the system.

**cd** *[[m/]device:]*

<b>Syntax Description</b>	<i>m/</i> (Optional) Module number of the supervisor engine containing the Flash device.
	<i>device:</i> (Optional) Valid devices include <b>bootflash</b> and <b>slot0</b> .
<b>Defaults</b>	The default Flash device is bootflash.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	<p>A colon (:) is required after the specified device.</p> <p>With commands where the device is an option, if the default device is not specified, the device set by the <b>cd</b> command is used.</p>
<b>Examples</b>	<p>This example shows how to set the system default Flash device to bootflash:</p> <pre>Console&gt; <b>cd bootflash:</b> Default flash device set to bootflash. Console&gt;</pre>
<b>Related Commands</b>	<a href="#">pwd</a>

# clear alias

Use the **clear alias** command to clear the abbreviated versions of commands.

**clear alias** {*name* | **all**}

Syntax Description	<i>name</i>	Alternate identifier of the command.
	<b>all</b>	Clears every alternate identifier previously created.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to erase the arpdel alias:

```
Console> (enable) clear alias arpdel
Command alias deleted.
Console> (enable)
```

This example shows how to erase all the aliases:

```
Console> (enable) clear alias all
Command alias table cleared. (1)
Console> (enable)
```

(1) indicates the number of command aliases cleared.

**Related Commands** [set alias](#)  
[show alias](#)

# clear arp

Use the **clear arp** command to delete a specific entry or all entries from the ARP table.

```
clear arp [all | dynamic | permanent | static] {ip_addr}
```

Syntax Description	
<b>all</b>	(Optional) Clears all ARP entries.
<b>dynamic</b>	(Optional) Clears all dynamic ARP entries.
<b>permanent</b>	(Optional) Clears all permanent ARP entries.
<b>static</b>	(Optional) Clears all static ARP entries.
<i>ip_addr</i>	IP address to clear from the ARP table.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to remove IP address 198.133.219.209 from the ARP table:

```
Console> (enable) clear arp 198.133.219.209
ARP entry deleted.
Console> (enable)
```

This example shows how to remove all entries from the ARP table:

```
Console> (enable) clear arp all
ARP table cleared. (1)
Console> (enable)
```

(1) indicates the number of entries cleared.

This example shows how to remove all dynamically learned ARP entries:

```
Console> (enable) clear arp dynamic
Unknown host
Dynamic ARP entries cleared. (3)
Console> (enable)
```

This example shows how to clear all permanently entered ARP entries:

```
Console> (enable) clear arp permanent
Unknown host
Permanent ARP entries cleared.(5)
Console> (enable)
```

**Related Commands** [set arp](#)  
[show arp](#)

# clear banner motd

Use the **clear banner motd** command to clear the message-of-the-day banner.

**clear banner motd**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear the message-of-the-day banner:

```
Console> (enable) clear banner motd
MOTD banner cleared
Console> (enable)
```

---

**Related Commands** [set banner motd](#)

# clear boot auto-config

Use the **clear boot auto-config** command to clear the contents of the CONFIG\_FILE environment variable used to specify the configuration files used during bootup.

**clear boot auto-config** [*mod*]

---

<b>Syntax Description</b>	<i>mod</i> (Optional) Module number of the supervisor engine containing the Flash device.
---------------------------	---

---

---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Examples</b>	This example shows how to clear the auto-config file:
-----------------	---

```
Console> (enable) clear boot auto-config  
CONFIG_FILE variable =  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">set boot auto-config</a> <a href="#">show boot</a>
-------------------------	---

---

# clear boot device

Use the **clear boot device** command to clear the contents of the CONFIG\_FILE environment variable used to specify the NAM startup configuration files used.

**clear boot device** *mod*

<b>Syntax Description</b>	<i>mod</i>	Number of the module containing the Flash device.
---------------------------	------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	This command is supported by the NAM module only.
-------------------------	---

<b>Examples</b>	This example shows how to clear the NAM boot string from NVRAM for module 2:
-----------------	--

```
Console> (enable) clear boot device 2
Device BOOT variable =
Console> (enable)
```

<b>Related Commands</b>	<a href="#">set boot device</a> <a href="#">show boot device</a>
-------------------------	---

# clear boot system

Use the **clear boot system** command to clear the contents of the BOOT environment variable and the configuration register setting.

```
clear boot system all [mod]
```

```
clear boot system flash device:[filename] [mod]
```

<b>Syntax Description</b>	<b>all</b>	Clears the whole BOOT environment variable.
	<i>mod</i>	(Optional) Module number of the supervisor engine containing the Flash device.
	<b>flash</b>	(Optional) Clears the Flash device.
	<i>device</i> :	Name of the Flash device.
	<i>filename</i>	(Optional) Filename of the Flash device.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear the whole BOOT environment variable:

```
Console> (enable) clear boot system all
BOOT variable =
Console> (enable)
```

This example shows how to clear a specific device; note how the specified device is not listed:

```
Console> (enable) clear boot system flash bootflash:cat6000-sup.5-5-1.bin
BOOT variable = bootflash:cat6000-sup.6-1-1.bin,1;bootflash:cat6000-sup.5-5-2.
bin,1;
Console> (enable)
```

**Related Commands** [set boot system flash](#)  
[show boot](#)

# clear cam

Use the **clear cam** command to delete a specific entry or all entries from the CAM table.

```
clear cam mac_addr [vlan]
```

```
clear cam {dynamic | static | permanent} [vlan]
```

<b>Syntax Description</b>	<i>mac_addr</i>	One or more MAC addresses.
	<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.
	<b>dynamic</b>	Clears the dynamic CAM entries from the CAM table.
	<b>static</b>	Clears the static CAM entries from the CAM table.
	<b>permanent</b>	Clears the permanent CAM entries from the CAM table.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to remove MAC address 00-40-0b-a0-03-fa from the CAM table:

```
Console> (enable) clear cam 00-40-0b-a0-03-fa
CAM table entry cleared.
Console> (enable)
```

This example shows how to clear dynamic entries from the CAM table:

```
Console> (enable) clear cam dynamic
Dynamic CAM entries cleared.
Console> (enable)
```

**Related Commands** [set cam](#)  
[show cam](#)

# clear channel statistics

Use the **clear channel statistics** command to clear PAgP statistical information.

**clear channel statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear PAgP statistical information:

```
Console> (enable) clear channel statistics  
PAgP statistics cleared.  
Console> (enable)
```

---

**Related Commands** [show channel](#)

# clear config

Use the **clear config** command to clear the system or module configuration information stored in NVRAM.

**clear config** {*mod* | **rmon** | **all** | **snmp** | **acl nvram**}

<b>Syntax Description</b>	<i>mod</i>	Number of the module.
	<b>rmon</b>	Clears all RMON configurations, including the historyControlTable, the alarmTable, the eventTable, and the ringStation ControlTable.
	<b>all</b>	Clears all module and system configuration information, including the IP address.
	<b>snmp</b>	Clears all SNMP configurations.
	<b>acl nvram</b>	Clears all ACL configurations.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you use a Multilayer Switch Module (MSM), you can enter the **clear config** command to clear the portion of the MSM configuration retained by the Catalyst 6500 series switch supervisor engine. You must clear the portion of the configuration kept by the MSM at the router level (router> prompt).  
Before using the **clear config all** command, save a backup of the configuration using the **copy** command.

**Examples** This example shows how to delete the configuration information in NVRAM on module 2:

```
Console> (enable) clear config 2
This command will clear module 2 configuration.
Do you want to continue (y/n) [n]? y
.....
Module 2 configuration cleared.
Console> (enable)
```

This example shows how to delete the configuration information stored in NVRAM on module 1 (the supervisor engine):

```
Console> (enable) clear config 1
This command will clear module 1 configuration.
Do you want to continue (y/n) [n]? y
.....
Module 1 configuration cleared.
host%
```

This example shows how to delete all the configuration information for the Catalyst 6500 series switches:

```
Console> (enable) clear config all  
This command will clear all configuration in NVRAM.  
Do you want to continue (y/n) [n]? y  
.....  
Connection closed by foreign host  
host%
```

This example shows how to delete all the SNMP configuration information for the Catalyst 6500 series switches:

```
Console> (enable) clear config snmp  
This command will clear SNMP configuration in NVRAM.  
Do you want to continue (y/n) [n]? y  
.....  
Connection closed by foreign host  
host%
```

This example shows how to delete all ACL configuration information from NVRAM:

```
Console> (enable) clear config acl nvram  
ACL configuration has been deleted from NVRAM.  
Warning:Use the copy commands to save the ACL configuration to a file  
and the 'set boot config-register auto-config' commands to configure the  
auto-config feature.  
Console> (enable)
```

---

**Related Commands**

[set config acl nvram](#)  
[show config qos acl](#)

# clear config pvlan

Use the **clear config pvlan** command to clear all private VLAN configurations in the system including port mappings.

## **clear config pvlan**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear all private VLAN configurations in the system:

```
Console> (enable) clear config pvlan
This command will clear all private VLAN configurations.
Do you want to continue (y/n) [n]? y
VLAN 15 deleted
VLAN 16 deleted
VLAN 17 deleted
VLAN 18 deleted
Private VLAN configuration cleared.
Console> (enable)
```

---

**Related Commands**

- [clear pvlan mapping](#)
- [clear vlan](#)
- [configure](#)
- [set pvlan](#)
- [set pvlan mapping](#)
- [set vlan](#)
- [show config](#)
- [show pvlan](#)
- [show pvlan mapping](#)
- [show vlan](#)

# clear cops

Use the **clear cops** command to clear Common Open Policy Service (COPS) configurations.

**clear cops roles** *role1* [*role2*]...

**clear cops all-roles**

**clear cops server all** [**diff-serv** | **rsvp**]

**clear cops server** *ipaddr* [**diff-serv** | **rsvp**]

**clear cops domain-name**

<b>Syntax Description</b>	<b>roles</b> <i>role#</i>	Specifies the roles to clear.
	<b>all-roles</b>	Clears all roles.
	<b>server</b>	Specifies the COPS server.
	<b>all</b>	Clears all server tables.
	<b>diff-serv</b>	(Optional) Specifies the differentiated services server table.
	<b>rsvp</b>	(Optional) Specifies the RSVP+ server table.
	<i>ipaddr</i>	IP address or IP alias of the server.
	<b>domain-name</b>	Specifies the domain name of the server.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can use the **clear cops all-roles** command to clear all roles from all ports.

**Examples** This example shows how to clear specific roles:

```
Console> (enable) clear cops roles backbone_port main_port
Roles cleared.
Console> (enable)
```

This example shows how to clear all roles:

```
Console> (enable) clear cops all-roles
All roles cleared.
Console> (enable)
```

This example shows how to clear all COPS servers:

```
Console> (enable) clear cops server all  
All COPS servers cleared.  
Console> (enable)
```

This example shows how to clear a specific COPS server:

```
Console> (enable) clear cops server my_server1  
All COPS servers cleared.  
Console> (enable)
```

This example shows how to clear the COPS domain name:

```
Console> (enable) clear cops domain-name  
Domain name cleared.  
Console> (enable)
```

---

**Related Commands**

[set cops](#)  
[show cops](#)

# clear counters

Use the **clear counters** command to clear MAC counters, EtherChannel MAC counters, port counters, and the channel traffic percentile.

**clear counters** [**all** | *mod/ports*]

Syntax Description	<b>all</b>	(Optional) Specifies all ports.
	<i>mod/ports</i>	(Optional) Number of the module and the ports on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not specify a range of ports to be cleared, then all ports on the switch are cleared.

**Examples** This example shows how to reset MAC and port counters to zero:

```
Console> (enable) clear counters
This command will reset all MAC and port counters reported in CLI and SNMP.
Do you want to continue (y/n) [n]? y
```

```
MAC and Port counters cleared.
Console> (enable)
```

This example shows how to reset MAC and port counters to zero for a specific module and port:

```
Console> (enable) clear counters 5/1
This command will reset MAC and port counters reported by the CLI for port(s) 5/1.
Do you want to continue (y/n) [n]? y
```

```
MAC and Port counters cleared.
Console> (enable)
```

**Related Commands** [restore counters](#)  
[show port counters](#)

# clear crypto key rsa

Use the **clear crypto key rsa** command to remove all RSA public-key pairs.

**clear crypto key rsa**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** The **crypto** commands are supported on systems that run these image types only:

- supk9 image—for example, cat6000-supk9.6-1-3.bin
- supcvk9 image—for example, cat6000-supcvk9.6-1-3.bin

---

**Examples** This example shows how to clear RSA key pairs:

```
Console> (enable) clear crypto key rsa
Do you really want to clear RSA keys (y/n) [n]? y
RSA keys has been cleared.
Console> (enable)
```

---

**Related Commands** [set crypto key rsa](#)  
[show crypto key](#)

# clear dot1x config

Use the **clear dot1x config** command to disable dot1x on all ports and return values to the default settings.

## **clear dot1x config**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to disable dot1x and return values to the default settings:

```
Console> (enable) clear dot1x config
This command will disable Dot1x and take values back to factory default.

Do you want to continue (y/n) [n]? y
Dot1x config cleared.
Console> (enable)
```

---

**Related Commands** [set port dot1x](#)  
[show dot1x](#)  
[show port dot1x](#)

# clear gmrp statistics

Use the **clear gmrp statistics** command to clear all the GMRP statistics information from a specified VLAN or all VLANs.

**clear gmrp statistics** {*vlan* | **all**}

Syntax Description		
	<i>vlan</i>	Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.
	<b>all</b>	Specifies all VLANs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear GMRP statistical information from all VLANs:

```
Console> (enable) clear gmrp statistics all
GMRP statistics cleared.
Console> (enable)
```

This example shows how to clear GMRP statistical information from VLAN 1:

```
Console> (enable) clear gmrp statistics 1
GMRP statistics cleared from VLAN 1.
Console> (enable)
```

**Related Commands** [show gmrp statistics](#)

# clear gvrp statistics

Use the **clear gvrp statistics** command to clear all the GVRP statistics information.

**clear gvrp statistics** { *mod/port* | **all** }

Syntax Description	<i>mod/port</i>	Number of the module and port.
	<b>all</b>	Specifies all ports.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear all GVRP statistical information:

```
Console> (enable) clear gvrp statistics all
GVRP statistics cleared for all ports.
Console> (enable)
```

This example shows how to clear GVRP statistical information for module 2, port 1:

```
Console> (enable) clear gvrp statistics 2/1
GVRP statistics cleared on port 2/1.
Console> (enable)
```

**Related Commands** [set gvrp](#)  
[show gvrp configuration](#)

# clear igmp statistics

Use the **clear igmp statistics** command to clear IGMP snooping statistical information.

**clear igmp statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear IGMP statistical information:

```
Console> (enable) clear igmp statistics
IGMP statistics cleared.
Console> (enable)
```

---

**Related Commands** [set igmp](#)  
[show igmp statistics](#)

# clear ip alias

Use the **clear ip alias** command to clear IP aliases that were set using the **set ip alias** command.

**clear ip alias** {*name* | **all**}

Syntax Description	<i>name</i>	IP address alias to delete.
	<b>all</b>	Specifies that all previously set IP address aliases be deleted.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to delete a previously defined IP alias named babar:

```
Console> (enable) clear ip alias babar
IP alias deleted.
Console> (enable)
```

**Related Commands** [set ip alias](#)  
[show ip alias](#)

# clear ip dns domain

Use the **clear ip dns domain** command to clear the default DNS domain name.

**clear ip dns domain**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear the default DNS domain name:

```
Console> (enable) clear ip dns domain
Default DNS domain name cleared.
Console> (enable)
```

---

**Related Commands** [set ip dns domain](#)  
[show ip dns](#)

# clear ip dns server

Use the **clear ip dns server** command to remove a DNS server from the DNS server listing.

**clear ip dns server** {*ip\_addr* | **all**}

<b>Syntax Description</b>	<i>ip_addr</i>	IP address of the DNS server you want to remove. An IP alias or a host name that can be resolved through DNS can also be used.
	<b>all</b>	Specifies all the IP addresses in the DNS server listing to be removed.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to remove the DNS server at IP address 198.92.30.32 from the DNS server listing:

```
Console> (enable) clear ip dns server 198.92.30.32
198.92.30.32 cleared from DNS table.
Console> (enable)
```

This example shows how to remove all DNS servers from the DNS server listing:

```
Console> (enable) clear ip dns server all
All DNS servers cleared
Console> (enable)
```

**Related Commands** [set ip dns server](#)  
[show ip dns](#)

# clear ip permit

Use the **clear ip permit** command to remove a specified IP address and mask or all IP addresses and masks from the permit list.

**clear ip permit all**

**clear ip permit** {*ip\_addr*} [*mask*] [**telnet** | **ssh** | **snmp** | **all**]

Syntax Description		
<i>ip_addr</i>	IP address to be cleared. An IP alias or a host name that can be resolved through DNS can also be used.	
<i>mask</i>	(Optional) Subnet mask of the specified IP address.	
<b>telnet</b>	(Optional) Clears the entries in the Telnet permit list.	
<b>ssh</b>	(Optional) Clears the entries in the SSH permit list.	
<b>snmp</b>	(Optional) Clears the entries in the SNMP permit list.	
<b>all</b>	(Optional) Clears all permit lists.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **clear ip permit all** command clears the permit list but does not change the state of the IP permit feature. A warning is displayed if all IP addresses are cleared from the permit list, and the feature is enabled. If a mask other than the default (255.255.255.255) has been configured, you must provide both the address and mask to clear a specific entry.

If the **telnet**, **ssh**, **snmp**, or **all** keyword is not specified, the IP address is removed from both the SNMP and Telnet permit lists.

**Examples** These examples show how to remove IP addresses:

```
Console> (enable) clear ip permit 172.100.101.102
172.100.101.102 cleared from IP permit list.
Console> (enable)
```

```
Console> (enable) clear ip permit 172.160.161.0 255.255.192.0 snmp
172.160.128.0 with mask 255.255.192.0 cleared from snmp permit list.
Console> (enable)
```

```
Console> (enable) clear ip permit 172.100.101.102 telnet
172.100.101.102 cleared from telnet permit list.
Console> (enable)
```

```
Console> (enable) clear ip permit all
IP permit list cleared.
WARNING
IP permit list is still enabled.
Console> (enable)
```

---

**Related Commands**

[set ip permit](#)  
[show ip permit](#)

# clear ip route

Use the **clear ip route** command to delete IP routing table entries.

**clear ip route** *destination gateway*

Syntax Description	
<i>destination</i>	IP address of the host or network. An IP alias or a host name that can be resolved through DNS can also be used.
<i>gateway</i>	IP address or alias of the gateway router.

**Defaults** The default is *destination*. If the destination is not the active default gateway, the actual destination is the default.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to delete the routing table entries using the **clear ip route** command:

```
Console> (enable) clear ip route 134.12.3.0 elvis
Route deleted.
Console> (enable)
```

**Related Commands** [set ip route](#)  
[show ip route](#)

# clear kerberos clients mandatory

Use the **clear kerberos clients mandatory** command to disable mandatory Kerberos authentication for services on the network.

## clear kerberos clients mandatory

**Syntax Description** This command has no arguments or keywords.

**Defaults** Kerberos clients are not set to mandatory.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not make Kerberos authentication mandatory and Kerberos authentication fails, the application attempts to authenticate users using the default method of authentication for that network service. For example, Telnet prompts for a password.

**Examples** This example shows how to clear mandatory Kerberos authentication:

```
Console> (enable) clear kerberos clients mandatory
Kerberos clients mandatory cleared
Console> (enable)
```

**Related Commands** [set kerberos clients mandatory](#)  
[show kerberos](#)

# clear kerberos credentials forward

Use the **clear kerberos credentials forward** command to disable credentials forwarding.

## **clear kerberos credentials forward**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default is forwarding is disabled.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** If you have a ticket granting ticket (TGT) and are authenticated to a Kerberized switch, you can use the TGT to authenticate to a host on the network. If forwarding is not enabled and you try to list credentials after authenticating to a host, the output will show no Kerberos credentials are present.

---

**Examples** This example shows how to disable Kerberos credentials forwarding:

```
Console> (enable) clear kerberos credentials forward
Kerberos credentials forwarding disabled
Console> (enable)
```

---

**Related Commands** [set kerberos clients mandatory](#)  
[set kerberos credentials forward](#)  
[show kerberos](#)

# clear kerberos creds

Use the **clear kerberos creds** command to delete all the Kerberos credentials.

## **clear kerberos creds**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** If you have a TGT and are authenticated to a Kerberized switch, you can use the TGT to authenticate to a host on the network.

---

**Examples** This example shows how to delete all Kerberos credentials:

```
Console> (enable) clear kerberos creds  
Console> (enable)
```

---

**Related Commands** [set kerberos credentials forward](#)  
[show kerberos](#)

# clear kerberos realm

Use the **clear kerberos realm** command to clear an entry that maps the name of a Kerberos realm to a DNS domain name or a host name.

```
clear kerberos realm {dns_domain | host} kerberos_realm
```

Syntax Description		
	<i>dns_domain</i>	DNS domain name to map to a Kerberos realm.
	<i>host</i>	IP address or name to map to a Kerberos realm.
	<i>kerberos_realm</i>	IP address or name of a Kerberos realm.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can map the name of a Kerberos realm to a DNS domain name or a host name with the [set kerberos realm](#) command.

**Examples** This example shows how to clear an entry mapping a Kerberos realm to a domain name:

```
Console> (enable) clear kerberos realm CISCO CISCO.COM
Kerberos DnsDomain-Realm entry CISCO - CISCO.COM deleted
Console> (enable)
```

**Related Commands**

- [set kerberos local-realm](#)
- [set kerberos realm](#)
- [show kerberos](#)

# clear kerberos server

Use the **clear kerberos server** command to clear a specified Key Distribution Center (KDC) entry.

```
clear kerberos server kerberos_realm {hostname | ip_address} [port_number]
```

Syntax Description	
<i>kerberos_realm</i>	Name of a Kerberos realm.
<i>hostname</i>	Name of the host running the KDC.
<i>ip_address</i>	IP address of the host running the KDC.
<i>port_number</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can specify to the switch which KDC to use in a Kerberos realm. This command clears a server entry from the table.

**Examples** This example shows how to clear a KDC server entered on the switch:

```
Console> (enable) clear kerberos server CISCO.COM 187.0.2.1 750
Kerberos Realm-Server-Port entry CISCO.COM-187.0.2.1-750 deleted
Console> (enable)
```

**Related Commands** [set kerberos server](#)  
[show kerberos](#)

# clear key config-key

Use the **clear key config-key** command to remove a private 3DES key.

**clear key config-key** *string*

<b>Syntax Description</b>	<i>string</i> Name of the 3DES key; the name should be no longer than 8 bytes.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Examples</b>	<p>This example shows how to remove a private 3DES key:</p> <pre>Console&gt; (enable) <b>clear key config-key abcd</b> Kerberos config key deleted Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">set key config-key</a>

# clear l2protocol-tunnel cos

Use the **clear l2protocol-tunnel cos** command to clear the Layer 2 protocol tunneling CoS value for all ingress tunneling ports.

**clear l2protocol-tunnel cos**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The CoS value is restored to **5**.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear the Layer 2 protocol tunneling CoS value:

```
Console> (enable) clear l2protocol-tunnel cos
Default Cos set to 5.
Console> (enable)
```

---

**Related Commands**

- [clear l2protocol-tunnel statistics](#)
- [set l2protocol-tunnel cos](#)
- [set port l2protocol-tunnel](#)
- [show l2protocol-tunnel statistics](#)
- [show port l2protocol-tunnel](#)

# clear l2protocol-tunnel statistics

Use the **clear l2protocol-tunnel statistics** command to clear Layer 2 protocol tunneling statistics on a port or on all tunneling ports.

**clear l2protocol-tunnel statistics** [*mod/port*]

<b>Syntax Description</b>	<i>mod/port</i> (Optional) Number of the module and port on the module. See the “Usage Guidelines” section for more information.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	If you do not specify a module and port number, the Layer 2 protocol tunneling statistics for all tunneling ports are cleared.
<b>Examples</b>	<p>This example shows how to clear the Layer 2 protocol tunneling statistics for a single port:</p> <pre>Console&gt; (enable) <b>clear l2protocol-tunnel statistics</b> 7/1 Layer 2 Protocol Tunneling statistics cleared on port 7/1. Console&gt; (enable)</pre>
<b>Related Commands</b>	<p><b>clear l2protocol-tunnel cos</b>  <b>set l2protocol-tunnel cos</b>  <b>set port l2protocol-tunnel</b>  <b>show l2protocol-tunnel statistics</b>  <b>show port l2protocol-tunnel</b></p>

# clear lacp-channel statistics

Use the **clear lacp-channel statistics** command to clear Link Aggregation Control Protocol (LACP) statistical information.

## clear lacp-channel statistics

<b>Syntax Description</b>	This command has no keywords or arguments.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	For differences between PAgP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the <i>Catalyst 6500 Series Software Configuration Guide</i> .
<b>Examples</b>	<p>This example shows how to clear LACP statistical information:</p> <pre>Console&gt; (enable) clear lacp-channel statistics LACP channel counters are cleared. Console&gt; (enable)</pre>
<b>Related Commands</b>	<ul style="list-style-type: none"><li><a href="#">set channelprotocol</a></li><li><a href="#">set lacp-channel system-priority</a></li><li><a href="#">set port lacp-channel</a></li><li><a href="#">set spantree channelcost</a></li><li><a href="#">set spantree channelvlancost</a></li><li><a href="#">show lacp-channel</a></li><li><a href="#">show port lacp-channel</a></li></ul>

# clear lda

Use the **clear lda** command to remove the accelerated server load balancing (ASLB) MLS entries or MAC addresses from the switch.

## clear lda mls

**clear lda mls** [**destination** *ip\_addr\_spec*] [**source** *ip\_addr\_spec*] [**protocol** *protocol*]  
**src-port** *src\_port* **dst-port** *dst\_port*]

**clear lda vip** {**all** | *vip* | *vip tcp\_port*}

**clear lda mac** {**all** | *router\_mac\_address*}

## Syntax Description

<b>mls</b>	Removes an LDA MLS entry.
<b>destination</b> <i>ip_addr_spec</i>	(Optional) Full destination IP address or a subnet address in these formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
<b>source</b> <i>ip_addr_spec</i>	(Optional) Full source IP address or a subnet address in these formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
<b>protocol</b> <i>protocol</i>	(Optional) Specifies additional flow information (protocol family and protocol port pair) to be matched; valid values include <b>tcp</b> , <b>udp</b> , <b>icmp</b> , or a decimal number for other protocol families.
<b>src-port</b> <i>src_port</i>	(Optional) Specifies the number of the TCP/UDP source port (decimal). Used with <b>dst-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>dst-port</b> <i>dst_port</i>	(Optional) Specifies the number of the TCP/UDP destination port (decimal). Used with <b>src-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>vip all</b>	Removes all VIP couples (set using the <a href="#">set lda</a> command).
<b>vip vip</b>	Specifies a VIP.
<b>vip vip</b> <i>tcp_port</i>	Specifies a VIP and port couple.
<b>mac all</b>	Clears all ASLB router MAC addresses.
<b>mac</b> <i>router_mac_address</i>	Clears a specific router MAC address.

## Defaults

This command has no default settings.

## Command Types

Switch command.

## Command Modes

Privileged.

---

**Usage Guidelines**

This command is supported only on switches configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC (Policy Feature Card).

Entering the **destination** keyword specifies the entries matching the destination IP address specification, entering the **source** keyword specifies the entries matching the source IP address specification, and entering an *ip\_addr\_spec* can specify a full IP address or a subnet address. If you do not specify a keyword, it is treated as a wildcard, and all entries are displayed.

When entering the *ip\_addr\_spec*, use the full IP address or a subnet address in one of the following formats: *ip\_addr*, *ip\_addr/netmask*, or *ip\_addr/maskbit*.

If you do not enter any keywords, the LD is removed from the switch and the LD configuration is removed from NVRAM.

If you do not enter any keywords with the **clear lda mls** command, all ASLB MLS entries are cleared.

---

**Examples**

This example shows how to clear the ASLB MLS entry at a specific destination address:

```
Console> (enable) clear lda mls destination 172.20.26.22
MLS IP entry cleared.
Console> (enable)
```

This example shows how to delete a VIP and port pair (VIP 10.0.0.8, port 8):

```
Console> (enable) clear lda vip 10.0.0.8 8
Successfully deleted vip/port pairs.
Console> (enable)
```

This example shows how to clear all ASLB router MAC addresses:

```
Console> (enable) clear lda mac all
Successfully cleared Router MAC address.
Console> (enable)
```

This example shows how to clear a specific ASLB router MAC address:

```
Console> (enable) clear lda mac 1-2-3-4-5-6
Successfully cleared Router MAC address.
Console> (enable)
```

---

**Related Commands**

[commit lda](#)  
[set lda](#)  
[show lda](#)

# clear log

Use the **clear log** command to delete module, system error log, or dump log entries.

**clear log** [*mod*]

**clear log dump**

<b>Syntax Description</b>	<i>mod</i>	(Optional) Module number.
	<b>dump</b>	Clears dump log entries.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not specify a module number, the system error log for the entire system is erased.

**Examples** This example shows how to clear the system error log:

```
Console> (enable) clear log
System error log cleared.
Console> (enable)
```

This example shows how to clear the dump log:

```
Console> (enable) clear log dump
Console> (enable)
```

**Related Commands** [show log](#)

# clear log command

Use the **clear log command** command to clear the command log entry table.

**clear log command** [*mod*]

<b>Syntax Description</b>	<i>mod</i> (Optional) Number of the module.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	The command log entry table is a history log of the commands sent to the switch from the console or Telnet.
<b>Examples</b>	<p>This example shows how to clear the command log table for the switch:</p> <pre>Console&gt; (enable) clear log command Local-log cleared Console&gt; (enable)</pre> <p>This example shows how to clear the command log table for a specific module:</p> <pre>Console&gt; (enable) clear log command 3 Module 3 log cleared. Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">show log command</a>

# clear logging buffer

Use the **clear logging buffer** command to clear the system logging buffer.

**clear logging buffer**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear the system logging buffer:

```
Console> (enable) clear logging buffer
System logging buffer cleared.
Console> (enable)
```

---

**Related Commands** [show logging buffer](#)

# clear logging level

Use the **clear logging level** command to reset the logging level for a facility or for all facilities to their default settings.

**clear logging level** {*facility* | **all**}

## Syntax Description

<i>facility</i>	Name of the facility to reset; facility types are listed in <a href="#">Table 2-1</a> .
<b>all</b>	Resets all facilities.

**Table 2-1 Facility Types**

Facility Name	Definition
<b>all</b>	All facilities
<b>acl</b>	access control list
<b>cdp</b>	Cisco Discovery Protocol
<b>cops</b>	Common Open Policy Service Protocol
<b>dtp</b>	Dynamic Trunking Protocol
<b>dvlan</b>	Dynamic VLAN
<b>earl</b>	Enhanced Address Recognition Logic
<b>fileSYS</b>	file system facility
<b>gvrp</b>	GARP VLAN Registration Protocol
<b>ip</b>	Internet Protocol
<b>kernel</b>	Kernel
<b>ld</b>	ASLB facility
<b>mcast</b>	Multicast
<b>mgmt</b>	Management
<b>mls</b>	Multilayer Switching
<b>pagp</b>	Port Aggregation Protocol
<b>protfilt</b>	Protocol Filter
<b>pruning</b>	VTP pruning
<b>privatevlan</b>	Private VLAN facility
<b>qos</b>	Quality of Service
<b>radius</b>	Remote Access Dial-In User Service
<b>rsvp</b>	ReSerVation Protocol
<b>security</b>	Security
<b>snmp</b>	Simple Network Management Protocol

Table 2-1 Facility Types (continued)

Facility Name	Definition
<b>spantree</b>	Spanning Tree Protocol
<b>sys</b>	System
<b>tac</b>	Terminal Access Controller
<b>tcp</b>	Transmission Control Protocol
<b>telnet</b>	Terminal Emulation Protocol
<b>tftp</b>	Trivial File Transfer Protocol
<b>udld</b>	User Datagram Protocol
<b>vmps</b>	VLAN Membership Policy Server
<b>vtp</b>	Virtual Terminal Protocol

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to reset a specific facility back to its default settings:

```
Console> (enable) clear logging level dtp
Current session and default severities of facility <ntp> set to factory default values.
Console> (enable)
```

This example shows how to reset all facilities back to their default settings:

```
Console> (enable) clear logging level all
Current session and default severities of all facilities set to factory default values.
Console> (enable)
```

**Related Commands** [set logging level](#)  
[show logging](#)

# clear logging server

Use the **clear logging server** command to delete a syslog server from the system log server table.

```
clear logging server ip_addr
```

---

<b>Syntax Description</b>	<i>ip_addr</i> IP address of the syslog server to be deleted.
---------------------------	---

---

---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Examples</b>	This example shows how to delete a syslog server from the configuration: <pre>Console&gt; (enable) <b>clear logging server 171.69.192.207</b> System log server 171.69.192.207 removed from system log server table. Console&gt; (enable)</pre>
-----------------	--

---

---

<b>Related Commands</b>	<a href="#">set logging server</a> <a href="#">show logging</a>
-------------------------	--

---

# clear mls cef

Use the **clear mls cef** command to clear CEF summary statistics.

**clear mls cef**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

---

**Examples** This example shows how to clear CEF summary information:

```
Console> (enable) clear mls cef
CEF statistics cleared.
Console> (enable)
```

---

**Related Commands** [show mls cef summary](#)

# clear mls entry

Use the **clear mls entry** command to clear MLS entries in the Catalyst 6500 series switches.

**clear mls entry** [**ip** | **ipx**] **all**

**clear mls entry ip destination** *ip\_addr\_spec* [**source** *ip\_addr\_spec*] [**protocol** *protocol*]  
[**src-port** *src\_port*] [**dst-port** *dst\_port*]

**clear mls entry ipx destination** *ipx\_addr\_spec*

<b>Syntax Description</b>	<b>ip</b>	(Optional) Specifies IP MLS.
	<b>ipx</b>	(Optional) Specifies IPX MLS.
	<b>all</b>	Clears all MLS entries.
	<b>destination</b>	Specifies the destination IP address.
	<i>ip_addr_spec</i>	Full IP address or a subnet address in these formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
	<b>source</b> <i>ip_addr_spec</i>	(Optional) Specifies the source IP address.
	<b>protocol</b> <i>protocol</i>	(Optional) Specifies additional flow information (protocol family and protocol port pair) to be matched; valid values are 0 to 255 or <b>ip</b> , <b>ipinip</b> , <b>icmp</b> , <b>igmp</b> , <b>tcp</b> , and <b>udp</b> .
	<b>src-port</b> <i>src_port</i>	(Optional) Specifies the source port IP address; valid values are 1 to 65535, <b>dns</b> , <b>ftp</b> , <b>smtp</b> , <b>telnet</b> , <b>x</b> (X-Windows), <b>www</b> .
	<b>dst-port</b> <i>dst_port</i>	(Optional) Specifies the destination port IP address; valid values are 1 to 65535, <b>dns</b> , <b>ftp</b> , <b>smtp</b> , <b>telnet</b> , <b>x</b> (X-Windows), <b>www</b> .
	<i>ipx_addr_spec</i>	Full IPX address or a subnet address in these formats: <i>src_net[/mask]</i> , <i>dest_net.dest_node</i> , or <i>dest_net/mask</i> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2). To clear entries on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2), you must enter the **clear mls entry cef adjacency** command.

When entering the IPX address syntax, use the following format:

- IPX net address—1..FFFFFFE
- IPX node address—x.x.x where x is 0..FFFF
- IPX address—ipx\_net.ipx\_node (for example 3.0034.1245.AB45, A43.0000.0000.0001)

Up to 16 routers can be included explicitly as MLS-RPs.

To use a router as an MLS, you must meet these conditions:

- The router must be included (either explicitly or automatically) in the MLS-SE.
- The MLS feature must be enabled in the Catalyst 6500 series switches.
- The Catalyst 6500 series switches must know the router's MAC-VLAN pairs.

Use the following syntax to specify an IP subnet address:

- *ip\_subnet\_addr*—This is the short subnet address format. The trailing decimal number 00 in an IP address YY.YY.YY.00 specifies the boundary for an IP subnet address. For example, 172.22.36.00 indicates a 24-bit subnet address (subnet mask 172.22.36.00/255.255.255.0), and 173.24.00.00 indicates a 16-bit subnet address (subnet mask 173.24.00.00/255.255.0.0). However, this format can identify only a subnet address of 8, 16, or 24 bits.
- *ip\_addr/subnet\_mask*—This is the long subnet address format. For example, 172.22.252.00/255.255.252.00 indicates a 22-bit subnet address. This format can specify a subnet address of any bit number. To provide more flexibility, the *ip\_addr* is a full host address, such as 172.22.253.1/255.255.252.00.
- *ip\_addr/maskbits*—This is the simplified long subnet address format. The mask bits specify the number of bits of the network masks. For example, 172.22.252.00/22 indicates a 22-bit subnet address. The *ip\_addr* is a full host address, such as 193.22.253.1/22, which has the same subnet address as the *ip\_subnet\_addr*.

If you do not use the **all** argument in the **clear mls entry** command, you must specify at least one of the other three keywords (**source**, **destination**, or **protocol**) and its arguments.

If no value or 0 is entered for *src\_port* and *dest\_port*, all entries are cleared.

When you remove a Multilayer Switch Module (MSM) from the Catalyst 6500 series switch, it is removed immediately from the inclusion list and all the MLS entries for the MSM are removed.

## Examples

This example shows how to clear the MLS entries with destination IP address 172.20.26.22:

```
Console> (enable) clear mls entry destination 172.20.26.22
Multilayer switching entry cleared.
Console> (enable)
```

This example shows how to clear specific IP MLS entries for destination IP address 172.20.26.22:

```
Console> (enable) clear mls entry ip destination 172.20.26.22 source 172.20.22.113 protocol tcp 520 320
Multilayer switching entry cleared
Console> (enable)
```

This example shows how to clear specific IPX MLS entries for a destination IPX address:

```
Console> (enable) clear mls entry ipx destination 1.00e0.fefc.6000 source 3.0034.1245.AB45
IPX Multilayer switching entry cleared
Console> (enable)
```

## Related Commands

[show mls entry](#)

# clear mls entry cef adjacency

Use the **clear mls entry cef adjacency** command to clear CEF adjacency statistics.

**clear mls entry cef adjacency**

**clear mls entry cef ip** *[[ip\_addr/]mask\_len]* **adjacency**

**clear mls entry cef ipx** *[[ipx\_addr/]mask\_len]* **adjacency**

Syntax Description	<b>ip</b>	Specifies IP entries.
	<b>ipx</b>	Specifies IPX entries.
	<i>ip_addr</i>	(Optional) IP address of the entry.
	<i>mask_len</i>	(Optional) Mask length associated with the IP or IPX address of the entry; valid values are from 0 to 32.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2).

To clear MLS entries on systems configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC (Policy Feature Card), enter the **clear mls entry** command.

The *ipx\_addr* value is entered as 32-bit hexadecimal digits.

**Examples** This example shows how to clear all adjacencies associated with CEF entries:

```
Console> (enable) clear mls cef entry adjacency
Adjacency statistics has been cleared.
Console> (enable)
```

**Related Commands** [show mls entry cef](#)

# clear mls exclude protocol

Use the **clear mls exclude protocol** command to remove a protocol port that has been excluded from shortcutting using the **set mls exclude protocol** command.

**clear mls exclude protocol** **tcp** | **udp** | **both** *port*

Syntax Description		
	<b>tcp</b>	Specifies a TCP port.
	<b>udp</b>	Specifies a UDP port.
	<b>both</b>	Specifies that the port be applied to both TCP and UDP traffic.
	<i>port</i>	Number of the port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to set TCP packets in a protocol port to be hardware switched:

```
Console> (enable) clear mls exclude protocol tcp 25
TCP packets with protocol port 25 will be MLS switched.
Console> (enable)
```

**Related Commands** [set mls exclude protocol](#)  
[show mls exclude protocol](#)

# clear mls multicast statistics

Use the **clear mls multicast statistics** command to remove MLS multicast statistics maintained by the MSFC on the switch.

**clear mls multicast statistics** [*mod*]

<b>Syntax Description</b>	<i>mod</i> (Optional) Number of the MSFC; valid values are <b>15</b> and <b>16</b> .
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>If you enter the <b>clear mls multicast statistics</b> command on a Catalyst 6500 series switch without MLS, this warning message is displayed:</p> <pre>MLS Multicast is not supported on feature card.</pre> <p>If you place the MFSC on a supervisor engine installed in slot 1, the MFSC is recognized as module 15. If you install the supervisor engine in slot 2, the MFSC is recognized as module 16.</p> <p>The <i>mod</i> option is not supported on switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2).</p>
<b>Examples</b>	<p>This example shows how to clear MLS statistics on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC (Policy Feature Card):</p> <pre>Console&gt; (enable) clear mls multicast statistics All statistics for the MLS routers in include list are cleared. Console&gt; (enable)</pre> <p>This example shows how to clear MLS statistics on a switch configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):</p> <pre>Console&gt; (enable) clear mls multicast statistics All statistics cleared. Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">show mls statistics</a>

# clear mls nde flow

Use the **clear mls nde flow** command to reset the NDE filters in the Catalyst 6500 series switches.

**clear mls nde flow**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** Clearing both exclusion and inclusion filters results in exporting of all flows.

---

**Examples** This example shows how to clear the NDE exclusion and inclusion filters and export all flows:

```
Console> (enable) clear mls nde flow
Netflow data export filter cleared.
Console> (enable)
```

---

**Related Commands** [set mls nde](#)  
[show mls exclude protocol](#)

# clear mls statistics

Use the **clear mls statistics** command to clear hardware-installed MLS statistics entries.

**clear mls statistics**

**clear mls statistics protocol** *{protocol port}* | **all**

<b>Syntax Description</b>	<b>statistics</b>	Clears total packets switched and total packets exported (for NDE).
	<b>statistics protocol</b>	Clears protocols for statistics collection.
	<i>protocol</i>	Number of the protocol in the protocol statistics list.
	<i>port</i>	Number of the port.
	<b>all</b>	Clears all entries from the statistics protocol list.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** To use a router as an MLS, you must meet these conditions:

- The router must be included (either explicitly or automatically) in the MLS-SE.
- The MLS feature must be enabled in the Catalyst 6500 series switches.
- Catalyst 6500 series switches must know the router's MAC-VLAN pairs.

If you enter any of the **clear mls statistics** commands on a Catalyst 6500 series switch without MLS, this warning message displays:

```
Feature not supported in hardware.
```

When you remove an MSM from the Catalyst 6500 series switch, it is removed immediately from the inclusion list and all the MLS entries for the MSM are removed.

**Examples** This example shows how to clear IP MLS statistics, including total packets switched and total packets exported (for NDE):

```
Console> (enable) clear mls statistics
Netflow data export statistics cleared.
Console> (enable)
```

This example shows how to clear protocol 17, port 19344 from the statistics collection:

```
Console> (enable) clear mls statistics protocol 17 19344
Protocol 17 port 1934 cleared from protocol statistics list.
Console> (enable)
```

■ clear mls statistics

---

**Related Commands**

[set mls statistics protocol](#)  
[show mls statistics](#)

# clear mls statistics entry

Use the **clear mls statistics entry** command to clear statistics for MLS entries.

```
clear mls statistics entry [ip | ipx] all
```

```
clear mls statistics entry ip [destination ip_addr_spec] [source ip_addr_spec]
[protocol protocol] [src-port src_port] [dst-port dst_port]
```

```
clear mls statistics entry ipx destination ipx_addr_spec
```

Syntax Description	
<b>ip</b>	(Optional) Specifies IP MLS.
<b>ipx</b>	(Optional) Specifies IPX MLS.
<b>all</b>	Purges all matching MLS entries.
<b>destination</b>	(Optional) Specifies the destination IP address.
<i>ip_addr_spec</i>	(Optional) Full IP address or a subnet address in these formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
<b>source</b>	(Optional) Specifies the source IP address.
<b>protocol protocol</b>	(Optional) Specifies additional flow information (protocol family and protocol port pair) to be matched; valid values are from 0 to 255 or <b>ip</b> , <b>ipinip</b> , <b>icmp</b> , <b>igmp</b> , <b>tcp</b> , and <b>udp</b> .
<b>src-port src_port</b>	(Optional) Specifies the source port IP address; valid values are from 1 to 65535, <b>dns</b> , <b>ftp</b> , <b>smtp</b> , <b>telnet</b> , <b>x</b> (X-Windows), <b>www</b> .
<b>dst-port dst_port</b>	(Optional) Specifies the destination port IP address; valid values are from 1 to 65535, <b>dns</b> , <b>ftp</b> , <b>smtp</b> , <b>telnet</b> , <b>x</b> (X-Windows), <b>www</b> .
<i>ipx_addr_spec</i>	(Optional) Full IPX address or a subnet address in these formats: <i>src_net[mask]</i> , <i>dest_net.dest_node</i> , or <i>dest_net/mask</i> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you specify the **ip** keyword or do not enter a keyword, the command supports IP MLS. If you specify the **ipx** keyword, the command supports IPX only.

When you remove an Multilayer Switch Module (MSM) from the Catalyst 6500 series switch, it is removed immediately from the inclusion list and all the MLS entries for the MSM are removed.

When entering the IPX address syntax, use the following format:

- IPX net address—1..FFFFFFFE
- IPX node address—x.x.x where x is 0..FFFF

- IPX address—`ipx_net.ipx_node` (for example 3.0034.1245.AB45, A43.0000.0000.0001)

Up to 16 routers can be included explicitly as MLS-RPs.

To use a router as an MLS, you must meet these conditions:

- The router must be included (either explicitly or automatically) in the MLS-SE.
- The MLS feature must be enabled in the Catalyst 6500 series switches.
- Catalyst 6500 series switches must know the router's MAC-VLAN pairs.

Use the following syntax to specify an IP subnet address:

- *ip\_subnet\_addr*—This is the short subnet address format. The trailing decimal number 00 in an IP address YY.YY.YY.00 specifies the boundary for an IP subnet address. For example, 172.22.36.00 indicates a 24-bit subnet address (subnet mask 172.22.36.00/255.255.255.0), and 173.24.00.00 indicates a 16-bit subnet address (subnet mask 173.24.00.00/255.255.0.0). However, this format can identify only a subnet address of 8, 16, or 24 bits.
- *ip\_addr/subnet\_mask*—This is the long subnet address format. For example, 172.22.252.00/255.255.252.00 indicates a 22-bit subnet address. This format can specify a subnet address of any bit number. To provide more flexibility, the *ip\_addr* is a full host address, such as 172.22.253.1/255.255.252.00.
- *ip\_addr/maskbits*—This is the simplified long subnet address format. The mask bits specify the number of bits of the network masks. For example, 172.22.252.00/22 indicates a 22-bit subnet address. The *ip\_addr* is a full host address, such as 193.22.253.1/22, which has the same subnet address as the *ip\_subnet\_addr*.

A 0 value for *src\_port* and *dest\_port* clears all entries. Unspecified options are treated as wildcards, and all entries are cleared.

If you enter any of the **clear mls** commands on a Catalyst 6500 series switch without MLS, this warning message displays:

```
Feature not supported in hardware.
```

## Examples

This example shows how to clear all specific MLS entries:

```
Console> (enable) clear mls statistics entry ip all
Multilayer switching entry cleared
Console> (enable)
```

This example shows how to clear specific IPX MLS entries for a destination IPX address:

```
Console> (enable) clear mls statistics entry ipx destination 1.0002.00e0.fefc.6000
MLS IPX entry cleared.
Console> (enable)
```

## Related Commands

[show mls](#)

# clear module password

Use the **clear module password** command to clear the password set by the **password** *[username]* NAM command.

**clear module password** *mod*

---

## Syntax Description

*mod*                      Number of the NAM.

---



---

## Defaults

This command has no default settings.

---

## Command Types

Switch command.

---

## Command Modes

Privileged.

---

## Usage Guidelines

This command is supported by the NAM only.

The **password** *[username]* command is a NAM command and not a supervisor engine console command.

A message is displayed when the password is successfully cleared. See the “Examples” section for an example of the message.

---

## Examples

This example shows how to clear the password from the NAM:

```
Console> (enable) clear module password 6
Module 6 password cleared.
Console> (enable) 2000 Apr 07 11:03:06 %SYS-5-MOD_PASSWDCLR:Module 6 password cleared from telnet/10.6.1.10/tester
Console> (enable)
```

---

## Related Commands

**password** (refer to the *NAM Installation and Configuration Note*)

# clear multicast router

Use the **clear multicast router** command to clear manually configured multicast router ports from the multicast router port list.

**clear multicast router** {*mod/port* | **all**}

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>all</b>	Specifies all multicast router ports to be cleared.

**Defaults** The default configuration has no multicast router ports configured.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear multicast router port 1 on module 3:

```
Console> (enable) clear multicast router 3/1
Port 3/1 cleared from multicast router port list.
Console> (enable)
```

**Related Commands** [set multicast router](#)  
[show multicast router](#)

# clear ntp server

Use the **clear ntp server** command to remove one or more servers from the NTP server table.

```
clear ntp server {ip_addr | all}
```

<b>Syntax Description</b>	<i>ip_addr</i>	IP address of the server to remove from the server table.
	<b>all</b>	Specifies all server addresses in the server table to be removed.

**Defaults** The default configuration has no NTP servers configured.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to remove a specific NTP server from the server table:

```
Console> (enable) clear ntp server 172.20.22.191  
NTP server 172.20.22.191 removed.  
Console> (enable)
```

This example shows how to remove all NTP servers from the server table:

```
Console> (enable) clear ntp server all  
All NTP servers cleared.  
Console> (enable)
```

**Related Commands** [set ntp server](#)  
[show ntp](#)

# clear ntp timezone

Use the **clear ntp timezone** command to return the time zone to its default, UTC.

**clear ntp timezone**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default time zone is UTC.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** The **clear ntp timezone** command functions only when NTP is running. If you set the time manually and NTP is disengaged, the **clear ntp timezone** command has no effect.

---

**Examples** This example shows how to clear the time zone:

```
Console> (enable) clear ntp timezone
This command will clear NTP timezone and summertime zonename
Do you want to continue (y/n) [n]? y
Timezone name and offset cleared
Console> (enable)
```

---

**Related Commands** [set ntp timezone](#)  
[show ntp](#)

# clear pbf

Use the **clear pbf** command to remove the MAC address for the PFC2.

## **clear pbf**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** Refer to the “Configuring Policy-Based Forwarding” section of Chapter 16, “Configuring Access Control,” in the *Catalyst 6500 Series Software Configuration Guide* for detailed information about PBF.

---

**Examples**

```
Console> (enable) clear pbf
PBF cleared
Console> (enable)
```

---

**Related Commands**

- [set pbf](#)
- [show pbf](#)

# clear port broadcast

Use the **clear port broadcast** command to disable broadcast/multicast suppression on one or more ports.

**clear port broadcast** *mod/port*

<b>Syntax Description</b>	<i>mod/port</i> Number of the module and the port on the module.
<b>Defaults</b>	The default configuration has broadcast/multicast suppression cleared (that is, unlimited broadcast/multicast traffic allowed).
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Examples</b>	<p>This example shows how to disable broadcast/multicast suppression:</p> <pre>Console&gt; (enable) <b>clear port broadcast 2/1</b> Broadcast traffic unlimited on ports 2/1. Console&gt; (enable)</pre>
<b>Related Commands</b>	<p><a href="#">set port broadcast</a>  <a href="#">show port broadcast</a></p>

# clear port cops

Use the **clear port cops** command to clear port roles.

```
clear port cops mod/port roles role1 [role2]...
```

```
clear port cops mod/port all-roles
```

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<b>roles</b> <i>role#</i>	Specifies the roles to clear.
	<b>all-roles</b>	Clears all roles.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **clear port cops** command detaches the roles from the port only; it does not remove them from the global table.

**Examples** This example shows how to remove specific roles from a port:

```
Console> (enable) clear port cops 3/1 roles backbone_port main_port
Roles cleared for port(s) 3/1-4.
Console> (enable)
```

This example shows how to remove all roles from a port:

```
Console> (enable) clear port cops 3/1 all-roles
All roles cleared for port 3/1-4.
Console> (enable)
```

**Related Commands** [set port cops](#)  
[show port cops](#)

# clear port host

Use the **clear port host** command to clear the port configuration for optimizing a host connection.

**clear port host** *mod/port*

<b>Syntax Description</b>	<i>mod/port</i> Number of the module and the port on the module.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	<p>This command is not supported by the NAM.</p> <p>The <b>clear port host</b> command sets channel mode to auto, disables spanning tree PortFast, and sets the trunk mode to auto.</p>
-------------------------	---

<b>Examples</b>	This example shows how to remove specific roles from a port:
-----------------	--

```
Console> (enable) clear port host 5/5
Port(s) 5/5 trunk mode set to auto.
Spantree port 5/5 fast start disabled.
Port(s) 5/5 channel mode set to auto.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">set port host</a>
-------------------------	-------------------------------

# clear port qos cos

Use the **clear port qos cos** command to return the values set by the **set port qos cos** command to the default settings for all specified ports.

```
clear port qos mod/ports.. cos
```

<b>Syntax Description</b>	<i>mod/ports..</i> Number of the module and ports on the module.
<b>Defaults</b>	The default CoS for a port is 0.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Examples</b>	<p>This example shows how to return the values set by the <b>set port qos cos</b> command to the default settings for module 2, port 1:</p> <pre>Console&gt; (enable) <b>clear port qos 2/1 cos</b> Port 2/1 qos cos setting cleared. Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">set port qos cos</a> <a href="#">show port qos</a>

# clear port security

Use the **clear port security** command to clear all MAC addresses or a specific MAC address from the list of secure MAC addresses on a port.

```
clear port security mod/port {mac_addr | all}
```

Syntax Description		
	<i>mod/port</i>	Number of the module and the port on the module.
	<i>mac_addr</i>	MAC address to be deleted.
	<b>all</b>	Removes all MAC addresses.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to remove a specific MAC address from a port's list of secure addresses:

```
Console> (enable) clear port security 4/1 00-11-22-33-44-55
00-11-22-33-44-55 cleared from secure address list list for port 4/1.
Console> (enable)
```

**Related Commands** [set port security](#)  
[show port security](#)

# clear pvlan mapping

Use the **clear pvlan mapping** command to delete a private VLAN mapping.

```
clear pvlan mapping primary_vlan { isolated_vlan | community_vlan | twoway_community_vlan }
mod/port
```

```
clear pvlan mapping mod/port
```

Syntax Description		
	<i>primary_vlan</i>	Number of the primary VLAN.
	<i>isolated_vlan</i>	Number of the isolated VLAN.
	<i>community_vlan</i>	Number of the community VLAN.
	<i>twoway_community_vlan</i>	Number of the two-way community VLAN.
	<i>mod/port</i>	Number of the module and promiscuous port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not specify the mapping to clear, all the mappings of the specified promiscuous ports are cleared.

**Examples** This example shows how to clear the mapping of VLAN 902 to 901, previously set on ports 3/2-5:

```
Console> (enable) clear pvlan mapping 901 902 3/2-5
Successfully cleared mapping between 901 and 902 on 3/2-5
Console> (enable)
```

**Related Commands**

- [clear config pvlan](#)
- [clear vlan](#)
- [set pvlan](#)
- [set pvlan mapping](#)
- [set vlan](#)
- [show pvlan](#)
- [show pvlan mapping](#)
- [show vlan](#)

# clear qos acl

Use the **clear qos acl** command to remove various access control list (ACL) configurations.

```
clear qos acl acl_name [editbuffer_index]
```

```
clear qos acl default-action { ip | ipx | mac | all }
```

```
clear qos acl map { acl_name } { mod/port | vlan }
```

```
clear qos acl map { acl_name | mod/port | vlan | all }
```

Syntax Description		
<i>acl_name</i>	Unique name that identifies the list to which the entry belongs.	
<i>editbuffer_index</i>	(Optional) ACE position in the ACL.	
<b>default-action</b>	Removes default actions.	
<b>ip</b>	Clears IP ACE default actions.	
<b>ipx</b>	Clears IPX ACE default actions.	
<b>mac</b>	Clears MAC-layer ACE default actions.	
<b>all</b>	Clears all ACE default actions.	
<b>map</b>	Detaches an ACL.	
<i>mod/port</i>	Number of the module and the port on the module.	
<i>vlan</i>	Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.	
<b>all</b>	Detaches an ACL from all interfaces.	

**Defaults** The default is no ACLs are attached.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Changes you make by entering this command are saved to NVRAM and hardware only after you enter the **commit** command.

Use the **show qos acl editbuffer** command to display the ACL.

**Examples** This example shows how to detach an ACL from all interfaces:

```
Console> (enable) clear qos acl map my_acl all
Hardware programming in progress...
ACL my_acl is detached from all interfaces.
Console> (enable)
```

This example shows how to detach an ACL from a specific VLAN:

```
Console> (enable) clear qos acl map ftp_acl 4  
Hardware programming in progress...  
ACL ftp_acl is detached from vlan 4.  
Console> (enable)
```

This example shows how to delete a specific ACE:

```
Console> (enable) clear qos acl my_ip_acl 1  
ACL my_ip_acl ACE# 1 is deleted.  
my_ip_acl editbuffer modified. Use 'commit' command to apply changes.  
Console> (enable)
```

This example shows how to delete an ACL:

```
Console> (enable) clear qos acl my_ip_acl  
ACL my_ip_acl is deleted.  
my_ip_acl editbuffer modified. Use 'commit' command to apply changes.  
Console> (enable)
```

This example shows how to detach a specific ACL from all interfaces:

```
Console> (enable) clear qos acl map my_acl all  
Hardware programming in progress...  
ACL my_acl is detached from all interfaces.  
Console> (enable)
```

This example shows how to detach a specific ACL from a specific VLAN:

```
Console> (enable) clear qos acl map ftp_acl 4  
Hardware programming in progress...  
ACL ftp_acl is detached from vlan 4.  
Console> (enable)
```

This example shows how to delete IP ACE default actions configured by the [set qos acl default-action](#) command:

```
Console> (enable) clear qos acl default-action ip  
Hardware programming in progress...  
QoS default-action for IP ACL is restored to default setting.  
Console> (enable)
```

#### Related Commands

[commit](#)  
[rollback](#)  
[show qos acl editbuffer](#)

# clear qos config

Use the **clear qos config** command to return the values set by the **set qos** command to the default settings and delete the CoS assigned to MAC addresses.

**clear qos config**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default is QoS is disabled.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to return the values set by the **set qos** command to the default settings and delete the CoS assigned to MAC addresses:

```
Console> (enable) clear qos config
This command will disable QoS and take values back to factory default.
Do you want to continue (y/n) [n]? y
QoS config cleared.
Console> (enable)
```

---

**Related Commands** [set qos](#)  
[show qos info](#)

# clear qos cos-dscp-map

Use the **clear qos cos-dscp-map** command to clear CoS-to-DSCP mapping set by the **set qos cos-dscp-map** command and return to the default setting.

## clear qos cos-dscp-map

**Syntax Description** This command has no arguments or keywords.

**Defaults** The default CoS-to-DSCP configuration is listed in [Table 2-2](#).

*Table 2-2 CoS-to-DSCP Default Mapping*

CoS	0	1	2	3	4	5	6	7
DSCP	0	8	16	24	32	40	48	56

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear the CoS-to-DSCP mapping table:

```
Console> (enable) clear qos cos-dscp-map
QoS cos-dscp-map setting restored to default.
Console> (enable)
```

**Related Commands** [set qos cos-dscp-map](#)  
[show qos maps](#)

# clear qos dscp-cos-map

Use the **clear qos dscp-cos-map** command to clear DSCP-to-CoS mapping set by the **set qos dscp-cos-map** command and return to the default setting.

**clear qos dscp-cos-map**

**Syntax Description** This command has no arguments or keywords.

**Defaults** The default DSCP-to-CoS configuration is listed in [Table 2-3](#).

**Table 2-3 DSCP-to-CoS Default Mapping**

DSCP	0 to 7	8 to 15	16 to 23	<b>24 to 31</b>	<b>32 to 39</b>	<b>40 to 47</b>	<b>48 to 55</b>	<b>56 to 63</b>
CoS	0	1	2	3	4	5	6	7

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear the DSCP-to-CoS mapping table:

```
Console> (enable) clear qos dscp-cos-map
QoS dscp-cos-map setting restored to default.
Console> (enable)
```

**Related Commands** [set qos dscp-cos-map](#)  
[show qos maps](#)

# clear qos ipprec-dscp-map

Use the **clear qos ipprec-dscp-map** command to reset the mapping set by the **set qos ipprec-dscp-map** command to the default setting.

## **clear qos ipprec-dscp-map**

**Syntax Description** This command has no arguments or keywords.

**Defaults** The default IP precedence-to-DSCP configuration is listed in [Table 2-4](#).

*Table 2-4 IP Precedence-to-DSCP Default Mapping*

IPPREC	0	1	2	3	4	5	6	7
DSCP	0	8	16	24	32	40	48	56

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear the IP precedence-to-DSCP mapping table:

```
Console> (enable) clear qos ipprec-dscp-map
QoS ipprec-dscp-map setting restored to default.
Console> (enable)
```

**Related Commands** [set qos ipprec-dscp-map](#)  
[show qos maps](#)

# clear qos mac-cos

Use the **clear qos mac-cos** command to clear the values set by the **set qos mac-cos** command.

```
clear qos mac-cos dest_mac [vlan]
```

```
clear qos mac-cos all
```

Syntax Description		
	<i>dest_mac</i>	Number of the destination host MAC address.
	<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.
	<b>all</b>	Clears CoS values for all MAC and VLAN pairs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If the *vlan* value is not entered, all entries for the MAC address are cleared.

**Examples** This example shows how to clear the values set by the **set qos mac-cos** command and return to the default settings for all MAC address and VLAN pairs:

```
Console> (enable) clear qos mac-cos all
All CoS to Mac/Vlan entries are cleared.
Console> (enable)
```

This example shows how to clear the values set by the **set qos mac-cos** command and return to the default settings for a specific MAC address:

```
Console> (enable) clear qos mac-cos 1-2-3-4-5-6 1
CoS to Mac/Vlan entry for mac 01-02-03-04-05-06 vlan 1 is cleared.
Console> (enable)
```

**Related Commands** [set qos mac-cos](#)  
[show qos mac-cos](#)

# clear qos map

Use the **clear qos map** command to return the values to the default settings.

```
clear qos map port_type tx | rx
```

<b>Syntax Description</b>	<i>port_type</i>	Port type; valid values are <b>2q2t</b> , <b>1p3q1t</b> , and <b>1p2q2t</b> for transmit and <b>1p1q4t</b> and <b>1p1q0t</b> for receive. See the “Usage Guidelines” section for additional information.
	<b>tx   rx</b>	Specifies the transmit or receive queue.

## Defaults

The default mappings for all ports are shown in [Table 2-5](#) and [Table 2-6](#) and applies to all ports.

**Table 2-5** Default Transmit Queue and Drop-Threshold Mapping of CoS Values

Port Type	Drop Threshold Type	Low Delay (Queue 2)	High Delay (Queue 1)	Priority Delay (Queue 3)
2q2t	Low drop (Threshold 2)	7, 6	3, 2	N/A
	High drop (Threshold 1)	5, 4	1, 0	N/A
1p2q2t	Low drop (Threshold 2)	7	3, 2	N/A
	High drop (Threshold 1)	5, 4	1, 0	5

**Table 2-6** Default Receive Drop-Threshold Mapping of CoS Values

Port Type	Threshold 1 (highest drop)	Threshold 2	Threshold 3	Threshold 4 (lowest drop)	Priority Queue
1p1q0t	0, 1	2, 3	4, 5	7	6
1p1q4t	0, 1	2, 3	4, 5	7	6

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The **1p2q1t** and **1p1q8t** port types are not supported.

## Examples

This example shows how to return the values to the default settings:

```
Console> (enable) clear qos map 2q2t
This command will take map values back to factory default.
QoS map cleared.
Console> (enable)
```

■ clear qos map

---

**Related Commands**

[set qos map](#)  
[show qos maps](#)

# clear qos policed-dscp-map

Use the **clear qos policed-dscp-map** to reset the policer-to-dscp mapping table to the defaults.

**clear qos policed-dscp-map**

<b>Syntax Description</b>	This command has no arguments or keywords.
<b>Defaults</b>	The default is the identity function; for example, DSCP 63 to policed DSCP 63 and DSCP 62 to policed DSCP 62.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Examples</b>	<p>This example shows how to reset the mapping to the defaults:</p> <pre>Console&gt; (enable) <b>clear qos policed-dscp-map</b> QoS policed-dscp-map setting restored to default. Console&gt; (enable)</pre>
<b>Related Commands</b>	<p><a href="#">set qos policed-dscp-map</a> <a href="#">show qos maps</a></p>

# clear qos policer

Use the **clear qos policer** command to clear policing rules from NVRAM.

**clear qos policer microflow** *microflow\_name* | **all**

**clear qos policer aggregate** *aggregate\_name* | **all**

Syntax Description		
	<b>microflow</b>	Specifies the name of the microflow policing rule.
	<i>microflow_name</i>	
	<b>aggregate</b>	Specifies the name of the aggregate policing rule.
	<i>aggregate_name</i>	
	<b>all</b>	Clears all policing rules.

**Defaults** This command has no default setting in systems configured with the Supervisor Engine 1 with Layer 3 Switching Engine (PFC); in systems configured with Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2), the default is to apply the given map to the normal rate only.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Policing is the process by which the switch limits the bandwidth consumed by a flow of traffic. Policing can mark or drop traffic.

You cannot clear an entry that is currently being used in an ACE. You must first detach the ACEs from the interface.

You cannot use the **all** keyword if a microflow rate limit is currently being used in an ACE.

The **normal** and **excess** keywords are supported on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only. With these keywords, you can specify a map for the normal rate and one for the excess rate. Because this selection is optional in the CLI, the default (unspecified) action is to apply the given map to the normal rate only.

This example shows how to clear a specific microflow policing rule:

```
Console> (enable) clear qos policer microflow my_micro
my_micro QoS microflow policer cleared.
Console> (enable)
```

This example shows how to clear all microflow policing rules:

```
Console> (enable) clear qos policer microflow all
All QoS microflow policers cleared.
Console> (enable)
```

This example shows how to clear a specific aggregate policing rule:

```
Console> (enable) clear qos policer aggregate my_micro  
my_micro QoS microflow policer cleared.  
Console> (enable)
```

This example shows how to clear all aggregate policing rules:

```
Console> (enable) clear qos policer aggregate all  
All QoS aggregate policer cleared.  
Console> (enable)
```

---

**Related Commands**

[set qos policer](#)  
[show qos policer](#)

# clear qos statistics

Use the **clear qos statistics** command to clear QoS statistic counters.

```
clear qos statistics [aggregate-policer [policer_name]]
```

Syntax Description	<b>aggregate-policer</b>	(Optional) Clears QoS aggregate policer statistics.
	<i>policer_name</i>	(Optional) Name of the aggregate policer.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you enter the **clear qos statistics** command without the entering the **aggregate-policer** keyword, all QoS statistics are cleared, including all QoS aggregate policer statistics.

If you enter the **aggregate-policer** keyword without specifying a policer name, all aggregate policer statistics are cleared.

**Examples** This example shows how to clear the QoS statistic counters:

```
Console> (enable) clear qos statistics
QoS statistical cleared.
Console> (enable)
```

This example shows how to clear all QoS aggregate policer statistics:

```
Console> (enable) clear qos statistics aggregate-policer
QoS aggregate policers statistical counters cleared.
Console> (enable)
```

This example shows how to clear the QoS aggregate policer statistics for *aggr\_1*:

```
Console> (enable) clear qos statistics aggregate-policer aggr_1
Aggregate policer 'aggr_1' statistical counters cleared.
Console> (enable)
```

**Related Commands** [show qos statistics](#)

# clear radius

Use the **clear radius** command to clear one or all of the RADIUS servers from the RADIUS server table or remove a shared key entry.

**clear radius server all**

**clear radius server *ipaddr***

**clear radius key**

Syntax Description	server	Specifies RADIUS servers.
	<b>all</b>	Specifies all RADIUS servers.
	<i>ipaddr</i>	Number of the IP address or IP alias.
	<b>key</b>	Specifies the RADIUS shared key.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The *ipaddr* value is an IP alias or an IP address in dot notation; for example, 101.102.103.104.

**Examples** This example shows how to clear the RADIUS key:

```
Console> (enable) clear radius key
Radius server key cleared.
Console> (enable)
```

This example shows how to clear a specific RADIUS server from the RADIUS server table:

```
Console> (enable) clear radius server 128.56.45.32
128.56.45.32 cleared from radius server table.
Console> (enable)
```

**Related Commands**

- [set radius key](#)
- [set radius server](#)
- [show radius](#)

# clear rcp

Use the **clear rcp** command to clear rcp information for file transfers.

**clear rcp**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear rcp information:

```
Console> (enable) clear rcp  
Console> (enable)
```

---

**Related Commands** [set rcp username](#)  
[show rcp](#)

# clear rgmp statistics

Use the **clear rgmp statistics** command to clear RGMP statistics information for all VLANs.

## **clear rgmp statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear the RGMP statistics on the switch:

```
Console> (enable) clear rgmp statistics
RGMP statistics cleared.
Console> (enable)
```

---

**Related Commands** [set rgmp](#)  
[show rgmp statistics](#)

# clear security acl

Use the **clear security acl** command to remove a specific access control entry (ACE) or all ACEs from a VLAN access control list (VACL) and delete the VACLs from the edit buffer.

**clear security acl all**

**clear security acl** *acl\_name*

**clear security acl capture-ports** {**all** | *mod/ports*}

**clear security acl log flow**

**clear security acl** *acl\_name* 0[*editbuffer\_index*]

**clear security acl adjacency** *adjacency\_name*

**clear security acl map** {*acl\_name* | *vlan* | **all**}

Syntax Description		
<b>all</b>		Removes ACEs for all the VACLs.
<i>acl_name</i>		Name of the VACL whose ACEs are to be removed.
<b>capture-ports</b>		Removes ports from the capture list.
<b>all</b>		Removes all ports from the capture list.
<i>mod/ports</i>		Variable to remove specific port from the capture list; <i>mod/num</i> is the number of the module and the port on the module.
<b>log flow</b>		Removes logging table flow entries.
<i>editbuffer_index</i>		(Optional) Index number of the ACE in the VACL.
<b>adjacency</b>		Removes an adjacency ACE.
<i>adjacency_name</i>		Name of the adjacency ACE.
<b>map</b>		Clears security ACL to a VLAN mapping.
<i>vlan</i>		Variable to clear ACL mappings for a specific VLAN.
<b>all</b>		Clears all ACL VLAN mappings.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Changes you make by entering this command are saved to NVRAM and hardware only after you enter the **commit** command.

Use the **show security acl** command to display the VACL list.

The adjacency ACE cannot be cleared before the redirect ACE. The redirect ACE and the adjacency ACE in PBF VACLs should be cleared in the following order:

1. Clear the redirect ACE.
2. Commit the VACL.
3. Clear the adjacency ACE.
4. Commit the adjacency.

---

### Examples

This example shows how to remove ACEs for all the VACLs:

```
Console> (enable) clear security acl all  
All editbuffer modified. Use 'commit' command to apply changes.  
Console> (enable)
```

This example shows how to remove a specific ACE from a specific VACL:

```
Console> (enable) clear security acl IPACL1 2  
IPACL1 editbuffer modified. Use 'commit' command to apply changes.  
Console> (enable)
```

This example shows how to remove an adjacency ACE:

```
Console> (enable) clear security acl adjacency a_1  
a_1 editbuffer modified. Use 'commit' command to apply changes.  
Console> (enable)
```

---

### Related Commands

[commit](#)  
[rollback](#)  
[show security acl](#)

# clear security acl capture-ports

Use the **clear security acl capture-ports** command to remove a port from the capture port list.

```
clear security acl capture-ports {mod/ports...}
```

---

<b>Syntax Description</b>	<i>mod/ports...</i> Number of the module and the ports on the module.
---------------------------	---

---



---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---



---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---



---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---



---

<b>Usage Guidelines</b>	Configurations you make by entering this command are saved in NVRAM. This command <i>does not</i> require that you enter the <b>commit</b> command.  If you have several ports and a few are removed, the remaining ports continue to capture the traffic.
-------------------------	--

---



---

<b>Examples</b>	This example shows how to remove entries from the capture port list:
-----------------	--

```
Console> (enable) clear security acl capture-ports 1/1,2/1
Successfully cleared the following ports:
1/1,2/1
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">set security acl capture-ports</a> <a href="#">show security acl capture-ports</a>
-------------------------	---

---

# clear security acl log flow

Use the **clear security acl log flow** command to clear all flows in the security ACL log table.

## **clear security acl log flow**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** This command is supported on systems configured with Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

---

**Examples** This example shows how to clear all flows in the security ACL log table:

```
Console> (enable) clear security acl log flow
Security acl log table cleared successfully
Console> (enable)
```

---

**Related Commands** [set security acl log](#)  
[show security acl log](#)

# clear security acl map

Use the **clear security acl map** command to remove VACL-to-VLAN mapping.

```
clear security acl map acl_name vlan
```

```
clear security acl map {acl_name | vlan | all}
```

Syntax Description		
	<i>acl_name</i>	Name of the VACL whose VLAN is to be deleted.
	<i>vlan</i>	Number of the VLAN whose mapping is to be deleted; valid values are from 1 to 1000 and from 1025 to 4094.
	<b>all</b>	Removes all VACL-to-VLAN mappings.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Changes you make by entering this command are saved to NVRAM; you do not need to enter the **commit** command.

Use the **show security acl** command to display the ACL list.

**Examples** This example shows how to remove a VACL-to-VLAN mapping from a specific VLAN:

```
Console> (enable) clear security acl map ip1 3
Map deletion in progress.
```

```
Successfully cleared mapping between ACL ip1 and VLAN 3.
```

```
Console> (enable)
```

This example shows how to remove a specific VACL-to-VLAN mapping from all VLANs:

```
Console> (enable) clear security acl map ip1
Map deletion in progress.
```

```
Successfully cleared mapping between ACL ip1 and VLAN 5.
```

```
Successfully cleared mapping between ACL ip1 and VLAN 8.
```

```
Console> (enable)
```

This example shows how to remove all VACL-to-VLAN mappings from a specific VLAN:

```
Console> (enable) clear security acl map 5  
Map deletion in progress.  
  
Successfully cleared mapping between ACL ipx1 and VLAN 5.  
  
Successfully cleared mapping between ACL mac2 and VLAN 5.  
Console> (enable)
```

This example shows how to remove all VACL-to-VLAN mappings from all VLANs:

```
Console> (enable) clear security acl map all  
Map deletion in progress.  
  
Successfully cleared mapping between ACL ip2 and VLAN 12.  
  
Successfully cleared mapping between ACL ipx1 and VLAN 12.  
  
Successfully cleared mapping between ACL ipx1 and VLAN 45.  
  
Successfully cleared mapping between ACL ip2 and VLAN 47.  
  
Successfully cleared mapping between ACL ip3 and VLAN 56.  
Console> (enable)
```

---

**Related Commands**

[commit](#)  
[rollback](#)  
[show security acl](#)

# clear snmp access

Use the **clear snmp access** command to remove the access rights of an SNMP group.

```
clear snmp access [-hex] {groupname} {security-model {v1 | v2c}}
```

```
clear snmp access {security-model v3 {noauthentication | authentication | privacy}}  
[context [-hex] contextname]
```

Syntax Description		
<b>-hex</b>	(Optional) Displays the <i>groupname</i> or <i>contextname</i> in a hexadecimal format.	
<i>groupname</i>	SNMP access table name.	
<b>security-model v1   v2c</b>	Specifies the security model v1 or v2c.	
<b>security-model v3</b>	Specifies security model v3.	
<b>noauthentication</b>	Specifies groups with security model type set to noauthentication.	
<b>authentication</b>	Specifies groups with security model type authentication protocol.	
<b>privacy</b>	Specifies groups with security model type privacy.	
<b>context</b> <i>contextname</i>	(Optional) Specifies the name of a context string.	

**Defaults** The default *contextname* is a NULL string.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for *groupname* (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

If you do not enter a context name, a NULL context string is used.

**Examples** This example shows how to clear SNMP access for a group:

```
Console> (enable) clear snmp access cisco-group security-model v3 authentication  
Cleared snmp access cisco-group version v3 level authentication.  
Console> (enable)
```

**Related Commands**

- [set snmp access](#)
- [show snmp access](#)
- [show snmp context](#)

# clear snmp community

Use the **clear snmp community** command to remove the mappings between different community strings and security modes.

```
clear snmp community index [-hex] {index_name}
```

Syntax Description	index	Specifies clearing an index.
	<b>-hex</b>	(Optional) Displays the <i>index_name</i> value in a hexadecimal format.
	<i>index_name</i>	Name of the SNMP index.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for the *index\_name* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

If you do not enter an *index\_name* value, a NULL context string is used.

**Examples** This example shows how to clear SNMP access for a group:

```
Console> (enable) clear snmp community index ind1
Cleared snmp community ind1.
Console> (enable)
```

**Related Commands** [set snmp community](#)  
[show snmp community](#)

# clear snmp group

Use the **clear snmp group** command to remove the SNMP user from an SNMP group.

```
clear snmp group [-hex] groupname {user [-hex] username} {security-model {v1 | v2c | v3}}
```

<b>Syntax Description</b>	<b>-hex</b>	(Optional) Displays the <i>groupname</i> and <i>username</i> as a hexadecimal format.
	<i>groupname</i>	Name of the SNMP group that defines an access control.
	<b>user</b>	Specifies the SNMP group username.
	<i>username</i>	Name of the SNMP user.
	<b>security model</b> <b>v1</b>   <b>v2c</b>   <b>v3</b>	Specifies security model v1, v2c, or v3.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for the *groupname* value or the *username* value (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

**Examples** This example shows how to remove an SNMP user from a group:

```
Console> (enable) clear snmp group cisco-group user joe security-model v3
Cleared snmp group cisco-group user joe version v3.
Console> (enable)
```

**Related Commands** [set snmp group](#)  
[show snmp group](#)

# clear snmp notify

Use the **clear snmp notify** command to clear the SNMP notifyname in the snmpNotifyTable.

```
clear snmp notify [-hex] {notifyname}
```

<b>Syntax Description</b>	<b>-hex</b> (Optional) Displays the <i>notifyname</i> value as a hexadecimal format.
	<i>notifyname</i> Identifier to index the snmpNotifyTable.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for the *notifyname* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

**Examples** This example shows how to clear an SNMP notifyname from the snmpNotifyTable:

```
Console> (enable) clear snmp notify joe  
Cleared SNMP notify table joe.  
Console> (enable)
```

**Related Commands** [set snmp notify](#)  
[show snmp notify](#)

# clear snmp targetaddr

Use the **clear snmp targetaddr** command to clear the SNMP target address entry in the TargetAddressTable.

```
clear snmp targetaddr [-hex] {addrname}
```

## Syntax Description

<b>-hex</b>	(Optional) Displays the <i>addrname</i> value as a hexadecimal format.
<i>addrname</i>	Name of the target agent; the maximum length is 32 bytes.

## Defaults

This command has no default settings.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

If you use special characters for the *addrname* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

## Examples

This example shows how to clear an SNMP target address entry in the snmpTargetAddressTable:

```
Console> (enable) clear snmp targetaddr joe
Cleared SNMP targetaddr joe.
Console> (enable)
```

## Related Commands

[set snmp targetaddr](#)  
[show snmp targetaddr](#)

# clear snmp targetparams

Use the **clear snmp targetparams** command to clear the SNMP target parameters used in the snmpTargetParamsTable.

```
clear snmp targetparams [-hex] {paramsname}
```

<b>Syntax Description</b>	<b>-hex</b> (Optional) Displays the <i>paramsname</i> value as a hexadecimal format.
	<i>paramsname</i> Name of the target parameter in the snmpTargetParamsTable; the maximum length is 32 bytes.

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	If you use special characters for the <i>paramsname</i> value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.
-------------------------	---

<b>Examples</b>	This example shows how to remove the SNMP target parameters:
-----------------	--

```
Console> (enable) clear snmp targetparams joe
Cleared SNMP targetparams table joe.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">set snmp targetparams</a> <a href="#">show snmp targetparams</a>
-------------------------	---

# clear snmp trap

Use the **clear snmp trap** command to clear an entry from the SNMP trap receiver table.

**clear snmp trap** {*rcvr\_addr*} [**all**]

<b>Syntax Description</b>	<i>rcvr_addr</i>	IP address or IP alias of the trap receiver (the SNMP management station) to clear.
<b>all</b>		(Optional) Specifies every entry in the SNMP trap receiver table.

**Defaults** The default configuration has no entries in the SNMP trap receiver table.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear an entry from the SNMP trap receiver table:

```
Console> (enable) clear snmp trap 192.122.173.82
SNMP trap receiver deleted.
Console> (enable)
```

**Related Commands**

- [set snmp trap](#)
- [show port counters](#)
- [test snmp trap](#)

# clear snmp user

Use the **clear snmp user** command to remove an SNMP user.

```
clear snmp user [-hex] {username} [remote engineid]
```

Syntax Description	<b>-hex</b>	(Optional) Displays the <i>username</i> value as a hexadecimal format.
	<i>username</i>	Name of the user on the host that connects to the agent.
	<b>remote</b> <i>engineid</i>	(Optional) Specifies the <i>username</i> value on a remote SNMP engine.

**Defaults** If a remote engine ID is not provided, the default local SNMP engine ID is used.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for the *username* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

**Examples** This example shows how to remove a user from an SNMP group:

```
Console> (enable) clear snmp user joe
Cleared SNMP user joe.
Console> (enable)
```

This example shows how to remove a user on a remote SNMP engine:

```
Console> (enable) clear snmp user joe remote 00:00:00:09:00:d0:00:4c:18:00
Cleared SNMP user.
Console> (enable)
```

**Related Commands** [set snmp user](#)  
[show snmp user](#)

# clear snmp view

Use the **clear snmp view** command to remove the MIB view entry from the vacmViewTreeFamilyTable.

```
clear snmp view [-hex] {viewname subtree}
```

<b>Syntax Description</b>	<b>-hex</b> (Optional) Displays the <i>viewname</i> value as a hexadecimal format.
	<i>viewname</i> Name of a MIB view.
	<i>subtree</i> Name of the subtree.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for the *viewname* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

A MIB subtree used with a mask defines a view subtree that can be in OID format or a text name mapped to a valid OID.

**Examples** This example shows how to clear the SNMP MIB viewname:

```
Console> (enable) clear snmp view myview 1.1.3
Cleared snmp view myview with subtree 1.1.3
Console> (enable)
```

**Related Commands** [set snmp view](#)  
[show snmp view](#)

# clear spantree mst

Use the **clear spantree mst** command to clear the mapping of VLANs to an MST instance.

**clear spantree mst** *instance* [**vlan** *vlan*s]

<b>Syntax Description</b>	<i>instance</i>	Number of the instance or range of instances; valid values are from 0 to 15. See the “Usage Guidelines” section for more information.
	<b>vlan</b> <i>vlan</i> s	(Optional) Specifies the VLAN number; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you enter only one instance number, you also can enter a VLAN number. If you enter a range of instance numbers, you cannot enter a VLAN number.

If you do not specify a VLAN, all VLANs are unmapped from the specified instance and added to MST instance 0 (IST).

**Examples** This example shows you how to clear VLAN 2 from MST instance 2:

```
Console> (enable) clear spantree mst 2 vlan 2
Console> (enable)
```

**Related Commands** [set spantree mst redetect-protocol](#)  
[show spantree mst](#)

# clear spantree portcost

Use the **clear spantree portcost** command to clear the port cost of a port on the switch.

**clear spantree portcost** *mod/port* [**mst**]

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>mst</b>	(Optional) Restores the default path cost to an MST instance on a port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to restore the default path cost on a port:

```
Console> (enable) clear spantree portcost 3/1
Port 3/1 is using the cost 0.
Console> (enable)
```

This example shows how to restore the default path cost to all MST instances on a port:

```
Console> (enable) clear spantree portcost 8/1 mst
Port 8/1 MST is using the cost 20000 in MST mode.
Console> (enable)
```

**Related Commands** [set spantree portcost](#)  
[show spantree statistics](#)

# clear spantree portinstancecost

Use the **clear spantree portinstancecost** command to restore the default path cost to an instance on a port.

**clear spantree portinstancecost** *mod/port* [**mst**] *instances*

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>mst</b>	(Optional) Restores the default path cost to an MST instance on a port.
<i>instances</i>	Number of the instance; valid values are from 0 to 15.

## Defaults

The default path cost is based on port speed; see [Table 2-7](#) for default settings.

**Table 2-7 Default Port Cost—Short Mode**

Port Speed	Default Port Cost
4 Mb	250
10 Mb	100
16 Mb	62
100 Mb	19
155 Mb	14
1 Gb	4
10 Gb	2

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command is valid in MISTP and MST modes only.

## Examples

This example shows how to restore the default path cost to an instance on a port:

```
Console> (enable) clear spantree portinstancecost 5/1 2
Port 5/1 mistp-instance 1-16 have path cost 200000.
Console> (enable)
```

This example shows how to restore the default path cost to all MST instances on a port:

```
Console> (enable) clear spantree portinstancecost 8/1 mst 0-15
Port 8/1 MST Instance 0-15 have path cost 20000.
Console> (enable)
```

■ clear spantree portinstancecost

---

**Related Commands**

[set spantree portinstancecost](#)  
[show spantree statistics](#)

# clear spantree portinstancepri

Use the **clear spantree portinstancepri** command to reset the spanning tree port instance priority.

**clear spantree portinstancepri** *mod/port* [**mst**] [*instances*]

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<b>mst</b>	(Optional) Resets the spanning tree port MST instance priority.
	<i>instances</i>	(Optional) Number of the instance; valid values are from 0 to 15.

**Defaults** The default is the port priority is set to 0 with no instances specified.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is valid in MISTP and MST modes only.

**Examples** This example shows how to reset the spanning tree port instance priority:

```
Console> (enable) clear spantree portinstancepri 5/1 2
Port 5/1 instances 1-16 using portpri 32.
Console> (enable)
```

This example shows how to reset the spanning tree port priority for all MST instances:

```
Console> (enable) clear spantree portinstancepri 8/1 mst 0-15
Port 8/1 MST Instances 0-15 using portpri 32
Console> (enable)
```

**Related Commands** [set spantree portinstancepri](#)  
[show spantree](#)

# clear spantree portpri

Use the **clear spantree portpri** command to clear the port priority of a port on the switch.

**clear spantree portpri** *mod/port* [**mst**]

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>mst</b>	(Optional) Resets the MST port priority.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear the spanning tree port priority:

```
Console> (enable) clear spantree portpri 3/1
Port 3/1 is using the cost 32.
Console> (enable)
```

This example shows how to clear the MST port priority:

```
Console> (enable) clear spantree portpri 8/1 mst
Port 8/1 is using the priority 32 in MST mode.
Console> (enable)
```

**Related Commands** [set spantree portpri](#)  
[show spantree](#)

# clear spantree portvlancost

Use the **clear spantree portvlancost** command to restore the default path cost to a VLAN on a port.

```
clear spantree portvlancost mod/port [vlans]
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<i>vlans</i>	(Optional) Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.

**Defaults** The default path cost is based on port speed; see [Table 2-8](#) and [Table 2-9](#) for default settings.

**Table 2-8 Default Port Cost—Short Mode**

Port Speed	Default Port Cost
4 Mb	250
10 Mb	100
16 Mb	62
100 Mb	19
155 Mb	14
1 Gb	4
10 Gb	2

**Table 2-9 Default Port Cost—Long Mode**

Port Speed	Default Port Cost
100 Kb	200,000,000
1 Mb	20,000,000
10 Mb	2,000,000
100 Mb	200,000
1 Gb	20,000
10 Gb	2,000
100 Gb	200
1 Tb	20
10 Tb	2

**Command Types** Switch command.

**Command Modes** Privileged.

---

**Usage Guidelines**

This command is valid in PVST+ mode only.  
If you do not specify a VLAN, all VLANs are cleared.

---

**Examples**

These examples show how to restore the default path cost to a VLAN on a port:

```
Console> (enable) clear spantree portvlancost 2/10 1-10  
Port 2/10 VLANs 11-21 have path cost 6  
Port 2/10 VLANs 1-10,22-1000 have path cost 10.  
Console> (enable)
```

```
Console> (enable) clear spantree portvlancost 2/10  
Port 2/10 VLANs 1-1000 have path cost 10.  
Console> (enable)
```

---

**Related Commands**

[set spantree portvlancost](#)  
[show spantree statistics](#)

# clear spantree portvlanpri

Use the **clear spantree portvlanpri** command to reset the spanning tree port VLAN priority.

**clear spantree portvlanpri** *mod/port* [*vlan*]

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to reset the spanning tree port VLAN priority:

```
Console> (enable) clear spantree portvlanpri 1/2 23-40
Port 1/2 vlans 3,6-20,23-1000 using portpri 32
Port 1/2 vlans 1-2,4-5,21-22 using portpri 30
Console> (enable)
```

**Related Commands** [set spantree portvlanpri](#)  
[show spantree](#)

# clear spantree root

Use the **clear spantree root** command to restore the spanning tree bridge priority, hello time, maxage, and forward delay on the switch to their default values.

**clear spantree root** [*vlan*]

**clear spantree root mistp-instance** *instances*

**clear spantree root mst** *instances*

Syntax Description	
<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.
<b>mistp-instance</b> <i>instances</i>	Specifies the instance number; valid values are from 1 to 16.
<b>mst</b> <i>instances</i>	Specifies the MST instance number; valid values are 0 to 15.

## Defaults

The defaults are as follows:

- switch priority is 32768
- forward delay is 15 seconds
- hello time is 2 seconds
- maxage is 20 seconds

## Command Types

Switch command.

## Command Modes

Privileged.

## Examples

This example shows how to clear the spanning tree root on a range of VLANs:

```
Console> (enable) clear spantree root 1-20
VLANs 1-20 bridge priority set to 32678.
VLANs 1-20 bridge hello time set to 2 seconds.
VLANs 1-20 bridge max aging time set to 20 seconds.
VLANs 1-20 bridge forward delay set to 15 seconds.
```

This example shows how to clear the spanning tree root on two specific VLANs:

```
Console> (enable) clear spantree root 22,24
VLANs 22,24 bridge priority set to 32678.
VLANs 22,24 bridge hello time set to 2 seconds.
VLANs 22,24 bridge max aging time set to 20 seconds.
VLANs 22,24 bridge forward delay set to 15 seconds.
Console> (enable)
```

This example shows how to clear the spanning tree root on an instance:

```
Console> (enable) clear spantree root mstp-instance 1  
Instance 1 bridge priority set to 32768.  
Instance 1 bridge max aging time set to 20.  
Instance 1 bridge hello time set to 2.  
Instance 1 bridge forward delay set to 15.  
Console> (enable)
```

This example shows how to clear the spanning tree root on an MST instance:

```
Console> (enable) clear spantree root mst 0  
MST Instance s 0 bridge priority set to 32768.  
Instances 0 bridge max aging time set to 20.  
Instances 0 bridge hello time set to 2.  
Instances 0 bridge forward delay set to 15.  
Console> (enable)
```

---

**Related Commands**

[set spantree root](#)  
[show spantree](#)

# clear spantree statistics

Use the **clear spantree statistics** command to clear the spanning tree statistics.

**clear spantree statistics** *mod/port*

**clear spantree statistics** *vlan*s

**clear spantree statistics mistp-instance** *instances*

**clear spantree statistics mst** *instances*

Syntax Description		
	<i>mod/port</i>	Number of the module and the port on the module.
	<i>vlan</i> s	(Optional) Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.
	<b>mistp-instance</b> <i>instances</i>	Specifies the instance number; valid values are from 1 to 16.
	<b>mst</b> <i>instances</i>	Specifies the MST instance number; valid values are from 0 to 15.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear the spanning tree statistics for VLAN 1:

```
Console> (enable) clear spantree statistics 1
Cleared all VLAN counters for VLAN 1
Statistics cleared for vlans 1
Console> (enable)
```

This example shows how to clear the spanning tree statistics for a port:

```
Console> (enable) clear spantree statistics 3/1
Statistics cleared for module 3/1
Console> (enable)
```

This example shows how to clear the spanning tree statistics for an instance:

```
Console> (enable) clear spantree statistics mistp-instance 2
Statistics cleared for instances 2
Console> (enable)
```

This example shows how to clear the spanning tree statistics for an MST instance:

```
Console> (enable) clear spantree statistics mst 0
Statistics cleared for MST instance: 0
Console> (enable)
```

---

Related Commands [show spantree statistics](#)

# clear spantree uplinkfast

Use the **clear spantree uplinkfast** command to turn off the UplinkFast feature and to return the switch priority and port costs to the default settings.

## **clear spantree uplinkfast**

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command might disable load balancing on the switch.

**Examples** This example shows how to turn off the UplinkFast feature and to return the switch priority to the default settings:

```
Console> (enable) clear spantree uplinkfast
This command will cause all portcosts, portvlancosts, and the
bridge priority on all vlans to be set to default.
Do you want to continue (y/n) [n]? y
VLANs 1-1005 bridge priority set to 32768.
The port cost of all bridge ports set to default value.
The portvlancost of all bridge ports set to default value.
uplinkfast disabled for bridge.
Console> (enable)
```

**Related Commands** [set spantree uplinkfast](#)  
[show spantree uplinkfast](#)

# clear tacacs key

Use the **clear tacacs key** command to remove the key setting used for TACACS+ authentication and encryption.

## **clear tacacs key**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default key value is null.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear the key setting used for authentication and encryption:

```
Console> (enable) clear tacacs key
TACACS server key cleared.
Console> (enable)
```

---

**Related Commands** [set tacacs key](#)  
[show tacacs](#)

# clear tacacs server

Use the **clear tacacs server** command to remove a host from the list of TACACS+ servers.

**clear tacacs server** *ip\_addr*

<b>Syntax Description</b>	<i>ip_addr</i>	IP address of the server to be removed from the list of TACACS+ servers.
---------------------------	----------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	This example shows how to remove a server from the list of TACACS+ servers:
-----------------	---

```
Console> (enable) clear tacacs server 170.1.2.20
170.1.2.20 cleared from TACACS table
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show tacacs</a>
-------------------------	-----------------------------

# clear timezone

Use the **clear timezone** command to return the time zone to its default, UTC.

## **clear timezone**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default time zone is UTC.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** The **clear timezone** command functions only when NTP is running. If you set the time manually and NTP is disengaged, the **clear timezone** command has no effect.

---

**Examples** This example shows how to clear the time zone:

```
Console> (enable) clear timezone
Timezone name and offset cleared.
Console> (enable)
```

---

**Related Commands** [set timezone](#)

# clear top

Use the **clear top** command to stop the TopN process.

```
clear top {all | report_num}
```

Syntax Description	all	Stops all nonpending TopN results.
	report_num	TopN report number to kill; valid values are from 1 to 5.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **clear top all** command will not kill any pending TopN reports. Only the reports with a *done* status are killed.

You can terminate TopN processes without the **background** option (use the **show top background** command to find out if the **background** option is used) by pressing **Ctrl-C** in the same Telnet/console session, or by entering the **clear top [report\_num]** command from a separate Telnet/console session. The prompt is not printed before the TopN report is completely displayed. Other commands will be blocked until the report has been displayed.

**Examples** This example shows how to stop the TopN 1 process from a console session:

```
Console> (enable) clear top 1
10/29/1998,12:05:38:MGMT-5: TopN report 1 killed by Console//.
Console> (enable)
```

This example shows how to stop the TopN 4 process from a Telnet session:

```
Console> (enable) clear top 4
10/29/1998,12:06:00:MGMT-5: TopN report 4 killed by telnet/172.22.34.2/.
Console> (enable)
```

**Related Commands** [show top](#)  
[show top report](#)

# clear trunk

Use the **clear trunk** command to restore a trunk port to its default trunk type and mode or to clear specific VLANs from the allowed VLAN list for a trunk port.

```
clear trunk mod/port [vlangs]
```

## Syntax Description

<i>mod/port</i>	Number of the module and the port on the module.
<i>vlangs</i>	(Optional) Number of the VLAN to remove from the allowed VLAN list; valid values are from 2 to 1005 and 1025 to 4094.

## Defaults

For all ports except Multilayer Switch Module (MSM) ports, the default is **auto** negotiate. For MSM ports, the default is **off** negotiate mode.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

If you specify VLANs, those VLANs are removed from the list of VLANs allowed on the trunk. Default VLANs cannot be cleared on the trunk.

Traffic for the removed VLANs are not forwarded over a trunk port. To add VLANs that you have removed, use the **set trunk** *mod/port vlangs* command.

If you are trying to clear extended-range VLANs and sufficient space in NVRAM is not available, a warning message displays and the command fails.

## Examples

This example shows how to clear VLANs 200 through 500 from the trunk port on port 2 of module 1:

```
Console> (enable) clear trunk 1/2 200-500
Removing Vlan(s) 200-500 from allowed list.
Port 1/2 allowed vlans modified to 1-199,501-1000.
Console> (enable)
```

This example shows the output if you attempt to clear a trunk when not enough NVRAM space is available:

```
Console> (enable) clear trunk 2/18 1030-1999
Failed to clear extended range vlans from allowed list.
Not enough NVRAM space. Use the 'set trunk' command to restore
some existing entries to the default value.
Console> (enable)
```

## Related Commands

[set trunk](#)  
[show trunk](#)

# clear vlan

Use the **clear vlan** command to delete an existing VLAN from a management domain.

**clear vlan** *vlan*s

<b>Syntax Description</b>	<i>vlan</i> s    Number of the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	<p>Follow these guidelines for deleting VLANs:</p> <ul style="list-style-type: none"> <li>• When you delete a normal-range Ethernet VLAN in VTP server mode, the VLAN is removed from all switches in the same VTP domain.</li> <li>• When you delete a normal-range VLAN in VTP transparent mode, the VLAN is deleted only on the current switch.</li> <li>• You can delete an extended-range VLAN only on the switch where it was created.</li> </ul>
-------------------------	---

When you clear a VLAN, all ports assigned to that VLAN become inactive. However, the VLAN port assignments are retained until you move the ports to another VLAN. If the cleared VLAN is reactivated, all ports that are still configured on that VLAN are also reactivated. A warning is displayed if you clear a VLAN that exists in the mapping table.

When you clear a private VLAN (primary, isolated, or community), the ports are set to inactive and are not assigned to any VLAN. The private VLAN mappings for the selected VLAN are also cleared. ACL to VLAN mappings are also deleted.

<b>Examples</b>	This example shows how to clear existing VLAN 4000 from a management domain:
-----------------	--

```

Console> (enable) clear vlan 4000
This command will de-activate all ports on vlan 4
in the entire management domain
Do you want to continue(y/n) [n]? y
VLAN 4 deleted
Console> (enable)

```

<b>Related Commands</b>	<a href="#">set vlan</a> <a href="#">show vlan</a>
-------------------------	---

# clear vlan counters

Use the **clear vlan counters** command to return the software-cached counters to 0 for all VLANs.

**clear vlan counters** {*vlan*s | **all**}

<b>Syntax Description</b>	<i>vlan</i> s	Number of the VLAN or range of VLANs; valid values are from 1 to 1005 and from 1025 to 4094
	<b>all</b>	Clears counters for all VLANs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear counters for VLAN 1005:

```
Console> (enable) clear vlan counters 1005  
This command will reset vlan couters for vlan 1005  
Do you want to continue (y/n) [n]?y  
Console> (enable)
```

**Related Commands** [show vlan counters](#)

# clear vlan mapping

Use the **clear vlan mapping** command to delete existing IEEE 802.1Q VLAN-to-ISL VLAN mappings or reserved-to-nonreserved VLAN mapping.

```
clear vlan mapping dot1q {dot1q_vlan | all}
```

```
clear vlan mapping reserved {reserved_vlan | all}
```

## Syntax Description

<b>dot1q</b> <i>dot1q_vlan</i>	Clears the IEEE 802.1Q VLAN-to-ISL VLAN mapping.
<b>dot1q all</b>	Clears all IEEE 802.1Q VLAN-to-ISL VLAN mappings.
<b>reserved</b> <i>reserved_vlan</i>	Clears the specified reserved-to-nonreserved VLAN mapping.
<b>reserved all</b>	Clears all reserved-to-nonreserved VLAN mappings.

## Defaults

This command has no default settings.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

When you clear a VLAN, all ports assigned to that VLAN become inactive. However, the VLAN port assignments are retained until you move the ports to another VLAN. If the cleared VLAN is reactivated, all ports that are still configured on that VLAN are also reactivated.

## Examples

This example shows how to clear an existing mapped VLAN from the dot1q mapping table:

```
Console> (enable) clear vlan mapping dot1q 444
Vlan Mapping 444 Deleted.
Console> (enable)
```

This example shows how to clear all mapped VLANs from the mapping table:

```
Console> (enable) clear vlan mapping dot1q all
All Vlan Mapping Deleted.
Console> (enable)
```

This example shows how to clear mapped reserved VLANs from the mapping table:

```
Console> (enable) clear vlan mapping reserved 1007
Vlan Mapping 1007 Deleted.
Console> (enable)
```

## Related Commands

[set vlan](#)  
[show vlan](#)

# clear vmps rcp

Use the **clear vmps rcp** command to delete the VMPS rcp username from the VMPS table.

**clear vmps rcp** *username*

---

<b>Syntax Description</b>	<i>username</i> Username up to 14 characters long.
---------------------------	--

---

---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Usage Guidelines</b>	If you do not enter a username, all rcp usernames are deleted.
-------------------------	--

---

---

<b>Examples</b>	This example shows how to clear a specific VMPS rcp username from the VMPS table:
-----------------	---

```
Console> (enable) clear vmps rcp jdoe  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">set rcp username</a>
-------------------------	----------------------------------

---

# clear vmpls server

Use the **clear vmpls server** command to delete a VLAN Membership Policy Server (VMPS) from the VMPS table.

```
clear vmpls server ip_addr
```

<b>Syntax Description</b>	<i>ip_addr</i> IP address or host name of the VMPS to be deleted.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	This example shows how to clear a VMPS from the VMPS table:
-----------------	---

```
Console> (enable) clear vmpls server 192.168.255.255
VMPS domain server 192.168.255.255 cleared from VMPS table.
Console> (enable)
```

This example shows the results of trying to clear a nonexistent VMPS from the VMPS table:

```
Console> (enable) clear vmpls server 192.168.255.255
VMPS domain server 192.168.255.255 not in VMPS table.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">reconfirm vmpls</a> <a href="#">set vmpls server</a>
-------------------------	---

# clear vmps statistics

Use the **clear vmps statistics** command to delete existing VMPS statistics.

**clear vmps statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to delete existing VMPS statistics:

```
Console> (enable) clear vmps statistics  
VMPS and dynamic vlan statistics cleared.  
Console> (enable)
```

---

**Related Commands** [show vmps statistics](#)

# clear vtp pruneeligible

Use the **clear vtp pruneeligible** command to specify which VLANs in the VTP domain are ineligible for pruning.

**clear vtp pruneeligible** *vlan*s...

<b>Syntax Description</b>	<i>vlan</i> s...      Number of VLANs to make pruning ineligible; valid values are from 2 to 1000.
---------------------------	--

**Defaults**      The default is VLANs 2 through 1000 are eligible for pruning.

**Command Types**      Switch command.

**Command Modes**      Privileged.

**Usage Guidelines**      VTP pruning causes information about each pruning-eligible VLAN to be removed from VTP updates if no stations belong to that VLAN out a particular switch port. Use the **set vtp** command to enable VTP pruning.

If VLANs are pruning ineligible, use the **set vtp pruneeligible** command to make the VLANs pruning eligible again.

**Examples**      This example shows how to make VLANs 200 through 500 pruning ineligible:

```
Console> (enable) clear vtp pruneeligible 200-500
Vlans 1,200-500,1001-1005 will not be pruned on this device.
VTP domain Company modified.
Console> (enable)
```

**Related Commands**      **set vtp**  
**set vtp pruneeligible**  
**show vtp domain**

# clear vtp statistics

Use the **clear vtp statistics** command to delete VTP statistics.

**clear vtp statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to clear VTP statistics:

```
Console> (enable) clear vtp statistics
vtp statistics cleared.
Console> (enable)
```

---

**Related Commands** [set vtp](#)  
[show vtp statistics](#)

# commit

Use the **commit** command to commit all access control entries (ACEs) or a specific ACE in NVRAM that has not been written to hardware.

```
commit qos acl {acl_name | all | adjacency}
```

```
commit security acl {acl_name | all | adjacency}
```

Syntax Description		
	<b>qos acl</b>	Specifies QoS ACEs.
	<i>acl_name</i>	Name that identifies the VACL whose ACEs are to be committed.
	<b>all</b>	Commits ACEs for all the ACLs.
	<b>adjacency</b>	Commits adjacency table entries.
	<b>security acl</b>	Specifies security ACEs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **commit** command commits *all* ACEs in NVRAM that have not been written to hardware. Any committed ACL with no ACEs is deleted. We recommend that you enter ACEs in batches and enter the **commit** command to save all of them in hardware and NVRAM.

**Examples** This example shows how to commit a specific QoS ACE to NVRAM:

```
Console> (enable) commit qos acl my_acl
Hardware programming in progress...
ACL my_acl is committed to hardware.
Console> (enable)
```

This example shows how to commit a specific security ACE to NVRAM:

```
Console> (enable) commit security acl IPACL2
ACL commit in progress.
ACL IPACL2 is committed to hardware.
Console> (enable)
```

This example shows how to commit an adjacency table entry to NVRAM:

```
Console> (enable) commit security acl adjacency
Commit operation in progress.
Adjacency successfully committed.
```

Related Commands [rollback](#)

# commit lda

Use the **commit lda** command to commit accelerated server load balancing (ASLB) configuration that has not been written to hardware to NVRAM.

## **commit lda**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to commit ASLB configuration to NVRAM:

```
Console> (enable) commit lda
Commit operation in progress...
Successfully committed Local Director Accelerator.
Console> (enable)
```

---

**Related Commands** [clear lda](#)  
[set lda](#)  
[show lda](#)

# configure

Use the **configure** command to download a configuration file from an rcp server or the network and execute each command in that file.

**configure** {*host file*}[**rcp**]

**configure network**

<b>Syntax Description</b>	<i>host</i>	IP address or IP alias of the host.
	<i>file</i>	Name of the file.
	<b>rcp</b>	(Optional) Specifies rcp as the file transfer method.
	<b>network</b>	Specifies interactive prompting for the host and the file.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Refer to the *Catalyst 6500 Series Software Configuration Guide* on how to construct a configuration file to download using the **configure** command.

Following is a sample file called system5.cfg in the /tftpboot directory:

```
begin
show time
set ip alias conc7 198.133.219.207
set ip alias montreux 198.133.119.42
set ip alias cres 192.122.174.42
set prompt system5>
set password
# empty string old password

pingpong
pingpong
end
#
```

Each line contains a command, except lines that begin with ! or #.

**Examples** This example shows how to download the system5.cfg configuration file from the 192.122.174.42 host:

```
Console> (enable) configure 192.122.174.42 system5.cfg
Configure using system5.cfg from 192.122.174.42 (y/n) [n]? y
/
Done. Finished Network Download. (446 bytes)
>> show time
```

```
Wed May 19 1999, 17:42:50
>> set ip alias conc7 198.133.219.207
IP alias added.
>> set ip alias montreux 198.133.219.40
IP alias added.
>> set ip alias cres 192.122.174.42
IP alias added.
>> set prompt system5>
>> set password
Enter old password:
Enter new password: pingpong
Retype new password: pingpong
Password changed.
system5> (enable)
```

---

**Related Commands**[copy](#)[show config](#)

# confreg

Use the **confreg** command to configure the configuration register utility.

**confreg** [*num*]

## Syntax Description

*num* (Optional) Valid values are **0** = ROM monitor, **1** = boot helper image, and 2 to 15 = boot system.

## Defaults

This command has no default settings.

## Command Types

ROM monitor command.

## Command Modes

Normal.

## Usage Guidelines

Executed with the **confreg** argument *num*, the virtual configuration register (VCR) changes to match the number specified.

Without the argument, **confreg** dumps the contents of the VCR in English and allows you to alter the contents.

You are prompted to change or keep the information held in each bit of the VCR. In either case, the new VCR value is written into NVRAM and does not take effect until you reset or power cycle the platform.

You must issue a **sync** command to save your change. Otherwise, the change is not saved and a **reset** removes your change.

## Examples

This example shows how to use the **confreg** command:

```
rommon 7 > confreg

Configuration Summary
enabled are:
console baud: 9600
boot: the ROM Monitor

do you wish to change the configuration? y/n [n]: y
enable "diagnostic mode"? y/n [n]: y
enable "use net in IP bcast address"? y/n [n]:
enable "load rom after netboot fails"? y/n [n]:
enable "use all zero broadcast"? y/n [n]:
enable "break/abort has effect"? y/n [n]:
enable "ignore system config info"? y/n [n]:
change console baud rate? y/n [n]: y
enter rate: 0 = 9600, 1 = 4800, 2 = 1200, 3 = 2400 [0]: 0
change the boot characteristics? y/n [n]: y
enter to boot:
 0 = ROM Monitor
 1 = the boot helper image
```

```
2-15 = boot system
[0]: 0
```

```
Configuration Summary
enabled are:
diagnostic mode
console baud: 9600
boot: the ROM Monitor
```

```
do you wish to change the configuration? y/n [n]:
```

```
You must reset or power cycle for new config to take effect
```

---

**Related Commands**    [show boot](#)

# context

Use the **context** command to display the context of a loaded image.

## context

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** ROM monitor command.

**Command Modes** Normal.

**Usage Guidelines** The context from the kernel mode and process mode of a booted image are displayed, if available.

**Examples** This example shows how to display the context of a loaded image:

```
rommon 6 > context
Kernel Level Context:
  Reg      MSW      LSW      | Reg      MSW      LSW
  -----  -----  -----  | -----  -----  -----
zero : 00000000  00000000 | s0 : 00000000  34008301
AT   : 00000000  3e800000 | s1 : 00000000  00000001
v0   : 00000000  00000003 | s2 : 00000000  00000003
v1   : 00000000  00000000 | s3 : 00000000  00000000
a0   : 00000000  0000002b | s4 : 00000000  60276af8
a1   : 00000000  00000003 | s5 : ffffffff  ffffffff
a2   : 00000000  00000000 | s6 : 00000000  60276c58
a3   : 00000000  60276af8 | s7 : 00000000  0000000a
t0   : 00000000  00000b84 | t8 : 00000000  34008300
t1   : 00000000  3e800004 | t9 : ffffffff  ac000000
t2   : 00000000  00000239 | k0 : 00000000  00000400
t3   : 00000000  34008301 | k1 : 00000000  6024eb5c
t4   : ffffffff  ffff83fd | gp : 00000000  60252920
t5   : 00000000  0000003f | sp : 00000000  60276a98
t6   : 00000000  00000000 | s8 : 00000000  601fbf33
t7   : ffffffff  ffffffff | ra : 00000000  6006d380
HI   : 00000000  00000008 | LO : 00000000  00000000
EPC  : 00000000  60033054 | ErrPC : ffffffff  bfc070c8
Stat : 34408302      | Cause : 00002020

Process Level Context:
  Reg      MSW      LSW      | Reg      MSW      LSW
  -----  -----  -----  | -----  -----  -----
zero : 00000000  00000000 | s0 : 00000000  00000074
AT   : 00000000  3e820000 | s1 : 00000000  60276c58
v0   : 00000000  00000081 | s2 : 00000000  601fbac0
v1   : 00000000  00000074 | s3 : 00000000  00000036
```

## context

```

a0      : 00000000  00000400 | s4      : 00000000  0000000f
a1      : 00000000  60276c58 | s5      : ffffffff  ffffffff
a2      : 00000000  00000074 | s6      : 00000000  60276c58
a3      : 00000000  00000000 | s7      : 00000000  0000000a
t0      : 00000000  00000400 | t8      : 00000000  34008300
t1      : 00000000  00000400 | t9      : ffffffff  ac000000
t2      : 00000000  00000000 | k0      : 00000000  30408401
t3      : ffffffff  ffff00ff | k1      : 00000000  30410000
t4      : 00000000  600dcc10 | gp      : 00000000  60252920
t5      : 00000000  0000003f | sp      : ffffffff  80007ce8
t6      : 00000000  00000000 | s8      : 00000000  601fbf33
t7      : ffffffff  ffffffff | ra      : 00000000  600dfd20
HI      : 00000000  00000008 | LO      : 00000000  00000000
EPC     : 00000000  600dfd38 | ErrPC   : ffffffff  ffffffff
Stat    : 34008303 | Cause   : ffffffff

```

# copy

Use the **copy** command to upload or download a Flash image or a switch configuration to or from a Flash device, rcp server, or TFTP server.

```
copy file-id { tftp | rcp | flash | file-id | config }
```

```
copy tftp { flash | file-id | config }
```

```
copy rcp { flash | file-id | config }
```

```
copy flash { tftp | rcp | file-id | config }
```

```
copy config { flash | file-id | tftp | rcp } [all]
```

```
copy acl config { flash | file-id | tftp | rcp }
```

```
copy cfg1 { tftp | rcp | flash | config | cfg2 } [all]
```

```
copy cfg2 { tftp | rcp | flash | config | cfg1 } [all]
```

Syntax Description	
<i>file-id</i>	Format used to specify the file on the Flash device, where the format is <i>m/device:filename</i> . <i>m/</i> = Option that gives access to different modules, such as the standby supervisor engine or an Ethernet module. <i>device:</i> = Device where the Flash resides. <i>filename</i> = Name of the configuration file.
<b>tftp</b>	Copies to or from a TFTP server.
<b>rcp</b>	Specifies the file be copied to or from an rcp server.
<b>flash</b>	Supports downloading of multiple modules.
<b>config</b>	Copies the configuration to Flash memory, another Flash device, or a file on a TFTP server.
<b>acl config</b>	Copies the ACL configuration manually to a file. See the “Usage Guidelines” section before using this command.
<b>cfg1</b>	Specifies the first startup configuration file on the supervisor engine.
<b>cfg2</b>	Specifies the second startup configuration file on the supervisor engine.
<b>all</b>	(Optional) Specifies that the entire configuration be copied to the specified destination configuration file.

## Defaults

If a source or destination device is not given, the one specified by the **cd** command is used. If a destination filename is omitted, the source filename is used.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** Use the **copy** command to perform these tasks:

- Download a system image or configuration file from a TFTP or rcp server to a Flash device.
- Upload a system image or configuration file from a Flash device to a TFTP or rcp server.
- Configure the switch using a configuration file on a Flash device or on a TFTP or rcp server.
- Copy the current configuration to a Flash device or to a TFTP or rcp server.
- Manually copy the ACL configuration to a file.

**Caution**

Manual copying can only be used if **acl config** is set to **flash** and you enable the **auto-config append** option. If you disable the **append** option, the configuration clears before executing the auto-config file; see the [set boot config-register auto-config](#) command.

---

If you do not specify the source or destination device, the command uses the ones specified by the **cd** command. If you omit the destination filename, the source filename is used.

The **copy config**, **copy cfg1**, and **copy cfg2** commands copy only nondefault commands to the destination configuration file. Use the keyword **all** to copy both default and nondefault configurations.

If you do not specify a source or destination Flash device, the default Flash device (specified by the **cd** command) is used. Use the **pwd** command to display the current default Flash device. If you omit the destination filename, the system uses the source filename.

The system stores image and configuration files in the *sysname.cfg* file when you define a system name using the **set system name** command; otherwise, it uses the default *myswitch.cfg* file.

A colon (:) is required after the specified device.

If you use the **flash** keyword as the copy source or destination, you are prompted for the Flash device name.

If you are copying a software image to multiple intelligent switching modules of the same type, use the **flash** keyword as the copy destination. The switch automatically determines which modules to copy the image to based on the header in the source image file. If you want to copy a software image to a single intelligent switching module in a switch with multiple modules of the same type, you must specify the destination *file-id* as *m/bootflash:* (do not specify a filename).

**Examples**

This example shows how to use the **copy** command to upload the switch configuration to a file named **cat.cfg** on the slot0 Flash device:

```

Console> (enable) copy config slot0:cat.cfg
Upload configuration to slot0:cat.cfg
649324 bytes available on device slot0, proceed (y/n) [n]? y
.....
.....
.....
.....
.....
.
/
Configuration has been copied successfully. (10200 bytes)
Console> (enable)

```

This example shows how to use the **copy** command to upload the switch configuration to a file named **lab2.cfg** on the TFTP server:

```

Console> (enable) copy config tftp:lab2.cfg
IP address or name of remote host [172.20.22.7]? y
Upload configuration to tftp:lab2.cfg (y/n) [n]? y
.....
.....
.....
.
/
Configuration has been copied successfully. (10299 bytes).
Console> (enable)

```

This example shows how to use the **copy** command to upload the switch configuration to the **cat.cfg** file on the slot0 Flash device:

```

Console> (enable) copy config flash
Flash device [bootflash]? slot0:
Name of file to copy to [test_image]? cat.cfg
Upload configuration to slot0:cat.cfg
749124 bytes available on device slot0, proceed (y/n) [n]? y
.....
.....
.....
.....
.
/
Configuration has been copied successfully. (200345 bytes).
Console> (enable)

```

These examples show how to use the **copy** command to download a configuration from a TFTP server:

```

Console> (enable) copy slot0:cat.cfg config
Configure using slot0:cat.cfg (y/n) [n]? y
/
Finished download. (10900 bytes)
>> set password $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
Password changed.
>> set enablepass $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
Password changed.
>> set prompt Console>
>> set length 24 default
Screen length set to 24.
>> set logout 20
.....
Console> (enable)

```

```

Console> (enable) copy tftp config
IP address or name of remote host? 172.20.22.7
Name of configuration file? cat.cfg
Configure using cat.cfg from 172.20.22.7 (y/n) [n]? y
/
Finished network download. (10900 bytes)
>> set password $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
Password changed.
>> set enablepass $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
Password changed.
>> set prompt Console>
>> set length 24 default
Screen length set to 24.
>> set logout 20
.....
Console> (enable)
Console> (enable) copy flash config
Flash device [bootflash]?
Name of configuration file? test.cfg
Configure using bootflash:test.cfg (y/n) [n]? y
/
Finished download. (10900 bytes)
>> set password $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
Password changed.
>> set enablepass $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
Password changed.
>> set prompt Console>
>> set length 24 default
Screen length set to 24.
>> set logout 20
.....
Console> (enable)

```

This example shows how to copy the running configuration to an rcp server for storage:

```

Console> (enable) copy config rcp
IP address or name of remote host []? 172.20.52.3
Name of file to copy to []? cat6000_config.cfg

Upload configuration to rcp:cat6000_config.cfg, (y/n) [n]? y
.....
.....
.....
.....
.....
.....
..
/
Configuration has been copied successfully.
Console> (enable)

```

This example shows how to configure a Catalyst 6500 series switch using a configuration file downloaded from an rcp server:

```

Console> (enable) copy rcp config
IP address or name of remote host []? 172.20.52.3
Name of file to copy from []? dns-config.cfg

Configure using rcp:dns-config.cfg (y/n) [n]? y
/
Finished network download. (134 bytes)
>>
>> set ip dns server 172.16.10.70 primary
172.16.10.70 added to DNS server table as primary server.
>> set ip dns server 172.16.10.140
172.16.10.140 added to DNS server table as backup server.
>> set ip dns enable
DNS is enabled
>> set ip dns domain corp.com
Default DNS domain name set to corp.com
Console> (enable)

```

This example shows how to upload an image from a remote host into Flash using an rcp server:

```

Console> (enable) copy rcp flash
IP address or name of remote host []? 172.20.52.3
Name of file to copy from []? cat6000-sup-d.6-1-1.bin
Flash device [bootflash]?
Name of file to copy to [cat6000-sup-d.6-1-1.bin]?

4369664 bytes available on device bootflash, proceed (y/n) [n]? y
CCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC
CCCCCCCCCCCCCCCCCCCC
File has been copied successfully.
Console> (enable)

```

This example shows how to download a configuration to the first startup configuration file (cfg1) on a supervisor engine:

```

Console> (enable) copy tftp cfg1
IP address or name of remote host [172.20.32.10]?
Name of file to copy from [/tftpboot/my.cfg]?
Download config file from /tftpboot/my.cfg to cfg1 (y/n) [n]?
.....
File has been copied to cfg1.
Console> (enable)

```

This example shows how to copy the ACL configuration to a bootflash file manually:

```

Console> (enable) copy acl config bootflash:switchapp.cfg
Upload configuration to bootflash:dan.cfg
2843644 bytes available on device bootflash, proceed (y/n) [n]? y
.....
.....
/
Configuration has been copied successfully.
Console> (enable)

```

■ copy

---

**Related Commands**

**configure**  
**set boot config-register**  
**set boot config-register auto-config**  
**write**

# delete

Use the **delete** command to delete a configuration file.

**delete** *[[m/]device:]filename*

Syntax Description	<i>m/</i>	(Optional) Module number of the supervisor engine containing the Flash device.
	<i>device:</i>	(Optional) Device where the Flash resides.
	<i>filename</i>	Name of the configuration file.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A colon (:) is required after the specified device.

**Examples** This example shows how to delete the `cat6000-sup-d.5-5-1.bin` configuration file from the Flash device and then verify the deletion by entering the **show flash** command:

```

Console> (enable) delete bootflash:cat6000-sup-d.5-5-1.bin
Console> (enable)
Console> (enable) show flash
-#- ED --type-- --crc--- -seek-- nlen -length- -----date/time----- name
  1 .D ffffffff 5415406e 3300b8 25 3080247 Jan 12 2000 13:22:46
cat6000-sup-d.6-1-1.bin
  2 .. ffffffff 762950d6 6234d0 25 3093399 Jan 13 2000 12:33:14
cat6000-sup-d.6-1-1.bin

1428272 bytes available (6173904 bytes used)
Console> (enable)

```

**Related Commands**

- [dir—switch](#)
- [show flash](#)
- [squeeze](#)
- [undelete](#)

# dev

Use the **dev** command to list the device IDs available on a switch.

**dev**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** ROM monitor command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to use the **dev** command:

```
rommon 10 > dev
Devices in device table:
   id  name
bootflash: bootflash
slot0:  PCMCIA slot 0
eprom:  eprom
```

## dir—ROM monitor

Use the **dir** command to list the files of the named device.

**dir** *device*

<b>Syntax Description</b>	<i>device</i> ID of the device.
---------------------------	---------------------------------

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	ROM monitor command.
----------------------	----------------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to use the <b>dir</b> command:
-----------------	---

```
rommon 11 > dir flash:
      File size      Checksum  File name
      65 bytes (0x41)  0xb49d   clev/oddfile65
      2229799 bytes (0x220627)  0x469e   clev/sierra-k.Z
```

# dir—switch

Use the **dir** command to display a list of files on a Flash memory device.

**dir** *[[m/]device:][filename]* [**all** | **deleted** | **long**]

Syntax Description		
<i>m/</i>	(Optional)	Module number of the supervisor engine containing the Flash device.
<i>device:</i>	(Optional)	Device where the Flash resides.
<i>filename</i>	(Optional)	Name of the configuration file.
<b>all</b>	(Optional)	Displays all files, deleted or not.
<b>deleted</b>	(Optional)	Displays only deleted files.
<b>long</b>	(Optional)	Displays files that have not been deleted, in long format.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal and privileged.

**Usage Guidelines** A colon (:) is required after the specified device.  
 When you specify the **all** keyword, the file information is displayed in long format.  
 When you omit all keywords (**all**, **deleted**, or **long**), the system displays file information in short format. Short format is shown in [Table 2-10](#).

**Table 2-10 Short Format**

Column Heading	Description
#	File index number
length	File length
date/time	Date and time the file was created
name	Filename

When you use one of the keywords (**all**, **deleted**, or **long**), the system displays file information in long format. The long format is shown in [Table 2-11](#).

**Table 2-11 Long Format**

Column Heading	Description
#	File index number
ED	Letter to indicate whether the file contains an error (E) or is deleted (D)
type	File type (1 = configuration file, 2 = image file); when the file type is unknown, the system displays a zero or FFFFFFFF in this field
crc	File cyclic redundancy check
seek	Offset into the file system of the next file
nlen	Filename length
length	File length
date/time	Date and time the file was created
name	Filename

**Examples**

This example shows how to display the file information in short format:

```
Console> (enable) dir
-#- -length- -----date/time----- name
  1 6061822 Mar 03 2000 15:42:49 cat6000-sup.6-1-1.bin
  2 6165044 Mar 13 2000 14:40:15 cat6000-sup.5-5-1.bin

3763660 bytes available (12227124 bytes used)
Console> (enable)
```

This example shows how to display the file information in long format:

```
Console> (enable) dir long
-#- ED --type-- --crc--- -seek-- nlen -length- -----date/time----- name
  1 .. ffffffff f3a3e7c1 607f80 24 6061822 Mar 03 2000 15:42:49 cat6000-sup.
6-1-1.bin
  2 .. ffffffff aa825ac6 be9234 24 6165044 Mar 13 2000 14:40:15 cat6000-sup.
5-5-1.bin

3763660 bytes available (12227124 bytes used)
Console> (enable)
```

**Related Commands**

[show flash](#)

# disable

Use the **disable** command to return to normal mode from privileged mode.

**disable**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to return to normal mode:

```
Console> (enable) disable
Console>
```

---

**Related Commands** [enable](#)

# disconnect

Use the **disconnect** command to close an active console port or Telnet session.

**disconnect** {*ip\_addr* | **console**}

Syntax Description	<i>ip_addr</i>	IP address or IP alias.
	<b>console</b>	Denotes an active console port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If multiple sessions from the same IP address exist, the **disconnect** command checks if the current process is also from the same IP address. If it is not, all Telnet sessions from the specified IP address are disconnected. If it is, all sessions, other than the current session, are disconnected. The system prompts whether to disconnect the current Telnet session. You can answer **n** and remain connected or answer **y** and be disconnected.

**Examples** This example shows how to close a Telnet session to host 198.134.214.4:

```
Console> (enable) disconnect 198.134.214.4
Telnet session from 198.134.214.4 disconnected. (1)
Console> (enable)
```

This example shows how to close the current console session:

```
Console> (enable) disconnect console
Console session disconnected.
Console> (enable)
```

**Related Commands** [telnet](#)

# download

Use the **download** command to copy a software image from a specified host to the Flash memory of a designated module.

**download** *host file* [*mod*] [**rcp**]

**download serial**

**download vmps**

**download boot** *flash\_device:filename mod\_num*

Syntax Description		
<i>host</i>	Name or IP address of host.	
<i>file</i>	Name of file to be downloaded.	
<i>mod</i>	(Optional) Number of the module to receive the downloaded image.	
<b>rcp</b>	(Optional) Specifies rcp as the file transfer method.	
<b>serial</b>	Specifies download through a serial port.	
<b>vmps</b>	Downloads VMPS.	
<b>boot</b>	Downloads an image to the boot ROM of a module.	
<i>flash_device:</i> <i>filename</i>	Name of the software image to be downloaded.	
<i>mod_num</i>	Number of the module to receive the downloaded image.	

**Defaults** If a module number is not specified, the image is downloaded to all modules for which the image is valid.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Catalyst 6500 series switches download new code to the processors using Kermit serial download through the EIA/TIA-232 console port.

The **download** command downloads code to the module Flash memory. Catalyst 6500 series switch software rejects an image if it is not a valid image for the module.

The **download serial** command uses Kermit through the serial EIA/TIA-232 console port. The **download serial** command is not allowed from a Telnet session.

Before you can execute the **download vmps** command successfully, you must use the **set vmps downloadserver** command to configure the IP address of the TFTP server and the name of the VMPS configuration file on that server. If the IP address of the TFTP server is not configured, the **download vmps** command reports an error. If the configuration filename is not configured, the **download vmps** command uses the default filename `vmps-config-database.1`.

After a successful download, the new VMPS information replaces any existing information. If there are not enough resources to build the new configuration database, the VMPS is made inactive.

If you specify the module number, the download goes to the specified module, but the download will fail if the module is of a different type than is indicated by the download header. If you do not specify the module number, the download goes to all modules of that type.



### Caution

After starting the serial download using Kermit, do not attempt to abort the serial download by pressing **Ctrl-C**. Pressing **Ctrl-C** interrupts the download process and could leave the switch in a problematic state. If this occurs, reboot the switch.

### Examples

This example shows how to download the `c6000_spv11.bin` file from the mercury host to the supervisor engine (by default):

```
Console> (enable) download mercury c6000_spv11.bin
Download image c6000_spv11.bin from mercury to module 1FLASH (y/n) [n]? y
\
Finished network single module download. (2418396 bytes)
FLASH on Catalyst:
```

Type	Address	Location
Intel 28F008	20000000	NMP (P3) 4MB SIM

```
Erasing flash sector...done.
Programming flash sector...done.
Erasing flash sector...done.
Programming flash sector...done.
The system needs to be reset to run the new image.
Console> (enable)
```

This example shows how to download the `acpflash_1111.bbi` file from the mercury host to module 3:

```
Console> (enable) download mercury acpflash_1111.bbi 3
This command will reset Module 3.
Download image acpflash_1111.bbi from mercury to Module 3 FLASH (y/n) [n]? y
/
Done. Finished network download. (1964012 bytes)
Console> (enable)
```

This sample session shows how to connect to a remote terminal from a Sun workstation and how to use the **download serial** command to copy a software image to the supervisor engine:

```
[At local Sun workstation]
host% kermit
C-Kermit 5A(172) ALPHA, 30 Jun 95, SUNOS 4.0 (BSD)
Type ? or 'help' for help
C-Kermit> set line /dev/ttyb
C-Kermit> c
Connecting to /dev/ttyb, speed 9600.
The escape character is ^ (ASCII 28).
Type the escape character followed by C to get back,
or followed by ? to see other options.

Console> enable
Enter Password:
Console> (enable) set system baud 19200
^C
[Back at local Sun workstation]
C-Kermit> set speed 19200
```

```

/dev/ttyb, 19200 bps
C-Kermit> c
Connecting to /dev/ttyb, speed 19200.
The escape character is ^ (ASCII 28).
Type the escape character followed by C to get back,
or followed by ? to see other options.

Console> (enable) download serial
Download Supervisor image via console port (y/n) [n]? y

Concentrator Boot ROM (Ver 1.00)

Waiting for DOWNLOAD!!
Return to your local Machine by typing its escape sequence
Issue Kermit send command from there[ Send 'Filename']

^\\C
[Back at Local System]
C-Kermit> send c6000_xx.bin
                SF
c6000_xx.bin => C6000_XX.BIN, Size: 1233266

X to cancel file, CR to resend current packet
Z to cancel group, A for status report
E to send Error packet, Ctrl-C to quit immediately: .....
.....

..... [OK]
ZB
C-Kermit> quit
host%

```

This example shows the **download vmpls** command and typical system responses:

```

Console> (enable) download vmpls
Re-initialization of Vlan Membership Policy Server with the downloaded
configuration file is in progress.
6/14/1998,17:37:29:VMPS-2:PARSER: 82 lines parsed, Errors 0

```

This example shows how to download a ROM image to module 9:

```

Console> (enable) download boot bootflash:boot542.ubin 9
Warning!! This command replaces the existing boot code on Module 9.
Please verify with TAC that the file specified is appropriate for WS-X6408-GBIC.
Use this command with caution.
Do you want to continue (y/n) [n]? y
Download boot image start...
Download boot code completed.
Console> (enable)

```

---

**Related Commands**

[reset—switch](#)  
[show flash](#)  
[show rcp](#)  
[show vmps](#)

# enable

Use the **enable** command to activate privileged mode. In privileged mode, additional commands are available, and certain commands display additional information.

## **enable**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** The (enable) in the prompt indicates that the system is in privileged mode and that commands can be entered.

---

**Examples** This example shows how to enter privileged mode:

```
Console> enable
Enter password:
Console> (enable)
```

---

**Related Commands** [disable](#)

# format

Use the **format** command to format bootflash or a Flash PC card (a Flash device must be formatted before it can be used).

```
format [spare spare-num] [m/]device1: [[device2:][monlib-filename]]
```

Syntax Description		
<b>spare</b> <i>spare_num</i>	(Optional) Number of spare sectors to reserve when other sectors fail.	
<i>m/</i>	(Optional) Module number of the supervisor engine containing the Flash device.	
<i>device1</i> :	Flash device to be formatted.	
<i>device2</i> :	(Optional) Flash device that contains the <i>monlib</i> file to be used to format <i>device1</i> :	
<i>monlib-filename</i>	(Optional) Name of the <i>monlib</i> file.	

**Defaults** The default number of spare sectors is 0.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A colon (:) is required after the specified device.

You can reserve up to 16 spare sectors for use when other sectors fail. If you do not reserve a spare sector and later some sectors fail, you will have to reformat the entire Flash memory, which will erase all existing data.

The *monlib* file is the ROM monitor library used by the ROM monitor to access files in the Flash file system. It is also compiled into the system image. In the command syntax, *device1*: is the device to format and *device2*: contains the *monlib* file to use.

When you omit the [[*device2*:][*monlib-filename*]] argument, the system formats *device1*: using the *monlib* that is bundled with the system software.

When you omit *device2*: from the [[*device2*:][*monlib-filename*]] argument, the system formats *device1*: using the named *monlib* file from the device specified by the **cd** command.

When you omit *monlib-filename* from the [[*device2*:][*monlib-filename*]] argument, the system formats *device1*: using the *monlib* file from *device2*:. When you specify the whole [[*device2*:][*monlib-filename*]] argument, the system formats *device1*: using the specified *monlib* file from the specified device.

You can also specify *device1:monlib-filename* as the device and filename to be used, as follows:

```
format device1: [device1: [monlib-filename]]
```

If *monlib-filename* is omitted, the system formats *device1*: using the built-in *monlib* file on the device.

**Note**

---

When the system cannot find a monlib file, the system terminates the formatting process.

---

**Note**

---

If the Flash device has a volume ID, you must provide the volume ID to format the device. The volume ID is displayed using the **show flash m/device: filesystem** command.

---

---

**Examples**

This example shows how to format a Flash PC card:

```
Console> (enable) format slot0:
All sectors will be erased, proceed (y/n) [n]?y
Enter volume id (up to 31 characters):
Formatting sector 1
Format device slot0 completed.
Console> (enable)
```

# frame

Use the **frame** command to display an individual stack frame.

```
frame [-d | -p] [num]
```

<b>Syntax Description</b>	<b>-d</b> (Optional) Specifies a monitor context.
	<b>-p</b> (Optional) Specifies a booted image process level context.
	<i>num</i> (Optional) Number of the frame to display, where <b>0</b> = youngest frame.

**Defaults** The default is a booted image kernel context, which is the youngest frame.

**Command Types** ROM monitor command.

**Command Types** Normal.

**Usage Guidelines** The minus sign (-) is required with the **-d** and **-p** options.

**Examples** This example shows how to use the **frame** command to specify a booted image process level context, frame 1:

```
rommon 6 > frame -p 1
Stack Frame 1, SP = 0x80007ed8, Size = 32 bytes
[0x80007ed8 : sp + 0x000] = 0x6031de50
[0x80007edc : sp + 0x004] = 0x6031c000
[0x80007ee0 : sp + 0x008] = 0x00000000
[0x80007ee4 : sp + 0x00c] = 0x80007ec4
[0x80007ee8 : sp + 0x010] = 0x00000002
[0x80007eec : sp + 0x014] = 0x00000000
[0x80007ef0 : sp + 0x018] = 0x60008770
[0x80007ef4 : sp + 0x01c] = 0x600087f0
```

# history—ROM monitor

Use the **history** command to display the command history (the last 16 commands executed in the ROM monitor environment). This command is aliased to “h” by the ROM monitor for convenience.

## history

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** ROM monitor command.

**Command Modes** Normal.

**Examples** This example shows how to use the **history** command:

```
rommon 13 > history
```

```

1  help
2  break -s 0x20090
3  break -s 10090
4  break -s 0xa0001000
5  cont
6  help
7  dev
8  dir
9  dir bootflash:
10 dis
11 dis 0xa0001000
12 dis 0xbe000000
13 history
=====
```

# history—switch

Use the **history** command to show the contents of the command history buffer.

## history

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** The history buffer size is fixed at 20 commands. See the “[Command-Line Interfaces](#)” chapter for detailed information about the command history feature.

---

**Examples** In this example, the **history** command lists the contents of the command history buffer:

```
Console> history
  1 help
  2 history
Console> !2
history
  1 help
  2 history
  3 history
Console>
```

# I2trace

Use the **I2trace** command to display the Layer 2 path taken by the packets that start at a specified source address and end at a specified destination address.

**I2trace** *src\_mac\_addr dest\_mac\_addr [vlan] [detail]*

**I2trace** *src\_ip\_addr dest\_ip\_addr [detail]*

Syntax Description		
	<i>src_mac_addr</i>	Source MAC address.
	<i>dest_mac_addr</i>	Destination MAC address.
	<i>vlan</i>	(Optional) Number of the VLAN.
	<i>src_ip_addr</i>	Source IP address or alias.
	<i>dest_ip_addr</i>	Destination IP address or alias.
	<b>detail</b>	(Optional) Specifies detailed information.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Types** Privileged.

**Usage Guidelines** All the intermediate devices should be Catalyst 5000 family or Catalyst 6500 series switches running supervisor engine software release 6.1 or later. Catalyst 4000 family switches must be running supervisor engine software release 6.2 or later.

The **I2trace** command displays the Layer 2 path when the specified source and destination addresses belong to the same VLAN. If you specify source and destination addresses that belong to different VLANs, **I2trace** aborts with an error message.

You must enable CDP on all the Catalyst 4000, Catalyst 5000, or Catalyst 6500 series switches in the network.

When the switch detects a device (in the Layer 2 path) that does not belong to the Catalyst 4000, Catalyst 5000, or Catalyst 6500 series switch, the switch continues to send Layer 2 trace queries and lets them time out.

This command is rejected if you enter a multicast source or destination MAC address.

If a source or the destination address belongs to multiple VLANs, you must specify the VLAN to be used for determining the Layer 2 path.

The Layer 2 trace feature is not supported when multiple devices are attached to one port through hubs (for example, multiple CDP neighbors detected on a port). When more than one CDP neighbor is detected on the port, l2trace is aborted.

If you specify the IP address of the source and destination systems instead of the MAC addresses, the switch looks at the ARP table to determine the IP address to MAC address mapping of the source and destination systems. If an ARP entry exists for the specified IP address, the corresponding MAC address is used. If no matching ARP entry exists, the system does an ARP query and tries to resolve the IP address. If this is the case, a restriction is imposed that requires the source and destination systems to be in the same subnet as the switch in order for the ARP query to be resolved.

## Examples

This example shows how to display the Layer 2 packet path for a specified source and destination MAC address:

```
Console> (enable) l2trace 00-01-22-33-44-55 10-22-33-44-55-66 detail
l2trace vlan number is 10.

00-01-22-33-44-55 found in C5500 named wiring-1 on port 4/1 10Mb half duplex
C5500: wiring-1: 192.168.242.10: 4/1 10Mb half duplex -> 5/2 100MB full duplex
C5000: backup-wiring-1: 192.168.242.20: 1/1 100Mb full duplex -> 3/1-4 FEC attached
C5000: backup-core-1: 192.168.242.30: 4/1-4 FEC attached -> 1/1-2 GEC attached
C6000: core-1: 192.168.242.40: 1/1-2 GEC attached -> 2/1 10MB half duplex.
10-22-33-44-55-66 found in C6000 named core-1 on port 2/1 10MB half duplex.
Console> (enable)
```

This example shows how to display the Layer 2 packet path for a specified source and destination IP alias:

```
Console> (enable) l2trace user-1-pc user-2-pc detail
Mapping IP address to MAC Address
user-1-pc -> 00-01-22-33-44-55
user-2-pc -> 10-22-33-44-55-66
l2trace vlan number is 10

00-01-22-33-44-55 found in C5500 named wiring-1 on port 4/1 10Mb half duplex
C5500: wiring-1: 192.168.242.10: 4/1 10Mb half duplex -> 5/2 100MB full duplex
C5000: backup-wiring-1: 192.168.242.20: 1/1 100Mb full duplex -> 3/1-4 FEC attached
C5000: backup-core-1: 192.168.242.30: 4/1-4 FEC attached -> 1/1-2 GEC attached
C6000: core-1: 192.168.242.40: 1/1-2 GEC attached -> 2/1 10MB half duplex.
10-22-33-44-55-66 found in C6000 named core-1 on port 2/1 10MB half duplex.
Console> (enable)
```

This example shows how to display a summary of Layer 2 packet path information for a specified source and destination IP address:

```
Console> (enable) l2trace 9.7.0.7 9.7.0.6
Starting L2 Trace
sc0 :9.7.0.7 : 3/7
4/16 :9.7.0.2 : 4/10
Console> (enable)
```

This example shows how to display a summary of Layer 2 packet path information for a specified source and destination MAC address:

```
Console> (enable) l2trace 00-01-22-33-44-55 10-22-33-44-55-66
Starting L2 Trace
sc0 :9.7.0.7 : 3/7
4/16 :9.7.0.2 : 4/10
Console> (enable)
```

# meminfo

Use the **meminfo** command to display information about the main memory, packet memory, and NVRAM. With the **-l** option, the supported DRAM configurations are displayed.

## **meminfo [-l]**

<b>Syntax Description</b>	<b>-l</b> (Optional) Specifies the long listing, which displays the DRAM configurations.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	ROM monitor command.
----------------------	----------------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	The minus sign (-) is required with the <b>-l</b> option.
-------------------------	---

<b>Examples</b>	This example shows how to use the <b>meminfo</b> command:
-----------------	---

```
rommon 9 > meminfo
```

```
Main memory size: 16 MB in 32 bit mode.  
Available main memory starts at 0xa000e000, size 16328KB  
IO (packet) memory size: 25 percent of main memory.  
NVRAM size: 32KB
```

# ping

Use the **ping** command to send ICMP echo-request packets to another node on the network. You can also use the **ping** command without arguments to configure ping.

**ping -s** *host*

**ping -s** *host* [*packet\_size*] [*packet\_count*]

**ping**

Syntax Description		
<b>-s</b>	Causes <b>ping</b> to send one datagram per second, printing one line of output for every response received.	
<i>host</i>	IP address or IP alias of the host.	
<i>packet_size</i>	(Optional) Number of bytes in a packet, from 56 to 1472 bytes.	
<i>packet_count</i>	(Optional) Number of packets to send; valid values are from 0 to 2,147,483,647.	

## Defaults

The defaults for **ping -s** are as follows:

- *packet\_size* is 56 bytes.
- *packet\_count* is 2,147,483,647.

The defaults for **ping** with no arguments are as follows:

- *packet\_size* is 56 bytes.
- *packet\_count* is 5.
- Wait time is 2 seconds.
- Target IP address is none (this is a mandatory field).
- Source address is the host IP address.

## Command Types

Switch command.

## Command Modes

Normal or privileged.

## Usage Guidelines

General **ping** command guidelines are as follows:

- Press **Ctrl-C** to stop pinging.
- Continuous ping means that, unless you press **Ctrl-C** to stop pinging, packets are generated continually and dispatched to the host.
- The actual packet size is 8 bytes larger than the size you specify because the switch adds header information.
- Normal response—The normal response occurs in 1 to 10 seconds, depending on network traffic.

The guidelines for the **ping -s** command are as follows:

- The maximum waiting time before timing out is 2 seconds.
- A new ping packet is generated after 1 second of sending the previous packet, regardless of whether an echo-reply is received or not.
- If you do not enter a packet count, continuous ping results.
- Network or host unreachable—The switch found no corresponding entry in the route table.
- Destination does not respond—If the host does not respond, a “no answer from host” appears in 2 seconds.
- Destination unreachable—The gateway for this destination indicates that the destination is unreachable.

The guidelines for the **ping** command without arguments are as follows:

- The **ping host** command is accepted in normal mode only. The parameters take the default values automatically.
- The target IP address is a mandatory field to be entered.
- The maximum waiting time is configurable.
- A new ping packet is generated only when an echo-reply is received.
- If you enter a packet count of 0, this results in continuous ping.
- Returns output only when a response is received or you press **Return**.
- Available in privileged mode only.
- When configuring ping, you must either press **Return** or enter a response. Valid responses and appropriate values are as follows:
  - Target IP address: IP address or host name of the destination node you plan to ping.
  - Number of Packets: Number of ping packets to be sent to the destination address; valid values are from 0 to 2,147,483,647 (0 specifies continuous ping).
  - Datagram size: Size of the ping packet; valid values are from 56 to 1472 bytes.
  - Timeout in seconds: Timeout interval; valid values are from 0 to 3600 seconds.
  - Source IP Address [(default)]: IP address or IP alias of the source.

## Examples

This example shows how to ping a host with IP alias elvis a single time:

```
Console> ping elvis
!!!!

-----172.20.52.19 PING Statistics-----
5 packets transmitted, 5 packets received, 0% packet loss
round-trip (ms) min/avg/max = 1/1/1
Console>
```

This example shows how to ping a host with IP alias elvis once per second until you press **Ctrl-C** to stop pinging:

```
Console> ping -s elvis
ping elvis: 56 data bytes
64 bytes from elvis: icmp_seq=0. time=11 ms
64 bytes from elvis: icmp_seq=1. time=8 ms
64 bytes from elvis: icmp_seq=2. time=8 ms
64 bytes from elvis: icmp_seq=3. time=7 ms
```

```
64 bytes from elvis: icmp_seq=4. time=11 ms
64 bytes from elvis: icmp_seq=5. time=7 ms
64 bytes from elvis: icmp_seq=6. time=7 ms
^C

----elvis PING Statistics----
7 packets transmitted, 7 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 7/8/11
Console>
```

This example shows how to configure ping:

```
Console> (enable) ping

Target IP Address []: 172.20.52.19
Number of Packets [5]: 6
Datagram Size [56]: 75
Timeout in seconds [2]: 1
Source IP Address [172.20.52.18]:
!!!!!!

----172.20.52.19 PING Statistics----
6 packets transmitted, 6 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 1/1/1
Console> (enable)
```

---

**Related Commands**

[set interface](#)  
[set ip route](#)  
[show interface](#)  
[show ip route](#)

# pwd

Use the **pwd** command to show the current setting of the **cd** command.

**pwd** *[[m/]device:]*

<b>Syntax Description</b>	<i>m/</i> (Optional) Module number of the supervisor engine containing the Flash device.
	<i>device:</i> (Optional) Device where the Flash resides.
<b>Defaults</b>	If no module number or device is specified, <b>pwd</b> defaults to the first module of the active device.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	A colon (:) is required after the specified device.
<b>Examples</b>	<p>This example shows how to use the <b>pwd</b> command to display the current listing of the <b>cd</b> command:</p> <pre>Console&gt; cd slot0: Default flash device set to slot0. Console&gt; pwd slot0</pre>
<b>Related Commands</b>	<a href="#">cd</a>

# quit

Use the **quit** command to exit a CLI session.

## **quit**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** The **exit** and **logout** commands perform the same function as the **quit** command.

---

**Examples** This example shows how to quit a CLI session:

```
Console> quit
Connection closed by foreign host.
host%
```

# reconfirm vmps

Use the **reconfirm vmps** command to reconfirm the current dynamic port VLAN membership assignments with the VMPS server.

## reconfirm vmps

<b>Syntax Description</b>	This command has no arguments or keywords.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	VMPS database changes are not conveyed automatically to switches participating in VMPS. Therefore, after making a VMPS database change, use this command on VMPS clients and servers to apply the database changes.
<b>Examples</b>	<p>This example shows how to reconfirm the current dynamic port VLAN membership with VMPS:</p> <pre>Console&gt; (enable) <b>reconfirm vmps</b> reconfirm process started Use 'show dvlan statistics' to see reconfirm status Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">show dvlan statistics</a>

# reload

Use the **reload** command to force a module to accept a download through Service Control Point (SCP). This command resets the module and prompts you to initiate a download when the reset is complete.

**reload** *module*

<b>Syntax Description</b>	<i>module</i> Number of the module.
---------------------------	-------------------------------------

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	This command is used if a module is accidentally reset during the downloading of an image. After the reset, a normal download will not work. You must enter the <b>reload</b> <i>module</i> command followed by the <b>download</b> <i>host file [mod]</i> command.
-------------------------	---

<b>Examples</b>	This example shows how to reset module 3 and download the acpflash_1111.bbi file from the mercury host to the module:
-----------------	---

```

Console> (enable) reload 3
Console> (enable) download mercury acpflash_1111.bbi 3
This command will reset Module 3.
Download image acpflash_1111.bbi from mercury to Module 3 FLASH (y/n) [n]? y
/
Done. Finished network download. (1964012 bytes)
Console> (enable)

```

<b>Related Commands</b>	<a href="#">download</a>
-------------------------	--------------------------

# repeat

Use the **repeat** command to repeat a command.

**repeat** [*num* | *string*]

<b>Syntax Description</b>	<i>number</i> (Optional) Number of the command.
	<i>string</i> (Optional) Command string.
<b>Defaults</b>	If no argument is specified, the last command is repeated.
<b>Command Types</b>	ROM monitor command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	<p>The optional command number (from the history buffer list) or match string specifies which command to repeat.</p> <p>In the match string, the most recent command to begin with the specified string is executed again.</p> <p>If the string contains white space, you must use quotation marks.</p> <p>This command is usually aliased to the letter “r.”</p>
<b>Examples</b>	<p>These examples show how to use the <b>repeat</b> command. You use the <b>history</b> command to display the list of previously entered commands:</p> <pre>rommon 22 &gt; history 8  dir 9  dir bootflash: 10 dis 11 dis 0xa0001000 12 dis 0xbe000000 13 history 14 meminfo 15 meminfo -l 16 meminfo 17 meminfo -l 18 meninfo 19 meminfo 20 meminfo -l 21 meminfo -l 22 history rommon 23 &gt; repeat dir dir bootflash:       File size      Checksum  File name       1973032 bytes (0x1e1b28)  0xdadf5e24  llue rommon 24 &gt; repeat</pre>

repeat

```
dir bootflash:
      File size      Checksum  File name
  1973032 bytes (0x1e1b28)  0xdadf5e24  llue
rommon 25 > repeat 15
meminfo -l

Main memory size: 16 MB.
Packet memory size: 0 MB
Main memory size: 0x1000000
Available main memory starts at 0xa000e000, size 0xff2000
NVRAM size: 0x20000

Parity Map for the DRAM Banks
Socket 0 in Bank 0 Has No Parity
Socket 1 in Bank 0 Has No Parity
Socket 0 in Bank 1 Has No Parity
Socket 1 in Bank 1 Has No Parity
=====
```

## reset—ROM monitor

Use the **reset** ROM monitor command to perform a soft reset of the switch.

**reset** [-s]

<b>Syntax Description</b>	<b>-s</b> (Optional) Resets the entire switch.
<b>Defaults</b>	The default Flash device is slot0.
<b>Command Types</b>	ROM monitor command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	This command will not boot the MSFC if the PFC is not present in the Catalyst 6500 series switch.
<b>Examples</b>	<p>This example shows how to use the <b>reset</b> command:</p> <pre>rommon 26 &gt; <b>reset</b>  System Bootstrap, Version 3.1(1.69) Copyright (c) 1994-1997 by cisco Systems, Inc. Supervisor processor with 16384 Kbytes of main memory  rommon 1 &gt; =====</pre>

## reset—switch

Use the **reset** command to restart the system or an individual module, schedule a system reset, or cancel a scheduled reset.

**reset** [*mod* | **system** | **mindown**]

**reset** [**mindown**] **at** {*hh:mm*} [*mm/dd*] [*reason*]

**reset** [**mindown**] **in** [*hh:*] {*mm*} [*reason*]

**reset** [**cancel**]

**reset** {*mod*} [*bootdevice*[,*bootdevice*]]

Syntax Description		
<i>mod</i>	(Optional) Number of the module to be restarted.	
<b>system</b>	(Optional) Resets the system.	
<b>mindown</b>	(Optional) Performs a reset as part of a minimal downtime software upgrade in a system with a redundant supervisor engine.	
<b>at</b>	Schedules a system reset at a specific future time.	
<i>hh:mm</i>	Hour and minute of the scheduled reset.	
<i>mm/dd</i>	(Optional) Month and day of the scheduled reset.	
<i>reason</i>	(Optional) Reason for the reset.	
<b>in</b>	Schedules a system reset in a specific time.	
<i>hh</i>	(Optional) Number of hours into the future to reset the switch.	
<i>mm</i>	Number of minutes into the future to reset the switch.	
<b>cancel</b>	(Optional) Cancels the scheduled reset.	
<i>mod</i>	Number of the Network Analysis Module (NAM) or Intrusion Detection System Module (IDSM).	
<i>bootdevice</i>	(Optional) Boot device identification; for format guidelines, see the “Usage Guidelines” section.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not specify a module number (either a switching module or the active supervisor engine module), the command resets the entire system.

You can use the **reset** *mod* command to switch to the redundant supervisor engine, where *mod* is the module number of the active supervisor engine.

You can use the **reset mindown** command to reset the switch as part of a minimal downtime software upgrade in a system with a redundant supervisor engine. For complete information on performing a minimal downtime software upgrade, refer to the *Catalyst 6500 Series Software Configuration Guide* for your switch.



### Caution

If you make configuration changes after entering the **reset mindown** command but before the active supervisor engine resets, the changes are not saved. Input from the CLI is still accepted by the switch while the redundant supervisor engine is reset. Changes that you make to the configuration between the time when you enter the **reset mindown** command and the time when the supervisor engine comes online running the new software image are not saved or synchronized with the redundant supervisor engine.

If you reset an intelligent module (such as the Catalyst 6500 series MSM or MSFC), both the module hardware and software are completely reset.

When entering the *bootdevice*, use the format *device[:device\_qualifier]* where:

- *device* = **pcmcia**, **hdd**, **network**
- *device\_qualifier hdd* = number from 1 to 99
- **pcmcia** = slot0 or slot1

### Examples

This example shows how to reset the supervisor engine on a Catalyst 6500 series switch with redundant supervisor engines:

```
Console> (enable) reset 1
This command will force a switch-over to the standby supervisor module
and disconnect your telnet session.
Do you want to continue (y/n) [n]? y
Connection closed by foreign host.
host%
```

This example shows how to reset module 4:

```
Console> (enable) reset 4
This command will reset module 4 and may disconnect your telnet session.
Do you want to continue (y/n) [n]? y
Resetting module 4...
Console> (enable)
```

This example shows how to schedule a system reset for a specific future time:

```
Console> (enable) reset at 20:00
Reset scheduled at 20:00:00, Wed Mar 15 2000.
Proceed with scheduled reset? (y/n) [n]? y
Reset scheduled for 20:00:00, Wed Mar 15 2000 (in 0 day 5 hours 40 minutes).
Console> (enable)
```

This example shows how to schedule a reset for a specific future time and include a reason for the reset:

```
Console> (enable) reset at 23:00 3/15 Software upgrade to 6.1(1).
Reset scheduled at 23:00:00, Wed Mar 15 2000.
Reset reason: Software upgrade to 6.1(1).
Proceed with scheduled reset? (y/n) [n]? y
Reset scheduled for 23:00:00, Wed Mar 15 2000 (in 0 day 8 hours 39 minutes).
Console> (enable)
```

This example shows how to schedule a reset with minimum downtime for a specific future time and include a reason for the reset:

```
Console> (enable) reset mindown at 23:00 3/15 Software upgrade to 6.1(1).  
Reset scheduled at 23:00:00, Wed Mar 15 2000.  
Reset reason: Software upgrade to 6.1(1).  
Proceed with scheduled reset? (y/n) [n]? y  
Reset mindown scheduled for 23:00:00, Wed Mar 15 2000 (in 0 day 8 hours 39 minutes).  
Console> (enable)
```

This example shows how to schedule a reset after a specified time:

```
Console> (enable) reset in 5:20 Configuration update  
Reset scheduled in 5 hours 20 minutes.  
Reset reason: Configuration update  
Proceed with scheduled reset? (y/n) [n]? y  
Reset scheduled for 19:56:01, Wed Mar 15 2000 (in 5 hours 20 minutes).  
Reset reason: Configuration update  
Console> (enable)
```

This example shows how to cancel a scheduled reset:

```
Console> (enable) reset cancel  
Reset cancelled.  
Console> (enable)
```

---

**Related Commands**

[commit](#)  
[show reset](#)

# restore counters

Use the **restore counters** command to restore MAC and port counters.

**restore counters** [**all** | *mod/ports*]

<b>Syntax Description</b>	<b>all</b> (Optional) Specifies all ports.
	<i>mod/ports</i> (Optional) Number of the module and the ports on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not specify a range of ports to be restored, then all ports on the switch are restored.

**Examples** This example shows how to restore MAC and port counters:

```

Console> (enable) restore counters all
This command will restore all counter values reported by the CLI to the hardware counter values.
Do you want to continue (y/n) [n]? y
MAC and Port counters restored.
Console> (enable)

```

**Related Commands** [clear counters](#)  
[show port counters](#)

# rollback

Use the **rollback** command to clear changes made to the ACL edit buffer since its last save. The ACL is rolled back to its state when you last entered the **commit** command.

```
rollback qos acl {acl_name | all}
```

```
rollback security acl {acl_name | all | adjacency}
```

Syntax Description		
	<b>qos acl</b>	Specifies QoS ACEs.
	<i>acl_name</i>	Name that identifies the VACL whose ACEs are to be affected.
	<b>all</b>	Rolls back all ACLs.
	<b>security acl</b>	Specifies security ACEs.
	<b>adjacency</b>	Rolls back all adjacency tables.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to clear the edit buffer of a specific QoS ACL:

```
Console> (enable) rollback qos acl ip-8-1
Rollback for QoS ACL ip-8-1 is successful.
Console> (enable)
```

This example shows how to clear the edit buffer of a specific security ACL:

```
Console> (enable) rollback security acl IPACL1
IPACL1 editbuffer modifications cleared.
Console> (enable)
```

**Related Commands** [commit](#)  
[show qos acl info](#)

# session

Use the **session** command to open a session with a module (for example, the MSM, NAM, or ATM). This command allows you to use the module-specific CLI.

**session** *mod*

---

## Syntax Description

<i>mod</i>	Number of the module.
------------	-----------------------

---



---

## Defaults

This command has no default settings.

---

## Command Types

Switch command.

---

## Command Modes

Privileged.

---

## Usage Guidelines

After you enter this command, the system responds with the Enter Password: prompt, if one is configured on the module.

To end the session, enter the **quit** command.

Use the **session** command to toggle between router and switch sessions.

For information on ATM commands, refer to the *ATM Software Configuration Guide and Command Reference for the Catalyst 5000 Family and 6500 Series Switches*.

For information on NAM commands, refer to the *Catalyst 6000 Network Analysis Module Installation and Configuration Note*.

---

## Examples

This example shows how to open a session with an MSM (module 4):

```
Console> session 4
Trying Router-4...
Connected to Router-4.
Escape character is '^]'.

Router>
```

---

## Related Commands

**quit**  
**switch console**

# set

Use the **set** command to display all of the ROM monitor variable names with their values.

**set**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** ROM monitor command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display all of the ROM monitor variable names with their values:

```
rommon 2 > set
PS1=rommon ! >
BOOT=
?=0
```

---

**Related Commands** [varname=](#)

# set accounting commands

Use the **set accounting commands** command to enable command event accounting on the switch.

```
set accounting commands enable { config | enable | all } [stop-only] { tacacs+ }
```

```
set accounting commands disable
```

Syntax Description		
<b>enable</b>	Enables the specified accounting method for commands.	
<b>config</b>	Permits accounting for configuration commands only.	
<b>enable</b>	Permits accounting for enable mode commands only.	
<b>all</b>	Permits accounting for all commands.	
<b>stop-only</b>	(Optional) Applies the accounting method at the command end.	
<b>tacacs+</b>	Specifies TACACS+ accounting for commands.	
<b>disable</b>	Disables accounting for commands.	

**Defaults** The default is accounting is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must configure the TACACS+ servers before you enable accounting.

**Examples** This example shows how to send records at the end of the event only using a TACACS+ server:

```
Console> (enable) set accounting commands enable config stop-only tacacs+
Accounting set to enable for commands-config events in stop-only mode.
Console> (enable)
```

**Related Commands**

- [set accounting connect](#)
- [set accounting exec](#)
- [set accounting suppress](#)
- [set accounting system](#)
- [set accounting update](#)
- [set tacacs server](#)
- [show accounting](#)

# set accounting connect

Use the **set accounting connect** command to enable accounting of outbound connection events on the switch.

```
set accounting connect enable {start-stop | stop-only} {tacacs+ | radius}
```

```
set accounting connect disable
```

<b>Syntax Description</b>	<b>enable</b> Enables the specified accounting method for connection events.
	<b>start-stop</b> Applies the accounting method at the start and stop of the connection event.
	<b>stop-only</b> Applies the accounting method at the end of the connection event.
	<b>tacacs+</b> Specifies TACACS+ accounting for connection events.
	<b>radius</b> Specifies RADIUS accounting for connection events.
	<b>disable</b> Disables accounting of connection events.

**Defaults** The default is accounting is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must configure the RADIUS or TACACS+ servers and shared secret keys before you enable accounting.

**Examples** This example shows how to enable accounting on Telnet and remote login sessions, generating records at stop only using a TACACS+ server:

```
Console> (enable) set accounting connect enable stop-only tacacs+
Accounting set to enable for connect events in stop-only mode..
Console> (enable)
```

**Related Commands**

- [set accounting commands](#)
- [set accounting exec](#)
- [set accounting suppress](#)
- [set accounting system](#)
- [set accounting update](#)
- [set radius key](#)
- [set radius server](#)
- [set tacacs key](#)
- [set tacacs server](#)
- [show accounting](#)

# set accounting exec

Use the **set accounting exec** command to enable accounting of normal login sessions on the switch.

```
set accounting exec enable {start-stop | stop-only} {tacacs+ | radius}
```

```
set accounting exec disable
```

Syntax Description		
<b>enable</b>	Enables the specified accounting method for normal login sessions.	
<b>start-stop</b>	Specifies the accounting method applies at the start and stop of the normal login sessions.	
<b>stop-only</b>	Specifies the accounting method applies at the end of the normal login sessions.	
<b>tacacs+</b>	Specifies TACACS+ accounting for normal login sessions.	
<b>radius</b>	Specifies RADIUS accounting for normal login sessions.	
<b>disable</b>	Disables accounting for normal login sessions.	

**Defaults** The default is accounting is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must configure the RADIUS or TACACS+ servers and shared secret keys before you enable accounting.

**Examples** This example shows how to enable accounting of normal login sessions, generating records at start and stop using a RADIUS server:

```
Console> (enable) set accounting exec enable start-stop radius
Accounting set to enable for exec events in start-stop mode.
Console> (enable)
```

This example shows how to enable accounting of normal login sessions, generating records at stop using a TACACS+ server:

```
Console> (enable) set accounting exec enable stop-only tacacs+
Accounting set to enable for exec events in stop-only mode.
Console> (enable)
```

**Related Commands**

- [set accounting commands](#)
- [set accounting connect](#)
- [set accounting suppress](#)

**set accounting system**  
**set accounting update**  
**set radius key**  
**set radius server**  
**set tacacs key**  
**set tacacs server**  
**show accounting**

# set accounting suppress

Use the **set accounting suppress** command to enable or disable suppression of accounting information for a user who has logged in without a username.

```
set accounting suppress null-username { enable | disable }
```

Syntax Description	Parameter	Description
	<b>null-username</b>	Specifies users must have a user ID.
	<b>enable</b>	Enables suppression for a specified user.
	<b>disable</b>	Disables suppression for a specified user.

**Defaults** The default is accounting is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must configure the TACACS+ servers before you enable accounting.

**Examples** This example shows how to suppress accounting information for users without a username:

```
Console> (enable) set accounting suppress null-username enable
Accounting will be suppressed for user with no username.
Console> (enable)
```

This example shows how to include users without the usernames' accounting event information:

```
Console> (enable) set accounting suppress null-username disable
Accounting will be not be suppressed for user with no username.
Console> (enable)
```

**Related Commands**

- [set accounting commands](#)
- [set accounting connect](#)
- [set accounting exec](#)
- [set accounting system](#)
- [set accounting update](#)
- [set tacacs server](#)
- [show accounting](#)

# set accounting system

Use the **set accounting system** command to enable accounting of system events on the switch.

```
set accounting system enable {start-stop | stop-only} {tacacs+ | radius}
```

```
set accounting system disable
```

Syntax Description	enable	Enables the specified accounting method for system events.
	<b>start-stop</b>	Specifies the accounting method applies at the start and stop of the system event.
	<b>stop-only</b>	Specifies the accounting method applies at the end of the system event.
	<b>tacacs+</b>	Specifies TACACS+ accounting for system events.
	<b>radius</b>	Specifies RADIUS accounting for system events.
	<b>disable</b>	Disables accounting for system events.

**Defaults** The default is accounting is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must configure the RADIUS or TACACS+ servers and shared secret keys before you enable accounting.

**Examples** This example shows how to enable accounting for system events, sending records only at the end of the event using a RADIUS server:

```
Console> (enable) set accounting system enable stop-only radius
Accounting set to enable for system events in start-stop mode..
Console> (enable)
```

This example shows how to enable accounting for system events, sending records only at the end of the event using a TACACS+ server:

```
Console> (enable) set accounting system enable stop-only tacacs+
Accounting set to enable for system events in start-stop mode..
Console> (enable)
```

---

**Related Commands**

[set accounting commands](#)  
[set accounting connect](#)  
[set accounting exec](#)  
[set accounting suppress](#)  
[set accounting update](#)  
[set radius key](#)  
[set radius server](#)  
[set tacacs key](#)  
[set tacacs server](#)  
[show accounting](#)

# set accounting update

Use the **set accounting update** command to configure the frequency of accounting updates.

```
set accounting update { new-info | { periodic [interval] } }
```

Syntax Description	new-info	Specifies an update when new information is available.
	periodic	Specifies an update on a periodic basis.
	<i>interval</i>	(Optional) Periodic update interval time; valid values are from 1 to 71582 minutes.

**Defaults** The default is accounting is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must configure the TACACS+ servers before you enable accounting.

**Examples** This example shows how to send accounting updates every 200 minutes:

```
Console> (enable) set accounting update periodic 200
Accounting updates will be periodic at 200 minute intervals.
Console> (enable)
```

This example shows how to send accounting updates only when there is new information:

```
Console> (enable) set accounting update new-info
Accounting updates will be sent on new information only.
Console> (enable)
```

**Related Commands**

- [set accounting commands](#)
- [set accounting connect](#)
- [set accounting exec](#)
- [set accounting suppress](#)
- [set accounting system](#)
- [set tacacs server](#)
- [show accounting](#)

# set aclmerge algo

Use the **set aclmerge algo** command to select the ACL merge algorithm.

```
set aclmerge algo {bdd | odm}
```

<b>Syntax Description</b>	<b>bdd</b> Specifies the ACL merge function based on binary decision diagram (BDD).
	<b>odm</b> Specifies the ACL merge function based on order dependent merge (ODM).
<b>Defaults</b>	The merge algorithm is ODM.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>If BDD is disabled, the merge algorithm can only be ODM. When BDD is enabled, you can choose either the BDD algorithm or the ODM algorithm. Use the <a href="#">set aclmerge bdd</a> command to enable or disable BDD.</p> <p>The ACL merge algorithm that you select is in effect for all new ACL merges. The ACLs already configured are not modified, and they use the ACL merge algorithm that was enabled when the ACLs were merged.</p>
<b>Examples</b>	<p>This example shows how to select ODM as the ACL merge algorithm:</p> <pre>Console&gt; (enable) set aclmerge algo odm Acl merge algorithm set to odm. Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">set aclmerge bdd</a> <a href="#">show aclmerge</a>

# set aclmerge bdd

Use the **set aclmerge bdd** command to enable or disable the binary decision diagram (BDD) ACL merge algorithm.

```
set aclmerge bdd {enable | disable}
```

Syntax Description	enable	enable
	enable	Enables the BDD-based ACL merge function.
	disable	Disables the BDD-based ACL merge function.

**Defaults** BDD is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you enable or disable BDD, the change takes effect when your system is restarted. BDD must be enabled in order to change the ACL merge algorithm. Enabling BDD on a supervisor engine with 64 MB of RAM could cause memory to run low. To avoid this situation, upgrade the memory or disable BDD.

**Examples** This example shows how to disable BDD:

```
Console> (enable) set aclmerge bdd disable
Bdd will be disabled on system restart.
Console> (enable)
```

This example shows how to enable BDD:

```
Console> (enable) set aclmerge bdd enable
Warning:enabling bdd on a supervisor with 64MB RAM
could cause memory to run low, to avoid this situation
please upgrade the memory or disable BDD.
```

```
Bdd will be enabled on system restart.
Console> (enable)
```

**Related Commands** [set aclmerge algo](#)  
[show aclmerge](#)

# set alias

Use the **set alias** command to define aliases (shorthand versions) of commands.

```
set alias name command [parameter] [parameter]
```

Syntax Description	
<i>name</i>	Alias being created.
<i>command</i>	Command for which the alias is being created.
<i>parameter</i>	(Optional) Parameters that apply to the command for which an alias is being created.

**Defaults** The default is no aliases are configured.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The name **all** cannot be defined as an alias. Reserved words cannot be defined as aliases. For additional information about the *parameter* value, see the specific command for information about applicable parameters.

**Examples** This example shows how to set the alias for the **clear arp** command as arpdel:

```
Console> (enable) set alias arpdel clear arp  
Command alias added.  
Console> (enable)
```

**Related Commands** [clear alias](#)  
[show alias](#)

# set arp

Use the **set arp** command to add IP address-to-MAC address mapping entries to the ARP table and to set the ARP aging time for the table.

```
set arp [dynamic | permanent | static] {ip_addr hw_addr}
```

```
set arp agingtime agingtime
```

<b>Syntax Description</b>	<b>dynamic</b>	(Optional) Specifies that entries are subject to ARP aging updates.
	<b>permanent</b>	(Optional) Specifies that permanent entries are stored in NVRAM until they are removed by the <b>clear arp</b> or <b>clear config</b> command.
	<b>static</b>	(Optional) Specifies that entries are not subject to ARP aging updates.
	<i>ip_addr</i>	IP address or IP alias to map to the specified MAC address.
	<i>hw_addr</i>	MAC address to map to the specified IP address or IP alias.
	<b>agingtime</b>	Sets the period of time after which an ARP entry is removed from the ARP table.
	<i>agingtime</i>	Number of seconds that entries will remain in the ARP table before being deleted; valid values are from 0 to 1,000,000 seconds. Setting this value to 0 disables aging.

**Defaults** The default is no ARP table entries exist; ARP aging is set to 1200 seconds.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When entering the *hw\_addr* value, use a 6-hexadecimal byte MAC address in canonical (00-11-22-33-44-55) or noncanonical (00:11:22:33:44:55) format.  
Static (nonpermanent) entries remain in the ARP table until you reset the active supervisor engine.

**Examples** This example shows how to configure a dynamic ARP entry mapping that will age out after the configured ARP aging time:

```
Console> (enable) set arp dynamic 198.133.219.232 00-00-0c-40-0f-bc
ARP entry added.
Console> (enable)
```

This example shows how to set the aging time for the ARP table to 1800 seconds:

```
Console> (enable) set arp agingtime 1800
ARP aging time set to 1800 seconds.
Console> (enable)
```

This example shows how to configure a permanent ARP entry, which will remain in the ARP cache after a system reset:

```
Console> (enable) set arp permanent 198.146.232.23 00-00-0c-30-0f-bc  
Permanent ARP entry added as  
198.146.232.23 at 00-00-0c-30-0f-bc on vlan 5  
Console> (enable)
```

This example shows how to configure a static ARP entry, which will be removed from the ARP cache after a system reset:

```
Console> (enable) set arp static 198.144.239.22 00-00-0c-50-0f-bc  
Static ARP entry added as  
198.144.239.22 at 00-00-0c-50-0f-bc on vlan 5  
Console> (enable)
```

---

**Related Commands**

[clear arp](#)  
[show arp](#)

# set authentication enable

Use the **set authentication enable** command to enable authentication using the TACACS+, RADIUS, or Kerberos server to determine if you have privileged access permission.

```
set authentication enable { radius | tacacs | kerberos } enable [console | telnet | http | all]
[primary]
```

```
set authentication enable { enable | disable } [console | telnet | http | all] [primary]
```

```
set authentication enable local { enable | disable } [console | telnet | http | all] [primary]
```

```
set authentication enable attempt count [console | telnet]
```

```
set authentication enable lockout time [console | telnet]
```

Syntax	Description
<b>radius</b>	Specifies RADIUS authentication for login.
<b>tacacs</b>	Specifies TACACS+ authentication for login.
<b>kerberos</b>	Specifies Kerberos authentication for login.
<b>enable</b>	Enables the specified authentication method for login.
<b>console</b>	(Optional) Specifies the authentication method for console sessions.
<b>telnet</b>	(Optional) Specifies the authentication method for Telnet sessions.
<b>http</b>	(Optional) Specifies the specified authentication method for HTTP sessions.
<b>all</b>	(Optional) Applies the authentication method to all session types.
<b>primary</b>	(Optional) Specifies the specified authentication method be tried first.
<b>disable</b>	Disables the specified authentication method for login.
<b>local</b>	Specifies local authentication for login.
attempt <i>count</i>	Specifies the number of connection attempts before initiating an error; valid values are <b>0</b> , from 3 to 10, and <b>0</b> to disable.
lockout <i>time</i>	Specifies the lockout timeout; valid values are from 30 to 600 seconds, and 0 to disable.

## Defaults

The default is local authentication is enabled for console and Telnet sessions. RADIUS, TACACS+, and Kerberos are disabled for all session types. If authentication is enabled, the default **attempt count** is 3.

<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	Use authentication configuration for both console and Telnet connection attempts unless you use the <b>console</b> or <b>telnet</b> keywords to specify the authentication methods for each connection type individually.
<b>Examples</b>	<p>This example shows how to use the TACACS+ server to determine if a user has privileged access permission:</p> <pre>Console&gt; (enable) <b>set authentication enable tacacs enable</b> tacacs enable authentication set to enable for console, telnet and http session. Console&gt; (enable)</pre> <p>This example shows how to use the local password to determine if the user has privileged access permission:</p> <pre>Console&gt; (enable) <b>set authentication enable local enable</b> local enable authentication set to enable for console, telnet and http session. Console&gt; (enable)</pre> <p>This example shows how to use the RADIUS server to determine if a user has privileged access permission for all session types:</p> <pre>Console&gt; (enable) <b>set authentication enable radius enable</b> radius enable authentication set to enable for console, telnet and http session. Console&gt; (enable)</pre> <p>This example shows how to use the TACACS+ server to determine if a user has privileged access permission for all session types:</p> <pre>Console&gt; (enable) <b>set authentication enable tacacs enable console</b> tacacs enable authentication set to enable for console session. Console&gt; (enable)</pre> <p>This example shows how to set the Kerberos server to be used first:</p> <pre>Console&gt; (enable) <b>set authentication enable kerberos enable primary</b> kerberos enable authentication set to enable for console, telnet and http session as primary authentication method. Console&gt; (enable)</pre> <p>This example shows how to limit enable mode login attempts:</p> <pre>Console&gt; (enable) <b>set authentication enable attempt 5</b> Enable mode authentication attempts for console and telnet logins set to 5. Console&gt; (enable)</pre> <p>This example shows how to set the enable mode lockout time for both console and Telnet connections:</p> <pre>Console&gt; (enable) <b>set authentication enable lockout 50</b> Enable mode lockout time for console and telnet logins set to 50. Console&gt; (enable)</pre>

■ set authentication enable

---

**Related Commands**

[set authentication login](#)  
[show authentication](#)

# set authentication login

Use the **set authentication login** command to enable TACACS+, RADIUS, or Kerberos as the authentication method for login.

```
set authentication login {radius | tacacs | kerberos} enable [console | telnet | http | all]
[primary]
```

```
set authentication login {radius | tacacs | kerberos} disable [console | telnet | http | all]
```

```
set authentication login {enable | disable} [console | telnet | http | all]
```

```
set authentication login local {enable | disable} [console | telnet | http | all]
```

```
set authentication login attempt count [console | telnet]
```

```
set authentication login lockout time [console | telnet]
```

Syntax Description		
<b>radius</b>	Specifies the use of the RADIUS server password to determine if you have access permission to the switch.	
<b>tacacs</b>	Specifies the use of the TACACS+ server password to determine if you have access permission to the switch.	
<b>kerberos</b>	Specifies the Kerberos server password to determine if you have access permission to the switch.	
<b>enable</b>	Enables the specified authentication method for login.	
<b>console</b>	(Optional) Specifies the authentication method for console sessions.	
<b>telnet</b>	(Optional) Specifies the authentication method for Telnet sessions.	
<b>http</b>	(Optional) Specifies the authentication method for HTTP sessions.	
<b>all</b>	(Optional) Specifies the authentication method for all session types.	
<b>primary</b>	(Optional) Specifies that the method specified is the primary authentication method for login.	
<b>disable</b>	Disables the specified authentication method for login.	
<b>local</b>	Specifies a local password to determine if you have access permission to the switch.	
<b>attempt count</b>	Specifies the number of login attempts before initiating an error; valid values are 0, from 3 to 10, and 0 to disable.	
<b>lockout time</b>	Specifies the lockout timeout; valid values are from 30 to 43200 seconds, and 0 to disable.	

**Defaults** The default is local authentication is the primary authentication method for login.

**Command Types** Switch command.

**Command Modes** Privileged.

---

**Usage Guidelines**

This command allows you to choose the authentication method for the web interface. If you configure the authentication method for the HTTP session as RADIUS, then the username or password is validated using the RADIUS protocol, and TACACS+ and Kerberos authentication is set to disable for the HTTP sessions. By default, the HTTP login is validated using the local login password.

You can specify the authentication method for **console**, **telnet**, **http**, or **all** by entering the **console**, **telnet**, **http**, or **all** keywords. If you do not specify **console**, **telnet**, **http**, or **all**, the authentication method default is for **all** sessions.

---

**Examples**

This example shows how to disable TACACS+ authentication access for Telnet sessions:

```
Console> (enable) set authentication login tacacs disable telnet
tacacs login authentication set to disable for the telnet sessions.
Console> (enable)
```

This example shows how to disable RADIUS authentication access for console sessions:

```
Console> (enable) set authentication login radius disable console
radius login authentication set to disable for the console sessions.
Console> (enable)
```

This example shows how to disable Kerberos authentication access for Telnet sessions:

```
Console> (enable) set authentication login kerberos disable telnet
kerberos login authentication set to disable for the telnet sessions.
Console> (enable)
```

This example shows how to set TACACS+ authentication access as the primary method for HTTP sessions:

```
Console> (enable) set authentication login tacacs enable http primary
tacacs login authentication set to enable for HTTP sessions as primary authentication
method.
Console> (enable)
```

This example shows how to limit login attempts:

```
Console> (enable) set authentication login attempt 5
Login authentication attempts for console and telnet logins set to 5.
Console> (enable)
```

This example shows how to set the lockout time for both console and Telnet connections:

```
Console> (enable) set authentication login lockout 50
Login lockout time for console and telnet logins set to 50.
Console> (enable)
```

---

**Related Commands**

[set authentication enable](#)  
[show authentication](#)

# set authorization commands

Use the **set authorization commands** command to enable authorization of command events on the switch.

```
set authorization commands enable {config | enable | all} {option} {fallbackoption}
[console | telnet | both]
```

```
set authorization commands disable [console | telnet | both]
```

Syntax Description		
<b>enable</b>	Enables the specified authorization method for commands.	
<b>config</b>	Permits authorization for configuration commands only.	
<b>enable</b>	Permits authorization for enable mode commands only.	
<b>all</b>	Permits authorization for all commands.	
<i>option</i>	Switch response to an authorization request; valid values are <b>tacacs+</b> , <b>if-authenticated</b> , and <b>none</b> . See the “Usage Guidelines” section for valid value definitions.	
<i>fallbackoption</i>	Switch fallback response to an authorization request if the TACACS+ server is down or not responding; valid values are <b>tacacs+</b> , <b>deny</b> , <b>if-authenticated</b> , and <b>none</b> . See the “Usage Guidelines” section for valid value definitions.	
<b>disable</b>	Disables authorization of command events.	
<b>console</b>	(Optional) Specifies the authorization method for console sessions.	
<b>telnet</b>	(Optional) Specifies the authorization method for Telnet sessions.	
<b>both</b>	(Optional) Specifies the authorization method for both console and Telnet sessions.	

**Defaults** The default is authorization is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you define the *option* and *fallbackoption* values, the following occurs:

- **tacacs+** specifies the TACACS+ authorization method.
- **deny** does not let you proceed.
- **if-authenticated** allows you to proceed with your action if you have been authenticated.
- **none** allows you to proceed without further authorization in case the TACACS+ server does not respond.

---

**Examples**

This example shows how to enable authorization for all commands with the **if-authenticated** *option* and **none fallbackoption**:

```
Console> (enable) set authorization commands enable all if-authenticated none  
Successfully enabled commands authorization.  
Console> (enable)
```

This example shows how to disable command authorization:

```
Console> (enable) set authorization commands disable  
Successfully disabled commands authorization.  
Console> (enable)
```

---

**Related Commands**

[set authorization enable](#)  
[set authorization exec](#)  
[show authorization](#)

# set authorization enable

Use the **set authorization enable** command to enable authorization of privileged mode sessions on the switch.

```
set authorization enable enable {option} {fallbackoption} [console | telnet | both]
```

```
set authorization enable disable [console | telnet | both]
```

Syntax Description	enable	Enables the specified authorization method.
	<i>option</i>	Switch response to an authorization request; valid values are <b>tacacs+</b> , <b>if-authenticated</b> , and <b>none</b> . See the “Usage Guidelines” section for valid value definitions.
	<i>fallbackoption</i>	Switch fallback response to an authorization request if the TACACS+ server is down or not responding; valid values are <b>tacacs+</b> , <b>deny</b> , <b>if-authenticated</b> , and <b>none</b> . See the “Usage Guidelines” section for valid value definitions.
	<b>disable</b>	Disables the authorization method.
	<b>console</b>	(Optional) Specifies the authorization method for console sessions.
	<b>telnet</b>	(Optional) Specifies the authorization method for Telnet sessions.
	<b>both</b>	(Optional) Specifies the authorization method for both console and Telnet sessions.

**Defaults** The default is authorization is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you define the *option* and *fallbackoption* values, the following occurs:

- **tacacs+** specifies the TACACS+ authorization method.
- **deny** does not let you proceed.
- **if-authenticated** allows you to proceed with your action if you have authentication.
- **none** allows you to proceed without further authorization in case the TACACS+ server does not respond.

---

**Examples**

This example shows how to enable authorization of configuration commands in enable, privileged login mode, sessions:

```
Console> (enable) set authorization enable enable if-authenticated none  
Successfully enabled enable authorization.  
Console> (enable)
```

This example shows how to disable enable mode authorization:

```
Console> (enable) set authorization enable disable  
Successfully disabled enable authorization.  
Console> (enable)
```

---

**Related Commands**

[set authorization commands](#)  
[set authorization exec](#)  
[show authorization](#)

## set authorization exec

Use the **set authorization exec** command to enable authorization of exec, normal login mode, session events on the switch.

```
set authorization exec enable {option} {fallbackoption} [console | telnet | both]
```

```
set authorization exec disable [console | telnet | both]
```

Syntax Description	enable	Enables the specified authorization method.
	<i>option</i>	Switch response to an authorization request; valid values are <b>tacacs+</b> , <b>if-authenticated</b> , and <b>none</b> . See the “Usage Guidelines” section for valid value definitions.
	<i>fallbackoption</i>	Switch fallback response to an authorization request if the TACACS+ server is down or not responding; valid values are <b>tacacs+</b> , <b>deny</b> , <b>if-authenticated</b> , and <b>none</b> . See the “Usage Guidelines” section for valid value definitions.
	<b>disable</b>	Disables authorization method.
	<b>console</b>	(Optional) Specifies the authorization method for console sessions.
	<b>telnet</b>	(Optional) Specifies the authorization method for Telnet sessions.
	<b>both</b>	(Optional) Specifies the authorization method for both console and Telnet sessions.

**Defaults** The default is authorization is denied.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you define the *option* and *fallbackoption* values, the following occurs:

- **tacacs+** specifies the TACACS+ authorization method.
- **deny** fails authorization if the TACACS+ server does not respond.
- **if-authenticated** allows you to proceed with your action if the TACACS+ server does not respond and you have authentication.
- **none** allows you to proceed without further authorization if the TACACS+ server does not respond.

---

**Examples**

This example shows how to enable authorization of configuration commands in exec, normal login mode, sessions:

```
Console> (enable) set authorization exec enable if-authenticated none  
Successfully enabled exec authorization.  
Console> (enable)
```

This example shows how to disable exec mode authorization:

```
Console> (enable) set authorization exec disable  
Successfully disabled exec authorization.  
Console> (enable)
```

---

**Related Commands**

[set authorization commands](#)  
[set authorization enable](#)  
[show authorization](#)

# set banner lcd

Use the **set banner lcd** command to configure the Catalyst 6500 series Switch Fabric Module LCD user banner.

```
set banner lcd c [text] c
```

---

**Syntax Description**

<i>c</i>	Delimiting character used to begin and end the message.
<i>text</i>	(Optional) Message of the day.

---

---

**Defaults**

This command has no default settings.

---

**Command Types**

Switch command.

---

**Command Modes**

Privileged.

---

**Usage Guidelines**

The user banner can not contain more than 800 characters, including tabs. Tabs display as eight characters but use only one character of memory.

After you configure the user banner, it is sent to all Catalyst 6500 series Switch Fabric Modules in the switch.

The Switch Fabric Module front panel has a 2 line by 20 character LCD display. To see the LCD user banner, push the SELECT button on the front panel and scroll to the USER CONFIGURATION option. Push the NEXT button to see the user banner.

To clear the LCD user banner, use the **set banner lcd cc** command.

---

**Examples**

This example shows how to set the Catalyst 6500 series Switch Fabric Module LCD user banner:

```
Console> (enable) set banner lcd &HelloWorld!&  
LCD banner set  
Console> (enable)
```

---

**Related Commands**

[set banner motd](#)  
[set banner telnet](#)  
[show banner](#)

# set banner motd

Use the **set banner motd** command to program an MOTD banner to appear before session login.

```
set banner motd c [text] c
```

<b>Syntax Description</b>	<i>c</i>	Delimiting character used to begin and end the message.
	<i>text</i>	(Optional) Message of the day.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The banner may contain no more than 3,070 characters, including tabs. Tabs display as eight characters but take only one character of memory.

You can use either the **clear banner motd** command or the **set banner motd cc** command to clear the message-of-the-day banner.

**Examples** This example shows how to set the message of the day using the pound sign (#) as the delimiting character:

```
Console> (enable) set banner motd #
** System upgrade at 6:00am Tuesday.
** Please log out before leaving on Monday. #
MOTD banner set.
Console> (enable)
```

This example shows how to clear the message of the day:

```
Console> (enable) set banner motd ##
MOTD banner cleared.
Console> (enable)
```

**Related Commands**

- [clear banner motd](#)
- [set banner lcd](#)
- [set banner telnet](#)
- [show banner](#)

# set banner telnet

Use the **set banner telnet** command to display or suppress the “Cisco Systems Console” Telnet banner message.

**set banner telnet {enable | disable}**

Syntax Description	<b>enable</b>	Displays the Telnet banner.
	<b>disable</b>	Suppresses the Telnet banner.

**Defaults** The “Cisco Systems Console” Telnet banner message is enabled.

**Command Types** Switch.

**Command Modes** Privileged.

**Examples** This example shows how to display the Telnet banner message:

```
Console> (enable) set banner telnet enable  
Cisco Systems Console banner will be printed at telnet.  
Console> (enable)
```

This example shows how to suppress the Telnet banner message:

```
Console> (enable) set banner telnet disable  
Cisco Systems Console banner will not be printed at telnet.  
Console> (enable)
```

**Related Commands**

- [set banner lcd](#)
- [set banner motd](#)
- [show banner](#)

# set boot auto-config

Use the **set boot auto-config** command to specify one or more configuration files to use to configure the switch at bootup. The list of configuration files is stored in the CONFIG\_FILE environment variable.

**set boot auto-config** *device:filename* [*;*device:filename...**] [*mod*]

Syntax Description	
<i>device:</i>	Device where the startup configuration file resides.
<i>filename</i>	Name of the startup configuration file.
<i>mod</i>	(Optional) Module number of the supervisor engine containing the Flash device.

**Defaults** The default CONFIG\_FILE is slot0:switch.cfg.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **set boot auto-config** command always overwrites the existing CONFIG\_FILE environment variable settings (you cannot prepend or append a file to the variable contents).

If you specify multiple configuration files, you must separate the files with a semicolon (;).

To set the recurrence on other supervisor engines and switches, use the **set boot config-register auto-config** command.

**Examples** This example shows how to specify a single configuration file environment variable:

```
Console> (enable) set boot auto-config slot0:cfgfile2
CONFIG_FILE variable = slot0:cfgfile2
WARNING: nvram configuration may be lost during next bootup,
        and re-configured using the file(s) specified.
Console> (enable)
```

This example shows how to specify multiple configuration file environment variables:

```
Console> (enable) set boot auto-config slot0:cfgfile1;slot0:cfgfile2
CONFIG_FILE variable = slot0:cfgfile1;slot0:cfgfile2
WARNING: nvram configuration may be lost during next bootup,
        and re-configured using the file(s) specified.
Console> (enable)
```

**Related Commands**

- [set boot config-register](#)
- [set boot system flash](#)
- [show boot](#)

# set boot config-register

Use the **set boot config-register** command to configure the boot configuration register value.

```
set boot config-register 0xvalue [mod]
```

```
set boot config-register baud {1200 | 2400 | 4800 | 9600 | 19200 | 38400} [mod]
```

```
set boot config-register ignore-config {enable | disable} [mod]
```

```
set boot config-register boot {rommon | bootflash | system} [mod]
```

Syntax	Description
<b>0xvalue</b>	Sets the 16-bit configuration register value.
<i>mod</i>	(Optional) Module number of the supervisor engine containing the Flash device.
<b>baud 1200   2400   4800   9600   19200   38400</b>	Specifies the console baud rate.
<b>ignore-config</b>	Sets the ignore-config feature.
<b>enable</b>	Enables the specified feature.
<b>disable</b>	Disables the specified feature.
<b>boot</b>	Specifies the boot image to use on the next restart.
<b>rommon</b>	Specifies booting from the ROM monitor.
<b>bootflash</b>	Specifies booting from the bootflash.
<b>system</b>	Specifies booting from the system.

## Defaults

The defaults are as follows:

- Configuration register value is 0x10F, which causes the switch to boot from what is specified by the BOOT environment variable.
- Baud rate is set to 9600.
- **ignore-config** parameter is disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

We recommend that you use only the **rommon** and **system** options with the **set boot config-register boot** command.

Each time you enter one of the **set boot config-register** commands, the system displays all current configuration-register information (the equivalent of entering the **show boot** command).

The baud rate specified in the configuration register is used by the ROM monitor only and is different from the baud rate specified by the **set system baud** command.

When you enable the **ignore-config** feature, the system software ignores the configuration. Enabling the **ignore-config** parameter is the same as entering the **clear config all** command; that is, it clears the entire configuration stored in NVRAM the next time the switch is restarted.

## Examples

This example shows how to specify booting from the ROM monitor:

```
Console> (enable) set boot config-register boot rommon
Configuration register is 0x100
ignore-config: disabled
console baud: 9600
boot: the ROM monitor
Console> (enable)
```

This example shows how to specify the default 16-bit configuration register value:

```
Console> (enable) set boot config-register 0x12f
Configuration register is 0x12f
break: disabled
ignore-config: disabled
console baud: 9600
boot: image specified by the boot system commands
Console> (enable)
```

This example shows how to change the ROM monitor baud rate to 4800:

```
Console> (enable) set boot config-register baud 4800
Configuration register is 0x90f
ignore-config: disabled
console baud: 4800
boot: image specified by the boot system commands
Console> (enable)
```

This example shows how to ignore the configuration information stored in NVRAM the next time the switch is restarted:

```
Console> (enable) set boot config-register ignore-config enable
Configuration register is 0x94f
ignore-config: enabled
console baud: 4800
boot: image specified by the boot system commands
Console> (enable)
```

This example shows how to specify rommon as the boot image to use on the next restart:

```
Console> (enable) set boot config-register boot rommon
Configuration register is 0x100
ignore-config: disabled
console baud: 9600
boot: the ROM monitor
Console> (enable)
```

---

**Related Commands**

**copy**  
**set boot auto-config**  
**set boot system flash**  
**set config acl nvram**  
**show boot**  
**show config**

## set boot config-register auto-config

Use the **set boot config-register auto-config** command to configure auto-config file dispensation.

**set boot config-register auto-config** { **recurring** | **non-recurring** } [*mod*]

**set boot config-register auto-config** { **overwrite** | **append** }

**set boot config-register auto-config sync** { **enable** | **disable** }

Syntax Description		
<b>recurring</b>	Sets auto-config to recurring and specify the switch retains the contents of the CONFIG_FILE environment variable after the switch is reset or power cycled and configured.	
<b>non-recurring</b>	Sets auto-config to nonrecurring and cause the switch to clear the contents of the CONFIG_FILE environment variable after the switch is reset or power cycled and before the switch is configured.	
<i>mod</i>	(Optional) Module number of the supervisor engine containing the Flash device.	
<b>overwrite</b>	Causes the auto-config file to overwrite the NVRAM configuration.	
<b>append</b>	Causes the auto-config file to append to the file currently in the NVRAM configuration.	
<b>sync enable</b>   <b>disable</b>	Enables or disables synchronization of the auto-config file.	

### Defaults

The defaults are as follows:

- **overwrite**
- **non-recurring**
- **sync is disable**

### Command Types

Switch command.

### Command Modes

Privileged.

### Usage Guidelines

The **auto-config overwrite** command clears the NVRAM configuration before executing the Flash configuration file. The **auto-config append** command executes the Flash configuration file before clearing the NVRAM configuration.

If you delete the auto-config Flash files on the supervisor engine, the files will also be deleted on the standby supervisor engine.

If you enter the **sync enable** keywords, this enables synchronization to force the configuration files to synchronize automatically to the redundant supervisor engine. The files are kept consistent with what is on the active supervisor engine.

If you use the **set boot auto-config bootflash:switch.cfg** with the overwrite option, you must use the **copy config bootflash:switch.cfg** command to save the switch configuration to the auto-config file.

If you use the **set boot auto-config bootflash:switchapp.cfg** with the append option, you can use the **copy acl config bootflash:switchapp.cfg** command to save the switch configuration to the auto-config file.

If the ACL configuration location is set to Flash memory, the following message is displayed after every commit operation for either security or QoS. Use the **copy** command to save your ACL configuration to Flash memory. If you reset the system and you made one or more commits but did not copy commands to one of the files specified in the CONFIG\_FILE variable, the following message displays:

```
Warning: System ACL configuration has been modified but not saved to Flash.
```

The files used with the **recurring** and **non-recurring** options are those specified by the CONFIG\_FILE environment variable.

## Examples

This example shows how to specify the ACL configuration Flash file at system startup:

```
Console> (enable) set boot auto-config bootflash:switchapp.cfg
Console> (enable) set boot config-register auto-config recurring
Console> (enable)
```

This example shows how to ignore the configuration information stored in NVRAM the next time the switch is restarted:

```
Console> (enable) set boot config-register auto-config non-recurring
Configuration register is 0x2102
ignore-config: disabled
auto-config: non-recurring, overwrite, auto-sync disabled
console baud: 9600
boot: image specified by the boot system commands
Console> (enable)
```

This example shows how to append the auto-config file to the file currently in the NVRAM configuration:

```
Console> (enable) set boot config-register auto-config append
Configuration register is 0x2102
ignore-config: disabled
auto-config: non-recurring, append, auto-sync disabled
console baud: 9600
boot: image specified by the boot system commands
Console> (enable)
```

This example shows how to use the auto-config overwrite option to save the ACL configuration to a bootflash file:

```
Console> (enable) copy config bootflash: switch.cfg
Console> (enable) set boot auto-config bootflash:switch.cfg
Console> (enable) set boot config-register auto-config overwrite
Console> (enable)
```



### Caution

The following two examples assume that you have saved the ACL configuration to the bootflash:switchapp.cfg file.

This example shows how to enable synchronization of the auto-config file:

```
Console> (enable) set boot config-register auto-config sync enable  
Configuration register is 0x2102  
ignore-config: disabled  
auto-config: non-recurring, append, auto-sync enabled  
console baud: 9600  
boot: image specified by the boot system commands  
Console> (enable)
```

This example shows how to disable synchronization of the auto-config file:

```
Console> (enable) set boot config-register auto-config sync disable  
Configuration register is 0x2102  
ignore-config: disabled  
auto-config: non-recurring, append, auto-sync disabled  
console baud: 9600  
boot: image specified by the boot system commands  
Console> (enable)
```

---

**Related Commands**

[set boot config-register](#)  
[set boot system flash](#)  
[show boot](#)

## set boot device

Use the **set boot device** command to set the Network Analysis Module (NAM) or Intrusion Detection System (IDS) boot environment.

```
set boot device bootseq [,bootseq] mod [mem-test-full]
```

<b>Syntax Description</b>	<i>bootseq</i>	Device where the startup configuration file resides; see the “Usage Guidelines” section for format guidelines. The second <i>bootseq</i> is optional.
	<i>mod</i>	Number of the module containing the Flash device.
	<b>mem-test-full</b>	Specifies a full memory test.

**Defaults** The default is a partial memory test.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you enter the **set boot device** command, the existing boot string in the supervisor engine NVRAM is always overwritten.

When entering the *bootseq*, use the format *bootdevice*[:*bootdevice-qualifier*] where:

- *bootdevice* is the device where the startup configuration file resides; valid values are **pcmcia**, **hdd**, or **network**.
- *bootdevice-qualifier* is the name of the startup configuration file; valid values for **hdd** are from 1 to 99, and valid values for **pcmcia** are slot0 or slot1.

The colon between *bootdevice* and *bootdevice-qualifier* is required.

You can enter multiple *bootseqs* by separating each entry with a comma; 15 is the maximum number of boot sequences you can enter.

The supervisor engine does not validate the boot device you specify, but stores the boot device list in NVRAM.

This command is supported by the NAM or IDS only.

**Examples** This example shows how to specify the boot environment to boot to the maintenance partition of the NAM on module 2:

```
Console> (enable) set boot device hdd:2 2
Device BOOT variable = hdd:2
Warning: Device list is not verified but still set in the boot string.
Console> (enable)
```

This example shows how to specify multiple boot environments on module 5:

```
Console> (enable) set boot device hdd,hdd:5,pcmcia:slot0,network,hdd:6 5
Device BOOT variable = hdd,hdd:5,pcmcia:slot0,network,hdd:6
Warning:Device list is not verified but still set in the boot string.
Console> (enable)
```

---

**Related Commands**

[clear boot device](#)  
[show boot device](#)

# set boot sync now

Use the **set boot sync now** command to immediately initiate synchronization of the system image between the active and redundant supervisor engine.

## **set boot sync now**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default is synchronization is disabled.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** The **set boot sync now** command is similar to the **set boot config-register auto-config** command with the **sync** keyword added. The **set boot sync now** command initiates synchronization to force the configuration files to synchronize automatically to the redundant supervisor engine. The files are kept consistent with what is on the active supervisor engine.

---

**Examples** This example shows how to initiate synchronization of the auto-config file:

```
Console> (enable) set boot sync now
Console> (enable)
```

---

**Related Commands** [set boot auto-config](#)  
[show boot](#)

# set boot system flash

Use the **set boot system flash** command to set the BOOT environment variable that specifies a list of images the switch loads at startup.

```
set boot system flash device:[filename] [prepend] [mod]
```

<b>Syntax Description</b>	<i>device:</i>	Device where the Flash resides.
	<i>filename</i>	(Optional) Name of the configuration file.
	<b>prepend</b>	(Optional) Places the device first in the list of boot devices.
	<i>mod</i>	(Optional) Module number of the supervisor engine containing the Flash device.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A colon (:) is required after the specified device.

You can enter several **boot system** commands to provide a problem-free method for booting the switch. The system stores and executes the **boot system** commands in the order in which you enter them. Remember to clear the old entry when building a new image with a different filename in order to use the new image.

If the file does not exist (for example, if you entered the wrong filename), then the filename is appended to the bootstring, and this message displays, “Warning: File not found but still added in the bootstring.”

If the file does exist, but is not a supervisor engine image, the file is not added to the bootstring, and this message displays, “Warning: file found but it is not a valid boot image.”

**Examples** This example shows how to append the filename `cat6000-sup.5-5-1.bin` on device `bootflash` to the BOOT environment variable:

```
Console> (enable) set boot system flash bootflash:cat6000-sup.5-5-1.bin
BOOT variable = bootflash:cat6000-sup.5-4-1.bin,1;bootflash:cat6000-sup.5-5-1.bin,1;
Console> (enable)
```

This example shows how to prepend `cat6000-sup.5-5-1.bin` to the beginning of the boot string:

```
Console> (enable) set boot system flash bootflash:cat6000-sup.5-5-1.bin prepend
BOOT variable = bootflash:cat6000-sup.5-5-1.bin,1;bootflash:cat6000-sup.5-4-1.bin,1;
Console> (enable)
```

---

Related Commands

[clear boot system](#)  
[show boot](#)

# set cam

Use the **set cam** command to add entries into the content-addressable memory (CAM) table, set the aging time for the CAM table, and configure traffic filtering from and to a specific host.

```
set cam { dynamic | static | permanent } { unicast_mac | route_descr } mod/port [vlan]
```

```
set cam { static | permanent } { multicast_mac } mod/ports.. [vlan]
```

```
set cam { static | permanent } filter { unicast_mac } vlan
```

```
set cam agingtime vlan agingtime
```

Syntax Description		
<b>dynamic</b>		Specifies entries are subject to aging.
<b>static</b>		Specifies entries are not subject to aging.
<b>permanent</b>		Specifies permanent entries are stored in NVRAM until they are removed by the <b>clear cam</b> or <b>clear config</b> command.
<i>unicast_mac</i>		MAC address of the destination host used for a unicast.
<i>route_descr</i>		Route descriptor of the “next hop” relative to this switch; valid values are from 0 to 0xffff.
<i>mod/port</i>		Number of the module and the port on the module.
<i>vlan</i>		(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
<i>multicast_mac</i>		MAC address of the destination host used for a multicast.
<i>mod/ports..</i>		Number of the module and the ports on the module.
<b>filter</b>		Specifies a traffic filter entry.
<b>agingtime</b>		Sets the period of time after which an entry is removed from the table.
<i>agingtime</i>		Number of seconds ( <b>0</b> to <b>1,000,000</b> ) dynamic entries remain in the table before being deleted.

## Defaults

The default configuration has a local MAC address, spanning tree address (01-80-c2-00-00-00), and CDP multicast address for destination port 1/3 (the supervisor engine). The default aging time for all configured VLANs is 300 seconds.

The *vlan* variable is required when you configure the traffic filter entry.

Setting the aging time to 0 disables aging.

## Command Types

Switch command.

## Command Modes

Privileged.

---

**Usage Guidelines**

If the given MAC address is a multicast address (the least significant bit of the most significant byte is set to 1) or broadcast address (ff-ff-ff-ff-ff-ff) and you specify multiple ports, the ports must all be in the same VLAN. If the given address is a unicast address and you specify multiple ports, the ports must be in different VLANs.

The MSM does not support the **set cam** command.

If you enter a route descriptor with no VLAN parameter specified, the default is the VLAN already associated with the port. If you enter a route descriptor, you may only use a single port number (of the associated port).

The MAC address and VLAN for a host can be stored in the NVRAM it is maintained even after a reset.

The *vlan* value is optional unless you are setting CAM entries to dynamic, static, or permanent for a trunk port, or if you are using the **agingtime** keyword.

If port(s) are trunk ports, you must specify the VLAN.

Static (nonpermanent) entries remain in the table until you reset the active supervisor engine.

Enter the *route\_descr* variable as two hexadecimal bytes in the following format: 004F. Do not use a “-” to separate the bytes.

---

**Examples**

This example shows how to set the CAM table aging time to 300 seconds:

```
Console> (enable) set cam agingtime 1 300  
Vlan 1 CAM aging time set to 300 seconds.  
Console> (enable)
```

This example shows how to add a unicast entry to the table for module 2, port 9:

```
Console> (enable) set cam static 00-00-0c-a0-03-fa 2/9  
Static unicast entry added to CAM table.  
Console> (enable)
```

This example shows how to add a permanent multicast entry to the table for module 1, port 1, and module 2, ports 1, 3, and 8 through 12:

```
Console> (enable) set cam permanent 01-40-0b-a0-03-fa 1/1,2/1,2/3,2/8-12  
Permanent multicast entry added to CAM table.  
Console> (enable)
```

This example shows how to add a traffic filter entry to the table:

```
Console> (enable) set cam static filter 00-02-03-04-05-06 1  
Filter entry added to CAM table.  
Console> (enable)
```

---

**Related Commands**

[clear cam](#)  
[show cam](#)

# set cdp

Use the **set cdp** command to enable, disable, or configure Cisco Discovery Protocol (CDP) features globally on all ports or on specified ports.

**set cdp** { **enable** | **disable** } { *mod/ports...* }

**set cdp interval** *interval*

**set cdp holdtime** *holdtime*

**set cdp version** **v1** | **v2**

**set cdp format device-id** { **mac-address** | **other** }

## Syntax Description

<b>enable</b>	Enables the CDP feature.
<b>disable</b>	Disables the CDP feature.
<i>mod/ports..</i>	Number of the module and the ports on the module.
<b>interval</b>	Specifies the CDP message interval value.
<i>interval</i>	Number of seconds the system waits before sending a message; valid values are from 5 to 900 seconds.
<b>holdtime</b>	Specifies the global time-to-live value.
<i>holdtime</i>	Number of seconds for the global time-to-live value; valid values are from 10 to 255 seconds.
<b>version</b> <b>v1</b>   <b>v2</b>	Specifies the CDP version number.
<b>format</b> <b>device-id</b>	Sets the device-ID TLV format.
<b>mac-address</b>	Specifies that the device-ID TLV carry the MAC address of the sending device in ASCII, in canonical format.
<b>other</b>	Specifies that the device's hardware serial number concatenated with the device name between parenthesis.

## Defaults

The default system configuration has CDP enabled. The message interval is set to 60 seconds for every port; the default time-to-live value has the message interval globally set to 180 seconds. The default CDP version is version 2.

## Command Types

Switch command.

## Command Modes

Privileged.

---

**Usage Guidelines**

The **set cdp version** command allows you to globally set the highest version number of CDP packets to send.

If you enter the global **set cdp enable** or **disable** command, CDP is globally configured. If CDP is globally disabled, CDP is automatically disabled on all interfaces, but the per-port **enable** (or **disable**) configuration is not changed. If you globally enable CDP, whether CDP is running on an interface or not depends on its per-port configuration.

If you configure CDP on a per-port basis, you can enter the *mod/ports...* value as a single module and port or a range of ports; for example, 2/1-12,3/5-12.

---

**Examples**

This example shows how to enable the CDP message display for port 1 on module 2:

```
Console> (enable) set cdp enable 2/1  
CDP enabled on port 2/1.  
Console> (enable)
```

This example shows how to disable the CDP message display for port 1 on module 2:

```
Console> (enable) set cdp disable 2/1  
CDP disabled on port 2/1.  
Console> (enable)
```

This example shows how to specify the CDP message interval value:

```
Console> (enable) set cdp interval 400  
CDP interval set to 400 seconds.  
Console> (enable)
```

This example shows how to specify the global time-to-live value:

```
Console> (enable) set cdp holdtime 200  
CDP holdtime set to 200 seconds.  
Console> (enable)
```

This example shows how to set the device ID format to MAC address:

```
Console> (enable) set cdp format device-id mac-address  
Device Id format changed to MAC-address  
Console> (enable)
```

---

**Related Commands**

[show cdp](#)  
[show port cdp](#)

# set channelprotocol

Use the **set channelprotocol** command to set the protocol that manages channeling on a module.

```
set channelprotocol { pagp | lacp } mod
```

Syntax Description		
	<b>pagp</b>	Specifies PAgP.
	<b>lacp</b>	Specifies LACP.
	<i>mod</i>	Number of the module.

**Defaults** The default for the channel protocol is PAgP.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** LACP is supported on all Ethernet interfaces.

PAgP and LACP manage channels differently. When all the ports in a channel get disabled, PAgP removes them from its internal channels list; **show** commands do not display the channel. With LACP, when all the ports in a channel get disabled, LACP does not remove the channel; **show** commands continue to display the channel even though all its ports are down. To determine if a channel is actively sending and receiving traffic with LACP, use the **show port** command to see if the link is up or down.

LACP does not support half-duplex links. If a port is in active/passive mode and becomes half duplex, the port is suspended (and a syslog message is generated). The port is shown as “connected” using the **show port** command and as “not connected” using the **show spantree** command. This discrepancy is because the port is physically connected but never joined spanning tree. To get the port to join spanning tree, either set the duplex to full or set the channel mode to off for that port.

For more information about PAgP and LACP, refer to the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

**Examples** This example shows how to set PAgP for module 3:

```
Console> (enable) set channelprotocol pagp 3
Channeling protocol set to PAGP for module(s) 3.
Console> (enable)
```

This example shows how to set LACP for modules 2, 4, 5, and 6:

```
Console> (enable) set channelprotocol lacp 2,4-6
Channeling protocol set to LACP for module(s) 2,4,5,6.
Console> (enable)
```

---

**Related Commands**

**clear lacp-channel statistics**  
**set lacp-channel system-priority**  
**set port lacp-channel**  
**set spantree channelcost**  
**set spantree channelvlancost**  
**show channelprotocol**  
**show lacp-channel**

# set channel vlancost

Use the **set channel vlancost** command to set the channel VLAN cost.

**set channel vlancost** *channel\_id cost*

Syntax Description	
<i>channel_id</i>	Number of the channel identification; valid values are from 769 to 896.
<i>cost</i>	Port costs of the ports in the channel.

**Defaults** The default is the VLAN cost is updated automatically based on the current port VLAN costs of the channeling ports.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you do not enter the *cost*, the cost is updated based on the current port VLAN costs of the channeling ports.

You can configure only one channel at a time.



**Note**

The **set channel vlancost** command creates a “set spantree portvlancost” entry for each port in the channel. You must then manually reenter the **set spantree portvlancost** command for at least one port in the channel, specifying the VLAN or VLANs that you want associated with the port. When you associate the desired VLAN or VLANs with one port, all ports in the channel are automatically updated. Refer to Chapter 6, “Configuring EtherChannel,” in the *Catalyst 6500 Series Software Configuration Guide* for more information.



**Note**

With software releases 6.2(1) and earlier, the 6- and 9-slot Catalyst 6500 series switches support a maximum of 128 EtherChannels.

With software releases 6.2(2) and later, due to the port ID handling by the spanning tree feature, the maximum supported number of EtherChannels is 126 for a 6- or 9-slot chassis and 63 for a 13-slot chassis. Note that the 13-slot chassis was first supported in software release 6.2(2).

**Examples** This example shows how to set the channel 769 path cost to 10:

```
Console> (enable) set channel vlancost 769 10
Port(s) 1/1-2 vlan cost are updated to 24.
Channel 769 vlancost is set to 10.
Console> (enable)
```

After you enter this command, you must reenter the **set spantree portvlancost** command so that the desired VLAN or VLANs are associated with all the channel ports.

This example shows how to associate the channel 769 path cost to 10 for VLAN 1 through VLAN 1005:

```
Console> (enable) set spantree portvlancost 1/1 cost 24 1-1005
Port 1/1 VLANs 1025-4094 have path cost 19.
Port 1/1 VLANs 1-1005 have path cost 24.
Port 1/2 VLANs 1-1005 have path cost 24.
Console> (enable)
```

---

**Related Commands**

**set spantree portvlancost**  
**show channel**

# set config acl nvram

Use the **set config acl nvram** command to copy the current committed ACL configuration from DRAM back into NVRAM.

**set config acl nvram**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default is NVRAM.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** This command fails if there is not enough space in NVRAM.

This command copies the current committed configuration to NVRAM; this configuration might be different from the configuration in the auto-config file. After the ACL configuration is copied into NVRAM, you must turn off the auto-config options using the **clear boot auto-config** command.

---

**Examples** This example shows how to copy the ACL configuration to NVRAM:

```
Console> (enable) set config acl nvram
ACL configuration copied to NVRAM.
Console> (enable)
```

---

**Related Commands**

- clear config**
- copy**
- set boot config-register**
- set boot system flash**
- show boot**

# set config mode

Use the **set config mode** command to change the configuration mode from a binary model to a text model.

**set config mode binary**

**set config mode text** { **nvr**am | *device:file-id* }

Syntax Description		
<b>binary</b>	Sets the system configuration mode to a binary model.	
<b>text</b>	Sets the system configuration mode to a text model.	
<b>nvr</b> am	Specifies the saved configuration be stored in NVRAM.	
<i>device:file-id</i>	Name of the device and filename where the saved configuration will be stored.	

**Defaults** The default setting of this command is binary, saving the configuration to NVRAM.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to set the configuration mode to binary:

```
Console> (enable) set config mode binary
System configuration copied to NVRAM. Configuration mode set to binary.
Console> (enable)
```

This example shows how to set the configuration mode to text and designate the location and filename for saving the text configuration file:

```
Console> (enable) set config mode text bootflash:switch.cfg
Binary system configuration has been deleted from NVRAM. Configuration mode set to text.
Use the write memory command to save configuration changes. System configuration file set
to: bootflash:switch.cfg
The file specified will be used for configuration during the next bootup.
Console> (enable)
```

**Related Commands** [show config mode](#)  
[write](#)

# set cops

Use the **set cops** command to configure COPS functionality.

**set cops server** *ipaddress* [*port*] [**primary**] [**diff-serv** | **rsvp**]

**set cops domain-name** *domain\_name*

**set cops retry-interval** *initial incr max*

## Syntax Description

<b>server</b>	Sets the name of the COPS server.
<i>ipaddress</i>	IP address or IP alias of the server.
<i>port</i>	(Optional) Number of the TCP port the switch connects to on the server.
<b>primary</b>	(Optional) Specifies the primary server.
<b>diff-serv</b>	(Optional) Sets the COPS server for differentiated services.
<b>rsvp</b>	(Optional) Sets the COPS server for RSVP+.
<b>domain-name</b> <i>domain_name</i>	Specifies the domain name of the switch.
<b>retry-interval</b>	Specifies the retry interval in seconds.
<i>initial</i>	Initial timeout value; valid values are from 0 to 65535 seconds.
<i>incr</i>	Incremental value; valid values are from 0 to 65535 seconds.
<i>max</i>	Maximum timeout value; valid values are from 0 to 65535 seconds.

## Defaults

The defaults are as follows:

- The retry interval default values are *initial* = 30 seconds, *incr* = 30 seconds, *max* = 5 minutes.
- The default domain-name is a string of length zero.
- No policy decision point (PDP) servers are configured.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

You can configure the names or addresses of up to two policy decision point (PDP) servers. One must be the primary, and the optional second server is a secondary, or backup, PDP server.

The COPS domain name can be set globally only; there is no option to set it for each COPS client.

Names such as the server, domain-name, and roles can contain a maximum of 31 characters; longer names are truncated to 31 characters. Valid letters are a-z, A-Z, 0-9, ., - and \_. Names cannot start with an underscore (\_). The names are not case sensitive for matching, but are case sensitive for display.

When specifying the **retry-interval**, the total of the initial timeout value and the incremental value (increment on each subsequent failure) may not exceed the maximum timeout value.

---

**Examples**

This example shows how to configure a server as a primary server:

```
Console> (enable) set cops server 171.21.34.56 primary
171.21.34.56 added to COPS server table as primary server.
Console> (enable)
```

This example shows how to configure a server as a primary RSVP+ server:

```
Console> (enable) set cops server 171.21.34.56 primary rsvp
171.21.34.56 added to COPS server table as primary server for RSVP.
Console> (enable)
```

This example shows how to configure a server as a secondary (or backup) server:

```
Console> (enable) set cops server my_server2
my_server2 added to the COPS server table as backup server.
Console> (enable)
```

This example shows how to set the domain name:

```
Console> (enable) set cops domain-name my_domain
Domain name set to my_domain.
Console> (enable)
```

This example shows how to set the retry interval:

```
Console> (enable) set cops retry-interval 15 1 30
Connection retry intervals set.
Console> (enable)
```

This example shows the display output if the total of the initial timeout value and the incremental value you entered exceeds the maximum timeout value:

```
Console> (enable) set cops retry-interval 15 1 10
The initial timeout plus the increment value may not exceed the max value.
Console> (enable)
```

---

**Related Commands**

[clear cops](#)  
[show cops](#)

# set crypto key rsa

Use the **set crypto key rsa** command to generate and configure an RSA key pair.

**set crypto key rsa** *nbits* [**force**]

<b>Syntax Description</b>	<i>nbits</i>	Size of the key; valid values are <b>512</b> to <b>2048</b> bits.
	<b>force</b>	(Optional) Regenerates the keys and suppress the warning prompt of overwriting existing keys.

**Defaults** The command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **crypto** commands are supported on systems that run these image types only:

- supk9 image—for example, cat6000-supk9.6-1-3.bin
- supcvk9 image—for example, cat6000-supcvk9.6-1-3.bin

If you do not enter the **force** keyword, the **set crypto key** command is saved into the configuration file and you will have to use the **clear config all** command to clear the RSA keys.

The *nbits* value is required.

To support SSH login, you first must generate an RSA key pair.

**Examples** This example shows how to create an RSA key:

```
Console> (enable) set crypto key rsa 1024
Generating RSA keys.... [OK]
Console> (enable)
```

**Related Commands** [clear crypto key rsa](#)  
[show crypto key](#)

# set default portstatus

Use the **set default portstatus** command to set the default port status.

```
set default portstatus { enable | disable }
```

<b>Syntax Description</b>	<b>enable</b> Activates default port status. <b>disable</b> Deactivates default port status.
<b>Defaults</b>	The default is enabled.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>When you enter the <b>clear config all</b> command, or if a configuration loss occurs, all ports collapse into VLAN 1. This situation might cause a security and network instability problem. During a configuration loss, when you enter the <b>set default portstatus</b> command, all ports are put into a disable state, and the traffic flowing through the ports is blocked. You can then manually configure the ports back to the enable state.</p> <p>This command is not saved in the configuration file.</p> <p>After you set the default port status, the default port status does not clear when you enter the <b>clear config all</b> command.</p>
<b>Examples</b>	<p>This example shows how to disable the default port status:</p> <pre>Console&gt; (enable) set default portstatus disable port status set to disable. Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">show default</a>

# set dot1q-all-tagged

Use the **set dot1q-all-tagged** command to change all existing and new dot1q trunks to the dot1q-only mode.

**set dot1q-all-tagged enable | disable [all]**

Syntax Description	enable	Enables dot1q-tagged-only mode.
	<b>disable</b>	Disables dot1q-tagged-only mode.
	<b>all</b>	(Optional) Specifies dot1q tagging for all ports.

**Defaults** The 802.1Q tagging feature is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you enable dot1q-tagged-only, all data packets are sent out tagged and all received untagged data packets are dropped on all 802.1Q trunks.

You cannot enable the dot1q tunneling feature on a port until dot1q-tagged-only mode is enabled.

You cannot disable dot1q-tagged-only mode on the switch until dot1q tunneling is disabled on all the ports on the switch.

The optional **all** keyword is not supported.



**Note**

Policy-based forwarding (PBF) does not work with 802.1Q tunnel traffic. PBF is supported on Layer 3 IP unicast traffic, but it is not applicable to Layer 2 traffic. At the intermediate (PBF) switch, all 802.1Q tunnel traffic appears as Layer 2 traffic.

**Examples** This example shows how to enable dot1q tagging:

```
Console> (enable) set dot1q-all-tagged enable
Dot1q tagging is enabled
Console> (enable)
```

**Related Commands** [set port dot1qtunnel](#)  
[show dot1q-all-tagged](#)

## set dot1x

Use the **set dot1x** command to configure dot1x on a system.

```
set dot1x system-auth-control { enable | disable }

set dot1x { quiet-period | tx-period | re-authperiod } seconds

set dot1x { supp-timeout | server-timeout } seconds

set dot1x max-req count
```

Syntax Description		
<b>system-auth-control</b>		Specifies authentication for the system.
<b>enable</b>		Enables the specified dot1x function.
<b>disable</b>		Disables the specified dot1x function.
<b>quiet-period</b> <i>seconds</i>		Specifies the idle time between authentication attempts; valid values are from 0 to 65535 seconds.
<b>tx-period</b> <i>seconds</i>		Specifies the time for the retransmission of EAP-Request/Identity frame; valid values are from 0 to 65535 seconds. See the “Usage Guidelines” section for additional information.
<b>re-authperiod</b> <i>seconds</i>		Specifies the time constant for the retransmission reauthentication time; valid values are from 1 to 65535 seconds.
<b>supp-timeout</b> <i>seconds</i>		Specifies the time constant for the retransmission of EAP-Request packets; valid values are from 0 to 65535 seconds. See the “Usage Guidelines” section for additional information.
<b>server-timeout</b> <i>seconds</i>		Specifies the time constant for the retransmission of packets by the backend authenticator to the authentication server; valid values are from 1 to 65535 seconds. See the “Usage Guidelines” section for additional information.
<b>max-req</b> <i>count</i>		Specifies the maximum number of times that the state machine retransmits an EAP-Request frame to the supplicant before it times out the authentication session; valid values are from 1 to 10.

### Defaults

The default settings are as follows:

- **system-auth-control** is enabled.
- **quiet-period** is 60 seconds.
- **tx-period** is 30 seconds.
- **re-authperiod** is 3600 seconds.
- **supp-timeout** is 30 seconds.
- **server-timeout** is 30 seconds.
- **max-req** count is 2.

### Command Types

Switch command.

---

**Command Modes**

Privileged.

---

**Usage Guidelines**

When you set the **system-auth-control**, the following applies:

- The **enable** keyword allows you to control each port's authorization status per the port-control parameter set using the **set port dot1x** command.
- The **disable** keyword allows you to make all ports behave as though the port-control parameter is set to **force-authorized**.

If you do not enable reauthentication, reauthentication does not automatically occur after authentication has occurred.

When the supplicant does not notify the authenticator that it received the EAP-request/identity packet, the authenticator waits a period of time (set by entering the **tx-period seconds** parameter), and then retransmits the packet.

When the supplicant does not notify the backend authenticator that it received the EAP-request packet, the backend authenticator waits a period of time (set by entering the **supp-timeout seconds** parameter), and then retransmits the packet.

When the authentication server does not notify the backend authenticator that it received specific packets, the backend authenticator waits a period of time (set by entering the **server-timeout seconds** parameter), and then retransmits the packets.

---

**Examples**

This example shows how to set the system authentication control:

```
Console> (enable) set dot1x system-auth-control enable
dot1x authorization enabled.
Console> (enable)
```

This example shows how to set the idle time between authentication attempts:

```
Console> (enable) set dot1x quiet-period 45
dot1x quiet-period set to 45 seconds.
Console> (enable)
```

This example shows how to set the retransmission time:

```
Console> (enable) set dot1x tx-period 15
dot1x tx-period set to 15 seconds.
Console> (enable)
```

This example shows you how to specify the reauthentication time:

```
Console> (enable) set dot1x re-authperiod 7200
dot1x re-authperiod set to 7200 seconds
Console> (enable)
```

This example shows you how to specify the retransmission of EAP-Request packets by the authenticator to the supplicant:

```
Console> (enable) set dot1x supp-timeout 15
dot1x supp-timeout set to 15 seconds.
Console> (enable)
```

This example shows how to specify the retransmission of packets by the backend authenticator to the authentication server:

```
Console> (enable) set dot1x server-timeout 15  
dot1x server-timeout set to 15 seconds.  
Console> (enable)
```

This example shows how to specify the maximum number of packet retransmissions:

```
Console> (enable) set dot1x max-req 5  
dot1x max-req set to 5.  
Console> (enable)
```

---

**Related Commands**

**clear dot1x config**  
**set port dot1x**  
**show dot1x**  
**show port dot1x**

# set enablepass

Use the **set enablepass** command to change the password for the privileged level of the CLI.

## **set enablepass**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default configuration has no enable password configured.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** Passwords are case sensitive and may be 0 to 19 characters in length, including spaces. The command prompts you for the old password. If the password you enter is valid, you are prompted to enter a new password and to verify the new password.

---

**Examples** This example shows how to establish a new password:

```
Console> (enable) set enablepass  
Enter old password: <old_password>  
Enter new password: <new_password>  
Retype new password: <new_password>  
Password changed.  
Console> (enable)
```

---

**Related Commands** [enable](#)  
[set password](#)

## set errdisable-timeout

Use the **set errdisable-timeout** command to configure a timeout to automatically reenoble ports that are in the errdisable state.

```
set errdisable-timeout {enable | disable} {reason}
```

```
set errdisable-timeout interval {interval}
```

### Syntax Description

<b>enable</b>	Enables errdisable timeout.
<b>disable</b>	Disables errdisable timeout.
<i>reason</i>	Reason for the port being in errdisable state; valid values are <b>bcast-suppression</b> , <b>bpdu-guard</b> , <b>channel-misconfig</b> , <b>cross-fallback</b> , <b>duplex-mismatch</b> , <b>gl2pt-ingress-loop</b> , <b>gl2pt-threshold-exc</b> , <b>udld</b> , <b>other</b> , <b>all</b> .
<b>interval</b> <i>interval</i>	Specifies the timeout interval; valid values are from 30 to 86400 seconds (30 seconds to 24 hours).

### Defaults

By default, all the errdisable state reasons are disabled globally; whenever there are no reasons enabled, the timer is stopped.

By default, the timeout is set to **disable**, and the *interval* value is set at 300 seconds.

### Command Types

Switch command.

### Command Modes

Privileged.

### Usage Guidelines

A port enters errdisable state for the following reasons (these reasons appear as configuration options within the **set errdisable-timeout enable** command):

- Broadcast suppression
- BPDU port-guard
- Channel misconfiguration
- Crossbar failure
- Duplex mismatch
- Layer 2 protocol tunnel misconfiguration
- Layer 2 protocol tunnel threshold exceeded
- UDLD
- Other (reasons other than the above)
- All (apply errdisable timeout for all of the above reasons)

You can enable or disable errdisable timeout for each of the reasons that are listed. If you specify "other," all ports errdisabled by causes other than the reasons listed are enabled for errdisable timeout. If you specify "all," all ports errdisabled for any reason are enabled for errdisable timeout.

You can manually prevent a port from being reenabled by setting the errdisable timeout for that port to disable using the **set port errdisable-timeout *mod/port* disable** command.

---

## Examples

This example shows how to enable an errdisable timeout due to a BPDU port-guard event:

```
Console> (enable) set errdisable-timeout enable bpdu-guard  
Successfully enabled errdisable-timeout for bpdu-guard.  
Console> (enable)
```

This example shows how to set an errdisable timeout interval to 450 seconds:

```
Console> (enable) set errdisable-timeout interval 450  
Successfully set errdisable timeout to 450 seconds.  
Console> (enable)
```

This example shows how to set an errdisable timeout for broadcast suppression events:

```
Console> (enable) set errdisable-timeout enable bcast-suppression  
Successfully enabled errdisable timeout for bcast-suppression.  
Console> (enable)
```

---

## Related Commands

[set port errdisable-timeout](#)  
[show errdisable-timeout](#)

# set errordetection

Use the **set errordetection** command to enable or disable various error detections.

**set errordetection inband enable | disable**

**set errordetection memory enable | disable**

**set errordetection portcounters enable | disable**

## Syntax Description

<b>inband</b>	Detects errors in the inband (sc0) interface.
<b>enable</b>	Enables the specified error detection.
<b>disable</b>	Disables the specified error detection.
<b>memory</b>	Detects memory corruption.
<b>portcounters</b>	Monitors and polls port counters.

## Defaults

The defaults are as follows:

- Inband error detection is disabled.
- Port counter error detection is disabled.
- Memory error detection is disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The **set errordetection** command is useful for monitoring the switch. If an error is detected, a syslog message informs you that a problem exists before noticeable performance degradation occurs. For example:

- **set errordetection inband**—Displays the type of inband failure occurrence, such as inband stuck, resource errors, and inband fail when you start the switch.
- **set errordetection memory**—Displays the address where the memory corruption occurred.
- **set errordetection portcounters**—Displays the module and port number and the counter that had the problem between two consecutive polls.

## Examples

This example shows how to enable memory error detection:

```
Console> (enable) set errordetection memory enable
Memory error detection enabled.
Console> (enable)
```

■ set errordetection

Related Commands [show errordetection](#)

# set feature agg-link-partner

Use the **set feature agg-link-partner** command to enable or disable the aggressive link partner feature.

```
set feature agg-link-partner { enable | disable }
```

Syntax Description	enable	Disables the aggressive link partner feature.
	disable	Enables the aggressive link partner feature.

**Defaults** The aggressive link partner feature is disabled globally.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you enable this feature, you reduce the possibility of aggressive link partners causing excessive collisions. Excessive collisions can lead to excessive alignment errors and runts.

The aggressive link partner feature works only on half duplex 10/100 ports.

The **set feature agg-link-partner** command is a global command so when you enable or disable this feature, all related modules in the chassis are enabled or disabled.

**Examples** This example shows how to enable the aggressive link partner feature:

```
Console> (enable) set feature agg-link-partner enable
Aggressive link partner feature enabled.
Console> (enable)
```

This example shows how to disable the aggressive link partner feature:

```
Console> (enable) set feature agg-link-partner disable
Aggressive link partner feature disabled.
Console> (enable)
```

# set feature mdg

Use the **set feature mdg** command to enable or disable the multiple default gateway feature.

```
set feature mdg { enable | disable }
```

Syntax Description	<b>enable</b>	Enables the multiple default gateway.
	<b>disable</b>	Disables the multiple default gateway.

Defaults	This command has no default settings.
----------	---------------------------------------

Command Types	Switch command.
---------------	-----------------

Command Modes	Privileged.
---------------	-------------

Usage Guidelines	If you enable the multiple default gateway feature, the Catalyst 6500 series switch pings the default gateways every 10 seconds to verify that the gateways are still available.
------------------	--

Examples	This example shows how to enable the multiple default gateway feature:
----------	--

```
Console> (enable) set feature mdg enable
Multiple Gateway feature enabled.
Console> (enable)
```

This example shows how to disable the multiple default gateway feature:

```
Console> (enable) set feature mdg disable
Multiple Gateway feature disabled.
Console> (enable)
```

# set garp timer

Use the **set garp timer** command to adjust the values of the join, leave, and leaveall timers.

```
set garp timer {timer_type} {timer_value}
```

<b>Syntax Description</b>	<i>timer_type</i> Type of timer; valid values are <b>join</b> , <b>leave</b> , and <b>leaveall</b> .
	<i>timer_value</i> Timer values in milliseconds; valid values are from 1 to 2147483647 milliseconds.

**Defaults** The defaults are the join timer is 200 milliseconds, the leave timer is 600 milliseconds, and the leaveall timer is 10000 milliseconds.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The modified timer values are applied to all General Attribute Registration Protocol (GARP) applications (for example, GMRP and GVRP) timer values.

You must maintain the following relationship for the various timer values:

- Leave time must be greater than or equal to three times the join time.
- Leaveall time must be greater than the leave time.



**Caution**

Set the same GARP application (for example, GMRP and GVRP) timer values on all Layer 2-connected devices. If the GARP timers are set differently on the Layer 2-connected devices, GARP applications will not operate successfully.

**Examples** This example shows how to set the join timer value for all the ports on all the VLANs:

```
Console> (enable) set garp timer join 100
GMRP/GARP Join timer value is set to 100 milliseconds.
Console> (enable)
```

This example shows how to set the leave timer value for all the ports on all the VLANs:

```
Console> (enable) set garp timer leave 300
GMRP/GARP Leave timer value is set to 300 milliseconds.
Console> (enable)
```

**Related Commands**

- [set gmrp timer](#)
- [set gvrp timer](#)
- [show garp timer](#)

# set gmrp

Use the **set gmrp** command to enable or disable GARP Multicast Registration Protocol (GMRP) on the switch in all VLANs on all ports.

```
set gmrp { enable | disable }
```

Syntax Description	enable	Disables GMRP on the switch.
	disable	Enables GMRP on the switch.

**Defaults** The default is GMRP is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You cannot enable GMRP if IGMP snooping is already enabled.

**Examples** This example shows how to enable GMRP on the switch:

```
Console> (enable) set gmrp enable
GMRP is enabled.
Console> (enable)
```

This example shows how to disable GMRP on the switch:

```
Console> (enable) set gmrp disable
GMRP is disabled.
Console> (enable)
```

This example shows the display if you try to enable GMRP on the switch with IGMP enabled:

```
Console> (enable) set gmrp enable
Disable IGMP to enable GMRP snooping feature.
Console> (enable)
```

**Related Commands** [show gmrp configuration](#)

# set gmrp fwdall

Use the **set gmrp fwdall** command to enable or disable the Forward All feature on a specified port or module and port list.

```
set gmrp fwdall {enable | disable} mod/port...
```

Syntax Description	enable	enable
	enable	Enables GMRP Forward All on a specified port.
	disable	Disables GMRP Forward All on a specified port.
	mod/port...	Number of the module and the ports on the module.

**Defaults** The default is the Forward All feature is disabled for all ports.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Forward All indicates that a port is interested in receiving all the traffic for all the multicast groups. If the port is trunking, then this feature is applied to all the VLANs on that port.

**Examples** This example shows how to enable GMRP Forward All on module 5, port 5:

```
Console> (enable) set gmrp fwdall enable 5/5
GMRP Forward All groups option enabled on port(s) 5/5.
Console> (enable)
```

This example shows how to disable the GMRP Forward All on module 3, port 2:

```
Console> (enable) set gmrp service fwdall disable 3/2
GMRP Forward All groups option disabled on port(s) 3/2.
Console> (enable)
```

**Related Commands** [show gmrp configuration](#)

# set gmrp registration

Use the **set gmrp registration** command to specify the GMRP registration type.

**set gmrp registration** { **normal** | **fixed** | **forbidden** } *mod/port...*

Syntax Description	<b>normal</b>	Specifies dynamic GMRP multicast registration and deregistration on the port.
	<b>fixed</b>	Specifies the multicast groups currently registered on the switch are applied to the port, but any subsequent registrations or deregistrations do not affect the port. Any registered multicast groups on the port are not deregistered based on the GARP timers.
	<b>forbidden</b>	Specifies that all GMRP multicasts are deregistered and prevent any further GMRP multicast registration on the port.
	<i>mod/port...</i>	Number of the module and the ports on the module.

**Defaults** The default is administrative control is normal.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must return the port to **normal** registration mode to deregister multicast groups on the port. GMRP supports a total of 3072 multicast addresses for the whole switch.

**Examples** This example shows how to set the registration type to **fixed** on module 3, port 3:

```
Console> (enable) set gmrp registration fixed 3/3
GMRP Registration is set to Fixed for port(s) 3/3.
Console> (enable)
```

This example shows how to set the registration type to **forbidden** on module 1, port 1:

```
Console> (enable) set gmrp registration forbidden 1/1
GMRP Registration is set to Forbidden for port(s) 1/1.
Console> (enable)
```

**Related Commands** [show gmrp configuration](#)

# set gmrp timer

Use the **set gmrp timer** command to adjust the values of the join, leave, and leaveall timers.

```
set gmrp timer {timer_type} {timer_value}
```

Syntax Description	
<i>timer_type</i>	Type of timer; valid values are <b>join</b> , <b>leave</b> , and <b>leaveall</b> .
<i>timer_value</i>	Timer values in milliseconds; valid values are from 1 to 2147483647 milliseconds.

**Defaults** The default is the join timer is 200 milliseconds, the leave timer is 600 milliseconds, and the leaveall timer is 10000 milliseconds.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must maintain the following relationship for the various timer values:

- Leave time must be greater than or equal to three times the join time.
- Leaveall time must be greater than the leave time.



**Caution**

Set the same GARP application (for example, GMRP and GVRP) timer values on all Layer 2-connected devices. If the GARP timers are set differently on the Layer 2-connected devices, GARP applications will not operate successfully.



**Note**

The modified timer values are applied to all GARP application (for example, GMRP and GVRP) timer values.

**Examples**

This example shows how to set the join timer value to 100 milliseconds for all the ports on all the VLANs:

```
Console> (enable) set gmrp timer join 100
GARP Join timer value is set to 100 milliseconds.
Console> (enable)
```

This example shows how to set the leave timer value to 300 milliseconds for all the ports on all the VLANs:

```
Console> (enable) set gmrp timer leave 300
GARP Leave timer value is set to 300 milliseconds.
Console> (enable)
```

This example shows how to set the leaveall timer value to 20000 milliseconds for all the ports on all the VLANs:

```
Console> (enable) set gmrp timer leaveall 20000
GARP LeaveAll timer value is set to 20000 milliseconds.
Console> (enable)
```

---

**Related Commands**

[set garp timer](#)  
[set gvrp timer](#)  
[show gmrp timer](#)

# set gvrp

Use the **set gvrp** command to enable or disable GARP VLAN Registration Protocol (GVRP) globally in the switch or on a per-port basis.

```
set gvrp { enable | disable } [mod/port]
```

## Syntax Description

<b>enable</b>	Enables GVRP on the switch.
<b>disable</b>	Disables GVRP on the switch.
<i>mod/port</i>	(Optional) Number of the module and port on the module.

## Defaults

The default is GVRP is globally set to disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

When you enable VTP pruning, VTP pruning runs on all the GVRP-disabled trunks.

To run GVRP on a trunk, you need to enable GVRP both globally on the switch and individually on the trunk.

## Examples

This example shows how to enable GVRP globally on the switch:

```
Console> (enable) set gvrp enable
GVRP enabled.
Console> (enable)
```

This example shows how to disable GVRP:

```
Console> (enable) set gvrp disable
GVRP disabled.
Console> (enable)
```

This example shows how to enable GVRP on module 2, port 1:

```
Console> (enable) set gvrp enable 2/1
GVRP enabled on port 2/1.
Console> (enable)
```

## Related Commands

[set garp timer](#)  
[set gvrp timer](#)  
[show gmrp timer](#)  
[show gvrp configuration](#)

# set gvrp applicant

Use the **set gvrp applicant** command to specify whether or not a VLAN is declared out of blocking ports.

```
set gvrp applicant { normal | active } { mod/port... }
```

Syntax Description	<b>normal</b>	Disallows the declaration of any VLAN out of blocking ports.
	<b>active</b>	Enforces the declaration of all active VLANs out of blocking ports.
	<i>mod/port..</i>	Number of the module and the ports on the module.

**Defaults** The default is GVRP applicant set to normal.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** To run GVRP on a trunk, you need to enable GVRP both globally on the switch and individually on the trunk.

On a port connected to a device that does not support the per-VLAN mode of STP, the port state may continuously cycle from blocking to listening to learning, and back to blocking. To prevent this, you must enter the **set gvrp applicant active mod/port...** command on the port to send GVRP VLAN declarations when the port is in the STP blocking state.

**Examples** This example shows how to enforce the declaration of all active VLANs out of specified blocking ports:

```
Console> (enable) set gvrp applicant active 4/2-3,4/9-10,4/12-24
Applicant was set to active on port(s) 4/2-3,4/9-10,4/12-24.
Console> (enable)
```

This example shows how to disallow the declaration of any VLAN out of specified blocking ports:

```
Console> (enable) set gvrp applicant normal 4/2-3,4/9-10,4/12-24
Applicant was set to normal on port(s) 4/2-3,4/9-10,4/12-24.
Console> (enable)
```

**Related Commands** [show gvrp configuration](#)

# set gvrp dynamic-vlan-creation

Use the **set gvrp dynamic-vlan-creation** command to enable or disable dynamic VLAN creation.

```
set gvrp dynamic-vlan-creation {enable | disable}
```

<b>Syntax Description</b>	<table border="0"> <tr> <td style="padding-right: 20px;"><b>enable</b></td> <td>Enables dynamic VLAN creation.</td> </tr> <tr> <td><b>disable</b></td> <td>Disables dynamic VLAN creation.</td> </tr> </table>	<b>enable</b>	Enables dynamic VLAN creation.	<b>disable</b>	Disables dynamic VLAN creation.
<b>enable</b>	Enables dynamic VLAN creation.				
<b>disable</b>	Disables dynamic VLAN creation.				
<b>Defaults</b>	The default is dynamic VLAN creation is disabled.				
<b>Command Types</b>	Switch command.				
<b>Command Modes</b>	Privileged.				
<b>Usage Guidelines</b>	<p>You can enable dynamic VLAN creation only when VTP is in transparent mode and no ISL trunks exist in the switch.</p> <p>This feature is not allowed when there are 802.1Q trunks that are not configured with GVRP.</p>				
<b>Examples</b>	<p>This example shows how to enable dynamic VLAN creation:</p> <pre>Console&gt; (enable) set gvrp dynamic-vlan-creation enable Dynamic VLAN creation enabled. Console&gt; (enable)</pre> <p>This example shows what happens if you try to enable dynamic VLAN creation and VTP is not in transparent mode:</p> <pre>Console&gt; (enable) set gvrp dynamic-vlan-creation enable VTP has to be in TRANSPARENT mode to enable this feature. Console&gt; (enable)</pre> <p>This example shows how to disable dynamic VLAN creation:</p> <pre>Console&gt; (enable) set gvrp dynamic-vlan-creation disable Dynamic VLAN creation disabled. Console&gt; (enable)</pre>				
<b>Related Commands</b>	<p><a href="#">set vtp</a></p> <p><a href="#">show gvrp configuration</a></p>				

## set gvrp registration

Use the **set gvrp registration** command to set the administrative control of an outbound port and apply to all VLANs on the trunk. GVRP registration commands are entered on a per-port basis.

**set gvrp registration** { **normal** | **fixed** | **forbidden** } *mod/port...*

Syntax Description	<b>normal</b>	Allows dynamic registering and deregistering each VLAN (except VLAN 1) on the port.
	<b>fixed</b>	Supports manual VLAN creation and registration, prevent VLAN deregistration, and register all VLANs known to other ports.
	<b>forbidden</b>	Specifies that all the VLANs (except VLAN 1) are statically deregistered from the port.
	<i>mod/port...</i>	Number of the module and the ports on the module.

**Defaults** The default administrative control is normal.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you set VLAN registration, you are communicating to the switch that the VLAN is interested in the users that are connecting to this port and that the VLAN's broadcast and multicast traffic is allowed to be sent to the port.

For static VLAN configuration, you should set the *mod/port...* control to **fixed** or **forbidden** if the *mod/port...* will not receive or process any GVRP message.

For each dynamically configured VLAN on a port, you should set the *mod/port...* control to **normal** (default), except for VLAN 1; GVRP registration mode for VLAN 1 is always fixed and is not configurable. VLAN 1 is always carried by 802.1Q trunks on which GVRP is enabled.

When GVRP is running, you can create a VLAN through a GVRP trunk port only if you enter the **set gvrp dynamic-vlan-creation enable** and the **set gvrp registration normal** commands.

**Examples** This example shows how to set the administrative control to **normal** on module 3, port 7:

```
Console> (enable) set gvrp registration normal 3/7
Registrar Administrative Control set to normal on port 3/7.
Console> (enable)
```

This example shows how to set the administrative control to **fixed** on module 5, port 10:

```
Console> (enable) set gvrp registration fixed 5/10
Registrar Administrative Control set to fixed on Port 5/10.
Console> (enable)
```

This example shows how to set the administrative control to **forbidden** on module 5, port 2:

```
Console> (enable) set gvrp registration forbidden 5/2  
Registrar Administrative Control set to forbidden on port 5/2.  
Console> (enable)
```

Related Commands [show gvrp configuration](#)

# set gvrp timer

Use the **set gvrp timer** command to adjust the values of the join, leave, and leaveall timers.

```
set gvrp timer {timer_type} {timer_value}
```

Syntax Description	
<i>timer_type</i>	Type of timer; valid values are <b>join</b> , <b>leave</b> , and <b>leaveall</b> .
<i>timer_value</i>	Timer values in milliseconds; valid values are from 1 to 2147483647 milliseconds.

**Defaults** The default is the join timer is 200 milliseconds, the leave timer is 600 milliseconds, and the leaveall timer is 10000 milliseconds.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must maintain the following relationship for the various timer values:

- Leave time must be greater than or equal to three times the join time.
- Leaveall time must be greater than the leave time.



### Caution

Set the same GARP application (for example, GMRP and GVRP) timer values on all Layer 2-connected devices. If the GARP timers are set differently on the Layer 2-connected devices, GARP applications will not operate successfully.



### Note

The modified timer values are applied to all GARP application (for example, GMRP and GVRP) timer values.

### Examples

This example shows how to set the join timer value to 100 milliseconds for all the ports on all the VLANs:

```
Console> (enable) set gvrp timer join 100
GVRP/GARP Join timer value is set to 100 milliseconds.
Console> (enable)
```

This example shows how to set the leave timer value to 300 milliseconds for all the ports on all the VLANs:

```
Console> (enable) set gvrp timer leave 300
GVRP/GARP Leave timer value is set to 300 milliseconds.
Console> (enable)
```

This example shows how to set the leaveall timer value to 20000 milliseconds for all the ports on all the VLANs:

```
Console> (enable) set gvrp timer leaveall 20000  
GVRP/GARP LeaveAll timer value is set to 20000 milliseconds.  
Console> (enable)
```

---

**Related Commands**

[set garp timer](#)  
[show gvrp configuration](#)

# set igmp

Use the **set igmp** command to enable or disable Internet Group Management Protocol (IGMP) snooping on the switch.

**set igmp {enable | disable}**

Syntax Description	enable	disable
	Enables IGMP snooping on the switch.	Disables IGMP snooping on the switch.

**Defaults** The default is IGMP snooping is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** IGMP must be disabled to run GMRP.  
If your system is configured with a Supervisor Engine 1, you must enable one of the multicast services (IGMP snooping or GMRP) on the switch in order to use IP MMLS.

**Examples** This example shows how to enable IGMP snooping on the switch:

```
Console> (enable) set igmp enable
IGMP feature for IP multicast enabled
Console> (enable)
```

This example shows how to disable IGMP snooping on the switch:

```
Console> (enable) set igmp disable
IGMP Snooping is disabled.
Console> (enable)
```

This example shows the display if you try to enable GMRP on the switch with IGMP enabled:

```
Console> (enable) set igmp enable
Disable GMRP to enable IGMP snooping feature.
Console> (enable)
```

**Related Commands**

- [clear igmp statistics](#)
- [set rgmp](#)
- [show igmp statistics](#)

# set igmp fastleave

Use the **set igmp fastleave** command to enable or disable Internet Group Management Protocol (IGMP) fastleave processing.

```
set igmp fastleave {enable | disable}
```

Syntax Description	enable	Disables IGMP fastleave processing.
	disable	Enables IGMP fastleave processing.

**Defaults** The default is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This command shows how to enable IGMP fastleave processing:

```
Console> (enable) set igmp fastleave enable
IGMP fastleave set to enable.
Warning: Can cause disconnectivity if there are more than one host joining the same group
per access port.
Console> (enable)
```

This command shows how to disable IGMP fastleave processing:

```
Console> (enable) set igmp fastleave disable
IGMP fastleave set to disable.
Console> (enable)
```

**Related Commands** [clear igmp statistics](#)  
[set igmp](#)  
[show igmp statistics](#)

## set igmp leave-query-type

Use the **set igmp leave-query-type** command to set the type of query to be sent when a port receives a leave message.

```
set igmp leave-query-type { mac-gen-query | general-query }
```

Syntax Description	mac-gen-query	Specifies a MAC-based general query.
	general-query	Specifies a general query.

**Defaults** By default, a MAC-based general query is sent when a port receives a leave message.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to send a MAC-based general query:

```
Console> (enable) set igmp leave-query-type mac-gen-query
Console> (enable)
```

This example shows how to send a general query:

```
Console> (enable) set igmp leave-query-type general-query
Console> (enable)
```

**Related Commands** [show igmp leave-query-type](#)

# set igmp mode

Use the **set igmp mode** command to set the IGMP snooping mode.

```
set igmp mode {igmp-only | igmp-cgmp | auto}
```

Syntax Description	igmp-only	Specifies IGMP snooping only.
	<b>igmp-cgmp</b>	Specifies IGMP and CGMP modes.
	<b>auto</b>	Overrides the dynamic switching of IGMP snooping modes.

**Defaults** The default is IGMP mode is **auto**.

**Command Types** Switch.

**Command Modes** Privileged.

**Usage Guidelines** The switch dynamically chooses either IGMP-only or IGMP-CGMP mode, depending on the traffic present on the network. IGMP-only mode is used in networks with no CGMP devices. IGMP-CGMP mode is used in networks with both IGMP and CGMP devices. Auto mode overrides the dynamic switching of the modes.

**Examples** This example shows how to set the IGMP mode to IGMP-only:

```
Console> (enable) set igmp mode igmp-only
IGMP mode set to igmp-only
Console> (enable)
```

This example shows how to set the IGMP mode to auto:

```
Console> (enable) set igmp mode auto
IGMP mode set to auto
Console> (enable)
```

**Related Commands** [show igmp mode](#)

# set igmp querier

Use the **set igmp querier** command to configure the IGMP querier for a specific VLAN.

```
set igmp querier {enable | disable} vlan
```

```
set igmp querier vlan {qi | oqi} seconds
```

Syntax Description		
<b>enable</b>		Enables the IGMP querier for a VLAN.
<b>disable</b>		Disables the IGMP querier for a VLAN.
<i>vlan</i>		Number of the VLAN.
<b>qi</b>		Sets the querier interval for the VLAN. See the “Usage Guidelines” section for more information about the querier interval.
<b>oqi</b>		Sets the other querier interval for the VLAN. See the “Usage Guidelines” section for more information about the other querier interval.
<i>seconds</i>		Range of the querier interval or the other querier interval in seconds; valid values are from 1 to 65535 seconds.

## Defaults

IGMP querier is disabled.

The default value for **qi** is 125 seconds.

The default value for **oqi** is 300 seconds.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

You must enable IGMP querier on every VLAN for which switch querier functionality is required.

In the absence of general queries, the **oqi** value is the amount of time a switch waits before electing itself as the querier.

## Examples

This example shows how to enable the IGMP querier for VLAN 4001:

```
Console> (enable) set igmp querier enable 4001
IGMP switch querier enabled for VLAN 4001
Console> (enable)
```

This example shows how to set the querier interval to 130 seconds for VLAN 4001:

```
Console> (enable) set igmp querier 4001 qi 130
QI for VLAN 4001 set to 130 second(s)
Console> (enable)
```

**Related Commands** [show igmp querier information](#)

# set igmp ratelimit

Use the **set igmp ratelimit** command to enable or disable IGMP rate limiting or to set the rate limit for IGMP snooping packets.

**set igmp ratelimit** { **enable** | **disable** }

**set igmp ratelimit** { **dvmrp** | **general-query** | **mospf1** | **mospf2** | **pimv2** } *rate*

Syntax Description		
<b>enable</b>	Enables IGMP rate limiting.	
<b>disable</b>	Disables IGMP rate limiting.	
<b>dvmrp</b>	Sets the IGMP rate limit for Distance Vector Multicast Routing Protocol (DVMRP) packets.	
<b>general-query</b>	Sets the IGMP rate limit for general query packets.	
<b>mospf1</b>	Sets the IGMP rate limit for Multicast Extensions of OSPF (MOSPF) version 1 packets.	
<b>mospf2</b>	Sets the IGMP rate limit for Multicast Extensions of OSPF (MOSPF) version 2 packets.	
<b>pimv2</b>	Sets the IGMP rate limit for Protocol Independent Multicast (PIM) version 2 packets.	
<i>rate</i>	Rate limit; valid values are from 1 to 65535 packets per 30 seconds.	

## Defaults

IGMP rate limiting is disabled.

The default rate limits are as follows:

- **dvmrp** is 100 packets.
- **general-query** is 100 packets.
- **mospf1** is 100 packets.
- **mospf2** is 100 packets.
- **pimv2** is 100 packets.

## Command Types

Switch command.

## Command Modes

Privileged.

---

**Usage Guidelines**

The **set igmp ratelimit {enable | disable}** command is supported in both text and binary configuration modes.

If IGMP rate limiting and multicast are enabled, multicast router ports might age out sporadically because the rate of the multicast control packets (such as PIMv2 hellos or IGMP general queries) exceeds the IGMP rate limit watermarks that were configured. The default value for these watermarks is 100. We recommend that you increase the PIMv2 hello ratelimit to 3000 by entering **set igmp ratelimit pimv2 3000**. You can also increase the IGMP general queries rate limit; we recommend that you set the value to 500 by entering **set igmp ratelimit general-query 500**.

---

**Examples**

This example shows how to enable IGMP rate limiting:

```
Console> (enable) set igmp ratelimit enable  
IGMP Ratelimiting enabled  
Console> (enable)
```

This example shows how to set the IGMP rate limit for MOSPF2 to 550 packets per every 30 seconds:

```
Console> (enable) set igmp ratelimit mospf2 550  
MOSPF2 Watermark set to allow 550 messages in 30 seconds  
Console> (enable)
```

This example shows how to set the IGMP ratelimit for PIMv2 1000 packets per every 30 seconds:

```
Console> (enable) set igmp ratelimit pimv2 1000  
PIMV2 Watermark set to allow 1000 messages in 30 seconds  
Console> (enable)
```

---

**Related Commands**

[show igmp ratelimit-info](#)

# set inlinepower defaultallocation

Use the **set inlinepower defaultallocation** command to set the default power allocation for a port.

**set inlinepower defaultallocation** *value*

<b>Syntax Description</b>	<i>value</i> Default power allocation; valid values are from 2000 to 12500 milliwatts.
---------------------------	--

<b>Defaults</b>	The default is 10000 milliwatts.
-----------------	----------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	<p>This example shows how to set the default power allocation to 2000 milliwatts:</p> <pre>Console&gt; (enable) set inlinepower defaultallocation 2000 Default inline power allocation set to 9500 mWatt per applicable port. Console&gt; (enable)</pre>
-----------------	--

<b>Related Commands</b>	<p><a href="#">set port inlinepower</a>  <a href="#">show environment</a>  <a href="#">show port inlinepower</a></p>
-------------------------	--

# set interface

Use the **set interface** command to configure the in-band and Serial Line Internet Protocol (SLIP) interfaces on the switch.

```

set interface {sc0 | sl0} {up | down}

set interface sl0 slip_addr dest_addr

set interface sc0 [vlan] [ip_addr[/netmask [broadcast]]]

set interface sc0 [vlan] [ip_addr/netmask [broadcast]]

set interface sc0 dhcp {renew | release}

```

Syntax Description	
<b>sc0</b>	Specifies the in-band interface.
<b>sl0</b>	Specifies the SLIP interface.
<b>up</b>	Brings the interface into operation.
<b>down</b>	Brings the interface out of operation.
<i>slip_addr</i>	IP address of the console port.
<i>dest_addr</i>	IP address of the host to which the console port will be connected.
<i>vlan</i>	(Optional) Number of the VLAN to be assigned to the interface; valid values are from 1 to 1005 and from 1025 to 4094.
<i>ip_addr</i>	(Optional) IP address.
<i>/netmask</i>	(Optional) Subnet mask.
<i>broadcast</i>	(Optional) Broadcast address.
<b>dhcp</b>	Performs Dynamic Host Configuration Protocol (DHCP) operations on the sc0 interface.
<b>renew</b>	Renews the lease on a DHCP-learned IP address.
<b>release</b>	Releases a DHCP-learned IP address back to the DHCP IP address pool.

**Defaults** The default configuration is the in-band interface (sc0) in VLAN 1 with the IP address, subnet mask, and broadcast address set to 0.0.0.0. The default configuration for the SLIP interface (sl0) is that the IP address and broadcast address are set to 0.0.0.0.0.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **set interface sc0 dhcp** command is valid only when the address is learned from the DHCP server and available in privileged mode only.

Two configurable network interfaces are on a Catalyst 6500 series switch: in-band (sc0) and SLIP (sl0). Configuring the sc0 interface with an IP address and subnet mask allows you to access the switch CLI through Telnet from a remote host. You should assign the sc0 interface to an active VLAN configured on the switch (the default is VLAN 1). Make sure the IP address you assign is in the same subnet as other stations in that VLAN.

Configuring the sl0 interface with an IP address and destination address allows you to make a point-to-point connection to a host through the console port. Use the **slip attach** command to activate SLIP on the console port (you will not be able to access the CLI through a terminal connected to the console port until you use the **slip detach** command to deactivate SLIP on the console port).

When you specify the *netmask* value, this indicates the number of bits allocated to subnetting in the hostid section of the given Class A, B, or C address. For example, if you enter an IP address for the sc0 interface as 172.22.20.7, the hostid bits for this Class B address is 16.

If you enter the *netmask* value in length of bits, for example, 204.20.22.7/24, the range for length is from 0 to 31 bits. If you do not enter the *netmask* value, the number of bits is assumed to be the natural netmask.

## Examples

This example shows how to use **set interface sc0** and **set interface sl0** from the console port. It also shows how to bring down **interface sc0** using a terminal connected to the console port:

```
Console> (enable) set interface sc0 192.20.11.44/255.255.255.0
Interface sc0 IP address and netmask set.
Console> (enable) set interface sl0 192.200.10.45 192.200.10.103
Interface sl0 SLIP and destination address set.
Console> (enable) set interface sc0 down
Interface sc0 administratively down.
Console> (enable)
```

This example shows how to set the IP address for sc0 through a Telnet session. Note that the default netmask for that IP address class is used (for example, a Class C address uses 255.255.255.0, and a Class B uses 255.255.0.0):

```
Console> (enable) set interface sc0 192.200.11.40
This command may disconnect active telnet sessions.
Do you want to continue (y/n) [n]? y
Interface sc0 IP address set.
```

This example shows how to take the interface out of operation through a Telnet session:

```
Console> (enable) set interface sc0 down
This command will inactivate telnet sessions.
Do you want to continue (y/n) [n]? y
Interface sc0 administratively down.
```

This example shows how to assign the sc0 interface to a particular VLAN:

```
Console> (enable) set interface sc0 5
Interface sc0 vlan set.
Console> (enable)
```

This example shows what happens when you assign the sc0 interface to a nonactive VLAN:

```
Console> (enable) set interface sc0 200
Vlan is not active, user needs to set vlan 200 active
Interface sc0 vlan set.
Console> (enable)
```

This example shows how to release a DHCP-learned IP address back to the DHCP IP address pool:

```
Console> (enable) set interface sc0 dhcp release  
Releasing IP address...Done  
Console> (enable)
```

This example shows how to renew a lease on a DHCP-learned IP address:

```
Console> (enable) set interface sc0 dhcp renew  
Renewing IP address...Done  
Console> (enable)
```

---

**Related Commands**

[show interface](#)  
[slip](#)

# set ip alias

Use the **set ip alias** command to add aliases of IP addresses.

```
set ip alias name ip_addr
```

Syntax Description	
<i>name</i>	Name of the alias being defined.
<i>ip_addr</i>	IP address of the alias being defined.

**Defaults** The default configuration is one IP alias (0.0.0.0) configured as the default.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to define an IP alias of mercury for IP address 192.122.174.234:

```
Console> (enable) set ip alias mercury 192.122.174.234
IP alias added.
Console> (enable)
```

**Related Commands**

- [clear ip alias](#)
- [show ip alias](#)

# set ip dns

Use the **set ip dns** command to enable or disable DNS.

```
set ip dns { enable | disable }
```

Syntax Description	<b>enable</b>	Enables DNS.
	<b>disable</b>	Disables DNS.

**Defaults** The default is DNS is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to enable DNS:

```
Console> (enable) set ip dns enable  
DNS is enabled.  
Console> (enable)
```

This example shows how to disable DNS:

```
Console> (enable) set ip dns disable  
DNS is disabled.  
Console> (enable)
```

**Related Commands** [show ip dns](#)

# set ip dns domain

Use the **set ip dns domain** command to set the default DNS domain name.

**set ip dns domain** *name*

<b>Syntax Description</b>	<i>name</i> DNS domain name.
---------------------------	------------------------------

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	If you specify a domain name on the command line, the system attempts to resolve the host name as entered. If the system cannot resolve the host name as entered, it appends the default DNS domain name as defined with the <b>set ip dns domain</b> command. If you specify a domain name with a trailing dot, the program considers this to be an <i>absolute</i> domain name.
-------------------------	---

<b>Examples</b>	This example shows how to set the default DNS domain name:
-----------------	--

```
Console> (enable) set ip dns domain yow.com
DNS domain name set to yow.com.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">clear ip dns domain</a> <a href="#">show ip dns</a>
-------------------------	--

# set ip dns server

Use the **set ip dns server** command to set the IP address of a Domain Name System (DNS) server.

```
set ip dns server ip_addr [primary]
```

<b>Syntax Description</b>	<i>ip_addr</i> IP address of the DNS server.
<b>primary</b>	(Optional) Configures a DNS server as the primary server.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>You can configure up to three DNS name servers as backup. You can also configure any DNS server as the primary server. The primary server is queried first. If the primary server fails, the backup servers are queried.</p> <p>If DNS is disabled, you must use the IP address with all commands that require explicit IP addresses or manually define an alias for that address. The alias has priority over DNS.</p>
<b>Examples</b>	<p>These examples show how to set the IP address of a DNS server:</p> <pre>Console&gt; (enable) set ip dns server 198.92.30.32 198.92.30.32 added to DNS server table as primary server.</pre> <pre>Console&gt; (enable) set ip dns server 171.69.2.132 primary 171.69.2.132 added to DNS server table as primary server.</pre> <pre>Console&gt; (enable) set ip dns server 171.69.2.143 primary 171.69.2.143 added to DNS server table as primary server.</pre> <p>This example shows what happens if you enter more than three DNS name servers as backup:</p> <pre>Console&gt; (enable) set ip dns server 161.44.128.70 DNS server table is full. 161.44.128.70 not added to DNS server table.</pre>
<b>Related Commands</b>	<p><a href="#">clear ip dns server</a></p> <p><a href="#">show ip dns</a></p>

# set ip fragmentation

Use the **set ip fragmentation** command to enable or disable the fragmentation of IP packets bridged between FDDI and Ethernet networks.

**set ip fragmentation {enable | disable}**

Syntax Description	enable	Permits fragmentation for IP packets bridged between FDDI and Ethernet networks.
	disable	Disables fragmentation for IP packets bridged between FDDI and Ethernet networks.

**Defaults** The default value is IP fragmentation is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If IP fragmentation is disabled, packets are dropped.  
Note that FDDI and Ethernet networks have different maximum transmission units (MTUs).

**Examples** This example shows how to disable IP fragmentation:

```
Console> (enable) set ip fragmentation disable
Bridge IP fragmentation disabled.
Console> (enable)
```

**Related Commands** [show ip route](#)

# set ip http port

Use the **set ip http port** command to configure the TCP port number for the HyperText Transfer Protocol (HTTP) server.

```
set ip http port { default | port-number }
```

Syntax Description	default	Specifies the default HTTP server port number (80).
	<i>port-number</i>	Number of the TCP port for the HTTP server; valid values are from 1 to 65535.

**Defaults** The default TCP port number is 80.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to set the IP HTTP port default:

```
Console> (enable) set ip http port default
HTTP TCP port number is set to 80.
Console> (enable)
```

This example shows how to set the IP HTTP port number:

```
Console> (enable) set ip http port 2398
HTTP TCP port number is set to 2398.
Console> (enable)
```

**Related Commands** [set ip http server](#)  
[show ip http](#)

# set ip http server

Use the **set ip http server** command to enable or disable the HTTP server.

```
set ip http server {enable | disable}
```

Syntax Description	
<b>enable</b>	Enables the HTTP server.
<b>disable</b>	Disables the HTTP server.

**Defaults** The default is the HTTP server is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to enable the HTTP server:

```
Console> (enable) set ip http server enable
HTTP server is enabled.
Console> (enable)
```

This example shows the system response when the HTTP server-enabled command is not supported:

```
Console> (enable) set ip http server enable
Feature not supported.
Console> (enable)
```

This example shows how to disable the HTTP server:

```
Console> (enable) set ip http server disable
HTTP server disabled.
Console> (enable)
```

**Related Commands** [set ip http port](#)  
[show ip http](#)

# set ip permit

Use the **set ip permit** command to enable or disable the IP permit list and to specify IP addresses to be added to the IP permit list.

```
set ip permit {enable | disable}
```

```
set ip permit {enable | disable} [telnet | ssh | snmp]
```

```
set ip permit addr [mask] [telnet | ssh | snmp | all]
```

Syntax Description	enable	Enables the IP permit list.
	disable	Disables the IP permit list.
	telnet	(Optional) Specifies the Telnet IP permit list.
	ssh	(Optional) Specifies the SSH IP permit list.
	snmp	(Optional) Specifies the SNMP IP permit list.
	addr	IP address to be added to the IP permit list. An IP alias or host name that can be resolved through DNS can also be used.
	mask	(Optional) Subnet mask of the specified IP address.
	all	(Optional) Specifies all entries in the IP permit list be removed.

**Defaults** The default is IP permit list is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can achieve the same functionality of the IP permit list by using VLAN access control lists (VACLs). VACLs are handled by hardware (PFC), and the processing is considerably faster. For VACL configuration information, refer to the *Catalyst 6500 Series Software Configuration Guide*.

You can configure up to 100 entries in the permit list. If you enable the IP permit list, but the permit list has no entries configured, a caution displays on the screen.

Make sure you enter the entire **disable** keyword when entering the **set ip permit disable** command. If you abbreviate the keyword, the abbreviation is interpreted as a host name to add to the IP permit list.

If you do not specify the **snmp**, **ssh**, **telnet**, or **all** keyword, the IP address is added to both the SNMP and Telnet permit lists.

You enter the mask in dotted decimal format, for example, 255.255.0.0.

**Examples** This example shows how to add an IP address to the IP permit list:

```
Console> (enable) set ip permit 192.168.255.255
```

```
192.168.255.255 added to IP permit list.  
Console> (enable)
```

This example shows how to add an IP address using an IP alias or host name to both the SNMP and Telnet permit lists:

```
Console> (enable) set ip permit batboy  
batboy added to IP permit list.  
Console> (enable)
```

This example shows how to add a subnet mask of the IP address to both the SNMP and Telnet permit lists:

```
Console> (enable) set ip permit 192.168.255.255 255.255.192.0  
192.168.255.255 with mask 255.255.192.0 added to IP permit list.  
Console> (enable)
```

This example shows how to add an IP address to the Telnet IP permit list:

```
Console> (enable) set ip permit 172.16.0.0 255.255.0.0 telnet  
172.16.0.0 with mask 255.255.0.0 added to telnet permit list.  
Console> (enable)
```

This example shows how to add an IP address to the SNMP IP permit list:

```
Console> (enable) set ip permit 172.20.52.32 255.255.255.224 snmp  
172.20.52.32 with mask 255.255.255.224 added to snmp permit list.  
Console> (enable)
```

This example shows how to add an IP address to all IP permit lists:

```
Console> (enable) set ip permit 172.20.52.3 all  
172.20.52.3 added to IP permit list.  
Console> (enable)
```

This example shows how to enable the IP permit list:

```
Console> (enable) set ip permit enable  
Telnet, Snmp and Ssh permit list enabled  
Console> (enable)
```

This example shows how to disable the IP permit list:

```
Console> (enable) set ip permit disable  
Telnet, Snmp and Ssh permit list disabled.  
Console> (enable)
```

This example shows how to enable a specific IP permit list type:

```
Console> (enable) set ip permit enable ssh  
SSH permit list enabled.  
Console> (enable)
```

---

**Related Commands**

[clear ip permit](#)  
[show ip permit](#)

# set ip redirect

Use the **set ip redirect** command to enable or disable ICMP redirect messages on the Catalyst 6500 series switches.

**set ip redirect {enable | disable}**

<b>Syntax Description</b>	<b>enable</b>	Permits ICMP redirect messages to be returned to the source host.
	<b>disable</b>	Prevents ICMP redirect messages from being returned to the source host.

**Defaults** The default configuration is ICMP redirect is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to deactivate ICMP redirect messages:

```
Console> (enable) set ip redirect disable  
ICMP redirect messages disabled.  
Console> (enable)
```

**Related Commands** [show ip route](#)  
[show netstat](#)

# set ip route

Use the **set ip route** command to add IP addresses or aliases to the IP routing table.

```
set ip route {destination}/[netmask] {gateway} [metric] [primary]
```

Syntax Description	
<i>destination</i>	IP address, IP alias of the network, or specific host to be added. Use <b>default</b> as the destination to set the new entry as the default route.
<i>/netmask</i>	(Optional) Number of bits in netmask or dot format (for example, 172.20.22.7/24 or 172.20.22.7/255.255.255.0).
<i>gateway</i>	IP address or IP alias of the router.
<i>metric</i>	(Optional) Value used to indicate the number of hops between the switch and the gateway.
<b>primary</b>	(Optional) Keyword used with the Multiple IP Gateways feature to specify the default IP gateway with the highest priority.

**Defaults** The default configuration routes the local network through the sc0 interface with metric 0 as soon as sc0 is configured.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can configure up to three default gateways. The **primary** is the highest priority. If you do not designate a primary gateway, priority is based on the order of input. If you enter two primary definitions, the second definition becomes the primary and the first definition becomes the secondary default IP gateway.

You can only specify the **primary** keyword for a default route.

When you enter the *destination* value or *gateway* value, enter it in dot notation, for example, a.b.c.d.

When you specify the *netmask* value, this indicates the number of bits allocated to subnetting in the hostid section of the given Class A, B, or C address. For example, if you enter an IP address for the sc0 interface as 172.22.20.7, the hostid bits for this Class B address is 16. Any number of bits in the hostid bits can be allocated to the netmask field. If you do not enter the *netmask* value, the number of bits is assumed to be the natural netmask.

When you enter the netmask, enter it as the number of bits or dot format, for example, **destination/24** or **destination/255.255.255.0**. If you enter the netmask in dot format, you must have contiguous 1s.

**Examples** These examples show how to add three default routes to the IP routing table, checking after each addition using the **show ip route** command:

```
Console> (enable) set ip route default 192.122.173.42 1 primary
```

```

Route added.
Console> (enable)

Console> (enable) show ip route
Fragmentation  Redirect  Unreachable
-----
enabled        enabled   enabled
Destination    Gateway   Flags    Use      Interface
-----
default         192.122.173.42  UG        59444   sc0
192.22.74.0     192.22.74.223  U          5       sc0
Console> (enable)
Console> (enable) set ip route default 192.122.173.43 1
Route added.
Console> (enable)

Console> (enable) show ip route
Fragmentation  Redirect  Unreachable
-----
enabled        enabled   enabled
Destination    Gateway   Flags    Use      Interface
-----
default         192.122.173.43  UG        59444   sc0
default         192.122.173.42  UG        59444   sc0
192.22.74.0     192.22.74.223  U          5       sc0
Console> (enable)

Console> (enable) set ip route default 192.122.173.44 1
Route added.
Console> (enable)

Console> (enable) show ip route
Fragmentation  Redirect  Unreachable
-----
enabled        enabled   enabled
Destination    Gateway   Flags    Use      Interface
-----
default         192.122.173.44  UG        59444   sc0
default         192.122.173.43  UG        59444   sc0
default         192.122.173.42  UG        59444   sc0
192.22.74.0     192.22.74.223  U          5       sc0
Console> (enable)

```

**Related Commands**

[clear ip route](#)  
[show ip route](#)

# set ip unreachable

Use the **set ip unreachable** command to enable or disable ICMP unreachable messages on the Catalyst 6500 series switch.

**set ip unreachable {enable | disable}**

Syntax Description	enable	Allows IP unreachable messages to be returned to the source host.
	disable	Prevents IP unreachable messages from being returned to the source host.

**Defaults** The default is ICMP unreachable messages is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you enable ICMP unreachable messages, the switch returns an ICMP unreachable message to the source host whenever it receives an IP datagram that it cannot deliver. When you disable ICMP unreachable messages, the switch does not notify the source host when it receives an IP datagram that it cannot deliver.

For example, a switch has the ICMP unreachable message function enabled and IP fragmentation disabled. If a FDDI frame is received and needs to transmit to an Ethernet port, the switch cannot fragment the packet. The switch drops the packet and returns an IP unreachable message to the Internet source host.

**Examples** This example shows how to disable ICMP unreachable messages:

```
Console> (enable) set ip unreachable disable
ICMP Unreachable message disabled.
Console> (enable)
```

**Related Commands** [show ip route](#)

# set kerberos clients mandatory

Use the **set kerberos clients mandatory** command to make Kerberos authentication mandatory for authenticating to services on the network.

## set kerberos clients mandatory

**Syntax Description** This command has no arguments or keywords.

**Defaults** The default is Kerberos clients are not set to mandatory.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** As an added layer of security, you can optionally configure the switch so that after users authenticate to it, they can authenticate to other services on the network only with Kerberos clients. If you do not make Kerberos authentication mandatory and Kerberos authentication fails, the application attempts to authenticate users using the default method of authentication for that network service. For example, Telnet prompts for a password.

**Examples** This example shows how to make Kerberos authentication mandatory:

```
Console> (enable) set kerberos clients mandatory
Kerberos clients set to mandatory
Console> (enable)
```

**Related Commands** [clear kerberos clients mandatory](#)  
[set kerberos credentials forward](#)  
[show kerberos](#)

# set kerberos credentials forward

Use the **set kerberos credentials forward** command to configure clients to forward users' credentials as they connect to other hosts in the Kerberos realm.

## set kerberos credentials forward

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default is forwarding is disabled.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** A user authenticated to a Kerberized switch has a ticket granting ticket (TGT) and can use it to authenticate to a host on the network. However, if forwarding is not enabled and a user tries to list credentials after authenticating to a host, the output will show no Kerberos credentials present.

You can optionally configure the switch to forward user TGTs as they authenticate from the switch to Kerberized remote hosts on the network by using Kerberized Telnet.

---

**Examples** This example shows how to enable Kerberos credentials forwarding:

```
Console> (enable) set kerberos credentials forward
Kerberos credentials forwarding enabled
Console> (enable)
```

---

**Related Commands** [set kerberos clients mandatory](#)  
[set kerberos local-realm](#)  
[show kerberos](#)

# set kerberos local-realm

Use the **set kerberos local-realm** command to configure a switch to authenticate users defined in the Kerberos database.

```
set kerberos local-realm kerberos_realm
```

<b>Syntax Description</b>	<i>kerberos_realm</i> IP address or name (in uppercase characters) of the Kerberos realm.
<b>Defaults</b>	The default value is a NULL string.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>To authenticate a user defined in the Kerberos database, you must configure the switch to know the host name or IP address of the host running the KDC and the name of the Kerberos realm.</p> <p>You must enter the Kerberos realm name in all uppercase characters.</p>
<b>Examples</b>	<p>This example shows how to set a default Kerberos local realm for the switch:</p> <pre>Console&gt; (enable) <b>set kerberos local-realm CISCO.COM</b> Kerberos local realm for this switch set to CISCO.COM. Console&gt; (enable)</pre>
<b>Related Commands</b>	<p><a href="#">clear kerberos realm</a> <a href="#">set kerberos realm</a> <a href="#">show kerberos</a></p>

# set kerberos realm

Use the **set kerberos realm** command to map the name of a Kerberos realm to a DNS domain name or a host name.

```
set kerberos realm {dns_domain | host} kerberos_realm
```

Syntax Description		
	<i>dns_domain</i>	DNS domain name to map to Kerberos realm.
	<i>host</i>	IP address or name to map to Kerberos host realm.
	<i>kerberos_realm</i>	IP address or name of Kerberos realm.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can map the name of the Kerberos realm to a DNS domain name or a host name by entering the **set kerberos realm** command. The information entered with this command is stored in a table with one entry for each Kerberos realm. The maximum number of entries in the table is 100.

You must enter Kerberos realms in uppercase characters.

**Examples** This example shows how to map the Kerberos realm to a domain name:

```
Console> (enable) set kerberos realm CISCO CISCO.COM
Kerberos DnsDomain-Realm entry set to CISCO - CISCO.COM
Console> (enable)
```

**Related Commands**

- [clear kerberos realm](#)
- [set kerberos local-realm](#)
- [show kerberos](#)

# set kerberos server

Use the **set kerberos server** command to specify which Key Distribution Center (KDC) to use on the switch.

```
set kerberos server kerberos_realm {hostname | ip_address} [port]
```

Syntax Description	
<i>kerberos_realm</i>	Name of the Kerberos realm.
<i>hostname</i>	Name of host running the KDC.
<i>ip_address</i>	IP address of host running the KDC.
<i>port</i>	(Optional) Number of the port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can specify to the switch which KDC to use in a Kerberos realm. Optionally, you can also specify the port number which the KDC is monitoring. The Kerberos server information you enter is maintained in a table with one entry for each Kerberos realm. The maximum number of entries in the table is 100. The KDC is a Kerberos server and database program running on a network host that allocates the Kerberos credentials to different users or network services.

**Examples** This example shows how to specify the Kerberos server:

```
Console> (enable) set kerberos server CISCO.COM 187.0.2.1 750
Kerberos Realm-Server-Port entry set to:CISCO.COM - 187.0.2.1 - 750
Console> (enable)
```

**Related Commands**

- [clear kerberos server](#)
- [set kerberos server](#)
- [show kerberos](#)

# set kerberos srvtab entry

Use the **set kerberos srvtab entry** command to enter the SRVTAB file directly into the switch from the command line.

```
set kerberos srvtab entry kerberos_principal principal_type timestamp key_version number
key_type key_length encrypted_keytab
```

Syntax Description		
<i>kerberos_principal</i>		Service on the switch.
<i>principal_type</i>		Version of the Kerberos SRVTAB.
<i>timestamp</i>		Number representing the date and time the SRVTAB entry was created.
<i>key_version_number</i>		Version of the encrypted key format.
<i>key_type</i>		Type of encryption used.
<i>key_length</i>		Length, in bytes, of the encryption key.
<i>encrypted_keytab</i>		Secret key the switch shares with the KDC.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** To make it possible for remote users to authenticate to the switch using Kerberos credentials, the switch must share a secret key with the KDC. To do this, you must give the switch a copy of the file that is stored in the KDC, which contains the secret key. These files are called SRVTAB files.

When you enter the SRVTAB directly into the switch, create an entry for each Kerberos principal (service) on the switch. The entries are maintained in the SRVTAB table. The maximum table size is 20 entries.

The KDC is a Kerberos server and database program running on a network host that allocates the Kerberos credentials to different users or network services.

The key is encrypted with the private 3DES key when you copy the configuration to a file or enter the **show config** command.

**Examples** This example shows how to enter a SRVTAB file directly into the switch:

```
Console> (enable) set kerberos srvtab entry host/niners.cisco.com@CISCO.COM 0 932423923 1
1 8 03;;5>00>50;0=0=0
Kerberos SRVTAB entry set to
Principal:host/niners.cisco.com@CISCO.COM
Principal Type:0
Timestamp:932423923
Key version number:1
```

```
Key type:1  
Key length:8  
Encrypted key tab:03;;5>00>50;0=0=0
```

---

**Related Commands**

[clear kerberos clients mandatory](#)  
[show kerberos](#)

# set kerberos srvtab remote

Use the **set kerberos srvtab remote** command to provide the switch with a copy of the SRVTAB file from the KDC that contains the secret key.

**set kerberos srvtab remote** *{hostname | ip\_address} filename*

Syntax Description	
<i>hostname</i>	Name of host running the KDC.
<i>ip_address</i>	IP address of host running the KDC.
<i>filename</i>	Name of the SRVTAB file.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** To make it possible for remote users to authenticate to the switch using Kerberos credentials, the switch must share a secret key with the KDC. To do this, you must give the switch a copy of the file that is stored in the KDC, which contains the secret key. These files are called SRVTAB files.

The KDC is a Kerberos server and database program running on a network host that allocates the Kerberos credentials to different users or network services.

The most secure method to copy SRVTAB files to the hosts in your Kerberos realm is to copy them onto physical media and go to each host in turn and manually copy the files onto the system. To copy SRVTAB files to the switch, which does not have a physical media drive, you must transfer them through the network using TFTP.

**Examples** This example shows how to copy SRVTAB files to the switch remotely from the KDC:

```
Console> (enable) set kerberos srvtab remote 187.20.32.10 /users/jdoe/krb5/ninerskeytab
Console> (enable)
```

**Related Commands**

- [clear kerberos creds](#)
- [set kerberos srvtab entry](#)
- [show kerberos](#)

# set key config-key

Use the **set key config-key** command to define a private 3DES key.

**set key config-key** *string*

---

<b>Syntax Description</b>	<i>string</i> 3DES key name.
---------------------------	------------------------------

---

---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Usage Guidelines</b>	You can define a private 3DES key for the switch. You can use the private 3DES key to encrypt the secret key that the switch shares with the KDC. If you set the 3DES key, the secret key is not displayed in clear text when you execute the <b>show kerberos</b> command. The key length should be eight characters or less.
-------------------------	--

---

<b>Examples</b>	This example shows how to define a 3DES key: <pre>Console&gt; (enable) <b>set key config-key abcd</b> Kerberos config key set to abcd Console&gt; (enable)</pre>
-----------------	---

---

<b>Related Commands</b>	<b>clear key config-key</b>
-------------------------	-----------------------------

# set l2protocol-tunnel cos

Use the **set l2protocol-tunnel cos** command to apply a CoS value to all ingress tunneling ports.

**set l2protocol-tunnel cos** *cos-value*

<b>Syntax Description</b>	<i>cos-value</i>	CoS value; valid values are from 0 to 7.
---------------------------	------------------	--

<b>Defaults</b>	The default value for CoS is 5.
-----------------	---------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	Because the CoS value applies to all ingress tunneling ports, all encapsulated PDUs sent out by the switch have the same CoS value.
-------------------------	---

<b>Examples</b>	<p>This example shows how to set the CoS value to 6:</p> <pre>Console&gt; (enable) set l2protocol-tunnel cos 6 New CoS value is 6. Console&gt; (enable)</pre>
-----------------	---

<b>Related Commands</b>	<p><b>clear l2protocol-tunnel cos</b>  <b>clear l2protocol-tunnel statistics</b>  <b>set port l2protocol-tunnel</b>  <b>show l2protocol-tunnel statistics</b>  <b>show port l2protocol-tunnel</b></p>
-------------------------	---

# set lacp-channel system-priority

Use the **set lacp-channel system-priority** command to set the priority of the system.

```
set lacp-channel system-priority value
```

<b>Syntax Description</b>	<i>value</i> Number of the priority; valid values are from 1 to 65535.
---------------------------	--

<b>Defaults</b>	The default system priority value is <b>32768</b> .
-----------------	---

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	<p>LACP is supported on all Ethernet interfaces.</p> <p>The <b>set lacp-channel system-priority</b> command is a global command; however, the priority value is used only for the modules that are running LACP. The priority value is ignored on the modules that are running PAgP.</p> <p>Higher value numbers correspond to lower priority levels.</p> <p>For differences between PAgP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the <i>Catalyst 6500 Series Software Configuration Guide</i>.</p>
-------------------------	---

<b>Related Commands</b>	<ul style="list-style-type: none"><li><a href="#">clear lacp-channel statistics</a></li><li><a href="#">set channelprotocol</a></li><li><a href="#">set port lacp-channel</a></li><li><a href="#">set spantree channelcost</a></li><li><a href="#">set spantree channelvlancost</a></li><li><a href="#">show lacp-channel</a></li><li><a href="#">show port lacp-channel</a></li></ul>
-------------------------	--

# set lcperroraction

Use the **set lcperroraction** command to configure how your system handles Link Control Protocol (LCP) errors when a module reports an ASIC problem to the NMP.

**set lcperroraction** *action*

## Syntax Description

*action* Action for handling LCP errors. See the “Usage Guidelines” section for more information about valid values for action levels.

## Defaults

The default is that the action level is set to **ignore**.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

Valid values for action levels are as follows:

- **operator**—The system displays a recommended action for you to take. The system also logs the LCP error.
- **system**—The system automatically takes an action to handle the LCP error. The system also logs the LCP error.
- **ignore**—No action is taken. The system only logs the LCP error.



### Note

Be careful when using the **system** value because the switch automatically takes action, including possibly resetting or power cycling modules.

## Examples

This example shows how to set the action that handles an LCP error:

```
Console> (enable) set lcperroraction ignore
Console> (enable)
```

## Related Commands

[show lcperroraction](#)

# set lda

Use the **set lda** command to configure the ASLB information on the Catalyst 6500 series switch.

**set lda enable | disable**

**set lda vip** {*server\_virtual\_ip*} {*destination\_tcp\_port*} [{*server\_virtual\_ip*}  
{*destination\_tcp\_port*}] ...

**set lda mac ld** {*ld\_mac\_address*}

**set lda mac router** {*mac\_address*}...

**set lda router** {*router\_vlan*} {*ld\_mod/port*} [*backup\_ld\_mod/port*]

**set lda server** {*server\_vlan*} {*ld\_mod/port*} [*backup\_ld\_mod/port*]

**set lda udpage** {*udpagetime*}

Syntax Description		
<b>enable   disable</b>		Enables or disable the ASLB feature.
<b>vip</b> <i>server_virtual_ip</i> <i>destination_tcp_port</i>		Keyword and variables to specify the virtual IP address of the server and the number of the destination TCP port that will be accelerated by the switch (up to 1024).
<b>mac ld</b> <i>ld_mac_address</i>		Keyword and variables to specify the LD MAC address.
<b>mac router</b> <i>mac_address...</i>		Specifies the router MAC address.
<b>router</b> <i>router_vlan</i> <i>ld_mod/port</i>		Specifies the router VLAN. Module and port number of the port connected to the LD on the VLAN.
<i>backup_ld_mod/port</i>		(Optional) Module and port number of the port connected to the backup LD.
<b>server</b> <i>server_vlan</i>		Specifies the server VLAN.
<b>udpage</b> <i>udpagetime</i>		Specifies the UDP aging time for LocalDirector acceleration.

**Defaults** The default is the ASLB is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is supported only on switches configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC (Policy Feature Card).

You can enter a zero (0) as a wildcard (don't care) digit for the *destination\_tcp\_port* value.

You can enter up to 1024 *server\_virtual\_ip destination\_tcp\_port* entries separated by a space.

To cancel a previously entered VIP, use the **clear lda vip** command.

To cancel a previously entered MAC LD or router, use the **clear lda mac** command.

You need to enter the **set lda** commands to provide all the necessary information before using the **commit lda** command to program the setup into hardware.

The information you enter through the **set lda** commands are immediately saved into NVRAM, but you must enter the **commit lda** command for the setting to take effect.

When you disable the ASLB feature, you can enter the **set lda** commands, but the **commit lda** command will fail.

When you enter the **set lda mac router** command, you can enter up to 32 MAC addresses.

You can enter the value zero (0) to disable the **udpage** option. The *udpagingtime* value is specified in milliseconds; values are from 0 milliseconds to 2024000 milliseconds.

## Examples

This example shows how to enable the ASLB feature:

```
Console> (enable) set lda enable
Successfully enabled Local Director Acceleration.
Console> (enable)
```

This example shows how to disable the ASLB feature:

```
Console> (enable) set lda disable
Disabling Local Director Acceleration....
Successfully disabled Local Director Acceleration.
Console> (enable)
```

This example shows how to specify the virtual IP address:

```
Console> (enable) set lda vip 10.0.0.8 8
Successfully set server virtual ip and port information.
Use commit lda command to save settings to hardware.
Console> (enable)
```

This example shows how to specify the MAC address for the LocalDirector:

```
Console> (enable) set lda mac ld 1-2-3-4-5-6
Successfully set mac address.
Use commit lda command to save settings to hardware.
Console> (enable)
```

This example shows how to specify multiple router MAC addresses:

```
Console> (enable) set lda mac router 1-2-3-4-5-6 3-4-56-67-4-5
Successfully set mac address.
Use commit lda command to save settings to hardware.
Console> (enable)
```

This example shows how to specify the router VLAN:

```
Console> (enable) set lda router 110 4/26
Successfully set router vlan and ld port.
Use commit lda command to save settings to hardware.
Console> (enable)
```

This example shows how to specify the udpage aging time:

```
Console> (enable) set lda udpage 20  
Successfully set LDA UDP aging time to 20ms.  
Console> (enable)
```

This example shows how to specify the server VLAN:

```
Console> (enable) set lda server 105 4/40  
Successfully set server vlan and LD port.  
Use commit lda command to save settings to hardware.  
Console> (enable)
```

#### Related Commands

[clear lda](#)  
[commit lda](#)  
[show lda](#)

# set length

Use the **set length** command to configure the number of lines in the terminal display screen.

**set length** *number* [**default**]

Syntax Description	<i>number</i>	Number of lines to display on the screen; valid values are from 0 to 512.
	<b>default</b>	(Optional) Sets the number of lines in the terminal display screen for the current administration session and all other sessions.

**Defaults** The default value is 24 lines upon starting a session.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Output from a single command that overflows a single display screen is followed by the --More-- prompt. At the --More-- prompt, you can press **Ctrl-C**, **q**, or **Q** to interrupt the output and return to the prompt, press the **Spacebar** to display an additional screen of output, or press **Return** to display one more line of output.

Setting the screen length to 0 turns off the scrolling feature and causes the entire output to display at once. Unless you use the **default** keyword, a change to the terminal length value applies only to the current session.

When you change the value in a session, it applies only to that session. When you use the **clear config** command, the number of lines in the terminal display screen is reset to the default of 100.

The **default** keyword is available in privileged mode only.

**Examples** This example shows how to set the screen length to 60 lines:

```
Console> (enable) set length 60
Screen length for this session set to 60.
Console> (enable)
```

This example shows how to set the default screen length to 40 lines:

```
Console> (enable) set length 40 default
Screen length set to 40.
Console> (enable)
```

# set logging buffer

Use the **set logging buffer** command to limit the number of system logging messages buffered.

**set logging buffer** *buffer\_size*

---

<b>Syntax Description</b>	<i>buffer_size</i> Number of system logging messages to store in the buffer; valid values are from 1 to 500.
---------------------------	--

---

---

<b>Defaults</b>	The default value is 500.
-----------------	---------------------------

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Examples</b>	This example shows how to limit the syslog message buffer to 400 messages:
-----------------	--

```
Console> (enable) set logging buffer 400  
System logging buffer size set to <400>.  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">clear logging buffer</a> <a href="#">set logging timestamp</a> <a href="#">show logging buffer</a>
-------------------------	--

# set logging console

Use the **set logging console** command to enable and disable the sending of system logging messages to the console.

**set logging console {enable | disable}**

Syntax Description	enable	disable
	Enables system message logging to the console.	Disables system message logging to the console.

**Defaults** The default is system message logging to the console is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to enable system message logging to the console:

```
Console> (enable) set logging console enable
System logging messages will be sent to the console.
Console> (enable)
```

This example shows how to disable system message logging to the console:

```
Console> (enable) set logging console disable
System logging messages will not be sent to the console.
Console> (enable)
```

**Related Commands**

- [set logging level](#)
- [set logging session](#)
- [show logging](#)
- [show logging buffer](#)

# set logging history

Use the **set logging history** command to set the size of the syslog history table.

```
set logging history syslog_history_table_size
```

<b>Syntax Description</b>	<i>syslog_history_table_size</i> Size of the syslog history table; valid values are from 0 to 500.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	The Catalyst 6500 series switch holds syslog messages until the number of messages equals the defined size of the history log, after which the N messages are sent.
<b>Examples</b>	This example shows how to set the size of the syslog history table to 400: <pre>Console&gt; (enable) <b>set logging history 400</b> System logging history table size set to &lt;400&gt;. Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">clear logging buffer</a> <a href="#">show logging</a>

# set logging level

Use the **set logging level** command to set the facility and severity level used when logging system messages.

**set logging level** *facility severity* [**default**]

Syntax Description	
<i>facility</i>	Specifies the type of system messages to capture; facility types are listed in <a href="#">Table 2-12</a> .
<i>severity</i>	Specifies the severity level of system messages to capture; severity level definitions are listed in <a href="#">Table 2-13</a> .
<b>default</b>	(Optional) Causes the specified logging level to apply to all sessions.

**Table 2-12 Facility Types**

Facility Name	Definition
<b>all</b>	All facilities
<b>acl</b>	access control list
<b>cdp</b>	Cisco Discovery Protocol
<b>cops</b>	Common Open Policy Service Protocol
<b>dtp</b>	Dynamic Trunking Protocol
<b>dvlan</b>	Dynamic VLAN
<b>earl</b>	Enhanced Address Recognition Logic
<b>fileys</b>	file system facility
<b>gvrp</b>	GARP VLAN Registration Protocol
<b>ip</b>	Internet Protocol
<b>kernel</b>	Kernel
<b>ld</b>	ASLB facility
<b>mcast</b>	Multicast
<b>mgmt</b>	Management
<b>mls</b>	Multilayer Switching
<b>pagp</b>	Port Aggregation Protocol
<b>protfilt</b>	Protocol Filter
<b>pruning</b>	VTP pruning
<b>privatevlan</b>	Private VLAN facility
<b>qos</b>	Quality of Service
<b>radius</b>	Remote Access Dial-In User Service
<b>rsvp</b>	ReSerVation Protocol
<b>security</b>	Security
<b>snmp</b>	Simple Network Management Protocol

Table 2-12 Facility Types (continued)

Facility Name	Definition
<b>spantree</b>	Spanning Tree Protocol
<b>sys</b>	System
<b>tac</b>	Terminal Access Controller
<b>tcp</b>	Transmission Control Protocol
<b>telnet</b>	Terminal Emulation Protocol
<b>tftp</b>	Trivial File Transfer Protocol
<b>udld</b>	User Datagram Protocol
<b>vmps</b>	VLAN Membership Policy Server
<b>vtp</b>	Virtual Terminal Protocol

Table 2-13 Severity Level Definitions

Severity Level	Description
<b>0</b> —emergencies	System unusable
<b>1</b> —alerts	Immediate action required
<b>2</b> —critical	Critical condition
<b>3</b> —errors	Error conditions
<b>4</b> —warnings	Warning conditions
<b>5</b> —notifications	Normal bug significant condition
<b>6</b> —informational	Informational messages
<b>7</b> —debugging	Debugging messages

**Defaults**

The default is *facility* is set to **all**, and *level* is set to **0**.

**Command Types**

Switch command.

**Command Modes**

Privileged.

**Usage Guidelines**

You can also set the logging level by using the **set logging server** command.

If you do not use the **default** keyword, the specified logging level applies only to the current session.

**Examples**

This example shows how to set the default facility and severity level for system message logging:

```
Console> (enable) set logging level snmp 2 default
System logging facility <snmp> set to severity 2(critical).
Console> (enable)
```

■ set logging level

---

**Related Commands**

[clear logging level](#)  
[show logging](#)  
[show logging buffer](#)

# set logging server

Use the **set logging server** command to enable and disable system message logging to configured syslog servers and to add a syslog server to the system logging server table.

**set logging server** { **enable** | **disable** }

**set logging server** *ip\_addr*

**set logging server** *facility severity*

**set logging server severity** *severity*

**set logging server** *facility*

Syntax Description		
<b>enable</b>		Enables system message logging to configured syslog servers.
<b>disable</b>		Disables system message logging to configured syslog servers.
<i>ip_addr</i>		IP address of the syslog server to be added to the configuration.
<i>facility</i>		Type of system messages to capture; server facility types are listed in <a href="#">Table 2-14</a> .
<i>severity</i>		Severity level; severity level definitions are listed in <a href="#">Table 2-13</a> .
<b>severity</b> <i>severity</i>		Globally sets the syslog maximum severity control for all message types; severity level definitions are listed in <a href="#">Table 2-13</a> .

**Table 2-14 Server Facility Types**

Severity Level	Description
<b>local 0</b>	Server facility local 0
<b>local 1</b>	Server facility local 1
<b>local 2</b>	Server facility local 2
<b>local 3</b>	Server facility local 3
<b>local 4</b>	Server facility local 4
<b>local 5</b>	Server facility local 5
<b>local 6</b>	Server facility local 6
<b>local 7</b>	Server facility local 7
<b>syslog</b>	syslog facility

## Defaults

The default is no syslog servers are configured to receive system messages.

## Command Types

Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** You can also set the logging level by using the [set logging level](#) command. If you do not enter the facility or server keywords, the parameter is applied to all levels.

Severity logging to a configured syslog server depends on the configuration set by the [set logging level](#) command. The server severity level must be greater than or equal to the default severity level of the message facility that you expect to receive in syslog messages on the syslog server.

---

**Examples** This example shows how to enable system message logging to the server:

```
Console> (enable) set logging server enable  
System logging messages will be sent to the configured syslog servers.  
Console> (enable)
```

This example shows how to disable system message logging to the server:

```
Console> (enable) set logging server disable  
System logging messages will not be sent to the configured syslog servers.  
Console> (enable)
```

This example shows how to add a server to the system logging server table using its IP address:

```
Console> (enable) set logging server 171.69.192.205  
171.69.192.205 added to the System logging server table.  
Console> (enable)
```

This example shows how to globally set the syslog maximum severity control for all message types:

```
Console> (enable) set logging server severity 4  
System logging server severity set to 4(warnings).  
Console> (enable)
```

---

**Related Commands** [clear logging server](#)  
[show logging](#)

# set logging session

Use the **set logging session** command to enable or disable the sending of system logging messages to the current login session.

**set logging session { enable | disable }**

Syntax Description	enable	disable
	Enables the sending of system logging messages to the current login session.	Disables the sending of system logging messages to the current login session.

**Defaults** The default is system message logging to the current login session is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to prevent system logging messages from being sent to the current login session:

```
Console> (enable) set logging session disable
System logging messages will not be sent to the current login session.
Console> (enable)
```

This example shows how to cause system logging messages to be sent to the current login session:

```
Console> (enable) set logging session enable
System logging messages will be sent to the current login session.
Console> (enable)
```

**Related Commands**

- [set logging console](#)
- [set logging level](#)
- [show logging](#)
- [show logging buffer](#)

# set logging telnet

Use the **set logging telnet** command to enable or disable logging on Telnet sessions.

**set logging telnet { enable | disable }**

Syntax Description	enable	disable
	Enables logging on Telnet sessions.	Disables logging on Telnet sessions.

**Defaults** The default is system message logging to the Telnet session is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to allow system logging messages to be sent to new Telnet sessions:

```
Console> (enable) set logging telnet enable
System logging messages will be sent to the new telnet sessions.
Console> (enable)
```

This example shows how to prevent system logging messages from being sent to new Telnet sessions:

```
Console> (enable) set logging telnet disable
System logging messages will not be sent to the new telnet sessions.
Console> (enable)
```

**Related Commands**

- [set logging console](#)
- [set logging level](#)
- [show logging](#)
- [show logging buffer](#)

# set logging timestamp

Use the **set logging timestamp** command to enable or disable the time-stamp display on system logging messages.

```
set logging timestamp {enable | disable}
```

Syntax Description	<b>enable</b>	Enables the time-stamp display.
	<b>disable</b>	Disables the time-stamp display.

**Defaults** By default, system message logging time-stamp is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to enable the time-stamp display:

```
Console> (enable) set logging timestamp enable  
System logging messages timestamp will be enabled.  
Console> (enable)
```

This example shows how to disable the time-stamp display:

```
Console> (enable) set logging timestamp disable  
System logging messages timestamp will be disabled.  
Console> (enable)
```

**Related Commands** [show logging](#)

■ set logging timestamp

# set logout

Use the **set logout** command to set the number of minutes until the system disconnects an idle session automatically.

**set logout** *timeout*

<b>Syntax Description</b>	<i>timeout</i>	Number of minutes until the system disconnects an idle session automatically; valid values are from 0 to 10,000 minutes.
---------------------------	----------------	--

**Defaults** The default is 20 minutes.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Setting the value to 0 disables the automatic disconnection of idle sessions.

The **show tech-support** command may time out if the configuration file output takes longer to display than the configured session timeout time. If this happens, enter a **set logout** *timeout* value of 0 to disable automatic disconnection of idle sessions or enter a longer *timeout* value.

**Examples** This example shows how to set the number of minutes until the system disconnects an idle session automatically:

```
Console> (enable) set logout 20
Sessions will be automatically logged out after 20 minutes of idle time.
Console> (enable)
```

This example shows how to disable the automatic disconnection of idle sessions:

```
Console> (enable) set logout 0
Sessions will not be automatically logged out.
Console> (enable)
```

**Related Commands** [show tech-support](#)

## set mls agingtime

Use the **set mls agingtime** command to specify the MLS aging time of shortcuts to an MLS entry in the Catalyst 6500 series switches.

```
set mls agingtime [ip | ipx] {agingtime}
```

```
set mls agingtime fast {fastagingtime} {pkt_threshold}
```

```
set mls agingtime long-duration {longagingtime}
```

Syntax Description		
<b>ip</b>	(Optional) Specifies IP MLS.	
<b>ipx</b>	(Optional) Specifies IPX MLS.	
<i>agingtime</i>	MLS aging time of shortcuts to an MLS entry; valid values are multiples of 8 to any value in the range of 8 to 2024 seconds.	
<b>fast</b>	Specifies the MLS aging time of shortcuts to an MLS entry that has no more than <i>pkt_threshold</i> packets switched within <i>fastagingtime</i> seconds after it is created.	
<i>fastagingtime</i>	MLS aging time of shortcuts to an MLS entry; valid values are multiples of 8 to any value in the range from 0 to 128 seconds.	
<i>pkt_threshold</i>	Packet threshold value; valid values are <b>0, 1, 3, 7, 15, 31, 63,</b> and <b>127</b> packets.	
<b>long-duration</b>	Sets the aging time for active flows.	
<i>longagingtime</i>	MLS aging time of shortcuts to an MLS entry; valid values are from 64 to 1920 seconds in increments of 64.	

**Defaults** The default *agingtime* is 256 seconds. The default *fastagingtime* is 0, no fast aging. The default *pkt\_threshold* is 0. The default *longagingtime* is 1920.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use the **ip** keyword, you are specifying a shortcut for IP MLS. If you use the **ipx** keyword, you are specifying a shortcut for IPX MLS.

If you enter **0** for the *fastagingtime* value, fast aging is disabled.

If you do not specify *fastagingtime* or *pkt\_threshold*, the default value is used.

If you enter any of the **set mls** commands on a Catalyst 6500 series switch without MLS, this warning message displays:

```
MLS not supported on feature card.
```

The *agingtime* value can be configured as multiples of 8 in the range of 8 to 2024 seconds. The values are picked up in numerical order to achieve efficient aging. Any value for *agingtime* that is not a multiple of 8 seconds is adjusted to the closest one. For example, 65 is adjusted to 64, while 127 is adjusted to 128.

The *fastagingtime* value can be configured as multiples of 8 to any value in the range of 0 to 128 seconds.

The default *pkt\_threshold* value is 0. It can be configured as 0, 1, 3, 7, 15, 31, 63, or 127 (the values picked for efficient aging). If you do not configure *fastagingtime* exactly the same for these values, it adjusts to the closest value. A typical value for *fastagingtime* and *pkt\_threshold* is 32 seconds and 0 packet, respectively (it means no packet switched within 32 seconds after the entry was created).

The *agingtime* value applies to an MLS entry that has no more than *pkt\_threshold* packets switched within *fastagingtime* seconds after it is created. A typical example is the MLS entry destined to/sourced from a DNS or TFTP server. This entry may never be used again once it is created. For example, only one request goes to a server and one reply returns from the server, and then the connection is closed.

The **agingtime fast** option is used to purge entries associated with very short flows, such as DNS and TFTP.

Keep the number of MLS entries in the MLS cache below 32K. If the number of MLS entries exceed 32K, some flows (less than 1 percent) are sent to the router.

To keep the number of MLS cache entries below 32K, decrease the aging time up to 8 seconds. If your switch has a lot of short flows used by only a few packets, then you can use fast aging.

If cache entries continue to exceed 32K, decrease the normal aging time in 64-second increments from the 256-second default.

You can force an active flow to age out by entering the **set mls agingtime long-duration** command. You can specify the aging time of the active flow in the range of 64 to 1920 seconds in increments of 64.

---

## Examples

These examples show how to set the aging time:

```
Console> (enable) set mls agingtime 512
IP Multilayer switching aging time set to 512 seconds.
Console> (enable)
```

```
Console> (enable) set mls agingtime ipx 512
IPX Multilayer switching aging time set to 512
Console> (enable)
```

This example shows how to set the fast aging time:

```
Console> (enable) set mls agingtime fast 32 0
Multilayer switching fast aging time set to 32 seconds for entries with no more than 0
packet switched.
Console> (enable)
```

This example shows how to set the aging time for active flows:

```
Console> (enable) set mls agingtime long-duration 128
Multilayer switching agingtime set to 128 seconds for long duration flows
Console> (enable)
```

---

## Related Commands

[clear mls statistics entry](#)  
[show mls](#)

# set mls bridged-flow-statistics

Use the **set mls bridged-flow-statistics** command to enable or disable statistics for bridged flows for specified VLANs.

```
set mls bridged-flow-statistics {enable | disable} {vlanlist}
```

Syntax Description	<b>enable</b>	Enables statistics for bridged flows.
	<b>disable</b>	Disables statistics for bridged flows.
	<i>vlanlist</i>	Number of the VLAN or VLANs; valid values are from 1 to 1000, 1025 to 4094. See the “Usage Guidelines” section for more information.

**Defaults** By default, bridged-flow statistics is disabled on all VLANs.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can enter one or multiple VLANs. The following examples are valid VLAN lists: 1; 1,2,3; 1-3,7. Bridged flows are exported through NDE when bridged flow statistics is enabled.

**Examples** This example shows how to enable bridged-flow statistics on the specified VLANs:

```
Console> (enable) set mls bridged-flow-statistics enable 1-21
Netflow statistics is enabled for bridged packets on vlan(s) 1-21.
Console> (enable)
```

**Related Commands**

- [show mls entry](#)
- [show mls nde](#)
- [show mls statistics](#)

# set mls cef load-balance

Use the **set mls cef load-balance** command to include or exclude Layer 4 ports in a load-balancing hash.

```
set mls cef load-balance { full | source-destination-ip }
```

<b>Syntax Description</b>	<b>full</b>	Bases the hash on Layer 4 ports and source and destination IP addresses.
	<b>source-destination-ip</b>	Bases the hash on source and destination IP addresses.

**Defaults** By default, the load-balancing hash is based on source and destination IP addresses.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When multiple paths are available to reach a destination, the new hash is used to choose the path to be used for forwarding.

**Examples** This example shows how to base the hash on Layer 4 ports and source and destination IP addresses:

```
Console> (enable) set mls cef load-balance full  
Console> (enable)
```

This example shows how to base the hash on source and destination IP addresses:

```
Console> (enable) set mls cef load-balance source-destination-ip  
Console> (enable)
```

**Related Commands** [show mls](#)

# set mls exclude protocol

Use the **set mls exclude protocol** command on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC to exclude an MLS protocol port. Use this command on switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) to exclude protocols from statistics gathering.

```
set mls exclude protocol {tcp | udp | both} {port_number | port_name}
```

<b>Syntax Description</b>	<b>tcp   udp   both</b> Specifies a TCP, UDP port, or that the port be applied to both TCP and UDP traffic.
	<i>port_number</i> Number of the protocol port; valid values are from 1 to 65535.
	<i>port_name</i> Name of the port; valid values are <b>dns, ftp, smtp, telnet, x, www</b> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you enter any of the **set mls** commands on a Catalyst 6500 series switch without MLS, this warning message is displayed:

```
MLS not supported on feature card.
```

You can add a maximum of four protocol ports to the exclude table.

MLS exclusion is supported in full flow mode only.

If you enter **x** for the port name, this specifies the Layer 4 port used by the X-windows application.

**Examples** This example shows how to exclude TCP packets on protocol port 6017:

```
Console> (enable) set mls exclude protocol tcp 6017
TCP packets with protocol port 6017 will be switched by RP.
Console> (enable)
```

This example shows how to exclude UDP packets on protocol port 6017:

```
Console> (enable) set mls exclude protocol udp 6017
TCP and UDP packets with protocol port 6017 will be switched by RP.
Console> (enable)
```

**Related Commands** [show mls](#)

## set mls flow

Use the **set mls flow** command to specify the minimum flow mask used for MLS. This command is needed to collect statistics for the supervisor engine.

```
set mls flow { destination | destination-source | full }
```



Caution

**Use this command carefully.** This command *purges all existing shortcuts* and affects the number of active shortcuts. This command can increase the cache usage and increase the load on the router.



Caution

Be extremely careful if you enter this command on a switch that already has a large number of shortcuts (greater than 16K).



Caution

Do not place this command in scripts that are frequently executed—changing the MLS flow mask purges all MLS cache entries.

### Syntax Description

<b>destination</b>	Sets the minimum flow mask to destination flow.
<b>destination-source</b>	Sets the minimum flow mask to source flow.
<b>full</b>	Sets the minimum flow mask to an extended access list.

### Defaults

If there are no access lists on any MLS-RP, the flow mask is set to destination flow.

### Command Types

Switch command.

### Command Modes

Privileged.

### Usage Guidelines

This command specifies the minimum MLS flow mask. Depending on the MLS-RP configuration, the actual flow mask used might be more specific than the specified minimum flow mask. For example, if you configure the minimum flow mask to **destination-source**, but an MLS-RP interface is configured with IP extended access lists, the actual flow mask used will be **full**.

If you configure a more specific flow mask (for example, **destination-source** or **full**), the number of active flow entries increases. To limit the number of active flow entries, you might need to decrease the MLS aging time.

This command is intended to be used for gathering very detailed statistics at the protocol port level; for example, when NetFlow data is exported to an RMON2 probe.

---

**Examples**

These examples show how to specify that only expired flows to subnet 171.69.194.0 are exported:

```
Console> (enable) set mls flow destination  
Configured flow mask is set to destination flow.  
Console> (enable)
```

```
Console> (enable) set mls flow destination-source  
Configured flow mask is set to destination-source flow.  
Console> (enable)
```

```
Console> (enable) set mls flow full  
Configured flow mask is set to full flow.  
Console> (enable)
```

---

**Related Commands**    [show mls](#)

## set mls nde

Use the **set mls nde** command to configure the NetFlow Data Export (NDE) feature in the Catalyst 6500 series switches to allow command-exporting statistics to be sent to the preconfigured collector.

```
set mls nde {enable | disable}
```

```
set mls nde {collector_ip | collector_name} {udp_port_num}
```

```
set mls nde version {1 | 7 | 8}
```

```
set mls nde flow [exclude | include] [destination ip_addr_spec] [source ip_addr_spec]
[protocol protocol] [src-port src_port] [dst-port dst_port]
```

```
set mls nde {destination-index | source-index} {enable | disable}
```

### Syntax Description

<b>enable</b>	Enables NDE.
<b>disable</b>	Disables NDE.
<i>collector_ip</i>	IP address of the collector if DNS is enabled.
<i>collector_name</i>	Name of the collector if DNS is enabled.
<i>udp_port_num</i>	Number of the UDP port to receive the exported statistics.
<b>version</b>	Specifies the version of the NDE; valid versions are <b>1</b> , <b>7</b> , and <b>8</b> .
<b>1   7   8</b>	Version of the NDE feature.
<b>flow</b>	Adds filtering to NDE.
<b>exclude</b>	(Optional) Allows exporting of all flows except the flows matching the given filter.
<b>include</b>	(Optional) Allows exporting of all flows matching the given filter.
<b>destination</b>	(Optional) Specifies the destination IP address.
<i>ip_addr_spec</i>	(Optional) Full IP address or a subnet address in these formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
<b>source</b>	(Optional) Specifies the source IP address.
<b>protocol</b>	(Optional) Specifies the protocol type.
<i>protocol</i>	(Optional) Protocol type; valid values can be a number from 0 to 255 or <b>ip</b> , <b>ipinip</b> , <b>icmp</b> , <b>igmp</b> , <b>tcp</b> , or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>src-port</b> <i>src_port</i>	(Optional) Specifies the number of the TCP/UDP source port (decimal). Used with <b>dst-port</b> to specify the port pair if the <b>protocol</b> is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>dst-port</b> <i>dst_port</i>	(Optional) Specifies the number of the TCP/UDP destination port (decimal). Used with <b>src-port</b> to specify the port pair if the <b>protocol</b> is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>destination-index</b>	Specifies destination ifIndex support.
<b>source-index</b>	Specifies source ifIndex support.
<b>enable</b>	Enables ifIndex support.
<b>disable</b>	Disables ifIndex support.

**Defaults**

The defaults are Netflow Data Export version 7, and all expired flows are exported until the filter is specified explicitly. Destination ifIndex support and source ifIndex support are enabled.

**Command Types**

Switch command.

**Command Modes**

Privileged.

**Usage Guidelines**

If you enter any **set mls nde** commands on a Catalyst 6500 series switch without MLS, this warning message is displayed:

```
mls not supported on feature card.
```

When you try to enable NDE and there are previously configured filtered flows on the switch, this warning message is displayed:

```
Console> (enable) set mls nde enable
Netflow export configured for port 80 on host 172.20.25.101
Netflow export enabled.
Warning!! There is a potential statistics mismatch due to existing excluded
protocols.
```

When you try to add a filter to exclude some protocol packets and NDE is currently enabled, this warning message is displayed:

```
Console> (enable) set mls exclude protocol tcp 80
Netflow tables will not create entries for TCP packets with protocol port
80.
Warning!! There's a potential statistics mismatch due to enabled NDE.
```

Before you use the **set mls nde** command for the first time, you must configure the host to collect MLS statistics. The host name and UDP port number are saved in NVRAM, so you do not need to specify them. If you specify a host name and UDP port, values in NVRAM overwrite the old values. Collector values in NVRAM do not clear when NDE is disabled, because this command configures the collector, but does not enable NDE automatically.

The **set mls nde enable** command enables NDE, exporting statistics to the preconfigured collector.

If the *protocol* is not **tcp** or **udp**, set the **dst-port** *dst\_port* and **src-port** *src\_port* values to 0; otherwise, no flows are displayed.

If you try to enable NDE without first specifying a collector, you see this display:

```
Console> (enable) set mls nde enable
Please set host name and UDP port number with 'set mls nde <collector_name | collector_ip>
<udp_port_number>'.
Console> (enable)
```

The **set mls nde flow** command adds filtering to the NDE. Expired flows matching the specified criteria are exported. These values are stored in NVRAM and do not clear when NDE is disabled. If any option is not specified in this command, it is treated as a wildcard. The NDE filter in NVRAM does not clear when NDE is disabled.

Only one filter can be active at a time. If you do not enter the **exclude** or **include** keyword, the filter is assumed to be an inclusion filter.

Use the following syntax to specify an IP subnet address:

- *ip\_subnet\_addr*—This is the short subnet address format. The trailing decimal number 00 in an IP address YY.YY.YY.00 specifies the boundary for an IP subnet address. For example, 172.22.36.00 indicates a 24-bit subnet address (subnet mask 172.22.36.00/255.255.255.0), and 173.24.00.00 indicates a 16-bit subnet address (subnet mask 173.24.00.00/255.255.0.0). However, this format can identify only a subnet address of 8, 16, or 24 bits.
- *ip\_addr/subnet\_mask*—This is the long subnet address format. For example, 172.22.252.00/255.255.252.00 indicates a 22-bit subnet address. This format can specify a subnet address of any bit number. To provide more flexibility, the *ip\_addr* is a full host address, such as 172.22.253.1/255.255.252.00.
- *ip\_addr/maskbits*—This is the simplified long subnet address format. The mask bits specify the number of bits of the network masks. For example, 172.22.252.00/22 indicates a 22-bit subnet address. The *ip\_addr* is a full host address, such as 193.22.253.1/22, which has the same subnet address as the *ip\_subnet\_addr*.

When you use the **set mls nde** {*collector\_ip* | *collector\_name*} {*udp\_port\_num*} command, the host name and UDP port number are saved in NVRAM and need not be specified again. If you specify a host name and UDP port, the new values overwrite the values in NVRAM. Collector values in NVRAM do not clear when you disable NDE.

## Examples

This example shows how to specify that only expired flows to a specific subnet are exported:

```
Console> (enable) set mls nde flow include destination 171.69.194.140/24
NDE destination filter set to 171.69.194.0/24
Console> (enable)
```

This example shows how to specify that only expired flows to a specific host are exported:

```
Console> (enable) set mls nde flow include destination 171.69.194.140
NDE destination filter set to 171.69.194.140/32.
Console> (enable)
```

This example shows how to specify that only expired flows from a specific subnet to a specific host are exported:

```
Console> (enable) set mls nde flow include destination 171.69.194.140/24 source 171.69.173.5/24
NDE destination filter set to 171.69.194.0/24, source filter set to 171.69.173.0/24
Console> (enable)
```

This example shows how to specify that only flows from a specific port are exported:

```
Console> (enable) set mls nde flow include dst_port 23
NDE source port filter set to 23.
Console> (enable)
```

This example shows how to specify that only expired flows from a specific host that are of a specified protocol are exported:

```
Console> (enable) set mls nde flow include source 171.69.194.140 protocol 51
NDE destination filter set to 171.69.194.140/32, protocol set to 51.
Console> (enable)
```

This example shows how to specify that all expired flows except those from a specific host to a specific destination port are exported:

```
Console> (enable) set mls nde flow exclude source 171.69.194.140 dst_port 23  
NDE destination filter set to 171.69.194.140/32, source port filter set to 23.  
Flows matching the filter will be excluded.  
Console> (enable)
```

This example shows how to disable destination ifIndex support:

```
Console> (enable) set mls nde destination-ifindex disable  
destination-index export has been disabled.  
Console> (enable)
```

This example shows how to disable source ifIndex support:

```
Console> (enable) set mls nde source-ifindex disable  
source-index export has been disabled.  
Console> (enable)
```

---

**Related Commands**

**clear mls nde flow**  
**show mls**  
**show mls nde**

# set mls statistics protocol

Use the **set mls statistics protocol** command to add protocols to the protocols statistics list.

```
set mls statistics protocol protocol src_port
```

<b>Syntax Description</b>	<i>protocol</i>	Name or number of the protocol; valid values are from 1 to 255, <b>ip</b> , <b>ipinip</b> , <b>icmp</b> , <b>igmp</b> , <b>tcp</b> , and <b>udp</b> .
	<i>src_port</i>	Number or type of the source port; valid values are from 1 to 65535, <b>dns</b> , <b>ftp</b> , <b>smtp</b> , <b>telnet</b> , <b>x</b> , and <b>www</b> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you enter any **set mls** commands on a Catalyst 6500 series switch without MLS, this warning message is displayed:

```
MLS not supported on feature card.
```

You can configure a maximum of 64 ports using the **set mls statistics protocol** command.

If you enter **x** for the source port, this specifies the Layer 4 port used by the X-windows application.

**Examples** This example shows how to set protocols for statistic collection:

```
Console> (enable) set mls statistics protocol 17 1934
Protocol 17 port 1934 is added to protocol statistics list.
Console> (enable)
```

**Related Commands** [clear mls statistics entry](#)  
[show mls statistics](#)

# set mls verify

To enable or disable checksum or packet checking based on packet length, use the **set mls verify** command.

```
set mls verify checksum {enable | disable}
```

```
set mls verify length {ip | ipx | both} {minimum | inconsistent} {enable | disable}
```

Syntax Description	checksum	Specifies IP checksum.
	enable	Enables IP checksum.
	disable	Disables IP checksum.
	length	Specifies checking IP or IPX packets based on packet length.
	ip   ipx   both	Specifies the type of packet.
	minimum	Specifies checking minimum packet length.
	inconsistent	Specifies checking inconsistent packet length. See the “Usage Guidelines” section for more information.
	enable	Enables checking IP or IPX packets based on packet length.
	disable	Disables checking IP or IPX packets based on packet length.

## Defaults

IP checksum is enabled.

Checking IP and IPX packets based on minimum and inconsistent packet length is enabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The **set mls verify** command is available on Supervisor Engine 2 (WS-X6K-SUP2-2GE).

If you enable IP checksum or packet checking based on packet length, the Layer 3 ASIC drops Layer 3 error packets that it encounters. If you disable this feature, the packets are not dropped.



**Note** We recommend that you do not disable IP checksum or packet checking based on packet length unless you have a specific need to pass non-standard packets.

Checking for inconsistent packet length means that the switch checks for an inconsistency between the physical length of the packet and the length coded in the packet.

---

**Examples**

This example shows how to enable IP checksum:

```
Console> (enable) set mls verify checksum enable  
Ip checksum verification enabled  
Console> (enable)
```

This example shows how to enable checking inconsistent IP and IPX packet length:

```
Console> (enable) set mls verify length both inconsistant enable  
Ipx inconsistant length verification enabled  
Ip inconsistant length verification enabled  
Console> (enable)
```

This example shows how to disable checking minimum IPX packet length:

```
Console> (enable) set mls verify length ipx minimum disable  
Ipx minimum length verification disabled  
Console> (enable)
```

---

**Related Commands**

[show mls verify](#)

# set module

Use the **set module** command to enable or disable a module.

**set module enable | disable** *mod*

Syntax Description	enable	Enables a module.
	disable	Disables a module.
	<i>mod</i>	Number of the module.

**Defaults** The default is all modules are enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Avoid disabling a module when you are connected through a Telnet session; if you disable your session, you will disconnect your Telnet session.

If there are no other network connections to a Catalyst 6500 series switch (for example, on another module), you have to reenable the module from the console.

You can specify a series of modules by entering a comma between each module number (for example, 2,3,5). You can specify a range of modules by entering a dash between module numbers (for example, 2-5).

The **set module disable** command does not cut off the power to a module, it only disables the module. To turn off power to a module, refer to the [set module power](#) command.

If an individual port on a module was previously disabled, enabling the module does not enable the disabled port.

**Examples** This example shows how to enable module 2:

```
Console> (enable) set module enable 2
Module 2 enabled.
Console> (enable)
```

This example shows how to disable module 3 when connected through the console port:

```
Console> (enable) set module disable 3
Module 3 disabled.
Console> (enable)
```

This example shows how to disable module 2 when connected via a Telnet session:

```
Console> (enable) set module disable 2  
This command may disconnect your telnet session.  
Do you want to continue (y/n) [n]? y  
Module 2 disabled.  
Console> (enable)
```

**Related Commands**    [show module](#)

# set module name

Use the **set module name** command to set the name for a module.

```
set module name mod [mod_name]
```

Syntax Description	<i>mod</i>	Number of the module.
	<i>mod_name</i>	(Optional) Name created for the module.

**Defaults** The default is no module names are configured for any modules.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If no module name is specified, any previously specified name is cleared.  
Use the **set module name** command to set the module for the MSM. Additional **set module** commands are not supported by the MSM.

**Examples** This example shows how to set the name for module 1 to Supervisor:

```
Console> (enable) set module name 1 Supervisor
Module name set.
Console> (enable)
```

**Related Commands** [show module](#)

# set module power

Use the **set module power** command to turn the power on or off to a module.

**set module power up | down** *mod*

Syntax Description	up	Turns on the power to a module.
	<b>down</b>	Turns off the power to a module.
	<i>mod</i>	Number of the module.

**Defaults** The default is power is on to a module.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **set module power up** command allows you to check if adequate power is available in the system to turn the power on. If not enough power is available, the module status changes from power-down to power-deny, and this message is displayed:

```
Module 4 could not be powered up due to insufficient power.
```

**Examples** This example shows how to power up module 4:

```
Console> (enable) set module power up 4
Module 4 powered up.
Console> (enable)
```

This example shows how to power down module 4:

```
Console> (enable) set module power down 4
Module 4 powered down.
Console> (enable)
```

**Related Commands** [show environment](#)

# set module shutdown

Use the **set module shutdown** command to shut down the NAM and Intrusion Detection System Module (IDSM).

**set module shutdown all** | *mod*

<b>Syntax Description</b>	<b>all</b>	Shuts down NAMs and IDSMs.
	<b><i>mod</i></b>	Number of the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use the **set module shutdown** command, the configuration is not saved in NVRAM. The next time when the module boots up, it will come online. You can either reinsert or reset the module to bring it online.

If there are no other network connections to a Catalyst 6500 series switch (for example, on another module), you have to reenable the module from the console.

You can specify a series of modules by entering a comma between each module number (for example, 2,3,5).

**Examples** This example shows how to shutdown the NAM or IDSM:

```
Console> (enable) set module shutdown 2
Console> (enable)
```

# set msfcautostate

Use the **set msfcautostate** command to enable or disable the line protocol state determination of the Multilayer Switch Feature Cards (MSFCs) due to port state changes.

**set msfcautostate** { **enable** | **disable** }

## Syntax Description

<b>enable</b>	Activates the line protocol state determination.
<b>disable</b>	Deactivates the line protocol state determination.

## Defaults

The default is enabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This feature is used to accurately reflect the Layer 3 interface status based on the underlying Layer 2 interface status so that routing and other protocols converge faster. Faster protocol convergence prevents traffic from being discarded without notice.

When you enable the MSFC auto state feature, VLAN interfaces on the MSFC are active only when there is at least one other active interface in the spanning tree forwarding state on the Catalyst 6500 series switch. This interface could be a physical end-user port, a trunk connection for which the VLAN is active, or even another MSFC with an equivalent VLAN interface.

If you enable and then disable or disable and then enable the **set msfcautostate** command, you might have to use the **shutdown** and **no shutdown** commands to disable and then restart the VLAN and WAN interfaces on the MSFC.

If your FXS module ports are in an auxiliary VLAN and there are no switching module ports active in the VLAN, the FXS module will not initialize because the MSFC auto state feature shuts down all MSFC interfaces and subinterfaces. We recommend that you add a physical Ethernet port to the VLAN.



### Caution

You should not disable the MSFC auto state feature because the Layer 3 interface status might not accurately reflect the Layer 2 interface status. If you disable this feature, traffic might be discarded without notice even though other valid traffic paths might exist.

## Examples

This example shows how to enable the line protocol state determination of the MSFC:

```
Console> (enable) set msfcautostate enable
Console> (enable)
```

## Related Commands

[show msfcautostate](#)

# set msmautostate

Use the **set msmautostate** command to enable or disable the line protocol state determination of the MSMs due to port state changes.

```
set msmautostate {enable | disable}
```

Syntax Description	enable	disable
	Activates the line protocol state determination.	Deactivates the line protocol state determination.

**Defaults** The default configuration has line protocol state determination disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This feature is useful for discontinuing the advertisement of routing paths when access to them is severed (either through fault or administrative disabling).

When you enable **msmautostate**, VLAN interfaces on the MSM are active only when there is at least one other active interface within the Catalyst 6500 series switch. This could be a physical end-user port, a trunk connection for which the VLAN is active, or even another MSM with an equivalent VLAN interface.

If you disable **msmautostate**, you might have to use the **shutdown** and **no shutdown** commands to disable and then restart the VLAN interface to bring the MSM back up.

**Examples** This example shows how to enable the line protocol state determination of the MSM:

```
Console> (enable) set msmautostate enable
MSM port auto state enabled.
Console> (enable)
```

This example shows how to disable the line protocol state determination of the MSM:

```
Console> (enable) set msmautostate disable
MSM port auto state disabled.
Console> (enable)
```

**Related Commands** [show msmautostate](#)

# set multicast router

Use the **set multicast router** command to configure a port manually as a multicast router port.

**set multicast router** *mod/port*

<b>Syntax Description</b>	<i>mod/port</i> Number of the module and port on the module.
<b>Defaults</b>	The default is no ports are configured as multicast router ports.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	When you enable IGMP snooping, the ports to which a multicast-capable router is attached are identified automatically. The <b>set multicast router</b> command allows you to configure multicast router ports statically.
<b>Examples</b>	This example shows how to configure a multicast router port: <pre>Console&gt; (enable) <b>set multicast router 3/1</b> Port 3/1 added to multicast router port list. Console&gt; (enable)</pre>
<b>Related Commands</b>	<a href="#">clear multicast router</a> <a href="#">set igmp</a> <a href="#">show multicast group count</a> <a href="#">show multicast router</a>

# set ntp broadcastclient

Use the **set ntp broadcastclient** command to enable or disable NTP in broadcast-client mode.

**set ntp broadcastclient {enable | disable}**

Syntax Description	enable	Disables NTP in broadcast-client mode.
	disable	Enables NTP in broadcast-client mode.

**Defaults** The default is broadcast-client mode is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The broadcast-client mode assumes that a broadcast server, such as a router, sends time-of-day information regularly to a Catalyst 6500 series switch.

**Examples** This example shows how to enable an NTP broadcast client:

```
Console> (enable) set ntp broadcastclient enable
NTP Broadcast Client mode enabled.
Console> (enable)
```

This example shows how to disable an NTP broadcast client:

```
Console> (enable) set ntp broadcastclient disable
NTP Broadcast Client mode disabled.
Console> (enable)
```

**Related Commands** [show ntp](#)

# set ntp broadcastdelay

Use the **set ntp broadcastdelay** command to configure a time-adjustment factor so the Catalyst 6500 series switch can receive broadcast packets.

**set ntp broadcastdelay** *microseconds*

---

<b>Syntax Description</b>	<i>microseconds</i>	Estimated round-trip time, in microseconds, for NTP broadcasts; valid values are from 1 to 999999.
---------------------------	---------------------	--

---

---

<b>Defaults</b>	The default is the NTP broadcast delay is set to 3000 milliseconds.
-----------------	---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Examples</b>	This example shows how to set the NTP broadcast delay to 4000 milliseconds:
-----------------	---

```
Console> (enable) set ntp broadcastdelay 4000
NTP broadcast delay set to 4000 microseconds.
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">show ntp</a>
-------------------------	--------------------------

# set ntp client

Use the **set ntp client** command to enable or disable a Catalyst 6500 series switch as an NTP client.

**set ntp client { enable | disable }**

Syntax Description	enable	Disables a Catalyst 6500 series switch as an NTP client.
	enable	Enables a Catalyst 6500 series switch as an NTP client.

**disable** Disables a Catalyst 6500 series switch as an NTP client.

**Defaults** The default is NTP client mode is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can configure NTP in either broadcast-client mode or client mode. The broadcast-client mode assumes that a broadcast server, such as a router, sends time-of-day information regularly to a Catalyst 6500 series switch. The client mode assumes that the client (a Catalyst 6500 series switch) regularly sends time-of-day requests to the NTP server.

**Examples** This example shows how to enable NTP client mode:

```
Console> (enable) set ntp client enable
NTP client mode enabled.
Console> (enable)
```

**Related Commands** [show ntp](#)

## set ntp server

Use the **set ntp server** command to specify the NTP server address and configure an NTP server authentication key.

```
set ntp server ip_addr [key public_keynum]
```

<b>Syntax Description</b>	<i>ip_addr</i> IP address of the NTP server.
<b>key</b>	(Optional) Specifies the key number; valid values are from 1 to
<i>public_keynum</i>	4292945295.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	The client mode assumes that the client (a Catalyst 6500 series switch) sends time-of-day requests regularly to the NTP server. A maximum of ten servers per client is allowed.
<b>Examples</b>	<p>This example shows how to configure an NTP server:</p> <pre>Console&gt; (enable) <b>set ntp server 172.20.22.191</b> NTP server 172.20.22.191 added. Console&gt; (enable)</pre>
<b>Related Commands</b>	<p><a href="#">clear ntp server</a>  <a href="#">show ntp</a></p>

## set ntp summertime

Use the **set ntp summertime** command to specify whether the system should set the clock ahead one hour during daylight saving time.

```
set ntp summertime {enable | disable} [zone]
```

```
set ntp summertime recurring [{week} {day} {month} {hh:mm} {week | day | month | hh:mm}
[offset]]
```

```
set ntp summertime date {month} {date} {year} {hh:mm}{month | date | year | hh:mm} [offset]
```

### Syntax Description

<b>enable</b>	Causes the system to set the clock ahead one hour during daylight saving time.
<b>disable</b>	Prevents the system from setting the clock ahead one hour during daylight saving time.
<i>zone</i>	(Optional) Time zone used by the <b>set summertime</b> command.
<b>recurring</b>	Specifies the summertime dates that recur every year.
<i>week</i>	Week of the month ( <b>first, second, third, fourth, last, 1...5</b> ).
<i>day</i>	Day of the week ( <b>Sunday, Monday, Tuesday</b> , and so forth).
<i>month</i>	Month of the year ( <b>January, February, March</b> , and so forth).
<i>hh:mm</i>	Hours and minutes.
<i>offset</i>	(Optional) Amount of offset in minutes (1 to 1440 minutes).
<i>date</i>	Day of the month (1 to 31).
<i>year</i>	Number of the year (1993 to 2035).

### Defaults

By default, the **set ntp summertime** command is disabled. Once enabled, the default for *offset* is 60 minutes, following U.S. standards.

### Command Types

Switch command.

### Command Modes

Privileged.

### Usage Guidelines

After you enter the **clear config** command, the dates and times are set to default.

Unless you configure it otherwise, this command advances the clock one hour at 2:00 a.m. on the first Sunday in April and moves back the clock one hour at 2:00 a.m. on the last Sunday in October.

**Examples**

This example shows how to cause the system to set the clock ahead one hour during daylight saving time:

```
Console> (enable) set ntp summertime enable PDT
Summertime is enabled and set to "PDT".
Console> (enable)
```

This example shows how to prevent the system from setting the clock ahead one hour during daylight saving time:

```
Console> (enable) set ntp summertime disable
Summertime disabled.
Console> (enable)
```

This example shows how to set daylight saving time to the zonename AUS and repeat every year, starting from the third Monday of February at noon and ending at the second Saturday of August at 3:00 p.m. with an offset of 30 minutes:

```
Console> (enable) set ntp summertime AUS recurring 3 Mon Feb 12:00 2 Saturday Aug 15:00 30
Summer time is disabled and set to 'AUS' with offset 30 minutes.
  start: 12:00:00 Sun Feb 13 2000
  end:   14:00:00 Sat Aug 26 2000
  Recurring, starting at 12:00:00 on Sunday of the third week of February and ending
  on Saturday of the fourth week of August.
Console> (enable)
```

This example shows how to set the daylight saving time to start on January 29, 1999 at 2:00 a.m. and end on August 19, 2004 at 3:00 p.m. with an offset of 30 minutes:

```
Console> (enable) set ntp summertime date jan 29 1999 02:00 aug 19 2004 15:00 30
Summertime is disabled and set to ''
Start : Fri Jan 29 1999, 02:00:00
End   : Thu Aug 19 2004, 15:00:00
Offset: 30 minutes
Recurring: no
Console> (enable)
```

This example shows how to set recurring to reset default to US summertime:

```
Console> (enable) set ntp summertime recurring 3 mon feb 4 thurs oct 8:00 500
Command authorization none.
Summertime is enabled and set to ''
Start : Mon Feb 21 2000, 03:00:00
End   : Fri Oct 20 2000, 08:00:00
Offset: 500 minutes (8 hours 20 minutes)
Recurring: yes, starting at 03:00am of third Monday of February and ending on 08:00am of
fourth Thursday of October.
Console> (enable)
```

**Related Commands** [show ntp](#)

# set ntp timezone

Use the **set ntp timezone** command to configure the time offset from Greenwich Mean Time.

```
set timezone [zone_name] [hours [minutes]]
```

Syntax Description	
<i>zone_name</i>	Name of the time zone.
<i>hours</i>	(Optional) Time offset (hours) from Greenwich Mean Time; valid values are from -12 to 12 hours.
<i>minutes</i>	(Optional) Time offset (minutes) from Greenwich Mean Time; valid values are from 0 to 59 minutes.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **set ntp timezone** command is effective only when NTP is running. If you set the time explicitly and NTP is disengaged, the **set ntp timezone** command has no effect. If you have enabled NTP and have not entered the **set timezone** command, the Catalyst 6500 series switch displays UTC by default.

**Examples** This example shows how to set the time zone to Pacific Standard Time with an offset of minus 8 hours from UTC:

```
Console> (enable) set ntp timezone PST -8
Timezone set to "PST", offset from UTC is -8 hours.
Console> (enable)
```

**Related Commands** [clear ntp timezone](#)  
[show ntp](#)

# set password

Use the **set password** command to change the login password on the CLI.

## **set password**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** The default is no password is configured.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** Passwords are case sensitive and may be from 0 to 19 characters in length, including spaces. The command prompts you for the old password. If the password you enter is valid, you are prompted to enter a new password and to verify the new password. A zero-length password is allowed by pressing **Return**.

---

**Examples** This example shows how to set an initial password:

```
Console> (enable) set password
Enter old password: <old_password>
Enter new password: <new_password>
Retype new password: <new_password>
Password changed.
Console> (enable)
```

# set pbf

Use the **set pbf** command to enable policy-based forwarding (PBF) and set a MAC address for the PFC2.

```
set pbf [mac mac_address]
```

---

<b>Syntax Description</b>	<b>mac mac_address</b> (Optional) Specifies MAC address for the PFC2.
---------------------------	---

---



---

<b>Defaults</b>	You can use the default MAC address, or you can specify a MAC address.
-----------------	--

---



---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---



---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---



---

<b>Usage Guidelines</b>	<p>You must set a MAC address for the PFC2. We recommend that you use the default MAC address provided by the MAC PROM. When you specify your own MAC address using the <b>set pbf mac</b> command, if the MAC address is a duplicate of a MAC address already in use, packets might be dropped.</p> <p>PBF is not supported with an operating (booted) MSFC2 in the Catalyst 6500 series switch that is being used for PBF. If an MSFC2 is present but not booted, you can configure PBF.</p> <p>PBF may require some configuration on attached hosts. When a router is not present in the network, ARP table entries have to be statically added on each host participating in PBF. Refer to the “Configuring Policy-Based Forwarding” section of Chapter 16, “Configuring Access Control,” in the <i>Catalyst 6500 Series Software Configuration Guide</i> for detailed information on configuring hosts.</p>
-------------------------	--

---



## Note

PBF does not work with 802.1Q tunnel traffic. PBF is supported on Layer 3 IP unicast traffic, but it is not applicable to Layer 2 traffic. At the intermediate (PBF) switch, all 802.1Q tunnel traffic appears as Layer 2 traffic.

---



---

<b>Examples</b>	This example shows how to set the default MAC address for the PFC2:
-----------------	---

```
Console> (enable) set pbf
Console> (enable) Operation successful.
Console> (enable)
```

This example shows how to set a specific MAC address for the PFC2:

```
Console> (enable) set pbf mac 00-01-64-61-39-c2
Console> (enable) Operation successful.
Console> (enable)
```

---

<b>Related Commands</b>	<p><b>clear pbf</b></p> <p><b>show pbf</b></p>
-------------------------	--

# set port auxiliaryvlan

Use the **set port auxiliaryvlan** command to configure the auxiliary VLAN ports.

```
set port auxiliaryvlan mod[/port] {vlan / untagged / dot1p / none}
```

<b>Syntax Description</b>	<i>mod[/port]</i>	Number of the module and (optional) port or multiple ports.
	<i>vlan</i>	Number of the VLAN; valid values are from 1 to 4096.
	<b>untagged</b>	Specifies the connected device send and receive untagged packets without 802.1p priority.
	<b>dot1p</b>	Specifies the connected device send and receive packets with 802.1p priority.
	<b>none</b>	Specifies that the switch does not send any auxiliary VLAN information in the CDP packets from that port.

**Defaults** The default setting is **none**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

If you do not specify a port, all ports are selected.

This command is not supported by the NAM.

The *vlan* option specifies that the connected device send packets tagged with a specific VLAN.

If you enter the **none** option, voice information will not be sent or received.

Dynamic VLAN support for voice VLAN identifier (VVID) includes these restrictions to the following multiple VLAN access port (MVAP) configuration on the switch port:

- You can configure any VVID on a dynamic port including dot1p and untagged, except when the VVID is equal to **dot1p** or **untagged**. If this is the case, you must configure VMPS with the MAC address of the IP phone. When you configure the VVID as **dot1p** or **untagged** on a dynamic port, this warning message is displayed:  

```
VMPS should be configured with the IP phone mac's.
```
- For dynamic ports, the auxiliary VLAN ID cannot be the same as the native VLAN ID assigned by VMPS for the dynamic port.
- You cannot configure trunk ports as dynamic ports, but an MVAP can be configured as a dynamic port.

---

**Examples**

This example shows how to set the auxiliary VLAN port to **untagged**:

```
Console> (enable) set port auxiliaryvlan 5/7 untagged
Port 5/7 allows the connected device send and receive untagged packets and
without 802.1p priority.
Console> (enable)
```

This example shows how to set the auxiliary VLAN port to **dot1p**:

```
Console> (enable) set port auxiliaryvlan 5/9 dot1p
Port 5/9 allows the connected device send and receive packets with 802.1p priority.
Console> (enable)
```

This example shows how to set the auxiliary VLAN port to **none**:

```
Console> (enable) set port auxiliaryvlan 5/12 none
Port 5/12 will not allow sending CDP packets with AuxiliaryVLAN information.
Console> (enable)
```

This example shows how to set the auxiliary VLAN port to a specific module, port, and VLAN:

```
Console> (enable) set port auxiliaryvlan 2/1-3 222
Auxiliaryvlan 222 configuration successful.
AuxiliaryVlan AuxVlanStatus Mod/Ports
-----
222          active          1/2,2/1-3
Console> (enable)
```

---

**Related Commands**

[show port auxiliaryvlan](#)

# set port broadcast

Use the **set port broadcast** command to set broadcast, multicast, or unicast suppression for one or more ports. The threshold limits the backplane traffic received from the module.

```
set port broadcast mod/port threshold% [violation {drop-packets | errdisable}]
[multicast {enable | disable}] [unicast {enable | disable}]
```

Syntax Description		
<i>mod/port</i>		Number of the module and the port on the module.
<i>threshold%</i>		Percentage of total available bandwidth that can be used by traffic; valid values are decimal numbers from <b>0.00%</b> to <b>100%</b> or whole numbers from <b>0%</b> to <b>100%</b> .
<b>violation</b>	(Optional)	Specifies an action when suppression occurs.
<b>drop-packets</b>	(Optional)	Drops packets when suppression occurs.
<b>errdisable</b>	(Optional)	Errdisables the port when suppression occurs.
<b>multicast</b>	(Optional)	Specifies multicast suppression.
<b>enable   disable</b>	(Optional)	Enables or disables the suppression type.
<b>unicast</b>	(Optional)	Specifies unicast suppression.

**Defaults**

The default is 100% (no broadcast limit).

The default action taken when there is a broadcast violation is **drop-packets**.

**Command Types**

Switch command.

**Command Modes**

Privileged.

**Usage Guidelines**

This command is not supported by the NAM.

You can enter the threshold value in two ways:

- A decimal number followed by a percent sign (for example 0.33%)
- A whole number followed by a percent sign (for example 33%)

The percent sign (%) is required when entering the threshold value.

The **multicast** and **unicast** keywords are supported on Gigabit Ethernet modules only.

If you enter the command without using the **multicast** or **unicast** keyword, only broadcast traffic is suppressed. If you enter the **multicast** or **unicast** keyword, both broadcast and the selected traffic type are suppressed.

---

**Examples**

This example shows how to limit broadcast traffic to 20 percent:

```
Console> (enable) set port broadcast 4/3 20%  
Port 4/3 broadcast traffic limited to 20.00%.  
Console> (enable)
```

This example shows how to limit broadcast traffic to 90 percent and to errdisable when suppression occurs:

```
Console> (enable) set port broadcast 4/6 90% violation errdisable  
Port 4/6 broadcast traffic limited to 90.00%.  
On broadcast suppression port 4/6 is configured to move to errdisabled state.  
Console> (enable)
```

This example shows how to allow a specific amount of multicast traffic to a range of ports:

```
Console> (enable) set port broadcast 4/1-24 80% multicast enable  
Port 4/1-24 multicast traffic limited to 80%.  
Console> (enable)
```

This example shows how to limit broadcast and multicast traffic to 91 percent, to disable unicast traffic, and to errdisable when suppression occurs:

```
Console> (enable) set port broadcast 4/2 91% violation errdisable multicast enable unicast  
disable  
Port 4/2 broadcast and multicast traffic limited to 91.00%.  
On broadcast suppression port 4/2 is configured to move to errdisabled state.  
Console> (enable)
```

This example shows how to limit broadcast, multicast, and unicast traffic to 91 percent:

```
Console> (enable) set port broadcast 4/2 91% multicast enable unicast enable  
Port 4/2 broadcast, multicast and unicast traffic limited to 91.00%.  
Console> (enable)
```

---

**Related Commands**

[clear pbf](#)  
[show port broadcast](#)

# set port channel

Use the **set port channel** command to configure EtherChannel on Ethernet module ports.

```
set port channel mod/port [admin_group]
```

```
set port channel mod/port mode {on | off | desirable | auto} [silent | non-silent]
```

```
set port channel all mode off
```

```
set port channel all distribution {ip | mac} [source | destination | both]
```

```
set port channel all distribution {session} [source | destination | both]
```

## Syntax Description

<i>mod/port</i>	Number of the module and the port on the module.
<i>admin_group</i>	(Optional) Number of the administrative group; valid values are from 1 to 1024.
<b>mode</b>	Specifies the EtherChannel mode.
<b>on</b>	Enables and forces specified ports to channel without PAgP.
<b>off</b>	Prevents ports from channeling.
<b>desirable</b>	Sets a PAgP mode that places a port into an active negotiating state, in which the port initiates negotiations with other ports by sending PAgP packets.
<b>auto</b>	Sets a PAgP mode that places a port into a passive negotiating state, in which the port responds to PAgP packets it receives, but does not initiate PAgP packet negotiation.
<b>silent</b>	(Optional) Use with <b>auto</b> or <b>desirable</b> when no traffic is expected from the other device to prevent the link from being reported to STP as down.
<b>non-silent</b>	(Optional) Use with <b>auto</b> or <b>desirable</b> when traffic is expected from the other device.
<b>all mode off</b>	Globaly turns off channeling on all ports.
<b>all distribution</b>	Applies frame distribution to all ports in the Catalyst 6500 series switch.
<b>ip</b>	Specifies the frame distribution method using IP address values.
<b>mac</b>	Specifies the frame distribution method using MAC address values.
<b>source</b>	(Optional) Specifies the frame distribution method using source address values.
<b>destination</b>	(Optional) Specifies the frame distribution method using destination address values.
<b>both</b>	(Optional) Specifies the frame distribution method using source and destination address values.
<b>session</b>	Allows frame distribution of Layer 4 traffic.
<b>both</b>	(Optional) Specifies the frame distribution method using source and destination Layer 4 port number.

<b>Defaults</b>	The default is EtherChannel is set to <b>auto</b> and <b>silent</b> on all module ports. The defaults for frame distribution are <b>ip</b> and <b>both</b> .
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>This command is not supported by the NAM.</p> <p>This command is not supported by non-EtherChannel-capable modules.</p> <p>The <b>set port channel all distribution session</b> command is supported on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.</p> <p>Make sure that all ports in the channel are configured with the same port speed, duplex mode, and so forth. For more information on EtherChannel, refer to the <i>Catalyst 6500 Series Software Configuration Guide</i>.</p> <p>With the <b>on</b> mode, a usable EtherChannel exists only when a port group in <b>on</b> mode is connected to another port group in <b>on</b> mode.</p> <p>If you are running QoS, make sure that bundled ports are all of the same trust types and have similar queueing and drop capabilities.</p> <p>Disable the port security feature on the channeled ports (see the <b>set port security</b> command). If you enable port security for a channeled port, the port shuts down when it receives packets with source addresses that do not match the secure address of the port.</p> <p>You can configure up to eight ports on the same switch in each administrative group.</p> <p>When you assign ports to an existing administrative group, the original ports associated with the administrative group will move to a new automatically picked administrative group. You cannot add ports to the same administrative group.</p> <p>If you do not enter an <i>admin_group</i> value, a new administrative group is created with the <i>admin_group</i> value selected automatically. The next available administrative group is automatically selected.</p> <p>If you do not enter the channel mode, the channel mode of the ports addressed are not modified.</p> <p>The <b>silent</b>   <b>non-silent</b> parameters only apply if <b>desirable</b> or <b>auto</b> modes are entered.</p> <p>If you do not specify <b>silent</b> or <b>non-silent</b>, the current setting is not affected.</p>
 <b>Note</b>	<p>With software releases 6.2(1) and earlier, the 6- and 9-slot Catalyst 6500 series switches support a maximum of 128 EtherChannels.</p> <p>With software releases 6.2(2) and later, due to the port ID handling by the spanning tree feature, the maximum supported number of EtherChannels is 126 for a 6- or 9-slot chassis and 63 for a 13-slot chassis. Note that the 13-slot chassis was first supported in software release 6.2(2).</p>

---

**Examples**

This example shows how to set the channel mode to **desirable**:

```
Console> (enable) set port channel 2/2-8 mode desirable  
Ports 2/2-8 channel mode set to desirable.  
Console> (enable)
```

This example shows how to set the channel mode to **auto**:

```
Console> (enable) set port channel 2/7-8,3/1 mode auto  
Ports 2/7-8,3/1 channel mode set to auto.  
Console> (enable)
```

This example shows how to group ports 4/1 through 4 in an administrative group:

```
Console> (enable) set port channel 4/1-4 96  
Port(s) 4/1-4 are assigned to admin group 96.  
Console> (enable)
```

This example shows the display when the port list is exceeded:

```
Console> (enable) set port channel 2/1-9 1  
No more than 8 ports can be assigned to an admin group.  
Console> (enable)
```

This example shows how to disable EtherChannel on module 4, ports 4 through 6:

```
Console> (enable) set port channel 4/4-6 mode off  
Port(s) 4/4-6 channel mode set to off.  
Console> (enable)
```

This example shows the display output when you assign ports to an existing administrative group. This example moves ports in admin group 96 to another admin group and assigns ports 4/4 through 6 to admin group 96:

```
Console> (enable) set port channel 4/4-6 96  
Port(s) 4/1-3 are moved to admin group 97.  
Port(s) 4/4-6 are assigned to admin group 96.  
Console> (enable)
```

This example shows how to set the channel mode to **off** for ports 4/4 through 6 and assign ports 4/4 through 6 to an automatically selected administrative group:

```
Console> (enable) set port channel 4/4-6 off  
Port(s) 4/4-6 channel mode set to off.  
Port(s) 4/4-6 are assigned to admin group 23.  
Console> (enable)
```

This example shows how to configure the EtherChannel load-balancing feature:

```
Console> (enable) set port channel all distribution ip destination  
Channel distribution is set to ip destination.  
Console> (enable)
```

---

**Related Commands**

[show channel](#)  
[show channel group](#)  
[show port channel](#)

# set port cops

Use the **set port cops** command to create port roles.

```
set port cops mod/port roles role1 [role2]...
```

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<b>roles</b> <i>role#</i>	Specifies the roles.

**Defaults** The default is all ports have a default role of null string, for example, the string of length 0.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
A port may have multiple roles. You can configure a maximum of 64 total roles per switch. You can specify multiple roles in a single command.

**Examples** This example shows how to create roles on a port:

```
Console> (enable) set port cops 3/1 roles backbone_port main_port
New role 'backbone_port' created.
New role 'main_port' created.
Roles added for port 3/1-4.
Console> (enable)
```

This example shows the display if you attempt to create a roll and exceed the maximum allowable number of roles:

```
Console> (enable) set port cops 3/1 roles access_port
Unable to add new role. Maximum number of roles is 64.
Console> (enable)
```

**Related Commands** [clear port cops](#)  
[show port cops](#)

# set port debounce

Use the **set port debounce** command to enable or disable the debounce timer or configure the timer setting on a per-port basis.

```
set port debounce mod/port { enable | disable }
```

```
set port debounce mod/port time
```

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable / disable</b>	Enables or disables the debounce timer.
	<i>time</i>	Amount of time the firmware waits before notifying the supervisor engine of a link change; valid values are 100 to 5000 milliseconds in increments of 100. This is supported on gigabit fiber ports only. See the “Usage Guidelines” section for more information.

## Defaults

By default, the debounce timer is disabled on all ports.

When the debounce timer is disabled, the default debounce timer values are as follows:

- 10/100 ports—300 milliseconds
- 100BASE-FX ports—300 milliseconds
- 10/100/1000BASE-T and gigabit TX ports—300 milliseconds
- 10-gigabit and gigabit fiber ports—10 milliseconds

When the debounce timer is enabled, the default debounce timer values are as follows:

- 10/100 ports—3100 milliseconds
- 100BASE-FX ports—3100 milliseconds
- 10/100/1000BASE-T and gigabit TX ports—3100 milliseconds
- 10-gigabit and gigabit fiber ports—100 milliseconds

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The debounce timer is the time the firmware waits before notifying the supervisor engine of a link change at the physical layer.

Increasing the debounce timer value in increments of 100 up to 5000 milliseconds is possible only for gigabit fiber ports. You do not need to enable the debounce timer on a gigabit fiber port before adjusting the timer. Any timer value that is greater than the default value in disabled state is considered a value that enables the timer.

For 10/100 ports and 100BASE-FX ports in the disabled state, the firmware may take up to 600 milliseconds to notify the supervisor engine of a link change because the firmware polling time is every 300 milliseconds.

For 10/100 ports and 100BASE-FX ports in the enabled state, the firmware may take up to 3400 milliseconds to notify the supervisor engine of a link change because the firmware polling time is every 300 milliseconds.

---

**Examples**

This example shows how to enable the debounce timer for a specific port on a specific module:

```
Console> (enable) set port debounce 1/1 enable
Debounce is enabled on port 1/1.
Warning:Enabling port debounce causes Link Up/Down detections to be delayed.
It results in loss of data traffic during debouncing period, which might
affect the convergence/reconvergence of various Layer 2 and Layer 3
protocols.
Use with caution.
Console> (enable)
```

---

**Related Commands**

[show port debounce](#)

# set port disable

Use the **set port disable** command to disable a port or a range of ports.

**set port disable** *mod/port*

---

<b>Syntax Description</b>	<i>mod/port</i> Number of the module and the port on the module.
---------------------------	--

---

---

<b>Defaults</b>	The default system configuration has all ports enabled.
-----------------	---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Usage Guidelines</b>	This command is not supported by the NAM. It takes approximately 30 seconds for this command to take effect.
-------------------------	---

---

<b>Examples</b>	This example shows how to disable a port using the <b>set port disable</b> command: <pre>Console&gt; (enable) set port disable 5/10 Port 5/10 disabled. Console&gt; (enable)</pre>
-----------------	---

---

<b>Related Commands</b>	<a href="#">set port enable</a> <a href="#">show port</a>
-------------------------	--

# set port dot1qtunnel

Use the **set port dot1qtunnel** command to configure the dot1q tunnel mode for the port.

```
set port dot1qtunnel mod/port {access | disable}
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>access</b>	Turns off the port's trunking mode.
<b>disable</b>	Disables dot1q tunneling.

**Defaults** The default is dot1qtunnel is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

- You cannot enable the dot1q tunneling feature on a port until dot1q-tagged-only mode is enabled.
- You cannot disable dot1q-tagged-only mode on the switch until dot1q tunneling is disabled on all the ports on the switch.
- You cannot set the dot1q tunnel mode to access if port security is enabled.
- You cannot set the dot1q tunnel mode to access on a port with an auxiliary VLAN configured.
- An interconnected network can have redundant paths to the same edge switch of ISP, but it cannot have redundant paths to two different edge switches of ISP.



## Note

PBF does not work with 802.1Q tunnel traffic. PBF is supported on Layer 3 IP unicast traffic, but it is not applicable to Layer 2 traffic. At the intermediate (PBF) switch, all 802.1Q tunnel traffic appears as Layer 2 traffic.

## Examples

This example shows how to set dot1q tunneling on the port to access:

```
Console> (enable) set port dot1qtunnel 4/1 access
Dot1q tunnel feature set to access mode on port 4/1.
Port 4/2 trunk mode set to off.
Console> (enable)
```

This example shows the output if you try to turn on trunking on a port that has dot1q tunneling mode set:

```
Console> (enable) set trunk 4/1 on
Failed to set port 4/1 to trunk mode on.
The dot1q tunnel mode for the port is currently set to access.
Console> (enable)
```

---

Related Commands [show port dot1qtunnel](#)

# set port dot1x

Use the **set port dot1x** command to configure dot1x on a port.

```
set port dot1x mod/port multiple-host { enable | disable }
```

```
set port dot1x mod/port { port-control port_control_value }
```

```
set port dot1x mod/port { initialize | re-authenticate }
```

```
set port dot1x mod/port re-authentication { enable | disable }
```

Syntax Description		
	<i>mod/port</i>	Number of the module and port on the module.
	<b>multiple-host</b>	Specifies multiple-user access; see the “Usage Guidelines” section for additional information.
	<b>enable</b>	Enables multiple-user access.
	<b>disable</b>	Disables multiple-user access.
	<b>port-control</b> <i>port_control_value</i>	Specifies the port control type; valid values are <b>force-authorized</b> , <b>force-unauthorized</b> , and <b>auto</b> .
	<b>initialize</b>	Initializes dot1x on the port.
	<b>re-authenticate</b>	Manually initiates a reauthentication of the entity connected to the port.
	<b>re-authentication</b>	Automatically initiates reauthentication of the entity connected to the port within the reauthentication time period; see the “Usage Guidelines” section for more information.
	<b>enable</b>	Enables automatic reauthentication.
	<b>disable</b>	Disables automatic reauthentication.

## Defaults

The default settings are as follows:

- The default *port\_control\_value* is **force-authorized**.
- The multiple host feature is disabled.
- The reauthentication feature is disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The dot1x port will not be allowed to become a trunk port, MVAP, channel port, dynamic port, or a secure port.

When setting the port control type, the following applies:

- **force-authorized** forces the controlled port to transition to the authorized state unconditionally and is equivalent to disabling 802.1x restriction in the port.
- **force-unauthorized** forces the controlled port to transit to the unauthorized state unconditionally and prevents the authorized services of the authenticator to the supplicant.
- **auto** enables 802.1x control on the port.

If you disable the multiple host feature, once a dot1x port is authorized through a successful authentication of a supplicant, only that particular host (MAC address) is allowed on that port. When the system detects another host (different MAC address) on the authorized port, it shuts down the port and displays a syslog message. This is the default system behavior.

If you enable the multiple host feature, once a dot1x port is authorized through a successful authentication of a supplicant, any host (any MAC address) is allowed to send or receive traffic on that port.

If you enable reauthentication, you can set the reauthentication time period in seconds by entering the **set dot1x re-authperiod** *seconds* command. The default for the reauthentication time period is 3600 seconds.

## Examples

This example shows how to set the port control type automatically:

```
Console> (enable) set port dot1x 4/1 port-control auto
Port 4/1 dot1x port-control is set to auto.
Console> (enable)
```

This example shows how to initialize dot1x on a port:

```
Console> (enable) set port dot1x 4/1 initialize
dot1x port 4/1 initializing...
dot1x initialized on port 4/1.
Console> (enable)
```

This example shows how to manually reauthenticate a port:

```
Console> (enable) set port dot1x 4/1 re-authenticate
dot1x port 4/1 re-authenticating...
dot1x re-authentication successful...
dot1x port 4/1 authorized.
Console> (enable)
```

This example shows how to enable multiple-user access on a specific port:

```
Console> (enable) set port dot1x 4/1 multiple-host enable
Multiple hosts allowed on port 4/1.
Console> (enable)
```

This example shows how to enable automatic reauthentication on a port:

```
Console> (enable) set port dot1x 4/1 re-authentication enable
Port 4/1 re-authentication enabled.
Console> (enable)
```

## Related Commands

[set dot1x](#)  
[show dot1x](#)  
[show port dot1x](#)

# set port duplex

Use the **set port duplex** command to configure the duplex type of an Ethernet port or a range of ports.

```
set port duplex mod/port {full | half}
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>full</b>	Specifies full-duplex transmission.
	<b>half</b>	Specifies half-duplex transmission.

**Defaults** The default configuration for 10-Mbps and 100-Mbps modules has all Ethernet ports set to half duplex.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can configure Ethernet and Fast Ethernet interfaces to either full duplex or half duplex. The **set port duplex** command is not supported on Gigabit Ethernet ports. Gigabit Ethernet ports support full-duplex mode only. If the transmission speed on a 16-port RJ-45 Gigabit Ethernet port is set to 1000, duplex mode is set to full. If the transmission speed is changed to 10 or 100, the duplex mode stays at full. You must configure the correct duplex mode when transmission speed is changed to 10 or 100 from 1000.

**Examples** This example shows how to set port 1 on module 2 to full duplex:

```
Console> (enable) set port duplex 2/1 full
Port 2/1 set to full-duplex.
Console> (enable)
```

**Related Commands** [show port](#)

# set port enable

Use the **set port enable** command to enable a port or a range of ports.

**set port enable** *mod/port*

---

<b>Syntax Description</b>	<i>mod/port</i> Number of the module and the port on the module.
---------------------------	--

---

---

<b>Defaults</b>	The default is all ports are enabled.
-----------------	---------------------------------------

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Usage Guidelines</b>	This command is not supported by the NAM. It takes approximately 30 seconds for this command to take effect.
-------------------------	---

---

<b>Examples</b>	This example shows how to enable port 3 on module 2:
-----------------	--

```
Console> (enable) set port enable 2/3  
Port 2/3 enabled.  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">set port disable</a> <a href="#">show port</a>
-------------------------	---

# set port errdisable-timeout

Use the **set port errdisable-timeout** command to prevent an errdisabled port from being enabled.

**set port errdisable-timeout** *mod/port* {**enable** | **disable**}

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables errdisable timeout.
	<b>disable</b>	Disables errdisable timeout.

**Defaults** By default, the errdisable timeout for each port is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When the global timer times out, the port will be reenabled. Use the **set port errdisable-timeout** command if you want the port to remain in the errdisabled state.

**Examples** This example shows how to prevent port 3/3 from being enabled when it goes into errdisabled state:

```
Console> (enable) set port errdisable-timeout 3/3 disable
Successfully disabled errdisable-timeout for port 3/3.
Console> (enable)
```

**Related Commands**

- [set errdisable-timeout](#)
- [show errdisable-timeout](#)
- [show port errdisable-timeout](#)

# set port flowcontrol

Use the **set port flowcontrol** command to configure a port to send or receive pause frames. Pause frames are special packets that signal a source to stop sending frames for a specific period of time because the buffers are full.

```
set port flowcontrol mod/port {receive | send} {off | on | desired}
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>receive</b>	Specifies a port processes pause frames.
<b>send</b>	Specifies a port sends pause frames.
<b>off</b>	Prevents a local port from receiving and processing pause frames from remote ports or from sending pause frames to remote ports.
<b>on</b>	Enables a local port to receive and process pause frames from remote ports or send pause frames to remote ports.
<b>desired</b>	Obtains predictable results regardless of whether a remote port is set to <b>on</b> , <b>off</b> , or <b>desired</b> .

## Defaults

Flow-control defaults vary depending upon port speed:

- Gigabit Ethernet ports default to **off** for receive (Rx) and **desired** for transmit (Tx)
- Fast Ethernet ports default to **off** for receive and **on** for transmit

On the 24-port 100BASE-FX and 48-port 10/100 BASE-TX RJ-45 modules, the default is **off** for receive and **off** for send.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command is not supported by the NAM.

When you configure the 24-port 100BASE-FX and 48-port 10/100 BASE-TX RJ-45 modules, you can set the receive flow control to **on** or **off** and the send flow control to **off**.

All Catalyst Gigabit Ethernet ports can receive and process pause frames from remote devices.

To obtain predictable results, use these guidelines:

- Use **send on** only when remote ports are set to **receive on** or **receive desired**.
- Use **send off** only when remote ports are set to **receive off** or **receive desired**.
- Use **receive on** only when remote ports are set to **send on** or **send desired**.
- Use **send off** only when remote ports are set to **receive off** or **receive desired**.

[Table 2-15](#) describes guidelines for different configurations of the **send** and **receive** keywords.

**Table 2-15** send and receive Keyword Configurations

Configuration	Description
<b>send on</b>	Enables a local port to send pause frames to remote ports.
<b>send off</b>	Prevents a local port from sending pause frames to remote ports.
<b>send desired</b>	Obtains predictable results whether a remote port is set to <b>receive on</b> , <b>receive off</b> , or <b>receive desired</b> .
<b>receive on</b>	Enables a local port to process pause frames that a remote port sends.
<b>receive off</b>	Prevents a local port from sending pause frames to remote ports.
<b>receive desired</b>	Obtains predictable results whether a remote port is set to <b>send on</b> , <b>send off</b> , or <b>send desired</b> .

**Examples**

This example shows how to configure port 1 of module 5 to receive and process pause frames:

```
Console> (enable) set port flowcontrol receive 5/1 on
Port 5/1 flow control receive administration status set to on
(port will require far end to send flowcontrol)
Console> (enable)
```

This example shows how to configure port 1 of module 5 to receive and process pause frames if the remote port is configured to send pause frames:

```
Console> (enable) set port flowcontrol receive 5/1 desired
Port 5/1 flow control receive administration status set to desired
(port will allow far end to send flowcontrol if far end supports it)
Console> (enable)
```

This example shows how to configure port 1 of module 5 to receive but not process pause frames on port 1 of module 5:

```
Console> (enable) set port flowcontrol receive 5/1 off
Port 5/1 flow control receive administration status set to off
(port will not allow far end to send flowcontrol)
Console> (enable)
```

This example shows how to configure port 1 of module 5 to send pause frames:

```
Console> (enable) set port flowcontrol send 5/1 on
Port 5/1 flow control send administration status set to on
(port will send flowcontrol to far end)
Console> (enable)
```

This example shows how to configure port 1 of module 5 to send pause frames and yield predictable results even if the remote port is set to **receive off**:

```
Console> (enable) set port flowcontrol send 5/1 desired
Port 5/1 flow control send administration status set to desired
(port will send flowcontrol to far end if far end supports it)
Console> (enable)
```

**Related Commands**

[show port flowcontrol](#)

## set port gmrp

Use the **set port gmrp** command to enable or disable GMRP on the specified ports in all VLANs.

```
set port gmrp mod/port { enable | disable }
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables GVRP on a specified port.
	<b>disable</b>	Disables GVRP on a specified port.

**Defaults** The default is GMRP is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
You can enter this command even when GMRP is not enabled, but the values come into effect only when you enable GMRP using the **set gmrp enable** command.

**Examples** This example shows how to enable GMRP on module 3, port 1:

```
Console> (enable) set port gmrp 3/1 enable
GMRP enabled on port(s) 3/1.
GMRP feature is currently disabled on the switch.
Console> (enable)
```

This example shows how to disable GMRP on module 3, ports 1 through 5:

```
Console> (enable) set port gmrp 3/1-5 disable
GMRP disabled on port(s) 3/1-5.
Console> (enable)
```

**Related Commands** [show gmrp configuration](#)

# set port gvrp

Use the **set port gvrp** command to enable or disable GVRP on the specified ports in all VLANs.

**set port gvrp** *mod/port* { **enable** | **disable** }

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables GVRP on a specified port.
	<b>disable</b>	Disables GVRP on a specified port.

**Defaults** The default is GVRP is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

This command is not supported by the NAM.

When you enable VTP pruning, it runs on all the GVRP-disabled trunks.

To run GVRP on a trunk, you need to enable GVRP both globally on the switch and individually on the trunk.

You can configure GVRP on a port even when you globally enable GVRP. However, the port will not become a GVRP participant until you globally enable GVRP.

You can enable GVRP on an 802.1Q trunk only.

If you enter the **set port gvrp** command without specifying the port number, GVRP is affected globally in the switch.

**Examples** This example shows how to enable GVRP on module 3, port 2:

```
Console> (enable) set port gvrp 3/2 enable
GVRP enabled on 3/2.
Console> (enable)
```

This example shows how to disable GVRP on module 3, port 2:

```
Console> (enable) set port gvrp 3/2 disable
GVRP disabled on 3/2.
Console> (enable)
```

This example shows what happens if you try to enable GVRP on a port that is not an 802.1Q trunk:

```
Console> (enable) set port gvrp 4/1 enable
Failed to set port 4/1 to GVRP enable. Port not allow GVRP.
Console> (enable)
```

This example shows what happens if you try to enable GVRP on a specific port when GVRP has not first been enabled using the **set gvrp** command:

```
Console> (enable) set port gvrp 5/1 enable  
GVRP enabled on port(s) 5/1.  
GVRP feature is currently disabled on the switch.  
Console> (enable)
```

---

**Related Commands**

**clear gvrp statistics**  
**set gvrp**  
**show gvrp configuration**

# set port host

Use the **set port host** command to optimize the port configuration for a host connection.

**set port host** *mod/port*

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
---------------------------	-----------------	--

<b>Defaults</b>	This command has no default settings.	
-----------------	---------------------------------------	--

<b>Command Types</b>	Switch command.	
----------------------	-----------------	--

<b>Command Modes</b>	Privileged.	
----------------------	-------------	--

<b>Usage Guidelines</b>	This command is not supported by the NAM.	
-------------------------	---	--

To optimize the port configuration, the **set port host** command sets channel mode to off, enables spanning tree PortFast, sets the trunk mode to off, and disables the dot1q tunnel feature. Only an end station can accept this configuration.

Because spanning tree PortFast is enabled, you should enter the **set port host** command only on ports connected to a single host. Connecting hubs, concentrators, switches, and bridges to a fast-start port can cause temporary spanning tree loops.

Enable the **set port host** command to decrease the time it takes to start up packet forwarding.

<b>Examples</b>	This example shows how to optimize the port configuration for end station/host connections on ports 2/1 and 3/1:	
-----------------	--	--

```
Console> (enable) set port host 2/1,3/1
```

```
Warning: Span tree port fast start should only be enabled on ports connected to a single
host. Connecting hubs, concentrators, switches, bridges, etc. to a fast start port can
cause temporary spanning tree loops. Use with caution.
```

```
Spantree ports 2/1,3/1 fast start enabled.
Dot1q tunnel feature disabled on port(s) 4/1.
Port(s) 2/1,3/1 trunk mode set to off.
Port(s) 2/1 channel mode set to off.
```

```
Console> (enable)
```

<b>Related Commands</b>	<a href="#">clear port host</a>
-------------------------	---------------------------------

# set port inlinepower

Use the **set port inlinepower** command to set the inline power mode of a port or group of ports.

```
set port inlinepower mod/port {off | auto}
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>off</b>	Does not power up the port even if an unpowered phone is connected.
	<b>auto</b>	Powers up the port only if the switching module has discovered the phone.

**Defaults** The default is **auto**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

If you enter this command on a port that does not support the IP phone power feature, an error message is displayed.

You can enter a single port or a range of ports, but you cannot enter the module number only.

An inline power-capable device can still be detected even if the inline power mode is set to off.



### Caution

Damage can occur to equipment connected to the port if you are not using a phone that can be configured for the IP phone phantom power feature.

**Examples** This example shows how to set the inline power to off:

```
Console> (enable) set port inlinepower 2/5 off
Inline power for port 2/5 set to off.
Console> (enable)
```

This example shows the output if the inline power feature is not supported:

```
Console> (enable) set port inlinepower 2/3-9 auto
Feature not supported on module 2.
Console> (enable)
```

**Related Commands**

- [set inlinepower defaultallocation](#)
- [show environment](#)
- [show port inlinepower](#)

# set port jumbo

Use the **set port jumbo** command to enable or disable the jumbo frame feature on a per-port basis.

```
set port jumbo mod/port {enable | disable}
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables jumbo frames on a specified port.
	<b>disable</b>	Disables jumbo frames on a specified port.

**Defaults** If you enable the jumbo frame feature, the MTU size for packet acceptance is 9216 bytes for nontrunking ports.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM. The jumbo frame feature is supported on any Ethernet port and on the sc0 interface. The MSFC2 supports routing of jumbo frames. The Gigabit Switch Router (GSR) supports jumbo frames.

You can use the jumbo frame feature to transfer large frames or jumbo frames through Catalyst 6500 series switches to optimize server-to-server performance.

The Multilayer Switch Feature Card (MSFC) and the Multilayer Switch Module (MSM) do not support the routing of jumbo frames; if jumbo frames are sent to these routers, router performance is significantly degraded.

For information on how to set the jumbo frame MTU size, contact Cisco's Technical Assistance Center (TAC) at 800 553-2447, 408 526-7209, or tac@cisco.com.

**Examples** This example shows how to enable the jumbo frames feature on module 3, port 2:

```
Console> (enable) set port jumbo 3/2 enable
Jumbo frames enabled on port 5/3.
Console> (enable)
```

This example shows how to disable the jumbo frames feature on module 3, port 2:

```
Console> (enable) set port jumbo 3/2 disable
Jumbo frames disabled on port 3/2.
Console> (enable)
```

**Related Commands** [set trunk](#)  
[show port jumbo](#)

# set port l2protocol-tunnel

Use the **set port l2protocol-tunnel** command to set Layer 2 protocol tunneling parameters.

```
set port l2protocol-tunnel mod/port { cdp | stp | vtp } { enable | disable }
```

```
set port l2protocol-tunnel mod/port { drop-threshold drop-threshold }  
{ shutdown-threshold shutdown-threshold }
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port or range of ports.
<b>cdp</b>   <b>stp</b>   <b>vtp</b>	Specifies the protocol type. See the “Usage Guidelines” section for more information.
<b>enable</b>   <b>disable</b>	Enables or disables the protocol.
<b>drop-threshold</b> <i>drop-threshold</i>	Specifies the drop threshold factor on a port or range of ports. See the “Usage Guidelines” section for more information.
<b>shutdown-threshold</b> <i>shutdown-threshold</i>	Specifies the shutdown threshold factor on a port or range of ports. See the “Usage Guidelines” section for more information.

## Defaults

Protocol tunneling is disabled on all ports.

The default for the drop threshold and the shutdown threshold is 0. 0 indicates that no limit is set.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

You can specify more than one protocol type at a time. In the CLI, separate protocol types with a space.

The recommended maximum value for the shutdown threshold is 1000. This value reflects the number of PDUs an edge switch can handle per second (without dropping any) while performing egress and ingress tunneling. For an edge switch, the shutdown threshold value also determines the number of Layer 2 protocol tunneling ports that can be connected to customer switches and the number of customer VLANs per Layer 2 protocol tunneling port. In determining the recommended maximum value of 1000, egress tunneling from the service provider network was also taken into consideration.

To determine the number of Layer 2 protocol tunneling ports (links) and the number of customer VLANs per Layer 2 protocol tunneling port (VLANs per link) that an edge switch can handle, use the following formula: Multiply the number of Layer 2 protocol tunneling ports by the number of VLANs and the result should be less than or equal to 1000. Some examples of acceptable configurations are as follows:

- 1 Layer 2 protocol tunneling port x 1000 VLANs
- 2 Layer 2 protocol tunneling port x 500 VLANs
- 5 Layer 2 protocol tunneling port x 200 VLANs
- 10 Layer 2 protocol tunneling port x 100 VLANs

- 20 Layer 2 protocol tunneling port x 50 VLANs
- 100 Layer 2 protocol tunneling port x 10 VLANs

**Note**

The shutdown threshold factor should exceed the drop threshold factor. After reaching the drop threshold factor, the port or range of ports starts dropping PDUs. After reaching the shutdown threshold factor, the port or range of ports goes into errdisable state and is restored after timeout.

**Examples**

This example shows how to enable CDP on a range of ports:

```
Console> (enable) set port l2protocol-tunnel 7/1-2 cdp enable
Layer 2 protocol tunneling enabled for CDP on ports 7/1-2.
Console> (enable)
```

This example shows how to enable STP and VTP on a range of ports:

```
Console> (enable) set port l2protocol-tunnel 7/1-2 stp vtp enable
Layer 2 protocol tunneling enabled for STP VTP on ports 7/1-2.
Console> (enable)
```

This example shows how to disable CDP, STP, and VTP on a range of ports:

```
Console> (enable) set port l2protocol-tunnel 7/1-2 cdp stp vtp disable
Layer 2 protocol tunneling disabled for CDP STP VTP on ports 7/1-2.
Console> (enable)
```

This example shows how to set the drop threshold to 1000 and the shutdown threshold to 20000 on a port:

```
Console> (enable) set port l2protocol-tunnel 7/1 drop-threshold 1000 shutdown-threshold
20000
Drop Threshold=1000, Shutdown Threshold=20000 set on port 7/1.
Console> (enable)
```

**Related Commands**

**clear l2protocol-tunnel cos**  
**clear l2protocol-tunnel statistics**  
**set l2protocol-tunnel cos**  
**show l2protocol-tunnel statistics**  
**show port l2protocol-tunnel**

# set port lacp-channel

Use the **set port lacp-channel** command to set the priority value for physical ports, to assign an administrative key to a particular set of ports, or to change the channel mode for a set of ports that were previously assigned to the same administrative key.

```
set port lacp-channel mod/ports port-priority value
```

```
set port lacp-channel mod/ports [admin-key]
```

```
set port lacp-channel mod/ports mode {on | off | active | passive}
```

Syntax Description		
<i>mod/ports</i>		Number of the module and the ports on the module.
<b>port-priority</b>		Specifies the priority for physical ports.
<i>value</i>		Number of the port priority; valid values are from 1 to 255. See the “Usage Guidelines” section for more information about the priority value.
<i>admin-key</i>		(Optional) Number of the administrative key; valid values are from 1 to 1024. See the “Usage Guidelines” section for more information about the administrative key.
<b>mode</b>		Specifies the channel mode for a set or ports.
<b>on   off   active   passive</b>		Specifies the status of the channel mode.

## Defaults

LACP is supported on all Ethernet interfaces.

The default port priority value is **128**.

The default mode is **passive** for all ports that are assigned to the administrative key.

For differences between PAgP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command can only be used for ports belonging to LACP modules. This command cannot be used on ports running in PAgP mode.

Higher priority values correspond to lower priority levels.

The following usage guidelines apply when you assign an administrative key to ports:

- If you do not enter a value for the administrative key, the switch chooses a value automatically.
- If you choose a value for the administrative key, but this value is already used in your switch, all the ports associated with this value are moved to a new administrative key that is assigned automatically. The previously used value is now associated with new ports.

- You can assign a maximum of 8 ports to an administrative key.
- If you assign an administrative key to a channel that was previously assigned a particular mode, the channel will maintain that mode after you enter the administrative key value.

---

### Examples

This example shows how to set the priority of ports 1/1 to 1/4 and 2/6 to 2/8 to 10:

```
Console> (enable) set port lacp-channel 4/1-4
Ports 4/1-4 being assigned admin key 96.
Console> (enable)
```

This example shows how to assign ports 4/1 to 4/4 to an administrative key that the switch automatically chooses:

```
Console> (enable) set port lacp-channel 4/1-4
Ports 4/1-4 being assigned admin key 96.
Console> (enable)
```

This example shows how to assign ports 4/4 to 4/6 to administrative key 96 when that key was previously assigned to ports 4/1 to 4/3:

```
Console> (enable) set port lacp-channel 4/4-6 96
admin key 96 already assigned to port 4/1-3.
Port(s) 4/1-3 being assigned to admin key 97.
Port(s) 4/4-6 being assigned to admin key 96.
Console> (enable)
```

---

### Related Commands

[clear lacp-channel statistics](#)  
[set channelprotocol](#)  
[set lacp-channel system-priority](#)  
[set spantree channelcost](#)  
[set spantree channelvlancost](#)  
[show lacp-channel](#)  
[show port lacp-channel](#)

# set port membership

Use the **set port membership** command to set the VLAN membership assignment to a port.

```
set port membership mod/port { dynamic | static }
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>dynamic</b>	Specifies the port become a member of dynamic VLANs.
	<b>static</b>	Specifies the port become a member of static VLANs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Dynamic VLAN support for VVID includes these restrictions to the following configuration of MVAP on the switch port:

- You can configure any VVID on a dynamic port including dot1p and untagged, except when the VVID is equal to dot1p or untagged. If this is the case, then you must configure VMPS with the MAC address of the IP phone. When you configure the VVID as dot1p or untagged on a dynamic port, this warning message is displayed:  

```
VMPS should be configured with the IP phone mac's.
```
- You cannot change the VVID of the port equal to PVID assigned by the VMPS for the dynamic port.
- You cannot configure trunk ports as dynamic ports, but you can configure MVAP as a dynamic port.

**Examples** This example shows how to set the port membership VLAN assignment to **dynamic**:

```
Console> (enable) set port membership 5/5 dynamic
Port 5/5 vlan assignment set to dynamic.
Spantree port fast start option enabled for ports 5/5.
Console> (enable)
```

This example shows how to set the port membership VLAN assignment to **static**:

```
Console> (enable) set port membership 5/5 static
Port 5/5 vlan assignment set to static.
Console> (enable)
```

■ set port membership

---

**Related Commands**

[set pvlan](#)  
[set pvlan mapping](#)  
[set vlan](#)  
[set vlan mapping](#)

# set port name

Use the **set port name** command to configure a name for a port.

```
set port name mod/port [port_name]
```

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<i>port_name</i>	(Optional) Name of the module.

**Defaults** The default is no port name is configured for any port.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
If you do not specify the name string, the port name is cleared.

**Examples** This example shows how to set port 1 on module 4 to Snowy:

```
Console> (enable) set port name 4/1 Snowy  
Port 4/1 name set.  
Console> (enable)
```

**Related Commands** [show port](#)

# set port negotiation

Use the **set port negotiation** command to enable or disable the link negotiation protocol on the specified port.

**set port negotiation** *mod/port* {**enable** | **disable**}

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables the link negotiation protocol.
	<b>disable</b>	Disables the link negotiation protocol.

**Defaults** The default is link negotiation protocol is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You cannot configure port negotiation on 1000BASE-T (copper) Gigabit Ethernet ports in this release. If a 1000BASE-T GBIC is inserted in the port that was previously configured as a negotiation-disabled port, the negotiation-disabled setting is ignored, and the port operates in negotiation-enabled mode.

The **set port negotiation** command is supported on Gigabit Ethernet ports only, except on WS-X6316-GE-TX and on WS-X6516-GE-TX.

If the port does not support this command, this message appears:

```
Feature not supported on Port N/N.
```

where N/N is the module and port number.

In most cases, when you enable link negotiation, the system autonegotiates flow control, duplex mode, and remote fault information. The exception applies to 16-port 10/100/1000BASE-T Ethernet modules; when you enable link negotiation on these Ethernet modules, the system autonegotiates flow control only.

You must either enable or disable link negotiation on both ends of the link. Both ends of the link must be set to the same value or the link cannot connect.

**Examples** This example shows how to disable link negotiation protocol on port 1, module 4:

```
Console> (enable) set port negotiation 4/1 disable
Link negotiation protocol disabled on port 4/1.
Console> (enable)
```

**Related Commands** [show port negotiation](#)

# set port protocol

Use the **set port protocol** command to enable or disable protocol membership of ports.

```
set port protocol mod/port {ip | ipx | group} {on | off | auto}
```

Syntax Description		
	<i>mod/port</i>	Number of the module and the port on the module.
	<b>ip</b>	Specifies IP.
	<b>ipx</b>	Specifies IPX.
	<b>group</b>	Specifies VINES, AppleTalk, and DECnet protocols.
	<b>on</b>	Indicates the port will receive all the flood traffic for that protocol.
	<b>off</b>	Indicates the port will not receive any flood traffic for that protocol.
	<b>auto</b>	Specifies that the port is added to the group only after packets of the specific protocol are received on that port.

**Defaults** The default is that the ports are configured to **on** for the IP protocol groups and **auto** for IPX and group protocols.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

Protocol filtering is supported only on nontrunking EtherChannel ports. Trunking ports are always members of all the protocol groups.

If the port configuration is set to **auto**, the port initially does not receive any flood packets for that protocol. When the corresponding protocol packets are received on that port, the supervisor engine detects this and adds the port to the protocol group.

Ports configured as **auto** are removed from the protocol group if no packets are received for that protocol within a certain period of time. This aging time is set to 60 minutes. They are also removed from the protocol group on detection of a link down.

**Examples** This example shows how to disable IPX protocol membership of port 1 on module 2:

```
Console> (enable) set port protocol 2/1 ipx off
IPX protocol disabled on port 2/1.
Console> (enable)
```

This example shows how to enable automatic IP membership of port 1 on module 5:

```
Console> (enable) set port protocol 5/1 ip auto
IP protocol set to auto mode on module 5/1.
Console> (enable)
```

■ set port protocol

Related Commands [show port protocol](#)

# set port qos

Use the **set port qos** command to specify whether an interface is interpreted as a physical port or as a VLAN.

**set port qos** *mod/ports...* **port-based** | **vlan-based**

## Syntax Description

<i>mod/ports...</i>	Number of the module and the ports on the module.
<b>port-based</b>	Interprets the interface as a physical port.
<b>vlan-based</b>	Interprets the interface as part of a VLAN.

## Defaults

The default is ports are port-based if QoS is enabled and VLAN-based if QoS is disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command is not supported by the NAM.

When you change a port from port-based QoS to VLAN-based QoS, all ACLs are detached from the port. Any ACLs attached to the VLAN apply to the port immediately.

When you set a port to VLAN-based QoS using the **set port qos** command with RSVP or COPS QoS enabled on that port, the QoS policy source is COPS, or DSBM-election is enabled. The VLAN-based setting is saved in NVRAM only.

## Examples

This example shows how to specify an interface as a physical port:

```
Console> (enable) set port qos 1/1-2 port-based
Updating configuration ...
QoS interface is set to port-based for ports 1/1-2.
Console> (enable)
```

This example shows how to specify an interface as a VLAN:

```
Console> (enable) set port qos 3/1-48 vlan-based
Updating configuration ...
QoS interface is set to VLAN-based for ports 3/1-48.
Console> (enable)
```

This example shows the output if you change from port-based QoS to VLAN-based QoS with either RSVP or COPS enabled on the port:

```
Console> (enable) set port qos 3/1-48 vlan
QoS interface is set to vlan-based for ports 3/1-48
Port(s) 3/1-48 - QoS policy-source is Cops or DSBM-election is enabled.
Vlan-based setting has been saved in NVRAM only.
Console> (enable)
```

■ set port qos

---

**Related Commands**

[set port qos cos](#)  
[set port qos trust](#)  
[show port qos](#)  
[show qos info](#)

## set port qos cos

Use the **set port qos cos** command to set the default value for all packets that have arrived through an untrusted port.

```
set port qos mod/ports cos cos_value
```

```
set port qos mod/ports cos-ext cos_value
```

Syntax Description	
<i>mod/ports</i>	Number of the module and ports.
<b>cos</b> <i>cos_value</i>	Specifies the CoS value for a port; valid values are from 0 to 7.
<b>cos-ext</b> <i>cos_value</i>	Specifies the CoS extension for a phone port; valid values are from 0 to 8.

**Defaults** The default is CoS 3.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
If the default is enforced when you disable QoS, CoS is enforced when you enable QoS.

**Examples** This example shows how to set the CoS default value on a port:

```
Console> (enable) set port qos 2/1 cos 3
Port 2/1 qos cos set to 3.
Console> (enable)
```

This example shows how to set the CoS-ext default value on a port:

```
Console> (enable) set port qos 2/1 cos-ext 3
Port 2/1 qos cos-ext set to 3.
Console> (enable)
```

**Related Commands**

- [clear port qos cos](#)
- [set port qos](#)
- [set port qos trust](#)
- [show port qos](#)
- [show qos info](#)

# set port qos policy-source

Use the **set port qos policy-source** command to set the QoS policy source for all ports in the specified module.

**set port qos policy-source** *mod/ports...* **local** | **cops**

<b>Syntax Description</b>	<i>mod/ports...</i> Number of the module and the ports on the module.
<b>local</b>	Sets the policy source to local NVRAM configuration.
<b>cops</b>	Sets the policy source to COPS configuration.

**Defaults** The default is all ports are set to local.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you set the policy source to **local**, the QoS policy is taken from local configuration stored in NVRAM. If you set the policy source to local after it was set to COPS, the QoS policy reverts back to the local configuration stored in NVRAM.

**Examples** This example shows how to set the policy source to local NVRAM:

```
Console> (enable) set port qos 5/5 policy-source local
QoS policy source set to local on port(s) 5/1-48.
Console> (enable)
```

This example shows the output if you attempt to set the policy source to COPS and no COPS servers are available:

```
Console> (enable) set port qos 5/5 policy-source cops
QoS policy source for the switch set to COPS.
Warning: No COPS servers configured. Use the 'set cops server' command
to configure COPS servers.
Console> (enable)
```

This example shows the output if you set the policy source to COPS and the switch is set to local configuration (using the **set qos policy-source** command):

```
Console> (enable) set port qos 5/5 policy-source cops
QoS policy source set to COPS on port(s) 5/1-48.
Warning: QoS policy source for the switch set to use local configuration.
Console> (enable)
```

**Related Commands**

[clear qos config](#)  
[show port qos](#)

## set port qos trust

Use the **set port qos trust** command to set the trusted state of a port; for example, whether or not the packets arriving at a port are trusted to carry the correct classification.

```
set port qos mod/ports... trust {untrusted | trust-cos | trust-ipprec | trust-dscp}
```

Syntax Description		
	<i>mod/ports...</i>	Number of the module and the ports on the module.
	<b>untrusted</b>	Specifies that packets need to be reclassified from the matching access control entry (ACE).
	<b>trust-cos</b>	Specifies that although the CoS bits in the incoming packets are trusted, the ToS is invalid and a valid value needs to be derived from the CoS bits.
	<b>trust-ipprec</b>	Specifies that although the ToS and CoS bits in the incoming packets are trusted, the ToS is invalid and the ToS is set as IP precedence.
	<b>trust-dscp</b>	Specifies that the ToS and CoS bits in the incoming packets can be accepted as is with no change.

**Defaults** The default is **untrusted**; when you disable QoS, the default is **trust-cos** on Layer 2 switches and **trust-dscp** on Layer 3 switches.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you disable QoS, the default is **trust-cos** on Layer 2 switches and **trust-dscp** on Layer 3 switches. This command is not supported by the NAM.

On 10/100 ports, you can use only the **set port qos trust** command to activate the receive-drop thresholds. To configure a trusted state, you have to convert the port to port-based QoS, define an ACL that defines all (or the desired subset) of ACEs to be trusted, and attach the ACL to that port.

**Examples** This example shows how to set the port to a trusted state:

```
Console> (enable) set port qos 3/7 trust trust-cos
Port 3/7 qos set to trust-cos.
Console> (enable)
```

This example shows the output if you try to set the trust state on a 10/100 port:

```
Console> (enable) set port qos 3/28 trust trust-cos
Trust type trust-cos not supported on this port.
Receive thresholds are enabled on port 3/28.
Port 3/28 qos set to untrusted.
Console> (enable)
```

---

**Related Commands**

[set port qos](#)  
[set port qos cos](#)  
[show port qos](#)  
[show qos info](#)

# set port qos trust-device

Use the **set port qos trust-device** command to configure the trust mode on a port on a specific device or module.

```
set port qos mod/ports... trust-device {none | ciscoipphone}
```

<b>Syntax Description</b>	<i>mod/port...</i>	Number of the module and the ports on the module.
<b>none</b>		Sets the device trust mode to disable.
<b>ciscoipphone</b>		Trusts only Cisco IP phones.

**Defaults** By default, the device trust mode for each port is set to **none**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to trust only Cisco IP phones on port 4/1:

```
Console> (enable) set port qos 4/1 trust-device ciscoipphone
Port 4/1 set to only trust device of type ciscoIPPhone.
Console> (enable)
```

This example shows how to disable the device trust on port 4/1:

```
Console> (enable) set port qos 4/1 trust-device none
Port 4/1 trust device feature disabled.
Console> (enable)
```

**Related Commands** [show port qos](#)

# set port qos trust-ext

Use the **set port qos trust-ext** command to configure the access port on a Cisco IP phone connected to the switch port.

```
set port qos mod/ports... trust-ext {trusted | untrusted}
```

Syntax Description	
<i>mod/ports...</i>	Number of the module and the ports on the module.
<b>trusted</b>	Specifies that all traffic received through the access port passes through the phone switch unchanged.
<b>untrusted</b>	Specifies that all traffic in 802.1Q or 802.1p frames received through the access port is marked with a configured Layer 2 CoS value.

**Defaults** The default when the phone is connected to a Cisco LAN switch is untrusted mode; trusted mode is the default when the phone is not connected to a Cisco LAN switch.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
Traffic in frame types other than 802.1Q or 802.1p passes through the phone switch unchanged, regardless of the access port trust state.

**Examples** This example shows how to set the trust extension on ports on the connected phone to a trusted state:

```
Console> (enable) set port qos 3/7 trust-ext trusted
Port in the phone device connected to port 3/7 is configured to be trusted.
Console> (enable)
```

**Related Commands**

- [set port qos](#)
- [set port qos cos](#)
- [show qos info](#)
- [show port qos](#)

# set port rsvp dsbm-election

Use the **set port rsvp dsbm-election** command to specify whether or not the switch participates in the Designated Subnet Bandwidth Manager (DSBM) election on that particular segment.

```
set port rsvp mod/port dsbm-election enable | disable [dsbm_priority]
```

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port.
	<b>enable</b>	Enables participation in the DSBM election.
	<b>disable</b>	Disables participation in the DSBM election.
	<i>dsbm_priority</i>	(Optional) DSBM priority; valid values are from 128 to 255.

**Defaults** The default is DSBM is disabled; the default *dsbm\_priority* is 128.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

**Examples** This example shows how to enable participation in the DSBM election:

```
Console> (enable) set port rsvp 2/1,3/2 dsbm-election enable 232
DSBM election enabled for ports 2/1,3/2.
DSBM priority set to 232 for ports 2/1,3/2.
This DSBM priority will be used during the next election process.
Console> (enable)
```

This example shows how to disable participation in the DSBM election:

```
Console> (enable) set port rsvp 2/1 dsbm-election disable
DSBM election disabled for ports(s) 2/1.
Console> (enable)
```

This example shows the output when you enable participation in the DSBM election on a port that is not forwarding:

```
Console> (enable) set port rsvp 2/1,3/2 dsbm-election enable 232
DSBM enabled and priority set to 232 for ports 2/1,3/2.
Warning: Port 2/1 not forwarding. DSBM negotiation will start after port starts forwarding
on the native vlan.
Console> (enable)
```

**Related Commands** [show port rsvp](#)

# set port security

Use the **set port security** command to configure port security on a port or range of ports.

```
set port security mod/port... [enable | disable] [mac_addr] [age {age_time}]
[maximum {num_of_mac}] [shutdown {shutdown_time}] [violation
{shutdown | restrict}]
```

Syntax Description	
<i>mod/port...</i>	Number of the module and the port on the module.
<b>enable</b>	(Optional) Enables port security.
<b>disable</b>	(Optional) Disables port security.
<i>mac_addr</i>	(Optional) Secure MAC address of the enabled port.
<b>age</b> <i>age_time</i>	(Optional) Specifies the duration for which addresses on the port will be secured; valid values are <b>0</b> (to disable) and from 1 to 1440 (minutes).
<b>maximum</b> <i>num_of_mac</i>	(Optional) Specifies the maximum number of MAC addresses to secure on the port; valid values are from 1 to 1025.
<b>shutdown</b> <i>shutdown_time</i>	(Optional) Specifies the duration for which a port will remain disabled in case of a security violation; valid values are <b>0</b> (to disable) and from 1 to 1440 (minutes).
<b>violation</b>	(Optional) Specifies the action to be taken in the event of a security violation.
<b>shutdown</b>	Shuts down the port in the event of a security violation.
<b>restrict</b>	Restricts packets from unsecure hosts.

## Defaults

The default port security configuration is as follows:

- Port security is disabled.
- Number of secure addresses per port is one.
- Violation action is shutdown.
- Age is permanent (addresses are not aged out).
- Shutdown time is indefinite.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command is not supported by the NAM.

If you enter the **set port security enable** command but do not specify a MAC address, the first MAC address seen on the port becomes the secure MAC address.

You can specify the number of MAC addresses to secure on a port. You can add MAC addresses to this list of secure addresses. The maximum number is 1024.

The **set port security violation** command allows you to specify whether you want the port to shut down or to restrict access to insecure MAC addresses only. The shutdown time allows you to specify the duration of shutdown in the event of a security violation.

We recommend that you configure the age timer and the shutdown timer if you want to move a host from one port to another when port security is enabled on those ports. If the *age\_time* value is less than or equal to the *shutdown\_time* value, the moved host will function again in an amount of time equal to the *shutdown\_time* value. The age timer begins upon learning the first MAC address, and the disable timer begins when there is a security violation.

---

## Examples

This example shows how to set port security with a learned MAC address:

```
Console> (enable) set port security 3/1 enable
Port 3/1 port security enabled with the learned mac address.
Console> (enable)
```

This example shows how to set port security with a specific MAC address:

```
Console> (enable) set port security 3/1 enable 01-02-03-04-05-06
Port 3/1 port security enabled with 01-02-03-04-05-06 as the secure mac address.
Console> (enable)
```

This example sets the shutdown time to 600 minutes on port 7/7:

```
Console> (enable) set port security 7/7 shutdown 600
Secure address shutdown time set to 600 minutes for port 7/7.
Console> (enable)
```

This example sets the port to drop all packets that are coming in on the port from insecure hosts:

```
Console> (enable) set port security 7/7 violation restrict
Port security violation on port 7/7 will cause insecure packets to be dropped.
Console> (enable)
```

---

## Related Commands

[clear port security](#)  
[show port security](#)

# set port speed

Use the **set port speed** command set to configure the speed of a port interface.

```
set port speed mod/port { 10 | 100 | 1000 | auto }
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>10</b>   <b>100</b>   <b>1000</b>	Sets a port speed for 10BASE-T, 100BASE-T, or 1000BASE-T ports.
<b>auto</b>	Specifies autonegotiation for transmission speed and duplex mode on 10/100 Fast Ethernet ports.

**Defaults** The default is **auto**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

In most cases, autonegotiation manages transmission speed, duplex mode, the master link, and the slave link. The exception applies to 16-port 10/100/1000BASE-T Ethernet modules, where autonegotiation manages transmission speed only.

You can configure Fast Ethernet interfaces on the 10/100-Mbps Fast Ethernet switching module to either 10, 100, or 1000 Mbps, or to autosensing mode, allowing the interfaces to sense and distinguish between 10- and 100-Mbps port transmission speeds and full-duplex or half-duplex port transmission types at a remote port connection. If you set the interfaces to autosensing, they configure themselves automatically to operate at the proper speed and transmission type.

**Examples** This example shows how to configure port 1, module 2 to auto:

```
Console> (enable) set port speed 2/1 auto
Port 2/1 speed set to auto-sensing mode.
Console> (enable)
```

This example shows how to configure the port speed on port 2, module 2 to 10 Mbps:

```
Console> (enable) set port speed 2/2 10
Port 2/2 speed set to 10 Mbps.
Console> (enable)
```

**Related Commands** [show port](#)

# set port sync-restart-delay

Use the **set port sync-restart-delay** command to specify the synchronization restart delay of a port.

**set port sync-restart-delay** *mod/port delay*

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<i>delay</i>	Delay time in milliseconds; the delay range is 200 to 60000 milliseconds (60 seconds).

**Defaults** The default delay time is 210 milliseconds.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The more dense wavelength division multiplexing (DWDM) equipment you have in the network, usually the longer the synchronization delay should be.

The **set port sync-restart-delay** and **show port sync-restart-delay** commands are available in both binary mode and text configuration mode.

Use the **clear config** command to reset the synchronization delay to 210 milliseconds.

**Related Commands** [clear config](#)  
[show port sync-restart-delay](#)

## set port trap

Use the **set port trap** command to enable or disable the operation of the standard Simple Network Management Protocol (SNMP) link trap (up or down) for a port or range of ports.

**set port trap** *mod/port* { **enable** | **disable** }

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Activates the SNMP link trap.
	<b>disable</b>	Deactivates the SNMP link trap.

**Defaults** The default is all port traps are disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
To set SNMP traps, enter the **set snmp trap** command.

**Examples** This example shows how to enable the SNMP link trap for module 1, port 2:

```
Console> (enable) set port trap 1/2 enable
Port 1/2 up/down trap enabled.
Console> (enable)
```

**Related Commands** [show port trap](#)

## set port voice interface dhcp

Use the **set port voice interface dhcp** command to set the port voice interface for the DHCP, TFTP, and DNS servers.

```
set port voice interface mod/port dhcp enable [vlan vlan]
```

```
set port voice interface mod/port dhcp disable {ipaddrspec} {tftp ipaddr} [vlan vlan]  
[gateway ipaddr] [dns ipaddr] [domain_name]
```

Syntax Description		
<i>mod/port</i>		Number of the module and the port on the module.
<b>enable</b>		Activates the SNMP link trap.
<i>vlan vlan</i>		(Optional) Specifies a VLAN interface; valid values are from 1 to 1005 and from 1025 to 4094.
<b>disable</b>		Deactivates the SNMP link trap.
<i>ipaddrspec</i>		IP address and mask; see the “Usage Guidelines” section for format instructions.
<b>tftp</b> <i>ipaddr</i>		Specifies the number of the TFTP server IP address or IP alias in dot notation a.b.c.d.
<b>gateway</b> <i>ipaddr</i>		(Optional) Specifies the number of the gateway server IP address or IP alias in dot notation a.b.c.d.
<b>dns</b>		(Optional) Specifies the DNS server.
<i>ipaddr</i>		(Optional) Number of the DNS IP address or IP alias in dot notation a.b.c.d.
<i>domain_name</i>		(Optional) Name of the domain.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The *ipaddrspec* format is {*ipaddr*} {*mask*} or {*ipaddr*}/{*mask*} {*mask*}. The *mask* is a dotted format (255.255.255.0) or number of bits (0 to 31).

You can specify a single port only when setting the IP address.

If you enable DHCP on a port, the port obtains all other configuration information from the TFTP server. When you disable DHCP on a port, the following mandatory parameters must be specified:

- If you do not specify DNS parameters, the software uses the system DNS configuration on the supervisor engine to configure the port.
- You cannot specify more than one port at a time because a unique IP address must be set for each port.

---

**Examples**

This example shows how to enable the port voice interface for the DHCP server:

```
Console> (enable) set port voice interface 7/4-8 dhcp enable
Port 7/4 DHCP enabled.
Console> (enable)
```

This example shows how to disable the set port voice interface DHCP server:

```
Console> (enable) set port voice interface 7/3 dhcp disable 171.68.111.41/24 tftp
173.32.43.11 dns 172.20.34.204 cisco.com
Port 7/3 dhcp disabled.
System DNS configurations applied.
Console> (enable)
```

This example shows how to enable the port voice interface for the DHCP server with a specified VLAN:

```
Console> (enable) set port voice interface 7/4-6 dhcp enable vlan 3
Vlan 3 configuration successful
Ports 7/4-6 DHCP enabled.
Console> (enable)
```

This example shows how to enable the port voice interface for the TFTP, DHCP, and DNS servers:

```
Console> (enable) set port voice interface dhcp enable 4/2 171.68.111.41 tftp 173.32.43.11
dhcp 198.98.4.1 dns 189.69.24.192
Port 4/2 interface set.
IP address: 171.68.111.41 netmask 255.255.0.0
TFTP server: 173.32.43.11
DHCP server: 198.98.4.1
DNS server: 189.69.24.192
Console> (enable)
```

This example shows how to enable a single port voice interface:

```
Console> (enable) set port voice interface 4/2-9 dhcp 123.23.32.1/24
Single port must be used when setting the IP address.
Console> (enable)
```

---

**Related Commands**

[show port voice interface](#)

# set power redundancy

Use the **set power redundancy** command to turn redundancy between the power supplies on or off.

**set power redundancy { enable | disable }**

Syntax Description	enable	Deactivates redundancy between the power supplies.
	Activates redundancy between the power supplies.	
	disable	Deactivates redundancy between the power supplies.

**Defaults** The default is power redundancy is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** In a system with dual power supplies, this command turns redundancy on or off between the power supplies. In a redundant configuration, the power available to the system is the maximum power capability of the weakest power supply.

In a nonredundant configuration, the power available to the system is the sum of the power capability of both power supplies.

**Examples** This example shows how to activate redundancy between power supplies:

```
Console> (enable) set power redundancy enable
Power supply redundancy enabled.
Console> (enable)
```

This example shows how to deactivate redundancy between power supplies:

```
Console> (enable) set power redundancy disable
Power supply redundancy disabled.
Console> (enable)
```

**Related Commands** [show environment](#)  
[show system](#)

# set prompt

Use the **set prompt** command to change the prompt for the CLI.

```
set prompt prompt_string
```

---

<b>Syntax Description</b>	<i>prompt_string</i> String to use as the command prompt.
---------------------------	---

---

---

<b>Defaults</b>	The default is the prompt is set to Console>.
-----------------	---

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Usage Guidelines</b>	If you use the <b>set system name</b> command to assign a name to the switch, the switch name is used as the prompt string. However, if you specify a different prompt string using the <b>set prompt</b> command, that string is used for the prompt.
-------------------------	--

---

---

<b>Examples</b>	This example shows how to set the prompt to system100>: <pre>Console&gt; (enable) <b>set prompt system100</b>&gt; system100&gt; (enable)</pre>
-----------------	---

---

---

<b>Related Commands</b>	<a href="#">set system name</a>
-------------------------	---------------------------------

---

# set protocolfilter

Use the **set protocolfilter** command to activate or deactivate protocol filtering on Ethernet VLANs and on nontrunking Ethernet, Fast Ethernet, and Gigabit Ethernet ports.

**set protocolfilter { enable | disable }**

Syntax Description	enable	disable
	Activates protocol filtering.	Deactivates protocol filtering.

**Defaults** The default is protocol filtering is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
Protocol filtering is supported only on Ethernet VLANs and on nontrunking EtherChannel ports.

**Examples** This example shows how to activate protocol filtering:

```
Console> (enable) set protocolfilter enable
Protocol filtering enabled on this switch.
Console> (enable)
```

This example shows how to deactivate protocol filtering:

```
Console> (enable) set protocolfilter disable
Protocol filtering disabled on this switch.
Console> (enable)
```

**Related Commands** [show protocolfilter](#)

# set pvlan

Use the **set pvlan** command to bind the isolated or community VLAN to the primary VLAN and assign the isolated or community ports to the private VLAN.

```
set pvlan primary_vlan { isolated_vlan | community_vlan | twoway_community_vlan }
[mod/port | sc0]
```



## Caution

We recommend that you read and understand the “Configuring VLANs” chapter in the *Catalyst 6500 Series Software Configuration Guide* before using this command.

## Syntax Description

<i>primary_vlan</i>	Number of the primary VLAN.
<i>isolated_vlan</i>	Number of the isolated VLAN.
<i>community_vlan</i>	Number of the community VLAN.
<i>twoway_community_vlan</i>	Number of the two-way community VLAN.
<i>mod/port</i>	(Optional) Module and port numbers of the isolated or community ports.
<b>sc0</b>	(Optional) Specifies the inband port sc0.

## Defaults

This command has no default settings.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

You must set the primary VLAN, isolated VLAN, and community VLANs using the **set vlan pvlan-type pvlan\_type** command before making the association with the **set pvlan** command.

Each isolated or community VLAN can have only one primary VLAN associated with it. A primary VLAN may have one isolated or multiple community VLANs associated to it.

Although you can configure sc0 as a private port, you cannot configure sc0 as a promiscuous port.

---

**Examples**

This example shows how to map VLANs 901, 902, and 903 (isolated or community VLANs) to VLAN 7 (the primary VLAN):

```
Console> (enable) set pvlan 7 901 4/3
Port 4/3 is successfully assigned to vlan 7, 901 and is made an isolated port.
Console> (enable) set pvlan 7 902 4/4-5
Ports 4/4-5 are successfully assigned to vlan 7, 902 and are made community ports.
Console> (enable) set pvlan 7 903 4/6-7
Ports 4/6-7 are successfully assigned to vlan 7, 903 and are made community ports.
Console> (enable) set pvlan 300 301 sc0
Successfully set the following ports to Private Vlan 300, 301:
sc0
Console> (enable)
```

---

**Related Commands**

- [clear config pvlan](#)
- [clear pvlan mapping](#)
- [clear vlan](#)
- [set pvlan mapping](#)
- [set vlan](#)
- [show pvlan](#)
- [show pvlan capability](#)
- [show pvlan mapping](#)
- [show vlan](#)

# set pvlan mapping

Use the **set pvlan mapping** command to map isolated or community VLANs to the primary VLAN on the promiscuous port.

```
set pvlan mapping primary_vlan {isolated_vlan | community_vlan | twoway_community_vlan}
mod/port
```

Syntax Description		
<i>primary_vlan</i>		Number of the primary VLAN.
<i>isolated_vlan</i>		Number of the isolated VLAN.
<i>community_vlan</i>		Number of the community VLAN.
<i>twoway_community_vlan</i>		Number of the two-way community VLAN.
<i>mod/port</i>		Module and port number of the promiscuous port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must set the primary VLAN, isolated VLANs, and community VLANs using the **set vlan pvlan-type** command combined with the **set pvlan** command before you can apply the VLANs on any of the promiscuous ports with the **set pvlan mapping** command.

You should connect the promiscuous port to an external device for the ports in the private VLAN to communicate with any other device outside the private VLAN.

You should apply this command for each primary or isolated (community) association in the private VLAN.

**Examples** This example shows how to remap community VLAN 903 to the primary VLAN 901 on ports 3 through 5 on module 8:

```
Console> (enable) set pvlan mapping 901 903 8/3-5
Successfully set mapping between 901 and 903 on 8/3-5.
Console> (enable)
```

■ set pvlan mapping

---

**Related Commands**

[clear pvlan mapping](#)  
[clear vlan](#)  
[set pvlan](#)  
[set vlan](#)  
[show pvlan](#)  
[show pvlan mapping](#)  
[show vlan](#)

# set qos

Use the **set qos** command to turn on or turn off QoS functionality on the switch.

**set qos enable | disable**

Syntax Description	<b>enable</b>	Activates QoS functionality.
	<b>disable</b>	Deactivates QoS functionality.

**Defaults** The default is QoS functionality is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Refer to the *Catalyst 6500 Series Software Configuration Guide* for information on how to change the QoS default configurations.

When you enable and disable QoS in quick succession, a bus timeout might occur.

If you enable or disable QoS on channel ports with different port types, channels might break or form.

**Examples** This example shows how to enable QoS:

```
Console> (enable) set qos enable
QoS is enabled.
Console> (enable)Console> (enable)
```

This example shows how to disable QoS:

```
Console> (enable) set qos disable
QoS is disabled.
Console> (enable)
```

**Related Commands** [show qos info](#)

# set qos acl default-action

Use the **set qos acl default-action** command to set the ACL default actions.

```
set qos acl default-action ip {{dscp dscp} | trust-cos | trust-ipprec | trust-dscp}
                               [{{microflow microflow_name}}] [{{aggregate aggregate_name}}]
```

```
set qos acl default-action ipx {{dscp dscp} | trust-cos} [{{microflow microflow_name}}]
                               [{{aggregate aggregate_name}}]
```

```
set qos acl default-action {ipx | mac} {{dscp dscp} | trust-cos}
                               [{{aggregate aggregate_name}}]
```

Syntax Description		
<b>ip</b>		Specifies the IP ACL default actions.
<b>dscp</b> <i>dscp</i>		Sets the DSCP to be associated with packets matching this stream.
<b>trust-cos</b>		Specifies DSCP is derived from the packet CoS.
<b>trust-ipprec</b>		Specifies DSCP is derived from the packet's IP precedence.
<b>trust-dscp</b>		Specifies DSCP is contained in the packet already.
<b>microflow</b> <i>microflow_name</i>	(Optional)	Specifies the name of the microflow policing rule to be applied to packets matching the ACE.
<b>aggregate</b> <i>aggregate_name</i>	(Optional)	Specifies the name of the aggregate policing rule to be applied to packets matching the ACE.
<b>ipx</b>		Specifies the IPX ACL default actions.
<b>mac</b>		Specifies the MAC ACL default actions.

**Defaults** The default is no ACL is set up. When you enable QoS, the default action is to classify everything to best effort and to do no policing. When you disable QoS, the default action is to enable **trust-dscp** on all packets and no policing.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Configurations you make by entering this command are saved to NVRAM and the switch and do not require that you enter the **commit** command.

**Examples** This example shows how to set up the IP ACL default actions:

```
Console> (enable) set qos acl default-action ip dscp 5 microflow micro aggregate agg
QoS default-action for IP ACL is set successfully.
Console> (enable)
```

This example shows how to set up the IPX ACL default actions:

```
Console> (enable) set qos acl default-action ipx dscp 5 microflow micro aggregate agg  
QoS default-action for IPX ACL is set successfully.  
Console> (enable)
```

This example shows how to set up the MAC ACL default actions:

```
Console> (enable) set qos acl default-action mac dscp 5 microflow micro aggregate agg  
QoS default-action for MAC ACL is set successfully.  
Console> (enable)
```

---

**Related Commands**

[clear qos acl](#)  
[show qos acl info](#)

# set qos acl ip

Use the **set qos acl ip** command to create or add IP access lists.

```
set qos acl ip {acl_name} {{dscp dscp} | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] {src_ip_spec}
[precedence precedence | dscp-field dscp] [before editbuffer_index | modify editbuffer_index]
```

```
set qos acl ip {acl_name} {{dscp dscp} | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] {protocol} {src_ip_spec}
{dest_ip_spec} [precedence precedence | dscp-field dscp] [before editbuffer_index |
modify editbuffer_index]
```

```
set qos acl ip {acl_name} {{dscp dscp} | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] icmp {src_ip_spec}
{dest_ip_spec} [icmp_type [icmp_code] | icmp_message] [precedence precedence |
dscp-field dscp] [before editbuffer_index | modify editbuffer_index]
```

```
set qos acl ip {acl_name} {{dscp dscp} | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] tcp {src_ip_spec} [{operator}
{port} [port]] {dest_ip_spec} [{operator} {port} [port]] [established]
[precedence precedence | dscp-field dscp] [before editbuffer_index | modify editbuffer_index]
```

```
set qos acl ip {acl_name} {{dscp dscp} | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] udp {src_ip_spec} [{operator}
{port} [port]] {dest_ip_spec} [{operator} {port} [port]] [precedence precedence |
dscp-field dscp] [before editbuffer_index | modify editbuffer_index]
```

```
set qos acl ip {acl_name} {{dscp dscp} | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] igmp {src_ip_spec}
{dest_ip_spec} [igmp_type] [precedence precedence | dscp-field dscp] [before
editbuffer_index | modify editbuffer_index]
```

## Syntax Description

<i>acl_name</i>	Unique name that identifies the list to which the entry belongs.
<b>dscp</b> <i>dscp</i>	Sets CoS and DSCP from configured DSCP values.
<b>trust-cos</b>	Specifies DSCP is derived from the packet CoS.
<b>trust-ipprec</b>	Specifies DSCP is derived from the packet's IP precedence.
<b>trust-dscp</b>	Specifies DSCP is contained in the packet already.
<b>microflow</b> <i>microflow_name</i>	(Optional) Specifies the name of the microflow policing rule to be applied to packets matching the ACE.
<b>aggregate</b> <i>aggregate_name</i>	(Optional) Specifies the name of the aggregate policing rule to be applied to packets matching the ACE.
<i>src_ip_spec</i>	Source IP address and the source mask. See the "Usage Guidelines" section for the format.
<b>before</b> <i>editbuffer_index</i>	(Optional) Inserts the new ACE in front of another ACE.
<b>modify</b> <i>editbuffer_index</i>	(Optional) Replaces an ACE with the new ACE.

<i>protocol</i>	Keyword or number of an IP protocol; valid numbers are from 0 to 255 representing an IP protocol number. See the “Usage Guidelines” section for the list of valid keywords and corresponding numbers.
<i>dest_ip_spec</i>	Destination IP address and the destination mask. See the “Usage Guidelines” section for the format.
<b>precedence</b> <i>precedence</i>	(Optional) Specifies the precedence level to compare with an incoming packet; valid values are from 0 to 7 or by name. See the “Usage Guidelines” section for a list of valid names.
<b>dscp-field</b> <i>dscp</i>	(Optional) Specifies the DSCP field level to compare with an incoming packet. Valid values are from 0 to 7 or by name; valid names are <b>critical</b> , <b>flash</b> , <b>flash-override</b> , <b>immediate</b> , <b>internet</b> , <b>network</b> , <b>priority</b> , and <b>routine</b> .
<b>icmp</b>	Specifies ICMP.
<i>icmp-type</i>	(Optional) ICMP message type; valid values are from 0 to 255.
<i>icmp-code</i>	(Optional) ICMP message code; valid values are from 0 to 255.
<i>icmp-message</i>	(Optional) ICMP message type name or ICMP message type and code name. See the “Usage Guidelines” section for a list of valid names.
<b>tcp</b>	Specifies TCP.
<i>operator</i>	(Optional) Operands; valid values include <b>lt</b> (less than), <b>gt</b> (greater than), <b>eq</b> (equal), <b>neq</b> (not equal), and <b>range</b> (inclusive range).
<i>port</i>	(Optional) TCP or UDP port number or name; valid port numbers are from 0 to 65535. See the “Usage Guidelines” section for a list of valid names.
<b>established</b>	(Optional) For TCP protocol only—specifies an established connection.
<b>udp</b>	Specifies UDP.
<b>igmp</b>	Specifies IGMP.
<i>igmp_type</i>	(Optional) IGMP message type; valid values are from 0 to 15.

**Defaults**

The default is there are no ACLs.

**Command Types**

Switch command.

**Command Modes**

Privileged.

**Usage Guidelines**

Configurations you make by entering any of these commands are saved to NVRAM and the switch only after you enter the **commit** command. Enter ACEs in batches and then enter the **commit** command to save them in NVRAM and the switch.

Use the **show qos acl info** command to view the edit buffer.

The **dscp** *dscp*, **trust-cos**, **trust-ipprec**, and **trust-dscp** keywords and variables are used to select a marking rule. Refer to the *Catalyst 6500 Series Software Configuration Guide* for additional marking rule information.

The optional **microflow** *microflow\_name* and **aggregate** *aggregate\_name* keywords and variables are used to configure policing in the ACE. Refer to the *Catalyst 6500 Series Software Configuration Guide* for additional policing rule information.

The *src\_ip\_spec*, optional **precedence** *precedence*, or **dscp-field** *dscp* keywords and variables are used to configure filtering.

When you enter the ACL name, follow these naming conventions:

- Maximum of 31 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types
- Case sensitive
- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer

When you specify the source IP address and the source mask, use the form *source\_ip\_address source\_mask* and follow these guidelines:

- The *source\_mask* is required; 0 indicates a “care” bit, 1 indicates a “don’t-care” bit.
- Use a 32-bit quantity in four-part dotted-decimal format.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 255.255.255.255.
- Use **host** source as an abbreviation for a *source* and *source-wildcard* of source 0.0.0.0.

When you enter a destination IP address and the destination mask, use the form *destination\_ip\_address destination\_mask*. The destination mask is required.

- Use a 32-bit quantity in a four-part dotted-decimal format
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 255.255.255.255
- Use **host/source** as an abbreviation for a *destination* and *destination-wildcard* of destination 0.0.0.0

Valid names for *precedence* are critical, flash, flash-override, immediate, internet, network, priority, and routine.

Valid names for *tos* are max-reliability, max-throughput, min-delay, min-monetary-cost, and normal.

Valid *protocol* keywords include **icmp** (1), **ip**, **ipinip** (4), **tcp** (6), **udp** (17), **igrp** (9), **eigrp** (88), **gre** (47), **nos** (94), **ospf** (89), **ahp** (51), **esp** (50), **pcp** (108), and **pim** (103). The IP protocol number is displayed in parentheses. Use the keyword **ip** to match any Internet Protocol.

ICMP packets that are matched by ICMP message type can also be matched by the ICMP message code.

Valid names for *icmp\_type* and *icmp\_code* are administratively-prohibited, alternate-address, conversion-error, dod-host-prohibited, dod-net-prohibited, echo, echo-reply, general-parameter-problem, host-isolated, host-precedence-unreachable, host-redirect, host-tos-redirect, host-tos-unreachable, host-unknown, host-unreachable, information-reply, information-request, mask-reply, mask-request, mobile-redirect, net-redirect, net-tos-redirect, net-tos-unreachable, net-unreachable, network-unknown, no-room-for-option, option-missing, packet-too-big, parameter-problem, port-unreachable, precedence-unreachable, protocol-unreachable, reassembly-timeout, redirect, router-advertisement, router-solicitation, source-quench, source-route-failed, time-exceeded, timestamp-reply, timestamp-request, traceroute, ttl-exceeded, and unreachable.

If the *operator* is positioned after the source and source-wildcard, it must match the source port. If the *operator* is positioned after the destination and destination-wildcard, it must match the destination port. The **range** operator requires two port numbers. All other operators require one port number only.

TCP port names can be used only when filtering TCP. Valid names for TCP ports are bgp, chargen, daytime, discard, domain, echo, finger, ftp, ftp-data, gopher, hostname, irc, klogin, kshell, lpd, nntp, pop2, pop3, smtp, sunrpc, syslog, tacacs-ds, talk, telnet, time, uucp, whois, and www.

UDP port names can be used only when filtering UDP. Valid names for UDP ports are biff, bootpc, bootps, discard, dns, dnsix, echo, mobile-ip, nameserver, netbios-dgm, netbios-ns, ntp, rip, snmp, snmptrap, sunrpc, syslog, tacacs-ds, talk, tftp, time, who, and xdmcp.

If no layer protocol number is entered, you can use this syntax:

```
set qos acl ip {acl_name} {dscp dscp | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] {src_ip_spec}
[before editbuffer_index | modify editbuffer_index]
```

If a Layer 4 protocol is specified, you can use this syntax:

```
set qos acl ip {acl_name} {dscp dscp | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] {protocol} {src_ip_spec}
{dest_ip_spec} [precedence precedence | dscp-field dscp] [before editbuffer_index |
modify editbuffer_index]
```

If ICMP is used, you can use this syntax:

```
set qos acl ip {acl_name} {dscp dscp | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] icmp {src_ip_spec}
{dest_ip_spec} [icmp_type [icmp_code] | icmp_message] [precedence precedence |
dscp-field dscp] [before editbuffer_index | modify editbuffer_index]
```

If TCP is used, you can use this syntax:

```
set qos acl ip {acl_name} {dscp dscp | trust-cos | trust-ipprec | trust-dscp}
[microflow microflow_name] [aggregate aggregate_name] tcp {src_ip_spec} [{operator}
{port} [port]] {dest_ip_spec} [{operator} {port} [port]] [established]
[precedence precedence | dscp-field dscp] [before editbuffer_index |
modify editbuffer_index]
```

If UDP is used, you can use this syntax:

```
set qos acl ip {acl_name} {dscp dscp | trust-cos | trust-ipprec | trust-dscp}
[[microflow microflow_name] [aggregate aggregate_name] udp {src_ip_spec} [{operator}
{port} [port]] {dest_ip_spec} [{operator} {port} [port]] [precedence precedence |
dscp-field dscp] [before editbuffer_index | modify editbuffer_index]
```

## Examples

This example shows how to define a TCP access list:

```
Console> (enable) set qos acl ip my_acl trust-dscp microflow my-micro tcp 1.2.3.4
255.0.0.0 eq port 21 172.20.20.1 255.255.255.0
my_acl editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

This example shows how to define an ICMP access list:

```
Console> (enable) set qos acl ip icmp_acl trust-dscp my-micro icmp 1.2.3.4 255.255.0.0
172.20.20.1 255.255.255.0 precedence 3
my_acl editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

---

**Related Commands**

[clear qos acl](#)  
[commit](#)  
[rollback](#)  
[show qos acl info](#)

# set qos acl ipx

Use the **set qos acl ipx** command to define IPX access lists.

```
set qos acl ipx {acl_name} {dscp dscp | trust-cos} [aggregate aggregate_name] {protocol}
{src_net} [dest_net.[dest_node] [[dest_net_mask.]dest_node_mask]
[before editbuffer_index | modify editbuffer_index]
```

Syntax Description	
<i>acl_name</i>	Unique name that identifies the list to which the entry belongs.
<b>dscp</b> <i>dscp</i>	Sets CoS and DSCP from configured DSCP values.
<b>trust-cos</b>	Specifies that the DSCP is derived from the packet CoS.
<b>aggregate</b> <i>aggregate_name</i>	(Optional) Specifies the name of the aggregate policing rule to be applied to packets matching the ACE.
<i>protocol</i>	Keyword or number of an IPX protocol; valid values are from 0 to 255 representing an IPX protocol number. See the “Usage Guidelines” section for a list of valid keywords and corresponding numbers.
<i>src_net</i>	Number of the network from which the packet is being sent. See the “Usage Guidelines” section for format guidelines.
<i>dest_net.</i>	(Optional) Mask to be applied to destination-node. See the “Usage Guidelines” section for format guidelines.
<i>dest_node</i>	(Optional) Node on destination-network of the packet being sent.
<i>dest_net_mask.</i>	(Optional) Mask to be applied to the destination network. See the “Usage Guidelines” section for format guidelines.
<i>dest_node_mask</i>	(Optional) Mask to be applied to destination-node. See the “Usage Guidelines” section for format guidelines.
<b>before</b> <i>editbuffer_index</i>	(Optional) Inserts the new ACE in front of another ACE.
<b>modify</b> <i>editbuffer_index</i>	(Optional) Replaces an ACE with the new ACE.

**Defaults** There are no default ACL mappings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **dscp** *dscp* and **trust-cos** keywords and variables are used to select a marking rule. Refer to the *Catalyst 6500 Series Software Configuration Guide* for additional marking rule information.

The **dscp** *dscp* and **trust-cos** keywords and variables are not supported on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2).

The optional **aggregate** *aggregate\_name* keyword and variable are used to configure policing in the ACE. Refer to the *Catalyst 6500 Series Software Configuration Guide* for additional policing rule information.

Use the **show security acl** command to display the list.

The *src\_ip\_spec*, optional **precedence** *precedence*, or **dscp-field** *dscp* keywords and variables, are used to configure filtering.

When you enter the ACL name, follow these naming conventions:

- Maximum of 31 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types
- Case sensitive
- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer

Valid *protocol* keywords include **nbp** (17), **rip** (1), **sap** (4), and **spx** (5). The IP network number is listed in parentheses.

The *src\_net* and *dest\_net* variables are eight-digit hexadecimal numbers that uniquely identify network cable segments. When you specify the *src\_net* or *dest\_net*, use the following guidelines:

- It can be a number in the range 0 to FFFFFFFF. A network number of -1 or **any** matches all networks.
- You do not need to specify leading zeros in the network number. For example, for the network number 000000AA, you can enter AA.

The *dest\_node* is a 48-bit value represented by a dotted triplet of four-digit hexadecimal numbers (xxxx.xxxx.xxxx).

The *destination\_mask* is of the form N.H.H.H or H.H.H where N is the destination network mask and H is the node mask. It can be specified only when the destination node is also specified for the destination address.

The *dest\_net\_mask* is an eight-digit hexadecimal mask. Place ones in the bit positions you want to mask. The mask must be immediately followed by a period, which must in turn be immediately followed by destination-node-mask. You can enter this value only when *dest\_node* is specified.

The *dest\_node\_mask* is a 48-bit value represented as a dotted triplet of 4-digit hexadecimal numbers (xxxx.xxxx.xxxx). Place ones in the bit positions you want to mask. You can enter this value only when *dest\_node* is specified.

The *dest\_net\_mask* is an eight-digit hexadecimal number that uniquely identifies the network cable segment. It can be a number in the range 0 to FFFFFFFF. A network number of -1 or **any** matches all networks. You do not need to specify leading zeros in the network number. For example, for the network number 000000AA, you can enter AA. Following are *dest\_net\_mask* examples:

- 123A
- 123A.1.2.3
- 123A.1.2.3 ffff.ffff.ffff
- 1.2.3.4 ffff.ffff.ffff.ffff

---

**Examples**

This example shows how to create an IPX ACE:

```
Console> (enable) set qos acl ipx my_IPXacl trust-cos aggregate my-agg -1  
my_IPXacl editbuffer modified. Use `commit' command to apply changes.  
Console> (enable)
```

---

**Related Commands**

[clear qos acl](#)  
[commit](#)  
[rollback](#)  
[show qos acl info](#)

# set qos acl mac

Use the **set qos acl mac** command to define MAC access lists.

```
set qos acl mac {acl_name} {dscp dscp | trust-cos} [aggregate aggregate_name]
  {src_mac_addr_spec} {dest_mac_addr_spec} [ether-type] [before editbuffer_index | modify
  editbuffer_index]
```

Syntax Description		
<i>acl_name</i>		Unique name that identifies the list to which the entry belongs.
<b>dscp</b> <i>dscp</i>		Sets CoS and DSCP from configured DSCP values.
<b>trust-cos</b>		Specifies that the DSCP is derived from the packet CoS.
<b>aggregate</b> <i>aggregate_name</i>		(Optional) Specifies the name of the aggregate policing rule to be applied to packets matching the ACE.
<i>src_mac_addr_spec</i>		Number of the source MAC address in the form <i>source_mac_address source_mac_address_mask</i> .
<i>dest_mac_addr_spec</i>		Number of the destination MAC address.
<i>ether-type</i>		(Optional) Name or number that matches the ethertype for Ethernet-encapsulated packets. See the “Usage Guidelines” section for a list of valid names and numbers.
<b>before</b> <i>editbuffer_index</i>		(Optional) Inserts the new ACE in front of another ACE.
<b>modify</b> <i>editbuffer_index</i>		(Optional) Replaces an ACE with the new ACE.

**Defaults** There are no default ACL mappings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **dscp** *dscp* and **trust-cos** keywords and variables are used to select a marking rule. Refer to the *Catalyst 6500 Series Software Configuration Guide* for additional marking rule information.

The **dscp** *dscp* and **trust-cos** keywords and variables are not supported on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2).

The optional **aggregate** *aggregate\_name* keyword and variable are used to configure policing in the ACE. Refer to the *Catalyst 6500 Series Software Configuration Guide* for additional policing rule information.

When you enter the ACL name, follow these naming conventions:

- Maximum of 31 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types

- Case sensitive
- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer

The *src\_mac\_addr\_spec* is a 48-bit source MAC address and mask and entered in the form of *source\_mac\_address source\_mac\_address\_mask* (for example, 08-11-22-33-44-55 ff-ff-ff-ff-ff-ff). Place ones in the bit positions you want to mask. When you specify the *src\_mac\_addr\_spec*, follow these guidelines:

- The *source\_mask* is required; 0 indicates a “care” bit, 1 indicates a “don’t-care” bit.
- Use a 32-bit quantity in 4-part dotted-decimal format.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 255.255.255.255.
- Use **host** source as an abbreviation for a *source* and *source-wildcard* of source 0.0.0.0.

The *dest\_mac\_spec* is a 48-bit destination MAC address and mask and entered in the form of *dest\_mac\_address dest\_mac\_address\_mask* (for example, 08-00-00-00-02-00/ff-ff-ff-00-00-00). Place ones in the bit positions you want to mask. The destination mask is mandatory. When you specify the *dest\_mac\_spec*, use the following guidelines:

- Use a 48-bit quantity in 6-part dotted-hexadecimal format for the source address and mask.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 ff-ff-ff-ff-ff-ff.
- Use **host** source as an abbreviation for a *destination* and *destination-wildcard* of destination 0.0.0.0.

Valid names for ethertypes (and corresponding numbers) are Ethertalk (0x809B), ARP (0x8053), dec-mop-dump (0x6001), dec-mop-remote-console (0x6002), dec-phase-iv (0x6003), dec-lat (0x6004), dec-diagnostic-protocol (0x6005), dec-lavc-sca (0x6007), dec-amber (0x6008), dec-mumps (0x6009), dec-lanbridge (0x8038), dec-dsm (0x8039), dec-netbios (0x8040), dec-msdos (0x8041), banyan-vines-echo (0x0baf), xerox-ns-idp (0x0600), and xerox-address-translation (0x0601).

The *ether-type* is a 16-bit hexadecimal number written with a leading 0x.

Use the **show security acl** command to display the list.

## Examples

This example shows how to create a MAC access list:

```
Console> (enable) set qos acl mac my_MACacl trust-cos aggregate my-agg any any

my_MACacl editbuffer modified. Use `commit' command to apply changes.
Console> (enable)
```

## Related Commands

**clear qos acl**  
**commit**  
**rollback**  
**show qos acl info**

# set qos acl map

Use the **set qos acl map** command to attach an ACL to a specified port or VLAN.

```
set qos acl map acl_name {mod/port | vlan}
```

Syntax Description	
<i>acl_name</i>	Name of the list to which the entry belongs.
<i>mod/port</i>	Number of the module and the port on the module.
<i>vlan</i>	Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** There are no default ACL mappings.

**Command Types** Switch command.

**Command Modes** Privileged.

## Usage Guidelines



Caution

This command may fail if you try to map an ACL to a VLAN and the NVRAM is full.



Caution

Use the **copy** command to save the ACL configuration to Flash memory.

## Examples

This example shows how to attach an ACL to a port:

```
Console> (enable) set qos acl map my_acl 2/1
ACL my_acl is attached to port 2/1.
Console> (enable)
```

This example shows how to attach an ACL to a VLAN:

```
Console> (enable) set qos acl map ftp_acl 4
ACL ftp_acl is attached to vlan 4.
Console> (enable)
```

This example shows what happens if you try to attach an ACL that has not been committed:

```
Console> (enable) set qos acl map new_acl 4
Commit ACL new_acl before mapping.
Console> (enable)
```

---

**Related Commands**

[clear qos acl](#)  
[commit](#)  
[rollback](#)  
[show qos acl map](#)

# set qos bridged-microflow-policing

Use the **set qos bridged-microflow-policing** command to enable or disable microflow policing of bridged packets on a per-VLAN basis.

**set qos bridged-microflow-policing** {**enable** | **disable**} *vlanlist*

Syntax Description	enable	Deactivates microflow policing functionality.
	<b>disable</b>	Activates microflow policing functionality.
	<i>vlanlist</i>	List of VLANs; valid values are from 1 to 1001 and from 1025 to 4094.

**Defaults** The default is intraVLAN QoS is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Layer 3 switching engine-based systems do not create NetFlow entries for bridged packets. Without a NetFlow entry, these packets cannot be policed at the microflow level. You must enter the **set qos bridged-microflow-policing enable** command if you want the bridged packets to be microflow policed. This command is supported on systems configured with a Layer 3 switching engine only.

**Examples** This example shows how to enable microflow policing:

```
Console> (enable) set qos bridged-microflow-policing enable 1-1000
QoS microflow policing is enabled for bridged packets on vlans 1-1000.
Console> (enable)
```

This example shows how to disable microflow policing:

```
Console> (enable) set qos bridged-microflow-policing disable 10
QoS microflow policing is disabled for bridged packets on VLAN 10.
Console> (enable)
```

**Related Commands** [show qos bridged-packet-policing](#)

# set qos cos-dscp-map

Use the **set qos cos-dscp-map** command to set the CoS-to-DSCP mapping.

```
set qos cos-dscp-map dscp1 dscp2... dscp8
```

<b>Syntax Description</b>	<i>dscp#</i>	Number of the differentiated services code point (DSCP); valid values are from 0 to 63.
---------------------------	--------------	---

**Defaults** The default CoS-to-DSCP configuration is listed in [Table 2-16](#).

**Table 2-16 CoS-to-DSCP Mapping**

<b>CoS</b>	0	1	2	3	4	5	6	7
<b>DSCP</b>	0	8	16	24	32	40	48	56

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The CoS-to-DSCP map is used to map the CoS of packets arriving on trusted ports (or flows) to a DSCP where the trust type is **trust-cos**. This map is a table of eight CoS values (0 through 7) and their corresponding DSCP values. The switch has one map.

This command is supported on systems configured with a Layer 3 switching engine only.

**Examples** This example shows how to set the CoS-to-DSCP mapping:

```
Console> (enable) set qos cos-dscp-map 20 30 1 43 63 12 13 8
QoS cos-dscp-map set successfully.
Console> (enable)
```

**Related Commands** [clear qos cos-dscp-map](#)  
[show qos maps](#)

# set qos drop-threshold

Use the **set qos drop-threshold** command to program the transmit-queue and receive-queue drop thresholds on all ports in the system.

```
set qos drop-threshold 2q2t tx queue q# thr1 thr2
```

```
set qos drop-threshold {1q4t | 1p1q4t} rx queue q# thr1 thr2 thr3 thr4
```

<b>Syntax Description</b>	<b>2q2t tx</b>	Specifies the transmit-queue drop threshold.
	<b>1q4t   1p1q4t rx</b>	Specifies the receive-queue drop threshold.
	<b>queue q#</b>	Specifies the queue; valid values are <b>1</b> and <b>2</b> .
	<i>thr1, thr2, thr3, thr4</i>	Threshold percentage; valid values are from 1 to 100.

## Defaults

If you enable QoS, the following defaults apply:

- Transmit-queue drop thresholds:
  - Queue 1—80%, 100%
  - Queue 2—80%, 100%
- Receive-queue drop thresholds:
  - Queue 1—50%, 60%, 80%, 100% if the port is trusted
  - Queue 2—100%, 100%, 100%, 100% if the port is untrusted

If you disable QoS, the following defaults apply:

- Transmit-queue drop thresholds:
  - Queue 1—100%, 100%
  - Queue 2—100%, 100%
- Receive-queue drop thresholds: queue 1—100%, 100%, 100%, 100%

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The number preceding the **t** letter in the *port\_type* (**2q2t**, **1q4t**, or **1p1q4t**) determines the number of threshold values the hardware supports. For example, with **2q2t**, the number of thresholds specified is two; with **1q4t** and **1p1q4t**, the number of thresholds specified is four. Due to the granularity of programming the hardware, the values set in hardware will be close approximations of the values provided.

The number preceding the **q** letter in the *port\_type* determines the number of the queues that the hardware supports. For example, with **2q2t**, the number of queues specified is two; with **1q4t** and **1p1q4t**, the number of queues specified is four. The system defaults for the transmit queues attempt to keep the maximum latency through a port at a maximum of 10 milliseconds.

The number preceding the **p** letter in the **1p1q4t** port types determines the threshold in the priority queue.

When you configure the drop threshold for **1p1q4t**, the drop threshold for the second queue is 100 percent and is not configurable.

The thresholds are all specified as percentages; 10 indicates a threshold when the buffer is 10 percent full.

The single-port ATM OC-12 module does not support transmit-queue drop thresholds.

---

### Examples

This example shows how to assign the transmit-queue drop threshold:

```
Console> (enable) set qos drop-threshold 2q2t tx queue 1 40 80
Transmit drop thresholds for queue 1 set at 40% and 80%
Console> (enable)
```

These examples show how to assign the receive-queue drop threshold:

```
Console> (enable) set qos drop-threshold 1q4t rx queue 1 40 50 60 100
Receive drop thresholds for queue 1 set at 40% 50% 60% 100%
Console> (enable)
```

```
Console> (enable) set qos drop-threshold 1p1q4t rx queue 1 40 50 60 100
Receive drop thresholds for queue 1 set at 40% 50% 60% 100%
Console> (enable)
```

---

### Related Commands

[show qos info](#)

# set qos dscp-cos-map

Use the **set qos dscp-cos-map** command to set the DSCP-to-CoS mapping.

```
set qos dscp-cos-map dscp_list:cos_value ...
```

<b>Syntax Description</b>	<i>dscp_list</i>	Number of the DSCP; valid values are from 0 to 63.
	<i>cos_value...</i>	Number of the CoS; valid values are from 0 to 7.

**Defaults** The default DSCP-to-CoS configuration is listed in [Table 2-17](#).

**Table 2-17 DSCP-to-CoS Mapping**

<b>DSCP</b>	0 to 7	8 to 15	16 to 23	24 to 31	32 to 39	40 to 47	48 to 55	56 to 63
<b>CoS</b>	0	1	2	3	4	5	6	7

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The DSCP-to-CoS map is used to map the final DSCP classification to a final CoS. This final map determines the output queue and threshold to which the packet is assigned. The CoS map is written into the ISL header or 802.1Q tag of the transmitted packet on trunk ports and contains a table of 64 DSCP values and their corresponding CoS values. The switch has one map.

This command is supported on systems configured with a Layer 3 switching engine only.

**Examples** This example shows how to set the DSCP-to-CoS mapping:

```
Console> (enable) set qos dscp-cos-map 20-25:7 33-38:3
QoS dscp-cos-map set successfully.
Console> (enable)
```

**Related Commands** [clear qos map](#)  
[show qos maps](#)

# set qos ipprec-dscp-map

Use the **set qos ipprec-dscp-map** command to set the IP precedence-to-DSCP map. This command applies to all packets and all ports.

```
set qos ipprec-dscp-map dscp1 ... dscp8
```

<b>Syntax Description</b>	<i>dscp1#</i> Number of the IP precedence value; up to eight values can be specified.
---------------------------	---

<b>Defaults</b>	The default IP precedence-to-DSCP configuration is listed in <a href="#">Table 2-18</a> .
-----------------	---

**Table 2-18 IP Precedence-to-DSCP Mapping**

<b>IPPREC</b>	0	1	2	3	4	5	6	7
<b>DSCP</b>	0	8	16	24	32	40	48	56

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	Use this command to map the IP precedence of IP packets arriving on trusted ports (or flows) to a DSCP when the trust type is <b>trust-ipprec</b> . This map is a table of eight precedence values (0 through 7) and their corresponding DSCP values. The switch has one map. The IP precedence values are as follows:
-------------------------	--

- network 7
- internet 6
- critical 5
- flash-override 4
- flash 3
- immediate 2
- priority 1
- routine 0

This command is supported on systems configured with a Layer 3 switching engine only.

<b>Examples</b>	This example shows how to assign IP precedence-to-DSCP mapping and return to the default:
-----------------	---

```
Console> (enable) set qos ipprec-dscp-map 20 30 1 43 63 12 13 8
QoS ipprec-dscp-map set successfully.
Console> (enable)
```

■ set qos ipprec-dscp-map

---

**Related Commands**

[clear qos ipprec-dscp-map](#)  
[show qos maps](#)

# set qos mac-cos

Use the **set qos mac-cos** command to set the CoS value to the MAC address and VLAN pair.

```
set qos mac-cos dest_mac vlan cos
```

Syntax Description	
<i>dest_mac</i>	MAC address of the destination host.
<i>vlan</i>	Number of the VLAN; valid values are from 1 to 1001 and from 1025 to 4094.
<i>cos</i>	CoS value; valid values are from 0 to 7, higher numbers represent higher priority.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command has no effect on a switch configured with a PFC because the Layer 3 switching engine's result always overrides the Layer 2 result. Instead, use the **set qos acl** command.

The **set qos mac-cos** command creates a permanent CAM entry in the CAM table until you reset the active supervisor engine.

The port associated with the MAC address is learned when the first packet with this source MAC address is received. These entries do not age out.

The CoS for a packet going to the specified MAC address is overwritten even if it is coming from a trusted port.

If you enter the **show cam** command, entries made with the **set qos mac-cos** command display as dynamic because QoS considers them to be dynamic, but they do not age out.

**Examples** This example shows how to assign the CoS value 3 to VLAN 2:

```
Console> (enable) set qos mac-cos 0f-ab-12-12-00-13 2 3
CoS 3 is assigned to 0f-ab-12-12-00-13 vlan 2.
Console> (enable)
```

**Related Commands** [clear qos mac-cos](#)  
[show qos mac-cos](#)

## set qos map

Use the **set qos map** command to map a specific CoS value to the transmit- or receive-priority queues and the thresholds per available priority queue for all ports.

```
set qos map port_type tx | rx q# thr# cos coslist
```

```
set qos map port_type tx q# cos coslist
```

Syntax Description	
<i>port_type</i>	Port type; valid values are <b>2q2t</b> , <b>1p3q1t</b> , and <b>1p2q2t</b> for transmit and <b>1p1q4t</b> and <b>1p1q0t</b> for receive. See the “Usage Guidelines” section for additional information.
<b>tx</b>	Specifies the transmit queue.
<b>rx</b>	Specifies the receive queue.
<i>q#</i>	Value determined by the number of priority queues provided at the transmit or receive end; valid values are <b>1</b> and <b>2</b> , with the higher value indicating a higher priority queue.
<i>thr#</i>	Value determined by the number of drop thresholds available at a port; valid values are <b>1</b> and <b>2</b> , with the higher value indicating lower chances of being dropped.
<b>cos coslist</b>	Specifies CoS values; valid values are from 0 through 7, with the higher numbers representing a higher priority.

### Defaults

The default mappings for all ports are shown in [Table 2-19](#) and [Table 2-20](#).

**Table 2-19 CoS-to-Queue-to-Threshold Mapping (TX)**

Queue	Threshold	Cos Values <sup>1</sup>
<b>QoS enabled</b>		
1	1	0, 1
2	1	2, 3, 4
3	1	6, 7
4	0	5
<b>QoS disabled</b>		
1	0	0, 1, 2, 3, 4, 5, 6, 7

1. All CoS values, except CoS 5, are mapped to WRED. CoS 5, which is mapped to queue 4 does not have an associated WRED threshold.

**Table 2-20 CoS-to-Queue Mapping (RX)**

Queue	COS Values
<b>QoS enabled</b>	
1	0, 1, 2, 3, 4, 6, 7
2	5
<b>QoS disabled</b>	
1	0, 1, 2, 3, 4, 5, 6, 7

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you enter the **set qos map port\_type tx q# cos coslist** command, the following is a list of possible port types available:

- **tx port\_type = 1p3q1t**
- **rx port\_type = 1p1q0t**

You can enter the *cos\_list* variable as a single CoS value, multiple noncontiguous CoS values, a range of CoS values, or a mix of values. For example, you can enter any of the following: **0**, or **0,2,3**, or **0-3,7**.

The priority queue number is 4 for transmit and queue number 2 for receive.

When specifying the priority queue for the **1p2q2t** port type, the priority queue number is 3 and the threshold number is 1.

The receive- and transmit-drop thresholds have this relationship:

- Receive-queue 1 (standard) threshold 1 = transmit-queue 1 (standard low priority) threshold 1
- Receive-queue 1 (standard) threshold 2 = transmit-queue 1 (standard low priority) threshold 2
- Receive-queue 1 (standard) threshold 3 = transmit-queue 2 (standard high priority) threshold 1
- Receive-queue 1 (standard) threshold 4 = transmit-queue 2 (standard high priority) threshold 2

Refer to the *Catalyst 6500 Series Software Configuration Guide* for additional usage guidelines.

**Examples** This example shows how to assign the CoS values 1, 2, and 5 to the first queue and the first drop threshold in that queue:

```
Console> (enable) set qos map 2q2t tx 1 1 cos 1,2,5
Qos tx priority queue and threshold mapped to cos successfully.
Console> (enable)
```

This example shows how to assign the CoS values to queue 1 and threshold 2 in that queue:

```
Console> (enable) set qos map 2q2t tx 1 2 cos 3-4,7
Qos tx priority queue and threshold mapped to cos successfully.
Console> (enable)
```

This example shows how to map the CoS value 5 to strict-priority transmit-queue 3/drop-threshold 1:

```
Console> (enable) set qos map 1p2q2t tx 3 1 cos 5
```

```
Qos tx strict queue and threshold mapped to cos successfully.
```

```
Console> (enable)
```

---

**Related Commands**

[clear qos map](#)

[show qos info](#)

# set qos policed-dscp-map

Use the **set qos policed-dscp-map** command to set the mapping of policed in-profile DSCPs.

```
set qos policed-dscp-map [normal | excess] in_profile_dscp:policed_dscp...
```

<b>Syntax Description</b>	<b>normal</b>	(Optional) Specifies normal rate policers.
	<b>excess</b>	(Optional) Specifies excess rate policers.
	<i>in_profile_dscp</i>	Number of the in-profile DSCP; valid values are from 0 through 63.
	<i>:policed_dscp</i>	Number of the policed DSCP; valid values are 0 through 63.

**Defaults** The default map is no markdown.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can enter *in\_profile\_dscp* as a single DSCP, multiple DSCPs, or a range of DSCPs (for example, 1 or 1,2,3 or 1-3,7).  
The colon between *in\_profile\_dscp* and *policed\_dscp* is required.  
This command is supported on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

**Examples** This example shows how to set the mapping of policed in-profile DSCPs:

```
Console> (enable) set qos policed-dscp-map 60-63:60 20-40:5
QoS policed-dscp-map set successfully.
Console> (enable)
```

**Related Commands**

- [clear qos policed-dscp-map](#)
- [show qos maps](#)
- [show qos policer](#)

## set qos policer

Use the **set qos policer** command to create a policing rule for ACL.

```
set qos policer {microflow microflow_name} {rate rate} {burst burst} {drop | policed-dscp}
```

```
set qos policer {aggregate aggregate_name} {rate rate} {burst burst} {drop | policed-dscp}
```

```
set qos policer {aggregate aggregate_name} {rate rate} policed-dscp {erate erate} {drop | policed-dscp} burst burst [eburst eburst]
```

Syntax Description		
<b>microflow</b> <i>microflow_name</i>	Specifies the name of the microflow policing rule.	
<b>rate</b> <i>rate</i>	Specifies the average rate; valid values are 0 and from 32 kilobits per second to 32 gigabits per second.	
<b>burst</b> <i>burst</i>	Specifies the burst size; valid values are 0 and from 1 kilobit to 256 megabits.	
<b>drop</b>	Specifies drop traffic.	
<b>policed-dscp</b>	Specifies policed DSCP.	
<b>aggregate</b> <i>aggregate_name</i>	Specifies the name of the aggregate policing rule.	
<b>erate</b> <i>erate</i>	Specifies the excess rate value; valid values are 0 and from 32 kilobits per second to 8 gigabits per second.	
<b>eburst</b> <i>eburst</i>	(Optional) Specifies the excess burst size; valid values are 1 to 32000 kilobits.	

**Defaults** The default is no policing rules or aggregates are configured.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

Before microflow policing can occur, you must define a microflow policing rule. Policing allows the switch to limit the bandwidth consumed by a flow of traffic.

The Catalyst 6500 series switch supports up to 63 microflow policing rules. When a microflow policer is used in any ACL that is attached to any port or VLAN, the NetFlow flow mask is increased to full flow.

Before aggregate policing can occur, you must create an aggregate and a policing rule for that aggregate. The Catalyst 6500 series switch supports up to 1023 aggregates and 1023 policing rules.

When both normal and excess rates are zero, you can specify any burst size. If the normal rates and excess rates are zero, the value is ignored and set internally by hardware.

The excess rate must be greater than or equal to the normal rate.

The **set qos policer aggregate** command allows you to configure an aggregate flow and a policing rule for that aggregate. When you enter the **microflow** *microflow\_name* **rate** *rate* **burst** *burst*, the range for the average rate is 32 kilobits per second to 8 gigabits per second and the range for the burst size is 1 kilobit (entered as 1) to 32 megabits (entered as 32000). The burst can be set lower, higher, or equal to the rate. Modifying an existing aggregate rate limit entry causes that entry to be modified in NVRAM and in the switch if that entry is currently being used.

**Note**

We recommend a 32-kilobit minimum value burst size. Due to the nature of the traffic at different customer sites, along with the hardware configuration, smaller values occasionally result in lower rates than the specified rate. If you experiment with smaller values but problems occur, increase the burst rate to this minimum recommended value.

When you modify an existing microflow or aggregate rate limit, that entry in NVRAM is modified as well as in the switch if it is currently being used.

When you enter the policing name, follow these naming conventions:

- Maximum of 31 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types
- Case sensitive
- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer

The **burst** keyword and the *burst* value and the optional **eburst** keyword and the *eburst* value set the token bucket sizes. To sustain a specific rate, set the token bucket size to be at least the rate divided by 4000, because tokens are removed from the bucket every 1/4000th of a second (0.25 milliseconds) and the bucket needs to be at least as large as the burst size to sustain the specified rate.

If you do not enter the **eburst** keyword and the *eburst* value, QoS sets both token buckets to the size configured with the **burst** keyword and the *burst* value.

**Examples**

This example shows how to create a microflow policing rule for ACL:

```
Console> (enable) set qos policer microflow my-micro rate 1000 burst 10000 policed-dscp
QoS policer for microflow my-micro set successfully.
Console> (enable)
```

These examples show how to create an aggregate policing rule for ACL:

```
Console> (enable) set qos policer aggregate my-agg rate 1000 burst 2000 drop
QoS policer for aggregate my-aggset successfully.
Console> (enable)
```

```
Console> (enable) set qos policer aggregate test3 rate 64 policed-dscp erate 128 drop burst 96
QoS policer for aggregate test3 created successfully.
Console> (enable)
```

**Related Commands**

[clear qos policer](#)  
[show qos policer](#)

# set qos policy-source

Use the **set qos policy-source** command to set the QoS policy source.

**set qos policy-source local | cops**

Syntax Description	local	Sets the policy source to local NVRAM configuration.
	cops	Sets the policy source to COPS-PR configuration.

**Defaults** The default is all ports are set to local.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you set the policy source to **local**, the QoS policy is taken from local configuration stored in NVRAM. If you set the policy source to **local** after it was set to **cops**, the QoS policy reverts back to the local configuration stored in NVRAM.

When you set the policy source to **cops**, all global configurations to the device, such as the DSCP-to-marked-down DSCP, is taken from policy downloaded to the policy enforcement point (PEP) by the policy decision point (PDP). Configuration of each physical port, however, is taken from COPS-PR only if the policy source for that port has been set to **cops**.

**Examples** This example shows how to set the policy source to COPS-PR:

```
Console> (enable) set qos policy-source cops
QoS policy source for the switch set to COPS.
Console> (enable)
```

This example shows how to set the policy source to local NVRAM:

```
Console> (enable) set qos policy-source local
QoS policy source for the switch set to local.
Console> (enable)
```

This example shows the output if you attempt to set the policy source to COPS-PR and no COPS-PR servers are available:

```
Console> (enable) set qos policy-source cops
QoS policy source for the switch set to COPS.
Warning: No COPS servers configured. Use the 'set cops server' command
to configure COPS servers.
Console> (enable)
```

**Related Commands**

[clear qos config](#)  
[show qos policy-source](#)

## set qos rsvp

Use the **set qos rsvp** command to turn on or turn off the RSVP feature on the switch, set the time in minutes after which the RSVP databases get flushed (when the policy server dies), and set the local policy.

**set qos rsvp enable | disable**

**set qos rsvp policy-timeout** *timeout*

**set qos rsvp local-policy forward | reject**

Syntax Description	enable	disable
	Activates the RSVP feature.	Deactivates the RSVP feature.
	<b>policy-timeout</b> <i>timeout</i>	Specifies the time in minutes after which the RSVP databases get flushed; valid values are from 1 to 65535 minutes.
	<b>local-policy forward   reject</b>	Specifies the policy configuration local to the network device to either accept existing flows and forward them or not accept new flows.

**Defaults** The default is the RSVP feature is disabled, policy-timeout is 30 minutes, and local policy is forward.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The local policy guidelines are as follows:

- There is no connection with the policy server.
- New flows that come up after connection with the policy server have been lost.
- Old flows that come up after the PDP policy times out.

**Examples** This example shows how to enable RSVP:

```
Console> (enable) set qos rsvp enable
RSVP enabled. Only RSVP qualitative service supported.
QoS must be enabled for RSVP.
Console> (enable)
```

This example shows how to disable RSVP:

```
Console> (enable) set qos rsvp disable
RSVP disabled on the switch.
Console> (enable)
```

This example shows how to set the policy timeout interval:

```
Console> (enable) set qos rsvp policy-timeout 45  
RSVP database policy timeout set to 45 minutes.  
Console> (enable)
```

This example shows how to set the policy timeout interval:

```
Console> (enable) set qos rsvp local-policy forward  
RSVP local policy set to forward.  
Console> (enable)
```

---

**Related Commands**

[show qos rsvp](#)

## set qos rxq-ratio

Use the **set qos rxq-ratio** command to set the amount of packet buffer memory allocated to high-priority incoming traffic and low-priority incoming traffic.

```
set qos rxq-ratio port_type queue1_val queue2_val... queueN_val
```

Syntax Description	
<i>port_type</i>	Port type; valid value is <b>1p1q0t</b> and <b>1p1q8t</b> .
<i>queue1_val</i>	Percentage of low-priority traffic; valid values are from 1 to 99 and must total 100 with the <i>queue2_val</i> value.
<i>queue2_val</i>	Percentage of high-priority traffic; valid values are from 1 to 99 and must total 100 with the <i>queue1_val</i> value.
<i>queueN_val</i>	Percentage of strict-priority traffic; valid values are from 1 to 99 and must total 100 with the <i>queue1_val</i> and <i>queue1_val</i> values.

**Defaults** The default is 80:20 (queue 1 and queue 2) if you enable QoS and 100:0 (queue 1 and queue 2) if you disable QoS.

**Command Types** Switch command.

**Command Modes** Privileged.

### Usage Guidelines



**Caution**

Use caution when using this command. When entering the **set qos rxq-ratio** command, all ports go through a link up and link down condition.

The values set in hardware are close approximations of the values provided. For example, if you specify 0 percent, the actual value programmed is not necessarily 0.

The **rxq** ratio is determined by the traffic mix in the network. High-priority traffic is typically a smaller fraction of the traffic. Because the high-priority queue gets more service, you should set the high-priority queue lower than the low-priority queue.

The strict-priority queue requires no configuration.

For the strict-priority queue on 1p1q8t ingress ports, the minimum valid value is 3 percent.

### Examples

This example shows how to set the receive-queue size ratio:

```
Console> (enable) set qos rxq-ratio 1p1q0t 80 20
QoS rxq-ratio is set successfully.
Console> (enable)
```

---

Related Commands [show qos info](#)

# set qos statistics export

Use the **set qos statistics export** command to globally enable or disable statistics data gathering from hardware.

**set qos statistics export {enable | disable}**

Syntax Description	enable	Disables statistics data gathering.
	disable	Enables statistics data gathering.

**Defaults** The default is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Statistics polling does not occur if statistics are disabled, regardless of any other settings. You must designate an export destination prior to entering this command. If an export destination is not set, this message is displayed:

Warning: Export destination not set. Use the 'set qos statistics export destination' command to configure the export destination.

**Examples** This example shows how to enable statistics polling:

```
Console> (enable) set qos statistics export enable
QoS statistics export enabled.
Export destination: Stargate, port 9996
Console> (enable)
```

**Related Commands** [show qos statistics export info](#)

# set qos statistics export aggregate

Use the **set qos statistics export aggregate** command to enable or disable statistics data export on an aggregate policer.

```
set qos statistics export aggregate name { enable | disable }
```

Syntax Description	<i>name</i>	(Optional ) Name of the policer.
	<b>enable</b>	Enables statistics data export for the named aggregate policer.
	<b>disable</b>	Disables statistics data export for the named aggregate policer.

**Defaults** The default is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** To export data, you need to enable statistics on the port. You also must globally enable statistics and data export (see the [set qos statistics export](#) command).

This command is supported on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

**Examples** This example shows how to enable statistics export:

```
Console> (enable) set qos statistics export aggregate ipagg_3 enable
Statistics data export enabled for aggregate policer ipagg_3.
Export destination: 172.20.15.1 (Stargate), port 9996
Console> (enable)
```

**Related Commands**

- [set qos statistics export](#)
- [show mac](#)
- [show qos statistics export info](#)

# set qos statistics export destination

Use the **set qos statistics export destination** command to specify the statistics data export destination address.

```
set qos statistics export destination {host_name | host_ip} [port]
```

```
set qos statistics export destination {host_name | host_ip} [syslog [{facility severity}]]
```

Syntax Description	
<i>host_name</i>	Host name.
<i>host_ip</i>	Host IP address.
<i>port</i>	(Optional) UDP port number.
<b>syslog</b>	(Optional) Specifies the syslog port.
<i>facility</i>	(Optional) Type of facility to export; see the “Usage Guidelines” section for a list of valid values.
<i>severity</i>	(Optional) Severity level to export; see the “Usage Guidelines” section for a list of valid values.

Defaults	
	The default is none unless <b>syslog</b> is specified. If <b>syslog</b> is specified, the defaults are as follows: <ul style="list-style-type: none"> <li>• <i>port</i> is 514</li> <li>• <i>facility</i> is local6</li> <li>• <i>severity</i> is debug</li> </ul>

Command Types	
	Switch command.

Command Modes	
	Privileged.

Usage Guidelines	
	Valid <i>facility</i> values are <b>kern</b> , <b>user</b> , <b>mail</b> , <b>daemon</b> , <b>auth</b> , <b>lpr</b> , <b>news</b> , <b>uucp</b> , <b>cron</b> , <b>local0</b> , <b>local1</b> , <b>local2</b> , <b>local3</b> , <b>local4</b> , <b>local5</b> , <b>local6</b> , and <b>local7</b> .
	Valid <i>severity</i> levels are <b>emerg</b> , <b>alert</b> , <b>crit</b> , <b>err</b> , <b>warning</b> , <b>notice</b> , <b>info</b> , and <b>debug</b> .

Examples	
	This example shows how to specify the statistics data export destination address: <pre>Console&gt; (enable) <b>set qos statistics export destination stargate 9996</b> Statistics data export destination set to stargate port 9996. Console&gt; (enable)</pre>

Related Commands	
	<a href="#">set qos statistics export</a> <a href="#">show qos statistics export info</a>

# set qos statistics export interval

Use the **set qos statistics export interval** command to specify how often a port or aggregate policer statistics data is read and exported.

**set qos statistics export interval** *interval*

<b>Syntax Description</b>	<i>interval</i> Export time interval; valid values are from 30 seconds to 65535 seconds.
---------------------------	--

<b>Defaults</b>	The default is 30 seconds.
-----------------	----------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	This example shows how to set the export interval: <pre>Console&gt; (enable) set qos statistics export interval 35 Statistics export interval set to 35 seconds. Console&gt; (enable)</pre>
-----------------	--

<b>Related Commands</b>	<a href="#">show qos statistics export info</a>
-------------------------	---

# set qos statistics export port

Use the **set qos statistics export port** command to enable or disable statistics data export on a port.

```
set qos statistics export port mod/port {enable | disable}
```

<b>Syntax Description</b>	<i>mod/port</i>	(Optional ) Number of the module and the port on the module.
	<b>enable</b>	Enables statistics data export.
	<b>disable</b>	Disables statistics data export.

**Defaults** The default is disabled.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** For data export to be performed, you should enable statistics on the aggregate policer as well. You must globally enable statistics and data export (see the [set qos statistics export](#) command).

**Examples** This example shows how to enable statistics export on a port:

```
Console> (enable) set qos statistics export port 2/5 enable
Statistics data export enabled on port 2/5.
Console> (enable)
```

**Related Commands** [show qos statistics export info](#)

# set qos txq-ratio

Use the **set qos txq-ratio** command to set the amount of packet buffer memory allocated to high-priority traffic and low-priority traffic.

```
set qos txq-ratio port_type queue1_val queue2_val... queueN_val
```

Syntax Description	
<i>port_type</i>	Port type; valid values are <b>2q2t</b> , <b>1p2q2t</b> , and <b>1p2q1t</b> .
<i>queue1_val</i>	Percentage of low-priority traffic; valid values are from 1 to 99 and must total 100 with the <i>queue2_val</i> value.
<i>queue2_val</i>	Percentage of high-priority traffic; valid values are from 1 to 99 and must total 100 with the <i>queue1_val</i> value.
<i>queueN_val</i>	Percentage of strict-priority traffic; valid values are from 1 to 99 and must total 100.

**Defaults** The default for **2q2t** is 80:20 if you enable QoS and 100:0 if you disable QoS. The default for **1p2q2t** is 70:15:15 if you enable QoS and 100:0:0 if you disable QoS.

**Command Types** Switch command.

**Command Modes** Privileged.

## Usage Guidelines



### Caution

Use caution when using this command. When entering the **set qos txq-ratio** command, all ports go through a link up and down condition.

The values set in hardware will be close approximations of the values provided. For example, even if you specify 0 percent, the actual value programmed will not necessarily be 0.

The **txq** ratio is determined by the traffic mix in the network. Because high-priority traffic is typically a smaller fraction of the traffic and because the high-priority queue gets more service, you should set the high-priority queue lower than the low-priority queue.

The strict-priority queue requires no configuration.

For the strict-priority queue on 1p2q1t egress ports, the minimum valid value is 5 percent.

## Examples

This example shows how to set the transmit-queue size ratio:

```
Console> (enable) set qos txq-ratio 2q2t 75 25
QoS txq-ratio is set successfully.
Console> (enable)
```

■ set qos txq-ratio

Related Commands [show qos info](#)

# set qos wred

Use the **set qos wred** command to configure the WRED threshold parameters for the specified port type.

```
set qos wred port_type [tx] queue q# {[thr1Lo:]thr1Hi} {[thr2Lo:]thr2Hi}...
```

Syntax Description	
<i>port_type</i>	Port type; valid values are <b>1p2q2t</b> , <b>1p2q1t</b> , <b>1p3q1t</b> , and <b>1p1q8t</b> .
<b>tx</b>	(Optional) Specifies the parameters for output queuing.
<b>queue q#</b>	Specifies the queue to which the arguments apply; valid values are <b>1</b> through <b>3</b> .
<i>thr1Lo</i>	(Optional) Percentage of the lower threshold size for the first WRED curve; valid values are <b>1</b> to <b>100</b> .
<i>thr1Hi</i>	Percentage of the upper threshold size for the first WRED curve; valid values are <b>1</b> to <b>100</b> .
<i>thr2Lo</i>	(Optional) Percentage of the lower threshold size for the second WRED curve; valid values are <b>1</b> to <b>100</b> .
<i>thr2Hi</i>	Percentage of the upper threshold size for the second WRED curve; valid values are <b>1</b> to <b>100</b> .
<i>thr#</i>	Percentage of the buffer size; valid values are <b>1</b> to <b>100</b> .

## Defaults

The default thresholds are as follows:

- For **1p2q2t** = 40:70 (threshold1) and 70:100 (threshold2) (low:high percentage)/queue
- For **1p3q1t** = 70:100 (low:high)

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The queue values range from 1 to 3. Queue 4 is the strict-priority queue and does not have an associated WRED threshold. The thresholds are all specified as percentages ranging from 1 to 100. A value of 10 indicates a threshold when the buffer is 10 percent full.

The colon between the low and high threshold values is required.

## Examples

This example shows how to configure lower and upper threshold values for queue 1:

```
Console> (enable) set qos wred 1p2q2t queue 1 20:60 40:90
WRED thresholds for queue 1 set to 20:60 and 40:90 on all WRED-capable 1p2q2t ports.
Console> (enable)
```

This example shows how to configure the upper threshold value for queue 1:

```
Console> (enable) set qos wred 1p3q1t tx queue 1 20
WRED thresholds for queue 1 set to 0:20 on all WRED-capable 1p3q1t ports.
Console> (enable)
```

■ set qos wred

---

**Related Commands**

[clear qos config](#)  
[show qos info](#)

## set qos wrr

Use the **set qos wrr** command to specify the weights that determine how many packets will transmit out of one queue before switching to the other queue.

```
set qos wrr port_type queue1_val queue2_val...
```

### Syntax Description

<i>port_type</i>	Port type; valid values are <b>2q2t</b> , <b>1p2q2t</b> , <b>1p3q1t</b> , and <b>1p2q1t</b> .
<i>queue#_val</i>	Number of weights for queues 1, 2, or 3; valid values are from 1 to 255.

### Defaults

The default weighted round robin (WRR) with QoS enabled for port type **1p3q1t** is as follows:

- Queue 1 = 100
- Queue 2 = 150
- Queue 3 = 200

With QoS disabled, the default is 255 for all three queues.

The default WRR for port types **2q2t** and **1p2q2t** is 4:255.

### Command Types

Switch command.

### Command Modes

Privileged.

### Usage Guidelines

The WRR weights are used to partition the bandwidth between the queues in the event all queues are not empty. For example, weights of 1:3 mean that one queue gets 25 percent of the bandwidth and the other gets 75 percent as long as both queues have data.

Weights of 1:3 do not necessarily lead to the same results as when the weights are 10:30. In the latter case, more data is serviced from each queue and the latency of packets serviced from the other queue goes up. For best results, set the weights so that at least one packet (maximum size) can be serviced from the lower priority queue at a time. For the higher priority queue, set the weights so that multiple packets are serviced at any one time.

The values set in hardware will be close approximations of the values provided. For example, even if you specify 0 percent, the actual value programmed will not necessarily be 0. Whatever weights you choose, make sure that the resulting byte values programmed (see the **show qos info** command with the **runtime** keyword) are at least equal to the MTU size.

The ratio achieved is only an approximation of what you specify since the cutoff is on a packet and midway through a packet. For example, if you specify that the ratio services 1000 bytes out of the low-priority queue, and there is a 1500-byte packet in the low-priority queue, the entire 1500-byte packet is transmitted because the hardware services an entire packet.

For **1p2q2t** and **2q2t**, only two queues can be set; the third queue is strict priority.

For **1p3q1t**, three queues can be set; a fourth queue is strict priority.

---

**Examples**

This example shows how to specify the weights for queue 1 and queue 2 to 30 and 70:

```
Console> (enable) set qos wrr 2q2t 30 70  
QoS wrr ratio is set successfully.  
Console> (enable)
```

---

**Related Commands**

[show qos info](#)  
[show qos statistics](#)

# set radius deadline

Use the **set radius deadline** command to set the time to skip RADIUS servers that do not reply to an authentication request.

**set radius deadline** *minutes*

<b>Syntax Description</b>	<i>minutes</i> Length of time a RADIUS server does not respond to an authentication request; valid values are from 0 to 1440 minutes.
---------------------------	---

<b>Defaults</b>	The default is 0 minutes.
-----------------	---------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	If only one RADIUS server is configured or if all the configured servers are marked dead, deadline will be ignored since no alternate servers are available. By default, the deadline is 0 minutes; the RADIUS servers are not marked dead if they do not respond.
-------------------------	--

<b>Examples</b>	This example shows how to set the RADIUS deadline to 10 minutes:
-----------------	--

```
Console> (enable) set radius deadline 10
Radius deadline set to 10 minutes.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show radius</a>
-------------------------	-----------------------------

# set radius key

Use the **set radius key** command to set the encryption and authentication for all communication between the RADIUS client and the server.

**set radius key** *key*

<b>Syntax Description</b>	<i>key</i> Name of the key to authenticate the transactions between the RADIUS client and the server.
---------------------------	---

<b>Defaults</b>	The default of the key is set to null.
-----------------	--

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	The key you set must be the same one as configured in the RADIUS server. All leading spaces are ignored; spaces within and at the end of the key are not ignored. Double quotes are not required even if there are spaces in the key, unless the quotes themselves are part of the key. The length of the key is limited to 65 characters; it can include any printable ASCII characters except tabs.
-------------------------	---

If you configure a RADIUS key on the switch, make sure you configure an identical key on the RADIUS server.

<b>Examples</b>	This example shows how to set the RADIUS encryption and authentication key to Make my day:
-----------------	--

```
Console> (enable) set radius key Make my day
Radius key set to Make my day.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show radius</a>
-------------------------	-----------------------------

# set radius retransmit

Use the **set radius retransmit** command to specify the number of times the RADIUS servers are tried before giving up on the server.

**set radius retransmit** *count*

---

<b>Syntax Description</b>	<i>count</i>	Number of times the RADIUS servers are tried before giving up on the server; valid values are from 1 to 100.
---------------------------	--------------	--

---

---

<b>Defaults</b>	The default is two times (three attempts).
-----------------	--

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Examples</b>	This example shows how to set the retransmit attempts to 3:
-----------------	---

```
Console> (enable) set radius retransmit 3  
Radius retransmit count set to 3.  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">show radius</a>
-------------------------	-----------------------------

# set radius server

Use the **set radius server** command to set up the RADIUS server.

```
set radius server ipaddr [auth-port port] [acct-port port] [primary]
```

Syntax Description		
<i>ipaddr</i>	Number of the IP address or IP alias in dot notation a.b.c.d.	
<b>auth-port</b> <i>port</i>	(Optional) Specifies a destination User Datagram Protocol (UDP) port for RADIUS authentication messages.	
<b>acct-port</b> <i>port</i>	(Optional) Specifies a destination UDP port for RADIUS accounting messages.	
<b>primary</b>	(Optional) Specifies this server be contacted first.	

**Defaults** The default **auth-port** is 181, and the default **acct-port** is 1813.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you configure multiple RADIUS servers, the first server configured is the primary. Authentication requests are sent to this server first. You can specify a particular server as primary by using the **primary** keyword. You can add up to three RADIUS servers.

The *ipaddr* value can be entered as an IP alias or an IP address in dot notation a.b.c.d.

If you set the **auth-port** *port* to 0, the RADIUS server will not be used for authentication. If you set the **acct-port** *port* to 0, the RADIUS server will not be used for accounting.

If you configure a RADIUS key on the switch, make sure you configure an identical key on the RADIUS server.

You must specify a RADIUS server before enabling RADIUS on the switch.

**Examples** This example shows how to add a primary server using an IP alias:

```
Console> (enable) set radius server everquest.com auth-port 0 acct-port 1646 primary
everquest.com added to RADIUS server table as primary server.
Console> (enable)
```

This example shows how to add a primary server using an IP address:

```
Console> (enable) set radius server 172.22.11.12 auth-port 0 acct-port 1722 primary
172.22.11.12 added to RADIUS server table as primary server
Console> (enable)
```

**Related Commands** [show radius](#)

# set radius timeout

Use the **set radius timeout** command to set the time between retransmissions to the RADIUS server.

**set radius timeout** *seconds*

<b>Syntax Description</b>	<i>seconds</i>	Number of seconds to wait for a reply; valid values are from 1 to 1000 seconds.
---------------------------	----------------	---

<b>Defaults</b>	The default timeout is 5 seconds.
-----------------	-----------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	This example shows how to set the time between retransmissions to 7 seconds:
-----------------	--

```
Console> (enable) set radius timeout 7  
Radius timeout set to 7 seconds.  
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show radius</a>
-------------------------	-----------------------------

## set rcp username

Use the **set rcp username** command to specify your username for rcp file transfers.

**set rcp username** *username*

<b>Syntax Description</b>	<i>username</i> Username up to 14 characters long.
---------------------------	--

<b>Defaults</b>	There are no default settings for this command.
-----------------	---

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	<p>The username can be a maximum of 40 characters, must be different from “root,” and not a null string.</p> <p>The only case where you cannot configure the rcp username is for the VMPS database where you will use an rcp VMPS username. Use the <b>set vmps downloadmethod</b> command to specify the rcp VMPS username.</p>
-------------------------	--

<b>Examples</b>	This example shows how to set the username for rcp:
-----------------	---

```
Console> (enable) set rcp username jdoe
Console> (enable)
```

<b>Related Commands</b>	<p><b>clear rcp</b></p> <p><b>set vmps downloadmethod</b></p> <p><b>show rcp</b></p>
-------------------------	--

# set rgmp

Use the **set rgmp** command to enable or disable the Router-Ports Group Management Protocol (RGMP) feature on the switch.

```
set rgmp {enable | disable}
```

---

## Syntax Description

---

**enable** Enables RGMP on the switch.

---

**disable** Disables RGMP on the switch.

---

---

## Defaults

The default is RGMP is disabled.

---

## Command Types

Switch command.

---

## Command Modes

Privileged.

---

## Usage Guidelines

The **set rgmp** command affects the entire switch. You cannot enable or disable RGMP on a per-VLAN basis.

The RGMP feature is operational only if IGMP snooping is enabled on the switch (see the [set igmp](#) command).

---

## Examples

This example shows how to enable RGMP on the switch:

```
Console> (enable) set rgmp enable
RGMP is enabled.
Console> (enable)
```

This example shows how to disable RGMP on the switch:

```
Console> (enable) set rgmp disable
RGMP is disabled.
Console> (enable)
```

---

## Related Commands

[clear rgmp statistics](#)  
[set igmp](#)  
[show rgmp group](#)  
[show rgmp statistics](#)

## set rspan

Use the **set rspan** command to create remote Switched Port Analyzer (SPAN) sessions.

```
set rspan disable source [rspan_vlan | all]
```

```
set rspan disable destination [mod/port | all]
```

```
set rspan source {src_mod/src_ports... | vlangs... | sc0} {rspan_vlan} [rx | tx | both]  
[multicast {enable | disable}] [filter vlangs...] [create]
```

```
set rspan destination mod/port {rspan_vlan} [inpkts {enable | disable}]  
[learning {enable | disable}] [create]
```

Syntax	Description
<b>disable source</b>	Disables remote SPAN source information.
<i>rspan_vlan</i>	(Optional) Remote SPAN VLAN.
<b>all</b>	(Optional) Disables all remote SPAN source or destination sessions.
<b>disable destination</b>	Disables remote SPAN destination information.
<i>mod/port</i>	(Optional) Remote SPAN destination port.
<i>src_mod/src_ports...</i>	Monitored ports (remote SPAN source).
<i>vlangs...</i>	Monitored VLANs (remote SPAN source).
<b>sc0</b>	Specifies the inband port is a valid source.
<b>rx</b>	(Optional) Specifies that information received at the source (ingress SPAN) is monitored.
<b>tx</b>	(Optional) Specifies that information transmitted from the source (egress SPAN) is monitored.
<b>both</b>	(Optional) Specifies that information both transmitted from the source (ingress SPAN) and received (egress SPAN) at the source are monitored.
<b>multicast enable</b>	(Optional) Enables monitoring multicast traffic (egress traffic only).
<b>multicast disable</b>	(Optional) Disables monitoring multicast traffic (egress traffic only).
<b>filter</b> <i>vlangs</i>	(Optional) Monitors traffic on selected VLANs on source trunk ports.
<b>create</b>	(Optional) Creates a new remote SPAN session instead of overwriting the previous SPAN session.
<b>inpkts enable</b>	(Optional) Allows the remote SPAN destination port to receive normal ingress traffic (from the network to the bus) while forwarding the remote SPAN traffic.
<b>inpkts disable</b>	(Optional) Disables the receiving of normal inbound traffic on the remote SPAN destination port.
<b>learning enable</b>	(Optional) Enables learning for the remote SPAN destination port.
<b>learning disable</b>	(Optional) Disables learning for the remote SPAN destination port.

---

**Defaults**

The defaults are as follows:

- Remote SPAN is disabled.
- No VLAN filtering.
- Monitoring multicast traffic is enabled.
- Learning is enabled.
- `inpkts` is disabled.

---

**Command Types**

Switch command.

---

**Command Modes**

Privileged.

---

**Usage Guidelines**

This command is not supported by the NAM.

The `rspan_vlan` variable is optional in the **set rspan disable source** command and required in the **set rspan source** and **set rspan destination** command set.

After you enable SPAN, system defaults are used if no parameters were ever set. If you changed parameters, these are stored in NVRAM, and the new parameters are used.

Use a network analyzer to monitor ports.

Use the **inpkts** keyword with the **enable** option to allow the remote SPAN destination port to receive normal incoming traffic in addition to the traffic mirrored from the remote SPAN source. Use the **disable** option to prevent the remote SPAN destination port from receiving normal incoming traffic.

You can specify an Multilayer Switch Module (MSM) port as the remote SPAN source port. However, you cannot specify an MSM port as the remote SPAN destination port.

When you enable the **inpkts** option, a warning message notifies you that the destination port does not join STP and may cause loops if this option is enabled.

If you do not specify the keyword **create** and you have only one session, the session will be overwritten. If a matching `rspan_vlan` or destination port exists, the particular session will be overwritten (with or without specifying **create**). If you specify the keyword **create** and there is no matching `rspan_vlan` or destination port, the session will be created.

Each switch can source only one remote SPAN session (ingress, egress, or both). When you configure a remote ingress or bidirectional SPAN session in a source switch, the limit for local ingress or bidirectional SPAN session is reduced to one. There are no limits on the number of remote SPAN sessions carried across the network within the remote SPAN session limits.

You can configure any VLAN as a remote SPAN VLAN as long as these conditions are met:

- The same remote SPAN VLAN is used for a remote SPAN session in the switches.
- All the participating switches have appropriate hardware and software.
- No unwanted access port is configured in the remote SPAN VLAN.

---

**Examples**

This example shows how to disable all enabled source sessions:

```
Console> (enable) set rspan disable source all  
This command will disable all remote span source session(s).  
Do you want to continue (y/n) [n]? y  
Disabled monitoring of all source(s) on the switch for remote span.  
Console> (enable)
```

This example shows how to disable one source session to a specific VLAN:

```
Console> (enable) set rspan disable source 903  
Disabled monitoring of all source(s) on the switch for rspan_vlan 903.  
Console> (enable)
```

This example shows how to disable all enabled destination sessions:

```
Console> (enable) set rspan disable destination all  
This command will disable all remote span destination session(s).  
Do you want to continue (y/n) [n]? y  
Disabled monitoring of remote span traffic on ports 9/1,9/2,9/3,9/4,9/5,9/6.  
Console> (enable)
```

This example shows how to disable one destination session to a specific port:

```
Console> (enable) set rspan disable destination 4/1  
Disabled monitoring of remote span traffic on port 4/1.  
Console> (enable)
```

---

**Related Commands**    [show rspan](#)

# set security acl adjacency

Use the **set security acl adjacency** command to set an entry for the adjacency table.

```
set security acl adjacency adjacency_name dest_vlan dest_mac [source_mac [mtu mtu_size] | mtu mtu_size]
```

Syntax Description		
	<i>adjacency_name</i>	Name of the adjacency table entry.
	<i>dest_vlan</i>	Name of the destination VLAN.
	<i>dest_mac</i>	Destination MAC address.
	<i>source_mac</i>	(Optional) Source MAC address.
	<b>mtu</b> <i>mtu_size</i>	(Optional) Specifies packet size in bytes.

**Defaults** The default size for the MTU is 9600 bytes.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The order of ACEs in a policy-based forwarding (PBF) VACL is important. The adjacency table entry has to be defined in the VACL before the redirect ACE because the redirect ACE uses it to redirect traffic. Refer to the *Catalyst 6500 Series Software Configuration Guide* for detailed information on configuring PBF VACLs.

You can set the MTU when jumbo frames are sent using PBF.

**Examples** This example shows how to set an entry for the adjacency table:

```
Console> (enable) set security acl adjacency ADJ1 11 0-0-0-0-0-B 0-0-0-0-0-A
Console> (enable)
```

This example shows how to set an entry for the adjacency table with a specific MTU size:

```
Console> (enable) set security acl adjacency a_1 2 0-0a-0a-0a-0a-0a 9000
Console> (enable)
```

**Related Commands**

- [clear security acl](#)
- [commit](#)
- [show security acl](#)

# set security acl capture-ports

Use the **set security acl capture-ports** command to set the ports (specified with the **capture** option in the **set security acl ip**, **set security acl ipx**, and **set security acl mac** commands) to show traffic captured on these ports.

```
set security acl capture-ports {mod/ports...}
```

<b>Syntax Description</b>	<i>mod/ports...</i> Module and port number.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>Configurations you make by entering this command are saved in NVRAM. This command <i>does not</i> require that you enter the <b>commit</b> command.</p> <p>The module and port specified in this command are added to the current ports configuration list.</p> <p>This command works with Ethernet ports only; you cannot set ATM ports.</p> <p>The ACL capture will not work unless the capture port is in the spanning tree forwarding state for the VLAN.</p>
<b>Examples</b>	<p>This example shows how to set a port to capture traffic:</p> <pre>Console&gt; (enable) set security acl capture-ports 3/1 Successfully set 3/1 to capture ACL traffic. Console&gt; (enable)</pre> <p>This example shows how to set multiple ports to capture traffic:</p> <pre>Console&gt; (enable) set security acl capture-ports 1/1-10 Successfully set the following ports to capture ACL traffic: 1/1-2. Console&gt; (enable)</pre>
<b>Related Commands</b>	<p><b>clear security acl capture-ports</b></p> <p><b>show security acl capture-ports</b></p>

## set security acl ip

Use the **set security acl ip** command to create a new entry in a standard IP VACL and append the new entry at the end of the VACL.

```
set security acl ip {acl_name} {permit | deny} {src_ip_spec} [before editbuffer_index |
modify editbuffer_index] [log]
```

```
set security acl ip {acl_name} [permit | deny] arp
```

```
set security acl ip {acl_name} {permit | deny | redirect {adj_name | mod_num/port_num} }
{protocol} {src_ip_spec} {dest_ip_spec} [precedence precedence] [tos tos] [fragment]
[capture] [before editbuffer_index | modify editbuffer_index] [log]
```

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num} } [ip]
{src_ip_spec} {dest_ip_spec} [precedence precedence] [tos tos] [fragment] [capture]
[before editbuffer_index | modify editbuffer_index] [log]
```

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num} } [icmp | 1]
{src_ip_spec} {dest_ip_spec} [icmp_type] [icmp_code] | [icmp_message]
[precedence precedence] [tos tos] [fragment] [capture] [before editbuffer_index |
modify editbuffer_index] [log]
```

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num} } [tcp | 6]
{src_ip_spec} [operator port [port]] {dest_ip_spec} [operator port [port]] [established]
[precedence precedence] [tos tos] [fragment] [capture] [before editbuffer_index |
modify editbuffer_index] [log]
```

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num} } [udp | 17]
{src_ip_spec} [operator port [port]] {dest_ip_spec} [operator port [port]]
[precedence precedence] [tos tos] [fragment] [capture] [before editbuffer_index |
modify editbuffer_index] [log]
```

Syntax Description		
<i>acl_name</i>		Unique name that identifies the lists to which the entry belongs.
<b>permit</b>		Allows traffic from the source IP address.
<b>deny</b>		Blocks traffic from the source IP address.
<i>src_ip_spec</i>		Source IP address and the source mask. See the “Usage Guidelines” section for the format.
<b>before</b> <i>editbuffer_index</i>		(Optional) Inserts the new ACE in front of another ACE.
<b>modify</b> <i>editbuffer_index</i>		(Optional) Replaces an ACE with the new ACE.
<b>log</b>		(Optional) Logs denied packets.
<b>arp</b>		Specifies ARP.
<b>redirect</b>		Specifies to which switched ports the packet is redirected.
<i>mod_num/port_num</i>		Number of the module and port.
<i>adj_name</i>		Name of the adjacency table entry.

<i>protocol</i>	Keyword or number of an IP protocol; valid numbers are from 0 to 255 representing an IP protocol number. See the “Usage Guidelines” section for the list of valid keywords.
<i>dest_ip_spec</i>	Destination IP address and the destination mask. See the “Usage Guidelines” section for the format.
<b>precedence</b> <i>precedence</i>	(Optional) Specifies the precedence level; valid values are from 0 to 7 or by name. See the “Usage Guidelines” section for a list of valid names.
<b>tos</b> <i>tos</i>	(Optional) Specifies the type of service level; valid values are from 0 to 15 or by name. See the “Usage Guidelines” section for a list of valid names.
<b>fragment</b>	(Optional) Filters IP traffic that carries fragments.
<b>capture</b>	(Optional) Specifies packets are switched normally and captured; <b>permit</b> must also be enabled.
<b>ip</b>	(Optional) Matches any Internet Protocol packet.
<b>icmp</b>   <b>1</b>	(Optional) Keyword or number to match ICMP packets.
<i>icmp-type</i>	(Optional) ICMP message type name or a number; valid values are from 0 to 255. See the “Usage Guidelines” section for a list of valid names.
<i>icmp-code</i>	(Optional) ICMP message code name or a number; valid values are from 0 to 255. See the “Usage Guidelines” section for a list of valid names.
<i>icmp-message</i>	(Optional) ICMP message type name or ICMP message type and code name. See the “Usage Guidelines” section for a list of valid names.
<b>tcp</b>   <b>6</b>	(Optional) Keyword or number to match TCP packets.
<i>operator</i>	(Optional) Operands; valid values include <b>lt</b> (less than), <b>gt</b> (greater than), <b>eq</b> (equal), <b>neq</b> (not equal), and <b>range</b> (inclusive range).
<i>port</i>	(Optional) Number or name of a TCP or UDP port; valid port numbers are from 0 to 65535. See the “Usage Guidelines” section for a list of valid names.
<b>established</b>	(Optional) Specifies an established connection; used only for TCP protocol.
<b>udp</b>   <b>17</b>	(Optional) Keyword or number to match UDP packets.

**Defaults**

There are no default ACLs and no default ACL-VLAN mappings. By default, ARP is enabled.

**Command Types**

Switch command.

**Command Modes**

Privileged.

## Usage Guidelines

Configurations you make by entering this command are saved to NVRAM and hardware only after you enter the **commit** command. Enter ACEs in batches and then enter the **commit** command to save them in NVRAM and in the hardware.

The **arp** keyword is supported on switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2). If you use the **arp** keyword, this is supported on a per-ACL basis only; either ARP is allowed or ARP is denied.

If you use the **fragment** keyword in an ACE, this ACE applies to nonfragmented traffic and to the fragment with offset equal to zero in a fragmented flow.

A fragmented ACE that permits Layer 4 traffic from host A to host B also permits fragmented traffic from host A to host B regardless of the Layer 4 port.

If you use the **capture** keyword, the ports that capture the traffic and transmit out are specified by entering the **set security acl capture-ports** command.

When you enter the ACL name, follow these naming conventions:

- Maximum of 32 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types
- Case sensitive
- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer

When you specify the source IP address and the source mask, use the form *source\_ip\_address source\_mask* and follow these guidelines:

- The *source\_mask* is required; 0 indicates a care bit, 1 indicates a don't-care bit.
- Use a 32-bit quantity in four-part dotted-decimal format.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 255.255.255.255.
- Use **host** source as an abbreviation for a *source* and *source-wildcard* of source 0.0.0.0.

When you enter a destination IP address and the destination mask, use the form *destination\_ip\_address destination\_mask*. The destination mask is required.

- Use a 32-bit quantity in a four-part dotted-decimal format.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 255.255.255.255.
- Use **host/source** as an abbreviation for a *destination* and *destination-wildcard* of destination 0.0.0.0.

The **log** keyword is an option of **deny** only. If you want to change an existing VACL configuration to **deny** with **log**, you must first clear the VACL and then set it again.

The **log** keyword is supported on systems configured with Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

Valid names for *precedence* are critical, flash, flash-override, immediate, internet, network, priority, and routine.

Valid names for *tos* are max-reliability, max-throughput, min-delay, min-monetary-cost, and normal.

Valid *protocol* keywords include **icmp** (1), **ip**, **ipinip** (4), **tcp** (6), **udp** (17), **igrp** (9), **eigrp** (88), **gre** (47), **nos** (94), **ospf** (89), **ahp** (51), **esp** (50), **pcp** (108), and **pim** (103). The IP number is displayed in parentheses. Use the keyword **ip** to match any Internet Protocol.

ICMP packets that are matched by ICMP message type can also be matched by the ICMP message code.

Valid names for *icmp\_type* and *icmp\_code* are administratively-prohibited, alternate-address, conversion-error, dod-host-prohibited, dod-net-prohibited, echo, echo-reply, general-parameter-problem, host-isolated, host-precedence-unreachable, host-redirect, host-tos-redirect, host-tos-unreachable, host-unknown, host-unreachable, information-reply, information-request, mask-reply, mask-request, mobile-redirect, net-redirect, net-tos-redirect, net-tos-unreachable, net-unreachable, network-unknown, no-room-for-option, option-missing, packet-too-big, parameter-problem, port-unreachable, precedence-unreachable, protocol-unreachable, reassembly-timeout, redirect, router-advertisement, router-solicitation, source-quench, source-route-failed, time-exceeded, timestamp-reply, timestamp-request, traceroute, ttl-exceeded, and unreachable.

If the operator is positioned after the source and source-wildcard, it must match the source port. If the operator is positioned after the destination and destination-wildcard, it must match the destination port. The range operator requires two port numbers. All other operators require one port number.

TCP port names can be used only when filtering TCP. Valid names for TCP ports are bgp, chargen, daytime, discard, domain, echo, finger, ftp, ftp-data, gopher, hostname, irc, klogin, kshell, lpd, nntp, pop2, pop3, smtp, sunrpc, syslog, tacacs-ds, talk, telnet, time, uucp, whois, and www.

UDP port names can be used only when filtering UDP. Valid names for UDP ports are biff, bootpc, bootps, discard, dns, dnsix, echo, mobile-ip, nameserver, netbios-dgm, netbios-ns, ntp, rip, snmp, snmptrap, sunrpc, syslog, tacacs-ds, talk, tftp, time, who, and xdmcp.

The number listed with the protocol type is the layer protocol number (for example, **udp | 17**).

If no layer protocol number is entered, you can enter the following syntax:

```
set security acl ip {acl_name} {permit | deny} {src_ip_spec} [before editbuffer_index |
  modify editbuffer_index]
```

If a Layer 4 protocol is specified, you can enter the following syntax:

```
set security acl ip {acl_name} {permit | deny | redirect mod_num/port_num} {protocol}
  {src_ip_spec} {dest_ip_spec} [precedence precedence] [tos tos] [capture]
  [before editbuffer_index | modify editbuffer_index]
```

For IP, you can enter the following syntax:

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num}} [ip]
  {src_ip_spec} {dest_ip_spec} [precedence precedence] [tos tos] [capture]
  [before editbuffer_index | modify editbuffer_index]
```

For ICMP, you can enter the following syntax:

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num}} [icmp | 1]
  {src_ip_spec} {dest_ip_spec} [icmp_type] [icmp_code] | [icmp_message]
  [precedence precedence] [tos tos] [capture] [before editbuffer_index |
  modify editbuffer_index]
```

For TCP, you can use the following syntax:

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num}} [tcp | 6]
  {src_ip_spec} [operator port [port]] {dest_ip_spec} [operator port [port]] [established]
  [precedence precedence] [tos tos] [capture] [before editbuffer_index |
  modify editbuffer_index]
```

For UDP, you can use the following syntax:

```
set security acl ip {acl_name} {permit | deny | redirect {mod_num/port_num}} [udp | 17]
  {src_ip_spec} [operator port [port]] {dest_ip_spec} [operator port [port]]
  [precedence precedence] [tos tos] [capture] [before editbuffer_index |
  modify editbuffer_index]
```

## Examples

These examples show different ways to use the **set security acl ip** commands to configure IP security ACL:

```
Console> (enable) set security acl ip IPACL1 deny 1.2.3.4 0.0.0.0
IPACL1 editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

```
Console> (enable) set security acl ip IPACL1 deny host 171.3.8.2 before 2
IPACL1 editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

```
Console> (enable) set security acl ip IPACL1 permit any any
IPACL1 editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

```
Console> (enable) set security acl ip IPACL1 redirect 3/1 ip 3.7.1.2 0.0.0.255 host
255.255.255.255 precedence 1 tos min-delay
IPACL1 editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

```
Console> (enable) set security acl ip IPACL1 permit ip host 60.1.1.1 host 60.1.1.98
capture
IPACL1 editbuffer modified. Use 'commit' command to apply changes.
```

## Related Commands

- [clear security acl](#)
- [clear security acl capture-ports](#)
- [clear security acl map](#)
- [commit](#)
- [set security acl map](#)
- [set security acl capture-ports](#)
- [show security acl](#)
- [show security acl capture-ports](#)

# set security acl ipx

Use the **set security acl ipx** command to create a new entry in a standard IPX VACL and to append the new entry at the end of the VACL.

```
set security acl ipx {acl_name} {permit | deny | redirect mod_num/port_num} {protocol}
  {src_net} [dest_net.dest_node] [[dest_net_mask.]dest_node_mask] [capture]
  [before editbuffer_index | modify editbuffer_index]
```

Syntax Description		
<i>acl_name</i>		Unique name that identifies the list to which the entry belongs.
<b>permit</b>		Allows traffic from the specified source IPX address.
<b>deny</b>		Blocks traffic from the specified source IPX address.
<b>redirect</b>		Redirects traffic from the specified source IPX address.
<i>mod_num/port_num</i>		Number of the module and port.
<i>protocol</i>		Keyword or number of an IPX protocol; valid values are from 0 to 255 representing an IPX protocol number. See the “Usage Guidelines” section for a list of valid keywords and corresponding numbers.
<i>src_net</i>		Number of the network from which the packet is being sent. See the “Usage Guidelines” section for format guidelines.
<i>dest_net</i> .		(Optional) Number of the network from which the packet is being sent.
<i>.dest_node</i>		(Optional) Node on destination-network to which the packet is being sent.
<i>dest_net_mask</i> .		(Optional) Mask to be applied to the destination network. See the “Usage Guidelines” section for format guidelines.
<i>dest_node_mask</i>		(Optional) Mask to be applied to the destination-node. See the “Usage Guidelines” section for format guidelines.
<b>capture</b>		(Optional) Specifies packets are switched normally and captured.
<b>before</b> <i>editbuffer_index</i>		(Optional) Inserts the new ACE in front of another ACE.
<b>modify</b> <i>editbuffer_index</i>		(Optional) Replaces an ACE with the new ACE.

**Defaults** There are no default ACLs and no default ACL-VLAN mappings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Configurations you make by entering this command are saved to NVRAM and hardware only after you enter the **commit** command. Enter ACEs in batches and then enter the **commit** command to save all of them in NVRAM and in the hardware.

If you use the **capture** keyword, the ports that capture the traffic and transmit out are specified by entering the **set security acl capture-ports** command.

When you enter the ACL name, follow these naming conventions:

- Maximum of 32 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types
- Case sensitive
- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer

Valid *protocol* keywords include **ncp** (17), **netbios** (20), **rip** (1), **sap** (4), and **spx** (5).

The *src\_net* and *dest\_net* variables are eight-digit hexadecimal numbers that uniquely identify network cable segments. When you specify the *src\_net* or *dest\_net*, use the following guidelines:

- It can be a number in the range 0 to FFFFFFFF. A network number of -1 or **any** matches all networks.
- You do not need to specify leading zeros in the network number. For example, for the network number 000000AA, you can enter AA.

The *.dest\_node* is a 48-bit value represented by a dotted triplet of 4-digit hexadecimal numbers (xxxx.xxxx.xxxx).

The *dest\_net\_mask* is an eight-digit hexadecimal mask. Place ones in the bit positions you want to mask. The mask must be immediately followed by a period, which must in turn be immediately followed by the destination-node-mask. You can enter this value only when *dest\_node* is specified.

The *dest\_node\_mask* is a 48-bit value represented as a dotted triplet of 4-digit hexadecimal numbers (xxxx.xxxx.xxxx). Place ones in the bit positions you want to mask. You can enter this value only when *dest\_node* is specified.

The *dest\_net\_mask* is an eight-digit hexadecimal number that uniquely identifies the network cable segment. It can be a number in the range 0 to FFFFFFFF. A network number of -1 or **any** matches all networks. You do not need to specify leading zeros in the network number. For example, for the network number 000000AA, you can enter AA. Following are *dest\_net\_mask* examples:

- 123A
- 123A.1.2.3
- 123A.1.2.3 ffff.ffff.ffff
- 1.2.3.4 ffff.ffff.ffff.ffff

Use the **show security acl** command to display the list.

## Examples

This example shows how to block traffic from a specified source IPX address:

```
Console> (enable) set security acl ipx IPXACL1 deny 1.a
IPXACL1 editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

This example shows how to deny traffic from hosts in specific subnet (10.1.2.0/8):

```
Console> (enable) set security acl ipx SERVER deny ip 10.1.2.0 0.0.0.255 host 10.1.1.100
IPXACL1 editbuffer modified. Use 'commit' command to apply changes.
Console> (enable)
```

■ set security acl ipx

---

**Related Commands**

**clear security acl**  
**clear security acl capture-ports**  
**clear security acl map**  
**commit**  
**set security acl map**  
**set security acl capture-ports**  
**show security acl**  
**show security acl capture-ports**

# set security acl log

Use the **set security acl log** command to configure the security ACL log table.

```
set security acl log maxflow max_number
```

```
set security acl log ratelimit pps
```

Syntax Description	maxflow <i>max_number</i>	Specifies the maximum flow pattern number in packets per second; valid values are from 256 to 2048.
	<b>ratelimit</b> <i>pps</i>	Specifies the redirect rate in packets per second; valid values are from 500 to 5000.

**Defaults** The default *max\_number* is 500 packets per second and the default *ratelimit* is 2500 packets per second.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The command is supported on systems configured with Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

The **set security acl log maxflow** command tries to allocate a new log table based on the maximum flow pattern number to store logged packet information. If successful, the new buffer replaces the old one and all flows in the old table are cleared. If either memory is not enough or the maximum number is over the limit, an error message is displayed and the command is dropped.

The **set security acl log ratelimit** command tries to set the redirect rate in packets per second. If the configuration is over the range, the command is discarded and the range is displayed on the console.

**Examples** This example shows how to set the maximum flow:

```
Console> (enable) set security acl log maxflow 322
Log table size set to 322 flow entries.
Console> (enable)
```

This example shows how to set the rate limit:

```
Console> (enable) set security acl log ratelimit 3444
Max logging eligible packet rate set to 3444pps.
Console> (enable)
```

**Related Commands**

- [clear security acl log flow](#)
- [set security acl log](#)
- [show security acl log](#)

# set security acl mac

Use the **set security acl mac** command to create a new entry in a non-IP or non-IPX protocol VACL and to append the new entry at the end of the VACL.

```
set security acl mac {acl_name} {permit | deny} {src_mac_addr_spec}
  {dest_mac_addr_spec} [ether-type] [capture] [before editbuffer_index |
  modify editbuffer_index]
```

Syntax Description		
<i>acl_name</i>		Unique name that identifies the list to which the entry belongs.
<b>permit</b>		Allows traffic from the specified source MAC address.
<b>deny</b>		Blocks traffic from the specified source MAC address.
<i>src_mac_addr_spec</i>		Source MAC address and mask in the form <i>source_mac_address source_mac_address_mask</i> .
<i>dest_mac_addr_spec</i>		Destination MAC address and mask.
<i>ether-type</i>		(Optional) Number or name that matches the ethertype for Ethernet-encapsulated packets; valid values are <b>0x0600</b> , <b>0x0601</b> , <b>0x0BAD</b> , <b>0x0BAF</b> , <b>0x6000-0x6009</b> , <b>0x8038-0x8042</b> , <b>0x809b</b> , and <b>0x80f3</b> . See the “Usage Guidelines” section for a list of valid names.
<b>capture</b>		(Optional) Specifies packets are switched normally and captured.
<b>before editbuffer_index</b>		(Optional) Inserts the new ACE in front of another ACE.
<b>modify editbuffer_index</b>		(Optional) Replaces an ACE with the new ACE.

**Defaults** There are no default ACLs and no default ACL-VLAN mappings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Configurations you make by entering this command are saved to NVRAM and hardware only after you enter the **commit** command. Enter ACEs in batches and then enter the **commit** command to save all of them in NVRAM and in the hardware.

If you use the **capture** keyword, the ports that capture the traffic and transmit out are specified by entering the **set security acl capture-ports** command.

When you enter the ACL name, follow these naming conventions:

- Maximum of 32 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types
- Case sensitive

- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer

The *src\_mac\_addr\_spec* is a 48-bit source MAC address and mask and entered in the form of *source\_mac\_address source\_mac\_address\_mask* (for example, 08-11-22-33-44-55 ff-ff-ff-ff-ff-ff). Place ones in the bit positions you want to mask. When you specify the *src\_mac\_addr\_spec*, follow these guidelines:

- The *source\_mask* is required; 0 indicates a care bit, 1 indicates a don't-care bit.
- Use a 32-bit quantity in four-part dotted-decimal format.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 255.255.255.255.
- Use **host** source as an abbreviation for a *source* and *source-wildcard* of source 0.0.0.0.

The *dest\_mac\_spec* is a 48-bit destination MAC address and mask and entered in the form of *dest\_mac\_address dest\_mac\_address\_mask* (for example, 08-00-00-00-02-00/ff-ff-ff-00-00-00). Place ones in the bit positions you want to mask. The destination mask is mandatory. When you specify the *dest\_mac\_spec*, use the following guidelines:

- Use a 48-bit quantity in 6-part dotted-hexadecimal format for a source address and mask.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0-0-0-0-0-0-0 ff-ff-ff-ff-ff-ff.
- Use **host** source as an abbreviation for a *destination* and *destination-wildcard* of destination 0-0-0-0-0-0.

Valid names for ethertypes (and corresponding numbers) are Ethertalk (0x809B), AARP (0x8053), dec-mop-dump (0x6001), dec-mop-remote-console (0x6002), dec-phase-iv (0x6003), dec-lat (0x6004), dec-diagnostic-protocol (0x6005), dec-lavc-sca (0x6007), dec-amber (0x6008), dec-mumps (0x6009), dec-lanbridge (0x8038), dec-dsm (0x8039), dec-netbios (0x8040), dec-msdos (0x8041), banyan-vines-echo (0x0baf), xerox-ns-idp (0x0600), and xerox-address-translation (0x0601).

Use the **show security acl** command to display the list.

### Examples

This example shows how to block traffic to an IP address:

```
Console> (enable) set security acl mac MACACL1 deny 01-02-02-03-04-05
MACACL1 editbuffer modified. User 'commit' command to apply changes.
Console> (enable)
```

### Related Commands

**clear security acl**  
**clear security acl capture-ports**  
**clear security acl map**  
**commit**  
**set security acl map**  
**set security acl capture-ports**  
**show security acl**  
**show security acl capture-ports**

# set security acl map

Use the **set security acl map** command to map an existing VACL to a VLAN.

```
set security acl map acl_name vlan
```

Syntax Description	<i>acl_name</i>	Unique name that identifies the list to which the entry belongs.
	<i>vlan</i>	Number of the VLAN to be mapped to the VACL; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** There are no default ACLs and no default ACL-VLAN mappings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Configurations you make by entering this command are saved in NVRAM. This command *does not* require that you enter the **commit** command. Each VLAN can be mapped to only one ACL of each type (IP, IPX, and MAC). An ACL can be mapped to a VLAN only after you have committed the ACL.

When you enter the ACL name, follow these naming conventions:

- Maximum of 32 characters long and may include a-z, A-Z, 0-9, the dash character (-), the underscore character (\_), and the period character (.)
- Must start with an alpha character and must be unique across all ACLs of all types
- Case sensitive
- Cannot be a number
- Must not be a keyword; keywords to avoid are all, default-action, map, help, and editbuffer



**Caution**

Use the **copy** command to save the ACL configuration to Flash memory.

**Examples**

This example shows how to map an existing VACL to a VLAN:

```
Console> (enable) set security acl map IPACL1 1
ACL IPACL1 mapped to vlan 1
Console> (enable)
```

This example shows the output if you try to map an ACL that has not been committed:

```
Console> (enable) set security acl map IPACL1 1
Commit ACL IPACL1 before mapping.
Console> (enable)
```

This example shows the output if you try to map an ACL that is already mapped to a VLAN for the ACL type (IP, IPX, or MAC):

```
Console> (enable) set security acl map IPACL2 1
Mapping for this type already exists for this VLAN.
Console> (enable)
```

---

**Related Commands**

[clear security acl](#)  
[clear security acl map](#)  
[commit](#)  
[show security acl](#)

# set snmp

Use the **set snmp** command to enable or disable the processing of SNMP requests to the switch and SNMP traps from the switch.

**set snmp { enable | disable }**

## Syntax Description

<b>enable</b>	Enables SNMP processing.
<b>disable</b>	Deactivates SNMP processing.

## Defaults

By default, SNMP processing is enabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

When SNMP processing is enabled, the switch processes SNMP inquiries and sends out SMNP traps if there are no conflicts with other SNMP configurations. When SNMP processing is disabled, the switch ignores SNMP requests and no SNMP traps are sent out regardless of other SNMP configurations.

Whether SNMP processing is enabled or disabled, you can change other SNMP configurations, and RMON-related processes are not affected.

The SNMP ifIndex persistence feature is always enabled. With the ifIndex persistence feature, the ifIndex value of the port and VLAN is always retained and used after the following occurrences:

- Switch reboot
- High-availability switchover
- Software upgrade
- Module reset
- Module removal and insertion of the same type of module

For Fast EtherChannel and Gigabit EtherChannel interfaces, the ifIndex value is only retained and used after a high-availability switchover.

## Examples

This example shows how to enable SNMP processing:

```
Console> (enable) set snmp enable
SNMP enabled
Console> (enable)
```

This example shows how to disable SNMP processing:

```
Console> (enable) set snmp disable
SNMP disabled
Console> (enable)
```

Command Types [show snmp](#)

## set snmp access

Use the **set snmp access** command to define the access rights of an SNMP group.

```
set snmp access [-hex] {groupname} {security-model {v1 | v2c}}
  [read [-hex] {readview}] [write [-hex] {writeview}] [notify [-hex] {notifyview}]
  [volatile | nonvolatile]
```

```
set snmp access [-hex] {groupname} {security-model v3 {noauthentication |
  authentication | privacy}} [read [-hex] {readview}] [write [-hex] {writeview}]
  [notify [-hex] {notifyview}] [context [-hex] contextname [exact | prefix]] [volatile |
  nonvolatile]
```

Syntax Description	
<b>-hex</b>	(Optional) Displays the <i>groupname</i> , <i>readview</i> , <i>writeview</i> , <i>notifyview</i> , and <i>contextname</i> in a hexadecimal format.
<i>groupname</i>	Name of the SNMP group.
<b>security-model v1   v2c</b>	Specifies security-model v1 or v2c.
<b>read</b> <i>readview</i>	(Optional) Specifies the name of the view that allows you to see the MIB objects.
<b>write</b> <i>writeview</i>	(Optional) Specifies the name of the view that allows you to configure the contents of the agent.
<b>notify</b> <i>notifyview</i>	(Optional) Specifies the name of the view that allows you to send a trap about MIB objects.
<b>v3</b>	Specifies security model v3.
<b>noauthentication</b>	Specifies security model is not set to use authentication protocol.
<b>authentication</b>	Specifies the type of authentication protocol.
<b>privacy</b>	Specifies the messages sent on behalf of the user are protected from disclosure.
<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and the content is deleted if the device is turned off.
<b>nonvolatile</b>	(Optional) Specifies that the storage type is defined as persistent memory and the content remains after the device is turned off and on again.
<b>context</b> <i>contextname</i>	(Optional) Specifies the name of the context string and the way to match the context string; maximum of 32 characters.
<b>exact</b>	(Optional) Specifies that an exact match between the <i>contextname</i> and the value of <code>vacmAccessContextPrefix</code> is required to select this entry.
<b>prefix</b>	(Optional) Specifies that only a match between <code>vacmAccessContextPrefix</code> and the starting portion of <i>contextname</i> is required to select this entry.

### Defaults

The defaults are as follows:

- storage type is **nonvolatile**.
- **read** *readview* is Internet OID space.

- **write** *writeview* is NULL OID.
- **notify** *notifyview* is NULL OID.
- **context** *contextname* is a NULL string.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** If you use special characters for *groupname*, *readview*, *writeview*, and *notifyview* (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

*readview* is assumed to be every object belonging to the Internet (1.3.6.1) OID space; you can use the *read* option to override this state.

For *writeview*, you must also configure write access.

For *notifyview*, if a view is specified, any notifications in that view are sent to all users associated with the group (an SNMP server host configuration must exist for the user).

For *contextname*, the string is treated as either a full context name or the prefix of a context name, depending on whether you enter the **exact** or **prefix** keyword. If you enter the **prefix** keyword, this allows you to enter a simple form of wildcarding. For example, if you enter a *contextname* of *vlan*, *vlan-1* and *vlan-100* will be selected.

If you do not enter a context name, a NULL context string is used.

---

**Examples** This example shows how to set the SNMP access rights for a group:

```
Console> (enable) set snmp access cisco-group security-model v3 authentication
SNMP access group was set to cisco-group version v3 level authentication, readview
internet, nonvolatile.
Console> (enable)
```

---

**Related Commands**

- [clear snmp access](#)
- [show snmp access](#)
- [show snmp context](#)

# set snmp community

Use the **set snmp community** command to set SNMP communities and associated access types.

```
set snmp community { read-only | read-write | read-write-all } [community_string]
```

<b>Syntax Description</b>	<b>read-only</b>	Assigns read-only access to the specified SNMP community.
	<b>read-write</b>	Assigns read-write access to the specified SNMP community.
	<b>read-write-all</b>	Assigns read-write access to the specified SNMP community.
	<i>community_string</i>	(Optional) Name of the SNMP community.

<b>Defaults</b>	The default is the following communities and access types are defined: <ul style="list-style-type: none"> <li>• public—<b>read-only</b></li> <li>• private—<b>read-write</b></li> <li>• secret—<b>read-write-all</b></li> </ul>
-----------------	---

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	<p>This command is not supported by the NAM.</p> <p>There are three configurable SNMP communities, one for each access type. If you do not specify the community string, the community string configured for that access type is cleared.</p> <p>The <i>community_string</i> variable cannot contain the @ symbol.</p> <p>To support the access types, you also need to configure four MIB tables: vacmContextTable, vacmSecurityToGroupTable, vacmAccessTable, and vacmViewTreeFamilyTable. Use the <b>clear config snmp</b> command to reset these tables to the default values.</p>
-------------------------	--

<b>Examples</b>	This example shows how to set read-write access to the SNMP community called yappledapple:
-----------------	--

```
Console> (enable) set snmp community read-write yappledapple
SNMP read-write community string set to yappledapple.
Console> (enable)
```

This example shows how to clear the community string defined for read-only access:

```
Console> (enable) set snmp community read-only
SNMP read-only community string cleared.
Console> (enable)
```

---

**Related Commands**

[clear config](#)  
[clear snmp community](#)  
[show snmp](#)  
[show snmp community](#)

# set snmp extendedrmon netflow

Use the **set snmp extendedrmon netflow** command to enable or disable the SNMP extended RMON support for the NAM module.

```
set snmp extendedrmon netflow {enable | disable} {mod}
```

Syntax Description	enable	Enables the extended RMON support.
	disable	Disables the extended RMON support.
	mod	Module number of the extended RMON NAM.

**Defaults** The default is SNMP-extended RMON NetFlow is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to enable SNMP-extended RMON NetFlow support:

```
Console> (enable) set snmp extendedrmon netflow enable 2
Snm extended RMON netflow enabled
Console> (enable)
```

This example shows how to disable SNMP-extended RMON NetFlow support:

```
Console> (enable) set snmp extendedrmon netflow disable 2
Snm extended RMON netflow disabled
Console> (enable)
```

This example shows the response when the SNMP-extended RMON NetFlow feature is not supported:

```
Console> (enable) set snmp extendedrmon enable 4
NAM card is not installed.
Console> (enable)
```

**Related Commands** [set snmp rmon](#)  
[show snmp](#)

# set snmp group

Use the **set snmp group** command to establish the relationship between an SNMP group and a user with a specific security model.

```
set snmp group [-hex] {groupname} user [-hex] {username}
{security-model {v1 | v2c | v3}} [volatile | nonvolatile]
```

Syntax Description		
<b>-hex</b>	(Optional) Displays the <i>groupname</i> and <i>username</i> in a hexadecimal format.	
<i>groupname</i>	Name of the SNMP group that defines an access control; the maximum length is 32 bytes.	
<b>user</b>	Specifies the SNMP group username.	
<i>username</i>	Name of the SNMP user that belongs to the SNMP group; the maximum length is 32 bytes.	
<b>security-model</b> <b>v1   v2c   v3</b>	Specifies security-model v1, v2c, or v3.	
<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and the content is deleted if the device is turned off.	
<b>nonvolatile</b>	(Optional) Specifies that the storage type is defined as persistent memory and the content remains after the device is turned off and on again.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for *groupname* or *username* (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

**Examples** This example shows how to set the SNMP group:

```
Console> (enable) set snmp group cisco-group user joe security-model v3
SNMP group was set to cisco-group user joe and version v3,nonvolatile.
Console> (enable)
```

**Related Commands**

- [clear snmp group](#)
- [show snmp group](#)

# set snmp notify

Use the **set snmp notify** command to set the notifyname entry in the snmpNotifyTable and the notifytag entry in the snmpTargetAddrTable.

```
set snmp notify [-hex] {notifyname} tag [-hex] {notifytag}
               [trap | inform] [volatile | nonvolatile]
```

Syntax Description	
<b>-hex</b>	(Optional) Displays the notifyname and notifytag in a hexadecimal format.
<i>notifyname</i>	Identifier to index the snmpNotifyTable.
<b>tag</b>	Specifies the tag name in the taglist.
<i>notifytag</i>	Name of entries in the snmpTargetAddrTable.
<b>trap</b>	(Optional) Specifies all messages that contain snmpv2-Trap PDUs.
<b>inform</b>	(Optional) Specifies all messages that contain InfoRequest PDUs.
<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and the content is deleted if the device is turned off.
<b>nonvolatile</b>	(Optional) Specifies that the storage type is defined as persistent memory and the content remains after the device is turned off and on again.

**Defaults** The defaults are storage type is **volatile** and notify type is **trap**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you use special characters for the *notifyname* and *notifytag* (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

**Examples** This example shows how to set the SNMP notify for a specific notifyname:

```
Console> (enable) set snmp notify hello tag world inform
SNMP notify name was set to hello with tag world notifyType inform, and storageType
nonvolatile.
Console> (enable)
```

**Related Commands** [clear snmp notify](#)  
[show snmp notify](#)

# set snmp rmon

Use the **set snmp rmon** command to enable or disable SNMP RMON support.

```
set snmp rmon { enable | disable }
```

## Syntax Description

<b>enable</b>	Activates SNMP RMON support.
<b>disable</b>	Deactivates SNMP RMON support.

## Defaults

The default is RMON support is disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command is not supported by the NAM.

RMON statistics are collected on a segment basis.

The RMON feature deinstalls all of the domains for all of the interfaces on an Ethernet module that has been removed from the system.

When you enable RMON, the supported RMON groups for Ethernet ports are Statistics, History, Alarms, and Events as specified in RFC 1757.

Use of this command requires a separate software license.

## Examples

This example shows how to enable RMON support:

```
Console> (enable) set snmp rmon enable
SNMP RMON support enabled.
Console> (enable)
```

This example shows how to disable RMON support:

```
Console> (enable) set snmp rmon disable
SNMP RMON support disabled.
Console> (enable)
```

## Related Commands

[show port counters](#)

# set snmp rmonmemory

Use the **set snmp rmonmemory** command to set the memory usage limit in percentage.

**set snmp rmonmemory** *percentage*

<b>Syntax Description</b>	<i>percentage</i> Memory usage limit; see the “Usage Guidelines” section for additional information.
---------------------------	--

<b>Defaults</b>	The default is 85 percent.
-----------------	----------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	<p>This command is not supported by the NAM.</p> <p>When using this command, setting the percentage value to 85 does not mean that RMON can use 85 percent of memory, it means that you cannot create new RMON entries or restore entries from the NVRAM if the memory usage exceeds 85 percent.</p> <p>If you expect the device to run other sessions such as Telnet, a lower value should be set to the memory limit. Otherwise, the new Telnet sessions may fail because the available memory is not enough.</p>
-------------------------	---

<b>Examples</b>	This example shows how to set the memory usage limit:
-----------------	---

```
Console> (enable) set snmp rmonmemory 90
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show snmp rmonmemory</a>
-------------------------	--------------------------------------

## set snmp targetaddr

Use the **set snmp targetaddr** command to configure the SNMP target address entries in the snmpTargetAddressTable.

```
set snmp targetaddr [-hex] {addrname} param [-hex] {paramsname} {ipaddr}
[udpport {port}] [timeout {value}] [retries {value}] [volatile | nonvolatile]
[taglist {[-hex] tag}] [[-hex] tag tagvalue]
```

Syntax Description		
<b>-hex</b>	(Optional) Displays <i>addrname</i> , <i>paramsname</i> , <i>tagvalue</i> , and <i>tag</i> in a hexadecimal format.	
<i>addrname</i>	Unique identifier to index the snmpTargetAddrTable; the maximum length is 32 bytes.	
<b>param</b>	Specifies an entry in the snmpTargetParamsTable that provides parameters to be used when generating a message to the target; the maximum length is 32 bytes.	
<i>paramsname</i>	Entry in the snmpTargetParamsTable; the maximum length is 32 bytes.	
<i>ipaddr</i>	IP address of the target.	
<b>udpport</b> <i>port</i>	(Optional) Specifies which UDP port of the target host to use.	
<b>timeout</b> <i>value</i>	(Optional) Specifies the number of timeouts.	
<b>retries</b> <i>value</i>	(Optional) Specifies the number of retries.	
<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and the content is deleted if the device is turned off.	
<b>nonvolatile</b>	(Optional) Specifies that the storage type is defined as persistent memory and the content remains after the device is turned off and on again.	
<b>taglist</b> <i>tag</i>	(Optional) Specifies a tag name in the taglist.	
<b>tag</b> <i>tagvalue</i>	(Optional) Specifies the tag name.	

### Defaults

The defaults are as follows:

- storage type is **nonvolatile**.
- **udpport** is 162.
- **timeout** is 1500.
- **retries** is 3.
- **taglist** is NULL.

### Command Types

Switch command.

### Command Modes

Privileged.

---

**Usage Guidelines**

If you use special characters for the *addrname*, *paramsname*, *tag*, and *tagvalue* (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

The maximum *tagvalue* and *taglist* length is 255 bytes.

---

**Examples**

This example shows how to set the target address in the snmpTargetAddressTable:

```
Console> (enable) set snmp targetaddr foo param bar 10.1.2.4 udp 160 timeout 10 retries 3
taglist tag1 tag2 tag3
SNMP targetaddr name was set to foo with param bar ipAddr 10.1.2.4, udpport 160, timeout
10, retries 3, storageType nonvolatile with taglist tag1 tag2 tag3.
Console> (enable)
```

---

**Related Commands**

[clear snmp targetaddr](#)  
[show snmp targetaddr](#)

## set snmp targetparams

Use the **set snmp targetparams** command to configure the SNMP parameters used in the snmpTargetParamsTable when generating a message to a target.

```
set snmp targetparams [-hex] {paramsname} user [-hex] {username} {security-model {v1 | v2c}} {message-processing {v1 | v2c | v3}} [volatile | nonvolatile]
```

```
set snmp targetparams [-hex] {paramsname} user [-hex] {username} {security-model v3} {message-processing v3 {noauthentication | authentication | privacy}} [volatile | nonvolatile]
```

Syntax Description		
<b>-hex</b>	(Optional) Displays the <i>paramsname</i> and <i>username</i> in a hexadecimal format.	
<i>paramsname</i>	Name of the parameter in the snmpTargetParamsTable; the maximum length is 32 bytes.	
<b>user</b>	Specifies the SNMP group username.	
<i>username</i>	Name of the SNMP user that belongs to the SNMP group; the maximum length is 32 bytes.	
<b>security-model v1   v2c</b>	Specifies security-model v1 or v2c.	
<b>message-processing v1   v2c   v3</b>	Specifies the version number used by the message processing model.	
<b>security-model v3</b>	Specifies security-model v3.	
<b>message-processing v3</b>	Specifies v3 is used by the message-processing model.	
<b>noauthentication</b>	Specifies the security model is not set to use the authentication protocol.	
<b>authentication</b>	Specifies the type of authentication protocol.	
<b>privacy</b>	Specifies the messages sent on behalf of the user are protected from disclosure.	
<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and the content is deleted if the device is turned off.	
<b>nonvolatile</b>	(Optional) Specifies that the storage type is defined as persistent memory and the content remains after the device is turned off and on again.	

**Defaults** The default storage type is **volatile**.

**Command Types** Switch command.

**Command Modes** Privileged.

---

**Usage Guidelines**

If you use special characters for the *paramsname* and *username* (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

---

**Examples**

This example shows how to set target parameters in the snmpTargetParamsTable:

```
Console> (enable) set snmp targetparams bar user joe security-model v3 message-processing
v3 authentication
SNMP target params was set to bar v3 authentication, message-processing v3, user joe
nonvolatile.
Console> (enable)
```

---

**Related Commands**

[clear snmp targetparams](#)  
[show snmp targetparams](#)

## set snmp trap

Use the **set snmp trap** command to enable or disable the different SNMP traps on the system or to add an entry into the SNMP authentication trap receiver table.

```
set snmp trap {enable | disable} [all | auth | bridge | chassis | config | entity | entityfru |
envfan | envpower | envshutdown | ippermit | module | stpx | syslog | system | vmps | vtp]

set snmp trap rcvr_addr rcvr_community [port rcvr_port] [owner rcvr_owner] [index rcvr_index]
```

### Syntax Description

<b>enable</b>	Enables SNMP traps.
<b>disable</b>	Disables SNMP traps.
<b>all</b>	(Optional) Specifies all trap types and all port traps. See the “Usage Guidelines” section before using this option.
<b>auth</b>	(Optional) Specifies the authenticationFailure trap from RFC 1157.
<b>bridge</b>	(Optional) Specifies the newRoot and topologyChange traps from RFC 1493 (the BRIDGE-MIB).
<b>chassis</b>	(Optional) Specifies the chassisAlarmOn and chassisAlarmOff traps from the CISCO-STACK-MIB.
<b>config</b>	(Optional) Specifies the sysConfigChange trap from the CISCO-STACK-MIB.
<b>entity</b>	(Optional) Specifies the entityMIB trap from the ENTITY-MIB.
<b>entityfru</b>	(Optional) Specifies the entity field replaceable unit (FRU).
<b>envfan</b>	(Optional) Specifies the environmental fan.
<b>envpower</b>	(Optional) Specifies the environmental power.
<b>envshutdown</b>	(Optional) Specifies the environmental shutdown.
<b>ippermit</b>	(Optional) Specifies the IP Permit Denied access from the CISCO-STACK-MIB.
<b>module</b>	(Optional) Specifies the moduleUp and moduleDown traps from the CISCO-STACK-MIB.
<b>stpx</b>	(Optional) Specifies the STPX trap.
<b>syslog</b>	(Optional) Specifies the syslog notification traps.
<b>system</b>	(Optional) Specifies the system.
<b>vmps</b>	(Optional) Specifies the vmVmpsChange trap from the CISCO-VLAN-MEMBERSHIP-MIB.
<b>vtp</b>	(Optional) Specifies the VTP from the CISCO-VTP-MIB.
<i>rcvr_addr</i>	IP address or IP alias of the system to receive SNMP traps.
<i>rcvr_community</i>	Community string to use when sending authentication traps.
<b>port</b> <i>rcvr_port</i>	(Optional) Specifies the UDP port and port number; valid values are from 0 to 65535.
<b>owner</b> <i>rcvr_owner</i>	(Optional) Specifies the user who configured the settings for the SNMP trap; the valid value is a character string from 1 to 21 characters in length.
<b>index</b> <i>rcvr_index</i>	(Optional) Specifies index entries with the same <i>rcvr_addr</i> ; valid values are from 0 to 65535.

<b>Defaults</b>	The default is SNMP traps are disabled.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	<p>This command is not supported by the NAM.</p> <p>An IP permit trap is sent when unauthorized access based on the IP permit list is attempted.</p> <p>Use the <b>show snmp</b> command to verify the appropriate traps were configured.</p> <p>To use this command, you must configure all notification tables: snmpTargetAddrTable, snmpTargetParamsTable, and snmpNotifyTable.</p> <p>To enable or disable all trap types and all port traps, use the <b>all</b> option.</p> <p>To enable or disable a single port or a range of ports, use the <b>set port trap</b> command.</p> <p>The trap configuration is saved in NVRAM and in the configuration file.</p>

**Examples**

This example shows how to enable SNMP chassis traps:

```
Console> (enable) set snmp trap enable chassis
SNMP chassis alarm traps enabled.
Console> (enable)
```

This example shows how to enable all traps:

```
Console> (enable) set snmp trap enable
All SNMP traps enabled.
Console> (enable)
```

This example shows how to disable SNMP chassis traps:

```
Console> (enable) set snmp trap disable chassis
SNMP chassis alarm traps disabled.
Console> (enable)
```

This example shows how to add an entry in the SNMP trap receiver table:

```
Console> (enable) set snmp trap 192.122.173.42 public
SNMP trap receiver added.
Console> (enable)
```

**Related Commands**

**clear snmp trap**  
**set port trap**  
**show snmp**  
**test snmp trap**

# set snmp user

Use the **set snmp user** command to configure a new SNMP user.

```
set snmp user [-hex] {username} {remote {engineid}} [authentication {md5 | sha |
  authpassword}] [privacy {privpassword}] [volatile | nonvolatile]
```

Syntax Description		
<b>-hex</b>	(Optional) Displays <i>username</i> in a hexadecimal format.	
<i>username</i>	Name of the SNMP user.	
<b>remote</b> <i>engineid</i>	Specifies the remote SNMP engine ID.	
<b>authentication</b>	(Optional) Specifies the authentication protocol.	
<b>md5</b>	Specifies HMAC-MD5-96 authentication protocol.	
<b>sha</b>	Specifies HMAC-SHA-96 authentication protocol.	
<i>authpassword</i>	Password for authentication.	
<b>privacy</b> <i>privpassword</i>	(Optional) Enables the host to encrypt the contents of the message sent to or from the agent; the maximum length is 32 bytes.	
<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and the content is deleted if the device is turned off.	
<b>nonvolatile</b>	(Optional) Specifies that the storage type is defined as persistent memory and the content remains after the device is turned off and on again.	

## Defaults

The default storage type is **volatile**. If you do not specify **authentication**, the security level default will be **noauthentication**. If you do not specify **privacy**, the default will be no privacy.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

If you use special characters for *username* (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

The *authpassword* and *privpassword* values must be hexadecimal characters without delimiters in between.

## Examples

This example shows how to set a specific username:

```
Console> (enable) set snmp user joe
Snmp user was set to joe authProt no-auth privProt no-priv with engineid 00:00.
Console> (enable)
```

This example shows how to set a specific username, authentication, and password for authentication:

```
Console> (enable) set snmp user John authentication md5 arizona2  
Snmp user was set to John authProt md5 authPasswd arizona2. privProt no-priv wi.  
Console> (enable)
```

---

**Related Commands**

[clear snmp user](#)  
[show snmp user](#)

# set snmp view

Use the **set snmp view** command to configure the SNMP MIB view.

```
set snmp view [-hex]{viewname}{subtree}[mask] [included | excluded] [volatile | nonvolatile]
```

Syntax Description	
<b>-hex</b>	(Optional) Displays the <i>viewname</i> value in a hexadecimal format.
<i>viewname</i>	Name of a MIB view.
<i>subtree</i>	MIB subtree.
<b>mask</b>	(Optional) Specifies that the bit mask is used with the subtree. A bit mask can be all ones, all zeros, or any combination; the maximum length is 3 bytes.
<b>included   excluded</b>	(Optional) Specifies that the MIB subtree is included or excluded.
<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and the content is deleted if the device is turned off.
<b>nonvolatile</b>	(Optional) Specifies that the storage type is defined as persistent memory and the content remains after the device is turned off and on again.

## Defaults

The defaults are as follows:

- Storage type is **volatile**.
- Bit mask is NULL.
- MIB subtree is included.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

If you use special characters for *viewname* (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

A MIB subtree with a mask defines a view subtree. The MIB subtree can be in object identifier (OID) format or a text name mapped to a valid OID.

## Examples

This example shows how to assign a subtree to the view public:

```
Console> (enable) set snmp view public 1.3.6.1 included
Snmp view name was set to public with subtree 1.3.6.1 included, nonvolatile.
Control> (enable)
```

This example shows the response when the subtree is incorrect:

```
Console> (enable) set snmp view stats statistics excluded
Statistics is not a valid subtree OID
Control> (enable)
```

---

**Related Commands**

[clear snmp view](#)  
[show snmp view](#)

# set span

Use the **set span** command to enable or disable SPAN and to set up the switch port and VLAN analyzer for multiple SPAN sessions.

```
set span disable [dest_mod/dest_port | all]
```

```
set span {src_mod/src_ports | src_vlans | sc0} {dest_mod/dest_port} [rx | tx | both] [inpkts  
  {enable | disable}] [learning {enable | disable}] [multicast {enable | disable}]  
  [filter vlans...] [create]
```

Syntax Description	
<b>disable</b>	Disables SPAN.
<i>dest_mod</i>	(Optional) Monitoring module (SPAN destination).
<i>dest_port</i>	(Optional) Monitoring port (SPAN destination).
<b>all</b>	(Optional) Disables all SPAN sessions.
<i>src_mod</i>	Monitored module (SPAN source).
<i>src_ports</i>	Monitored ports (SPAN source).
<i>src_vlans</i>	Monitored VLANs (SPAN source).
<b>sc0</b>	Specifies the inband port is a valid source.
<b>rx</b>	(Optional) Specifies that information received at the source (ingress SPAN) is monitored.
<b>tx</b>	(Optional) Specifies that information transmitted from the source (egress SPAN) is monitored.
<b>both</b>	(Optional) Specifies that information both transmitted from the source (ingress SPAN) and received (egress SPAN) at the source are monitored.
<b>inpkts enable</b>	(Optional) Enables the receiving of normal inbound traffic on the SPAN destination port.
<b>inpkts disable</b>	(Optional) Disables the receiving of normal inbound traffic on the SPAN destination port.
<b>learning enable</b>	(Optional) Enables learning for the SPAN destination port.
<b>learning disable</b>	(Optional) Disables learning for the SPAN destination port.
<b>multicast enable</b>	(Optional) Enables monitoring multicast traffic (egress traffic only).
<b>multicast disable</b>	(Optional) Disables monitoring multicast traffic (egress traffic only).
<b>filter vlans</b>	(Optional) Monitors traffic on selected VLANs on source trunk ports.
<b>create</b>	(Optional) Creates a SPAN port.

**Defaults** The default is SPAN is disabled, no VLAN filtering is enabled, multicast is enabled, input packets are disabled, and learning is enabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

After you enable SPAN, system defaults are used if no parameters were ever set. If you changed parameters, the old parameters are stored in NVRAM, and the new parameters are used.

Use a network analyzer to monitor ports.

If you specify multiple SPAN source ports, the ports can belong to different VLANs.

A maximum of two **rx** or **both** SPAN sessions and four **tx** SPAN sessions can exist simultaneously. If you use a remote SPAN station, the maximum number of **rx** or **both** SPAN sessions is one.

Use the **inpkts** keyword with the **enable** option to allow the SPAN destination port to receive normal incoming traffic in addition to the traffic mirrored from the SPAN source. Use the **disable** option to prevent the SPAN destination port from receiving normal incoming traffic.

You can specify an MSM port as the SPAN source port. However, you cannot specify an MSM port as the SPAN destination port.

When you enable the **inpkts** option, a warning message notifies you that the destination port does not join STP and may cause loops if this option is enabled.

When you configure multiple SPAN sessions, the destination module number/port number must be known to index the particular SPAN session.

If you do not specify the keyword **create** and you have only one session, the session will be overwritten. If a matching destination port exists, the particular session will be overwritten (with or without specifying **create**). If you specify the keyword **create** and there is no matching destination port, the session will be created.

If any VLANs on SPAN source port(s) are blocked by spanning tree, you may see extra packets transmitted on the destination port that were not actually transmitted out of the source port(s). The extra packets seen at the destination port are packets sent through the switch fabric to the source port and then blocked by spanning tree at the source port.

**Examples**

This example shows how to configure SPAN so that both transmit and receive traffic from port 1/1 (the SPAN source) is mirrored on port 2/1 (the SPAN destination):

```
Console> (enable) set span 1/1 2/1
Enabled monitoring of Port 1/1 transmit/receive traffic by Port 2/1
Console> (enable)
```

This example shows how to set VLAN 522 as the SPAN source and port 2/1 as the SPAN destination:

```
Console> (enable) set span 522 2/1
Enabled monitoring of VLAN 522 transmit/receive traffic by Port 2/1
Console> (enable)
```

This example shows how to set VLAN 522 as the SPAN source and port 3/12 as the SPAN destination. Only transmit traffic is monitored. Normal incoming packets on the SPAN destination port are allowed:

```
Console> (enable) set span 522 2/12 tx inpkts enable
SPAN destination port incoming packets enabled.
Enabled monitoring of VLAN 522 transmit traffic by Port 2/12
Console> (enable)
```

This example shows how to set port 3/2 as the SPAN source and port 2/2 as the SPAN destination:

```
Console> (enable) set span 3/2 2/2 tx create
Enabled monitoring of port 3/2 transmit traffic by Port 2/1
Console> (enable)
```

This example shows how to disable SPAN if multiple SPAN sessions are not defined:

```
Console> (enable) set span disable  
This command WILL disable your span session(s).  
Do you want to continue (y/n) [n]?y  
Disabled all sessions  
Console> (enable)
```

This example shows what happens if you try to enter the **set span disable** command (without the destination module number/port number defined) and multiple SPAN sessions are defined:

```
Console> (enable) set span disable  
Multiple active span sessions. Please specify span destination to disable.  
Console> (enable)
```

---

**Related Commands**

[clear config](#)  
[show span](#)

# set spantree backbonefast

Use the **set spantree backbonefast** command to enable or disable the spanning tree BackboneFast Convergence feature.

**set spantree backbonefast {enable | disable}**

Syntax Description	enable	Disables BackboneFast Convergence.
	disable	Enables BackboneFast Convergence.

**Defaults** The default is BackboneFast Convergence is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

- This command is not supported by the NAM.
- This command is not available in Multi-Instance Spanning Tree Protocol (MISTP) mode.
- This command is not available in Multiple Spanning Tree (MST) mode.
- For BackboneFast Convergence to work, you must enable it on all switches in the network.
- When you try to enable BackboneFast and the switch is in MISTP or MISTP-PVST+ mode, this message is displayed:  

```
Cannot enable backbonefast when the spantree mode is MISTP-PVST+.
```

**Examples** This example shows how to enable BackboneFast Convergence:

```
Console> (enable) set spantree backbonefast enable
Backbonefast enabled for all VLANs.
Console> (enable)
```

**Related Commands** [show spantree](#)

# set spantree bpdu-filter

Use the **set spantree bpdu-filter** command to enable or disable BPDU packet filtering on a port.

```
set spantree bpdu-filter mod/port { enable | disable | default }
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>enable</b>	Enables BPDU packet filtering.
<b>disable</b>	Disables BPDU packet filtering.
<b>default</b>	Sets BPDU packet filtering to the global BPDU packet filtering state. See the “Usage Guidelines” section for more information.

**Defaults** The default is BPDU packet filtering is **default**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
 BPDU packet filtering turns off BPDU transmission on ports.  
 If you enter the **default** keyword, the spanning tree port is set to the global BPDU filtering state.  
 To enable or disable BPDU filtering for all ports on the switch, enter the **set spantree global-default bpdu-filter** command.

**Examples** This example shows how to enable BPDU filtering on module 3, port 4:

```
Console> (enable) set spantree bpdu-filter 3/4 enable
Warning: Ports enabled with bpdu filter will not send BPDUs and drop all
received BPDUs. You may cause loops in the bridged network if you misuse
this feature.
Spantree port 3/4 bpdu filter enabled.
Console> (enable)
```

**Related Commands** [set spantree global-default](#)  
[show spantree portfast](#)

## set spantree bpdu-guard

Use the **set spantree bpdu-guard** command to enable or disable spanning tree BPDU guard on a port.

```
set spantree bpdu-guard mod/port {enable | disable | default}
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables the spanning tree BPDU guard.
	<b>disable</b>	Disables the spanning tree BPDU guard.
	<b>default</b>	Sets spanning tree BPDU guard to the global BPDU guard state. See the “Usage Guidelines” section for more information.

**Defaults** The default is BPDU guard is **default**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

You must enable PortFast mode before you can enable BPDU guard for BPDU guard to work correctly.

When you enable BPDU guard, a port is moved into an errdisable state when a BPDU is received on that port. When you disable a BPDU guard, a PortFast-enabled nontrunking port will stay up when it receives BPDUs, which may cause spanning tree loops.

If you enter the **default** keyword, the spanning tree port is set to the global BPDU guard state.

To enable or disable BPDU guard for all ports on the switch, enter the **set spantree global-default bpdu-guard** command.

**Examples** This example shows how to enable BPDU guard on module 3, port 1:

```
Console> (enable) set spantree bpdu-guard 3/1 enable
Spantree port 3/1 bpdu guard enabled.
Console> (enable)
```

**Related Commands** [set spantree global-default](#)  
[show spantree portfast](#)

# set spantree bpdu-skewing

Use the **set spantree bpdu-skewing** command to enable or disable collection of the spanning tree BPDU skewing detection statistics.

**set spantree bpdu-skewing {enable | disable}**

## Syntax Description

<b>enable</b>	Enables BPDU skewing detection statistics collection.
<b>disable</b>	Disables BPDU skewing detection statistics collection.

## Defaults

The default is disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command is not supported by the NAM.

You can use this command to troubleshoot slow network convergence due to skewing. Skewing occurs when spanning tree timers lapse, expected BPDUs are not received, and spanning tree detects topology changes. The difference between the expected result and the BPDUs actually received is a “skew.” The skew causes BPDUs to reflood the network to keep the spanning tree topology database up to date.

## Examples

This example shows how to enable the BPDU skew detection feature:

```
Console> (enable) set spantree bpdu-skewing enable
Spantree bpdu-skewing enabled on this switch.
Console> (enable)
```

This example shows how to disable the BPDU skew detection feature:

```
Console> (enable) set spantree bpdu-skewing disable
Spantree bpdu-skewing disabled on this switch.
Console> (enable)
```

## Related Commands

[show spantree bpdu-skewing](#)

# set spantree channelcost

Use the **set spantree channelcost** command to set the channel path cost and to automatically adjust the channel port costs.

**set spantree channelcost** {*channel\_id* | **all**} *cost*

Syntax Description		
	<i>channel_id</i>	Channel identification number.
	<b>all</b>	Configures all channels.
	<i>cost</i>	Channel port costs.

**Defaults** The port cost is updated automatically based on the current port costs of the channeling ports.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can use this command when your switch is in Link Aggregation Control Protocol (LACP) channel mode or in PAGP channel mode.

For differences between PAGP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

**Examples** This example shows how to set the channel 768 path cost to 12.

```
Console> (enable) set spantree channelcost 768 12
Port(s) 1/1-2 port path cost are updated to 19.
Channel 768 cost is set to 12.
Warning: channel cost may not be applicable if channel is broken.
Console> (enable)
```

This example shows how to set all channel path costs to 15:

```
Console> (enable) set spantree channelcost all 15
Port(s) 1/1-2 port path cost are updated to 24.
Channel 768 cost is set to 15.
Port(s) 4/3-4 cost is set to 15.
channel 769 cost is set to 15.
Port(s) 4/7-8 cost is set to 15.
channel 770 cost is set to 15.
Warning: channel cost may not be applicable if channel is broken.
Console> (enable)
```

---

**Related Commands**

**clear lacp-channel statistics**  
**set channelprotocol**  
**set lacp-channel system-priority**  
**set port lacp-channel**  
**set spantree channelcost**  
**set spantree channelvlancost**  
**show lacp-channel**  
**show port lacp-channel**

# set spantree channelvlancost

Use the **set spantree channelvlancost** command to set the channel VLAN path cost and adjust the port VLAN costs of the ports that belong to the channel.

**set spantree channelvlancost** *channel\_id* *cost*

<b>Syntax Description</b>	<i>channel_id</i>	Number of the channel identification.
	<i>cost</i>	Port costs of the ports in the channel.

**Defaults** The command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You must set the channel VLAN cost one channel at a time.

You can use this command when your system is in LACP channel mode or PAgP channel mode.

For differences between PAgP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

**Examples** This example shows how to set the VLAN cost to 10 for channel 768:

```
Console> (enable) set spantree channelvlancost 768 10
Port(s) 1/1-2 vlan cost are updated to 24.
Channel 768 vlancost is set to 10.
Console> (enable)
```

**Related Commands**

- [clear lacp-channel statistics](#)
- [set channelprotocol](#)
- [set lacp-channel system-priority](#)
- [set port lacp-channel](#)
- [set spantree channelcost](#)
- [show lacp-channel](#)
- [show port lacp-channel](#)

# set spantree defaultcostmode

Use the **set spantree defaultcostmode** command to specify the spanning tree default port cost mode.

```
set spantree defaultcostmode {short | long}
```

Syntax Description	short	long
	Sets the default port cost for port speeds slower than 10 gigabits.	Sets the default port cost mode port speeds of 10 gigabits and faster.

**Defaults** The default is short.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **set spantree defaultcostmode long** command is available in PVST+ mode only. If you enter this command in MISTP or MISTP-PVST+ mode, this message is displayed:

```
In MISTP or MISTP-PVST+ mode, default portcost and portinstancecost always
use long format default values.
```

All switches in a network must have the same default. If any switch in the network supports port speeds of 10 gigabits and greater, the default cost mode must be set to **long** on all the switches in the network.

For port speeds of 1 gigabits and greater, the default port cost should be set to **long**. For port speeds less than 10 gigabits, the default port cost can be set to **short**.

The default path cost is based on port speed; see [Table 2-21](#) and [Table 2-22](#) for default settings.

**Table 2-21 Default Port Cost—Short Mode**

Port Speed	Default Port Cost
4 Mb	250
10 Mb	100
16 Mb	62
100 Mb	19
155 Mb	14
1 Gb	4
10 Gb	2

*Table 2-22 Default Port Cost—Long Mode*

Port Speed	Default Port Cost
100 Kb	200,000,000
1 Mb	20,000,000
10 Mb	2,000,000
100 Mb	200,000
1 Gb	20,000
10 Gb	2,000
100 Gb	200
1 Tb	20
10 Tb	2

**Examples**

This example shows how to set the spanning tree default port cost mode:

```
Console> (enable) set spantree defaultcostmode long
Portcost and portvlancost set to use long format default values.
Console> (enable)
```

**Related Commands**

[show spantree defaultcostmode](#)

## set spantree disable

Use the **set spantree disable** command to disable the spanning tree algorithm for all VLANs or a specific VLAN or disable spanning tree instance.

**set spantree disable** *vlan*

**set spantree disable all**

**set spantree disable mistp-instance** *instance*

**set spantree disable mistp-instance all**

Syntax Description		
<i>vlan</i>		Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
<b>all</b>		Specifies all VLANs.
mistp-instance <i>instance</i>		Specifies the instance number; valid values are from 1 to 16.
mistp-instance all		Deletes all instances.

**Defaults** The default is spanning tree is enabled, and all instances are enabled (flooding disabled).

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

If you do not specify a VLAN number or an instance number, 1 is assumed.

When an instance is enabled, the Spanning Tree Protocol starts running on that instance.

When an instance is disabled, the switch stops sending out config type-length values (TLVs) for that instance and starts flooding incoming TLVs for the same instance (but checks the VLAN mapping on the incoming side). All the traffic running on the VLANs mapped to the instance is flooded as well.

This command is not available in MST mode.

**Examples** This example shows how to disable the spanning tree for VLAN 1:

```
Console> (enable) set spantree disable 1
VLAN 1 bridge spanning tree disabled.
Console> (enable)
```

This example shows how to disable spanning tree for a specific instance:

```
Console> (enable) set spantree disable mistp-instance 2  
MI-STP instance 2 disabled.  
Console> (enable)
```

---

**Related Commands**

[set spantree enable](#)  
[show spantree](#)

# set spantree enable

Use the **set spantree enable** command to enable the spanning tree algorithm for all VLANs, a specific VLAN, a specific instance, or all instances.

**set spantree enable** *vlan*s

**set spantree enable all**

**set spantree enable mistp-instance** *instance*

**set spantree enable mistp-instance all**

Syntax Description		
	<i>vlan</i> s	Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
	<b>all</b>	Specifies all VLANs.
	mistp-instance <i>instance</i>	Specifies the instance number; valid values are from 1 to 16.
	mistp-instance all	Enables all instances.

**Defaults** The default is enabled, and all instances are enabled (flooding disabled).

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
MISTP and VTP pruning cannot be enabled at the same time.  
If you do not specify a VLAN number or an instance number, 1 is assumed.  
This command is not available in MST mode.

**Examples** This example shows how to activate spanning tree for VLAN 1:

```
Console> (enable) set spantree enable 1
VLAN 1 bridge spanning tree enabled.
Console> (enable)
```

This example shows how to activate spanning tree for an instance:

```
Console> (enable) set spantree enable mistp-instance 1
-STP instance 1 enabled.
Console> (enable)
```

■ set spantree enable

---

**Related Commands**

[set spantree disable](#)  
[show spantree](#)

# set spantree fwddelay

Use the **set spantree fwddelay** command to set the bridge forward delay for a VLAN or an instance.

**set spantree fwddelay** *delay* [*vlans*]

**set spantree fwddelay** *delay* **mistp-instance** [*instances*]

**set spantree fwddelay** *delay* **mst**

Syntax Description		
<i>delay</i>		Number of seconds for the bridge forward delay; valid values are from 4 to 30 seconds.
<i>vlans</i>		(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
<i>mistp-instance instances</i>		Keyword and optional variable to specify the instance number; valid values are from 1 to 16.
<b>mst</b>		Sets the forward delay time for the IST instance and all MST instances; see the “Usage Guidelines” section for more information.

## Defaults

The default is the bridge forward delay is set to 15 seconds for all VLANs.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

If you do not specify a VLAN number or an instance number, 1 is assumed.

This command is not supported by the NAM.

If you enable MISTP, you cannot set the VLAN bridge forward delay.

If you enable PVST+, you cannot set the instance bridge forward delay.

If you enter the **set spantree fwddelay** *delay* **mst** command, you set the forward delay time for the IST instance and all MST instances. You do not need to set the forward delay time for each MST instance.

## Examples

This example shows how to set the bridge forward delay for VLAN 100 to 16 seconds:

```
Console> (enable) set spantree fwddelay 16 100
Spantree 100 forward delay set to 16 seconds.
Console> (enable)
```

This example shows how to set the bridge forward delay for an instance to 16 seconds:

```
Console> (enable) set spantree fwddelay 16 mistp-instance 1
Instance 1 forward delay set to 16 seconds.
Console> (enable)
```

This example shows how to set the bridge forward delay for the IST and all MST instances to 15 seconds:

```
Console> (enable) set spantree fwddelay 15 mst  
MST forward delay set to 15 seconds.  
Console> (enable)
```

---

Related Commands [show spantree](#)

## set spantree global-default

Use the **set spantree global-default** command to set the global states on the switch.

```
set spantree global-default portfast { enable | disable }
```

```
set spantree global-default loop-guard { enable | disable }
```

```
set spantree global-default bpdu-guard { enable | disable }
```

```
set spantree global-default bpdu-filter { enable | disable }
```

Syntax Description	portfast	Sets the global PortFast state.
	<b>enable</b>	Enables the global state.
	<b>disable</b>	Disables the global state.
	<b>loop-guard</b>	Sets the global loop guard state.
	<b>bpdu-guard</b>	Sets the global BPDU guard state.
	<b>bpdu-filter</b>	Sets the global BPDU filter state.

### Defaults

All ports are in nonedge state.

Loop guard is disabled on all ports.

BPDU guard is disabled on all ports.

BPDU filter is disabled on all ports.

### Command Types

Switch command.

### Command Modes

Privileged.

### Examples

This example shows how to disable the global PortFast state on the switch:

```
Console> (enable) set spantree global-default portfast disable
Spantree global portfast state disabled on this switch.
Console> (enable)
```

This example shows how to enable the global loop guard state on the switch:

```
Console> (enable) set spantree global-default loop-guard enable
Spantree global loop-guard state enabled on the switch.
Console> (enable)
```

This example shows how to disable the global BPDU guard state on the switch:

```
Console> (enable) set spantree global-default bpdu-guard disable
Spantree global-default bpdu-guard disabled on this switch.
Console> (enable)
```

This example shows how to disable the global BPDU filter state on the switch:

```
Console> (enable) set spantree global-default bpdu-filter disable  
Spantree global-default bpdu-filter disabled on this switch.  
Console> (enable)
```

---

**Related Commands**

**clear spantree mst**  
**set spantree mst config**  
**set spantree mst redetect-protocol**  
**set spantree portfast bpdu-filter**  
**set spantree portfast bpdu-guard**  
**show spantree mst config**

# set spantree guard

Use the **set spantree guard** command to enable or disable the spanning tree root guard or loop guard feature on a per-port basis.

```
set spantree guard { none | root | loop } mod/port
```

Syntax Description		
	<b>none</b>	Disables the spanning tree guard feature.
	<b>root</b>	Enables the root guard feature.
	<b>loop</b>	Enables the loop guard feature.
	<i>mod/port</i>	Number of the module and ports on the module.

**Defaults** The default is root guard and loop guard are disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you enable loop guard on a channel and the first link becomes unidirectional, loop guard will block the entire channel until the affected port is removed from the channel.

You can use the root guard feature to prevent switches from becoming the root switch. The root guard feature forces a port to become a designated port so that no switch on the other end of the link can become a root switch.

When you enable root guard, it is automatically applied to all of the active instances or VLANs to which that port belongs. When you disable root guard, it is disabled for the specified ports. If a port goes into the root-inconsistent state, it automatically goes into the listening state. Disabling loop guard moves all loop-inconsistent ports to the listening state.

When using the loop guard feature, follow these guidelines:

- Use care when enabling loop guard. Loop guard is useful only in those topologies where there are blocked ports. Topologies where there are no blocked ports are loop free by definition and do not need this feature to be enabled.
- Enable loop guard only on root and alternate root ports.
- Use loop guard mainly on access switches.
- You cannot enable loop guard on PortFast-enabled or dynamic VLAN ports.
- You cannot enable PortFast on loop guard-enabled ports.
- You cannot enable loop guard if root guard is enabled.

---

**Examples**

This example shows how to enable root guard:

```
Console> (enable) set spantree guard root 5/1
Rootguard on port 5/1 is enabled.
Warning!! Enabling rootguard may result in a topology change.
Console> (enable)
```

This example shows how to enable the loop guard feature:

```
Console> (enable) set spantree guard loop 5/1
Rootguard is enabled on port 5/1, enabling loopguard will disable rootguard on
this port.
Do you want to continue (y/n) [n]? y
Loopguard on port 5/1 is enabled.
Console> (enable)
```

---

**Related Commands**

[show spantree guard](#)

# set spantree hello

Use the **set spantree hello** command to set the bridge hello time for a VLAN or an instance.

**set spantree hello** *interval* [*vlan*]

**set spantree hello** *interval* **mistp-instance** *instances*

**set spantree hello** *interval* **mst**

Syntax Description		
	<i>interval</i>	Number of seconds the system waits before sending a bridge hello message (a multicast message indicating that the system is active); valid values are from 1 to 10 seconds.
	<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
	<i>mistp-instance instances</i>	Specifies the instance number; valid values are from 1 to 16.
	<b>mst</b>	Sets the hello time for the IST instance and all MST instances. See the “Usage Guidelines” section for more information.

## Defaults

The default is the bridge hello time is set to 2 seconds for all VLANs.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

If you do not specify a VLAN number or an instance number, 1 is assumed.

This command is not supported by the NAM.

If you enable MISTP, you cannot set the VLAN hello time.

If you enable PVST+, you cannot set the instance hello time.

If you enter the **set spantree hello interval mst** command, you set the hello time for the Internal Spanning Tree (IST) instance and all MST instances. You do not need to set the hello time for each MST instance.

## Examples

This example shows how to set the spantree hello time for VLAN 100 to 3 seconds:

```
Console> (enable) set spantree hello 3 100
Spantree 100 hello time set to 3 seconds.
Console> (enable)
```

This example shows how to set the spantree hello time for an instance to 3 seconds:

```
Console> (enable) set spantree hello 3 mistp-instance 1  
Spantree 1 hello time set to 3 seconds.  
Console> (enable)
```

This example shows how to set the spantree hello time for the IST and all MST instances to 2 seconds:

```
Console> (enable) set spantree hello 2 mst  
MST hello time set to 2 seconds.  
Console> (enable)
```

---

Related Commands [show spantree](#)

# set spantree macreduction

Use the **set spantree macreduction** command to enable or disable the spanning tree MAC address reduction feature.

**set spantree macreduction enable | disable**

Syntax Description	<b>enable</b>	Enables MAC address reduction.
	<b>disable</b>	Disables MAC address reduction.

**Defaults** The default is MAC address reduction is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The MAC address reduction feature is used to enable extended-range VLAN identification and allows the switch to support a large number of spanning tree instances with a very limited number of MAC addresses and still maintain the IEEE 802.1D bridge-ID requirement for each STP instance.

You cannot disable this feature if extended-range VLANs exist.

You cannot disable this feature on chassis with 64 MAC addresses.

**Examples** This example shows how to disable the MAC address reduction feature:

```
Console> (enable) set spantree macreduction disable
MAC address reduction disabled
Console> (enable)
```

**Related Commands** [show spantree](#)

# set spantree maxage

Use the **set spantree maxage** command to set the bridge maximum aging time for a VLAN or an instance.

**set spantree maxage** *agingtime* [*vlangs*]

**set spantree maxage** *agingtime* **mistp-instance** *instances*

**set spantree maxage** *agingtime* **mst**

Syntax Description		
<i>agingtime</i>		Maximum number of seconds that the system retains the information received from other bridges through Spanning Tree Protocol; valid values are from 6 to 40 seconds.
<i>vlangs</i>		(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
<i>mistp-instance instances</i>		Specifies the instance number; valid values are from 1 to 16.
<b>mst</b>		Sets the maximum aging time for the IST instance and all MST instances. See the “Usage Guidelines” section for more information.

**Defaults** The default configuration is 20 seconds for all VLANs.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

- If you do not specify a VLAN number or an instance number, 1 is assumed.
- This command is not supported by the NAM.
- If you enable MISTP, you cannot set the VLAN maximum aging time.
- If you enable PVST+, you cannot set the instance maximum aging time.
- If you enter the **set spantree maxage** *agingtime* **mst** command, you set the maximum aging time for the IST instance and all MST instances. You do not need to set the maximum aging time for each MST instance.

**Examples** This example shows how to set the maximum aging time for VLAN 1000 to 25 seconds:

```
Console> (enable) set spantree maxage 25 1000
Spantree 1000 max aging time set to 25 seconds.
Console> (enable)
```

This example shows how to set the maximum aging time for an instance to 25 seconds:

```
Console> (enable) set spantree maxage 25 mistp-instance 1  
Instance 1 max aging time set to 25 seconds.  
Console> (enable)
```

This example shows how to set the maximum aging time for the IST and all MST instances to 20 seconds:

```
Console> (enable) set spantree maxage 20 mst  
MST max age set to 20 seconds.  
Console> (enable)
```

---

**Related Commands** [show spantree](#)

# set spantree mode

Use the **set spantree mode** command to configure the type of Spanning Tree Protocol mode to run.

**set spantree mode { mistp | pvst+ | mistp-pvst+ | mst }**

Syntax Description	Parameter	Description
	<b>mistp</b>	Specifies MISTP mode.
	<b>pvst+</b>	Specifies PVST+ mode.
	<b>mistp-pvst+</b>	Allows the switch running MISTP to tunnel BPDUs with remote switches running PVST+.
	<b>mst</b>	Specifies MST mode.

**Defaults** The default is PVST+.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

When you connect through Telnet into a switch and try to change the spanning tree mode from PVST+ to MISTP or MISTP-PVST+, and no VLANs are mapped to any instance on that switch, this warning message is displayed:

```
Console> (enable) set spantree mode mistp
Warning!! Changing the STP mode from a telnet session will disconnect the
session because there are no VLANs mapped to any MISTP instance.
Do you want to continue [n]?
```

When you connect through Telnet into a switch and try to change the spanning tree mode from MISTP or MISTP-PVST+ to PVST+, or when you connect through Telnet into a switch and try to change the spanning tree mode from PVST+ to MISTP or MISTP-PVST+ and additional VLAN-instance mappings are on that switch, this warning message is displayed:

```
Console> (enable) set spantree mode pvst+
Warning!! Changing the STP mode from a telnet session might disconnect the
session.
Do you want to continue [n]?
```

When you change from MISTP to PVST+ and over 8000 VLAN ports are currently configured on the switch, this warning message is displayed:

```
Console> (enable) set spantree mode pvst+
Warning!! This switch has 12345 VLAN-ports currently configured for STP.
Going out of MISTP mode could impact system performance.
Do you want to continue [n]?
```

If you change the spanning tree mode from PVST+ to MISTP or MISTP to PVST+, the STP mode previously running stops, all the information collected at runtime is used to build the port database for the new mode, and the new STP mode restarts the computation of the active topology from zero. All the parameters of the previous STP per VLAN or per instance are kept in NVRAM.

If you change the spanning tree mode from PVST+ to MISTP or MISTP to PVST+ and BackboneFast is enabled, this message is displayed:

```
Console> (enable) set spantree mode mistp
Cannot change the spantree mode to MISTP when backbonefast is enabled.
```

---

## Examples

This example shows how to set the spanning tree mode to PVST+:

```
Console> (enable) set spantree mode pvst+
Warning!! Changing the STP mode from a telnet session might disconnect the session.
Do you want to continue [n]? y
Spantree mode set to PVST+.
Console> (enable)
```

This example shows what happens if you change the spanning tree mode from PVST+ to MISTP:

```
Console> (enable) set spantree mode mistp
Warning!! Changing the STP mode from a telnet session will disconnect the session because
there are no VLANs mapped to any MISTP instance.
Do you want to continue [n]? y
Console> (enable)
```

This example shows how to set the spanning tree mode to MST:

```
Console> (enable) set spantree mode mst
Warning!! Changing the STP mode from a telnet session will disconnect the session
because there are no VLANs mapped to any MISTP instance.
Do you want to continue [n]? y
Console> (enable)
```

---

## Related Commands

[set vlan](#)  
[show spantree](#)

# set spantree mst config

Use the **set spantree mst config** command to change the MST region information.

```
set spantree mst config {[name name] | [revision number]}
```

```
set spantree mst config commit
```

```
set spantree mst config rollback [force]
```

Syntax Description	
<b>name</b> <i>name</i>	(Optional) Specifies the MST region name. See the “Usage Guidelines” section for more information.
<b>revision</b> <i>number</i>	(Optional) Specifies the MST region revision number; <i>number</i> is from <b>0</b> to <b>65535</b> . See the “Usage Guidelines” section for more information.
<b>commit</b>	Puts the new MST VLAN mapping into effect.
<b>rollback</b>	Discards changes made to the MST configuration that have not been applied yet.
<b>force</b>	(Optional) Unlocks the MST edit buffer when it is held by another user.

**Defaults** Unless you specify a region name, no region name will be given.  
The default revision number is 1.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The region name can be up to 32 characters long.

The region name and revision number are copied from NVRAM MST region information. You must enter the revision number if the revision number needs to be updated. The revision number is not incremented automatically each time that the MST configuration is committed.

Changes that you make to MST VLAN mapping are buffered, and by entering the **set spantree mst config commit** command, you put the new MST VLAN mapping into effect. After you enter the **set spantree mst config commit** command, the lock for the MST edit buffer is released.

If you enter the **set spantree mst config rollback** command, you discard the changes made to the MST region configuration that are not applied yet (only if you have locked the edit buffer). You can forcefully release the lock set by another user by entering the command **set spantree mst config rollback force**.

The **set spantree mst config commit** and **set spantree mst config rollback** commands are stored in NVRAM.

---

**Examples**

This example shows how to configure an MST region and to give that region a name and revision number:

```
Console> (enable) set spantree mst config name test-lab revision 10  
Edit Buffer modified. Use 'set spantree mst config commit' to apply the  
changes  
Console> (enable)
```

This example shows how to put the new MST VLAN mapping into effect:

```
Console> (enable) set spantree mst config commit  
Console> (enable)
```

This example shows how to discard MST region configuration when you hold the MST edit buffer:

```
Console> (enable) set spantree mst config rollback  
Console> (enable)
```

This example shows how to unlock the MST edit buffer when it is held by another user:

```
Console> (enable) set spantree mst config rollback force  
Console> (enable)
```

---

**Related Commands**

[clear spantree mst](#)  
[show spantree mst](#)  
[show spantree mst config](#)

# set spantree mst link-type

Use the **set spantree mst link-type** command to configure the link type of a port.

```
set spantree mst link-type mod/port { auto | point-to-point | shared }
```

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>auto</b>	Derives the link from either a half-duplex or full-duplex link type. See the “Usage Guidelines” section for more information about <b>auto</b> .
	<b>point-to-point</b>	Connects the port to a point-to-point link.
	<b>shared</b>	Connects the port to a shared medium.

**Defaults** The default link type is **auto**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** MST rapid connectivity only works on point-to-point links between two bridges. If the link type is set to **auto** and the link is a half-duplex link, then the link is a shared link. If the link type is set to **auto** and the link is a full-duplex link, then the link is a point-to-point link.

**Examples** This example shows how to connect port 1 on module 3 to a point-to-point link:

```
Console> (enable) set spantree mst link-type 3/1 point-to-point
Link type set to point-to-point on port 3/1
Console> (enable)
```

**Related Commands**

- [clear spantree mst](#)
- [set spantree global-default](#)
- [set spantree mst redetect-protocol](#)
- [set spantree mst config](#)

# set spantree mst maxhops

Use the **set spantree mst maxhops** command to set the spanning tree hop count.

```
set spantree mst maxhops maxhops
```

<b>Syntax Description</b>	<i>maxhops</i>	Maximum number of hops. Valid values are from 1 to 40.
---------------------------	----------------	--

<b>Defaults</b>	The bridge forward delay default is 20 seconds for all instances.
-----------------	---

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	This example shows how to set the maximum number of hops:
-----------------	---

```
Console> (enable) set spantree mst maxhops 20  
Console> (enable)
```

<b>Related Commands</b>	<a href="#">clear spantree mst</a> <a href="#">set spantree mst config</a> <a href="#">set spantree mst link-type</a> <a href="#">set spantree mst redetect-protocol</a> <a href="#">set spantree mst vlan</a> <a href="#">show spantree mst</a> <a href="#">show spantree mst config</a>
-------------------------	---

# set spantree mst redetect-protocol

Use the **set spantree mst redetect-protocol** command to detect legacy bridges and the boundary ports of the MST region.

**set spantree mst *mod/port* redetect-protocol**

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port or range of ports on the module.
---------------------------	-----------------	--

<b>Defaults</b>	This command has no default settings.	
-----------------	---------------------------------------	--

<b>Command Types</b>	Switch command.	
----------------------	-----------------	--

<b>Command Modes</b>	Privileged.	
----------------------	-------------	--

<b>Usage Guidelines</b>	This command is available in MST mode only and is not saved in NVRAM.	
-------------------------	---	--

<b>Examples</b>	This example shows how to set protocol detection of legacy bridges and boundary ports on port 2 or module 3:	
-----------------	--	--

```
Console> (enable) set spantree mst 3/2 redetect-protocol
Spanning tree protocol detection forced on port 3/2
Console> (enable)
```

<b>Related Commands</b>	<b>clear spantree mst</b> <b>set spantree mst config</b> <b>show spantree mst</b> <b>show spantree mst config</b>	
-------------------------	--	--

# set spantree mst vlan

Use the **set spantree mst vlan** command to configure the mapping of VLANs to an MST instance.

```
set spantree mst instance vlan vlan
```

Syntax Description	<i>instance</i>	Number of the instance; valid values are from 0 to 15.
	<b>vlan</b> <i>vlan</i>	Specifies the VLAN number; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** All changes made to the region configuration (region information and VLAN mapping) are buffered. Only one user can hold the buffer at a time. This buffer is locked when you first enter the **set spantree mst instance** or **set spantree mst config** commands.

If the VLAN is already mapped to some other instance, the VLAN is unmapped from that instance and mapped to the new instance.

Each time you map a new VLAN or VLANs, they are added to the existing mapping.

All unmapped VLANs are mapped to MST instance 0 (IST).

**Examples** This example shows how to map VLANs 400 through 499 to MST instance 4:

```
Console> (enable) set spantree mst 4 vlan 400-499
Edit Buffer modified. Use 'set spantree mst config commit' to apply the
changes
Console> (enable)
```

**Related Commands**

- [clear spantree mst](#)
- [set spantree mst config](#)
- [show spantree mst](#)
- [show spantree mst config](#)

## set spantree portcost

Use the **set spantree portcost** command to set the path cost for a port.

```
set spantree portcost mod/port cost [mst]
```

Syntax Description		
	<i>mod/port</i>	Number of the module and the port on the module.
	<i>cost</i>	Number of the path cost; see the “Usage Guidelines” section for additional information.
	<b>mst</b>	(Optional) Sets the path cost for an MST port.

### Defaults

The default path cost is based on port speed; see [Table 2-23](#) and [Table 2-24](#) for default settings.

**Table 2-23 Default Port Cost—Short Mode**

Port Speed	Default Port Cost
4 Mb	250
10 Mb	100
16 Mb	62
100 Mb	19
155 Mb	14
1 Gb	4
10 Gb	2

**Table 2-24 Default Port Cost—Long Mode**

Port Speed	Default Port Cost
100 Kb	200000000 (200 million)
1 Mb	20000000 (20 million)
10 Mb	2000000 (2 million)
10 Mb	200000 (200 thousand)
1 Gb	20000 (20 thousand)
10 Gb	2000 (2 thousand)
100 Gb	200
1 Tb	20
10 Tb	2

### Command Types

Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** If the spanning tree mode is short and long or MISTP, valid cost values are from 1 to 65535, otherwise, valid cost values are from 1 to 2000000.

This command is not supported by the NAM.

The Spanning Tree Protocol uses port path costs to determine which port to select as a forwarding port. You should assign lower numbers to ports attached to faster media (such as full duplex) and higher numbers to ports attached to slower media.

---

**Examples** This example shows how to set the port cost for port 12 on module 2 to 19:

```
Console> (enable) set spantree portcost 2/12 19
Spantree port 2/12 path cost set to 19.
Console> (enable)
```

---

**Related Commands** [set spantree defaultcostmode](#)  
[show spantree](#)

# set spantree portfast

Use the **set spantree portfast** command to allow a port that is connected to a single workstation or PC to start faster when it is connected.

**set spantree portfast** *mod/port* { **enable** [**trunk**] | **disable** | **default** }

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables the spanning tree PortFast-start feature on the port.
	<b>trunk</b>	(Optional) Enables the spanning tree PortFast-start feature on the trunk port.
	<b>disable</b>	Disables the spanning tree PortFast-start feature on the port.
	<b>default</b>	Sets the spanning tree start feature back to its default setting.

**Defaults** The default is the PortFast-start feature is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

When a port configured with the **spantree portfast enable** command is connected, the port immediately enters the spanning tree forwarding state rather than going through the normal spanning tree states such as listening and learning.

If you enter the **trunk** keyword, the spanning tree port fast-start feature is enabled on the specified trunk port.

**Examples** This example shows how to enable the spanning tree PortFast-start feature on port 2 on module 1:

```
Console> (enable) set spantree portfast 1/2 enable
```

```
Warning: Connecting layer 2 devices to a fast-start port can cause temporary spanning tree loops. Use with caution.
```

```
Spantree port 1/2 fast start enabled.
```

```
Console> (enable)
```

This example shows how to enable the spanning tree PortFast-start feature on the trunk port:

```
Console> (enable) set spantree portfast 3/2 enable trunk
```

```
Warning: Connecting layer 2 devices to a fast-start port can cause temporary spanning tree loops. Use with caution.
```

```
Spantree port 1/2 fast start enabled.
```

```
Console> (enable)
```

---

Related Commands [show spantree portfast](#)

# set spantree portfast bpdu-filter

Use the **set spantree portfast bpdu-filter** command to enable or disable BPDU packet filtering on a port.

**set spantree portfast bpdu-filter** *mod/port* { **enable** | **disable** | **default** }

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
	<b>enable</b>	Enables BPDU packet filtering.
	<b>disable</b>	Disables BPDU packet filtering.
	<b>default</b>	Sets BPDU packet filtering to the global BPDU packet filtering state. See the “Usage Guidelines” section for more information.

**Defaults** The default is BPDU packet filtering is **default**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.  
 BPDU packet filtering turns off BPDU transmission on PortFast-enabled ports and nontrunking ports. If you enter the **default** keyword, the spanning tree port is set to the global BPDU filtering state. To enable or disable BPDU filtering for all ports on the switch, enter the **set spantree global-default bpdu-filter** command.

**Examples** This example shows how to enable BPDU filtering on module 3, port 4:

```
Console> (enable) set spantree portfast bpdu-filter 3/4 enable
Warning: Ports enabled with bpdu filter will not send BPDUs and drop all
received BPDUs. You may cause loops in the bridged network if you misuse
this feature.
Spantree port 3/4 bpdu filter enabled.
Console> (enable)
```

**Related Commands** [set spantree global-default](#)  
[show spantree portfast](#)

# set spantree portfast bpdu-guard

Use the **set spantree portfast bpdu-guard** command to enable or disable spanning tree PortFast BPDU guard on a port.

```
set spantree portfast bpdu-guard mod/port { enable | disable | default }
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>enable</b>	Enables the spanning tree PortFast BPDU guard.
<b>disable</b>	Disables the spanning tree PortFast BPDU guard.
<b>default</b>	Sets spanning tree PortFast BPDU guard to the global BPDU guard state. See the “Usage Guidelines” section for more information.

**Defaults** The default is PortFast BPDU guard is **default**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

You must enable PortFast mode before you can enable PortFast BPDU guard for BPDU guard to work correctly.

When you enable PortFast BPDU guard, a nontrunking PortFast-enabled port is moved into an errdisable state when a BPDU is received on that port. When you disable a PortFast BPDU guard, a PortFast-enabled nontrunking port will stay up when it receives BPDUs, which may cause spanning tree loops.

If you enter the **default** keyword, the spanning tree port is set to the global BPDU guard state.

To enable or disable BPDU guard for all ports on the switch, enter the [set spantree global-default bpdu-guard](#) command.

**Examples** This example shows how to enable BPDU guard on module 3, port 1:

```
Console> (enable) set spantree portfast bpdu-guard 3/1 enable
Spantree port 3/1 bpdu guard enabled.
Console> (enable)
```

**Related Commands** [set spantree global-default](#)  
[show spantree portfast](#)

## set spantree portinstancecost

Use the **set spantree portinstancecost** command to assign the path cost of the port for the specified instances.

```
set spantree portinstancecost mod/port [cost cost] [instances]
```

```
set spantree portinstancecost mod/port [cost cost] mst [instances]
```

Syntax Description		
<i>mod/port</i>		Number of the module and the port on the module.
<b>cost</b> <i>cost</i>		(Optional) Indicates the path cost; see the “Usage Guidelines” section for additional information.
<b>mst</b>		Sets the cost for an MST instance.
<i>instances</i>		(Optional) Instance number; valid values are from 0 to 15.

### Defaults

The default path cost is based on port speed; see [Table 2-25](#) for default settings.

**Table 2-25 Default Port Cost—Short Mode**

Port Speed	Default Port Cost
4 Mb	250
10 Mb	100
16 Mb	62
100 Mb	19
155 Mb	14
1 Gb	4
10 Gb	2

### Command Types

Switch command.

### Command Modes

Privileged.

### Usage Guidelines

This command is not supported by the NAM.

If the spanning tree mode is short and long or MISTP, valid cost values are from 1 to 65535, otherwise, valid cost values are from 1 to 2,000,000.

The port instance cost applies to trunk ports only.

The value specified is used as the path cost of the port for the specified instances. The rest of the instances have a path cost equal to the port path cost set through the **set spantree instancecost** command (if not set, the value is the default path cost of the port).

---

**Examples**

These examples show how to use the **set spantree portinstancecost** command and explicitly specify the path cost of a port:

```
Console> (enable) set spantree portinstancecost 2/10 cost 6 1-10
Port 2/10 instances 11-16 have path cost 2000000.
Port 2/10 instances 1-10 have path cost 6.
This parameter applies to trunking ports only.
Console> (enable)
```

These examples show how to use the **set spantree portinstancecost** command without explicitly specifying the path cost of a port:

```
Console> (enable) set spantree portinstancecost 1/2
Port 1/2 Instances 1-1005 have path cost 3100.
Console> (enable)
```

```
Console> (enable) set spantree portinstancecost 1/2 16
Port 1/2 Instances 16,22-1005 have path cost 3100.
Console> (enable)
```

This example shows the display if you enter the command when PVST+ is enabled:

```
Console> (enable) set spantree portinstancecost 3/1
This command is only valid when STP is in MISTP or MISTP-PVST+ mode.
Console> (enable)
```

This example shows how to set the port cost for a specific MST instance:

```
Console> (enable) set spantree portinstancecost 2/10 cost 6 1-10 mst
Port 2/10 mst instances 1-10 have path cost 6.
This parameter applies to trunking ports only.
Console> (enable)
```

---

**Related Commands**

**clear spantree portinstancecost**  
**show spantree mistp-instance**

## set spantree portinstancepri

Use the **set spantree portinstancepri** command to set the port priority for instances in the trunk port.

**set spantree portinstancepri** *mod/port priority* [*instances*]

**set spantree portinstancepri** *mod/port priority mst* [*instances*]

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<i>priority</i>	Number that represents the cost of a link in a spanning tree bridge; valid values are 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224, 240, with 0 indicating high priority and 240, low priority. See “Usage Guidelines” for more information.
	<b>mst</b>	Specifies the port priority for MST instances.
	<i>instances</i>	(Optional) Instance number; valid values are from 0 to 15.

**Defaults** The default is the port priority is set to 0, with no instances specified.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Priority values that are not a multiple of 16 (between the values of 0 to 63) are converted to the nearest multiple of 16.

This command is not supported by the NAM.

Use this command to add instances to a specified port priority level. Subsequent calls to this command do not replace instances that are already set at a specified port priority level.

This feature is not supported for the MSM.

The **set spantree portinstancepri** command applies to trunk ports only. If you enter this command, you see this message:

```
Port xx is not a trunk-capable port
```

**Examples** This example shows how to set the port priority for module 1, port 2, on specific instances:

```
Console> (enable) set spantree portinstancepri 1/2 16 1-11
Port 1/2 instances 1-11 using portpri 16.
This parameter applies to trunking ports only.
Console> (enable)
```

This example shows how to set the port priority for module 8, port 1, on MST instance 2:

```
Console> (enable) set spantree portinstancepri 8/1 31 mst 2  
Port 8/1 instances 2 using portpri 31.  
Port 8/1 instances 0-1, 3-15 using portpri 32.  
Console> (enable)
```

---

**Related Commands**

[clear spantree portinstancecost](#)  
[show spantree mistp-instance](#)

# set spantree portpri

Use the **set spantree portpri** command to set the bridge priority for a spanning tree port.

**set spantree portpri** *mod/port priority [mst]*

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<i>priority</i>	Number that represents the cost of a link in a spanning tree bridge; valid values are 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224, 240, with 0 indicating high priority and 240, low priority. See “Usage Guidelines” for more information.
	<b>mst</b>	(Optional) Sets the bridge priority for an MST port.

**Defaults** The default is all ports with bridge priority are set to 32.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Priority values that are not a multiple of 16 (between the values of 0 to 63) are converted to the nearest multiple of 16.

This command is not supported by the NAM.

**Examples** This example shows how to set the priority of port 1 on module 4 to 63:

```
Console> (enable) set spantree portpri 2/3 48
Bridge port 2/3 port priority set to 48.
Console> (enable)
```

This example shows the output when you have specified a priority value that is not a multiple of 16:

```
Console> (enable) set spantree portpri 2/3 2
Vlan port priority must be one of these numbers:0, 16, 32, 48, 64, 80,
96, 112, 128, 144,
160, 176, 192, 208, 224, 240
converting 2 to 0 nearest multiple of 16
Bridge port 2/3 port priority set to 0.
Console> (enable)
```

**Related Commands** [show spantree](#)

# set spantree portvlancost

Use the **set spantree portvlancost** command to assign a lower path cost to a set of VLANs on a port.

```
set spantree portvlancost mod/port [cost cost] [vlan_list]
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>cost</b> <i>cost</i>	(Optional) Sets the path cost; valid values are from 1 to 65535.
<i>vlan_list</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.

## Defaults

The default path cost is based on port speed; see [Table 2-26](#) and [Table 2-27](#) for default settings.

**Table 2-26 Default Port Cost—Short Mode**

Port Speed	Default Port Cost
4 Mb	250
10 Mb	100
16 Mb	62
100 Mb	19
155 Mb	14
1 Gb	4
10 Gb	2

**Table 2-27 Default Port Cost—Long Mode**

Port Speed	Default Port Cost
100 Kb	200,000,000
1 Mb	20,000,000
10 Mb	2,000,000
10 Mb	200,000
1 Gb	20,000
10 Gb	2,000
100 Gb	200
1 Tb	20
10 Tb	2

## Command Types

Switch command.

**Command Modes**

Privileged.

**Usage Guidelines**

This command is not supported by the NAM.

This command is not supported in MISTP mode.

When setting the path cost for extended-range VLANs, you can create a maximum of 64 nondefault entries or create entries until NVRAM is full.

The value specified is used as the path cost of the port for the specified set of VLANs. The rest of the VLANs have a path cost equal to the port path cost set through the **set spantree portcost** command (if not set, the value is the default path cost of the port).

If you do not list a VLAN explicitly, the VLANs listed when you entered this command previously are affected. If you do not list a cost value explicitly but cost values were specified previously, the port VLAN cost is set to 1 less than the current port cost for a port. However, this may not assure load balancing in all cases.

**Examples**

These examples show how to use the **set spantree portvlancost** command and explicitly specify the path cost of a port:

```
Console> (enable) set spantree portvlancost 2/10 cost 25 1-20
Cannot set portvlancost to a higher value than the port cost, 10, for port 2/10.
Console> (enable)
```

```
Console> (enable) set spantree portvlancost 2/10 cost 1-20
Port 2/10 VLANs 1-20 have a path cost of 9.
Console> (enable)
```

```
Console> (enable) set spantree portvlancost 2/10 cost 4 1-20
Port 2/10 VLANs 1-20 have path cost 4.
Port 2/10 VLANs 21-1000 have path cost 10.
Console> (enable)
```

```
Console> (enable) set spantree portvlancost 2/10 cost 6 21
Port 2/10 VLANs 1-21 have path cost 6.
Port 2/10 VLANs 22-1000 have path cost 10.
Console> (enable)
```

These examples show how to use the **set spantree portvlancost** command without explicitly specifying the path cost of a port:

```
Console> (enable) set spantree portvlancost 1/2
Port 1/2 VLANs 1-1005 have path cost 3100.
Console> (enable)
```

```
Console> (enable) set spantree portvlancost 1/2 21
Port 1/2 VLANs 1-20,22-1005 have path cost 3100.
Port 1/2 VLANs 21 have path cost 3099.
Console> (enable)
```

**Related Commands**

[clear spantree portvlancost](#)  
[set channel vlancost](#)  
[show spantree](#)

# set spantree portvlanpri

Use the **set spantree portvlanpri** command to set the port priority for a subset of VLANs in the trunk port.

```
set spantree portvlanpri mod/port priority [vlans]
```

Syntax Description		
<i>mod/port</i>		Number of the module and the port on the module.
<i>priority</i>		Number that represents the cost of a link in a spanning tree bridge; valid values are 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224, 240, with 0 indicating high priority and 240, low priority. See “Usage Guidelines” for more information.
<i>vlan</i> s		(Optional) VLANs that use the specified priority level; valid values are from 1 to 1005.

**Defaults** The default is the port VLAN priority is set to 0, with no VLANs specified.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Priority values that are not a multiple of 16 (between the values of 0 to 63) are converted to the nearest multiple of 16.

This command is not supported by the NAM.

This command is not supported by extended-range VLANs.

Use this command to add VLANs to a specified port priority level. Subsequent calls to this command do not replace VLANs that are already set at a specified port priority level.

This feature is not supported for the MSM.

The **set spantree portvlanpri** command applies only to trunk ports. If you enter this command, you see this message:

```
Port xx is not a trunk-capable port
```

**Examples** This example shows how to set the port priority for module 1, port 2, on VLANs 21 to 40:

```
Console> (enable) set spantree portvlanpri 1/2 16 21-40
Port 1/2 vlans 3,6-20,41-1000 using portpri 32
Port 1/2 vlans 1-2,4-5,21-40 using portpri 16
Console> (enable)
```

■ set spantree portvlanpri

---

**Related Commands**

**clear spantree portvlanpri**  
**show spantree**

# set spantree priority

Use the **set spantree priority** command to set the bridge priority for a VLAN or an instance when PVST+ or MISTP is running.

**set spantree priority** *bridge\_priority* *vlangs*

**set spantree priority** *bridge\_priority* **mistp-instance** *instances*

**set spantree priority** *bridge\_priority* **mst** *instances*

<b>Syntax Description</b>	<i>bridge_priority</i>	Number representing the priority of the bridge; see the “Usage Guidelines” section for valid values.
	<i>vlangs</i>	Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
	<b>mistp-instance</b> <i>instances</i>	Specifies the instance numbers; valid values are from 1 to 16.
	<b>mst</b> <i>instances</i>	Specifies the MST instance numbers; valid values are from 1 to 15.

**Defaults** The default is the bridge priority is set to 32768.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM or the MSM.

If MISTP or the MAC reduction feature is enabled, valid *bridge\_priority* values are 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, and 61440, with 0 indicating high priority and 61440, low priority.

If MISTP or the MAC reduction feature is disabled, valid *bridge\_priority* values are from 0 to 65535.

If you enable MISTP, you cannot set the VLAN bridge priority.

If you enable PVST+, you cannot set the instance priority.

If you try to set instance priority with PVST+ enabled, this message is displayed:

```
This command is only valid when STP is in MISTP or MISTP-PVST+ mode.
```

**Examples** This example shows how to set the bridge priority of instance 3:

```
Console> (enable) set spantree priority 14 mistp-instance 3
Instance 3 bridge priority set to 14.
Instance 3 does not exist.
Your configuration has been saved to NVRAM only.
Console> (enable)
```

This example shows how to set the bridge priority for MST instance 0:

```
Console> (enable) set spantree priority 28672 mst 0  
MST Spantree 0 bridge priority set to 28672.  
Console> (enable)
```

This example shows how to set the bridge priority for multiple MST instances:

```
Console> (enable) set spantree priority 28672 mst 0-4  
MST Spantrees 0-4 bridge priority set to 28672.  
Console> (enable)
```

---

Related Commands [show spantree](#)

## set spantree root

Use the **set spantree root** command to set the primary or secondary root for specific VLANs, all VLANs of the switch, or an instance.

```
set spantree root [secondary] [vlangs] [dia network_diameter] [hello hello_time]
```

```
set spantree root [secondary] mistp-instance instance [dia network_diameter]  
[hello hello_time]
```

```
set spantree root [secondary] mst instance [dia network_diameter] [hello hello_time]
```

Syntax Description		
<b>secondary</b>	(Optional) Designates this switch as a secondary root, should the primary root fail.	
<i>vlangs</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.	
<b>dia</b> <i>network_diameter</i>	(Optional) Specifies the maximum number of bridges between any two points of end stations; valid values are from 1 through 7.	
<b>hello</b> <i>hello_time</i>	(Optional) Specifies in seconds, the duration between the generation of configuration messages by the root switch.	
<b>mistp-instance</b> <i>instance</i>	Specifies the instance number; valid values are from 1 to 16.	
<b>mst</b> <i>instance</i>	Specifies an MST instance; valide values are from 1 to 16.	

### Defaults

If you do not specify the **secondary** keyword, the default is to make the switch the primary root. The default value of the network diameter is 7.

If you do not specify the *hello\_time* value, the current value of *hello\_time* is calculated from the network diameter.

### Usage Guidelines

If you do not specify a VLAN number, VLAN 1 is assumed.

This command is not supported by the NAM.

This command is run on backbone or distribution switches.

You can run the secondary root many times to create backup switches in case of a root failure.

The **set spantree root secondary** bridge priority value is 16384, except when MAC reduction or MISTP are enabled, then the value is 28672.

The **set spantree root** bridge priority value is 16384, except when MAC reduction or MISTP are enabled, then the value is 24576.

This command increases path costs to a value greater than 3000.

If you enable MISTP, you cannot set the VLAN root. If you enable PVST+, you cannot set the instance root.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to set the primary root for a range of VLANs:

```
Console> (enable) set spantree root 1-10 dia 4
VLANs 1-10 bridge priority set to 8192
VLANs 1-10 bridge max aging time set to 14 seconds.
VLANs 1-10 bridge hello time set to 2 seconds.
VLANs 1-10 bridge forward delay set to 9 seconds.
Switch is now the root switch for active VLANs 1-6.
Console> (enable)
```

This example shows how to set the primary root for an instance:

```
Console> (enable) set spantree root mistp-instance 2-4 dia 4
Instances 2-4 bridge priority set to 8192
VLIstances 2-4 bridge max aging time set to 14 seconds.
Instances 2-4 bridge hello time set to 2 seconds.
Instances 2-4 bridge forward delay set to 9 seconds.
Switch is now the root switch for active Instances 1-6.
Console> (enable)
```

This example shows how to set the primary root for MST instance 5:

```
Console> (enable) set spantree root mst 5
Instance 5 bridge priority set to 24576.
Instance 5 bridge max aging time set to 16.
Instance 5 bridge hello time set to 2.
Instance 5 bridge forward delay set to 15.
Switch is now the root switch for active Instance 5.
Console> (enable)
```

This example shows how to set the secondary root for MST instance 0:

```
Console> (enable) set spantree root secondary mst 0
Instance 0 bridge priority set to 28672.
Instance 0 bridge max aging time set to 20.
Instance 0 bridge hello time set to 2.
Instance 0 bridge forward delay set to 15.
Console> (enable)
```

This example shows how to set the maximum number of bridges and the hello time of the root for MST instance 0:

```
Console> (enable) set spantree root mst 0 dia 7 hello 2
Instance 0 bridge priority set to 24576.
Instance 0 bridge max aging time set to 20.
Instance 0 bridge hello time set to 2.
Instance 0 bridge forward delay set to 15.
Switch is now the root switch for active Instance 0.
Console> (enable)
```

These examples show that setting the bridge priority to 8192 was not sufficient to make this switch the root. The priority was further reduced to 7192 (100 less than the current root switch) to make this switch the root switch. However, reducing it to this value did not make it the root switch for active VLANs 16 and 17.

```
Console> (enable) set spantree root 11-20.  
VLANs 11-20 bridge priority set to 7192  
VLANs 11-10 bridge max aging time set to 20 seconds.  
VLANs 1-10 bridge hello time set to 2 seconds.  
VLANs 1-10 bridge forward delay set to 13 seconds.  
Switch is now the root switch for active VLANs 11-15,18-20.  
Switch could not become root switch for active VLAN 16-17.  
Console> (enable)
```

```
Console> (enable) set spantree root secondary 22,24 dia 5 hello 1  
VLANs 22,24 bridge priority set to 16384.  
VLANs 22,24 bridge max aging time set to 10 seconds.  
VLANs 22,24 bridge hello time set to 1 second.  
VLANs 22,24 bridge forward delay set to 7 seconds.  
Console> (enable)
```

Related Commands [show spantree](#)

## set spantree uplinkfast

Use the **set spantree uplinkfast** command to enable fast switchover to alternate ports when the root port fails. This command applies to a switch, not to a WAN.

```
set spantree uplinkfast {enable | disable} [rate station_update_rate] [all-protocols {off | on}]
```

Syntax Description		
<b>enable</b>		Enables fast switchover.
<b>disable</b>		Disables fast switchover.
<b>rate</b> <i>station_update_rate</i>		(Optional) Specifies the number of multicast packets transmitted per 100 ms when an alternate port is chosen after the root port goes down.
<b>all-protocols</b>		(Optional) Specifies whether or not to generate multicast packets for all protocols (IP, IPX, AppleTalk, and Layer 2 packets).
<b>off</b>		(Optional) Turns off the all-protocols feature.
<b>on</b>		(Optional) Turns on the all-protocols feature.

**Defaults** The default *station\_update\_rate* is 15 packets per 100 milliseconds.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

This command is not available in MST mode.

The **set spantree uplinkfast enable** command has the following results:

- Changes the bridge priority to 49152 for all VLANs (allowed VLANs).
- Increases the path cost and portvlancost of all ports to a value greater than 3000.
- On detecting the failure of a root port, an instant cutover occurs to an alternate port selected by Spanning Tree Protocol.

If you run the **set spantree uplinkfast enable** command on a switch that has this feature already enabled, only the station update rate is updated. The rest of the parameters are not modified.

If you run the **set spantree uplinkfast disable** command on a switch, the UplinkFast feature is disabled but the switch priority and port cost values are not reset to the default settings. To reset the values to the default settings, enter the **clear spantree uplinkfast** command.

The default *station\_update\_rate* value is 15 packets per 100 milliseconds, which is equivalent to a 1-percent load on a 10-megabit per second Ethernet network. If you specify this value as 0, the generation of these packets is turned off.

You do not have to turn on the all-protocols feature on Catalyst 6500 series switches that have both the UplinkFast and protocol filtering features enabled. Use the all-protocols feature only on Catalyst 6500 series switches that have UplinkFast enabled but do not have protocol filtering; upstream switches in the network use protocol filtering. You must enter the **all-protocols** option to inform the UplinkFast task whether or not to generate multicast packets for all protocols.

## Examples

This example shows how to enable spantree UplinkFast and specify the number of multicast packets transmitted to 40 packets per 100 milliseconds:

```
Console> (enable) set spantree uplinkfast enable rate 40
VLANs 1-4094 bridge priority set to 49152.
The port cost and portvlancost of all ports set to above 3000.
Station update rate set to 40 packets/100ms.
uplinkfast all-protocols field set to off.
uplinkfast enabled for bridge.
Console> (enable)
```

This example shows how to disable spantree UplinkFast:

```
Console> (enable) set spantree uplinkfast disable
Uplinkfast disabled for switch.
Use clear spantree uplinkfast to return stp parameters to default.
Console> (enable) clear spantree uplink
This command will cause all portcosts, portvlancosts, and the
bridge priority on all vlans to be set to default.
Do you want to continue (y/n) [n]? y
VLANs 1-1005 bridge priority set to 32768.
The port cost of all bridge ports set to default value.
The portvlancost of all bridge ports set to default value.
uplinkfast disabled for bridge.
Console> (enable)
```

This example shows how to turn on the all-protocols feature:

```
Console> (enable) set spantree uplinkfast enable all-protocols on
uplinkfast update packets enabled for all protocols.
uplinkfast enabled for bridge.
Console> (enable)
```

This example shows how to turn off the all-protocols feature:

```
Console> (enable) set spantree uplinkfast enable all-protocols off
uplinkfast all-protocols field set to off.
uplinkfast already enabled for bridge.
Console> (enable)
```

This example shows the output when instances have been configured:

```
Console> (enable) set spantree uplinkfast enable
Instances 1-15 bridge priority set to 49152.
The port cost and portinstancecost of all ports set to above 3000.
Station update rate set to 15 mpackets/100ms.
uplinkfast all-protocols field set to off.
uplinkfast already enabled for bridge.
Console> (enable)
```

## Related Commands

[clear spantree uplinkfast](#)  
[show spantree uplinkfast](#)

# set summertime

Use the **set summertime** command to specify whether the system should set the clock ahead one hour during daylight saving time.

```
set summertime {enable | disable} [zone]
```

```
set summertime recurring [{week} {day} {month} {hh:mm} {week | day | month | hh:mm} [offset]]
```

```
set summertime date {month} {date} {year} {hh:mm} {month | date | year | hh:mm}
[offset]
```

Syntax Description		
<b>enable</b>		Causes the system to set the clock ahead one hour during daylight saving time.
<b>disable</b>		Prevents the system from setting the clock ahead one hour during daylight saving time.
<i>zone</i>		(Optional) Time zone used by the <b>set summertime</b> command.
<b>recurring</b>		Specifies the summertime dates that recur every year.
<i>week</i>		Week of the month ( <b>first, second, third, fourth, last, 1...5</b> ).
<i>day</i>		Day of the week ( <b>Sunday, Monday, Tuesday</b> , and so forth).
<i>month</i>		Month of the year ( <b>January, February, March</b> , and so forth).
<i>hh:mm</i>		Hours and minutes.
<i>offset</i>		(Optional) Amount of offset in minutes ( <b>1 to 1440</b> minutes).
<i>date</i>		Day of the month ( <b>1 to 31</b> ).
<i>year</i>		Number of the year ( <b>1993 to 2035</b> ).

**Defaults** By default, the **set summertime** command is disabled. Once enabled, the default for *offset* is 60 minutes, following U.S. standards.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** After you enter the **clear config** command, the dates and times are set to default. Unless you configure it otherwise, this command advances the clock one hour at 2:00 a.m. on the first Sunday in April and moves back the clock one hour at 2:00 a.m. on the last Sunday in October.

**Examples** This example shows how to cause the system to set the clock ahead one hour during daylight saving time:

```
Console> (enable) set summertime enable PDT
Summertime is enabled and set to "PDT".
Console> (enable)
```

This example shows how to prevent the system from setting the clock ahead one hour during daylight saving time:

```
Console> (enable) set summertime disable
Summertime disabled.
Console> (enable)
```

This example shows how to set daylight saving time to the zonename AUS and repeat every year, starting from the third Monday of February at noon and ending at the second Saturday of August at 3:00 p.m. with an offset of 30 minutes:

```
Console> (enable) set summertime AUS recurring 3 Mon Feb 12:00 2 Saturday Aug 15:00 30
Summer time is disabled and set to 'AUS' with offset 30 minutes.
  start: 12:00:00 Sun Feb 13 2000
  end:   14:00:00 Sat Aug 26 2000
  Recurring, starting at 12:00:00 on Sunday of the third week of February and ending
  on Saturday of the fourth week of August.
Console> (enable)
```

This example shows how to set the daylight saving time to start on January 29, 1999 at 2:00 a.m. and end on August 19, 2004 at 3:00 p.m. with an offset of 30 minutes:

```
Console> (enable) set summertime date jan 29 1999 02:00 aug 19 2004 15:00 30
Summertime is disabled and set to ''
Start  : Fri Jan 29 1999, 02:00:00
End    : Thu Aug 19 2004, 15:00:00
Offset : 30 minutes
Recurring: no
Console> (enable)
```

This example shows how to set recurring to reset default to US summertime:

```
Console> (enable) set summertime recurring 3 mon feb 4 thurs oct 8:00 500
Command authorization none.
Summertime is enabled and set to ''
Start  : Mon Feb 21 2000, 03:00:00
End    : Fri Oct 20 2000, 08:00:00
Offset : 500 minutes (8 hours 20 minutes)
Recurring: yes, starting at 03:00am of third Monday of February and ending on 08:00am of
fourth Thursday of October.
Console> (enable)
```

---

**Related Commands**    [show summertime](#)

# set system baud

Use the **set system baud** command to set the console port baud rate.

**set system baud** *rate*

<b>Syntax Description</b>	<i>rate</i> Baud rate; valid rates are 600, 1200, 2400, 4800, 9600, 19200, and 38400.
---------------------------	---

<b>Defaults</b>	The default is 9600 baud.
-----------------	---------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	This example shows how to set the system baud rate to 19200:
-----------------	--

```
Console> (enable) set system baud 19200
System console port baud rate set to 19200.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show system</a>
-------------------------	-----------------------------

# set system contact

Use the **set system contact** command to identify a contact person for the system.

```
set system contact [contact_string]
```

---

<b>Syntax Description</b>	<i>contact_string</i> (Optional) Text string that contains the name of the person to contact for system administration. If you do not specify a contact string, the system contact string is cleared.
---------------------------	---

---

---

<b>Defaults</b>	The default is no system contact is configured.
-----------------	---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Examples</b>	This example shows how to set the system contact string:
-----------------	--

```
Console> (enable) set system contact Xena ext.24  
System contact set.  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">show system</a>
-------------------------	-----------------------------

# set system core-dump

Use the **set system core-dump** command to enable or disable the core dump feature.

```
set system core-dump {enable | disable}
```

Syntax Description	enable	Disables the core dump feature.
	disable	Enables the core dump feature.

**Defaults** The default is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The core dump feature generates a report of images when your system fails due to a software error. The core image is stored in the file system. From this file, you can examine an error condition of a process when it is terminated due to an exception.

The size of the file system depends on the memory card size. The core dump file generated is proportional to the size of the system DRAM. Make sure that you have enough memory available to store the core dump file.

In order to maintain the core dump image, the yield CPU is disabled during the core dump process. You should have a redundant supervisor engine installed to take over normal operations. If the switch has a redundant supervisor engine setup, the redundant supervisor engine takes over automatically before the core dump occurs. The previously active supervisor engine resets itself after the core dump completes.

**Examples** This example shows how to enable the core dump feature:

```
Console> (enable) set system core-dump enable
(1) In the event of a system crash, this feature will
    cause a core file to be written out.
(2) Core file generation may take up to 20 minutes.
(3) Selected core file is slot0:crash.hz
(4) Please make sure the above device has been installed,
    and ready to use
Core-dump enabled
Console> (enable)
```

This example shows how to disable the core dump feature:

```
Console> (enable) set system core-dump disable
Core-dump disabled
Console> (enable)
```

# set system core-file

Use the **set system core-file** command to specify the core image filename.

```
set system core-file {device:filename}
```

<b>Syntax Description</b>	<i>device</i>	Device where the core image file resides; valid values are <b>bootflash</b> and <b>slot0</b> .
	<i>filename</i>	(Optional) Name of the core image file.

**Defaults** The default *filename* is “crashinfo.”

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A device name check is performed when you enter the **set system core-file** command. If a valid device name is not found, an error message displays.

When a core dump occurs, the actual file written out will append the date to the filename in this format: `_{yymmdd}-{hhmmss}`.

**Examples** This example shows how to use the default core image filename:

```
Console> (enable) set system core-file bootflash:
Attach default filename crashinfo to the device
System core-file set.
Console> (enable)
```

This example shows how to set the core image filename:

```
Console> (enable) set system core-file slot0:abc
System core-file set.
Console> (enable)
```

**Related Commands** [set system core-dump](#)

# set system countrycode

Use the **set system countrycode** command to specify the country where the system is physically located.

```
set system countrycode code
```

---

<b>Syntax Description</b>	<i>code</i> Country code; see the “Usage Guidelines” section for format information.
---------------------------	--

---

---

<b>Defaults</b>	The default is US (United States).
-----------------	------------------------------------

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Usage Guidelines</b>	The country code is a two-letter country code taken from ISO-3166 (for example, VA=Holy See [Vatican City State], VU=Vanuatu, and TF=French Southern Territories).
-------------------------	--

---

---

<b>Examples</b>	This example shows how to set the system country code:
-----------------	--

---

```
Console> (enable) set system countrycode US  
Country code is set to US.  
Console> (enable)
```

# set system crossbar-fallback

Use the **set system crossbar-fallback** command to select the action taken when the Switch Fabric Module fails.

```
set system crossbar-fallback {bus-mode | none}
```

---

## Syntax Description

<b>bus-mode</b>	Fails to the system bus.
<b>none</b>	Does not fail over to the system bus.

---

## Defaults

The default is **bus-mode**.

---

## Command Types

Switch command.

---

## Command Modes

Privileged.

---

## Usage Guidelines

You can either have the Switch Fabric Module fail over to the bus, or have the switch not fail over at all (in which case, the switch should be down).

This command is supported on systems configured with a Switch Fabric Module and the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

---

## Examples

This example shows how to set the Switch Fabric Module to fail over to the system bus:

```
Console> (enable) set system crossbar-fallback bus-mode
System crossbar-fallback set to bus-mode.
Console> (enable)
```

This example shows how to set the Switch Fabric Module to not fail over:

```
Console> (enable) set system crossbar-fallback none
System crossbar-fallback set to none.
Console> (enable)
```

---

## Related Commands

[show fabric channel](#)

# set system highavailability

Use the **set system highavailability** command to enable or disable high system availability for the switch.

```
set system highavailability {enable | disable}
```

Syntax Description	enable	Deactivates system high availability.
	disable	Activates system high availability.

**Defaults** The default is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** High availability provides Layer 2 and Layer 3 protocol redundancy.

If you enable high availability while the redundant supervisor engine is running, the switch checks the version compatibility between the two supervisor engines. If the versions are compatible, database synchronization occurs. When you disable high availability, database synchronization does not occur and protocols restart on the redundant supervisor engine after switchover.

If you disable high availability from the enabled state, synchronization from the active supervisor engine is stopped. On the redundant supervisor engine, current synchronization data is discarded. If you enable high availability from the disabled state, synchronization from the active supervisor engine to the redundant supervisor engine starts (if you have a redundant supervisor engine and its image version is compatible with the active supervisor engine).

**Examples** This example shows how to enable high availability:

```
Console> (enable) set system highavailability enable
System high availability enabled.
Console> (enable)
```

This example shows how to disable high availability:

```
Console> (enable) set system highavailability disable
System high availability disabled.
Console> (enable)
```

**Related Commands** [set system highavailability versioning](#)  
[show system highavailability](#)

# set system highavailability versioning

Use the **set system highavailability versioning** command to enable and disable support for supervisor engine image versioning.

```
set system highavailability versioning {enable | disable}
```

## Syntax Description

<b>enable</b>	Activates system high-availability versioning.
<b>disable</b>	Deactivates system high-availability versioning.

## Defaults

The default is disabled.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

The high-availability versioning feature allows the Catalyst 6500 series switch to run different images on the active and redundant supervisor engines. When you enable image versioning, Flash image synchronization (from active to the redundant supervisor engines) does not occur, allowing active and redundant supervisor engines to run different images.



### Caution

When you disable image versioning, the active and redundant supervisor engines must run the same image version.

If you disable the image versioning option from the enabled state, no additional action is necessary on the redundant supervisor engine (the redundant supervisor engine should be running the same image as the active supervisor engine). If you want to load a different image, you have to restart the redundant supervisor engine.

If you enable the image versioning option from the disabled state and you have a redundant supervisor engine and active supervisor engine running a different image than that of the active supervisor engine, Flash synchronization will copy the active supervisor engine image to the redundant supervisor engine image and then restart it.

If you enable the image versioning option on the active supervisor engine and the redundant supervisor engine is running a different image, the NVRAM synchronization cannot occur because the NVRAM versions are not compatible. If this is the case, after switchover, the old NVRAM configuration on the supervisor engine is used.

## Examples

This example shows how to enable high-availability versioning:

```
Console> (enable) set system highavailability versioning enable
Image versioning enabled.
Console> (enable)
```

This example shows how to disable high-availability versioning:

```
Console> (enable) set system highavailability versioning disable  
Image versioning disabled.  
Console> (enable)
```

---

**Related Commands**

[set system highavailability](#)  
[show system highavailability](#)

# set system location

Use the **set system location** command to identify the location of the system.

```
set system location [location_string]
```

---

<b>Syntax Description</b>	<i>location_string</i> (Optional) Text string that indicates where the system is located.
---------------------------	---

---

---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Usage Guidelines</b>	If you do not specify a location string, the system location is cleared.
-------------------------	--

---

---

<b>Examples</b>	This example shows how to set the system location string: <pre>Console&gt; (enable) <b>set system location Closet 230 4/F</b> System location set. Console&gt; (enable)</pre>
-----------------	--

---

---

<b>Related Commands</b>	<a href="#">show system</a>
-------------------------	-----------------------------

---

# set system modem

Use the **set system modem** command to enable or disable modem control lines on the console port.

```
set system modem { enable | disable }
```

Syntax Description	enable	Deactivates modem control lines on the console port.
	disable	Activates modem control lines on the console port.

**Defaults** The default is modem control lines are disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to disable modem control lines on the console port:

```
Console> (enable) set system modem disable
Modem control lines disabled on console port.
Console> (enable)
```

**Related Commands** [show system](#)

# set system name

Use the **set system name** command to configure a name for the system.

```
set system name [name_string]
```

---

<b>Syntax Description</b>	<i>name_string</i> (Optional) Text string that identifies the system.
---------------------------	---

---

---

<b>Defaults</b>	The default is no system name is configured.
-----------------	--

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Usage Guidelines</b>	<p>If you use the <b>set system name</b> command to assign a name to the switch, the switch name is used as the prompt string. However, if you specify a different prompt string using the <b>set prompt</b> command, that string is used for the prompt.</p>
-------------------------	---

If you do not specify a system name, the system name is cleared and a DNS lookup is initiated for a system name. If a name is found, that is the name used; if no name is found, no name is designated.

The system name can be 255 characters long, and the prompt can be 20 characters long. The system name is truncated appropriately when used as a prompt; a greater-than symbol (>) is appended to the truncated system name. If the system name was found from a DNS lookup, it is truncated to remove the domain name.

If the prompt is obtained using the system name, it is updated whenever the system name changes. You can overwrite this prompt any time by setting the prompt manually. Any change in the prompt is reflected in all current open sessions.

If you do not specify a name, the system name is cleared.

---

<b>Examples</b>	This example shows how to set the system name to Information Systems:
-----------------	---

```
Console> (enable) set system name Information Systems  
System name set.  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">set prompt</a> <a href="#">show system</a>
-------------------------	---

---

# set system switchmode allow

Use the **set system switchmode allow** command to configure the switching mode for the system.

```
set system switchmode allow {truncated | bus-only}
```

Syntax Description	truncated	Specifies truncated mode; see the “Usage Guidelines” section for additional information.
	bus-only	Forces the system to be in flow-through mode.

**Defaults** The default is truncated.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you install a Switch Fabric Module in a Catalyst 6500 series switch, the traffic is forwarded to and from modules in one of the following modes:

- **Flow-through mode**—In this mode, data passes between the local bus and the supervisor engine bus. This mode is used for traffic to or from nonfabric-enabled modules.
- **Truncated mode**—In this mode, only the truncated data (the first 64 bytes of the frame) is sent over the switch fabric channel if both the destination and the source modules are fabric-enabled modules. If either the source or destination is not a fabric-enabled module, the data goes through the switch fabric channel and the data bus. The Switch Fabric Module does not get involved when traffic is forwarded between nonfabric-enabled modules.
- **Compact mode**—In this mode, a compact version of the DBus header is forwarded over the switch fabric channel, delivering the best possible switching rate. Nonfabric-enabled modules do not support the compact mode and will generate CRC errors if they receive frames in compact mode. This mode is only used if nonfabric-enabled modules are not installed in the chassis.

If you enter the **truncated** keyword and your system does not contain nonfabric-enabled modules, the system is placed in compact mode.

If two or more fabric-enabled modules are installed in your system, forwarding between these modules occurs in truncated mode.

**Examples** This example shows how to set the switching mode to truncated:

```
Console> (enable) set system switchmode allow truncated
System switchmode allow set to truncated.
Console> (enable)
```

This example shows how to set the switching mode to bus-only:

```
Console> (enable) set system switchmode allow bus-only  
System switchmode allow set to bus-only.  
Console> (enable)
```

**Related Commands**     [show system switchmode](#)

# set tacacs attempts

Use the **set tacacs attempts** command to configure the maximum number of login attempts allowed to the TACACS+ server.

**set tacacs attempts** *count*

<b>Syntax Description</b>	<i>count</i>	Number of login attempts allowed; valid values are from 1 to 10.
---------------------------	--------------	--

<b>Defaults</b>	The default is three attempts.
-----------------	--------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Examples</b>	This example shows how to configure the TACACS+ server to allow a maximum of six login attempts:
-----------------	--

```
Console> (enable) set tacacs attempts 6
Tacacs number of attempts set to 6.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show tacacs</a>
-------------------------	-----------------------------

# set tacacs directedrequest

Use the **set tacacs directedrequest** command to enable or disable the TACACS+ directed-request option. When enabled, you can direct a request to any of the configured TACACS+ servers and only the username is sent to the specified server.

**set tacacs directedrequest { enable | disable }**

Syntax Description	<b>enable</b>	Sends the portion of the address before the @ sign (the username) to the host specified after the @ sign.
	<b>disable</b>	Sends the entire address string to the default TACACS+ server.

**Defaults** The default is the TACACS+ directed-request option is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** When you enable TACACS+ directed-request, you must specify a configured TACACS+ server after the @ sign. If the specified host name does not match the IP address of a configured TACACS+ server, the request is rejected. When TACACS+ directed-request is disabled, the Catalyst 6500 series switch queries the list of servers beginning with the first server in the list and then sends the entire string, accepting the first response from the server. This command is useful for sites that have developed their own TACACS+ server software to parse the entire address string and make decisions based on the contents of the string.

**Examples** This example shows how to enable the **tacacs directedrequest** option:

```
Console> (enable) set tacacs directedrequest enable
Tacacs direct request has been enabled.
Console> (enable)
```

**Related Commands** [show tacacs](#)

# set tacacs key

Use the **set tacacs key** command to set the key for TACACS+ authentication and encryption.

**set tacacs key** *key*

<b>Syntax Description</b>	<i>key</i> Printable ASCII characters used for authentication and encryption.
---------------------------	---

<b>Defaults</b>	The default value of <i>key</i> is null.
-----------------	--

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	<p>The key must be the same key used on the TACACS+ server. All leading spaces are ignored. Spaces within the key and at the end of the key are included. Double quotation marks are not required, even if there are spaces between words in the key, unless the quotation marks themselves are part of the key. The key can consist of any printable ASCII characters except the tab character.</p> <p>The key length must be less than 100 characters long.</p>
-------------------------	---

<b>Examples</b>	This example shows how to set the authentication and encryption key:
-----------------	--

```
Console> (enable) set tacacs key Who Goes There
The tacacs key has been set to Who Goes There.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">clear spantree uplinkfast</a> <a href="#">show tacacs</a>
-------------------------	--

# set tacacs server

Use the **set tacacs server** command to define a TACACS+ server.

```
set tacacs server ip_addr [primary]
```

<b>Syntax Description</b>	<i>ip_addr</i>	IP address of the server on which the TACACS+ server resides.
	<b>primary</b>	(Optional) Designates the specified server as the primary TACACS+ server.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can configure a maximum of three servers. The primary server, if configured, is contacted first. If no primary server is configured, the first server configured becomes the primary server.

**Examples** This example shows how to configure the server on which the TACACS+ server resides and to designate it as the primary server:

```
Console> (enable) set tacacs server 170.1.2.20 primary  
170.1.2.20 added to TACACS server table as primary server.  
Console> (enable)
```

**Related Commands** [clear tacacs server](#)  
[show tacacs](#)

## set tacacs timeout

Use the **set tacacs timeout** command to set the response timeout interval for the TACACS+ server daemon. The TACACS+ server must respond to a TACACS+ authentication request before this interval expires or the next configured server is queried.

**set tacacs timeout** *seconds*

---

<b>Syntax Description</b>	<i>seconds</i>	Timeout response interval in seconds; valid values are from 1 to 255.
---------------------------	----------------	---

---

---

<b>Defaults</b>	The default is 5 seconds.
-----------------	---------------------------

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

<b>Examples</b>	This example shows how to set the response timeout interval for the TACACS+ server to 8 seconds:
-----------------	--

```
Console> (enable) set tacacs timeout 8
Tacacs timeout set to 8 seconds.
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">show tacacs</a>
-------------------------	-----------------------------

# set test diaglevel

Use the **set test diaglevel** command to set the diagnostic level.

```
set test diaglevel { complete | minimal | bypass }
```

Syntax Description	complete	minimal	bypass
	Specifies complete diagnostics.	Specifies minimal diagnostics.	Specifies bypass diagnostics.

**Defaults** The default is minimal diagnostics. See the “Usage Guidelines” section for more information about the three diagnostic levels.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Setting the diagnostic level determines the level of testing that occurs when the system or module is reset. The three levels are as follows:

- **complete**—This level runs all tests.
- **minimal**—This level runs only EARL tests for the supervisor engine and loopback tests for all ports in the system.
- **bypass**—This level skips all tests.



**Note** Although the default is **minimal**, we recommend that you set the diagnostic level at **complete**.

**Examples** This example shows how to set the diagnostic level to complete:

```
Console> (enable) set test diaglevel complete
Diagnostic level set to complete.
Console> (enable)
```

This example shows how to set the diagnostic level to bypass:

```
Console> (enable) set test diaglevel bypass
Diagnostic level set to bypass.
Console> (enable)
```

**Related Commands** [show test](#)

# set time

Use the **set time** command to change the time of day on the system clock.

```
set time [day_of_week] [mm/dd/yy] [hh:mm:ss]
```

<b>Syntax Description</b>	<i>day_of_week</i> (Optional) Day of the week.
	<i>mm/dd/yy</i> (Optional) Month, day, and year.
	<i>hh:mm:ss</i> (Optional) Current time in 24-hour format.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to set the system clock to Saturday, October 31, 1998, 7:50 a.m:

```
Console> (enable) set time sat 10/31/98 7:50
Sat Oct 31 1998, 07:50:00
Console> (enable)
```

**Related Commands** [show time](#)

# set timezone

Use the **set timezone** command to set the time zone for the system.

```
set timezone [zone_name] [hours [minutes]]
```

Syntax Description	
<i>zone_name</i>	(Optional) Name of the time zone to be displayed.
<i>hours</i>	(Optional) Number of hours offset from UTC.
<i>minutes</i>	(Optional) Number of minutes offset from UTC. If the specified <i>hours</i> value is a negative number, then the <i>minutes</i> value is assumed to be negative as well.

**Defaults** The default is the time zone is set to UTC.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **set timezone** command is effective only when Network Time Protocol (NTP) is running. If you set the time explicitly and NTP is disengaged, the **set timezone** command has no effect. If you have enabled NTP and have not entered the **set timezone** command, the Catalyst 6500 series switch displays UTC by default.

**Examples** This example shows how to set the time zone to pacific standard time with an offset of minus 8 hours from UTC:

```
Console> (enable) set timezone PST -8
Timezone set to "PST", offset from UTC is -8 hours.
Console> (enable)
```

**Related Commands** [clear timezone](#)  
[show timezone](#)

# set traffic monitor

Use the **set traffic monitor** command to configure the threshold at which a high-traffic log will be generated.

**set traffic monitor** *threshold*

<b>Syntax Description</b>	<i>threshold</i> <b>1</b> to <b>100</b> percent.
---------------------------	--

<b>Defaults</b>	The threshold is set to 100 percent; no high-traffic log is created.
-----------------	--

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	If backplane traffic exceeds the threshold configured by the <b>set traffic monitor</b> command, a high-traffic log is created. If the threshold is set to 100 percent, no high-traffic system warning is generated.
-------------------------	--

<b>Examples</b>	This example shows how to set the high-traffic threshold to 80 percent:
-----------------	---

```
Console> (enable) set traffic monitor 80
Traffic monitoring threshold set to 80%.
Console> (enable)
```

<b>Related Commands</b>	<a href="#">show traffic</a>
-------------------------	------------------------------

# set trunk

Use the **set trunk** command to configure trunk ports and to add VLANs to the allowed VLAN list for existing trunks.

```
set trunk mod/port { on | off | desirable | auto | nonegotiate } [vlans] [isl | dot1q | negotiate]
```

```
set trunk all off
```

Syntax Description	
<i>mod/port</i>	Number of the module and the port on the module.
<b>on</b>	Forces the port to become a trunk port and persuade the neighboring port to become a trunk port. The port becomes a trunk port even if the neighboring port does not agree to become a trunk.
<b>off</b>	Forces the port to become a nontrunk port and persuade the neighboring port to become a nontrunk port. The port becomes a nontrunk port even if the neighboring port does not agree to become a nontrunk port.
<b>desirable</b>	Causes the port to negotiate actively with the neighboring port to become a trunk link.
<b>auto</b>	Causes the port to become a trunk port if the neighboring port tries to negotiate a trunk link.
<b>nonegotiate</b>	Forces the port to become a trunk port but prevent it from sending DTP frames to its neighbor.
<i>vlan</i> s	(Optional) VLANs to add to the list of allowed VLANs on the trunk; valid values are from 1 to 1000 and 1025 to 4094.
<b>isl</b>	(Optional) Specifies an ISL trunk on a Fast or Gigabit Ethernet port.
<b>dot1q</b>	(Optional) Specifies an IEEE 802.1Q trunk on a Fast or Gigabit Ethernet port.
<b>negotiate</b>	(Optional) Specifies that the port become an ISL (preferred) or 802.1Q trunk, depending on the configuration and capabilities of the neighboring port.
<b>all off</b>	Turns off trunking on all ports.

**Defaults** The default port mode is **auto**.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

The following usage guidelines apply when using the **set trunk** command:

- If a trunk-type keyword (**isl**, **dot1q**, **negotiate**) is not specified when configuring an EtherChannel trunk, the current trunk type is not affected.
- To return a trunk to its default trunk type and mode, enter the **clear trunk mod/port** command.

- Trunking capabilities are hardware-dependent. Refer to the *Catalyst 6000 Family Module Installation Guide* to determine the trunking capabilities of your hardware, or enter the **show port capabilities** command.
- Catalyst 6500 series switches use the DTP to negotiate trunk links automatically on EtherChannel ports. Whether a port will negotiate to become a trunk port depends on both the mode and the trunk type specified for that port. Refer to the *Catalyst 6500 Series Software Configuration Guide* for detailed information on how trunk ports are negotiated.
- DTP is a point-to-point protocol. However, some internetworking devices might improperly forward DTP frames. You can avoid this problem by ensuring that trunking is turned **off** on ports connected to non-Catalyst 6500 series switch devices if you do not intend to trunk across those links. When enabling trunking on a link to a Cisco router, enter the **noneg** keyword to cause the port to become a trunk but not generate DTP frames.
- To remove VLANs from the allowed list for a trunk, enter the **clear trunk mod/port vlans** command. When you first configure a port as a trunk, the **set trunk** command always adds *all* VLANs to the allowed VLAN list for the trunk, even if you specify a VLAN range (the specified VLAN range is ignored).
- To remove VLANs from the allowed list, enter the **clear trunk mod/port vlans** command. To later add VLANs that were removed, enter the **set trunk mod/port vlans** command.
- You cannot change the allowed VLAN range on the MSM port. The MSM port can be configured only as an IEEE 802.1Q-type trunk.
- For trunking to be negotiated on EtherChannel ports, the ports must be in the same VTP domain. However, you can use the **on** or **noneg** mode to force a port to become a trunk, even if it is in a different domain.

## Examples

This example shows how to set port 2 on module 1 as a trunk port:

```
Console> (enable) set trunk 1/2 on
Port(s) 1/2 trunk mode set to on.
Console> (enable)
```

This example shows how to add VLANs 5 through 50 to the allowed VLAN list for a trunk port (VLANs were previously removed from the allowed list with the **clear trunk** command):

```
Console> (enable) set trunk 1/1 5-50
Adding vlans 5-50 to allowed list.
Port(s) 1/1 allowed vlans modified to 1,5-50,101-1005.
Console> (enable)
```

This example shows how to set port 5 on module 4 as an 802.1Q trunk port in **desirable** mode:

```
Console> (enable) set trunk 4/5 desirable dot1q
Port(s) 4/5 trunk mode set to desirable.
Port(s) 4/5 trunk type set to dot1q.
Console> (enable)
```

## Related Commands

**clear trunk**  
**set vtp**  
**show trunk**  
**show vtp statistics**

# set uddl

Use the **set uddl** command to enable or disable the UDLD information display on specified ports or globally on all ports.

**set uddl enable | disable** [*mod/port*]

Syntax Description	enable	enable
	<b>enable</b>	Enables the UDLD information display.
	<b>disable</b>	Disables the UDLD information display.
	<i>mod/port</i>	(Optional) Number of the module and port on the module.

## Defaults

The defaults are as follows:

- UDLD global enable state—Globally disabled.
- UDLD per-port enable state for fiber-optic media—Enabled on all Ethernet fiber-optic ports.
- UDLD per-port enable state for twisted-pair (copper) media—Disabled on all Ethernet 10/100 and 1000BASE-TX ports.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines

This command is not supported by the NAM.

Whenever a unidirectional connection is detected, UDLD displays a syslog message to notify you and the network management application (through SNMP) that the port on which the misconfiguration has been detected has been disabled.

If you enter the global **set uddl enable** or **disable** command, UDLD is globally configured. If UDLD is globally disabled, UDLD is automatically disabled on all interfaces, but the per-port enable (or disable) configuration is not changed. If UDLD is globally enabled, whether UDLD is running on an interface or not depends on its per-port configuration.

UDLD is supported on both Ethernet fiber and copper interfaces. UDLD can only be enabled on Ethernet fiber or copper interfaces.

## Examples

This example shows how to enable the UDLD message display for port 1 on module 2:

```
Console> (enable) set uddl enable 2/1
UDLD enabled on port 2/1.
Warning:UniDirectional Link Detection
should be enabled only on ports not connected to hubs,
media converters or similar devices.
Console> (enable)
```

This example shows how to disable the UDL message display for port 1 on module 2:

```
Console> (enable) set udd disable 2/1
UDLD disabled on port 2/1.
Warning:UniDirectional Link Detection
should be enabled only on ports not connected to hubs,
media converters or similar devices.
Console> (enable)
```

This example shows how to enable the UDL message display for all ports on all modules:

```
Console> (enable) set udd enable
UDLD enabled globally.
```

```
Console> (enable)
```

This example shows how to disable the UDL message display for all ports on all modules:

```
Console> (enable) set udd disable
UDLD disabled globally
Console> (enable)
```

---

Related Commands [show udd](#)

# set udd aggressive-mode

Use the **set udd aggressive-mode** command to enable or disable the UDLD aggressive mode on specified ports.

**set udd aggressive-mode enable | disable** *mod/port*

Syntax Description	enable	Disables UDLD aggressive mode.
	<b>disable</b>	Enables UDLD aggressive mode.
	<i>mod/port</i>	Number of the module and port on the module.

**Defaults** The default is aggressive mode is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can use the aggressive mode in cases in which a port that sits on a bidirectional link stops receiving packets from its neighbor. When this happens, if aggressive mode is enabled on the port, UDLD will try to reestablish the connection with the neighbor. If connection is not reestablished after eight failed retries, the port is error disabled.

We recommend that you use this command on point-to-point links between Cisco switches only.

This command is not supported by the NAM.

**Examples** This example shows how to enable aggressive mode:

```
Console> (enable) set udd aggressive-mode enable 2/1
Aggressive UDLD enabled on port 5/13.
Warning:Aggressive Mode for UniDirectional Link Detection
should be enabled only on ports not connected to hubs,
media converters or similar devices.
Console> (enable)
```

**Related Commands** [set udd](#)  
[show udd](#)

# set udd interval

Use the **set udd interval** command to set the UDLD message interval timer.

**set udd interval** *interval*

---

<b>Syntax Description</b>	<i>interval</i> Message interval in seconds; valid values are from 7 to 90 seconds.
---------------------------	---

---

---

<b>Defaults</b>	The default is 15 seconds.
-----------------	----------------------------

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Privileged.
----------------------	-------------

---

---

<b>Usage Guidelines</b>	This command is not supported by the NAM.
-------------------------	---

---

---

<b>Examples</b>	This example shows how to set the message interval timer:
-----------------	---

```
Console> (enable) set udd interval 90  
UDLD message interval set to 90 seconds  
Console> (enable)
```

---

<b>Related Commands</b>	<a href="#">set udd</a> <a href="#">show udd</a>
-------------------------	---

---

## set vlan

Use the **set vlan** command to group ports into a VLAN, set the private VLAN type, map or unmap VLANs to or from an instance, or specify an 802.1x port to a VLAN.

```
set vlan {vlans} {mod/ports}
```

```
set vlan {vlans} [name name] [type type] [state state] [said said] [mtu mtu]
[bridge bridge_num] [mode bridge_mode] [stp stp_type] [translation vlan_num]
[aremaxhop hopcount] [pvlan-type pvlan_type] [mistp-instance mistp_instance]
[ring hex_ring_number] [decring decimal_ring_number] [parent vlan_num]
[backupcrf {off | on}] [stemaxhop hopcount] [rspan]
```

Syntax Description		
<i>vlans</i>		Number identifying the VLAN; valid values are from 1 to 1000 and from 1025 to 4094.
<i>mod/ports</i>		Number of the module and ports on the module belonging to the VLAN.
<b>name</b> <i>name</i>		(Optional) Defines a text string used as the name of the VLAN; valid values are from 1 to 32 characters.
<b>type</b> <i>type</i>		(Optional) Identifies the VLAN type.
<b>state</b> <i>state</i>		(Optional) Specifies whether the state of the VLAN is active or suspended.
<b>said</b> <i>said</i>		(Optional) Specifies the security association identifier; valid values are from 1 to 4294967294.
<b>mtu</b> <i>mtu</i>		(Optional) Specifies the maximum transmission unit (packet size, in bytes) that the VLAN can use; valid values are from 576 to 18190.
<b>bridge</b> <i>bridge_num</i>		(Optional) Specifies the identification number of the bridge; valid values are hexadecimal numbers from 0x1 to 0xF.
<b>mode</b> <i>bridge_mode</i>		(Optional) Specifies the bridge mode; valid values are <b>srt</b> and <b>srb</b> .
<b>stp</b> <i>stp_type</i>		(Optional) Specifies the STP type; valid values are <b>ieee</b> , <b>ibm</b> , and <b>auto</b> .
<b>translation</b> <i>vlan_num</i>		(Optional) Specifies a translational VLAN used to translate FDDI or Token Ring to Ethernet; valid values are from 1 to 1000 and from 1025 to 4094.
<b>aremaxhop</b> <i>hopcount</i>		(Optional) Specifies the maximum number of hops for All-Routes Explorer frames; valid values are from 1 to 13.
<b>pvlan-type</b> <i>pvlan-type</i>		(Optional) Keyword and options to specify the private VLAN type. See the “Usage Guidelines” section for valid values.
<b>mistp-instance</b> <i>mistp_instance</i>		(Optional) Specifies the MISTP instance; valid values are <b>none</b> and from 1 to 16.
<b>ring</b> <i>hex_ring_number</i>		(Optional) Keyword to specify the VLAN as the primary VLAN in a private VLAN.
<b>decring</b> <i>decimal_ring_number</i>		(Optional) Specifies the decimal ring number; valid values are from 1 to 4095.
<b>parent</b> <i>vlan_num</i>		(Optional) Specifies the VLAN number of the parent VLAN; valid values are from 1 to 1000 and from 1025 to 4094.

<b>backupcrf off / on</b>	(Optional) Specifies whether the TrCRF is a backup path for traffic.
<b>stemaxhop hopcount</b>	(Optional) Specifies the maximum number of hops for Spanning Tree Explorer frames; valid values are from 1 to 14.
<b>rspan</b>	(Optional) Creates a VLAN for remote SPAN.

### Defaults

The default values are as follows:

- Switched Ethernet ports and Ethernet repeater ports are in VLAN 1.
- *said* is 100001 for VLAN 1, 100002 for VLAN 2, 100003 for VLAN 3, and so forth.
- *type* is Ethernet.
- *mtu* is 1500 bytes.
- *state* is active.
- *hopcount* is 7.
- *pvlan type* is none.
- *mistp\_instance* is no new instances have any VLANs mapped. For an existing VLAN, the existing instance configuration is used.

### Command Types

Switch command.

### Command Modes

Privileged.

### Usage Guidelines

This command is not supported by the NAM.

If you are configuring normal-range VLANs, you cannot use the **set vlan** command until the Catalyst 6500 series switch is either in VTP transparent mode (**set vtp mode transparent**) or until a VTP domain name has been set (**set vtp domain name**). To create a private VLAN, UTP mode must be transparent.

VLAN 1 parameters are factory configured and cannot be changed.

If you specify a range of VLANs, you cannot use the VLAN name.

If you enter the **mistp-instance none** command, the specified VLANs are unmapped from any instance they are mapped to.

The **set vlan vlan\_num mistp-instance mistp\_instance** command is available in PVST+ mode.

You cannot set multiple VLANs for ISL ports using this command. The VLAN name can be from 1 to 32 characters in length. If you are adding a new VLAN or modifying an existing VLAN, the VLAN number must be within the range of 1 to 1000 and 1025 to 4094.

If you want to use the extended-range VLANs (1025 to 4094), you must enable the MAC address reduction feature using the **set spantree macreduction** command. When you enable MAC address reduction, the pool of MAC addresses used for the VLAN spanning tree is disabled, leaving a single MAC address that identifies the switch.

If you use the **rspan** keyword for remote SPAN VLANs, you should not configure an access port (except the remote SPAN destination ports) on these VLANs. Learning is disabled for remote SPAN VLANs.

If you use the **rspan** keyword for remote SPAN VLANs, only the **name** *name* and the **state** {**active** | **suspend**} variables are supported.

The **stemaxhop** *hopcount* parameter is valid only when defining or configuring TrCRFs.

The **bridge** *bridge\_num*, **mode** *bridge\_mode*, **stp** *stp\_type*, and **translation** *vlan\_num* keywords and values are supported only when the Catalyst 6500 series switch is used as a VTP server for Catalyst 5000 family switches in the Token Ring and FDDI networks.

You must configure a private VLAN on the supervisor engine.

Valid values for *pvlan-type* are as follows:

- **primary** specifies the VLAN as the primary VLAN in a private VLAN.
- **isolated** specifies the VLAN as the isolated VLAN in a private VLAN.
- **community** specifies the VLAN as the community VLAN in a private VLAN.
- **twoway-community** specifies the VLAN as a bidirectional community VLAN that carries the traffic among community ports and to and from community ports to and from the MSFC.
- **none** specifies that the VLAN is a normal Ethernet VLAN, not a private VLAN.

Only regular VLANs with no access ports assigned to them can be used in private VLANs. Do not use the **set vlan** command to add ports to a private VLAN; use the **set pvlan** command to add ports to a private VLAN.

VLANs 1001, 1002, 1003, 1004, and 1005 cannot be used in private VLANs.

VLANs 1025 to 4094 are extended-range VLANs.

VLANs in a suspended state do not pass packets.

## Examples

This example shows how to set VLAN 850 to include ports 3 through 7 on module 3:

```
Console> (enable) set vlan 850 3/4-7
VLAN 850 modified.
VLAN Mod/Ports
-----
850 3/4-7
Console> (enable)
```

This example shows how to set VLAN 7 as a primary VLAN:

```
Console> (enable) set vlan 7 pvlan-type primary
Console> (enable)
```

This example shows how to set VLAN 901 as an isolated VLAN:

```
Console> (enable) set vlan 901 pvlan-type isolated
Console> (enable)
```

This example shows how to set VLAN 903 as a community VLAN:

```
Console> (enable) set vlan 903 pvlan-type community
Console> (enable)
```

This example shows how to unmap all instances currently mapped to VLAN 5:

```
Console> (enable) set vlan 5 mistp-instance none
Vlan 5 configuration successful
Console> (enable)
```

---

**Related Commands**

**clear config pvlan**  
**clear pvlan mapping**  
**clear vlan**  
**set pvlan**  
**set spantree macreduction**  
**set vlan mapping**  
**show pvlan**  
**show pvlan mapping**  
**show vlan**

# set vlan mapping

Use the **set vlan mapping** command to map reserved VLANs to nonreserved VLANs or map 802.1Q VLANs to ISL VLANs.

```
set vlan mapping reserved vlan non-reserved vlan
```

```
set vlan mapping dot1q 1q_vlan_num isl isl_vlan_num
```

Syntax Description		
<b>reserved</b> <i>vlan</i>	Specifies the reserved VLAN; valid values are from 1006 to 1024.	
<b>non-reserved</b> <i>vlan</i>	Specifies the nonreserved VLAN; valid values are from 1 to 1000 and from 1025 to 4094.	
<b>dot1q</b> <i>1q_vlan_num</i>	Specifies the 802.1Q VLAN; valid values are from 1001 to 4094.	
<b>isl</b> <i>isl_vlan_num</i>	Specifies the ISL VLAN; valid values are from 1 to 1024.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** VLAN and MISTP instance mapping can be set only on the switch that is in either VTP server mode or in transparent mode.

IEEE 802.1Q VLAN trunks support VLANs 1 through 4094. ISL VLAN trunks support VLANs 1 through 1024 (1005 to 1024 are reserved). The switch automatically maps 802.1Q VLANs 1000 and lower to ISL VLANs with the same number.

Use this feature to map 802.1Q VLANs above 1000 to ISL VLANs.

The total of all mappings must be less than or equal to eight. Only one 802.1Q VLAN can be mapped to an ISL VLAN. For example, if 802.1Q VLAN 800 has been automatically mapped to ISL VLAN 800, do not manually map any other 802.1Q VLANs to ISL VLAN 800.

You cannot overwrite existing 802.1Q VLAN mapping. If the 802.1Q VLAN number already exists, the command is aborted. You must first clear that mapping.

The **reserved** *vlan* range is 1002 to 1024. You can map the entire reserved range with the exception of the default media VLANs 1002 to 1005.

You cannot overwrite existing VLAN mapping. If the VLAN number already exists, the command is aborted. You must first clear that mapping.

If the VLAN number does not exist, then either of the following occurs:

- If the switch is in server or transparent mode, the VLAN is created with all default values.
- If the switch is in client mode, then the command proceeds without creating the VLAN. A warning will be given indicating that the VLAN does not exist.

If the table is full, the command is aborted with an error message indicating the table is full. The dot1q VLANs are rejected if any extended-range VLANs are present.

---

**Examples**

This example shows how to map reserved VLAN 1010 to nonreserved VLAN 4000:

```
Console> (enable) set vlan mapping reserved 1010 non-reserved 4000
Vlan 1010 successfully mapped to 4000.
Console> (enable)
```

This example shows the display if you enter an existing mapping:

```
Console> (enable) set vlan mapping reserved 1011 non-reserved 4001
Vlan mapping from vlan 1011 to vlan 4001 already exists.
Console> (enable)
```

This example shows the display if the mapping table is full:

```
Console> (enable) set vlan mapping reserved 1010 non-reserved 4000
Vlan mapping table full. Maximum of 8 mappings allowed.
Console> (enable)
```

This example shows how to map VLAN 850 to ISL VLAN 1022:

```
Console> (enable) set vlan mapping dot1q 850 isl 1022
Vlan 850 configuration successful
Vlan mapping successful
Console> (enable)
```

This example shows the display if you enter a VLAN that does not exist:

```
Console> (enable) set vlan mapping dot1q 2 isl 1016
Vlan Mapping Set
Warning: Vlan 2 Nonexistent
Console> (enable)
```

This example shows the display if you enter an existing mapping:

```
Console> (enable) set vlan mapping dot1q 3 isl 1022
1022 exists in the mapping table. Please clear the mapping first.
Console> (enable)
```

This example shows the display if the mapping table is full:

```
Console> (enable) set vlan mapping dot1q 99 isl 1017
Vlan Mapping Table Full.
Console> (enable)
```

---

**Related Commands**

[clear vlan mapping](#)  
[show vlan](#)

# set vmpls downloadmethod

Use the **set vmpls downloadmethod** command to specify whether to use TFTP or rcp to download the VMPS database.

```
set vmpls downloadmethod {rcp | tftp} [username]
```

<b>Syntax Description</b>	<b>rcp</b>	Specifies rcp as the method for downloading the VLAN Membership Policy Server (VMPS) database.
	<b>tftp</b>	Specifies TFTP as the method for downloading the VMPS database.
	<i>username</i>	(Optional) Username for downloading with rcp.

**Defaults** If no method is specified, TFTP will be used.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The *username* option is not allowed if you specify **tftp** as the download method.

**Examples** This example shows how to specify the method for downloading the VMPS database:

```
Console> (enable) set vmpls downloadmethod rcp jdoe
vmpls downloadmethod : RCP
rcp vmpls username   : jdoe
Console> (enable)
```

**Related Commands**

- [download](#)
- [set rcp username](#)
- [show vmpls](#)

## set vmpls downloadserver

Use the **set vmpls downloadserver** command to specify the IP address of the TFTP or rcp server from which the VMPS database is downloaded.

```
set vmpls downloadserver ip_addr [filename]
```

Syntax Description	<i>ip_addr</i>	IP address of the TFTP or rcp server from which the VMPS database is downloaded.
	<i>filename</i>	(Optional) VMPS configuration filename on the TFTP or rcp server.

**Defaults** If *filename* is not specified, the **set vmpls downloadserver** command uses the default filename `vmpls-config-database.1`.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to specify the server from which the VMPS database is downloaded and how to specify the configuration filename:

```
Console> (enable) set vmpls downloadserver 192.168.69.100 vmpls_config.1
IP address of the server set to 192.168.69.100
VMPS configuration filename set to vmpls_config.1
Console> (enable)
```

**Related Commands**

- [download](#)
- [set vmpls state](#)
- [show vmpls](#)

## set vmips server

Use the **set vmips server** command to configure the VMPS.

```
set vmips server ip_addr [primary]
```

```
set vmips server retry count
```

```
set vmips server reconfirminterval interval
```

<b>Syntax Description</b>	<i>ip_addr</i>	IP address of the VMPS.
	<b>primary</b>	(Optional) Specifies the device as the primary VMPS.
	<i>retry count</i>	Specifies the retry interval; valid values are from 1 to 10 minutes.
	<i>reconfirminterval interval</i>	Specifies the reconfirmation interval; valid values are from 0 to 120 minutes.

**Defaults** If no IP address is specified, the VMPS uses the local VMPS configuration.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can specify the IP addresses of up to three VMPSs. You can define any VMPS as the primary VMPS. If the primary VMPS is down, all subsequent queries go to a secondary VMPS. VMPS checks on the primary server's availability once every five minutes. When the primary VMPS comes back online, subsequent VMPS queries are directed back to the primary VMPS.

To use a co-resident VMPS (when VMPS is enabled in a device), configure one of the three VMPS addresses as the IP address of interface sc0.

When you specify the **reconfirminterval** *interval*, enter 0 to disable reconfirmation.

**Examples** This example shows how to define a primary VMPS:

```
Console> (enable) set vmips server 192.168.10.140 primary
192.168.10.140 added to VMPS table as primary domain server.
Console> (enable)
```

This example shows how to define a secondary VMPS:

```
Console> (enable) set vmips server 192.168.69.171
192.168.69.171 added to VMPS table as backup domain server.
Console> (enable)
```

■ set vmps server

---

**Related Commands**

[clear vmps server](#)  
[show vmps](#)

# set vmps state

Use the **set vmps state** command to enable or disable VMPS.

```
set vmps state {enable | disable}
```

Syntax Description	enable	Disables VMPS.
	disable	Enables VMPS.

**Defaults** By default, VMPS is disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Before using the **set vmps state** command, you must use the **set vmps tftpserver** command to specify the IP address of the server from which the VMPS database is downloaded.

**Examples** This example shows how to enable VMPS:

```
Console> (enable) set vmps state enable
Vlan membership Policy Server enabled.
Console> (enable)
```

This example shows how to disable VMPS:

```
Console> (enable) set vmps state disable
All the VMPS configuration information will be lost and the resources released on disable.
Do you want to continue (y/n[n]):y
VLAN Membership Policy Server disabled.
Console> (enable)
```

**Related Commands** [download](#)  
[show vmps](#)

# set vtp

Use the **set vtp** command to set the options for VTP.

```
set vtp [domain domain_name] [mode { client | server | transparent | off}] [passwd passwd]
[pruning { enable | disable}] [v2 { enable | disable}]
```

Syntax Description	
<b>domain</b> <i>domain_name</i>	(Optional) Defines the name that identifies the VLAN management domain. The <i>domain_name</i> can be from 1 to 32 characters in length.
<b>mode</b> { <b>client</b>   <b>server</b>   <b>transparent</b>   <b>off</b> }	(Optional) Specifies the VTP mode.
<b>passwd</b> <i>passwd</i>	(Optional) Defines the VTP password; the VTP password can be from 8 to 64 characters in length.
<b>pruning</b> { <b>enable</b>   <b>disable</b> }	(Optional) Enables or disables VTP pruning for the entire management domain.
<b>v2</b> { <b>enable</b>   <b>disable</b> }	(Optional) Enables or disables version 2 mode.

**Defaults** The defaults are as follows: server mode, no password, pruning disabled, and v2 disabled.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines**

- This command is not supported by the NAM.
- This command is not supported on extended-range VLANs.
- VTP pruning and MISTP cannot be enabled at the same time.
- All switches in a VTP domain must run the same version of VTP. VTP version 1 and VTP version 2 do not operate on switches in the same VTP domain.
- If all switches in a domain are VTP version 2-capable, you only need to enable VTP version 2 on one switch (using the **set vtp v2 enable** command); the version number is then propagated to the other version 2-capable switches in the VTP domain.
- If the VTP password has already been defined, entering **passwd 0** (zero) clears the VTP password.
- VTP supports four different modes: server, client, transparent, and off. If you make a change to the VTP or VLAN configuration on a switch in server mode, that change is propagated to all of the switches in the same VTP domain.
- If the receiving switch is in server mode and its revision number is higher than the sending switch, the configuration is not changed. If the revision number is lower, the configuration is duplicated.
- VTP can be set to either server or client mode only when dynamic VLAN creation is disabled.

If the receiving switch is in server mode, the configuration is not changed.

If the receiving switch is in client mode, the client switch changes its configuration to duplicate the configuration of the server. Make sure to make all VTP or VLAN configuration changes on a switch in server mode.

If the receiving switch is in transparent mode, the configuration is not changed. Switches in transparent mode do not participate in VTP. If you make VTP or VLAN configuration changes on a switch in transparent mode, the changes are not propagated to the other switches in the network.

When you configure the VTP off mode, the switch functions the same as in VTP transparent mode except that VTP advertisements are not forwarded.

The **pruning** keyword is used to enable or disable VTP pruning for the VTP domain. VTP pruning causes information about each pruning-eligible VLAN to be removed from VTP updates if there are no stations belonging to that VLAN out a particular switch port. Use the **set vtp pruneeligible** and **clear vtp pruneeligible** commands to specify which VLANs should or should not be pruned when pruning is enabled for the domain.

Use the **clear config all** command to remove the domain from the switch.

For more information about VTP, refer to Chapter 10, “Configuring VTP,” in the *Catalyst 6500 Series Configuration Guide*.



#### Caution

Be careful when you use the **clear config all** command. This command clears the entire switch configuration, not just the VTP domain.

#### Examples

This example shows how to use the **set vtp** command:

```
Console> (enable) set vtp domain Engineering mode client
VTP domain Engineering modified
Console> (enable)
```

This example shows what happens if you try to change VTP to server or client mode and dynamic VLAN creation is enabled:

```
Console> (enable) set vtp mode server
Failed to Set VTP to Server. Please disable Dynamic VLAN Creation First.
Console> (enable)
```

This command shows how to set VTP to off mode:

```
Console> (enable) set vtp mode off
VTP domain modified
Console> (enable)
```

#### Related Commands

**clear vlan**  
**clear vtp pruneeligible**  
**set vlan**  
**set vtp pruneeligible**  
**show vlan**  
**show vtp domain**

# set vtp pruneeligible

Use the **set vtp pruneeligible** command to specify which VTP domain VLANs are pruning eligible.

**set vtp pruneeligible** *vlan*s

Syntax Description	<i>vlan</i> s	Range of VLAN numbers; valid values are from 2 to 1000.
--------------------	---------------	---

Defaults	The default is VLANs 2 through 1000 are eligible for pruning.
----------	---

Command Types	Switch command.
---------------	-----------------

Command Modes	Privileged.
---------------	-------------

Usage Guidelines	VTP pruning causes information about each pruning-eligible VLAN to be removed from VTP updates if there are no stations belonging to that VLAN out a particular switch port. Use the <b>set vtp</b> command to enable VTP pruning.
------------------	--

By default, VLANs 2 through 1000 are pruning eligible. You do not need to use the **set vtp pruneeligible** command unless you have previously used the **clear vtp pruneeligible** command to make some VLANs pruning ineligible. If VLANs have been made pruning ineligible, use the **set vtp pruneeligible** command to make them pruning eligible again.

Examples	This example shows how to configure pruning eligibility for VLANs 120 and 150:
----------	--

```
Console> set vtp pruneeligible 120,150
Vlans 120,150 eligible for pruning on this device.
VTP domain nada modified.
Console>
```

In this example, VLANs 200–500 were made pruning ineligible using the **clear vtp pruneeligible** command. This example shows how to make VLANs 220 through 320 pruning eligible again:

```
Console> set vtp pruneeligible 220-320
Vlans 2-199,220-320,501-1000 eligible for pruning on this device.
VTP domain Company modified.
Console>
```

Related Commands	<b>clear vtp pruneeligible</b> <b>set vlan</b> <b>show vtp domain</b>
------------------	---

# show accounting

Use the **show accounting** command to display accounting setup and configuration information on the switch.

## show accounting

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows the configuration details of a switch with RADIUS accounting enabled:

```

Console> (enable) show accounting
Event      Method1 Mode
-----
exec:      Radius  stop-only
connect:   Radius  stop-only
system:    -      -
commands:
config:    -      -
all:       -      -

TACACS+ Suppress for no username: disabled
Update Frequency: newinfo

Accounting information:
-----

Active Accounted actions on tty21680592841, User NULL Priv 15
Task ID 3, EXEC Accounting record, 0,00:00:22 Elapsed
task_id=3 start_time=934463479 timezone=UTC service=shell

Active Accounted actions on tty01, User kannank Priv 15
Task ID 2, EXEC Accounting record, 0,00:01:23 Elapsed
task_id=2 start_time=934463418 timezone=UTC service=shell

Active Accounted actions on tty21680592841, User danny Priv 15
Task ID 4, Connection Accounting record, 0,00:00:07 Elapsed
task_id=4 start_time=934463495 timezone=UTC service=connection protocol=telnet
addr=-1407968771 cmd=telnet 172.20.25.253

Overall Accounting Traffic:
      Starts  Stops  Active
Exec      1      0      2
Connect   0      0      1
Command   0      0      0

```

## show accounting

```
System      0      0      0
```

```
Console> (enable)
```

This example shows the configuration details of a switch with TACACS+ accounting enabled:

```
Console> (enable) show accounting
```

```
TACACS+:
```

```
Update: periodic (25 seconds)
```

```
Supress: disabled
```

```

                Status      Mode
                -----
exec:           disabled    stop-only
connect:        disabled    stop-only
system:         disabled    stop-only
network:        disabled    stop-only
commands:
  config:       disabled    stop-only
  all:          disabled    stop-only
```

```
Radius:
```

```

                Status      Mode
                -----
exec:           disabled    stop-only
connect:        disabled    stop-only
system:         disabled    stop-only
```

```
TACACS+ Suppress for no username: disabled
```

```
Update Frequency: newinfo
```

```
Accounting information:
```

```
-----
```

```
Active Accounted actions on tty21680592841, User NULL Priv 15
```

```
Task ID 3, EXEC Accounting record, 0,00:00:22 Elapsed
```

```
task_id=3 start_time=934463479 timezone=UTC service=shell
```

```
Active Accounted actions on tty01, User kannank Priv 15
```

```
Task ID 2, EXEC Accounting record, 0,00:01:23 Elapsed
```

```
task_id=2 start_time=934463418 timezone=UTC service=shell
```

```
Active Accounted actions on tty21680592841, User danny Priv 15
```

```
Task ID 4, Connection Accounting record, 0,00:00:07 Elapsed
```

```
task_id=4 start_time=934463495 timezone=UTC service=connection protocol=telnet
addr=-1407968771 cmd=telnet 172.20.25.253
```

```
Overall Accounting Traffic:
```

```

                Starts  Stops  Active
Exec            1      0      2
Connect         0      0      1
Command         0      0      0
System          0      0      0
```

```
Console> (enable)
```

---

**Related Commands**

[set accounting commands](#)  
[set accounting connect](#)  
[set accounting exec](#)  
[set accounting suppress](#)  
[set accounting system](#)  
[set accounting update](#)

# show aclmerge

Use the **show aclmerge** command to display information about the ACL merge algorithm.

**show aclmerge bdd**

**show aclmerge algo**

Syntax Description	Command	Description
	<b>bdd</b>	Displays if the binary decision diagram (BDD) merge algorithm is enabled or disabled.
	<b>algo</b>	Displays the ACL merge algorithm currently in use.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to display the status of BDD:

```
Console> (enable) show aclmerge bdd
Bdd is not enabled.
On system restart bdd will be disabled.
Console> (enable)
```

This example shows how to display the ACL merge algorithm currently in use:

```
Console> (enable) show aclmerge algo
Current acl merge algorithm is odm.
Console> (enable)
```

**Related Commands** [set aclmerge algo](#)  
[set aclmerge bdd](#)

# show alias

Use the **show alias** command to display a listing of defined command aliases.

**show alias** [*name*]

---

<b>Syntax Description</b>	<i>name</i> (Optional) Name of the alias to be displayed.
---------------------------	---

---

---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---

---

<b>Command Types</b>	Switch command.
----------------------	-----------------

---

---

<b>Command Modes</b>	Normal.
----------------------	---------

---

---

<b>Usage Guidelines</b>	If <i>name</i> is not specified, all defined aliases are displayed.
-------------------------	---

---

---

<b>Examples</b>	This example shows how to display all aliases:
-----------------	--

---

```
Console> show alias
shint          show interface
cc            clear config
shf           show flash
sip           show ip route
Console>
```

---

<b>Related Commands</b>	<a href="#">clear alias</a> <a href="#">set alias</a>
-------------------------	--

---

# show arp

Use the **show arp** command to display the ARP table.

```
show arp [ip_addr | hostname] [noalias]
```

Syntax Description	
<i>ip_addr</i>	(Optional) Number of the IP address.
<i>hostname</i>	(Optional) Name of the host.
<b>noalias</b>	(Optional) Forces the display to show only IP addresses, not IP aliases.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** ARP aging time is the period of time that indicates when an ARP entry is removed from the ARP table. Set this value by entering the **set arp agingtime** command. The remaining lines of the display show the mappings of IP addresses (or IP aliases) to MAC addresses.

Use the *ip\_addr* or the *hostname* options to specify an IP host when the ARP cache is large.

**Examples** This example shows how to display the ARP table:

```
Console> (enable) show arp
ARP Aging time = 300 sec
+ - Permanent Arp Entries
* - Static Arp Entries
* 2.2.2.2                at 00-08-cc-44-aa-18 on vlan 5
+ 1.1.1.1                at 00-08-94-cc-02-aa on vlan 5
142.10.52.195           at 00-10-07-3c-05-13 port 7/1-4 on vlan 5
192.70.31.126           at 00-00-0c-00-ac-05 port 7/1-4 on vlan 5
121.23.79.121           at 00-00-1c-03-00-40 port 7/1-4 on vlan 5
Console> (enable)
```

**Related Commands** [clear arp](#)  
[set arp](#)

# show authentication

Use the **show authentication** command to display authentication information.

## show authentication

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display authentication information:

```

Console> show authentication
          Console Session   Telnet Session   Http Session
Login Authentication:
-----
tacacs      disabled          disabled         disabled
radius      disabled          disabled         enabled(*)
kerberos    disabled          disabled         disabled
local       enabled(*)        enabled(*)       enabled
local       enabled(primary)  enabled(primary)  enabled(primary)
attempt limit 3                  3                3
lockout timeout (sec) disabled          disabled         disabled

Enable Authentication: Console Session   Telnet Session   Http Session
-----
tacacs      disabled          disabled         disabled
radius      disabled          disabled         disabled
kerberos    disabled          disabled         disabled
local       enabled(primary)  enabled(primary)  enabled(primary)
attempt limit 3                  3                3
lockout timeout (sec) disabled          disabled         disabled
Console>

```

**Related Commands** [set authentication enable](#)  
[set authentication login](#)

# show authorization

Use the **show authorization** command to display authorization setup and configuration information on the switch.

## show authorization

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display authorization setup and configuration information:

```

Console> (enable) show authorization
Telnet:
-----
           Primary   Fallback
           -----   -----
exec:      tacacs+   deny
enable:    tacacs+   deny
commands:
  config:  tacacs+   deny
  all:     -         -

Console:
-----
           Primary   Fallback
           -----   -----
exec:      tacacs+   deny
enable:    tacacs+   deny
commands:
  config:  tacacs+   deny
  all:     -         -

Console> (enable)

```

**Related Commands**

- [set authorization commands](#)
- [set authorization enable](#)
- [set authorization exec](#)

# show banner

Use the **show banner** command to view the message of the day (MOTD), the Catalyst 6500 series Switch Fabric Module LCD banner, and the status of the Telnet banner stored in NVRAM.

## show banner

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the MOTD, the Catalyst 6500 series Switch Fabric Module LCD banner, and the status of the Telnet banner:

```
Console> show banner
MOTD banner:

LCD config:

Telnet Banner:
disabled
Console>
```

---

**Related Commands** [set banner lcd](#)  
[set banner motd](#)  
[set banner telnet](#)

# show boot

Use the **show boot** command to display the contents of the BOOT environment variables and the configuration register setting.

**show boot** [*mod*]

<b>Syntax Description</b>	<i>mod</i> (Optional) Number of the supervisor engine containing the Flash device.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display the BOOT environment variable:
-----------------	--

```

Console> show boot
BOOT variable = bootflash:cat6000-sup.5-5-1.bin,1;slot0:cat6000-sup.5-4-1.bin,1;
CONFIG_FILE variable = slot0:switch.cfg

Configuration register is 0x800f
ignore-config: disabled
auto-config: non-recurring, overwrite, sync disabled
console baud: 9600
boot: image specified by the boot system commands
Console>

```

<b>Related Commands</b>	<a href="#">set boot auto-config</a> <a href="#">set boot config-register</a> <a href="#">set boot system flash</a>
-------------------------	---

# show boot device

Use the **show boot device** command to display the NAM boot string stored in NVRAM.

**show boot device** *mod*

---

<b>Syntax Description</b>	<i>mod</i>	Number of the module containing the Flash device.
---------------------------	------------	---

---

---

<b>Defaults</b>	This command has no default settings.	
-----------------	---------------------------------------	--

---

<b>Command Types</b>	Switch command.	
----------------------	-----------------	--

---

<b>Command Modes</b>	Normal.	
----------------------	---------	--

---

<b>Usage Guidelines</b>	This command is supported by the NAM module only.	
-------------------------	---	--

---

<b>Examples</b>	This example shows how to display the boot device information for module 2:	
-----------------	---	--

```
Console> show boot device 2
Device BOOT variable = hdd:2
Console>
```

---

<b>Related Commands</b>	<a href="#">clear boot device</a> <a href="#">set boot device</a>
-------------------------	--

# show cam

Use the **show cam** command to display CAM table entries.

```
show cam {dynamic | static | permanent | system} [{mod/port} | vlan]
```

```
show cam mac_addr [vlan]
```

Syntax Description	
<b>dynamic</b>	Displays dynamic CAM entries.
<b>static</b>	Displays static CAM entries.
<b>permanent</b>	Displays permanent CAM entries.
<b>system</b>	Displays system CAM entries.
<i>mod/port</i>	(Optional) Number of the module and the port on the module.
<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
<i>mac_addr</i>	MAC address.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines**

- If you specify a VLAN, then only those CAM entries matching the VLAN number are displayed.
- If you do not specify a VLAN, all VLANs are displayed.
- If the MAC address belongs to a router, it is shown by appending an “R” to the MAC address.
- You can set the traffic filter for unicast addresses only; you cannot set the traffic filter for multicast addresses.

**Examples** This example shows how to display dynamic CAM entries for all VLANs:

```
Console> show cam dynamic
* = Static Entry. + = Permanent Entry. # = System Entry. R = Router Entry.
X = Port Security Entry

VLAN  Dest MAC/Route Des      [CoS]  Destination Ports or VCs / [Protocol Type]
-----
1      00-60-5c-86-5b-81         *      4/1 [ALL]
1      00-60-2f-35-48-17         *      4/1 [ALL]
1      00-80-24-f3-47-20         *      1/2 [ALL]
```

```

1      00-60-09-78-96-fb      *      4/1 [ALL]
1      00-80-24-1d-d9-ed      *      1/2 [ALL]
1      00-80-24-1d-da-01     *      1/2 [ALL]
1      08-00-20-7a-63-01     *      4/1 [ALL]

```

```

Total Matching CAM Entries Displayed = 7
Console>

```

This example shows how to display dynamic CAM entries for VLAN 1:

```

Console> show cam dynamic 1

```

```

* = Static Entry. + = Permanent Entry. # = System Entry. R = Router Entry.
X = Port Security Entry

```

VLAN	Dest MAC/Route Des	[CoS]	Destination Ports or VCs / [Protocol Type]
1	00-40-0b-60-d7-3c		2/1-2 [IP]
1	00-e0-34-8b-d3-ff		2/1-2 [IP]
1	00-e0-14-0f-df-ff		2/1-2 [IP]
1	00-00-0c-35-7f-42		2/1-2 [IP]
1	00-90-6f-a3-bb-ff		2/1-2 [IP]
1	00-e0-8f-63-7f-ff		2/1-2 [IP]
1	00-00-0c-35-7f-42		2/1-2 [GROUP]
.	.	.	.
.	.	.	.
.	.	.	.
1	00-e0-f9-c8-33-ff		2/1-2 [IP]

```

. Display truncated
.
Console>

```

This example shows routers listed as the CAM entries:

```

Console> show cam 00-00-81-01-23-45

```

```

* = Static Entry. + = Permanent Entry. # = System Entry. R = Router Entry
X = Port Security Entry

```

```

Router Watergate with IP address 172.25.55.1 has CAM entries:

```

VLAN	Dest MAC/Route Des	[CoS]	Destination Ports or VCs / [Protocol Type]
1	00-00-81-01-23-45R	*	2/9 [IP]
2	00-00-81-01-23-45R	*	2/10 [IP]

```

Total Matching CAM Entries = 2
Console>

```

```

Console> (enable) show cam 00-00-81-01-23-45

```

```

* = Static Entry. + = Permanent Entry. # = System Entry. R = Router Entry.
X = Port Security Entry

```

VLAN	Dest MAC/Route Des	[CoS]	Destination Ports or VCs / [Protocol Type]
1	00-00-81-01-23-45R	*	FILTER

```

Console>

```

## Related Commands

```

clear cam
set cam
show cam agingtime
show config

```

# show cam agingtime

Use the **show cam agingtime** command to display CAM aging time information for all configured VLANs.

**show cam agingtime** [*vlan*]

<b>Syntax Description</b>	<i>vlan</i>	(Optional) Number of the VLAN or range of VLANs; valid values are from 1 to 1005 and from 1025 to 4094.
---------------------------	-------------	---

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display CAM aging time information:

```
Console> show cam agingtime
VLAN 1 aging time = 300 sec
VLAN 3 aging time = 300 sec
VLAN 5 aging time = 300 sec
VLAN 9 aging time = 300 sec
VLAN 100 aging time = 300 sec
VLAN 200 aging time = 300 sec
VLAN 201 aging time = 300 sec
VLAN 202 aging time = 300 sec
VLAN 203 aging time = 300 sec
Console>
```

This example shows how to display CAM aging time information for a specific VLAN:

```
Console> show cam agingtime 1005
VLAN 1005 aging time = 300 sec
Console>
```

**Related Commands**

- [clear cam](#)
- [set cam](#)
- [show cam](#)

# show cam count

Use the **show cam count** command to display the number of CAM entries only.

```
show cam count { dynamic | static | permanent | system } [vlan]
```

<b>Syntax Description</b>	<b>dynamic</b>	Displays dynamic CAM entries.
	<b>static</b>	Displays static CAM entries.
	<b>permanent</b>	Displays permanent CAM entries.
	<b>system</b>	Displays system CAM entries.
	<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a VLAN, all VLANs are displayed.

**Examples** This example shows how to display the number of dynamic CAM entries:

```
Console> (enable) show cam count dynamic
Total Matching CAM Entries = 6
Console> (enable)
```

**Related Commands** [clear cam](#)  
[set cam](#)

# show cam msfc

Use the **show cam msfc** command to display the router's MAC-VLAN entries.

```
show cam msfc {mod} [vlan]
```

Syntax Description	<i>mod</i>	Number of the module for which MSFC information is displayed.
	<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you specify the VLAN, only CAM entries that belong to that VLAN are displayed.

**Examples** This example shows how to display all CAM entries:

```
Console> (enable) show cam msfc
VLAN  Destination MAC      Destination-Ports or VCs      Xtag  Status
-----
194   00-e0-f9-d1-2c-00R      7/1                            2     H
193   00-00-0c-07-ac-c1R      7/1                            2     H
193   00-00-0c-07-ac-5dR      7/1                            2     H
202   00-00-0c-07-ac-caR      7/1                            2     H
204   00-e0-f9-d1-2c-00R      7/1                            2     H
195   00-e0-f9-d1-2c-00R      7/1                            2     H
192   00-00-0c-07-ac-c0R      7/1                            2     H
192   00-e0-f9-d1-2c-00R      7/1                            2     H
204   00-00-0c-07-ac-ccR      7/1                            2     H
202   00-e0-f9-d1-2c-00R      7/1                            2     H
Total Matching CAM Entries Displayed = 14
Console> (enable)
```

This example shows how to display CAM entries for a specific VLAN:

```
Console> show cam msfc 15 192
VLAN  Destination MAC      Destination-Ports or VCs      Xtag  Status
-----
192   00-00-0c-07-ac-c0R      7/1                            2     H
192   00-e0-f9-d1-2c-00R      7/1                            2     H
Console>
```

**Related Commands** [show cam](#)

# show cdp

Use the **show cdp** command to display Cisco Discovery Protocol (CDP) information.

**show cdp**

**show cdp neighbors** [*mod[/port]*] [**vlan** | **duplex** | **capabilities** | **detail**]

**show cdp neighbors exclude ip-phone**

**show cdp port** [*mod[/port]*]

Syntax Description	
<b>neighbors</b>	Shows CDP information for Cisco products connected to the switch.
[ <i>mod[/port]</i> ]	(Optional) Number of the module for which CDP information is displayed and optionally, the number of the port for which CDP information is displayed.
<b>vlan</b>	(Optional) Shows the native VLAN number for the neighboring Cisco products.
<b>duplex</b>	(Optional) Shows the duplex type of the neighboring Cisco products.
<b>capabilities</b>	(Optional) Shows the capability codes for the neighboring Cisco products; valid values are <b>R</b> , <b>T</b> , <b>B</b> , <b>S</b> , <b>H</b> , <b>I</b> , and <b>r</b> (R = Router, T = Trans Bridge, B = Source Route Bridge, S = Switch, H = Host, I = IGMP, and r = Repeater).
<b>detail</b>	(Optional) Shows detailed information about neighboring Cisco products.
<b>exclude ip-phone</b>	Keywords to exclude IP phone information from the display of neighboring Cisco products.
<b>port</b>	Shows CDP port settings.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The per-port output of the **show cdp port** command is not displayed if you globally disable CDP. If you globally enable CDP, the per-port status is displayed.

If you enter the **show cdp neighbors** command for a device that supports earlier versions of CDP, “unknown” is displayed in the VTP Management Domain, Native VLAN, and Duplex fields.

If you do not specify a module number, CDP information for the entire switch is displayed.

**Examples**

This example shows how to display CDP information for the system:

```
Console> show cdp
CDP :enabled
Message Interval :60
Hold Time :180
```

This example shows how to display detailed CDP neighbor information. The display varies depending on your network configuration at the time you run the command.

```
Console> show cdp neighbors 4 detail
Port (Our Port):4/4
Device-ID:69046406
Device Addresses:
  IP Address:172.20.25.161
Holdtime:150 sec
Capabilities:TRANSPARENT_BRIDGE SWITCH
Version:
  WS-C6009 Software, Version NmpSW: 5.4(1)CSX
  Copyright (c) 1995-1999 by Cisco Systems
Port-ID (Port on Device):4/8
Platform:WS-C6009
VTP Management Domain:unknown
Native VLAN:1
Duplex:half
Console>
```

This example shows how to display CDP information about neighboring systems:

```
Console> show cdp neighbors
* - indicates vlan mismatch.
# - indicates duplex mismatch.
```

Port	Device-ID	Port-ID	Platform
3/5	002267619	3/6 *	WS-C6000
3/6	002267619	3/5	WS-C6000
4/1	002267619	4/2	WS-C6000
4/2	002267619	4/1 #	WS-C6000
4/20	069000057	8/5	WS-C6000
5/1	005763872	2/1	WS-C6009
5/1	066506245	2/1	WS-C6009
5/1	066508595	5/12 *#	WS-C6009
5/1	066508596	5/1	WS-C6009

```
Console>
```

This example shows how to display duplex information about neighboring systems:

```
Console> show cdp neighbors duplex
* - indicates vlan mismatch.
# - indicates duplex mismatch.
```

Port	Device-ID	Port-ID	Duplex
3/5	002267619	3/6 *	half
3/6	002267619	3/5	half
4/1	002267619	4/2	full
4/2	002267619	4/1 #	full
4/20	069000057	8/5	-
5/1	005763872	2/1	-
5/1	066506245	2/1	-
5/1	066508595	5/12 *#	half
5/1	066508596	5/1	half

```
Console>
```

This example shows how to display VLAN information about neighboring systems:

```
Console> show cdp vlan
```

```
* - indicates vlan mismatch.
# - indicates duplex mismatch.
```

Port	Device-ID	Port-ID	NativeVLAN
3/5	002267619	3/6 *	1
3/6	002267619	3/5	1
4/1	002267619	4/2	1
4/2	002267619	4/1 #	1
4/20	069000057	8/5	-
5/1	005763872	2/1	-
5/1	066506245	2/1	-
5/1	066508595	5/12 *#	1
5/1	066508596	5/1	1

```
Console>
```

This example shows how to display capability information about neighboring systems:

```
Console> (enable) show cdp neighbors capabilities
```

```
* - indicates vlan mismatch.
```

```
# - indicates duplex mismatch.
```

```
Capability Codes:R - Router, T - Trans Bridge, B - Source Route Bridge
```

```
S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone
```

Port	Device-ID	Port-ID	Capabilities
4/30	TBA04200588	4/34	T S I
4/31	TBA04200588	4/35	T S I
4/32	TBA04200588	4/36	T S I
4/33	TBA04200588	4/37	T S I
4/34	TBA04200588	4/38	T S I
4/35	TBA04200588	4/39	T S I
4/36	TBA04200588	4/40	T S I
4/45	19991108	4/46	T S I
4/46	19991108	4/45	T S I
5/1	TBA04200588	1/2	T S I
5/2	TBA04200588	1/1	T S I
5/3	TBA04200588	2/1	T S I

```
Console> (enable)
```

This example shows how to display CDP information for all ports:

```
Console> show cdp port
```

```
CDP :enabled
```

```
Message Interval :60
```

```
Hold Time :180
```

Port	CDP Status
2/1	enabled
2/2	enabled
5/1	enabled
5/2	enabled
5/3	enabled
5/4	enabled
5/5	enabled
5/6	enabled
5/7	enabled
5/8	enabled

```
Console>
```

■ show cdp

Related Commands [set cdp](#)

# show channel

Use the **show channel** command to display EtherChannel information for a channel.

```
show channel [channel_id] [info | statistics | mac]
```

```
show channel [channel_id] [info [type]]
```

```
show channel [channel_id | all] protocol
```

Syntax Description	
<i>channel_id</i>	(Optional) Number of the channel.
<b>info</b>	(Optional) Displays channel information.
<b>statistics</b>	(Optional) Displays statistics about the port (PAgP packets sent and received).
<b>mac</b>	(Optional) Displays MAC information about the channel.
<i>type</i>	(Optional) Displays feature-related parameters; valid values are <b>spantree</b> , <b>trunk</b> , <b>protocol</b> , <b>gmrp</b> , <b>gvrp</b> , <b>qos</b> , <b>rsvp</b> , <b>cops</b> , <b>dot1qtunnel</b> , <b>auxiliaryvlan</b> , and <b>jumbo</b> .
<b>all</b>	(Optional) Displays protocols of all channels.
<b>protocol</b>	Displays channel protocol.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify the *channel\_id* value, EtherChannel information is shown for all channels. No information is displayed if the channel specified is not in use.

If you enter the optional **info type** value, the specified feature-related parameters are displayed in the output.

To display protocols on all channels, enter the **show channel all protocol** command.

**Examples** This example shows how to display channel information for a specific channel:

```
Console> show channel 865
Channel Ports                               Status      Channel
id                                             Mode
-----
      865 4/1-2                             connected desirable
                                           non-silent
Console>
```

This example shows how to display channel information for all channels:

```
Console> show channel
Channel Id  Ports
-----
768        2/1-2
769        4/3-4
770        4/7-8
Console>
```

This example shows how to display port information for a specific channel:

```
Console> show channel 769
Chan Port  Port      Portfast Port      Port
id        priority          vlanpri vlanpri-vlans
-----
769 1/1      32 disabled      0
769 1/2      32 disabled      0

Chan Port  IP        IPX        Group
id
-----
769 1/1  on        auto-on    auto-on
769 1/2  on        auto-on    auto-on

Chan Port  GMRP      GMRP      GMRP
id        status    registration forwardAll
-----
769 1/1  enabled  normal    disabled
769 1/2  enabled  normal    disabled

Chan Port  GVRP      GVRP      GVRP
id        status    registration applicant
-----
769 1/1  disabled normal    normal
769 1/2  disabled normal    normal

Chan Port  Qos-Tx Qos-Rx Qos-Trust Qos-DefCos Qos-Port-based
id
-----
769 1/1  2q2t  1q4t  untrusted      0 false
769 1/2  2q2t  1q4t  untrusted      0 false

Chan Port  ACL name          Protocol
id
-----
769 1/1
                                IP
                                IPX
                                MAC
769 1/2
                                IP
                                IPX
                                MAC
Console>
```

This example shows how to display port information for all channels:

```
Console> show channel info
Chan Port  Status      Channel  Admin Speed Duplex Vlan PortSecurity/
id        mode        group    group
-----
769 1/1  notconnect on        195 1000 full 1 -
769 1/2  notconnect on        195 1000 full 1 -
865 4/1  notconnect on        194 100 half 1 -
865 4/2  notconnect on        194 100 half 1 -
```

```

Chan Port  if-   Oper-group Neighbor  Chan  Oper-Distribution
id      Index  Oper-group  Oper-group cost   Method
-----
 769  1/1  -           1           0 ip both
 769  1/2  -           1           0 ip both
 865  4/1  -           1           0 ip both
 865  4/2  -           1           0 ip both

Chan Port  Device-ID          Port-ID          Platform
id
-----
 769  1/1
 769  1/2
 865  4/1
 865  4/2

Chan Port  Trunk-status Trunk-type  Trunk-vlans
id
-----
 769  1/1  not-trunking negotiate  1-1005
 769  1/2  not-trunking negotiate  1-1005
 865  4/1  not-trunking negotiate  1-1005
 865  4/2  not-trunking negotiate  1-1005

.
.
.
Console>

```

This example shows how to display PAGP information for all channels:

```

Console> show channel statistics
Port Channel PAGP Pkts   PAGP Pkts PAGP Pkts PAGP Pkts PAGP Pkts PAGP Pkts
      id      Transmitted Received  InFlush  RetnFlush OutFlush  InError
-----
 2/1   768           0           0           0           0           0           0
 2/2   768           0           0           0           0           0           0
 4/3   769           0           0           0           0           0           0
 4/4   769           0           0           0           0           0           0
 4/7   770           0           0           0           0           0           0
 4/8   770           0           0           0           0           0           0
Console>

```

This example shows how to display PAGP information for a specific channel:

```

Console> show channel 768 statistics
Port Channel PAGP Pkts   PAGP Pkts PAGP Pkts PAGP Pkts PAGP Pkts PAGP Pkts
      id      Transmitted Received  InFlush  RetnFlush OutFlush  InError
-----
 2/1   768           0           0           0           0           0           0
 2/2   768           0           0           0           0           0           0
Console>

```

This example shows how to display statistics for a specific channel:

```

Console> show channel 768 mac
Channel Rcv-Unicast          Rcv-Multicast          Rcv-Broadcast
-----
 768           525           959           827

Channel Xmit-Unicast          Xmit-Multicast          Xmit-Broadcast
-----
 768           384           88           1
Port      Rcv-Octet          Xmit-Octet
-----

```

## show channel

```

768                469263                48083

Channel  Dely-Exced  MTU-Exced  In-Discard  Lrn-Discrd  In-Lost  Out-Lost
-----
768                0          0          0          0          0        0
Console>

```

This example shows how to display statistics for all channels:

```

Console> show channel mac
Channel  Rcv-Unicast      Rcv-Multicast      Rcv-Broadcast
-----
768                532290            163                6
769                0                 0                 0
771                4                 64                0

Channel  Xmit-Unicast      Xmit-Multicast      Xmit-Broadcast
-----
768                602591            77                 3
769                0                 0                 0
771                636086            222                12

Port     Rcv-Octet          Xmit-Octet
-----
768                44873880          45102132
769                0                 0
771                64153             64831844

Channel  Dely-Exced  MTU-Exced  In-Discard  Lrn-Discrd  In-Lost  Out-Lost
-----
768                0          0          0          0          0        0
769                0          0          0          0          0        0
771                0          18         0          0          0        0
Last-Time-Cleared
-----
Wed Jun 10 1999, 20:31:13
Console>

```

These examples show how to display feature-specific parameter information:

```

Console> show channel 769 info trunk
Chan Port  Trunk-status  Trunk-type  Trunk-vlans
id
-----
769 1/1  not-trunking negotiate  1-1005
769 1/2  not-trunking negotiate  1-1005

Chan Port  Portvlancost-vlans
id
-----
769 1/1
769 1/2
Console>
Console> show channel 769 info spantree
Chan Port  Port  Portfast  Port  Port
id      priority  vlanpri  vlanpri  vlans
-----
769 1/1      32 disabled  0
769 1/2      32 disabled  0
Console>

Console> show channel 769 info protcol
Chan Port  IP      IPX      Group
id
-----

```

```

-----
769 1/1 on auto-on auto-on
769 1/2 on auto-on auto-on
Console>

Console> show channel 769 info gmrp
Chan Port GMRP GMRP GMRP
id status registration forwardAll
-----
769 1/1 enabled normal disabled
769 1/2 enabled normal disabled
Console>

Console> show channel 769 info gvrp
Chan Port GVRP GVRP GVRP
id status registration applicant
-----
769 1/1 disabled normal normal
769 1/2 disabled normal normal
Console>

Console> show channel 769 info qos
Chan Port Qos-Tx Qos-Rx Qos-Trust Qos-DefCos Qos-Interface
id PortType PortType Type Type
-----
769 1/1 2q2t 1q4t untrusted 0 port-based
769 1/2 2q2t 1q4t untrusted 0 port-based

Chan Port ACL name Type
id
-----
769 1/1 IP
IPX
MAC
769 1/2 IP
IPX
MAC
Console>

```

**Related Commands**

[show channel group](#)  
[show port channel](#)

# show channel group

Use the **show channel group** command to display EtherChannel group status information.

```
show channel group [admin_group] [info | statistics]
```

```
show channel group [admin_group] [info [type]]
```

<b>Syntax Description</b>	<i>admin_group</i>	(Optional) Number of the administrative group; valid values are from 1 to 1024.
	<b>info</b>	(Optional) Displays group information.
	<b>statistics</b>	(Optional) Displays statistics about the group.
	<i>type</i>	(Optional) Displays feature-related parameters; valid values are <b>spantree</b> , <b>trunk</b> , <b>protocol</b> , <b>gmrp</b> , <b>gvrp</b> , <b>qos</b> , <b>rsvp</b> , <b>cops</b> , <b>dot1qtunnel</b> , <b>auxiliaryvlan</b> , and <b>jumbo</b> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify the *admin\_group* value, EtherChannel information is shown for all administrative groups.

If you enter the optional **info type** value, the specified feature-related parameters are displayed in the output.

**Examples** This example shows how to display Ethernet channeling information for all administrative groups:

```
Console> show channel group
Admin Group  Ports
-----
7           1/1-2
Console>
```

This example shows how to display Ethernet channeling information for a specific group:

```
Console> show channel group 154
Admin Port  Status   Channel  Channel
group      Mode     id
-----
  154  1/1  notconnect  on         769
  154  1/2  connected   on         769

Admin Port  Device-ID                Port-ID                Platform
group
```

```

-----
154 1/1
154 1/2 066510644(cat26-lnf(NET25)) 2/1 WS-C5505
Console>

```

This example shows how to display group information:

```

Console> show channel group 154 info
Admin Port Status Channel Ch Speed Duplex Vlan PortSecurity/
group mode id id Speed Duplex Vlan Dynamic Port
-----
154 1/1 notconnect on 769 1000 full 1 - Dynamic port
154 1/2 connected on 769 1000 full 1 - Dynamic port

Admin Port if- Oper-group Neighbor Chan Oper-Distribution
group Index Oper-group cost Method
-----
154 1/1 - 1 0 mac both
154 1/2 868 1 0 mac both

Admin Port Device-ID Port-ID Platform
group
-----
154 1/1
154 1/2 066510644(cat26-lnf(NET25)) 2/1 WS-C5505

Admin Port Trunk-status Trunk-type Trunk-vlans
group
-----
154 1/1 not-trunking negotiate 1-1005
154 1/2 not-trunking negotiate 1-1005

Admin Port Portvlancost-vlans
group
-----
154 1/1
154 1/2

Admin Port Port Portfast Port Port
group priority vlanpri vlanpri-vlans
-----
154 1/1 32 disabled 0
154 1/2 32 disabled 0

Admin Port IP IPX Group
group
-----
154 1/1 on auto-on auto-on
154 1/2 on auto-on auto-on

Admin Port GMRP GMRP GMRP
group status registration forwardAll
-----
154 1/1 enabled normal disabled
154 1/2 enabled normal disabled

Admin Port GVRP GVRP GVRP
group status registration applicant
-----
154 1/1 disabled normal normal
154 1/2 disabled normal normal

Admin Port Qos-Tx Qos-Rx Qos-Trust Qos-DefCos Qos-Port-based
group

```

## show channel group

```

-----
 154 1/1 2q2t 1q4t untrusted          0 false
 154 1/2 2q2t 1q4t untrusted          0 false

Admin Port  ACL name                      Protocol
group
-----
 154 1/1  ip_acl                      IP
        ipx_acl                     IPX
        mac_acl                      MAC
 154 1/2
        IP
        IPX
        MAC

```

Console>

These examples show how to display feature-specific parameter information:

```

Console> show channel group 154 info trunk
Admin Port  Trunk-status Trunk-type   Trunk-vlans
group
-----

```

```

 154 1/1 not-trunking negotiate 1-1005
 154 1/2 not-trunking negotiate 1-1005

```

Console>

```

Console> show channel group 154 info spantree
Admin Port  Portvlancost-vlans
group
-----

```

```

 154 1/1
 154 1/2

```

```

Admin Port  Port      Portfast  Port      Port
group       priority          vlanpri  vlanpri-vlans
-----

```

```

 154 1/1          32 disabled    0
 154 1/2          32 disabled    0

```

Console>

```

Console> show channel group 154 info protocol
Admin Port  IP      IPX      Group
group
-----

```

```

 154 1/1 on      auto-on  auto-on
 154 1/2 on      auto-on  auto-on

```

Console>

```

Console> show channel group 154 info gmrp
Admin Port  GMRP      GMRP      GMRP
group       status    registration forwardAll
-----

```

```

 154 1/1 enabled normal    disabled
 154 1/2 enabled normal    disabled

```

Console>

```

Console> show channel group 154 info gvrp
Admin Port  GVRP      GVRP      GVRP
group       status    registration applicant
-----

```

```

 154 1/1 disabled normal    normal
 154 1/2 disabled normal    normal

```

Console>

```

Console> show channel group 769 info qos

```

```

Chan Port  Qos-Tx  Qos-Rx  Qos-Trust  Qos-DefCos  Qos-Interface
id       PortType PortType Type          0 port-based
-----
769  1/1  2q2t    1q4t    untrusted          0 port-based
769  1/2  2q2t    1q4t    untrusted          0 port-based

```

```

Chan Port  ACL name  Type
id
-----
769  1/1
                               IP
                               IPX
                               MAC
769  1/2
                               IP
                               IPX
                               MAC

```

```
Console>
```

#### Related Commands

[show channel](#)  
[show port channel](#)

# show channel hash

Use the **show channel hash** command to display the channel port the traffic goes to based on the current channel distribution mode.

```
show channel hash channel_id src_ip_addr [dest_ip_addr]
```

```
show channel hash channel_id dest_ip_addr
```

```
show channel hash channel_id src_mac_addr [dest_mac_addr]
```

```
show channel hash channel_id dest_mac_addr
```

```
show channel hash channel_id src_port dest_port
```

```
show channel hash channel_id dest_port
```

Syntax Description		
<i>channel_id</i>	Number of the channel.	
<i>src_ip_addr</i>	Source IP address.	
<i>dest_ip_addr</i>	(Optional) Destination IP address.	
<i>src_mac_addr</i>	Source MAC address.	
<i>dest_mac_addr</i>	(Optional) Destination MAC address.	
<i>src_port</i>	Number of the source port; valid values are from 0 to 65535.	
<i>dest_port</i>	Number of the destination port; valid values are from 0 to 65535.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify the *channel\_id* value, EtherChannel information is shown for all channels. No information is displayed if the channel specified is not in use.

**Examples** This example shows how to display hash information in a channel:

```
Console> show channel hash 769 10.6.1.1 10.6.2.3
Selected channel port:1/2
Console>
```

# show channel mac

Use the **show channel mac** command to display MAC information in the channel.

## show channel mac

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display MAC information in a channel:

```

Console> (enable) show channel mac
Channel  Rcv-Unicast          Rcv-Multicast          Rcv-Broadcast
-----
Channel  Xmit-Unicast            Xmit-Multicast          Xmit-Broadcast
-----
Channel  Rcv-Octet              Xmit-Octet
-----
Channel  Dely-Exced MTU-Exced  In-Discard Lrn-Discrd  In-Lost    Out-Lost
-----

```

# show channelprotocol

Use the **show channelprotocol** command to display the channeling protocol used by each module in the system.

## show channelprotocol

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** PAGP and LACP manage channels differently. When all the ports in a channel get disabled, PAGP removes them from its internal channels list; **show** commands do not display the channel. With LACP, when all the ports in a channel get disabled, LACP does not remove the channel; **show** commands continue to display the channel even though all its ports are down. To determine if a channel is actively sending and receiving traffic with LACP, use the **show port** command to see if the link is up or down.

LACP does not support half-duplex links. If a port is in active or passive mode and becomes half duplex, the port is suspended (and a syslog message is generated). The port is shown as “connected” using the **show port** command and as “not connected” using the **show spantree** command. This discrepancy occurs because the port is physically connected, but it never joined spanning tree. If you set the duplex to full or set the channel mode to off for the port, the port will join spanning tree

For more information about PAGP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

**Examples** This example shows how to display the protocol used by each module in the system:

```

Console> show channelprotocol
          Channel
Module  Protocol
-----  -
1       LACP
2       LACP
3       PAGP
4       LACP
Console>

```

**Related Commands** [set channelprotocol](#)

# show channel traffic

Use the **show channel traffic** command to display channel port utilization based on MAC counters.

**show channel traffic** [*channel\_id*]

<b>Syntax Description</b>	<i>channel_id</i> (Optional) Number of the channel.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	If you do not specify the <i>channel_id</i> value, EtherChannel information is shown for all channels. No information is displayed if the channel specified is not in use.
-------------------------	---

<b>Examples</b>	This example shows how to display traffic information in a channel:
-----------------	---

```

Console> show channel traffic 769
ChanId Port  Rx-Ucst Tx-Ucst Rx-Mcst Tx-Mcst Rx-Bcst Tx-Bcst
-----
   769 1/1    0.00%  0.00%  0.00%  0.00%  0.00%  0.00%
   769 1/2   100.00% 100.00% 100.00% 100.00%  0.00%  0.00%
Console>

```

# show config

Use the **show config** command to display the nondefault system or module configuration.

**show config** [**all**]

**show config** [**system** | *mod*] [**all**]

**show config** **acl location**

Syntax Description	
<b>all</b>	(Optional) Specifies all module and system configuration information, including the IP address.
<b>system</b>	(Optional) Displays system configuration.
<i>mod</i>	(Optional) Displays module configuration.
<b>acl location</b>	Displays ACL configuration file location.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** To view specific information within the **show config** output, if you enter */text* and press the **Return** key at the --More-- prompt, the display starts two lines above the line containing the *text* string. If the text string is not found, "Pattern Not Found" is displayed. You can also enter "n" at the --More-- prompt to search for the last entered *text* string.

**Examples** This example shows how to display the nondefault system and module configuration:

```

Console> (enable) show config
This command shows non-default configurations only.
Use 'show config all' to show both default and non-default configurations.
.....
..

begin
!
# ***** NON-DEFAULT CONFIGURATION *****
!
!
#time: Mon Apr 17 2000, 08:33:09
!
#version 5.5(1)
#System Web Interface Version 5.0(0.25)
!
set editing disable

```

```

!
#frame distribution method
set port channel all distribution mac unknown
!
#snmp
set snmp trap 0.0.0.0
set snmp trap 0.0.0.0
!
#kerberos
set kerberos server 0.0.0.0
set kerberos server 0.0.0.0
set kerberos realm
set kerberos realm
!
#vtp
set vtp domain Lab_Network
set vtp v2 enable
set vtp pruning enable
set vlan 1 name default type ethernet mtu 1500 said 100001 state active
set vlan 2 name VLAN0002 type ethernet mtu 1500 said 100002 state active
set vlan 6 name VLAN0006 type ethernet mtu 1500 said 100006 state active
set vlan 10 name VLAN0010 type ethernet mtu 1500 said 100010 state active
set vlan 20 name VLAN0020 type ethernet mtu 1500 said 100020 state active
set vlan 50 name VLAN0050 type ethernet mtu 1500 said 100050 state active
set vlan 100 name VLAN0100 type ethernet mtu 1500 said 100100 state active
set vlan 152 name VLAN0152 type ethernet mtu 1500 said 100152 state active
set vlan 200 name VLAN0200 type ethernet mtu 1500 said 100200 state active
set vlan 300 name VLAN0300 type ethernet mtu 1500 said 100300 state active
set vlan 303 name VLAN0303 type fddi mtu 1500 said 100303 state active
set vlan 400 name VLAN0400 type ethernet mtu 1500 said 100400 state active
set vlan 500 name VLAN0500 type ethernet mtu 1500 said 100500 state active
set vlan 521 name VLAN0521 type ethernet mtu 1500 said 100521 state active
set vlan 524 name VLAN0524 type ethernet mtu 1500 said 100524 state active
set vlan 570 name VLAN0570 type ethernet mtu 1500 said 100570 state active
set vlan 801 name VLAN0801 type trbrf mtu 4472 said 100801 state active bridge
set vlan 850 name VLAN0850 type ethernet mtu 1500 said 100850 state active
set vlan 917 name VLAN0917 type ethernet mtu 1500 said 100917 state active
set vlan 999 name VLAN0999 type ethernet mtu 1500 said 100999 state active
set vlan 1002 name fddi-default type fddi mtu 1500 said 101002 state active
set vlan 1004 name fddinet-default type fddinet mtu 1500 said 101004 state acti
set vlan 1005 name trbrf-default type trbrf mtu 4472 said 101005 state active b
set vlan 802 name VLAN0802 type trcrf mtu 4472 said 100802 state active parent
set vlan 1003 name trcrf-default type trcrf mtu 4472 said 101003 state active p
set vlan 3 translation 303 translation 0
set vlan 4 translation 304 translation 0
set vlan 5 translation 305 translation 0
set vlan 303 translation 3 translation 0
set vlan 304 translation 4 translation 0
set vlan 305 translation 5 translation 0
set vlan 351 translation 524 translation 0
set vlan 524 translation 351 translation 0
!
#ip
set interface sc0 1 1.10.11.212/255.255.255.0 1.10.11.255

set ip route 0.0.0.0/0.0.0.0          172.20.52.126
set ip route 0.0.0.0/0.0.0.0          172.20.52.125
set ip route 0.0.0.0/0.0.0.0          172.20.52.121
!
#rcp
set rcp username 1
!
#dns
set ip dns server 171.68.10.70 primary

```

```

set ip dns server 171.68.10.140
set ip dns enable
set ip dns domain cisco.com
!
#spantree
set spantree fwddelay 4      801
set spantree maxage 10      801
#portfast
set spantree portfast bpdu-guard enable
#vlan 802
set spantree fwddelay 4      802
set spantree maxage 10      802
set spantree portstate 802 block 801
#vlan 1003
set spantree fwddelay 4      1003
set spantree maxage 10      1003
set spantree portstate 1003 block 1005
!
#syslog
set logging server 172.20.101.182
!
#set boot command
set boot config-register 0x100
set boot system flash bootflash:cat6000-sup.5-5-1.bin
!
#HTTP commands
set ip http server enable
set ip http port 1922
!
# default port status is disable
!
#mls
set mls nde disable
!
#qos
set qos enable
set qos map lq4t 1 1 cos 2
set qos map lq4t 1 1 cos 3
set qos map lq4t 1 1 cos 4
set qos map lq4t 1 1 cos 5
set qos map lq4t 1 1 cos 6
set qos map lq4t 1 1 cos 7
!
#Accounting
set accounting commands enable config stop-only tacacs+
!
# default port status is enable
!
#module 1 : 2-port 1000BaseX Supervisor
!
#module 2 empty
!
#module 3 : 48-port 10/100BaseTX (RJ-45)
set spantree portfast 3/8 enable
!
#module 4 empty
!
#module 5 : 48-port 10/100BaseTX (RJ-45)
!
#module 6 empty
!
set vlan 100 6/1
set spantree portcost 6/1 200
!

```

```

#module 7 : 24-port 10/100BaseTX Ethernet
set vlan 5      7/5
set vlan 100   7/23
set vlan 200   7/9
set port disable 7/5

set port name      7/9 1528 Hub
set port security 7/10 enable
set port security 7/10 maximum 200
set port security 7/10 00-11-22-33-44-55
set port security 7/10 00-11-22-33-44-66
set port security 7/10 00-11-22-33-44-77
set port security 7/10 violation restrict
set port security 7/10 age 30
set trunk 7/1 desirable isl 1-1005
set trunk 7/2 desirable isl 1-1005
set trunk 7/3 desirable isl 1-1005
set trunk 7/4 desirable isl 1-1005
set trunk 7/10 off negotiate 1-1005
set trunk 7/23 on isl 1-1005
set spantree portcost 7/23 150
set spantree portvlancost 7/23 cost 50 100
!
#module 8 empty
!
#module 9 empty
!
#module 15 empty
!
#module 16 empty
end
Console>

```

This example shows how to display default and nondefault configuration information:

```

Console> (enable) show config all
begin
!
# ***** ALL (DEFAULT and NON-DEFAULT) CONFIGURATION *****
!
!
#Current time: Mon Apr 17 2000, 08:33:09
!
#version 5.51(1)
!
set password $1$FMFQ$HfZR5DUzVHIRhrz4h6V70
set enablepass $1$FMFQ$HfZR5DUzVHIRhrz4h6V70
set prompt Console>
set length 24 default
set logout 20
set banner motd ^C^C
!
#system
set system baud 9600
set system modem disable
set system name
set system location
set system contact
!
.
.
.
Console>

```

This example shows how to display nondefault system configuration information:

```
Console> (enable) show config system
begin
!
# ***** NON-DEFAULT CONFIGURATION *****
!
#time: Mon Apr 17 2000, 08:33:09
!
#version 5.5(1)
!
!
#set boot command
set boot config-register 0x2
set boot system flash bootflash:kk1
end
Console>
```

This example shows how to display all system default and nondefault configuration information:

```
Console> (enable) show config system all
begin
!
#system
set system baud 9600
set system modem disable
set system name
set system location
set system contact
!
end
Console>
```

This example shows how to display module nondefault configuration information:

```
Console> (enable) show config 1
.....
begin
!
# ***** NON-DEFAULT CONFIGURATION *****
!
!
#time: Mon Apr 17 2000, 08:33:09
!
#version 5.5(1)
!
!
#module 1 : 4-port 10/100BaseTX Supervisor
!
end
Console>
```

This example shows how to display the ACL configuration file location:

```
Console> (enable) show config acl location
ACL configuration is being saved in NVRAM.
Console> (enable)
```

#### Related Commands

[clear config](#)  
[write](#)

# show config mode

Use the **show config mode** command to display the system configuration mode currently running on the switch.

## **show config mode**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to display the current system configuration mode when set to text:

```
Console> (enable) show config mode
System configuration mode set to text.
System configuration file = bootflash:switch.cfg
Console> (enable)
```

This example shows how to display the current system configuration mode when set to binary:

```
Console> (enable) show config mode
System configuration mode set to binary.
Console> (enable)
```

---

**Related Commands** [set config mode](#)

# show config qos acl

Use the **show config qos acl** command to display the committed access lists in a command line format.

```
show config qos acl {acl_name | all}
```

Syntax Description	<i>acl_name</i>	Unique name that identifies the list to which the entry belongs.
	<b>all</b>	Specifies all committed access lists.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display all committed access lists:

```
Console> show config qos acl all
#ipx1:
set qos acl ipx ipx1 dscp 1 any AA BB
set qos acl ipx ipx1 dscp 1 0 AA CC
#default-action:
set qos acl default-action ip dscp 0
set qos acl default-action ipx dscp 0
set qos acl default-action mac dscp 0
Console>
```

This example shows how to display a specific committed access list:

```
Console> show config qos acl my_ip_acl
#my_ip_acl:
set qos acl ip my_ip_acl trust-dscp microflow my-micro tcp 1.2.3.4/255.0.0.0 eq
port 21 172.20.20.1/255.255.255.0 tos 5
set qos acl ip my_ip_acl trust-dscp microflow my-micro aggregate agg tcp
173.22.3.4/255.0.0.0 eq port 19 173.22.20.1/255.255.255.0 tos 5
Console>
```

**Related Commands** [commit](#)

# show cops

Use the **show cops** command to display COPS information.

**show cops info** [**diff-serv** | **rsvp**] [**noalias**]

**show cops roles**

<b>Syntax Description</b>	<b>info</b> Displays COPS status and configuration information.
	<b>diff-serv</b> (Optional) Specifies the differentiated services server table.
	<b>rsvp</b> (Optional) Specifies the RSVP server table.
	<b>noalias</b> (Optional) Forces the display to show only IP addresses, not IP aliases.
	<b>roles</b> Displays the ports assigned to each role.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** A few minutes after a switchover occurs between active and redundant supervisor engines, if you enter the **show cops roles** command, the output may be incorrect. If this is the case, the following warning is displayed:

```
COPS High Availability Switch Over in progress, hardware may be
programmed differently than as suggested by the output of these
commands.
```

**Examples** This example shows how to display COPS status and configuration information:

```
Console> show cops info
COPS general configuration
-----
COPS domain name           : -
Connection retry intervals : initial   = 30 seconds
                           : increment = 30 seconds
                           : max       = 300 seconds

COPS Diff-Serv client state
-----
COPS connection state      :not-connected
Last active server         :172.20.25.3 [port:3288]
Primary configured server  :172.20.25.3 [port:3288]
Secondary configured server :-
COPS RSVP client state
-----
COPS connection state      : connected
Last active server         : 171.21.34.56
```

```

Primary configured server : 171.21.34.56 [3288]
Secondary configured server : 171.21.34.57 [3288]
Console>

```

This example shows how to display COPS RSVP status and configuration information:

```

Console> show cops info rsvp
COPS general configuration
-----
COPS domain name          : -
Connection retry intervals : initial   = 30 seconds
                           increment  = 30 seconds
                           max        = 300 seconds

COPS RSVP client state
-----
COPS connection state     : connected
Last active server        : 171.21.34.56
Primary configured server  : 171.21.34.56 [3288]
Secondary configured server : 171.21.34.57 [3288]
Console>

```

This example shows how to display the ports assigned to each role:

```

Console> show cops roles
Admin Roles                Mod/Ports
-----
access_port                1/1-2,3/1-5,3/8
backbone_port              1/1-2,3/8
branch_office_port         3/6-7,4/1-8
net_port                   -

Oper Roles                 Mod/Ports
-----
access_port                1/1-2,3/1-5,3/8
backbone_port              1/1-2,3/8
branch_office_port         3/6-7,4/1-8
Console>

```

This example shows how to display only IP addresses, not IP aliases:

```

Console> show cops noalias
COPS general configuration
-----
COPS domain name          : -
Connection retry intervals : initial   = 30 seconds
                           increment  = 30 seconds
                           max        = 300 seconds

COPS Diff-Serv client state
-----
COPS connection state     : not-connected
TCP connection state      : not-connected
Last active server        : -
Primary configured server  : -
Secondary configured server : -

COPS RSVP client state
-----
COPS connection state     : not-connected
TCP connection state      : not-connected
Last active server        : -
Primary configured server  : -
Secondary configured server : -
Console>

```

**Related Commands**

[clear cops](#)  
[set cops](#)

# show counters

Use the **show counters** command to display hardware counters for a port, all ports on a module, or a supervisor engine.

**show counters** {*mod* | *mod/port*}

**show counters supervisor**

Syntax Description		
	<i>mod</i>	Number of the module.
	<i>mod/port</i>	Number of the module and the port.
	<b>supervisor</b>	Displays counters for the supervisor engine.

**Defaults** This command has no default setting.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The “Last-Time-Cleared” timestamp at the end of the **show counters** {*mod* | *mod/port*} command output is either the last time the counters were cleared on the specified port or the last time that the module was inserted or the switch was reset, whichever happened last.

**Examples** This example shows how to display the counters for module 2, port 1:



**Note**

The counters displayed may change depending on the module type queried.

```

Console> show counters 2/1
Generic counters version 1
64 bit counters
0  rxHCTotalPkts                =                2170558
1  txHCTotalPkts                =                2588911
2  rxHCUnicastPkts             =                2142669
3  txHCUnicastPkts             =                2585457
4  rxHCMulticastPkts           =                 19552
5  txHCMulticastPkts           =                 1789
6  rxHCBroadcastPkts           =                 8332
7  txHCBroadcastPkts           =                 1665
8  rxHCOctets                   =                190513843
9  txHCOctets                   =                227423299
10 rxTxHCPkts64Octets          =                 20996
11 rxTxHCPkts65to127Octets     =                4737279
12 rxTxHCPkts128to255Octets    =                 1170
13 rxTxHCPkts256to511Octets    =                  16
14 rxTxHCPkts512to1023Octets   =                  8

```

```

15 rxTxHCpkts1024to1518Octets      =          0
16 rxDropEvents                    =          0
17 txHCTrunkFrames                  =          0
18 rxHCTrunkFrames                  =          0
19 rxHCDropEvents                   =          0
32 bit counters
0  rxCRCAAlignErrors               =          0
1  rxUndersizedPkts                =          0
2  rxOversizedPkts                 =          0
3  rxFragmentPkts                  =          0
4  rxJabbers                        =          0
5  txCollisions                     =          0
6  ifInErrors                       =          0
7  ifOutErrors                      =          0
8  ifInDiscards                     =          0
9  ifInUnknownProtos               =          0
10 ifOutDiscards                    =          0
11 txDelayExceededDiscards          =          0
12 txCRC                            =          0
13 linkChange                       =          2
Dot3 counters version 1
0  dot3StatsAlignmentErrors         =          0
1  dot3StatsFCSErrors               =          0
2  dot3StatsSingleColFrames         =          0
3  dot3StatsMultiColFrames         =          0
4  dot3StatsSQETestErrors           =          0
5  dot3StatsDeferredTransmissions   =          0
6  dot3StatsLateCollisions          =          0
7  dot3StatsExcessiveCollisions     =          0
8  dot3StatsInternalMacTransmitErrors =          0
9  dot3StatsCarrierSenseErrors      =          0
10 dot3StatsFrameTooLongs           =          0
11 dot3StatsInternalMacReceiveErrors =          0
Flowcontrol counters version 1
0  txPause                          =          0
1  rxPause                          =          0
Last-Time-Cleared
-----
Tue Mar 21 2000, 19:19:03
Console>

```

This example shows how to display the counters for the supervisor engine:

```

Console> show counters supervisor
Acl Manager Error Stats Counter(s)
=====
IP checksum errors      = 00000

Forwarding Engine Error Stats Counters
=====
IP length errors       = 0
IP too short errors   = 0
IP checksum errors     = 0
IPX length errors      = 0
IPX too short errors  = 0
Console>

```

Table 2-28 describes the possible fields in the **show counters** command output.

**Table 2-28** *show counters Command Output Fields*

Field	Description
<b>64-bit counters</b>	
rxHCTotalPkts	Number of packets (including bad packets, broadcast packets, and multicast packets) received on a link.
txHCTotalPkts	Number of packets (including bad packets, broadcast packets, and multicast packets) transmitted on a link.
rxHCUnicastPkts	Number of packets, delivered by this sublayer to a higher (sub)layer, which were not addressed to a multicast or broadcast address at this sublayer.
txHCUnicastPkts	Number of packets that higher-level protocols requested be transmitted, and which were not addressed to a multicast or broadcast address at this sublayer, including those that were discarded or not sent.
rxHCMulticastPkts	Number of packets, delivered by this sublayer to a higher (sub)layer, which were addressed to a multicast address at this sublayer. For a MAC layer protocol, this includes both Group and Functional addresses.
txHCMulticastPkts	Number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sublayer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.
rxHCBroadcastPkts	Number of packets, delivered by this sublayer to a higher (sub)layer, which were addressed to a broadcast address at this sublayer.
txHCBroadcastPkts	Number of packets that higher-level protocols requested be transmitted, and which were addressed to a broadcast address at this sublayer, including those that were discarded or not sent.
rxHCOctets	Number of octets received on the interface, including framing characters.
txHCOctets	Number of octets transmitted out of the interface, including framing characters.
rxTxHCPkts64Octets	Number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets).
rxTxHCPkts65to127Octets	Number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).
rxTxHCPkts128to255Octets	Number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).
rxTxHCPkts256to511Octets	Number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).
rxTxHCpkts512to1023Octets	Number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).
rxTxHCpkts1024to1518Octets	Number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).
rxDropEvents <sup>1</sup>	Number of events in which packets were dropped by the probe due to lack of resources.

Table 2-28 *show counters Command Output Fields (continued)*

Field	Description
<b>32-bit counters</b>	
rxCRCAAlignErrors	Number of packets received that had a length (excluding framing bits, but including FCS octets) between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
rxUndersizedPkts	Number of packets received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well-formed.
rxOversizedPkts	Number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well-formed.
rxFragmentPkts <sup>2</sup>	Number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
rxJabbers <sup>3</sup>	Number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
txCollisions <sup>4</sup>	The best estimate of the total number of collisions on this Ethernet segment.  The value returned will depend on the location of the RMON probe. Section 8.2.1.3 (10BASE5) and section 10.3.1.3 (10BASE2) of IEEE standard 802.3 states that a station must detect a collision in the receive mode if three or more stations are transmitting simultaneously. A repeater port must detect a collision when two or more stations are transmitting simultaneously. Thus, a probe placed on a repeater port could record more collisions than a probe connected to a station on the same segment would. Probe location plays a much smaller role when considering 10BASE-T.
ifInErrors	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol.
ifOutErrors	Number of octets transmitted out of the interface, including framing characters.
ifInDiscards	Number of inbound packets that were chosen to be discarded even though no errors had been detected to prevent their delivery to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
ifInUnknownProtos	Number of inbound packets with unknown protocols.
ifOutDiscards	Number of inbound packets chosen to be discarded even though no errors had been detected to prevent their delivery to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.
txDelayExceededDiscards	Number of frames discarded by this port due to excessive transmit delay.
txCRC	Number of CRC errors.
linkChange	Number of times the port toggled between a connect state to a non-connect state.
<b>Dot3 counters version 1</b>	
dot3StatsAlignmentErrors <sup>5</sup>	A count of frames received on a particular interface that are not an integral number of octets in length and do not pass the FCS check.
dot3StatsFCSErrors <sup>6</sup>	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check.

Table 2-28 show counters Command Output Fields (continued)

Field	Description
dot3StatsSingleColFrames	A count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision.  A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts, ifOutMulticastPkts, or ifOutBroadcastPkts, and is not counted by the corresponding instance of the dot3StatsMultipleCollisionFrames object.
dot3Stats MultiColFrames	A count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts, ifOutMulticastPkts, or ifOutBroadcastPkts, and is not counted by the corresponding instance of the dot3StatsSingleCollisionFrames object.
dot3StatsSQETestErrors	A count of times that the SQE TEST ERROR message is generated by the PLS sublayer for a particular interface. The SQE TEST ERROR message is defined in section 7.2.2.2.4 of ANSI/IEEE 802.3-1985 and its generation is described in section 7.2.4.6 of the same document.
dot3StatsDeferred Transmissions	A count of frames for which the first transmission attempt on a particular interface is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions.
dot3StatsLateCollisions <sup>7</sup>	Number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet.
dot3StatsExcessiveCollisions	A count of frames for which transmission on a particular interface fails due to excessive collisions.
dot3StatsInternalMacTransmit Errors <sup>8</sup>	A count of frames for which transmission on a particular interface fails due to an internal MAC sublayer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the dot3StatsLateCollisions object, the dot3StatsExcessiveCollisions object, or the dot3StatsCarrierSenseErrors object.
dot3StatsCarrierSenseErrors	Number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame on a particular interface. The count represented by an instance of this object is incremented at most once per transmission attempt, even if the carrier sense condition fluctuates during a transmission attempt.
dot3StatsFrameTooLongs	A count of frames received on a particular interface that exceeds the maximum permitted frame size. The count represented by an instance of this object is incremented when the frameTooLong status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are counted exclusively according to the error status presented to the LLC.
dot3StatsInternalMacReceiveErrors <sup>9</sup>	A count of frames for which reception on a particular interface fails due to an internal MAC sublayer receive error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the dot3StatsFrameTooLongs object, the dot3StatsAlignmentErrors object, or the dot3StatsFCSErrors object.
<b>Flowcontrol counters version 1</b>	
txPause	Number of control frames transmitted at the gigabit level. This counter is valid only on a Gigabit Ethernet port.

Table 2-28 *show counters Command Output Fields (continued)*

Field	Description
rxPause	Number of control frames received at the gigabit level. This counter is valid only on a Gigabit Ethernet port.
rxTotalDrops	The rxTotalDrops field includes these counters: <ul style="list-style-type: none"> <li>• Number of bad packets because of a CRC error, a coding violation, or a sequence error.</li> <li>• Number of CBL blocking drops.</li> <li>• Number of instances of invalid encapsulation.</li> <li>• Number of broadcast suppression drops.</li> <li>• Number of drops because the packet length is less than 64 or greater than 1518.</li> </ul>

1. This number is not necessarily the number of packets dropped; it is just the number of times this condition has been detected.
2. It is normal for etherStatsFragments to increment because it counts both runts (which are normal occurrences due to collisions) and noise hits.
3. This definition of jabber is different than the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2), which define jabber as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms.
4. An RMON probe inside a repeater should ideally report collisions between the repeater and one or more other hosts (transmit collisions as defined by IEEE 802.3k) plus receiver collisions observed on any coax segments to which the repeater is connected.
5. This number is incremented when the alignmentError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are counted exclusively according to the error status presented to the LLC.
6. This number is incremented when the frameCheckError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are counted exclusively according to the error status presented to the LLC.
7. 512 bit-times corresponds to 51.2 microseconds on a 10-Mbps system. A (late) collision represented by an instance of this object is also considered as a (generic) collision for other collision-related statistics.
8. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of transmission errors on a particular interface not otherwise counted.
9. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of receive errors on a particular interface not otherwise counted.

#### Related Commands [clear counters](#)

# show crypto key

Use the **show crypto key** command to display RSA key pair information.

**show crypto key**

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The **crypto** commands are supported on systems that run these image types only:

- supk9 image—for example, cat6000-supk9.6-1-3.bin
- supcvk9 image—for example, cat6000-supcvk9.6-1-3.bin

**Examples** This example shows how to display key pair information:

```
Console> (enable) show crypto key
RSA keys was generated at: Tue Dec 14 1999, 14:22:48
1024 37 1120518394839901301166714853840995094745037456682394891249441779951543727187159999
643683033910964386179342272044371326668692894898498425705315929789724607692104535472010393
868648783669579338660482094092720514951237657028608860832162809370173090068651870589350241
85402826063185974102411558894697025607154868421
Console> (enable)
```

**Related Commands** [clear crypto key rsa](#)  
[set crypto key rsa](#)

# show default

Use the **show default** command to check the status of the default port status setting.

## **show default**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Usage Guidelines** The command shows whether the **set default portstatus** command is in disable or enable mode.

---

**Examples** This example shows how to display the status of the default port status:

```
Console> (enable) show default
portstatus: disable
Console> (enable)
```

---

**Related Commands** [set default portstatus](#)

# show dot1q-all-tagged

Use the **show dot1q-all-tagged** command to display the dot1q tagging status.

**show dot1q-all-tagged**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to display dot1q tagging status:

```
Console> (enable) show dot1q-all-tagged  
Dot1q all tagged mode disabled  
Console> (enable)
```

---

**Related Commands** [set dot1q-all-tagged](#)

# show dot1x

Use the **show dot1x** command to display the system dot1x capabilities, protocol version, and timer values.

## show dot1x

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the dot1x information for the system:

```
Console> show dot1x
PAE Capability           Authenticator Only
Protocol Version         1
system-auth-control      enabled
max-req                  2
quiet-period             60 seconds
re-authperiod            3600 seconds
server-timeout           30 seconds
supp-timeout             30 seconds
tx-period                 30 seconds

Console>
```

---

**Related Commands** [clear dot1x config](#)  
[set dot1x](#)

# show dvlan statistics

Use the **show dvlan statistics** command to display dynamic VLAN statistics.

**show dvlan statistics**

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display dynamic VLAN statistics:

```
Console> show dvlan statistics
VMPS Client Statistics
-----
VQP Queries:                0
VQP Responses:              0
Vmps Changes:               0
VQP Shutdowns:             0
VQP Denied:                 0
VQP Wrong Domain:          0
VQP Wrong Version:         0
VQP Insufficient Resource: 0
Console>
```

**Related Commands** [reconfirm vmpls](#)

# show environment

Use the **show environment** command to display environmental, temperature, and inline power status information.

**show environment** [**all** | **temperature** | {**power** [*mod*]}]

<b>Syntax Description</b>	<b>all</b>	(Optional) Displays environmental status information (for example, power supply, fan status, and temperature information) and information about the power available to the system.
	<b>temperature</b>	(Optional) Displays temperature information.
	<b>power</b>	(Optional) Displays inline power status.
	<i>mod</i>	(Optional) Number of the module to display inline power status

**Defaults** If you do not enter a keyword, environmental status information (for example, power supply, fan status, and temperature information) only is displayed.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The **temperature** option is not supported by the NAM.  
In the output of the **show environment all** command, environmental status and temperature information for the NAM module is not supported.

In the output of the **show environment temperature** and **show environment all** commands, you will notice three slot 1 displays. The first slot 1 is the actual supervisor engine. The second slot 1 is the switching engine, which is on the supervisor engine (slot 1) and has its own Intake, Exhaust, Device 1, and Device 2 temperature outputs. The third slot 1 is the MSFC, which is also on the supervisor engine, and has its own Intake, Exhaust, Device 1, and Device 2 temperature outputs.

If you see a partial-deny card status, this is an indication that some module ports are inline powered but not all the ports on the module are inline powered.

**Examples** This example shows how to display environmental status information:

```

Console> show environment
Environmental Status (. = Pass, F = Fail, U = Unknown, N = Not Present)
  PS1:..   PS2:N   PS1 Fan:..   PS2 Fan:N
  Chassis-Ser-EEPROM:..   Fan:..
  Clock(A/B):A           Clock A:..   Clock B:..
  VTT1:..   VTT2:..   VTT3:..
Console>

```

This example shows how to display environmental status information and details about the power available to the system:

```

Console> show environment all
Environmental Status (. = Pass, F = Fail, U = Unknown, N = Not Present)
  PS1: .    PS2: N    PS1 Fan: .    PS2 Fan: N
  Chassis-Ser-EEPROM: .    Fan: .
  Clock(A/B): A    Clock A: .    Clock B: .
  VTT1: .    VTT2: .    VTT3: .

Slot          Intake          Exhaust          Device 1          Device 2
-----
Temperature  Temperature  Temperature  Temperature  Temperature
-----
1             24C(50C,65C)  32C(60C,75C)  27C           32C
3             N/A           N/A           N/A           N/A
5             22C(50C,65C)  27C(60C,75C)  28C           28C
1 (Switch-Eng) 22C(50C,65C)  22C(60C,75C)  N/A           N/A
1 (MSFC)       26C(50C,65C)  30C(60C,75C)  N/A           N/A

Chassis Modules
-----
VTT1: 25C(85C,100C)
VTT2: 24C(85C,100C)
VTT3: 25C(85C,100C)

PS1 Capacity: 1153.32 Watts (27.46 Amps @42V)
PS2 Capacity: none
PS Configuration : PS1 and PS2 in Redundant Configuration.
Total Power Available: 1153.32 Watts (27.46 Amps @42V)
Total Power Available for Line Card Usage: 1153.32 Watts (27.46 Amps @42V)
Total Power Drawn From the System: 453.18 Watts (10.79 Amps @42V)
Remaining Power in the System: 700.14 Watts (16.67 Amps @42V)
Default Inline Power allocation per port: 2.00 Watts (0.04 Amps @42V)

Slot power Requirement/Usage :

Slot Card Type          PowerRequested PowerAllocated CardStatus
Watts  A @42V Watts  A @42V
-----
1  WS-X6K-SUP1A-2GE      138.60  3.30  138.60  3.30  ok
2                               0.00  0.00  138.60  3.30  none
3  WS-X6380-NAM          63.00  1.50  63.00  1.50  ok
5  WS-X6248-RJ-45       112.98  2.69  112.98  2.69  ok
Console>

```

This example shows how to display temperature information:

```

Console> show environment temperature

Slot          Intake          Exhaust          Device 1          Device 2
-----
Temperature  Temperature  Temperature  Temperature  Temperature
-----
1             25C(50C,65C)  34C(60C,75C)  27C           32C
3             N/A           N/A           N/A           N/A
5             24C(50C,65C)  27C(60C,75C)  28C           29C
1 (Switch-Eng) 22C(50C,65C)  22C(60C,75C)  N/A           N/A
1 (MSFC)       28C(50C,65C)  32C(60C,75C)  N/A           N/A

Chassis Modules
-----
VTT1: 25C(85C,100C)
VTT2: 25C(85C,100C)
VTT3: 25C(85C,100C)
Console> (enable)

```

This example shows how to display the inline power for all modules:

```

Console> show environment power
PS1 Capacity: 1153.32 Watts (27.46 Amps @ 42V)
PS2 Capacity: none
PS Configuration : PS1 and PS2 in Redundant Configuration.
Total Power Available: 1153.32 Watts (27.46 Amps @ 42V)
Total Power Available for Line Card Usage: 1153.32 Watts (27.46 Amps @ 42V)
Total Power Drawn From the System: 289.80 Watts (6.90 Amps @ 42V)
Remaining Power in the System: 863.52 Watts (20.56 Amps @42V)
Default inline power allocation: 10.5 Watts/port (0.25 Amps @ 42V)

Slot power Requirement/Usage :

Slot  Card-Type                Power-Requested  Power-Allocated  Card-Status
      Watts    A @ 42V    Watts    A @ 42V
-----
1      none                0.00    0.00    126.42  3.01    none
2      WS-X6K-SUP1-2GE       138.60  3.30    138.60  3.30    ok
3      WS-X6348-RJ-45        114.24  2.72    151.20  3.60    ok
5      WS-X6348-RJ-45        109.20  2.60    100.88  2.40    partial-deny
Console>

```

This example shows how to display the inline power status for a specific module:

```

Console> show environment power 9
Module 9:
Default Inline Power allocation per port: 9.500 Watts (0.22 Amps @42V)
Total inline power drawn by module 9: 0 Watt

Slot power Requirement/Usage :

Slot Card Type                PowerRequested  PowerAllocated  CardStatus
      Watts    A @42V    Watts    A @42V
-----
9      WS-X6348                123.06  2.93    123.06  2.93    ok

Default Inline Power allocation per port: 9.500 Watts (0.22 Amps @42V)
Port      InlinePowered      PowerAllocated
      Admin Oper    Detected  mWatt  mA @42V
-----
9/1 auto off    no      0      0
9/2 auto off    no      0      0
9/3 auto off    no      0      0
9/4 auto off    no      0      0
9/5 auto off    no      0      0
.
.
.
Console>

```

Table 2-29 describes the fields in the **show environment** output.

**Table 2-29 show environment Command Output Fields**

Field	Description
<b>Environmental Status<sup>1</sup></b>	
PS1: and PS2:	Power supply status.
PS1 Fan: and PS2 Fan:	Power supply fan status.
Chassis-Ser-EEPROM:	Chassis serial EEPROM status.
Fan:	Fan status.
Clock A: and Clock B:	Clock A and B status.
VTT1:, VTT2:, and VTT3:	VTT module status. VTT modules are power monitors for the chassis backplane. A minor system alarm is signalled when one of the three VTTs fails, and a major alarm is signalled when two or more VTTs fail.
Intake Temperature and Exhaust Temperature	Temperature of the air flow as it enters, goes over the modules, and exits the chassis. The current temperature is listed first, with the minor and major alarm temperatures listed in parentheses.
Device 1 Temperature and Device 2 Temperature	The devices are additional temperature sensors measuring the internal temperature on each module indicated. The current temperature is listed first, with the warning and critical alarm temperatures listed in parentheses.
<b>Chassis Modules</b>	
VTT1:, VTT2:, and VTT3:	Temperature of the VTT modules. The current temperature is listed first, with the minor and major alarm temperature settings listed in parentheses.
PS1 Capacity: and PS2 Capacity:	Power supply capacity.
PS Configuration:	Power supply configuration.
Total Power Available:	Total available power.
Total Power Available for Line Card Usage:	Total power available for module use.
Total Power Drawn From the System:	Total power drawn from the system.
Remaining Power in the System:	Remaining power in the system.
Default Inline Power allocation per port:	Default inline power allocation per port.
<b>Slot power Requirement/Usage</b>	
Power Requested	Module power requested.
Power Allocated	Module power allocation.
Card Status	Module status (no, ok, partial-deny <sup>2</sup> , unknown, power-bad, and power-deny).

**Table 2-29** *show environment Command Output Fields (continued)*

Field	Description
Total inline power drawn	Total inline power drawn from the system.
InlinePowered—Admin	Inline power management status—auto, on, and off.
InlinePowered—Oper	Inline power status—on indicates power is being supplied by that port, off indicates power is not being supplied by the port, denied indicates there is not have enough power available to provide to the port.
InlinePowered—Detected	Status of whether inline power is detected.

1. Environmental status indications are the following: . = Pass, F = Fail, U = Unknown, and N = Not Present.
2. The partial-deny state indicates that some ports but not all ports in the module are inline powered.

**Related Commands**

[set inlinepower defaultallocation](#)  
[show environment](#)  
[show port inlinepower](#)

# show errdisable-timeout

Use the **show errdisable-timeout** command to display the configuration and status of the errdisable timeout.

## show errdisable-timeout

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If your system is configured with a Supervisor Engine 2, the crossbar-fallback error may be displayed in the ErrDisable Reason field.

**Examples** This example shows how to display the errdisable timeout configuration and status:

```

Console> show errdisable-timeout
ErrDisable Reason   Timeout Status
-----
bpdu-guard          Disable
channel-misconfig  Disable
duplex-mismatch     Disable
udld                Enable
crossbar-fallback  Disable
other               Disable

Interval: 300 seconds

Ports that will be enabled at the next timeout:
Port  ErrDisable Reason  Port ErrDisableTimeout  Action on Timeout
-----
3/3   udld                Disable                 Remain Disabled
3/4   udld                Enable                  Enabled
Console>(enable)

```

**Related Commands** [set errdisable-timeout](#)

# show errordetection

Use the **show errordetection** command to display error detection settings.

## **show errordetection**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the error detection settings:

```
Console> show errordetection
Inband error detection:      disabled
Memory error detection:     enabled
Port counter error detection: enabled
Console> (enable)
```

---

**Related Commands** [set errordetection](#)

# show fabric channel

Use the **show fabric channel** command to display Switch Fabric Module information.

**show fabric channel counters** [*mod*]

**show fabric channel utilization**

**show fabric channel switchmode** [*mod*]

Syntax Description		
<b>counters</b>		Displays fabric channel counter information.
<i>mod</i>		(Optional) Number of the Switch Fabric Module.
<b>utilization</b>		Displays fabric channel utilization information.
<b>switchmode</b>		Displays switch mode and fabric channel status.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** These commands are supported on systems configured with a Switch Fabric Module and the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

In the **show fabric channel switchmode** command output, the Fab Chan field displays the module channel number and the correspondent fabric channel number in pairs. The first number is the fabric channel number associated with the module (valid value is 0) and the second number is the fabric channel number to the Catalyst 6500 series Switch Fabric Module (valid values are 0 to 17).

For the Switch Fabric Module, the Switch Mode and Channel Status fields will show “n/a.”

In the **show fabric channel switchmode** command output, the Switch Mode field displays one of the following modes:

- Flow-through mode—In this mode, data passes between the local bus and the supervisor engine bus.
- Truncated mode—In this mode, the truncated data is sent over the switch fabric channel if both the destination and the source modules are fabric-enabled modules. If either the source or destination module is not a fabric-enable module, the data goes through the switch fabric channel and the data bus. The Switch Fabric Module does not get involved when traffic is forwarded between nonfabric-enabled modules.
- Compact mode—In this mode, a compact version of the Dbus header is forwarded over the switch fabric channel, delivering the best possible switching rate. Nonfabric-enabled modules do not support the compact mode and will generate CRC errors if they receive frames in compact mode.

**Examples**

This example shows how to display fabric channel counter information for a specific module:

```
Console> show fabric channel counters 2
Channel 0 counters:
0 rxErrors                =                0
1 txErrors                =                0
2 txDropped               =                0
Console>
```

This example shows how to display fabric channel utilization information:

```
Console> show fabric channel utilization
Fab Chan Input Output
-----
      0    0%    0%
      1    0%    0%
      2    0%    0%
      3    0%    0%
      .
      .
      .
     15    0%    0%
     16    0%    0%
     17    0%    0%
Console>
```

This example shows how to display switch mode and fabric channel status:

```
Console> show fabric channel switchmode
Global switching mode: flow through
Module Num Fab Chan Fab Chan Switch Mode Channel Status
-----
      2          1  0, 1  flow through ok
      3          0  n/a  n/a          n/a
      5         18  0, 0  n/a          unknown
      5         18  1, 1  n/a          ok
      .
      .
      .
      5         18 15, 15 n/a          unknown
      5         18 16, 16 n/a          unknown
      5         18 17, 17 n/a          unknown
     16          0 n/a    n/a          n/a
Console>
```

Table 2-30 describes the fields in the **show fabric channel** output.

**Table 2-30** show fabric channel Command Output Fields

Field	Description
rxErrors	Number of received errors.
txErrors	Number of transmitted errors.
txDropped	Number of dropped transmitted packets.
Input	Percentage of input traffic utilization.
Output	Percentage of output traffic utilization.
Num Fab Chan	Number of fabric channels associated with the module.
Global switching mode	Global switching mode of the switch (flow through, truncated, and compact).

*Table 2-30 show fabric channel Command Output Fields (continued)*

Field	Description
Fab Chan	Fabric channel number; see the “Usage Guidelines” section for additional information.
Switch Mode	Channel switch mode type (flow through, truncated, and compact).
Channel Status	Channel status (ok, sync error, CRC error, heartbeat error, buffer error, timeout error, or unknown).

Related Commands [switch fabric](#)

# show file

Use the **show file** command to display the contents of a file that have been saved to Flash memory.

**show file** [*device:*]*filename* [**dump**]

<b>Syntax Description</b>	<i>device:</i> (Optional) Device where the Flash memory resides.
	<i>filename</i> Name of the configuration file.
	<b>dump</b> (Optional) Shows the hexadecimal dump of the file.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A colon (:) is required after the specified device.

**Examples** This example shows how to display the contents of the configuration file saved to Flash memory:

```
Console> (enable) show file slot0:cfgfile
begin
!
#version 5.4
!
set password $1$FMFQ$HfZR5DUzVHIRhrz4h6V70
set enablepass $1$FMFQ$HfZR5DUzVHIRhrz4h6V70
set prompt Console>
set length 24 default
!
#system
set system baud 9600
set system modem disable
...
Console> (enable)
```

This example shows how to display the hexadecimal dump from a file:

```
Console> (enable) show file slot:cfgfile dump
8099d140 0A626567 696E0A21 0A237665 7273696F .begin!.#versio
8099d150 6E20352E 3328302E 31312942 4F552D45 n 5.3(0.11)BOU-E
8099d160 6E670A21 0A736574 20706173 73776F72 ng!.set passwor
8099d170 64202431 24464D46 51244866 5A523544 n $1$FMFQ$HfZR5D
8099d180 55737A56 48495268 727A3468 36563730 UszVHIRhrz4h6V70
8099d190 0A736574 20656E61 626C6570 61737320 .set enablepass
8099d1a0 24312446 4D465124 48665A52 35445573 $1$FMFQ$HfZR5DUz
8099d1b0 7A564849 5268727A 34683656 37300A73 zVHIRhrz4h6V70.s
...
```

# show flash

Use the **show flash** command to list bootflash or Flash PC card information, including file code names, version numbers, volume ID, status, and sizes.

## show flash devices

**show flash** *[[m/]device:]* [**all** | **chips** | **filesys**]

Syntax Description	
<i>m/</i>	(Optional) Module number of the supervisor engine containing the Flash device.
<i>device:</i>	(Optional) Valid devices are <b>bootflash</b> and <b>slot0</b> .
<b>all</b>	(Optional) Lists deleted files, undeleted files, and files with errors on a Flash memory device.
<b>chips</b>	(Optional) Shows information about the Flash chip.
<b>filesys</b>	(Optional) Shows the Device Info Block, the Status Info, the Usage Info, and the volume ID.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** A colon (:) is required after the specified device.

**Examples** This example shows how to list the Flash files:

```
Console> show flash devices
slot0, bootflash, tftp
Console>
```

These examples show how to list supervisor engine Flash information:

```
Console> show flash
-#- ED --type-- --crc--- -seek-- nlen -length- -----date/time----- name
  1 .. ffffffff fec05d7a 4b3a4c 25 4667849 Mar 03 2000 08:52:09 cat6000-sup-
5-3-4-CSX.bin
  2 .. ffffffff 4e5efc31 c0fadc 30 7716879 May 19 2000 06:50:55 cat6000-sup-
d.6-1-0-83-ORL.bin
```

```
3605796 bytes available (12384988 bytes used)
Console>
```

```
Console> show flash chips
***** Intel Series 2+ Status/Register Dump *****
```

```
ATTRIBUTE MEMORY REGISTERS:
```

```

Config Option Reg (4000): 2
Config Status Reg (4002): 0
Card Status Reg (4100): 1
Write Protect Reg (4104): 4
Voltage Cntrl Reg (410C): 0
Rdy/Busy Mode Reg (4140): 2
COMMON MEMORY REGISTERS: Bank 0
  Intelligent ID Code : 8989A0A0
  Compatible Status Reg: 8080
  Global Status Reg: B0B0
  Block Status Regs:
    0 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
    8 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
   16 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
   24 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0

COMMON MEMORY REGISTERS: Bank 1
  Intelligent ID Code : 8989A0A0
  Compatible Status Reg: 8080
  Global Status Reg: B0B0
  Block Status Regs:
    0 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
    8 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
   16 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
   24 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0

COMMON MEMORY REGISTERS: Bank 2
  Intelligent ID Code : FF00FF
  IID Not Intel -- assuming bank not populated

COMMON MEMORY REGISTERS: Bank 3
Console>

Console> show flash all
-#- ED --type-- --crc--- -seek-- nlen -length- -----date/time----- name
  1 .. ffffffff fec05d7a 4b3a4c 25 4667849 Mar 03 2000 08:52:09 cat6000-sup.
5-3-4-CSX.bin
  2 .. ffffffff 4e5efc31 c0fadc 30 7716879 May 19 2000 06:50:55 cat6000-sup-
d.6-1-0-83-ORL.bin

3605796 bytes available (12384988 bytes used)

----- F I L E S Y S T E M S T A T U S -----
  Device Number = 0
DEVICE INFO BLOCK:
  Magic Number      = 6887635   File System Vers = 10000   (1.0)
  Length            = 800000    Sector Size      = 20000
  Programming Algorithm = 4      Erased State     = FFFFFFFF
  File System Offset = 20000    Length = 7A0000
  MONLIB Offset     = 100       Length = C730
  Bad Sector Map Offset = 1FFF8   Length = 8
  Squeeze Log Offset = 7C0000   Length = 20000
  Squeeze Buffer Offset = 7E0000   Length = 20000
  Num Spare Sectors = 0
  Spares:
STATUS INFO:
  Writable
  NO File Open for Write
  Complete Stats
  No Unrecovered Errors
USAGE INFO:
  Bytes Used      = 201D9B   Bytes Available = 5FE265
  Bad Sectors    = 0        Spared Sectors = 0
  OK Files       = 1        Bytes = 100FC0

```

show flash

```
Deleted Files = 1      Bytes = 100DDB
Files w/Errors = 0    Bytes = 0
```

```
***** Intel Series 2+ Status/Register Dump *****
```

ATTRIBUTE MEMORY REGISTERS:

```
Config Option Reg (4000): 2
Config Status Reg (4002): 0
Card Status Reg (4100): 1
Write Protect Reg (4104): 4
Voltage Cntrl Reg (410C): 0
Rdy/Busy Mode Reg (4140): 2
```

COMMON MEMORY REGISTERS: Bank 0

```
Intelligent ID Code : 8989A0A0
Compatible Status Reg: 8080
Global Status Reg: B0B0
```

Block Status Regs:

```
0 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
8 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
16 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
24 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
```

COMMON MEMORY REGISTERS: Bank 1

```
Intelligent ID Code : 8989A0A0
Compatible Status Reg: 8080
Global Status Reg: B0B0
```

Block Status Regs:

```
0 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
8 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
16 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
24 : B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0 B0B0
```

COMMON MEMORY REGISTERS: Bank 2

```
Intelligent ID Code : FF00FF
IID Not Intel -- assuming bank not populated
```

COMMON MEMORY REGISTERS: Bank 3

```
Intelligent ID Code : FF00FF
IID Not Intel -- assuming bank not populated
```

COMMON MEMORY REGISTERS: Bank 4

```
Intelligent ID Code : FF00FF
IID Not Intel -- assuming bank not populated
```

Console>

Related Commands

[download](#)  
[reset—switch](#)

# show garp timer

Use the **show garp timer** command to display all the values of the General Attribute Registration Protocol (GARP) timers.

## show garp timer

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** You must maintain the following *relationship* for the various timer values:

- Leave time must be greater than or equal to three times the join time.
- Leaveall time must be greater than the leave time.



---

**Caution**

Set the same GARP application (for example, GMRP and GVRP) timer values on all Layer 2-connected devices. If the GARP timers are set differently on the Layer 2-connected devices, GARP applications will not operate successfully.

---



---

**Note**

The modified timer values are applied to all GARP application (for example, GMRP and GVRP) timer values.

---

---

**Examples** This example shows how to display all the values of the GARP timers:

```
Console> (enable) show garp timer
Timer      Timer Value (milliseconds)
-----
Join       200
Leave       600
LeaveAll    10000
Console> (enable)
```

■ show garp timer

---

**Related Commands**

[set garp timer](#)  
[set gmrp timer](#)  
[set gvrp timer](#)

# show gmrp configuration

Use the **show gmrp configuration** command to display complete GMRP-related configuration information.

## show gmrp configuration

### Syntax Description

This command has no arguments or keywords.

### Defaults

This command has no default settings.

### Command Types

Switch command.

### Command Modes

Normal.

### Usage Guidelines

If the port list exceeds the available line spaces, the list wraps to the next line.

### Examples

This example shows how to display GMRP-related configuration information:

```

Console> (enable) show gmrp configuration
Global GMRP Configuration:
GMRP Feature is currently enabled on this switch.
GMRP Timers (milliseconds):
Join = 200
Leave = 600
LeaveAll = 10000
Port based GMRP Configuration:
GMRP-Status Registration ForwardAll Port(s)
-----
Enabled      Normal      Disabled   1/1-2
                                           2/1-48
                                           15/1
Console> (enable)

```

### Related Commands

[set gmrp registration](#)

# show gmrp statistics

Use the **show gmrp statistics** command to display all the GMRP-related statistics for a specified VLAN.

**show gmrp statistics** [*vlan*]

<b>Syntax Description</b>	<i>vlan</i> (Optional) VLAN for which to show GMRP statistics; valid values are from 1 to 1005 and from 1025 to 4094.
---------------------------	---

<b>Defaults</b>	The default is that if you do not specify a VLAN, statistics for VLAN 1 are shown.
-----------------	--

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

**Examples** This example shows how to display all the GMRP-related statistics for VLAN 23:

```

Console> show gmrp statistics 23
GMRP Statistics for vlan <23>:
Total valid GMRP Packets Received:           500
Join Empties:                                200
Join INs:                                     250
Leaves:                                       10
Leave Alls:                                    35
Empties:                                       5
Fwd Alls:                                     0
Fwd Unregistered:                             0
Total valid GMRP Packets Transmitted:         600
Join Empties:                                200
Join INs:                                     150
Leaves:                                       45
Leave Alls:                                    200
Empties:                                       5
Fwd Alls:                                     0
Fwd Unregistered:                             0
Total valid GMRP Packets Received:           0
Total GMRP packets dropped:                  0
Total GMRP Registrations Failed:             0
Console>

```

<b>Related Commands</b>	<a href="#">clear gmrp statistics</a> <a href="#">set gmrp</a>
-------------------------	---

# show gmrp timer

Use the **show gmrp timer** command to display all the values of the GMRP timers.

**show gmrp timer**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display all the values of the GMRP timers:

```
Console> (enable) show gmrp timer
Timer                Timer Value(milliseconds)
-----
Join                  200
Leave                  600
Leave All              10000
Console> (enable)
```

---

**Related Commands**

- [set garp timer](#)
- [set gmrp timer](#)
- [set gvrp timer](#)
- [show gmrp configuration](#)

# show gvrp configuration

Use the **show gvrp configuration** command to display GVRP configuration information, including timer values, whether GVRP and dynamic VLAN creation is enabled, and which ports are running GVRP.

## show gvrp configuration

<b>Syntax Description</b>	This command has no arguments or keywords.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	<p>If the port list exceeds the available line spaces, the list wraps to the next line.</p> <p>If no ports are GVRP participants, the message output changes from:</p> <pre>GVRP Participants running on port_list to: GVRP Participants running on no ports.</pre>

**Examples** This example shows how to display GVRP configuration information:

```
Console> show gvrp configuration
```

```
Global GVRP Configuration:
GVRP Feature is currently enabled on the switch.
GVRP dynamic VLAN creation is enabled.
GVRP Timers(milliseconds)
Join = 200
Leave = 600
LeaveAll = 10000
```

```
Port based GVRP Configuration:
GVRP-Status Registration Applicant Port(s)
```

```
-----
Enabled.   Normal      Normal    2/1
Enabled.   Normal      Active    4/4
Enabled.   Fixed        Normal    4/9
Enabled.   Fixed        Active    4/11
Enabled.   Forbidden   Normal    4/10
Enabled.   Forbidden   Active    4/5
Disabled  Normal      Normal    2/2
                                     4/12-24
                                     5/1-8
Disabled  Normal      Active    4/1,4/8
```

```
Disabled Fixed Normal 4/2
Disabled Fixed Active 4/7
Disbled Forbidden Normal 4/3
Disbled Forbidden Active 4/6
```

```
GVRP Participants running on no ports.
Console>
```

---

**Related Commands**

[clear gvrp statistics](#)  
[set gvrp](#)  
[set gvrp dynamic-vlan-creation](#)  
[set gvrp registration](#)  
[set gvrp timer](#)  
[show gvrp statistics](#)

# show gvrp statistics

Use the **show gvrp statistics** command to view GVRP statistics for a port.

**show gvrp statistics** [*mod/port*]

<b>Syntax Description</b>	<i>mod/port</i> (Optional) Number of the module and port on the module.
---------------------------	---

<b>Defaults</b>	The default is, that if you do not specify a VLAN, statistics for VLAN 1 are shown.
-----------------	---

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display GVRP statistics for module 2, port 1:
-----------------	---

```

Console> show gvrp statistics 2/1
GVRP enabled

GVRP statistics for port 2/1:
Total valid pkts rcvd:      18951
Total invalid pkts rcvd    0
General Queries rcvd      377
Group Specific Queries rcvd 0
MAC-Based General Queries rcvd 0
Leaves rcvd                14
Reports rcvd               16741
Queries Xmitted            0
GS Queries Xmitted         16
Reports Xmitted            0
Leaves Xmitted             0
Failures to add GDA to EARL 0
Topology Notifications rcvd 10
GVRP packets dropped       0
Console>

```

[Table 2-31](#) describes the fields in the **show gvrp statistics** output.

**Table 2-31** *show gvrp statistics* Command Output Fields

Field	Description
GVRP Enabled	Status of whether GVRP is enabled or disabled.
Total valid pkts rcvd	Total number of valid GVRP packets received.
Total invalid pkts rcvd	Total number of invalid GVRP packets received.
General Queries rcvd	Total number of GVRP general queries received.
Group Specific Queries rcvd	Total number of GVRP group-specific queries received.

**Table 2-31** *show gvrp statistics Command Output Fields (continued)*

Field	Description
MAC-Based General Queries rcvd	Total number of MAC-based general queries received.
Leaves rcvd	Total number of GVRP leaves received.
Reports rcvd	Total number of GVRP reports received.
Queries Xmitted	Total number of GVRP general queries transmitted by the switch.
GS Queries Xmitted	Total number of GVRP group specific-equivalent queries transmitted by the switch.
Reports Xmitted	Total number of GVRP reports transmitted by the switch.
Leaves Xmitted	Total number of GVRP leaves transmitted by the switch.
Failures to add GDA to EARL	Total number of times the switch failed to add a multicast entry (GDA) to the EARL table.
Topology Notifications rcvd	Total number of topology change notifications received by the switch.
GVRP packets dropped	Total number of GVRP packets dropped by the switch.

**Related Commands**

[clear gvrp statistics](#)  
[set gvrp](#)  
[set gvrp dynamic-vlan-creation](#)  
[set gvrp registration](#)  
[set gvrp timer](#)  
[show gvrp configuration](#)

# show ifindex

Use the **show ifindex** command to display the information of the specific ifIndex.

**show ifindex** *number*

<b>Syntax Description</b>	<i>number</i> Number of the ifIndex.
---------------------------	--------------------------------------

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	You can designate multiple ifIndex numbers by separating each number with a comma. To specify a range of numbers, use a dash (-) between the low and high numbers.
-------------------------	--

<b>Examples</b>	This example shows how to display ifIndex information:
-----------------	--

```

Console> show ifindex 1,2,3,4-15,40-45
Ifindex 1 is mapped to interface sc0.
Ifindex 2 is mapped to interface sl0.
Ifindex 3 is mapped to port 1/1.
Ifindex 4 is mapped to port 1/2.
Ifindex 5 is mapped to port 1/3.
Ifindex 6 is mapped to port 1/4.
Ifindex 7 is mapped to vlan 1.
Ifindex 8 is mapped to vlan 1002.
Ifindex 9 is mapped to vlan 1004.
Ifindex 10 is mapped to vlan 1005.
Ifindex 11 is mapped to vlan 1003.
Ifindex 12 is mapped to port 9/1.
Ifindex 13 is mapped to port 9/2.
Ifindex 14 is mapped to port 9/3.
Ifindex 15 is mapped to port 9/4.
Ifindex 40 is mapped to port 8/5.
Ifindex 41 is mapped to port 8/6.
Ifindex 42 is mapped to port 8/7.
Ifindex 43 is mapped to port 8/8.
Ifindex 44 is mapped to port 8/9.
Ifindex 45 is mapped to FEC-1/1-2.
Console>

```

# show igmp leave-query-type

Use the **show igmp leave-query-type** command to display the type of query to be sent when a port receives a leave message.

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the type of IGMP query that is sent when a port receives a leave message:

```
Console> show igmp leave-query-type
IGMP Leave Query Type : Mac based General Query
Console>
```

---

**Related Commands** [set igmp leave-query-type](#)

# show igmp mode

Use the **show igmp mode** command to display the IGMP mode on the switch.

**show igmp mode**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** The switch dynamically chooses either IGMP-only or IGMP-CGMP mode, depending on the traffic present on the network. IGMP-only mode is used in networks with no CGMP devices. IGMP-CGMP mode is used in networks with both IGMP and CGMP devices.

The **show igmp mode** command output includes three fields:

- IGMP Mode—Possible values are auto, igmp-only, and igmp-cgmp.
- IGMP-Operational-Mode—Possible values are igmp-only and igmp-cgmp.
- IGMP Address Aliasing Mode—Possible values are normal and fallback.

---

**Examples** This example shows how to display the IGMP mode:

```
Console> show igmp mode
IGMP Mode:                auto
IGMP Operational Mode:    igmp-only
IGMP Address Aliasing Mode: normal
Console>
```

---

**Related Commands** [set igmp mode](#)

# show igmp querier information

Use the **show igmp querier information** command to display querier information specific to a configured VLAN.

**show igmp querier information** [*vlan*]

<b>Syntax Description</b>	<i>vlan</i> Number of the VLAN.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	If you do not specify a VLAN number, IGMP querier information is displayed for all configured VLANs.
<b>Examples</b>	<p>This example shows how to display querier information for VLAN 1:</p> <pre> Console&gt; show igmp querier information 1 VLAN Querier State      Query Tx Count  QI (seconds)  OQI (seconds) ----- 1    QUERIER          26             125           300 Console&gt; </pre>
<b>Related Commands</b>	<a href="#">set igmp querier</a>

# show igmp ratelimit-info

Use the **show igmp ratelimit** command to display the IGMP rate limit for general-query packets, IGMP snooping protocol packets, and Protocol Independent Multicasting version 2 (PIMv2) packets.

## show igmp ratelimit-info

<b>Syntax Description</b>	This command has no arguments or keywords.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	The output of this command displays the number of IGMP rate limiting packets that are sent out every 30 seconds.
<b>Examples</b>	<p>This example shows how to display IGMP rate limiting information:</p> <pre> Console&gt; show igmp ratelimit-info IGMP Ratelimiting is enabled IGMP Ratelimiting: No of messages allowed in 30 seconds ----- Igmp General Queries : 100 Dvmrp Probes         : 100 Mospf1 Hellos        : 100 Mospf2 Hellos        : 100 PimV2 Hellos         : 100 Console&gt; </pre>
<b>Related Commands</b>	<a href="#">set igmp ratelimit</a>

# show igmp statistics

Use the **show igmp statistics** command to view IGMP statistics for a particular VLAN.

**show igmp statistics** [*vlan\_id*]

<b>Syntax Description</b>	<i>vlan_id</i> (Optional) VLAN for which to show IGMP statistics; valid values are from 1 to 1005 and from 1025 to 4094.
<b>Defaults</b>	The default is that if you do not specify a VLAN, statistics for VLAN 1 are shown.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Examples</b>	This example shows how to view IGMP statistics for VLAN 1:

```

Console> show igmp statistics 1
IGMP enabled

IGMP statistics for vlan 1:
Total valid pkts rcvd:          18951
Total invalid pkts rcvd         0
General Queries rcvd           377
Group Specific Queries rcvd     0
MAC-Based General Queries rcvd 0
Leaves rcvd                     14
Reports rcvd                    16741
Queries Xmitted                 0
GS Queries Xmitted              16
Reports Xmitted                  0
Leaves Xmitted                   0
Failures to add GDA to EARL     0
Topology Notifications rcvd     10
IGMP packets dropped            0
Console>

```

[Table 2-32](#) describes the fields in the **show igmp statistics** output.

**Table 2-32** *show igmp statistics* Command Output Fields

Field	Description
IGMP enabled	Status of whether IGMP snooping is enabled or disabled.
Total valid pkts rcvd	Number of valid IGMP packets received.
Total invalid pkts rcvd	Number of invalid IGMP packets received.
General Queries rcvd	Number of IGMP general queries received.

Table 2-32 show igmp statistics Command Output Fields (continued)

Field	Description
Group Specific Queries rcvd	Number of IGMP group-specific queries received.
MAC-Based General Queries rcvd	Number of MAC-based general queries received.
Leaves rcvd	Number of IGMP leaves received.
Reports rcvd	Number of IGMP reports received.
Queries Xmitted	Number of IGMP general queries transmitted by the switch.
GS Queries Xmitted	Number of IGMP group-specific equivalent queries transmitted by the switch.
Reports Xmitted	Number of IGMP reports transmitted by the switch.
Leaves Xmitted	Number of IGMP leaves transmitted by the switch.
Failures to add GDA to EARL	Number of times the switch failed to add a multicast entry (GDA) to the EARL table.
Topology Notifications rcvd	Number of topology change notifications received by the switch.
IGMP packets dropped	Number of IGMP packets dropped by the switch.

## Related Commands

[clear igmp statistics](#)  
[clear multicast router](#)  
[set igmp](#)  
[set multicast router](#)  
[show multicast group](#)  
[show multicast router](#)

# show imagemib

Use the **show imagemib** command to display image information provided in the CISCO-IMAGE-MIB for a particular image.

**show imagemib** *filename*

<b>Syntax Description</b>	<i>filename</i> Name of the Flash device on the supervisor engine.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display CISCO-IMAGE-MIB information for the Flash image:
-----------------	--

```

Console> (enable) show imagemib bootflash:cat6000-sup.6-1-1.bin
show mib info for file bootflash:cn50
CW_BEGIN$cat6000-WS-X6K-SUP1$
CW_IMAGE$bootflash:at6000-sup.5-5-1.bin$
CW_FAMILY$Catalyst 6000 Switch$
CW_MODULE$Catalyst Supervisor Module$
CW_VERSION$5.5.1$
CW_MIN_DRAM$ 32 MB$
CW_MIN_BOOTFLASH$ 8 MB$
CW_MIN_NVRAM$ 512 KB$
CW_BUILDTIME$ Mar 24 2000 00:32:33$
CW_SYSDESCR$Catalyst Operating System$
CW_END$cat6000-WS-X6K-SUP1$
Console>

```

# show interface

Use the **show interface** command to display information on network interfaces.

## show interface

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display s10 and sc0:

```
Console> show interface
s10: flags=51<UP,POINTOPOINT,RUNNING>
      slip 0.0.0.0 dest 0.0.0.0
sc0: flags=63<UP,BROADCAST,RUNNING>
      vlan 1 inet 174.44.67.8 netmask 255.255.0.0 broadcast 172.20.255.255
dhcp server: 174.44.67.201
Console>
```

[Table 2-33](#) describes the fields in the **show interface** command output.

**Table 2-33** *show interface Command Output Fields*

Field	Description
s10	Information on the SLIP interface.
flags	Flags indicating the interface state (decoded in the subsequent field).
<UP,POINTOPOINT, RUNNING>	Interface state (UP, DOWN, BROADCAST, LOOPBACK, POINTOPOINT, or RUNNING).
slip	IP address of the SLIP interface.

**Table 2-33** *show interface Command Output Fields (continued)*

Field	Description
dest	IP address of the host to which the console port will be connected.
sc0	Information on the in-band interface.
vlan	Number of the VLAN to which the sc0 interface has been assigned (known as the management VLAN).
inet	IP address of the interface.
netmask	Network mask for the interface.
broadcast	Broadcast address for the interface.
dhcp server	IP address of the DHCP server.

Related Commands [set interface](#)

# show ip alias

Use the **show ip alias** command to show a listing of defined IP aliases.

**show ip alias** [*name*]

<b>Syntax Description</b>	<i>name</i> (Optional) Alias for a specific host.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display a listing of all IP aliases:
-----------------	--

```
Console> show ip alias
default          0.0.0.0
sparc20          192.168.10.69
cat6000-1        172.16.169.16
cat6000-2        172.16.169.20
Console>
```

<b>Related Commands</b>	<a href="#">clear ip alias</a> <a href="#">set ip alias</a>
-------------------------	--

# show ip dns

Use the **show ip dns** command to show the DNS name servers and the default DNS domain name.

## show ip dns

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the DNS name servers and the default DNS domain name:

```
Console> show ip dns
DNS is currently enabled.
The default DNS domain name is: cisco.com

DNS name server      status
-----
172.16.30.32
192.168.2.132       primary
172.31.128.70
Console>
```

[Table 2-34](#) describes the fields in the **show ip dns** command output.

**Table 2-34** *show ip dns Command Output Fields*

Field	Description
DNS is currently enabled	Status of whether DNS is enabled or disabled.
default DNS domain name	Default DNS domain name.
DNS name server	IP addresses or IP aliases of the configured DNS servers.
status	Primary DNS server.

■ show ip dns

---

**Related Commands**

**clear ip dns domain**  
**clear ip dns server**  
**set ip dns**  
**set ip dns domain**  
**set ip dns server**

# show ip http

Use the **show ip http** command to view the HTTP configuration and the switch web interface information.

## show ip http

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the HTTP configuration and web interface information if the web interface is supported:

```
Console> show ip http
HTTP Configuration Information:
-----
HTTP Server: enabled
HTTP port: 80
Web Interface: Supported

Switch Information:
-----
File:  applet.html
      size: 912 bytes
      version: 5.0(0.26)
      date: 10/9/99
File:  cvembopt.jar
      size: 3500000 bytes
      version: 5.0(0.26)
      date: 10/9/99

Active Web Interface Session: 1
-----
Client IP Address: 192.20.20.45
Request Type: GET
Request URI: /all-engine.jar
Console>
```

This example shows the HTTP configuration and web interface information if the web interface is not supported:

```
Console> show ip http
HTTP Configuration Information:
-----
HTTP Server: disabled
HTTP port: 80
Web Interface: Not Supported
Console>
```

---

**Related Commands**

[set ip http port](#)  
[set ip http server](#)

# show ip permit

Use the **show ip permit** command to display the IP permit list information.

**show ip permit [noalias]**

<b>Syntax Description</b>	<b>noalias</b> (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

<b>Defaults</b>	This command has no default value.
-----------------	------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display the IP permit list information:
-----------------	---

```
Console> (enable) show ip permit
Telnet permit list feature enabled.
Ssh permit list enabled.
Snmp permit list feature disabled.
```

```
Permit List           Mask                Access-Type
-----
172.16.0.0            255.255.0.0        telnet
172.20.52.3          255.255.255.224   snmp telnet
172.20.52.32         255.255.255.224   snmp
```

```
Denied IP Address    Last Accessed Time Type
-----
172.100.101.104     01/20/97,07:45:20  SNMP
172.187.206.222     01/21/97,14:23:05  Telnet
```

```
Console> (enable)
```

[Table 2-35](#) describes the fields in the **show ip permit** command output.

**Table 2-35 show ip permit Command Output Fields**

Field	Description
IP permit list feature enabled	Status of whether the IP permit list feature is enabled or disabled.
Permit List	IP addresses and IP aliases that are allowed to access the switch.
Mask	Subnet masks of permitted IP addresses.
Denied IP Address	IP addresses and IP aliases that are not allowed to access the switch.

*Table 2-35 show ip permit Command Output Fields (continued)*

Field	Description
Last Accessed Time	Date and time of the last attempt to log in to the switch from the address.
Type	Login-attempt type.

**Related Commands**

**clear ip permit**  
**set ip permit**  
**set snmp trap**

# show ip route

Use the **show ip route** command to display IP routing table entries.

**show ip route** [**noalias**]

<b>Syntax Description</b>	<b>noalias</b> (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display the IP route table:
-----------------	---

```

Console> show ip route
Fragmentation   Redirect   Unreachable
-----
enabled         enabled    enabled

Destination      Gateway      RouteMask   Flags   Use   Interface
-----
172.20.0.0       172.20.26.70  0xffff0000  U       8     sc0
default          default      0xff000000  UH      0     s10
Console>

```

Table 2-36 describes the fields in the **show ip route** command output.

**Table 2-36 show ip route Command Output Fields**

Field	Description
Fragmentation	Current setting of IP fragmentation.
Redirect	Current setting of ICMP redirect.
Unreachable	Current setting of ICMP unreachable messages.
Destination	Destination address IP route mask.
Gateway	IP address or IP alias of the gateway router.
RouteMask	Determines which path is closer to the destination.
Flags	Route status; possible values are U=up, G=route to a Gateway, H=route to a Host, and D=Dynamically created by a redirect.
Use	Number of times a route entry was used to route packets.
Interface	Type of interface.

■ show ip route

---

**Related Commands**

[clear ip route](#)  
[set ip route](#)

# show kerberos

Use the **show kerberos** command to display the Kerberos configuration information.

**show kerberos [creds]**

<b>Syntax Description</b>	<b>creds</b> (Optional) Displays credential information only.
---------------------------	---

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display Kerberos configuration information:

```
Console> (enable) show kerberos
Kerberos Local Realm:CISCO.COM
Kerberos server entries:
Realm:CISCO.COM, Server:187.0.2.1, Port:750

Kerberos Domain<->Realm entries:
Domain:cisco.com, Realm:CISCO.COM

Kerberos Clients NOT Mandatory
Kerberos Credentials Forwarding Enabled
Kerberos Pre Authentication Method set to None
Kerberos config key:
Kerberos SRVTAB Entries
Srvtab Entry 1:host/niners.cisco.com@CISCO.COM 0 932423923 1 1 8 01;;8>00>50;0=0=0
Console> (enable)
```

[Table 2-37](#) describes the fields in the **show kerberos** command output.

**Table 2-37 show kerberos Command Output Fields**

Field	Description
Kerberos Local Realm	Status of whether the local realm is configured.
Kerberos server entries	Status of servers entered into the switch.
Kerberos Domain<->Realm entries	Kerberos domain and realm entries.
Kerberos Clients NOT Mandatory	Status of whether Kerberos has been configured as mandatory on the clients.

Table 2-37 show kerberos Command Output Fields (continued)

Field	Description
Kerberos Credentials Forwarding Disabled	Status of whether credentials forwarding is enabled or disabled.
Kerberos Pre Authentication Method	Status of whether preauthentication is enabled or disabled.
Kerberos config key	Status of whether a 3DES key has been configured.
Kerberos SRVTAB entries	SRVTAB entries.

## Related Commands

[clear kerberos clients mandatory](#)  
[clear kerberos credentials forward](#)  
[clear kerberos realm](#)  
[clear kerberos server](#)  
[clear key config-key](#)  
[set kerberos clients mandatory](#)  
[set kerberos credentials forward](#)  
[set kerberos local-realm](#)  
[set kerberos realm](#)  
[set kerberos srvtab entry](#)  
[set kerberos srvtab remote](#)  
[set key config-key](#)  
[show kerberos](#)

# show l2protocol-tunnel statistics

Use the **show l2protocol-tunnel statistics** command to display Layer 2 protocol tunneling statistics for a port or range or ports.

**show l2protocol-tunnel statistics** [*mod[/port]*]

<b>Syntax Description</b>	<i>mod[/port]</i>	(Optional) Number of the module and the number of the port or range of ports on the module. See the “Usage Guidelines” section for more information.
---------------------------	-------------------	--

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a port or range or ports, Layer 2 protocol tunneling statistics are displayed for all tunneling ports.

**Examples** This example shows how to display Layer 2 protocol tunneling statistics for a range of ports:

```
Console> show l2protocol-tunnel statistics 7/1-2
Tunneling CoS is set to 5.
```

Port	CDP Frames Encap	CDP Frames De-encap
7/1	2	2
7/2	2	2

Port	STP Frames Encap	STP Frames De-encap
7/1	0	0
7/2	0	0

Port	VTP Frames Encap	VTP Frames De-encap
7/1	0	0
7/2	0	0

```
Console>
```

This example shows how to display Layer 2 protocol tunneling statistics for a port:

```
Console> show l2protocol-tunnel statistics 7/1
Tunneling CoS is set to 5.
```

Port	CDP Frames Encap	CDP Frames De-encap
7/1	2	2

```
show l2protocol-tunnel statistics
```

```

Port                STP Frames Encap    STP Frames De-encap
-----
7/1                  0                    0

Port                VTP Frames Encap    VTP Frames De-encap
-----
7/1                  0                    0
Console>

```

#### Related Commands

```

clear l2protocol-tunnel cos
clear l2protocol-tunnel statistics
set l2protocol-tunnel cos
set port l2protocol-tunnel
show port l2protocol-tunnel

```

# show lacp-channel

Use the **show lacp-channel** command to display information about the Link Aggregation Control Protocol (LACP) channel.

**show lacp-channel**

**show lacp-channel sys-id**

**show lacp-channel group** [*admin-key*] [**info** [*type*] | **statistics**]

**show lacp-channel** [*channel\_id*] [**info** [*type*] | **statistics** | **mac**]

**show lacp-channel hash** *channel\_id* {{*src\_ip\_addr* [*dest\_ip\_addr*]} | *dest\_ip\_addr* |  
{*src\_mac\_addr* [*dest\_mac\_addr*]} | *dest\_mac\_addr* | {*src\_port* *dest\_port*} | *dest\_port*}

**show lacp-channel traffic** [*channel\_id*]

## Syntax Description

<b>sys-id</b>	Displays the system identifier adopted by LACP.
<b>group</b>	Displays all the ports that belong to a channel.
<i>admin-key</i>	(Optional) Number of the administrative key; valid values are from 1 to 65535.
<b>info</b>	(Optional) Displays detailed LACP channel information.
<i>type</i>	(Optional) Name of the feature-related parameter; valid values are <b>auxiliaryvlan</b> , <b>cops</b> , <b>dot1qtunnel</b> , <b>gmrp</b> , <b>gvrp</b> , <b>jumbo</b> , <b>protocol</b> , <b>qos</b> , <b>rsvp</b> , <b>spantree</b> , <b>trunk</b> .
<b>statistics</b>	(Optional) Displays LACP statistics.
<i>channel_id</i>	(Optional) Number of the channel; valid values are from 769 to 896.
<b>mac</b>	(Optional) Specifies MAC information about the channel.
<b>hash</b>	Displays the outgoing port used in a channel for a specific address or Layer 4 port number.
<i>src_ip_addr</i>	Source IP address.
<i>dest_ip_addr</i>	(Optional) Destination IP address.
<i>src_mac_addr</i>	Source MAC address.
<i>dest_mac_addr</i>	(Optional) Destination MAC address.
<i>src_port</i>	Number of the source port; valid values are from 0 to 65535.
<i>dest_port</i>	Number of the destination port; valid values are from 0 to 65535.
<b>traffic</b>	Displays traffic utilization on channel ports.

## Defaults

This command has no default settings.

## Command Types

Switch command.

## show lacp-channel

### Command Modes

Normal.

### Usage Guidelines

If you do not specify the *admin-key* value, information about all LACP channels is displayed.

If you do not specify the *channel\_id* value, information about all LACP channels is displayed.

For differences between PAgP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

### Examples

This example shows how to display information about all LACP channels:

```
Console> show lacp-channel group
Admin Key    Ports
-----
69           4/1-2
70           4/5-6
143          2/1-2
151          4/3-4
152          4/7-8
Console>
```

This example shows how to display limited information about ports that are assigned to administrative key 152:

```
Console> show lacp-channel group 152
Port Channel Admin Ch Partner Oper Partner
      Mode Key   id  Sys ID          Port
-----
4/7   active  152  770  8000,AC-12-24-56-78-90  4/3
4/8   active  152  770  8000,AC-12-24-56-78-90  4/4
Console>
```

This example shows how to display detailed information about ports that are assigned to administrative key 152:

```
Console> show lacp-channel group 152 info
I = Isolated Port.  C = Channeling Port.  N = Not Connected.
H = Hot Stand-by Port.  S = Suspended Port.

Port LACP Port Port Speed Duplex VLANs Trunk status Port STP Port PortSecurity/
      Priority Status          full  1-1005 not-trunking Cost Priority Dynamic Port
-----
4/7  130      C      1000 full  1-1005 not-trunking 4 32
4/8  131      C      1000 full  1-1005 not-trunking 4 32

Port Admin Channel if- Partner Oper Partner Partner Partner
      Key id      Index Sys ID          Port Prior Port Oper Key
-----
4/7  152  770  31  800,AC-12-24-56-78-90  248 4/3 15768
4/8  152  770  31  800,AC-12-24-56-78-90  249 4/4 15768
Console>
```

This example shows how to display LACP Tx and Rx statistics for ports that are assigned to administrative key 152:

```
Console> show lacp-channel group 152 statistics
Port Admin LACP Pkts LACP Pkts Marker Pkts Marker Pkts LACP Pkts
      Key Transmitted Received Transmitted Received Errors
-----
4/7  152 0 92 0 0 0
```

```

4/8 152 0 0 0 0 0
Console>

```

This example shows how to display all ports that are assigned to an administrative key:

```
Console> show lacp-channel group info
```

```
I = Isolated Port. C = Channeling Port. N = Not Connected.
H = Hot Stand-by Port. S = Suspended Port.
```

Port	LACP Port Priority	Port Status	Speed	Duplex	VLANs	Trunk status	Port Cost	STP Port Priority	PortSecurity/ Dynamic Port
4/1	50	I	1000	full	1-1005	not-trunking	4	32	
4/2	51	I	1000	full	1-1005	not-trunking	4	32	
4/5	27	I	1000	full	1-1005	not-trunking	4	32	
4/6	28	I	1000	full	1-1005	not-trunking	4	32	
2/1	133	C	1000	full	1-1005	not-trunking	4	32	
2/2	134	C	1000	full	1-1005	not-trunking	4	32	
4/3	200	C	1000	full	1-1005	not-trunking	4	32	
4/4	201	C	1000	full	1-1005	not-trunking	4	32	
4/7	130	C	1000	full	1-1005	not-trunking	4	32	
4/8	131	C	1000	full	1-1005	not-trunking	4	32	

Port	Admin Key	Channel id	if- Index	Partner Sys ID	Oper	Partner Port	Partner Prior	Partner Port	Partner Oper Key
4/1	69	0	-	0,00-00-00-00-00-00		0		3/1	0
4/2	69	0	-	0,00-00-00-00-00-00		0		4/5	0
4/5	70	0	-	0,00-00-00-00-00-00		0		7/3	0
4/6	70	0	-	0,00-00-00-00-00-00		0		7/4	0
2/1	143	768	29	1276,45-12-24-AC-78-90		34		5/1	5658
2/2	143	768	29	1276,45-12-24-AC-78-90		35		5/2	5658
4/3	151	769	30	13459,89-BC-24-56-78-90		200		1/1	9768
4/4	151	769	30	13459,89-BC-24-56-78-90		201		1/2	9768
4/7	152	770	31	8000,AC-12-24-56-78-90		248		4/3	15678
4/8	152	770	31	8000,AC-12-24-56-78-90		249		4/4	15768

```
Console>
```

This example shows how to display Tx and Rx statistics for all ports that are assigned to an administrative key:

```
Console> show lacp-channel group statistics
```

Port	Admin Key	LACP Pkts Transmitted	LACP Pkts Received	Marker Pkts Transmitted	Marker Pkts Received	LACP Pkts Errors
4/1	69	0	0	0	0	0
4/2	69	0	0	0	0	0
4/5	70	0	0	0	0	0
4/6	70	0	0	0	0	0
2/1	143	0	0	0	0	0
2/2	143	0	0	0	0	0
4/3	151	0	0	0	0	0
4/4	151	0	0	0	0	0
4/7	152	0	92	0	0	0
4/8	152	0	0	0	0	0

```
Console>
```

This example shows how to display the outgoing port for the specified source and destination IP addresses:

```

Console> (enable) show lacp-channel hash 808 172.20.32.10 172.20.32.66
Selected channel port:2/17
Console> (enable)

```

This example shows how to display traffic utilization on channel ports:

```

Console> (enable) show lacp-channel traffic
ChanId Port  Rx-Ucst Tx-Ucst Rx-Mcst Tx-Mcst Rx-Bcst Tx-Bcst
-----
   808  2/16   0.00%  0.00%  50.00%  75.75%  0.00%  0.00%
   808  2/17   0.00%  0.00%  50.00%  25.25%  0.00%  0.00%
   816  2/31   0.00%  0.00%  25.25%  50.50%  0.00%  0.00%
   816  2/32   0.00%  0.00%  75.75%  50.50%  0.00%  0.00%
Console> (enable)

```

---

#### Related Commands

- [clear lacp-channel statistics](#)
- [set channelprotocol](#)
- [set lacp-channel system-priority](#)
- [set port lacp-channel](#)
- [set spantree channelcost](#)
- [set spantree channelvlancost](#)
- [show port lacp-channel](#)

# show lcperroraction

Use the **show lcperroraction** command to display how your system handles LCP errors when a module reports an ASIC problem to the Network Management Processor (NMP).

## **show lcperroraction**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to display the action that handles an LCP error:

```
Console> (enable) show lcperroraction
LCP action level is: system
Console> (enable)
```

---

**Related Commands** [set lcperroraction](#)

# show lda

Use the **show lda** command to display the ASLB configuration information.

**show lda** [**committed** | **uncommitted**]

**show lda mls entry**

**show lda mls entry** [**destination** *ip\_addr\_spec*] [**source** *ip\_addr\_spec*] [**protocol** *protocol*]  
[**src-port** *src\_port*] [**dst-port** *dst\_port*] [**short** | **long**]

**show lda mls statistics count**

**show lda mls statistics entry**

**show lda mls statistics entry** [**destination** *ip\_addr\_spec*] [**source** *ip\_addr\_spec*]  
[**protocol** *protocol*] [**src-port** *src\_port*] [**dst-port** *dst\_port*]

Syntax Description	
<b>committed</b>	(Optional) Views committed configuration information.
<b>uncommitted</b>	(Optional) Views configuration information that has not been committed.
<b>mls entry</b>	Displays the ASLB MLS entries.
<b>destination</b> <i>ip_addr_spec</i>	(Optional) Full destination IP address or a subnet address in these formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
<b>source</b> <i>ip_addr_spec</i>	(Optional) Full source IP address or a subnet address in these formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
<b>protocol</b> <i>protocol</i>	(Optional) Specifies additional flow information (protocol family and protocol port pair) to be matched; valid values include <b>tcp</b> , <b>udp</b> , <b>icmp</b> , or a decimal number for other protocol families.
<b>src-port</b> <i>src_port</i>	(Optional) Specifies the number of the TCP/UDP source port (decimal). Used with <b>dst-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>dst-port</b> <i>dst_port</i>	(Optional) Specifies the number of the TCP/UDP destination port (decimal). Used with <b>src-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>short</b>   <b>long</b>	(Optional) Specifies the width of the display.
<b>count</b>	Displays the number of active ASLB MLS entries.
<b>mls statistics entry</b>	Displays statistics information.

**Defaults** The default displays MLS entry information in long format.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is supported only on switches configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC (Policy Feature Card).

Entering the **destination** keyword specifies the entries matching the destination IP address specification, entering the **source** keyword specifies the entries matching the source IP address specification, and entering an *ip\_addr\_spec* can specify a full IP address or a subnet address. If you do not specify a keyword, it is treated as a wildcard, and all entries are displayed.

When entering the *ip\_addr\_spec* value, use the full IP address or a subnet address in one of the following formats: *ip\_addr*, *ip\_addr/netmask*, or *ip\_addr/maskbit*.

Entering the **destination** keyword specifies the entries matching the destination IP address specification, entering the **source** keyword specifies the entries matching the source IP address specification, and entering an *ip\_addr\_spec* can specify a full IP address or a subnet address. If you do not specify a keyword, it is treated as a wildcard, and all entries are displayed.

Use the following syntax to specify an IP subnet address:

- *ip\_subnet\_addr*—This is the short subnet address format. The trailing decimal number 00 in an IP address YY.YY.YY.00 specifies the boundary for an IP subnet address. For example, 172.22.36.00 indicates a 24-bit subnet address (subnet mask 172.22.36.00/255.255.255.0), and 173.24.00.00 indicates a 16-bit subnet address (subnet mask 173.24.00.00/255.255.0.0). However, this format can identify only a subnet address with a length of 8, 16, or 24 bits.
- *ip\_addr/subnet\_mask*—This is the long subnet address format. For example, 172.22.252.00/255.255.252.00 indicates a 22-bit subnet address. This format can specify a subnet address of any bit number. To provide more flexibility, the *ip\_addr* value is allowed to be a full host address, such as 172.22.253.1/255.255.252.00.
- *ip\_addr/maskbits*—This is the simplified long subnet address format. The mask bits specify the number of bits of the network masks. For example, 172.22.252.00/22 indicates a 22-bit subnet address. The *ip\_addr* value is allowed to be a full host address, such as 172.22.254.1/22, which has the same subnet address as 172.22.252.00/72.

If you have disabled the ASLB feature, you can view the last configuration using the **show lda uncommitted** command.

The **short** | **long** options give the flexibility to display the output in regular (80 characters in width) or wide screen.

If you enter the **show lda mls entry** or the **show lda mls statistics entry** command with no keywords or variables, all entries are displayed.

**Examples** This example shows how to display committed ASLB information:

```
Console> (enable) show lda committed
Status:Committed

Local Director Flow:10.0.0.8/ (TCP port 8)
Router MAC:
00-02-03-04-05-06
00-04-56-67-04-05
00-03-32-02-03-03

LD MAC:00-02-03-04-05-06
LD Router Side:
```

```
-----
Router and LD are on VLAN 110
LD is connected to switch port 4/26 on VLAN 110
```

```
LD Server Side:
-----
```

```
Server(s) and LD are on VLAN 105
LD is connected to switch port 4/40 on VLAN 105
Console> (enable)
```

This example shows how to display uncommitted ASLB information:

```
Console> (enable) show lda uncommitted
Status:Not Committed.
```

```
Router MAC:
00-02-03-04-05-06
00-04-56-67-04-05
00-03-32-02-03-03
```

```
LD MAC:00-02-03-04-05-06
```

```
LD Router Side:
-----
```

```
LD Server Side:
-----
Console> (enable)
```



#### Note

The examples shown for the **show lda mls entry** commands are displayed in short format. The display in the long form exceeds the page width and cannot be shown.

This example shows how to display ASLB MLS entries in short format:

```
Console> (enable) show lda mls entry short
Destination-IP Source-IP Prot DstPrt SrcPrt Destination-Mac Vlan
-----
EDst ESrc DPort SPort Stat-Pkts Stat-Bytes Uptime Age
-----
10.0.0.8 172.20.20.10 TCP 8 64 00-33-66-99-22-44 105
ARPA ARPA - 4/25 0 0 00:00:02 00:00:05

10.0.0.8 172.20.20.11 TCP 8 64 00-33-66-99-22-44 105
ARPA ARPA - 4/25 0 0 00:00:05 00:00:08
Console> (enable)
```

This example shows how to display ASLB information for the source IP address in short format:

```
Console> (enable) show lda mls entry source 172.20.20.11 short
Destination-IP Source-IP Prot DstPrt SrcPrt Destination-Mac Vlan
-----
EDst ESrc DPort SPort Stat-Pkts Stat-Bytes Uptime Age
-----
10.0.0.8 172.20.20.11 TCP 8 64 00-33-66-99-22-44 105
ARPA ARPA - 4/25 0 0 00:00:05 00:00:08
Console> (enable)
```

This example shows how to display the number of active ASLB MLS entries:

```
Console> (enable) show lda mls statistics count
LDA active shortcuts:20
Console> (enable)
```

This example shows how to display all ASLB MLS entry statistics:

```
Console> (enable) show lda mls statistics entry
                Last      Used
Destination IP  Source IP      Prot DstPrt SrcPrt Stat-Pkts Stat-Bytes
-----
10.0.0.8        172.20.20.10    TCP  WWW     64    636    29256
10.0.0.8        172.20.22.10    TCP  WWW     64     0      0
Console> (enable)
```

This example shows how to display the statistics for a specific destination IP address:

```
Console> (enable) show lda mls statistics entry destination 172.20.22.14
                Last      Used      Last      Used
Destination IP  Source IP      Prot DstPrt SrcPrt Stat-Pkts Stat-Bytes
-----
172.20.22.14   172.20.25.10    6    50648  80    3152   347854
Console> (enable)
```

#### Related Commands

[clear lda](#)  
[commit lda](#)  
[set lda](#)

# show log

Use the **show log** command to display the error log for the system or a specific module.

**show log** [*mod*]

**show log dump** [*-count*]

<b>Syntax Description</b>	<i>mod</i>	(Optional) Number of the module for which the log is displayed.
	<b>dump</b>	Displays dump log information.
	<i>-count</i>	(Optional) Number of dump log entries to display.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** To display the contents of ASIC error messages as soon as they are received from SLCP or LCP, see the [set logging server](#) command.

You can use the **dump** keyword to display log dump information generated when certain events occur, such as memory corruption.

**Examples** This example shows a partial display of the output from the **show log** command:

```

Console> show log

Network Management Processor (ACTIVE NMP) Log:
  Reset count:    10
  Re-boot History:  Mar 22 2000 10:34:09 0, Mar 17 2000 15:35:11 0
                   Mar 13 2000 17:40:16 0, Mar 13 2000 13:14:08 0
                   Mar 13 2000 11:57:30 0, Feb 24 2000 10:04:18 0
  Bootrom Checksum Failures:    0   UART Failures:                0
  Flash Checksum Failures:     0   Flash Program Failures:    0
  Power Supply 1 Failures:     0   Power Supply 2 Failures:   0
  Swapped to CLKA:             0   Swapped to CLKB:           0
  Swapped to Processor 1:      0   Swapped to Processor 2:    0
  DRAM Failures:               0

  Exceptions:                  0

  Last software reset by user: 3/13/2000,17:39:00

  EOBC Exceptions/Hang:        0

  Heap Memory Log:
  Corrupted Block = none

```

```

NVRAM log:

01. 1/25/2000,17:39:10: convertCiscoMIB:PreSac(0) checksum failed: 0xFFFF(0xE507
)

Module 3 Log:
  Reset Count:    14
  Reset History: Wed Mar 22 2000, 10:35:54
                 Fri Mar 17 2000, 15:36:57
                 Wed Mar 15 2000, 16:54:59
                 Tue Mar 14 2000, 16:02:19

<<<<output truncated >>>>

```

This example shows how to display dump log information:

```

Console> (enable) show log dump
Total logs: 1
Console> (enable)

```

Table 2-38 describes the possible fields in the output from the **show log** command.

**Table 2-38 show log Command Output Fields**

Field	Description
Network Management Processor (ACTIVE NMP) Log	Log that applies to the NMP on the supervisor engine.
Reset Count	Number of times the system has reset.
Re-boot History	Date and times the system has rebooted.
Bootrom Checksum Failures	Number of BootROM checksum failures.
UART Failures	Number of times the UART has failed.
Flash Checksum Failures	Number of times the Flash checksum has failed.
Flash Program Failures	Number of times the Flash program has failed.
Power Supply 1 Failures	Number of times Power Supply 1 has failed.
Power Supply 2 Failures	Number of times Power Supply 2 has failed.
Swapped to CLKA	Number of times a switchover to clock A has occurred.
Swapped to CLKB	Number of times a switchover to clock B has occurred.
Swapped to Processor 1	Number of times a switchover to processor 1 has occurred.
Swapped to Processor 2	Number of times a switchover to processor 2 has occurred.
DRAM Failures	Number of times the DRAM has failed.
Exceptions:	Exceptions log.
Last software reset by user	Date of the last time the software was reset.
NVRAM log	Number of times NVRAM errors have occurred.
Reset Count	Number of times the system has reset.
Reset History	Date and times the system has reset.
Total log	Number of entries.

**Related Commands**    [clear log](#)

# show log command

Use the **show log command** command to display the command log entries.

**show log command** [*mod*]

<b>Syntax Description</b>	<i>mod</i> (Optional) Number of the module.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	The command log entry table is a history log of commands input to the switch from the console or Telnet.
<b>Examples</b>	<p>This example shows how to display the command log for a specific module:</p> <pre> Console&gt; (enable) <b>show log command 1</b>   Active Command log:  001. Oct 04 09:44:35 Pid = 86 show mod 002. Oct 04 09:44:55 Pid = 86 clear log command 3 003. Oct 04 10:09:07 Pid = 86 show port membership 004. Oct 04 10:10:15 Pid = 86 en 005. Oct 04 10:10:19 Pid = 86 clear port help 006. Oct 04 10:10:47 Pid = 86 clear spantree help 007. Oct 04 10:12:42 Pid = 86 show 008. Oct 04 10:12:57 Pid = 86 show qos help 009. Oct 04 10:14:46 Pid = 86 show log 5 010. Oct 04 10:14:53 Pid = 86 show log 1 011. Oct 04 10:15:04 Pid = 86 show log command 5 012. Oct 04 10:15:08 Pid = 86 show log command 1  Console&gt; (enable) </pre>
<b>Related Commands</b>	<a href="#">clear log command</a>

# show logging

Use the **show logging** command to display the system message log information.

**show logging [noalias]**

<b>Syntax Description</b>	<b>noalias</b> (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display the default system message log configuration:
-----------------	---

```
Console> show logging

Logging buffer size:      500
      timestamp option:  enabled
Logging history size:    1
Logging console:         enabled
Logging telnet:          enabled
Logging server:          disabled
      server facility:   LOCAL7
      server severity:   warnings(4)
```

Facility	Default Severity	Current Session Severity
-----	-----	-----
acl	7	7
cdp	6	6
cops	7	7
dtp	7	7
dvlan	7	7
earl	7	7
ethc	7	7
filesys	7	7
gvrp	7	7
ip	7	7
kernel	7	7
ld	7	7
mcast	7	7
mgmt	7	7
mls	7	7
protfilt	7	7
pruning	7	7
privatevlan	7	7
qos	7	7
radius	7	7
rsvp	7	7

## show logging

```

security          7          7
snmp              7          7
spantree         7          7
sys              7          7
tac              7          7
tcp              7          7
telnet           7          7
tftp             7          7
udld            7          7
vmps            7          7
vtp             7          7

0(emergencies)   1(alerts)     2(critical)
3(errors)        4(warnings)   5(notifications)
6(information)  7(debugging)
Console> (enable)

```

Table 2-39 describes the fields in the **show logging** command output.

**Table 2-39 show logging Command Output Fields**

Field	Description
Logging buffered size	Size of the logging buffer.
timestamp option	Status of whether the timestamp option is enabled or disabled.
Logging history size	Size of the logging history buffer.
Logging console	Status of whether logging to the console is enabled or disabled.
Logging telnet	Status of whether logging to the Telnet session is enabled or disabled.
Logging server	Status of whether logging to the logging server is enabled or disabled.
Facility	Name of the facility to be logged.
Server/Severity	Severity level at which point an error from that facility is logged.
Current Session Severity	Severity level at which point an error from that facility is logged during the current session.
0 (emergencies), 1 (alerts)...	Key to the numeric severity level codes.

## Related Commands

```

clear logging server
set logging console
set logging history
set logging level
set logging server
set logging session
show logging buffer

```

# show logging buffer

Use the **show logging buffer** command to display system messages from the internal buffer.

**show logging buffer** [-] [*number\_of\_messages*]

<b>Syntax Description</b>	– (Optional) Forces the display to show system messages starting from the end of the buffer.
<i>number_of_messages</i>	(Optional) Number of system messages to be displayed; valid values are from 1 to 1023.

**Defaults** The default is –20 messages.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not enter the – keyword, system messages are displayed from the beginning of the buffer. If you do not specify the *number\_of\_messages*, all messages in the buffer are displayed.

**Examples** This example shows how to display the first four system messages from the internal buffer:

```
Console> (enable) show logging buffer 4

1999 Dec 28 15:18:21 %SYS-1-SYS_NORMPWRMGMT: System in normal power management on
1999 Dec 28 15:18:24 %SYS-5-MOD_PWRON: Module 2 powered up
1999 Dec 28 15:18:31 %MLS-5-NDEDISABLED: Netflow Data Export disabled
1999 Dec 28 15:18:32 %MLS-5-MCAST_STATUS: IP Multicast Multilayer Switching is ed
Console> (enable)
```

This example shows how to display the last four system messages from the internal buffer:

```
Console> (enable) show logging buffer -4

1999 Dec 28 15:18:32 %MLS-5-MCAST_STATUS: IP Multicast Multilayer Switching is ed
1999 Dec 28 15:18:32 %SYS-5-MOD_OK: Module 1 is online
1999 Dec 28 15:19:07 %SYS-5-MOD_OK: Module 2 is online
1999 Dec 28 15:19:27 %PAGP-5-PORTTOSTP: Port 2/1 joined bridge port 2/1
Console> (enable)
```

**Related Commands** [clear logging buffer](#)  
[set logging buffer](#)

# show mac

Use the **show mac** command to display MAC counters.

**show mac** [**utilization**] [*mod*[/*port*]]

Syntax Description	<b>utilization</b>	(Optional) Displays approximated packet and byte rates.
	<i>mod</i> [/ <i>port</i> ]	(Optional) Number of the module and optionally, the number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The **utilization** keyword is not supported on ATM ports.

If you do not specify a module number, all modules are shown. If you do not specify a port number, all ports are shown.

The Out-Discards field displays the number of outbound packets chosen to be discarded even though no errors had been detected to prevent being transmitted. For example, an outbound link is overwhelmed by switch traffic. Packets dropped are the ones destined for that port, but the port could not accept those packets due to XMT buffer overflow.

The Xmit-Packet-Rate, Xmit-Octet-Rate, Rcv-Packet-Rate, and Rcv-Octet-Rate fields display approximated average utilization rates rather than exact values. The approximated average is based on the previous approximation values, the last counter values read from hardware, the load time interval (fixed at 5 minutes), and the polling interval.

**Examples** This example shows how to display MAC information for port 4 on module 3:

```
Console> show mac 3/1
```

Port	Rcv-Unicast	Rcv-Multicast	Rcv-Broadcast
3/1	0	22636	1

Port	Xmit-Unicast	Xmit-Multicast	Xmit-Broadcast
3/1	3690	1888064	305202

Port	Rcv-Octet	Xmit-Octet
3/1	9310072	162180717

MAC	Dely-Exced	MTU-Exced	In-Discard	Out-Discard
-----	------------	-----------	------------	-------------

```

-----
3/1          0          0          0          0

Port  Last-Time-Cleared
-----
3/1  Wed Jan 14 2004, 07:59:35
Console>

```

This command shows how to display approximated packet and byte rates:

```

Console> (enable) show mac utilization 1
5 min input/output port rates:

Port  Xmit-Packet-Rate      Xmit-Octet-Rate
-----
1/1          1343              123432
1/2          2342              232343
Port  Rcv-Packet-Rate      Rcv-Octet-Rate
-----
1/1          1324              143253
1/2          2234              253234
Console> (enable)

```

Table 2-40 describes the possible fields in the **show mac** command output.

**Table 2-40** *show mac Command Output Fields*

Field	Description
MAC	Module and port.
Rcv-Frms	Frames received on the port.
Xmit-Frms	Frames transmitted on the port.
Rcv-Broad	Broadcast frames received on the port.
Xmit-Broad	Broadcast frames transmitted on the port.
Dely-Exced	Total transmit frames aborted due to excessive deferral.
MTU-Exced	Frames for which the MTU size was exceeded.
In-Discard	Incoming frames that were discarded because the frame did not need to be switched.
Out-Discard	Number of outbound packets chosen to be discarded even though no errors had been detected to prevent their being transmitted.
Curr-Path	Current path used (primary or secondary).
TVX	Value of the valid transmission timer.
Upstream-Nbr	MAC address of the current upstream neighbor.
Downstream-Nbr	MAC address of the current downstream neighbor.
Old-Upstrm-Nbr	MAC address of the previous upstream neighbor.
Old-Downstrm-Nbr	MAC address of the previous downstream neighbor.
Rcv-Smt	Number of SMT frames received by the port.
Xmit-Smt	Number of SMT frames transmitted by the port.
Rcv-llc	Number of NLLC frames received by the port.
Xmit-llc	Number of LLC frames transmitted by the port.

*Table 2-40 show mac Command Output Fields (continued)*

Field	Description
Rcv-Octet	Number of octet frames received on the port.
Xmit-Octet	Number of octet frames transmitted on the port.
Rcv-Unicast	Number of unicast frames received on the port.
Rcv-Broadcast	Number of broadcast frames received on the port.
Xmit-Unicast	Number of unicast frames transmitted on the port.
Xmit-Broadcast	Number of broadcast frames transmitted on the port.
Tvx-Exp-Ct	Number of times the TVX timer expired.
MAC Last-Time-Cleared	Module and port number and the date and time of the last time the software counters are cleared on this MAC.
Xmit-Packet-Rate	Number of packets transmitted.
Xmit-Octet-Rate	Number of bytes transmitted.
Rcv-Packet-Rate	Number of packets received.
Rcv-Octet-Rate	Number of bytes received.

# show microcode

Use the **show microcode** command to display the version of the microcode and the module version information.

## show microcode

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the **show microcode** output for a supervisor engine:

```
Console> show microcode
Bundled Images  Version                Size      Built
-----
LCP SLCP        4.2(0.24)VAI58           302506 12/03/98 03:51:46
LCP LX1000      4.2(0.24)VAI58           288508 12/03/98 03:53:12
LCP LX10100     4.2(0.24)VAI58           379810 12/03/98 03:52:33
```

[Table 2-41](#) describes possible fields in the **show microcode** command output.

**Table 2-41** show microcode Command Output Fields

Field	Description
Bundled Images	Name of the bundled image.
Version	Version of the image.
Size	Size of the image.
Built	Date image was built.

# show mls

Use the **show mls** command to display multilayer switching (MLS) Layer 3 packet information in the MLS-based Catalyst 6500 series switches.

```
show mls [ip | ipx] [mod]
```

Syntax Description	
<b>ip</b>	(Optional) Specifies IP MLS.
<b>ipx</b>	(Optional) Specifies IPX MLS.
<i>mod</i>	(Optional) Number of the MSFC; valid values are <b>15</b> and <b>16</b> .

**Defaults** The default displays both IP and IPX MLS information.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you enter any of the **show mls** commands on Catalyst 6500 series switches without IP or IPX MLS, one of these warning messages is displayed:

```
Multilayer switching not supported on feature card.
```

or

```
IPX Multilayer switching not supported on feature card.
```

If you place the MSFC on a supervisor engine installed in slot 1, then the MSFC is recognized as module 15. If you install the supervisor engine in slot 2, the MSFC is recognized as module 16.

This command is not supported on switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2).

**Examples** These examples show the display if you enter the **show mls** commands on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC:

```
Console> (enable) show mls
Total Active MLS entries = 0
Total packets switched = 0
IP Multilayer switching enabled
IP Multilayer switching aging time = 256 seconds
IP Multilayer switching fast aging time = 0 seconds, packet threshold = 0
IP Flow mask: Full Flow
Configured flow mask is Destination flow
Active IP MLS entries = 0
Netflow Data Export version: 8
Netflow Data Export disabled
Netflow Data Export port/host is not configured
Total packets exported = 0
```

```

MSFC ID          Module XTAG MAC          Vlans
-----
52.0.03          15      1      01-10-29-8a-0c-00 1,10,123,434,121
                                                222,666,959

IPX Multilayer switching enabled
IPX Multilayer switching aging time = 256 seconds
IPX Flow mask: Full Flow
Active IPX MLS entries = 0

MSFC ID          Module XTAG MAC          Vlans
-----
52.0.0.3         16      1      00-10-29-8a-0c-00 1,10

Console> (enable)

Console> (enable) show mls ipx
IPX Multilayer switching disabled
IPX Multilayer switching aging time = 256 seconds
IPX flow mask is Destination flow
IPX max hop is 16
Active IPX MLS entries = 0

IPX MLS-RP IP    MLS-RP ID    XTAG MLS-RP MAC-Vlans
-----
22.1.0.55        00906dfc5800  5 00-10-07-38-29-17 2-15,66,77,88,99
                                00-90-6d-fc-58-00 20-21

MSFC ID          Module XTAG MAC          Vlans
-----
52.0.0.3         16      1      00-10-29-8a-0c-00 1,10

Console> (enable)

```

**Related Commands**

[clear mls statistics entry](#)  
[set mls agingtime](#)  
[set mls exclude protocol](#)  
[set mls nde](#)  
[set mls statistics protocol](#)

# show mls acl-route

Use the **show mls acl-route** command to display summaries from ACL for routing in the MLS-based Catalyst 6500 series switches.

**show mls acl-route**

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

If you enter any of the **show mls** commands on Catalyst 6500 series switches without IP or IPX MLS, one of these warning messages display:

```
Multilayer switching not supported on feature card.
```

or

```
IPX Multilayer switching not supported on feature card.
```

**Examples** This example shows how to display summaries from ACL for routing:

```
Console> show mls acl-route
Total L3 packets forwarded      0
Total L3 octets forwarded       0
Total routed VLANs             0
Total used adjacency entries    0
Console>
```

**Related Commands** [show mls](#)

# show mls cef interface

Use the **show mls cef interface** command to display MSFC VLAN information.

```
show mls cef interface [vlan]
```

<b>Syntax Description</b>	<i>vlan</i> (Optional) Number of the VLAN; valid values are from 1 to 4094.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.
<b>Examples</b>	<p>This example shows how to display Cisco Express Forwarding (CEF) interfaces:</p> <pre> Console&gt; (enable) <b>show mls cef interface</b> Module 16: vlan 1, IP Address 21.0.0.194, Netmask 255.0.0.0   MTU = 1500, State = up, ICMP-Unreach = enabled, ICMP-Redirect = enabled   Unicast RPF = disabled Module 16: vlan 43, IP Address 43.0.0.99, Netmask 255.0.0.0   MTU = 1500, State = down, ICMP-Unreach = disabled, ICMP-Redirect = disabled   Unicast RPF = disabled Module 16: vlan 44, IP Address 44.0.0.99, Netmask 255.0.0.0   MTU = 1500, State = down, ICMP-Unreach = disabled, ICMP-Redirect = disabled   Unicast RPF = disabled Module 16: vlan 45, IP Address 45.0.0.99, Netmask 255.0.0.0   MTU = 1500, State = up, ICMP-Unreach = enabled, ICMP-Redirect = enabled   Unicast RPF = disabled Module 16: vlan 46, IP Address 46.0.0.99, Netmask 255.0.0.0   MTU = 1500, State = up, ICMP-Unreach = enabled, ICMP-Redirect = enabled   Unicast RPF = disabled Module 16: vlan 47, IP Address 47.0.0.99, Netmask 255.0.0.0   MTU = 1500, State = down, ICMP-Unreach = disabled, ICMP-Redirect = disabled   Unicast RPF = disabled Module 16: vlan 48, IP Address 48.0.0.99, Netmask 255.0.0.0   MTU = 1500, State = down, ICMP-Unreach = disabled, ICMP-Redirect = disabled   Unicast RPF = disabled Module 16: vlan 49, IP Address 0.0.0.0, Netmask 0.0.0.0   MTU = 1500, State = down, ICMP-Unreach = disabled, ICMP-Redirect = disabled   Unicast RPF = disabled  Console&gt; (enable) </pre>

This example show how to display information for a specific CEF VLAN:

```

Console> (enable) show mls cef interface 46
Module 16: vlan 46, IP Address 46.0.0.99, Netmask 255.0.0.0
  MTU = 1500, State = up, ICMP-Unreach = enabled, ICMP-Redirect = enabled
  Unicast RPF = disabled

Console> (enable)

```

Table 2-42 describes the possible fields in the **show mls cef interface** command output.

**Table 2-42** *show mls cef interface Command Output Fields*

Field	Description
Vlan	VLAN associated with the interface.
IP Address	IP address associated with the interface.
Netmask	IP network mask associated with the interface.
MTU	IP MTU associated with the interface.
State	Interface state (up or down).
ICMP-Unreach	Status of whether denied Layer 3 packets will be bridged to MSFC to generate ICMP unreachable.
ICMP-Redirect	Status of whether Layer 3 packets whose destination VLAN is equal to the source VLAN should be redirected to the MSFC to generate ICMP redirect.
Unicast RPF	Unicast RPF enable/disable.

#### Related Commands

[clear mls cef](#)  
[show mls cef mac](#)  
[show mls cef summary](#)  
[show mls entry cef](#)

# show mls cef mac

Use the **show mls cef mac** command to display bottom interface adapter (BIA) physical MACs and HSRP active virtual MACs associated with the designated MSFC2.

## show mls cef mac

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

If the MSFC2 has any HSRP MAC addresses configured on one or more VLANs and these interfaces are HSRP ACTIVE (for example, not standby), these will also be displayed in the command output. For example:

```
Console> show mls cef mac
Module 16:Physical MAC-Address 00-01-97-34-2b-fd
Vlan Virtual MAC-Address(es)
-----
    1 00-00-0c-07-ac-00
    20 00-00-0c-07-ac-00
```

You will only see the virtual MAC addresses if those interfaces on the designated MSFC2 that have HSRP configured are HSRP ACTIVE and not STANDBY.

---

**Examples** This example shows how to display the MAC address associated with the designated MSFC2:

```
Console> (enable) show mls cef mac
Module 16: Physical MAC-Address 00-01-97-36-1b-fd

Console> (enable)
```

---

**Related Commands**

- [clear mls cef](#)
- [show mls cef interface](#)
- [show mls cef summary](#)
- [show mls entry cef](#)

# show mls cef summary

Use the **show mls cef summary** command to display a summary of Cisco Express Forwarding (CEF) table information.

## show mls cef summary

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

**Examples** This example shows how to display CEF information:

```
Console> (enable) show mls cef summary
      Total L3 packets switched:                0
Total L3 octets switched:                      0
Total route entries:                          10
  IP route entries:                           9
  IPX route entries:                          1
  IPM route entries:                          0
IP load sharing entries:                      0
IPX load sharing entries:                     0
Forwarding entries:                          1
Bridge entries:                               6
Drop entries:                                 3
Console> (enable)
```

[Table 2-43](#) describes the possible fields in the **show mls cef summary** command output.

**Table 2-43** show mls cef summary Command Output Fields

Field	Description
Total L3 packets forwarded	Number of Layer 3 packets forwarded by the CEF engine.
Total L3 octets forwarded	Number of Layer 3 octets forwarded by the CEF engine.
Total route entries	Number of route entries.
IP route entries	Number of IP route entries.

*Table 2-43 show mls cef summary Command Output Fields (continued)*

Field	Description
IPX route entries	Number of IPX route entries.
IP load sharing entries	Number of load-sharing entries.
IPX load sharing entries	Number of load-sharing entries.
Forwarding entries	Number of forwarding entries.
Bridge entries	Number of bridge entries.
Drop entries	Number of incomplete entries (no adjacency information).

**Related Commands**

**clear mls cef**  
**show mls cef interface**  
**show mls cef mac**  
**show mls entry cef**

## show mls entry

Use the **show mls entry** command to display state information in the MLS-based Catalyst 6500 series switches.

```
show mls entry [mod] [short | long]
```

```
show mls entry ip [mod] [destination ip_addr_spec] [source ip_addr_spec]
[protocol protocol] [src-port src_port] [dst-port dst_port] [short | long]
```

```
show mls entry ipx [mod] [destination ipx_addr_spec] [short | long]
```

```
show mls entry qos
```

Syntax Description		
<i>mod</i>	(Optional) MSFC module number; valid values are <b>15</b> or <b>16</b> .	
<b>short</b>	(Optional) Displays the output with carriage returns.	
<b>long</b>	(Optional) Displays the output on one line.	
<b>ip</b>	Specifies IP MLS.	
<b>destination</b>	(Optional) Specifies the destination IP or IPX address.	
<i>ip_addr_spec</i>	(Optional) Full IP address or a subnet address.	
<b>source</b>	(Optional) Specifies the source IP or IPX address.	
<b>protocol</b>	(Optional) Specifies the protocol type.	
<i>protocol</i>	(Optional) Protocol type; valid values can be <b>0</b> , <b>tcp</b> , <b>udp</b> , <b>icmp</b> , or a decimal number for other protocol families. <b>0</b> indicates “do not care.”	
<b>src-port</b> <i>src_port</i>	(Optional) Specifies the number of the TCP/UDP source port (decimal). Used with <b>dst-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”	
<b>dst-port</b> <i>dst_port</i>	(Optional) Specifies the number of the TCP/UDP destination port (decimal). Used with <b>src-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”	
<b>ipx</b>	Specifies IPX MLS.	
<i>ipx_addr_spec</i>	(Optional) Full IPX address or a subnet address.	
<b>qos</b>	Specifies QoS.	

**Defaults** The default displays MLS information in long format.

**Command Types** Switch command.

**Command Modes** Normal.

## Usage Guidelines

On switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2), the display contains summaries derived from three forwarding sources: FIB for routing, the NetFlow table for statistics, and ACL TCAM for policy-based routing.

The *mod* variable and the **ip**, **ipx**, **long**, and **short** keywords are not supported on switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2).

If you use the **ip** keyword, you are specifying a command for IP MLS. If you use the **ipx** keyword, you are specifying a command for IPX MLS.

When entering the *ip\_addr\_spec*, use the full IP address or a subnet address in one of the following formats: *ip\_addr*, *ip\_addr/netmask*, or *ip\_addr/maskbit*.

When entering the *ipx\_addr\_spec*, use the full IP address or a subnet address in one of the following formats: *src\_net[mask]*, *dest\_net.dest\_node*, or *dest\_net/mask*.

If you enter any **show mls** command on Catalyst 6500 series switches without IP MLS, this warning message is displayed:

```
Multilayer switching not supported on feature card.
```

If you enter any **show mls** command on Catalyst 6500 series switches without IPX MLS, this warning message is displayed:

```
IPX Multilayer switching not supported on feature card.
```

If you enter the **show mls** command with no arguments, general IP MLS information and all IP MLS-RP information is displayed.

A value 0 for *src\_port* and *dst\_port* means “don’t care.”

Entering the **destination** keyword specifies the entries matching the destination IP address specification, entering the **source** keyword specifies the entries matching the source IP address specification, and entering an *ip\_addr\_spec* can specify a full IP address or a subnet address. If you do not specify a keyword, it is treated as a wildcard, and all entries are displayed.

Use the following syntax to specify an IP subnet address:

- *ip\_subnet\_addr*—This is the short subnet address format. The trailing decimal number 00 in an IP address YY.YY.YY.00 specifies the boundary for an IP subnet address. For example, 172.22.36.00 indicates a 24-bit subnet address (subnet mask 172.22.36.00/255.255.255.0), and 173.24.00.00 indicates a 16-bit subnet address (subnet mask 173.24.00.00/255.255.0.0). However, this format can identify only a subnet address with a length of 8, 16, or 24 bits.
- *ip\_addr/subnet\_mask*—This is the long subnet address format. For example, 172.22.252.00/255.255.252.00 indicates a 22-bit subnet address. This format can specify a subnet address of any bit number. To provide more flexibility, the *ip\_addr* is allowed to be a full host address, such as 172.22.253.1/255.255.252.00.
- *ip\_addr/maskbits*—This is the simplified long subnet address format. The mask bits specify the number of bits of the network masks. For example, 172.22.252.00/22 indicates a 22-bit subnet address. The *ip\_addr* is allowed to be a full host address, such as 172.22.254.1/22, which has the same subnet address as 172.22.252.00/72.

The [**long** | **short**] option gives the flexibility to display the output in regular (80 characters in width) or wide screen.

Dashes may be displayed for some fields if the fields are not applicable to the type of flow mask.

If you place the MSFC on a supervisor engine installed in slot 1, then the MSFC is recognized as module 15. If you install the supervisor engine in slot 2, the MSFC is recognized as module 16.

The **show mls entry** command displays bridged flows on a Supervisor Engine 1 when bridged flow statistics is enabled. The **show mls statistics entry** command displays bridged flows on a Supervisor Engine 2 when bridged flow statistics is enabled. To enable or disable bridged flow statistics, enter the **set mls bridged-flow-statistics** command.

## Examples



### Note

The examples shown for the **show mls entry** commands are displayed in short format. The display in the long form exceeds the page width and cannot be shown.

These examples show the display if you enter the **show mls entry** commands on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC:

```
Console> (enable) show mls entry short
Destination-IP Source-IP Prot DstPrt SrcPrt Destination-Mac Vlan -----
-----
ESrc EDst SPort DPort Stat-Pkts Stat-Byte Uptime Age
-----
171.69.200.234 171.69.192.41 TCP* 6000 59181 00-60-70-6c-fc-22 4
ARPA SNAP 5/8 11/1 3152 347854 09:01:19 09:08:20
171.69.1.133 171.69.192.42 UDP 2049 41636 00-60-70-6c-fc-23 2
SNAP ARPA 5/8 1/1 2345 123456 09:03:32 09:08:12
```

Total IP entries: 2

```
Destination-IPX Source-IPX-net Destination-Mac Vlan Port
-----
Stat-Pkts Stat-Bytes
-----
BABE.0000.0000.0001 - 00-a0-c9-0a-89-1d 211 13/37 30230 1510775
201.00A0.2451.7423 - 00-a0-24-51-74-23 201 14/33
30256 31795084
501.0000.3100.0501 - 31-00-05-01-00-00 501 9/37
12121 323232
401.0000.0000.0401 - 00-00-04-01-00-00 401 3/1
4633 38676
```

Total IPX entries: 4

Console> (enable)

For full flow:

```
Console> (enable) show mls entry ip short
Destination-IP Source-IP Prot DstPrt SrcPrt Destination-Mac
Vlan -----
-----
EDst ESrc DPort SPort Stat-Pkts Stat-Byte Uptime Age
-----
MSFC 127.0.0.24 (module 16):
171.69.200.234 171.69.192.41 TCP* 6000 59181 00-60-70-6c-fc-22 4
ARPA SNAP 5/8 11/1 3152 347854 09:01:19 09:08:20
171.69.1.133 171.69.192.42 UDP 2049 41636 00-60-70-6c-fc-23 2
SNAP ARPA 5/8 1/1 2345 123456 09:03:32 09:08:12
```

Total Entries:2

\* indicates TCP flow has ended

Console> (enable)

For destination-only flow:

```

Console> (enable) show mls entry ip short
Destination-IP Source-IP Prot DstPrt SrcPrt Destination-Mac Vlan -----
-----
ESrc EDst SPort DPort Stat-Pkts Stat-Byte Uptime Age
-----
MSFC 127.0.0.24 (module 16):
171.69.200.234 - - - 00-60-70-6c-fc-22 4
ARPA SNAP 5/8 11/1 3152 347854 09:01:19 09:08:20
171.69.1.133 - - - 00-60-70-6c-fc-23 2
SNAP ARPA 5/8 1/1 2345 123456 09:03:32 09:08:12

Total Entries: 2
* indicates TCP flow has ended
Console> (enable)

```

For destination-source flow:

```

Console> (enable) show mls entry ip 16 short
Destination-IP Source-IP Prot DstPrt SrcPrt Destination-Mac Vlan ESrc EDst
Destination-IP Source-IP Prot DstPrt SrcPrt Destination-Mac Vlan -----
-----
ESrc EDst SPort DPort Stat-Pkts Stat-Byte Uptime Age
-----
MSFC 127.0.0.24 (module 16):
171.69.200.234 171.69.192.41 - - - 00-60-70-6c-fc-22 4
ARPA SNAP 5/8 11/1 3152 347854 09:01:19 09:08:20
171.69.1.133 171.69.192.42 - - - 00-60-70-6c-fc-23 2
SNAP ARPA 5/8 1/1 2345 123456 09:03:32 09:08:12

Total Entries: 2
* indicates TCP flow has ended
Console> (enable)

```

For destination-source:

```

Console> (enable) show mls entry ipx short
Destination-IPX Source-IPX-net Destination-Mac Vlan Port
-----
-----
Stat-Pkts Stat-Bytes
-----
MSFC 127.0.0.22 (Module 15):
201.00A0.2451.7423 1.0002 00-a0-24-51-74-23 201 14/33
30256 31795084
501.0000.3100.0501 1.0003 31-00-05-01-00-00 501 9/37
12121 323232

Total entries: 0
Console> (enable)

```

Destination-only flow:

```

Console> (enable) show mls entry ipx short
Destination-IPX Source-IPX-net Destination-Mac Vlan Port
-----
-----
Stat-Pkts Stat-Bytes
-----
MSFC 127.0.0.24 (module 16):
BABE.0000.0000.0001 - 00-a0-c9-0a-89-1d 211 13/37
30230 1510775
201.00A0.2451.7423 - 00-a0-24-51-74-23 201 14/33
30256 31795084
501.0000.3100.0501 - 31-00-05-01-00-00 501 9/37
12121 323232

```

## show mls entry

```

401.0000.0000.0401      -          00-00-04-01-00-00 401  3/1
4633      38676

```

```

Total entries: 4
Console> (enable)

```

```

Console> (enable) show mls entry ipx 16 short

```

```

Destination-IPX          Source-IPX-net  Destination-Mac  Vlan Port
-----
Stat-Pkts  Stat-Bytes
-----
MSFC 127.0.0.22 (Module 16):
501.0000.3100.0501      -          31-00-05-01-00-00 501  9/37
12121      323232
401.0000.0000.0401      -          00-00-04-01-00-00 401  3/1
4633      38676
Console> (enable)

```

These examples show the display if you enter the **show mls entry** commands on a switch configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

```

Console> (enable) show mls entry

```

```

Mod FIB-Type  Destination-IP  Destination-Mask  NextHop-IP  Weight
-----
15 receive  0.0.0.0        255.255.255.255
15 receive  255.255.255.255 255.255.255.255
15 receive  127.0.0.12     255.255.255.255
16 receive  127.0.0.0      255.255.255.255
16 receive  127.255.255.255 255.255.255.255
15 resolved 127.0.0.11     255.255.255.255 127.0.0.11  1
15 receive  21.2.0.4       255.255.255.255
16 receive  21.0.0.0       255.255.255.255
16 receive  21.255.255.255 255.255.255.255
15 receive  44.0.0.1       255.255.255.255
16 receive  44.0.0.0       255.255.255.255
16 receive  44.255.255.255 255.255.255.255
15 receive  42.0.0.1       255.255.255.255
16 receive  42.0.0.0       255.255.255.255
16 receive  42.255.255.255 255.255.255.255
15 receive  43.0.0.99      255.255.255.255
15 receive  43.0.0.0       255.255.255.255
15 receive  43.255.255.255 255.255.255.255
15 receive  192.20.20.20   255.255.255.255
16 receive  21.2.0.5       255.255.255.255
16 receive  42.0.0.20      255.255.255.255
15 connected 43.0.0.0       255.0.0.0
15 drop      224.0.0.0      240.0.0.0
15 wildcard  0.0.0.0        0.0.0.0

```

```

Mod FIB-Type  Dest-IPX-net  NextHop-IPX  Weight
-----
15 connected 21
15 connected 44
15 connected 42
15 resolved 450           42.0050.3EA9.ABFD 1
15 resolved 480           42.0050.3EA9.ABFD 1
15 wildcard  0

```

```

Destination-IP  Source-IP  Prot  DstPrt  SrcPrt  Destination-Mac  Vlan EDst Stat-Pkts  Stat-Bytes  Uptime
Age           TcpDltSeq  TcpDltAck
-----
0.0.0.5        0.0.0.5    5     204     104     cc-cc-cc-cc-cc-cc 5     ARPA  0          0
01:03:18      01:00:51  ccccccc  ccccccc

```

```

0.0.0.2      0.0.0.2      2      201      101      cc-cc-cc-cc-cc-cc 2      ARPA 0      0
01:03:21 01:00:51 cccccccc cccccccc
0.0.0.4      0.0.0.4      4      203      X      cc-cc-cc-cc-cc-cc 4      ARPA 0      0
01:03:19 01:00:51 cccccccc cccccccc
0.0.0.1      0.0.0.1      ICMP    200      100      cc-cc-cc-cc-cc-cc 1      ARPA 0      0
01:03:25 01:00:52 cccccccc cccccccc
0.0.0.3      0.0.0.3      3      202      102      cc-cc-cc-cc-cc-cc 3      ARPA 0      0
01:03:20 01:00:52 cccccccc cccccccc
0.0.0.6      0.0.0.6      TCP     205      105      cc-cc-cc-cc-cc-cc 6      ARPA 0      0
01:03:18 01:00:52 cccccccc cccccccc
Console> (enable)

```

```
Console> (enable) show mls entry qos
```

```
Warning: QoS is disabled.
```

```

Destination-IP  Source-IP      Prot  DstPrt SrcPrt Stat-Pkts  Stat-Bytes  Excd-
Pkts  Stat-Bkts  Uptime  Age
-----

```

```
MSFC 0.0.0.0 (Module 16):
```

```
Console> (enable)
```

## Related Commands [clear mls statistics entry](#)

## show mls entry cef

Use the **show mls entry cef** command to display CEF and adjacency entries (and Tx statistics) for IP resolved entries and IPX resolved or connected entries.

```
show mls entry cef [adjacency]
```

```
show mls entry cef [short | long]
```

```
show mls entry cef ip [[ip_addr/]mask_len] [adjacency]
```

```
show mls entry cef ipx [[ipx_addr/]mask_len] [adjacency]
```

Syntax Description		
	<b>adjacency</b>	(Optional) Displays adjacency information.
	<b>short</b>	(Optional) Displays the output with carriage returns.
	<b>long</b>	(Optional) Displays the output on one line.
	<b>ip</b>	Specifies IP entries.
	<b>ipx</b>	Specifies IPX entries.
	<i>ip_addr</i>	(Optional) IP address of the entry.
	<i>mask_len</i>	(Optional) Mask length associated with the IP or IPX address of the entry; valid values are from 0 to 32.
	<i>ipx_addr</i>	(Optional) IPX address of the entry.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

In the NextHop-IP field, the output may actually be set to “point2point” if the next hop is a point-to-point WAN interface.

When you enter the **show mls entry cef adjacency** command, only adjacency information for those IP or IPX CEF entries that are of type resolved, wildcard, or default are displayed.

**Examples** This example shows how to display information for all CEF entries:

```
Console> (enable) show mls entry cef
Mod FIB-Type Destination-IP Destination-Mask NextHop-IP Weight
-----
 16 receive 0.0.0.0 255.255.255.255
 16 receive 255.255.255.255 255.255.255.255
```

```

16 resolved 127.0.0.21      255.255.255.255 127.0.0.21      1
16 receive  21.0.0.194           255.255.255.255
16 receive  45.0.0.99              255.255.255.255
16 receive  46.0.0.99              255.255.255.255
16 resolved 46.0.0.10             255.255.255.255 46.0.0.10      1
16 resolved 46.0.0.9              255.255.255.255 46.0.0.9        1
16 resolved 46.0.0.4              255.255.255.255 46.0.0.4        1
16 resolved 46.0.0.1              255.255.255.255 46.0.0.1        1
16 resolved 46.0.0.2              255.255.255.255 46.0.0.2        1
16 resolved 46.0.0.3              255.255.255.255 46.0.0.3        1
16 resolved 46.0.0.5              255.255.255.255 46.0.0.5        1
16 resolved 46.0.0.6              255.255.255.255 46.0.0.6        1
16 resolved 46.0.0.7              255.255.255.255 46.0.0.7        1
16 resolved 46.0.0.8              255.255.255.255 46.0.0.8        1
16 receive  224.0.0.0           255.255.255.0
16 connected 21.0.0.0           255.0.0.0
16 connected 45.0.0.0           255.0.0.0
16 connected 46.0.0.0           255.0.0.0
16 drop     224.0.0.0           240.0.0.0
16 wildcard 0.0.0.0             0.0.0.0

```

```

Mod FIB-Type  Dest-IPX-net  NextHop-IPX          Weight
-----
16 connected abcd
16 connected defa
16 resolved fade          defa.000A.0203.0405      1
16 wildcard 0
Console> (enable)

```

These examples show how to display information for a specific entry type:

```

Console> (enable) show mls entry cef ip
Mod FIB-Type  Destination-IP  Destination-Mask  NextHop-IP  Weight
-----
16 receive  0.0.0.0         255.255.255.255
16 receive  255.255.255.255 255.255.255.255
16 receive  127.0.0.22      255.255.255.255
16 receive  127.0.0.0        255.255.255.255
16 receive  127.255.255.255 255.255.255.255
16 resolved 21.0.0.1         255.255.255.255 21.0.0.1      1
16 receive  21.0.0.194      255.255.255.255
16 receive  21.0.0.0         255.255.255.255
16 receive  21.255.255.255  255.255.255.255
16 resolved 127.0.0.21      255.255.255.255 127.0.0.21    1
16 receive  224.0.0.0         255.255.255.0
.
.
.

```

```

Console> (enable) show mls entry cef ipx
Mod FIB-Type  Dest-IPX-net  NextHop-IPX          Weight
-----
16 connected fadeface
16 resolved abcd          fadeface.0001.0203.0405      1
16 wildcard 0

```

This example shows how to display adjacency information:

```

Console> (enable) show mls entry cef ip adjacency
Mod: 16
Destination-IP: 127.0.0.21      Destination-Mask: 255.255.255.255
FIB-Type: resolved

```

```

AdjType  NextHop-IP  NextHop-Mac  Vlan  Encp  Tx-Packets  Tx-Octets
-----

```

## ■ show mls entry cef

```

connect 127.0.0.21      00-00-12-00-00-00      0 ARPA      0      0

Mod:                    16
Destination-IP:        46.0.0.10      Destination-Mask:      255.255.255.255
FIB-Type:              resolved

AdjType  NextHop-IP      NextHop-Mac      Vlan  Encp  Tx-Packets      Tx-Octets
-----
connect  46.0.0.10      00-00-0c-42-00-0a   46  ARPA      4889030      224895380
Console> (enable)

```

Table 2-44 describes the possible fields in the **show mls entry cef** command output.

**Table 2-44** show mls entry cef Command Output Fields

Field	Description
Mod	MSFC module number
Destination-IP Destination-IPX	Destination address (IP address or IPX network)
Destination-Mask	Destination mask
FIB-Type	FIB entry types are as follows: <ul style="list-style-type: none"> <li>• receive—Prefix associated with an MSFC interface</li> <li>• connected—Prefix associated with a connected network</li> <li>• resolved—Prefix associated with a valid next-hop address</li> <li>• drop—Drop packets associated with this prefix</li> <li>• wildcard—Match-all entry (drop or MSFC redirect)</li> <li>• default—Default route (wildcard will point to default route)</li> </ul>
NextHop-IP NextHop-IPX	Next-hop address (IP address or IPX network)
Weight	Next-hop load-sharing weight
AdjType	Adjacency types are as follows: <ul style="list-style-type: none"> <li>• connect—Complete rewrite information</li> <li>• drop, null, loopbk—Drop adjacency</li> <li>• frc drp—Drop adjacency due to ARP throttling</li> <li>• punt—Redirect to MSFC for further processing</li> <li>• no r/w—Redirect to MSFC because rewrite is incomplete</li> </ul>
NextHop-Mac	Next-hop destination MAC address
Vlan	Next-hop destination VLAN
Encp	Next-hop destination encapsulation type (ARPA, RAW, SAP, and SNAP)
Tx-Packets	Number of packets transmitted to this adjacency
Tx-Octets	Number of bytes transmitted to this adjacency

---

**Related Commands**

**clear mls cef**  
**clear mls entry cef adjacency**  
**show mls cef interface**  
**show mls cef mac**  
**show mls cef summary**

# show mls entry netflow-route

Use the **show mls entry netflow-route** command to display shortcut information in the MLS-based Catalyst 6500 series switches.

```
show mls entry netflow-route [short | long]
```

```
show mls entry netflow-route ip [destination ip_addr_spec] [source ip_addr_spec]
[protocol protocol] [src-port src_port] [dst-port dst_port] [short | long]
```

Syntax Description		
<b>short</b>	(Optional)	Displays the output with carriage returns.
<b>long</b>	(Optional)	Displays the output on one line.
<b>ip</b>		Specifies IP MLS.
<b>destination</b>	(Optional)	Specifies the destination IP or IPX address.
<i>ip_addr_spec</i>	(Optional)	Full IP address or a subnet address.
<b>source</b>	(Optional)	Specifies the source IP or IPX address.
<b>protocol</b>	(Optional)	Specifies the protocol type.
<i>protocol</i>	(Optional)	Protocol type; valid values can be <b>0</b> , <b>tcp</b> , <b>udp</b> , <b>icmp</b> , or a decimal number for other protocol families. <b>0</b> indicates “do not care.”
<b>src-port</b> <i>src_port</i>	(Optional)	Specifies the number of the TCP/UDP source port (decimal). Used with <b>dst-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”
<b>dst-port</b> <i>dst_port</i>	(Optional)	Specifies the number of the TCP/UDP destination port (decimal). Used with <b>src-port</b> to specify the port pair if the protocol is <b>tcp</b> or <b>udp</b> . <b>0</b> indicates “do not care.”

**Defaults** The default displays MLS information in long format.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

The **show mls entry netflow-route** command output displays software-installed NetFlow forwarding entries (these are used for features such as TCP intercept or reflexive ACL), but does not display flow statistics for flows that are switched through CEF entries.

If you use the **ip** keyword, you are specifying a command for IP MLS.

When entering the *ip\_addr\_spec*, use the full IP address or a subnet address in one of the following formats: *ip\_addr*, *ip\_addr/netmask*, or *ip\_addr/maskbit*.

Entering the **destination** keyword specifies the entries matching the destination IP address specification, entering the **source** keyword specifies the entries matching the source IP address specification, and entering an *ip\_addr\_spec* can specify a full IP address or a subnet address. If you do not specify a keyword, it is treated as a wildcard, and all entries are displayed.

Use the following syntax to specify an IP subnet address:

- *ip\_subnet\_addr*—This is the short subnet address format. The trailing decimal number 00 in an IP address YY.YY.YY.00 specifies the boundary for an IP subnet address. For example, 172.22.36.00 indicates a 24-bit subnet address (subnet mask 172.22.36.00/255.255.255.0), and 173.24.00.00 indicates a 16-bit subnet address (subnet mask 173.24.00.00/255.255.0.0). However, this format can identify only a subnet address with a length of 8, 16, or 24 bits.
- *ip\_addr/subnet\_mask*—This is the long subnet address format. For example, 172.22.252.00/255.255.252.00 indicates a 22-bit subnet address. This format can specify a subnet address of any bit number. To provide more flexibility, the *ip\_addr* is allowed to be a full host address, such as 172.22.253.1/255.255.252.00.
- *ip\_addr/maskbits*—This is the simplified long subnet address format. The mask bits specify the number of bits of the network masks. For example, 172.22.252.00/22 indicates a 22-bit subnet address. The *ip\_addr* is allowed to be a full host address, such as 172.22.254.1/22, which has the same subnet address as 172.22.252.00/22.

The [**long** | **short**] option gives the flexibility to display the output in regular (80 characters in width) or wide screen.

Dashes may be displayed for some fields if the fields are not applicable to the type of flow mask.

If you place the MSFC on a supervisor engine installed in slot 1, then the MSFC is recognized as module 15. If you install the supervisor engine in slot 2, the MSFC is recognized as module 16.

## Examples



### Note

The example below is displayed in short format. The display in the long form exceeds the page width and cannot be shown.

```

Console> show mls entry netflow-route short
Destination-IP  Source-IP      Prot  DstPrt  SrcPrt  Destination-Mac  Vlan
-----
EDst Stat-Pkts  Stat-Bytes  Uptime  Age      TcpDltSeq  TcpDltAck
-----
0.0.0.8         0.0.0.8        8       207     107     cc-cc-cc-cc-cc-cc  8
ARPA 0          0              00:07:07 00:21:08 cccccccc cccccccc
0.0.0.7         0.0.0.7        7       206     106     cc-cc-cc-cc-cc-cc  7
ARPA 0          0              00:07:09 00:21:08 cccccccc cccccccc
0.0.0.10        0.0.0.10       10      209     109     cc-cc-cc-cc-cc-cc  10
ARPA 0          0              00:07:06 00:21:08 cccccccc cccccccc
0.0.0.9         0.0.0.9        9       208     108     cc-cc-cc-cc-cc-cc  9
ARPA 0          0              00:07:07 00:21:08 cccccccc cccccccc
0.0.0.6         0.0.0.6        TCP     205     105     cc-cc-cc-cc-cc-cc  6
ARPA 0          0              00:07:12 00:21:08 cccccccc cccccccc

Total entries displayed:5
Console>

```

# show mls exclude protocol

Use the **show mls exclude protocol** command to display excluded protocols on TCP or UDP from being shortcuts.

## show mls exclude protocol

**Syntax Description** This command has no arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you enter the **show mls exclude protocol** command on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC, MLS exclusion only works in full-flow mode.

These guidelines apply to switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

- The **show mls exclude protocol** displays the Layer 4 protocols that will not cause a NetFlow entry to be created automatically but can still be forwarded if a FIB hit occurs.
- MLS exclusion works regardless of the configured flow mask.

**Examples** This example shows how to display excluded protocols on TCP or UDP from being shortcuts:

```
Console> (enable) show mls exclude protocol
Protocol-Port Excluded-From
-----
89             TCP UDP
5              TCP
10             TCP UDP
122            UDP
Note: MLS exclusion only works in full flow mode.
Console> (enable)
```

**Related Commands** [clear mls multicast statistics](#)  
[set mls exclude protocol](#)

# show mls multicast

Use the **show mls multicast** command to display IP multicast MLS information.

**show mls multicast**

**show mls multicast entry** {[*mod*] [**vlan** *vlan\_id*] [**group** *ip\_addr*]} [**source** *ip\_addr*]  
[**long** | **short**]

**show mls multicast entry** {[**all**] [**short** | **long**]}

**show mls multicast statistics** {*mod*}

Syntax Description		
<b>entry</b>		Specifies the IP multicast MLS packet entry.
<i>mod</i>		(Optional) Number of the MSFC; valid values are <b>15</b> and <b>16</b> .
<b>vlan</b> <i>vlan_id</i>		(Optional) Specifies a VLAN.
<b>group</b> <i>ip_addr</i>		(Optional) Specifies a multicast group address.
<b>source</b> <i>ip_addr</i>		(Optional) Specifies a multicast traffic source.
<b>all</b>		(Optional) Specifies all IP multicast MLS entries on the switch.
<b>long</b>		(Optional) Specifies an output appropriate for terminals that support output 80-characters wide.
<b>short</b>		(Optional) Specifies an output appropriate for terminals that support output less than 80-characters wide.
<b>statistics</b>		Displays statistics for an MSFC.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you enter the **show mls multicast** commands on Catalyst 6500 series switches without MLS, this warning message is displayed:

```
This feature is not supported on this device.
```

If you enter the **show mls multicast entry** command with no arguments, all the MLS entries for multicast are displayed. Each row in the **show mls multicast entry** command corresponds to a flow.

These guidelines apply to switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

- If you enter the **show mls multicast entry** command and an asterisk appears in the Source IP column, this indicates that any source is used.
- If you specify source 0, all \* (asterisk) entries are displayed.

If you disable DNS, no name can be specified or shown.

A warning message is displayed if you disable the Layer 2 multicast protocol when the multicast multilayer switching (MMLS) feature is running.

If you place the MSFC on a supervisor engine installed in slot 1, then the MSFC is recognized as module 15. If you install the supervisor engine in slot 2, the MSFC is recognized as module 16.

## Examples

This example shows how to display global information about the IP MMLS entries on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine (WS-F6K-PFC):

```
Console> (enable) show mls multicast
Admin Status: Enabled
Operational Status: Inactive
Configured flow mask is {Source-Destination-Vlan} flow
Active Entries = 0
MSFC (Module 15): 0.0.0.0
Console> (enable)
```

This example shows how to display global information about the IP MMLS entries on a switch configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

```
Console> (enable) show mls multicast
Admin Status      : Enabled
Operational Status : Active
Total Entries     : 104
MSFC (Module 15)  :
  IP Address      : 1.1.1.1
  Complete Flows  : 30
  Partial Flows   : 10
MSFC (Module 16)  :
  IP Address      : 2.2.2.2
  Complete Flows  : 50
  Partial Flows   : 14
Console> (enable)
```

[Table 2-45](#) describes the fields in the **show mls multicast** command output.

**Table 2-45** *show mls multicast Command Output Fields*

Field	Description
Admin Status	Status of whether MMLS feature has been administratively enabled or not.
Operational Status	Actual operational status of the MMLS feature.
Total Entries	Number of shortcut entries that are currently installed.
MSFC	Information about the internal RP connected to the supervisor engine.
IP Address	IP address of the RP.
Complete Flows	Total number of complete flows installed by this RP.
Partial Flows	Total number of partial flows installed by this RP.

This example shows how to display statistical information on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine (WS-F6K-PFC):

```

Console> (enable) show mls multicast statistics
Router IP           Router Name         Router MAC
-----
0.0.0.0            default             00-00-00-00-00-00

Transmit:
    Feature Notifications: 0
    Feature Notification Responses: 0
    Shortcut Notification Responses: 0
        Delete Notifications: 0
            Acknowledgements: 0
                Flow Statistics: 0
    Total Transmit Failures: 0

Receive:
    Feature Notifications: 0
        Shortcut Messages: 0
    Duplicate Shortcut Messages: 0
        Shortcut Install TLV: 0
            Selective Delete TLV: 0
                Group Delete TLV: 0
                    Update TLV: 0
            Input VLAN Delete TLV: 0
            Output VLAN Delete TLV: 0
            Global Delete TLV: 0
                MFD Install TLV: 0
                    MFD Delete TLV: 0
            Global MFD Delete TLV: 0
                Invalid TLV: 0

Console> (enable)

```

This example shows how to display statistical information on a switch configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

```

Console> (enable) show mls multicast statistics
Router IP           Router Name         Router MAC
-----
0.0.0.0            default             00-00-00-00-00-00

Transmit:
    Feature Notifications: 0
    Feature Notification Responses: 0
    Shortcut Notification Responses: 0
        Delete Notifications: 0
            Acknowledgements: 0
                Flow Statistics: 0
    Total Transmit Failures: 0

```

## show mls multicast

```

Receive:
          Feature Notifications: 0
          Shortcut Messages: 0
Duplicate Shortcut Messages: 0
          Shortcut Install TLV: 0
          Selective Delete TLV: 0
          Group Delete TLV: 0
          Update TLV: 0
          Input VLAN Delete TLV: 0
          Output VLAN Delete TLV: 0
          Global Delete TLV: 0
          MFD Install TLV: 0
          MFD Delete TLV: 0
          Global MFD Delete TLV: 0
          Invalid TLV: 0

```

```
Console> (enable)
```

This example shows how to display IP MMLS entry information on a switch configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC:

```

Console> (enable) show mls multicast entry
Router IP      Dest IP      Source IP    Pkts      Bytes      InVlan  OutVlans
-----
1.1.5.252     224.1.1.1   1.1.11.1    15870     2761380    20
1.1.9.254     224.1.1.1   1.1.12.3    473220    82340280   12
1.1.5.252     224.1.1.1   1.1.12.3    15759     2742066    20
1.1.9.254     224.1.1.1   1.1.11.1    473670    82418580   11
1.1.5.252     224.1.1.1   1.1.11.3    15810     2750940    20
1.1.9.254     224.1.1.1   1.1.12.1    473220    82340280   12
1.1.5.252     224.1.1.1   1.1.13.1    15840     2756160    20
Total Entries: 7
Console> (enable)

```



**Note** The display for the **show mls multicast entry** command has been modified to fit the page.

This example shows how to display IP MMLS entry information on a switch configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

```

Console> (enable) show mls multicast entry
Router-IP      Dest-IP      Source-IP    Pkts      Bytes      InVlan Type
OutVlans
-----
33.0.33.26     224.2.2.3   10.0.0.1    595       59500      50      C    13,
12
33.0.33.26     224.2.2.3   *            2         200        50      P    13,
12

Total Entries: 2 (1 of which type 'C' = Complete Flow/s, 'P' = Partial Flow/s)
Console> (enable)

```

[Table 2-46](#) describes the fields in the **show mls multicast entry** command output.

**Table 2-46** show mls multicast entry Command Output Fields

Field	Description
Router-IP	IP address of the RP that installed the flow.
Dest-IP	Multicast destination IP address for this flow.

*Table 2-46 show mls multicast entry Command Output Fields*

Field	Description
Source-IP	IP address of the source that corresponds to this flow.
Pkts	Number of packets switched using this flow.
Bytes	Number of bytes switched using this flow.
InVlan	RPF interface for the packets corresponding to this flow.
Type	Shortcut Type (C = a complete shortcut and P = a partial shortcut).
OutVlans	Output VLANs on which the packets are replicated for this flow.
Total Entries	Number of shortcut entries currently installed.

Related Commands [clear mls multicast statistics](#)

# show mls nde

Use the **show mls nde** command to display NetFlow Data Export (NDE) information.

**show mls nde**

---

**Syntax Description** This command has no arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display NetFlow Data Export information:

```
Console> show mls nde
Netflow Data Export version: 7
Netflow Data Export disabled
Netflow Data Export port/host is not configured.
Total packets exported = 0
Destination Ifindex export is disabled
Source Ifindex export is disabled
Bridged flow statistics is disabled on vlan(s) 1-50,302-303,542,642,910-920,999.
Console>
```

---

**Related Commands** [set mls bridged-flow-statistics](#)  
[set mls nde](#)

# show mls netflow-route

Use the **show mls netflow-route** command to display summaries from NetFlow for routing in the MLS-based Catalyst 6500 series switches.

**show mls netflow-route [ip | ipx]**

## Syntax Description

<b>ip</b>	(Optional) Specifies IP MLS.
<b>ipx</b>	(Optional) Specifies IPX MLS.

## Defaults

The default displays both IP and IPX MLS information.

## Command Types

Switch command.

## Command Modes

Normal.

## Usage Guidelines

This command is supported on Catalyst 6500 series switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

## Examples

This example shows how to display summaries from NetFlow for routing:

```

Console> show mls netflow-route
Total packets switched = 0
Total bytes switched = 0

Software installed aging time = 0
IP flows aging time = 256 seconds
IP flows fast aging time = 0 seconds, packet threshold = 0
IP Current flow mask is Full flow
Total netflow forwarding entries = 4
Netflow Data Export version:7
Netflow Data Export disabled
Netflow Data Export port/host is not configured.
Total packets exported = 0

IPX flows aging time = 256 seconds
IPX flow mask is Destination flow
IPX max hop is 15
Console>

```

# show mls statistics

Use the **show mls statistics** command to display MLS statistics information in the MLS-based Catalyst 6500 series switches.

**show mls statistics protocol**

**show mls statistics entry** [*mod*]

**show mls statistics entry ip** [*mod*] [**destination** *ip\_addr\_spec*] [**source** *ip\_addr\_spec*]  
[**protocol** *protocol*] [**src-port** *src\_port*] [**dst-port** *dst\_port*]

**show mls statistics entry ipx** [*mod*] [**destination** *ipx\_addr\_spec*] [**source** *ipx\_addr\_spec*]

**show mls statistics entry uptime**

## Syntax Description

<b>protocol</b>	Specifies a route processor.
<b>entry</b>	Specifies the entry type.
<i>mod</i>	(Optional) Number of the MSFC; valid values are <b>15</b> or <b>16</b> .
<b>entry</b>	Displays statistics based on the specified option.
<b>ip</b>	Specifies IP MLS.
<b>destination</b>	(Optional) Specifies the destination IP address.
<i>ip_addr_spec</i>	(Optional) Full IP address or a subnet address in the following formats: <i>ip_addr</i> , <i>ip_addr/netmask</i> , or <i>ip_addr/maskbit</i> .
<b>source</b>	(Optional) Specifies the source IP address.
<b>protocol</b> <i>protocol</i>	(Optional) Specifies additional flow information (protocol family and protocol port pair) to be matched; valid values are from 1 to 255, <b>ip</b> , <b>ipinip</b> , <b>icmp</b> , <b>igmp</b> , <b>tcp</b> , and <b>udp</b> .
<b>src-port</b> <i>src_port</i>	(Optional) Specifies the source port IP address.
<b>dst-port</b> <i>dst_port</i>	(Optional) Specifies the destination port IP address.
<b>ipx</b>	Specifies IPX MLS.
<i>ipx_addr_spec</i>	(Optional) Full IPX address or a subnet address in one of the following formats: <i>src_net[/mask]</i> , <i>dest_net.dest_node</i> , or <i>dest_net/mask</i> .
<b>uptime</b>	Displays up time and aging time.

## Command Types

Switch command.

## Command Modes

Normal.

## Usage Guidelines

If your system is configured with the Supervisor Engine 2 with Switching Engine II (PFC2), the **show mls statistics entry** command output displays per flow statistics as per the configured flow mask. You can enter this command to display per-flow statistics for flows that are CEF switched (in hardware) or switched through software-installed shortcuts in the NetFlow table.

You can enter the **show mls statistics entry** command to display NetFlow forwarding entries on systems configured with a Supervisor Engine 2. If your system is configured with a Supervisor Engine 1, enter the **show mls entry** command.

When specifying the **ip | ipx** keyword, if you specify **ip** or do not enter a keyword, this means that the command is for IP MLS. If you specify **ipx**, this means the command is for IPX only.

When entering the IPX address syntax, use the following format:

- IPX net address—1...FFFFFFFE
- IPX node address—x.x.x where x is 0...FFFF
- IPX address—ipx\_net.ipx\_node (for example 3.0034.1245.AB45, A43.0000.0000.0001)

If you enter any of the **show mls statistics protocol** commands on a Catalyst 6500 series switch without MLS, this warning message is displayed:

```
Feature not supported in hardware.
```

If you enter the **show mls statistics protocol** command, the statistics in the protocol category, such as Telnet, FTP, or WWW are displayed. Note that this applies for “full flowmask” only. In flowmasks other than full flow, inapplicable fields will have a dash (similar to **show mls entry** outputs).

A value 0 for *src\_port* and *dst\_port* means “don’t care.” Note that this applies for “full flowmask” only.

Use the following syntax to specify an IP subnet address:

- *ip\_subnet\_addr*—This is the short subnet address format. The trailing decimal number “00” in an IP address YY.YY.YY.YY specifies the boundary for an IP subnet address. For example, 172.22.36.00 indicates a 24-bit subnet address (subnet mask 255.255.255.0), and 173.24.00.00 indicates a 16-bit subnet address (subnet mask 255.255.0.0). However, this format can identify only a subnet address with a length of 8, 16, or 24 bits.
- *ip\_addr/subnet\_mask*—This is the long subnet address format; for example, 172.22.252.00/255.255.252.00 indicates a 22-bit subnet address. This format can specify a subnet address of any bit number. To provide more flexibility, the *ip\_addr* is allowed to be a full host address, such as 172.22.253.1/255.255.252.00, which has the same subnet address as *ip\_subnet\_addr*.
- *ip\_addr/maskbits*—This is the simplified long subnet address format. The mask bits specify the number of bits of the network masks. For example, 172.22.252.00/22 indicates a 22-bit subnet address. The *ip\_addr* is allowed to be a full host address, such as 172.22.254.1/22, which has the same subnet address as 172.22.252.00/22.

If you place the MSFC on a supervisor engine installed in slot 1, then the MSFC is recognized as module 15. If you install the supervisor engine in slot 2, the MSFC is recognized as module 16.

The **show mls statistics entry** command displays bridged flows on a Supervisor Engine 2 when bridged flow statistics is enabled. The **show mls entry** command displays bridged flows on a Supervisor Engine 1 when bridged flow statistics is enabled. To enable or disable bridged flow statistics, enter the **set mls bridged-flow-statistics** command.

**Examples**

This example shows how to display the statistics for all protocol categories:

```

Console> (enable) show mls statistics protocol
Protocol  TotalFlows  TotalPackets  Total Bytes
-----
Telnet    900          630           4298
FTP       688          2190          3105
WWW       389          42679         623686
SMTP      802          4966          92873
X         142          2487          36870
DNS       1580         52            1046
Others    82           1             73
Total    6583         53005         801951
Console> (enable)

```

This example shows how to display the statistics for all protocol categories:

```

Console> (enable) show mls statistics
                Last      Used
Destination IP  Source IP      Prot DstPrt SrcPrt Stat-Pkts Stat-Bytes
-----
172.20.22.14   172.20.25.10  6    50648  80    3152    347854
172.20.22.43   172.20.32.43  44   2323   324   23232   232323

Destination IPX      Source IPX net  Stat-Pkts  Stat-Bytes
-----
201.00A0.2451.7423   1.0002          30256      31795084
501.0000.3100.0501   1.0003          12121      323232
Console> (enable)

```

This example shows how to display the up time and aging time on a Supervisor Engine 2:

```

Console> show mls statistics entry uptime
                Last      Used
Destination IP  Source IP      Prot DstPrt SrcPrt Uptime  Age
-----
172.20.52.19   -              -    -      -      00:07:51 00:00:00
224.0.0.10     -              -    -      -      00:06:44 00:00:02
224.0.0.10     -              -    -      -      00:06:49 00:00:01
255.255.255.255 -             -    -      -      00:02:53 00:00:37
224.0.0.10     -              -    -      -      00:06:50 00:00:00
171.69.39.44   -              -    -      -      00:07:51 00:00:00
224.0.0.2      -              -    -      -      00:06:42 00:00:01
224.0.0.10     -              -    -      -      00:06:35 00:00:03
224.0.0.5      -              -    -      -      00:06:33 00:00:03

Destination IPX      Source IPX net  Uptime  Age
-----
Console>

```

This example shows how to display the MLS statistical entries on a Supervisor Engine 2:

```

Console> show mls statistics entry
                Last      Used
Destination IP  Source IP      Prot DstPrt SrcPrt Stat-Pkts Stat-Bytes
-----
10.0.0.6       10.0.0.1       255  0      0      569735  26207810
10.0.0.5       10.0.0.1       255  0      0      569735  26207810
10.0.0.2       10.0.0.1       255  0      0      569735  26207810
Destination IPX      Source IPX net  Stat-Pkts  Stat-Bytes
-----
Console>

```

**Note**

The following commands are output from switches configured with the Supervisor Engine 1 with Layer 3 Switching Engine WS-F6K-PFC. The output from switches configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) are slightly different.

This example shows how to display IP MLS statistics for MSFC 15 in a system configured with the Supervisor Engine 1 with Layer 3 Switching Engine (WS-F6K-PFC):

```
Console> show mls statistics entry ip 15 destination 172.20.22.14
MSFC 127.0.0.12 (Module 15):
```

Destination IP	Source IP	Last		Used		Stat-Pkts	Stat-Bytes
		Prot	DstPrt	SrcPrt			
172.20.22.14	172.20.25.10	6	50648	80		3152	347854

```
Console>
```

This example shows how to display the statistics for a specific destination IP address:

```
Console> show mls statistics entry ip destination 172.20.22.14
```

Destination IP	Source IP	Last		Used		Stat-Pkts	Stat-Bytes
		Prot	DstPrt	SrcPrt			
172.20.22.14	172.20.25.10	6	50648	80		3152	347854

```
Console>
```

This example shows how to display the statistics for a specific destination IPX address:

```
Console> show mls statistics entry ipx destination 1.0002.00e0.fefc.6000
```

Destination IPX	Source IPX net	Stat-Pkts	Stat-Bytes
1.0002.00e0.fefc.6000	1.0003	11	521

```
Console>
```

**Related Commands**

[clear mls statistics entry](#)  
[set mls bridged-flow-statistics](#)  
[set mls statistics protocol](#)  
[show mls entry](#)

# show mls verify

To display the Layer 3 error checking configuration, use the **show mls verify** command.

**show mls verify**

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the Layer 3 error checking configuration:

```
Console> show mls verify
IP checksum verification disabled
IP minimum length verification enabled
IP inconsistant length verification disabled
IPX minimum length verification enabled
IPX inconsistant length verification disabled
Console>
```

[Table 2-47](#) describes the fields in the **show mls verify** command output.

**Table 2-47** *show mls verify Command Output Fields*

Field	Description
IP checksum verification	Status of whether IP checksum verification is enabled or disabled.
IP minimum length verification	Status of whether the verification of IP minimum packet length is enabled or disabled.
IP inconsistent length verification	Status of whether the verification of IP length consistency is enabled or disabled.
IPX minimum length verification	Status of whether the verification of IPX minimum packet length is enabled or disabled.
IPX consistent length verification	Status of whether the verification of IPX length consistency is enabled or disabled.

**Related Commands** [set mls verify](#)

# show module

Use the **show module** command to display module status and information. For supervisor engines, the **show module** command displays the supervisor engine number but appends the uplink daughter card's module type and information.

**show module** [*mod*]

<b>Syntax Description</b>	<i>mod</i> (Optional) Number of the module.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	If you do not specify a module number, all modules are shown.
-------------------------	---

The MAC addresses for the supervisor engine are displayed in three lines of output. The first line lists the two MAC addresses for inband ports, the second line lists the two MAC addresses for the two gigabit-uplink ports, and the third line lists the allocated 0x3ff MAC address for the chassis backplane.

If you place the MSFC on a supervisor engine installed in slot 1, then the MSFC is recognized as module 15. If you install the supervisor engine in slot 2, the MSFC is recognized as module 16.

The slot field in the **show module** command display is required because submodules, such as the MSM, reside in the same slot as the supervisor engine module, but are treated as a separate module.

The MSM is referenced by the module number in all other CLI commands and is treated like any other module.

<b>Examples</b>	This example shows how to display status and information for all modules:
-----------------	---

```

Console> show module
Mod Slot Ports Module-Type           Model                      Sub Status
-----
1  1  2  1000BaseX Supervisor      WS-X6K-SUP1A-2GE         yes ok
15 1  1  Multilayer Switch Feature WS-F6K-MSFC              no ok
8  8  48  10/100BaseTX Ethernet     WS-X6248-RJ-45          no ok
9  9  48  10/100BaseTX Ethernet     WS-X6348-RJ-45          yes ok

Mod Module-Name          Serial-Num
-----
1                          SAD03436055
15                         SAD03432597
9                          SAD03414268

Mod MAC-Address(es)      Hw      Fw      Sw
-----

```

**show module**

```

1 00-30-80-f7-a5-06 to 00-30-80-f7-a5-07 1.0 5.2(1) 6.1(0.12)
  00-30-80-f7-a5-04 to 00-30-80-f7-a5-05
  00-30-a3-4a-a0-00 to 00-30-a3-4a-a3-ff
15 00-d0-bc-ee-d0-dc to 00-d0-bc-ee-d1-1b 1.2 12.0(3)XE1 12.0(3)XE1
8 00-d0-c0-c8-83-ac to 00-d0-c0-c8-83-db 1.1 4.2(0.24)V 6.1(0.37)FTL
9 00-50-3e-7c-43-00 to 00-50-3e-7c-43-2f 0.201 5.3(1)

```

Mod	Sub-Type	Sub-Model	Sub-Serial	Sub-Hw
1	L3 Switching Engine	WS-F6K-PFC	SAD03451187	1.0
9	Inline Power Module	WS-F6K-VPWR		1.0

Console>

This example shows the display for a 48-port 10/100BASE-TX switching services-configured module:

```

Console> show module 5
Mod Slot Ports Module-Type Model Status
-----
5 5 48 10/100BaseTX (RJ-45) WS-X6248-RJ-45 ok

Mod Module-Name Serial-Num
-----
5 SAD03181291

Mod MAC-Address(es) Hw Fw Sw
-----
5 00-50-f0-ac-30-54 to 00-50-f0-ac-30-83 1.0 4.2(0.24)V 6.1(0.12)
Console>

```

This example shows the display for an 8-port T1/E1 ISDN PRI services-configured module:

```

Console> (enable) show module 3
Mod Slot Ports Module-Type Model Status
-----
3 3 8 T1 PSTN WS-X6608-T1 ok

Mod Module-Name Serial-Num
-----
3 T1 SAD02440056

Mod MAC-Address(es) Hw Fw Sw
-----
3 00-50-0f-08-bc-a0 to 00-50-0f-08-bc-cf 0.1 5.1(1) 5.4(1)
Console>

```

This example shows the display for a 24-port FXS analog station interface services-configured module:

```

Console> show module 3
Mod Slot Ports Module-Type Model Status
-----
3 3 24 FXS WS-X6624-FXS ok

Mod Module-Name Serial-Num
-----
3 Elvis-S SAD02440056

Mod MAC-Address(es) Hw Fw Sw
-----
3 00-50-0f-08-bc-a0 to 00-50-0f-08-bc-a0 0.1 5.1(1) 5.4(1)
Console>

```

Table 2-48 describes the possible fields in the **show module** command output.

**Table 2-48** *show module Command Output Fields*

Field	Description
Mod	Module number.
Slot	Number of the slot where the module or submodule resides.
Ports	Number of ports on the module.
Module-Type	Module (such as 100BASE-X Ethernet).
Model	Model number of the module.
Sub	Status of whether a submodule is installed.
Status	Status of the module. Possible status strings are ok, disable, faulty, other, standby, error, pwr-down, and pwr-deny states <sup>1</sup> .
Module-Name	Name of the module.
Serial-Num	Serial number of the module.
MAC-Address(es)	MAC address or MAC address range for the module.
Hw <sup>2</sup>	Hardware version of the module.
Fw <sup>3</sup>	Firmware version of the module.
Sw	Software version on the module.
Sub-Type <sup>4</sup>	Submodule type.
Sub-Model <sup>4</sup>	Model number of the submodule.
Sub-Serial <sup>4</sup>	Serial number of the submodule.
Sub-Hw <sup>4</sup>	Hardware version of the submodule.

1. The pwr-down and pwr-deny states are supported by the power management feature.
2. Hw for the supervisor engine displays the supervisor engine's EARL hardware version.
3. Fw for the supervisor engine displays the supervisor engine's boot version.
4. This field displays EARL information.

# show moduleinit

Use the **show moduleinit** command to display contents of the information stored in the system module initiation log.

```
show moduleinit [mod] [log lognum | -logcount]
```

Syntax Description		
<i>mod</i>	(Optional) Number of the module.	
<b>log</b>	(Optional) Specifies a specific log.	
<i>lognum</i>	(Optional) Number of the log to display.	
<i>-logcount</i>	(Optional) Number of previous logs to display.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a module number, contents for all modules are shown.

**Examples** This example shows how to show the last two log entries for module 1:

```
Console> show moduleinit 1 log -2
Module 1:   Number of Logs: 3
Log #2:
State 1: Entry/Exit/Elapse Time: 14721/14721/0
        Success_Exit
State 2: Entry/Exit/Elapse Time: 14721/14721/0
        Success
State 3: Entry/Exit/Elapse Time: 14721/32223/17502
        Success_Exit

Log #3:
State 1: Entry/Exit/Elapse Time: 38302/38302/0
        P_PortConfigTokenRingFeatures()
        ConfigModule()
State 2: Entry/Exit/Elapse Time: 38302/38302/0
        Success
State 3: Entry/Exit/Elapse Time: 38302/38310/8
        Success_Exit
Console>
```

This example shows how to display the contents of a specific log for module 1:

```
Console> show moduleinit 1 log 2
Module 1:   Number of Logs: 3
Log #2:
State 1: Entry/Exit/Elapse Time: 14721/14721/0
```

```
Success_Exit
State 2: Entry/Exit/Elapse Time: 14721/14721/0
Success
State 3: Entry/Exit/Elapse Time: 14721/32223/17502
```

Console>

Table 2-49 describes the possible fields in the **show moduleinit** command output.

**Table 2-49** *show moduleinit* Command Output Fields

Field	Description
Log #	Number of the log.
State #	Number of the module initiation states. Output includes the entry time into and exit time from all the module initiation states, along with the elapsed time, in milliseconds.

# show msfcautostate

Use the **show msfcautostate** command to display the Multilayer Switch Feature Card (MSFC) auto port state.

**show msfcautostate**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to display the MSFC auto state status:

```
Console> (enable) show msfcautostate
MSFC Auto port state: enabled
Console> (enable)
```

---

**Related Commands** [set msfcautostate](#)

# show msmautostate

Use the **show msmautostate** command to display the current status of the line protocol state determination of the MSMs due to Catalyst 6500 series switch port state changes.

**show msmautostate** *mod*

---

**Syntax Description**

*mod*            Number of the module.

---

---

**Defaults**

This command has no default settings.

---

**Command Types**

Switch command.

---

**Command Modes**

Normal.

---

**Examples**

This example shows how to display the current status of MSM line protocol state determination:

```
Console> show msmautostate
MSM Auto port state: enabled
Console>
```

---

**Related Commands**

[set msmautostate](#)

# show multicast group

Use the **show multicast group** command to display the multicast group configuration.

```
show multicast group [mac_addr] [vlan_id]
```

Syntax	Description
<i>mac_addr</i>	(Optional) Destination MAC address.
<i>vlan_id</i>	(Optional) Number of the VLAN.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the multicast group configuration for VLAN 1:

```
Console> show multicast group 1
VLAN  Dest MAC/Route Des      [CoS]  Destination Ports or VCs / [Protocol Type]
-----
1      01-00-5e-00-01-28*        3/1,12/9
1      01-00-5e-63-7f-6f*        3/1,12/5,12/9
Total Number of Entries = 2
Console>
```

This example shows how to display the multicast group configuration for a specific MAC address on VLAN 5:

```
Console> show multicast group 01-00-5E-00-00-5C 5
VLAN  Dest MAC/Route Des      [CoS]  Destination Ports or VCs / [Protocol Type]
-----
5      01-00-5E-00-00-5C        3/1, 3/9
Total Number of Entries = 1
Console>
```

[Table 2-50](#) describes the fields in the **show multicast group** command output.

**Table 2-50 show multicast group Command Output Fields**

Field	Description
IGMP enabled/disabled	Status of whether IGMP is enabled or disabled.
GMRP enabled/disabled	Status of whether GMRP is enabled or disabled.
VLAN	VLAN number.
Dest MAC/Route Des	Group destination MAC address.
*	Status of whether the port was configured manually as a multicast router port.

*Table 2-50 show multicast group Command Output Fields (continued)*

Field	Description
CoS	CoS value.
Destination Ports or VCs	List of all the ports that belong to this multicast group. Traffic destined to this group address will be forwarded on all these ports.
Protocol Type	Type of protocol.
Total Number of Entries	Total number of entries in the multicast group table that match the criteria specified by the command.

**Related Commands**

**clear multicast router**  
**set multicast router**  
**show multicast router**

# show multicast group count

Use the **show multicast group count** command to show the total count of multicast addresses (groups) in a VLAN.

```
show multicast group count [vlan_id]
```

<b>Syntax Description</b>	<i> vlan_id </i> (Optional) Number of the VLAN.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	An asterisk in the <b>show multicast group count</b> command output indicates the port was configured manually.
<b>Examples</b>	<p>This example shows how to display the total count of multicast groups in VLAN 5:</p> <pre>Console&gt; show multicast group count 5</pre> <pre>Total Number of Entries = 2</pre> <pre>Console&gt;</pre>
<b>Related Commands</b>	<p><a href="#">clear multicast router</a>  <a href="#">set multicast router</a>  <a href="#">show multicast router</a></p>

# show multicast protocols status

Use the **show multicast protocols status** command to display the status of Layer 2 multicast protocols on the switch.

## **show multicast protocols status**

---

**Syntax Description**

This command has no arguments.

---

**Defaults**

This command has no default settings.

---

**Command Types**

Switch command.

---

**Command Modes**

Normal.

---

**Examples**

This example shows how to display the Layer 2 multicast protocol status:

```
Console> show multicast protocols status
IGMP disabled
IGMP fastleave enabled
RGMP enabled
GMRP disabled
Console>
```

---

**Related Commands**

[set gmrp](#)  
[set igmp](#)

# show multicast router

Use the **show multicast router** command to display the ports that have IGMP or RGMP-capable routers assigned to them.

```
show multicast router {igmp | rgmp} [mod/port] [vlan_id]
```

Syntax Description	
<b>igmp</b>	Specifies IGMP-capable routers.
<b>rgmp</b>	Specifies RGMP-capable routers.
<i>mod/port</i>	(Optional) Number of the module and the port on the module.
<i>vlan_id</i>	(Optional) Number of the VLAN.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the ports that have IGMP-multicast routers assigned to them:

```
Console> show multicast router igmp
Port      Vlan
-----  -----
5/15      1
Total Number of Entries = 1
'*' - Configured
'+' - RGMP-capable
Console>
```

This example shows how to display the ports that have RGMP-multicast routers assigned to them:

```
Console> show multicast router rgmp
Port      Vlan
-----  -----
5/1 +     1
5/14 +    2
Total Number of Entries = 2
'*' - Configured
'+' - RGMP-capable
Console>
```

Table 2-51 describes the fields in the **show multicast router** command output.

*Table 2-51 show multicast router Command Output Fields*

Field	Description
Port	Port through which a multicast router can be reached.
*	Status of whether the port was configured manually or not.
+	Status of whether the router is RGMP capable or not.
VLAN	VLAN associated with the port.
Total Number of Entries	Total number of entries in the table that match the criteria specified by the command.

#### Related Commands

[set igmp](#)  
[set multicast router](#)  
[set rgmp](#)  
[show multicast group](#)  
[show multicast group count](#)

# show netstat

Use the **show netstat** command to display the currently active network connections and to list statistics for the various protocols in the TCP/IP.

**show netstat [tcp | udp | ip | icmp | routes | stats | interface]**

Syntax Description		
	<b>tcp</b>	(Optional) Shows TCP statistics.
	<b>udp</b>	(Optional) Shows UDP statistics.
	<b>ip</b>	(Optional) Shows IP statistics.
	<b>icmp</b>	(Optional) Shows ICMP statistics.
	<b>routes</b>	(Optional) Shows the IP routing table.
	<b>stats</b>	(Optional) Shows all statistics for TCP, UDP, IP, and ICMP.
	<b>interface</b>	(Optional) Shows interface statistics.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the current active network connections:

```

Console> show netstat
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address         (state)
tcp      0      128 172.20.25.142.23       171.68.10.75.44720     ESTABLISHED
tcp      0      0 *.7161                 *.*                     LISTEN
tcp      0      0 *.23                   *.*                     LISTEN
udp      0      0 *.*                    *.*                     *
udp      0      0 *.161                  *.*                     *
udp      0      0 *.123                  *.*                     *
Console>

```

This example shows how to display TCP statistics:

```

Console> show netstat tcp
tcp:
    5122 packets sent
        4642 data packets (102292 bytes)
        28 data packets (6148 bytes) retransmitted
        434 ack-only packets (412 delayed)
        0 URG only packets
        0 window probe packets
        1 window update packet
        17 control packets
    7621 packets received
        4639 acks (for 103883 bytes)

```

```

69 duplicate acks
0 acks for unsent data
3468 packets (15367 bytes) received in-sequence
12 completely duplicate packets (20 bytes)
0 packets with some dup. data (0 bytes duped)
4 out-of-order packets (0 bytes)
0 packets (0 bytes) of data after window
0 window probes
0 window update packets
0 packets received after close
0 discarded for bad checksums
0 discarded for bad header offset fields
0 discarded because packet too short
6 connection requests
6 connection accepts
10 connections established (including accepts)
11 connections closed (including 1 drop)
2 embryonic connections dropped
4581 segments updated rtt (of 4600 attempts)
28 retransmit timeouts
    0 connections dropped by rexmit timeout
0 persist timeouts
66 keepalive timeouts
    63 keepalive probes sent
    3 connections dropped by keepalive

```

Console>

Table 2-52 describes the fields in the **show netstat tcp** command output.

**Table 2-52** *show netstat tcp Command Output Fields*

Field	Description
packets sent	Total number of TCP packets sent.
data packets (bytes)	Number of TCP data packets sent and the size of those packets in bytes.
data packets (bytes) retransmitted	Number of TCP data packets retransmitted and the size of those packets in bytes.
ack-only packets (delayed)	Number of TCP acknowledgment-only packets sent and the number of those packets delayed.
URG only packets	Number of URG packets.
window probe packets	Number of window probe packets.
window update packet	Number of window update packets.
packets received	Total number of TCP packets received.
acks (for <i>x</i> bytes)	Number of TCP acknowledgments received and the total bytes acknowledged.
duplicate acks	Number of duplicate TCP acknowledgments received.
acks for unsent data	Number of TCP acknowledgments received for data that was not sent.

**Table 2-52** *show netstat tcp Command Output Fields (continued)*

Field	Description
packets (bytes) received in-sequence	Number of TCP packets (and the size in bytes) received in sequence.
completely duplicate packets (bytes)	Number of duplicate TCP packets (and the size in bytes) received.
packets with some dup. data (bytes duped)	Number of TCP packets received with duplicate data (and the number of bytes of duplicated data).
out-of-order packets (bytes)	Number of out-of-order TCP packets (and the size in bytes) received.
packets (bytes) of data after window	Number of TCP packets (and the size in bytes) received outside of the specified data window.
discarded for bad checksums	Number of TCP packets received and discarded that failed the checksum.
discarded because packet too short	Number of TCP packets received and discarded that were truncated.
connection requests	Total number of TCP connection requests sent.
connection accepts	Total number of TCP connection accepts sent.
connections established (including accepts)	Total number of TCP connections established, including those for which a connection accept was sent.
connections closed (including x drops)	Total number of TCP connections closed, including dropped connections.
retransmit timeouts	Number of timeouts that occurred when a retransmission was attempted.
connections dropped by retransmit timeout	Number of connections dropped due to retransmission timeouts.
keepalive timeouts	Number of keepalive timeouts that occurred.
keepalive probes sent	Number of TCP keepalive probes sent.
connections dropped by keepalive	Number of connections dropped.

This example shows how to display UDP statistics:

```

Console> show netstat udp
udp:
    0 incomplete headers
    0 bad data length fields
    0 bad checksums
    0 socket overflows
    1116 no such ports
Console>

```

Table 2-53 describes the fields in the **show netstat udp** command output.

**Table 2-53 show netstat udp Command Output Fields**

Field	Description
incomplete headers	Number of UDP packets received with incomplete packet headers.
bad data length fields	Number of UDP packets received with a data length field that did not match the actual length of the packet payload.
bad checksums	Number of UDP packets received that failed the checksum.
socket overflows	Number of socket overflows.
no such ports	Number of UDP packets received destined for nonexistent ports.

This example shows how to display IP statistics:

```

Console> show netstat ip
ip:
    76894 total packets received
    0 bad header checksums
    0 with size smaller than minimum
    0 with data size < data length
    0 with header length < data size
    0 with data length < header length
    0 fragments received
    0 fragments dropped (dup or out of space)
    0 fragments dropped after timeout
    0 packets forwarded
    0 packets not forwardable
    0 redirects sent
Console>

```

Table 2-54 describes the fields in the **show netstat ip** command output.

**Table 2-54 show netstat ip Command Output Fields**

Field	Description
total packets received	Total number of IP packets received.
bad header checksums	Number of received IP packets that failed the checksum.
with size smaller than minimum	Number of received IP packets that were smaller than the minimum IP packet size.
with data size < data length	Number of packets in which the data size was less than the data length.
with header length < data size	Number of packets in which the header length was less than the data size.
with data length < header length	Number of packets in which the data length was less than the minimum header length.
fragments received	Number of IP packet fragments received.

**Table 2-54** *show netstat ip Command Output Fields (continued)*

Field	Description
fragments dropped (dup or out of space)	Number of received IP packet fragments that were dropped because of duplicate data or buffer overflow.
fragments dropped after timeout	Number of received IP packet fragments that were dropped.
packets forwarded	Number of forwarded IP packets.
packets not forwardable	Number of IP packets that the switch did not forward.
redirects sent	Number of IP packets that the switch redirected.

This example shows how to display ICMP statistics:

```

Console> show netstat icmp
icmp:
  Redirect enabled
  0 calls to icmp_error
  0 errors not generated 'cuz old message was icmp
  Output histogram:
    echo reply: 1001
  1 message with bad code fields
  0 messages < minimum length
  0 bad checksums
  0 messages with bad length
  Input histogram:
    echo reply: 12
    destination unreachable: 3961
    echo: 1001
  1001 message responses generated
Console>

```

[Table 2-55](#) describes the fields in the **show netstat icmp** command output.

**Table 2-55** *show netstat icmp Command Output Fields*

Field	Description
Redirect enabled	Status of whether ICMP redirection is enabled or disabled.
Output histogram	Frequency distribution statistics for output ICMP packets.
echo reply	Number of output echo reply ICMP packets.
messages with bad code fields	Number of ICMP packets with an invalid code field.
messages < minimum length	Number of ICMP packets with less than the minimum packet length.
bad checksums	Number of ICMP packets that failed the checksum.
messages with bad length	Number of ICMP packets with an invalid length.

**Table 2-55** *show netstat icmp Command Output Fields (continued)*

Field	Description
Input histogram	Frequency distribution statistics for input ICMP packets.
echo reply	Number of input echo-reply ICMP packets.
destination unreachable	Number of input destination-unreachable ICMP packets.
echo	Number of input-echo ICMP packets.
message responses generated	Number of ICMP message responses the system generated.

This example shows how to display the IP routing table:

```

Console> show netstat routes
DESTINATION      GATEWAY      FLAGS  USE      INTERFACE
default          172.16.1.201 UG     6186     sc0
172.16.0.0      172.16.25.142 U      6383     sc0
default          default      UH     0        s10
Console>

```

[Table 2-56](#) describes the fields in the **show netstat routes** command output.

**Table 2-56** *show netstat routes Command Output Fields*

Field	Description
DESTINATION	Destination IP address or network.
GATEWAY	Next hop to the destination.
FLAGS	Flags indicating the interface state.
USE	Number of times this route was used.
INTERFACE	Interface out of which packets to the destination should be forwarded.

This example shows how to display interface statistics:

```

Console> show netstat interface
Interface      InPackets  InErrors  OutPackets  OutErrors
s10             0           0          0           0
sc0           368996      0         12624        0
Console>
Interface Rcv-Octet      Xmit-Octet
-----
sc0       182786          0
s10        0              0
Interface Rcv-Unicast    Xmit-Unicast
-----
sc0        3002           1314
s10         0              0
Console>

```

Table 2-57 describes the fields in the **show netstat interface** command output.

**Table 2-57 show netstat interface Command Output Fields**

Field	Description
Interface	Interface number (sl0 is the SLIP interface; sc0 is the in-band interface).
InPackets	Number of input packets on the interface.
InErrors	Number of input errors on the interface.
OutPackets	Number of output packets on the interface.
OutErrors	Number of output errors on the interface.
Rcv-Octet	Number of octet frames received on the port.
Xmit-Octet	Number of octet frames transmitted on the port.
Rcv-Unicast	Number of unicast frames received on the port.
Xmit-Unicast	Number of unicast frames transmitted on the port.

#### Related Commands

[set interface](#)  
[set ip route](#)

# show ntp

Use the **show ntp** command to display the current Network Time Protocol (NTP) status.

**show ntp**

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the current NTP status:

```

Console> show ntp
Current time: Tue Mar 28 2000, 11:19:03 pst
Timezone: 'pst', offset from UTC is -8 hours
Summertime: 'pst', enabled
Last NTP update:
Broadcast client mode: enabled
Broadcast delay: 3000 microseconds
Client mode: disabled

NTP-Server
-----
time_server.cisco.com
Console>

```

[Table 2-58](#) describes the fields in the **show ntp** command output.

**Table 2-58 show ntp Command Output Fields**

Field	Description
Current time	Current system time.
Timezone	Time zone and the offset in hours from UTC.
Summertime	Time zone for daylight saving time and whether the daylight saving time adjustment is enabled or disabled.
Last NTP update	Time of the last NTP update.
Broadcast client mode	Status of whether NTP broadcast-client mode is enabled or disabled.
Broadcast delay	Configured NTP broadcast delay.
Client mode	Status of whether NTP client mode is enabled or disabled.
NTP-Server	List of configured NTP servers.

■ show ntp

---

**Related Commands**

**clear ntp server**  
**set ntp broadcastclient**  
**set ntp broadcastdelay**  
**set ntp client**  
**set ntp server**

# show pbf

Use the **show pbf** command to display PBF-related information.

```
show pbf [{adjacency | statistics | map} [adj_name]]
```

Syntax Description	
<b>adjacency</b>	(Optional) Displays PBF adjacency information.
<b>statistics</b>	(Optional) Displays PBF statistics.
<b>map</b>	(Optional) Displays PBF adjacency map.
<i>adj_name</i>	(Optional) Name of the adjacency.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** To display MAC address information, enter the **show pbf** command with no options.

**Examples** This example shows how to display the MAC address for PFC2:

```
Console> show pbf
Pbf status      Mac address
-----
ok              00-01-64-61-39-c2
Console>
```

This example shows how to display adjacency information for PFC2:

```
Console> show pbf adjacency
Index  DstVlan  DstMac          SrcMac          Name
-----
1      2        0a-0a-0a-0a-0a  00-11-22-33-44-55  a_1
2      2        0a-0a-0a-0a-0a  00-11-22-33-44-55  a_2
3      2        0a-0a-0a-0a-0a  00-11-22-33-44-55  a_3
4      2        0a-0a-0a-0a-0a  00-11-22-33-44-55  a_4
5      1        20-20-20-20-20  00-11-22-33-44-55  b_1
6      1        20-20-20-20-21  00-11-22-33-44-55  b_2
7      1        20-20-20-20-22  00-11-22-33-44-55  b_3
8      1        20-20-20-20-23  00-11-22-33-44-55  b_4
Console>
```

This example shows how to display adjacency information for adjacency **a\_1**:

```
Console> show pbf adj a_1
Index   DstVlan  DstMac                SrcMac                Name
-----
1       2        00-0a-0a-0a-0a-0a    00-11-22-33-44-55    a_1
Console>
```

This example shows how to display statistics for PFC2:

```
Console> show pbf statistics
Index   DstVlan  DstMac                SrcMac                HitCount (hex)  Name
-----
1       2        0a-0a-0a-0a-0a-0a    00-11-22-33-44-55    0x00011eb4      a_1
2       2        0a-0a-0a-0a-0a-0b    00-11-22-33-44-55    0x00011ebc      a_2
3       2        0a-0a-0a-0a-0a-0c    00-11-22-33-44-55    0x00011ec3      a_3
4       2        0a-0a-0a-0a-0a-0d    00-11-22-33-44-55    0x00011eca      a_4
5       1        20-20-20-20-20-20    00-11-22-33-44-55    0x00011ed1      b_1
6       1        20-20-20-20-20-21    00-11-22-33-44-55    0x00011ed8      b_2
7       1        20-20-20-20-20-22    00-11-22-33-44-55    0x00011edf      b_3
8       1        20-20-20-20-20-23    00-11-22-33-44-55    0x00011ee6      b_4
Console>
```

This example shows how to display statistics for adjacency **a\_1**:

```
Console> show pbf statistics a_1
Index   DstVlan  DstMac                SrcMac                HitCount (hex)  Name
-----
1       2        00-0a-0a-0a-0a-0a    00-11-22-33-44-55    0x0038cd58      a_1
Console>
```

This example shows how to display the adjacency map for PFC2:

```
Console> show pbf map
Adjacency  ACL
-----
a_1        ip1
a_2        ip1
a_3        ip1
a_4        ip1
b_1        ip2
b_2        ip2
b_3        ip2
b_4        ip2
Console>
```

This example shows how to display the adjacency map for adjacency **a\_1**:

```
Console> show pbf map a_1
Adjacency  ACL
-----
a_1        ip1
Console>
```

**Related Commands**

[clear pbf](#)  
[set pbf](#)

# show port

Use the **show port** command to display port status information.

**show port** [*mod*[/*port*]]

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines**

If you do not specify a *mod* value, the ports on all modules are shown.

If you do not specify a *port* value, all the ports on the module are shown.

The output for an 8-port T1/E1 PSTN interface module configured for transcoding or conferencing displays a transcoding port type as “mtp” (media termination point) or a conference port type as “conf bridge.”

The output for an 8-port T1/E1 PSTN interface module displays a transcoding port type as “transcoding” or a conference port type as “conferencing.”

The PAgP channel protocol and the LACP channel protocol manage channels differently. When all the ports in a channel get disabled, PAgP removes them from its internal channels list; **show** commands do not display the channel. With LACP, when all the ports in a channel get disabled, LACP does not remove the channel; **show** commands continue to display the channel even though all its ports are down. To determine if a channel is actively sending and receiving traffic with LACP, use the **show port** command to see if the link is up or down.

LACP does not support half-duplex links. If a port is in active/passive mode and becomes half duplex, the port is suspended (and a syslog message is generated). The port is shown as “connected” using the **show port** command and as “not connected” using the **show spantree** command. This discrepancy is because the port is physically connected but never joined spanning tree. To get the port to join spanning tree, either set the duplex to full or set the channel mode to off for that port.

For more information about PAgP and LACP, refer to the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

**Examples**

This example shows how to display the status and counters for a specific module and port:

```

Console> show port 2/1
Port Name                Status      Vlan      Duplex Speed Type
-----
2/1                      notconnect 1         full  1000 No Connector

Port Security Violation Shutdown-Time Age-Time Max-Addr Trap      IfIndex
-----
2/1 disabled shutdown      0         0         1 disabled 3

Port Num-Addr Secure-Src-Addr Age-Left Last-Src-Addr Shutdown/Time-Left
-----
2/1 0 - - - - -

Port Broadcast-Limit Multicast Unicast Total-Drop Action
-----
2/1 - - - 0 drop-packets

Port Send FlowControl Receive FlowControl RxPause TxPause
  admin oper admin oper
-----
2/1 desired off off off 0 0

Port Status Channel Admin Ch
      Mode
-----
2/1 notconnect auto silent 41 0

Port Status ErrDisable Reason Port ErrDisableTimeout Action on Timeout
-----
2/1 notconnect - Enable No Change

Port Align-Err FCS-Err Xmit-Err Rcv-Err UnderSize
-----
2/1 0 0 0 0 0

Port Single-Col Multi-Coll Late-Coll Excess-Col Carri-Sen Runts Giants
-----
2/1 0 0 0 0 0 0 0

Port Last-Time-Cleared
-----
2/1 Tue Mar 5 2002, 11:43:01
Console>

```

This example shows port information on a 48-port 10/100BASE-TX module with inline power:

```

Console> show port 9/5
Port Name                Status      Vlan      Duplex Speed Type
-----
9/5                      notconnect 1         auto  auto 10/100BaseTX

Port AuxiliaryVlan AuxVlan-Status InlinePowered PowerAllocated
  Admin Oper Detected mWatt mA @42V
-----
9/5 none none auto off no 0 0

Port Security Violation Shutdown-Time Age-Time Max-Addr Trap      IfIndex
-----
9/5 disabled shutdown      0         0         1 disabled 126

```

## show port

```

Port  Num-Addr  Secure-Src-Addr  Age-Left  Last-Src-Addr  Shutdown/Time-Left
-----
9/5      0          -              -          -              -

Port      Broadcast-Limit  Broadcast-Drop
-----
9/5      -              0

Port  Send FlowControl  Receive FlowControl  RxPause  TxPause  Unsupported
-----
      admin   oper      admin   oper          0        0        opcodes
-----
9/5   off     off      off     off          0        0        0

Port  Status      Channel
-----
      notconnect auto silent
-----
      Admin Ch
      Group Id
-----
9/5   546      0

Port  Align-Err  FCS-Err  Xmit-Err  Rcv-Err  UnderSize
-----
9/5   0          0        0         0         0

Port  Single-Col  Multi-Coll  Late-Coll  Excess-Col  Carri-Sen  Runts  Giants
-----
9/5   0          0         0         0         0        0        0

Last-Time-Cleared
-----
Wed Mar 15 2000, 21:57:31
Console>

```

This example shows the port information on an 8-port T1/E1 PSTN interface module configured for transcoding and conferencing:

```

Console> show port 7
-----
7/1      connected  123      full  1.544 T1
7/2      connected  2        full  1.544 T1
7/3      disable   1        full  1.544 T1
7/4      connected  11       full  1.544 T1
7/5      connected  123      full  1.544 T1
7/6      connected  1        full  1.544 T1
7/7      faulty    2        full  1.544 conf bridge
7/8      faulty    2        full  1.544 mtp

Port      DHCP      MAC-Address      IP-Address      Subnet-Mask
-----
7/1      enable   00-10-7b-00-0a-58 172.20.34.68    255.255.255.0
7/2      enable   00-10-7b-00-0a-59 172.20.34.70    255.255.255.0
7/3      enable   00-10-7b-00-0a-5a 172.20.34.64    255.255.255.0
7/4      enable   00-10-7b-00-0a-5b 172.20.34.66    255.255.255.0
7/5      enable   00-10-7b-00-0a-5c 172.20.34.59    255.255.255.0
7/6      enable   00-10-7b-00-0a-5d 172.20.34.67    255.255.255.0
7/7      enable   00-10-7b-00-0a-5e (Port host processor not online)
7/8      enable   00-10-7b-00-0a-5f (Port host processor not online)

Port      Call-Manager(s)  DHCP-Server      TFTP-Sever      Gateway
-----
7/1      172.20.34.207*  172.20.34.207    172.20.34.207  -
      callm.cisco.com
7/2      172.20.34.207  172.20.34.207    172.20.34.207  172.20.34.20
7/3      172.20.34.207  172.20.34.207    172.20.34.207  -
7/4      172.20.34.207  172.20.34.207    172.20.34.207  -
7/5      172.20.34.207  172.20.34.207    172.20.34.207  -

```

```

7/6 172.20.34.207 172.20.34.207 172.20.34.207 -
7/7 (Port host processor not online)
7/8 (Port host processor not online)

```

```

Port      DNS-Server(s)  Domain
-----
7/1      172.20.34.207  cisco.com
7/2      172.20.34.207* int.cisco.com
          171.69.45.34
          172.78.111.132
7/3      172.20.34.207 -
7/4      172.20.34.207 -
7/5      172.20.34.207 -
7/6      172.20.34.207 -
7/7      (Port host processor not online)
7/8      (Port host processor not online)

```

```

Port      CallManagerState DSP-Type
-----
7/1      registered      C549
7/2      registered      C549
7/3      registered      C549
7/4      registered      C549
7/5      registered      C549
7/6      notregistered   C549
7/7      (Port host processor not online)
7/8      (Port host processor not online)

```

```

Port      NoiseRegen NonLinearProcessing
-----
7/1      disabled    disabled
7/2      disabled    disabled
7/3      disabled    disabled
7/4      disabled    disabled
7/5      enabled     disabled
7/6      disabled    enabled
7/7      (Port host processor not online)
7/8      (Port host processor not online)

```

(\*): Primary  
Console>

This example show the port information on a 24-port FXS analog station interface services-configured module:

```

Console> (enable) show port 3
Port  Name                Status      Vlan      Duplex  Speed  Type
-----
3/1   3/1                    onhook     1         full    64k    FXS
3/2   3/2                    onhook     1         full    64k    FXS
3/3   3/3                    onhook     1         full    64k    FXS
3/4   3/4                    onhook     1         full    64k    FXS
3/5   3/5                    onhook     1         full    64k    FXS
3/6   3/6                    onhook     1         full    64k    FXS
3/7   3/7                    onhook     1         full    64k    FXS
3/8   3/8                    onhook     1         full    64k    FXS
3/9   3/9                    onhook     1         full    64k    FXS
3/10  3/10                   onhook     1         full    64k    FXS
3/11  3/11                   onhook     1         full    64k    FXS
3/12  3/12                   onhook     1         full    64k    FXS
3/13  3/13                   onhook     1         full    64k    FXS
3/14  3/14                   onhook     1         full    64k    FXS
3/15  3/15                   onhook     1         full    64k    FXS
3/16  3/16                   onhook     1         full    64k    FXS
3/17  3/17                   onhook     1         full    64k    FXS

```

## show port

```

3/18          onhook      1          full      64k FXS
3/19          onhook      1          full      64k FXS
3/20          onhook      1          full      64k FXS
3/21          onhook      1          full      64k FXS
3/22          onhook      1          full      64k FXS
3/23          onhook      1          full      64k FXS
3/24          onhook      1          full      64k FXS

Port      DHCP      MAC-Address      IP-Address      Subnet-Mask
-----
3/1-24    enable    00-10-7b-00-13-e4 172.20.34.50    255.255.255.0

Port      Call-Manager      DHCP-Server      TFTP-Sever      Gateway
-----
3/1-24    172.20.34.207      172.20.34.207      172.20.34.207      -

Port      DNS-Server      Domain
-----
3/1-24    172.20.34.207      -

Port      EchoCancel(ms)    CallManagerState    DSP-Type
-----
3/1-24    4660              registered          C549

Port      ToneLocal      Impedance    InputGain(dB)    OutputAtten(dB)
-----
3/1-24    northamerica    0            0                0

Port      RingFreq      Timing      Timing      Timing      Timing
(Hz)      Digit(ms)    InterDigit(ms)    Pulse(ms)    PulseDigit(ms)
-----
3/1-24    20            100         100          0           0
Console> (enable)

```

Table 2-59 describes the possible fields (depending on the port type queried) in the **show port** command output.

**Table 2-59 show port Command Output Fields**

Field	Description
Port	Module and port number.
Name	Name (if configured) of the port.
Status	Status of the port (connected, notconnect, connecting, standby, faulty, inactive, shutdown, disabled, monitor, active, dot1p, untagged, inactive, or onhook).
Vlan	VLANs to which the port belongs.
Auxiliaryvlan <sup>1</sup>	Auxiliary VLANs to which the port belongs.
Duplex	Duplex setting for the port (auto, full, half).
Speed	Speed setting for the port (auto, 10, 100, 1000).
Type <sup>2</sup>	Port type (for example, 1000BASE-SX or 100BASE-FX, or T1, E1, transcoding, conferencing, mtp, or conf bridge for voice ports).
Security	Status of whether port security is enabled or disabled.
Secure-Src-Addr	Secure MAC address for the security-enabled port.
Last-Src-Addr	Source MAC address of the last packet received by the port.

**Table 2-59** *show port Command Output Fields (continued)*

Field	Description
Broadcast-Limit	Broadcast threshold configured for the port.
Multicast	Number of multicast packets dropped.
Unicast	Number of unicast packets dropped.
Total-Drop	Number of broadcast, multicast, and unicast packets dropped because the port broadcast limit was exceeded.
Shutdown	Status of whether the port was shut down because of security.
Trap	Status of whether the port trap is enabled or disabled.
IfIndex	Number of the ifIndex.
Broadcast-Limit	Broadcast threshold configured for the port.
Broadcast-Drop	Number of broadcast/multicast packets dropped because the broadcast limit for the port was exceeded.
ErrdisableReason	Reason for the port to be in errdisabled state.
Action on Timeout	Action that is taken on errdisable timer timeout.
Align-Err	Number of frames with alignment errors (frames that do not end with an even number of octets and have a bad CRC) received on the port.
FCS-Err	Number of valid size frames with FCS errors but no framing errors.
Xmit-Err	Number of transmit errors that occurred on the port (indicating that the internal transmit buffer is full).
Rcv-Err	Number of receive errors that occurred on the port (indicating that the internal receive buffer is full).
UnderSize	Number of received frames less than 64 octets long (but are otherwise well-formed).
Single-Coll	Number of times one collision occurred before the port transmitted a frame to the media successfully.
Multi-Coll	Number of times multiple collisions occurred before the port transmitted a frame to the media successfully.
Late-Coll	Number of late collisions (collisions outside the collision domain).
Excess-Col	Number of excessive collisions that occurred on the port (indicating that a frame encountered 16 collisions and was discarded).
Carri-Sen	Number of times the port sensed a carrier (to determine whether the cable is currently being used).
Runts	Number of received runt frames (frames that are smaller than the minimum IEEE 802.3 frame size) on the port.
Giants	Number of received giant frames (frames that exceed the maximum IEEE 802.3 frame size) on the port.
CE-State	Connection entity status.

Table 2-59 show port Command Output Fields (continued)

Field	Description
Conn-State	Connection state of the port, as follows: <ul style="list-style-type: none"> <li>• Disabled—The port has no line module or was disabled by the user.</li> <li>• Connecting—The port attempted to connect or was disabled.</li> <li>• Standby—The connection was withheld or was the inactive port of a dual-homing concentrator.</li> <li>• Active—The port made a connection.</li> <li>• Other—The concentrator was unable to determine the Conn-State.</li> </ul>
Type	Type of port, such as A—A port and B—B port.
Neig	Type of port attached to this port. The neighbor can be one of these types: <ul style="list-style-type: none"> <li>• A—A port</li> <li>• B—B port</li> <li>• M—M port</li> <li>• S—Slave port</li> <li>• U—The concentrator cannot determine the type of the neighbor port.</li> </ul>
Ler Con	Status of whether the port is currently in a LER condition.
Est	Estimated LER.
Alm	LER at which a link connection exceeds the LER alarm threshold.
Cut	LER cutoff value (the LER at which a link connection is flagged as faulty).
Lem-Ct	Number of LEM errors received on the port.
Lem-Rej-Ct	Number of times a connection was rejected because of excessive LEM errors.
Last-Time-Cleared	Last time the port counters were cleared.
Auto-Part	Number of times the port entered the auto-partition state due to excessive consecutive collisions.
Data-rate mismatch	Number of valid size frames that experienced overrun or underrun.
Src-addr change	Number of times the last source address changed.
Good-bytes	Total number of octets in frames with no error.
Short-event	Number of short events received.
InlinePowered <sup>1</sup>	Inline powered for Admin (auto, on, off), Oper (on, off, denied), and Detected (yes, no).
PowerAllocated <sup>1</sup>	Power allocated for watts (values displayed as watts measurement) and volts (values displayed as volts measurement).
Age-Time <sup>1</sup>	Age timeout setting for the port.
Age-Left <sup>1</sup>	Age timeout remaining for the port.
Maximum-Addrs <sup>1</sup>	Maximum number of secured MAC addresses on the port.

*Table 2-59 show port Command Output Fields (continued)*

Field	Description
CallManagerState <sup>1</sup>	Operational state of the voice port (Not Registered, Registered, Up, Down, and Alarm).
NoiseRegen <sup>3</sup>	Status of whether noise regeneration is enabled for the port.
NonLinear <sup>3</sup>	Status of whether nonlinear processing is enabled for the port.
Comp-Alg <sup>3</sup>	Type of compression algorithm used (for example G.711, G.723, and G.729).
IP-address <sup>3</sup>	IP address associated with the port.
Netmask <sup>3</sup>	Netmask associated with the port.
MAC-Address <sup>3</sup>	MAC address associated with the port.
Call-Manager-IP <sup>3</sup>	Cisco CallManager IP address associated with the port.
DHCP-Server-IP <sup>3</sup>	DHCP server IP address associated with the port.
DNS-Server-IP <sup>3</sup>	DNS server IP address associated with the port.
TFTP-Server-IP <sup>3</sup>	TFTP server IP address associated with the port.

1. This field is applicable to the 48-port 10/100BASE-TX switching services-configured module.

2. This field changes according to the system configuration.

3. This field is applicable to the 8-port T1/E1 DSP services-configured module.

#### Related Commands

[set port disable](#)  
[set port enable](#)  
[show port status](#)

# show port auxiliaryvlan

Use the **show port auxiliaryvlan** command to display the port auxiliary VLAN status for a specific port.

```
show port auxiliaryvlan {vlan / untagged / dot1p / none}
```

Syntax Description		
	<i>vlan</i>	Number of the VLAN; valid values are from 1 to 4094.
	<b>untagged</b>	Displays the Cisco IP Phone 7960 that sends untagged packets without 802.1p priority.
	<b>dot1p</b>	Displays the Cisco IP Phone 7960 that sends packets with 802.1p priority.
	<b>none</b>	Displays the switch that does not send any auxiliary VLAN information in the CDP packets from that port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

**Examples** This example shows how to display the port information for a specific auxiliary VLAN:

```
Console> (enable) show port auxiliaryvlan
AuxiliaryVlan Status Mod/Ports
-----
222          active  8/4-7
333          active  8/13-18
dot1p        dot1p   8/23,8/31-34
untagged     untagged 9/12
none         none    8/1-3,8/8-12,8/19-22,8/24-30,8/35-48,9/1-11,9/13-48
Console> (enable)
```

This example shows how to display the port information for a specific auxiliary VLAN:

```
Console> (enable) show port auxiliaryvlan 222
AuxiliaryVlan Status Mod/Ports
-----
222          active  8/4-7
Console> (enable)
```

This example shows how to display the status of the switch that does not send any auxiliary VLAN information in the CDP packets:

```
Console> (enable) show port auxiliaryvlan none
AuxiliaryVlan Status Mod/Ports
-----
none           none      8/1-3,8/8-12,8/19-22,8/24-30,8/35-48,9/1-11,9/13-48
Console> (enable)
```

This example shows how to display the status of the Cisco IP Phone 7960 that sends untagged packets without 802.1p priority:

```
Console> (enable) show port auxiliaryvlan untagged
AuxiliaryVlan Status Mod/Ports
-----
untagged      untagged 9/12
Console> (enable)
```

This example shows how to display the status of the Cisco IP Phone 7960 that sends packets with 802.1p priority:

```
Console> (enable) show port auxiliaryvlan dot1p
AuxiliaryVlan Status Mod/Ports
-----
dot1p        dot1p    8/23,8/31-34
Console> (enable)
```

[Table 2-60](#) describes the possible fields (depending on the port type queried) in the **show port auxiliaryvlan** command output.

**Table 2-60** *show port auxiliaryvlan Command Output Fields*

Field	Description
AuxiliaryVlan	Number of the auxiliary VLAN.
AuxVlanStatus	Status of the auxiliary VLAN.
Mod/Ports	Number of the module and ports assigned to the auxiliary VLAN.

**Related Commands** [set port auxiliaryvlan](#)

# show port broadcast

Use the **show port broadcast** command to display broadcast information.

```
show port broadcast [mod[/port]]
```

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown.  
 If you do not specify a *port* value, all the ports on the module are shown.  
 On the 1000BASE-X switching module, when you specify a port for broadcast suppression, the traffic is suppressed only in the network-to-Catalyst 6500 series switch bus direction.

**Examples** This example shows how to display broadcast information for module 4, port 6:

```
Console> show port broadcast 4/6
Port      Broadcast-Limit Multicast Unicast Total-Drop      Violation
-----
 4/6          90.00 %           -      -           0 drop-packets
Console>
```

[Table 2-61](#) describes the possible fields (depending on the port type queried) in the **show port broadcast** command output.

**Table 2-61 show port broadcast Command Output Fields**

Field	Description
Port	Module and port number.
Broadcast-Limit	Broadcast threshold configured for the port.
Multicast	Number of multicast packets dropped.
Unicast	Number of unicast packets dropped.

*Table 2-61 show port broadcast Command Output Fields (continued)*

Field	Description
Total-Drop	Number of broadcast, multicast, and unicast packets dropped because the port broadcast limit was exceeded.
Violation	Action the port takes when the broadcast threshold is exceeded; the port either errdisables or drops packets.

**Related Commands** [set port broadcast](#)

# show port capabilities

Use the **show port capabilities** command to display the capabilities on the ports.

**show port capabilities** [*mod*[/*port*]]

<b>Syntax Description</b>	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown.  
If you do not specify a *port* value, all the ports on the module are shown.

**Examples** This example shows how to list the port capabilities on a specific module and port:

```

Console> show port capabilities 1/1
Model                WS-X6K-SUP2-2GE
Port                 1/1
Type                 Unknown GBIC
Speed                1000
Duplex               full
Trunk encap type     802.1Q, ISL
Trunk mode           on, off, desirable, auto, nonegotiate
Channel              yes
Broadcast suppression percentage(0-100)
Flow control         receive-(off, on, desired), send-(off, on, desired)
Security             yes
Dot1x                yes
Membership           static, dynamic
Fast start           yes
QOS scheduling       rx-(1p1q4t), tx-(1p2q2t)
CoS rewrite          yes
ToS rewrite          DSCP
UDLD                 yes
Inline power         no
AuxiliaryVlan        no
SPAN                 source, destination
COPS port group      1/1-2
Link debounce timer  yes
Console>

```

This example shows the port capabilities on a 48-port 10/100BASE-TX switching services configured-module:

```

Console> show port capabilities 3/2
Model                WS-X6248-RJ-45
Port                 3/2
Type                 10/100BaseTX
Speed                auto,10,100
Duplex               half,full
Trunk encap type     802.1Q,ISL
Trunk mode           on,off,desirable,auto,nonegotiate
Channel              yes
Broadcast suppression percentage(0-100)
Flow control         receive-(off,on),send-(off)
Security              yes
Membership           static
Fast start           yes
QOS scheduling       rx-((null)),tx-((null))
QOS classification   layer 2,layer 3
UDLD                 Capable
SPAN                 source,destination
Inline power         auto,on,off
Auxiliaryvlan        1..1000,dot1p,untagged,none
Console>

```

This example shows the port capabilities on an 8-port T1/E1 ISDN PRI services configured-module:

```

Console> show port capabilities 3/2
Model                WS-X6608-T1 (or WS-X6608-E1)
Port                 3/2
Type                 T1, transcoding, conferencing
Speed                1.544 Mps (or 2.048Mps)
Duplex               full
Channel              no
Broadcast suppression no
Flow control         no
Security              no
Membership           no
Fast start           no
QOS scheduling       no
QOS classification   no
UDLD                 no
Inline power         no
Auxiliaryvlan        no
Console>

```

This example shows the port capabilities on a 24-port FXS analog station interface services-configured module:

```

Console> show port capabilities 3/2
Model                WS-X6624-FXS
Port                 3/2
Type                 FXS
Speed                64kps
Duplex               full
Trunk encap type     none
Trunk mode           off
Channel              no
Broadcast suppression no
Flow control         no
Security              no
Membership           no
Fast start           no
QOS scheduling       no

```

## ■ show port capabilities

```
QOS classification      no
UDLD                   no
Inline power           no
Auxiliaryvlan          no
Console>
```

This example shows the port capabilities on an Intrusion Detection System Module:

```
Console> show port capabilities 5/2
Model                  WS-X6381-IDS
Port                  5/2
Type                  Intrusion Detection
Speed                 1000
Duplex                full
Trunk encap type      no
Trunk mode            no
Channel               no
Broadcast suppression no
Flow control          no
Security              no
Dot1x                 no
Membership            static
Fast start            no
QOS scheduling        rx-(none),tx-(none)
CoS rewrite           no
ToS rewrite           no
UDLD                  no
Inline power          no
AuxiliaryVlan         no
SPAN                  source
COPS port group       not supported
Link debounce timer   yes
Console>
```

Table 2-62 describes the possible fields (depending on the type of port queried) and the values in the **show port capabilities** command output.

**Table 2-62** *show port capabilities Command Output Fields*

Field	Description
Model	Module model number.
Port	Module number and port number.
Type <sup>1</sup>	Port type (1000BASE-SX or 100BASE-FX).
Speed <sup>1</sup>	Speed setting for the port (auto, 10, 100, 1000).
Duplex	Duplex mode (half, full, auto).
Trunk encap type <sup>2</sup>	Trunk encapsulation type (ISL, 802.1Q, 802.10, or no).
Trunk mode <sup>2</sup>	Trunk administrative status of the port (on, off, auto, desirable, nonegotiate, or no). <sup>3</sup>
Channel	Status of which ports can form a channel group. The ports are shown in <i>mod/port</i> format. For example, 3/1-2 indicates module 3, ports 1 and 2. Also, any ports in range [ <i>mod/1-mod/high_port</i> ] or no ports may be indicated.
Broadcast suppression	Percentage of total available bandwidth that can be used by broadcast traffic (0–100).
Flow control	Flow-control options you can set (receive-[off, on, desired], send-[off, on, desired], or no).
Security	Status of whether port security is enabled (yes, no).
Membership	Method of membership assignment of a port or range of ports to a VLAN (static, dynamic).
Fast start	Status of whether the spanning tree PortFast-start feature on the port is enabled (yes, no).
QOS scheduling	Status of whether the port supports QoS scheduling (yes, no).
QOS classification	Status of whether the port supports QoS classification (yes, no).
CoS rewrite	Status of whether the port supports CoS rewrite (yes, no).
SPAN	SPAN type supported.
ToS rewrite	Status of whether the port supports ToS rewrite (IP-Precedence).
UDLD	Status of whether the port is UDLD-capable or not.

*Table 2-62 show port capabilities Command Output Fields (continued)*

Field	Description
Inline power <sup>2</sup>	Status of whether the port supports inline power (yes, no).
Auxiliaryvlan <sup>2</sup>	Status of whether the port supports voice VLANs (yes, no).
Link debounce timer	Status of whether the port supports debounce timer (yes, no).

1. This field will change depending on the module configuration.
2. This field is applicable to the 48-port 10/100BASE-TX switching services-configured module and the 24-port FXS analog station interface services-configured module.
3. “No” means that the port is trunk incapable.

**Related Commands**

[set port broadcast](#)  
[set port channel](#)  
[set port security](#)  
[set port speed](#)  
[set spantree portfast](#)  
[set trunk](#)  
[show port](#)  
[show port voice active](#)

# show port cdp

Use the **show port cdp** command to display the port CDP enable state and the message interval.

```
show port cdp [mod[/port]]
```

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown. If you do not specify a *port* value, all the ports on the module are shown.

**Examples** This example shows how to display CDP information for all ports:

```
Console> show port cdp
CDP                : enabled
Message Interval   : 60
Hold Time          : 180
Version            : V2

Port      CDP Status
-----  -
 1/1     enabled
 1/2     enabled
Console>
```

[Table 2-63](#) describes the fields in the **show port cdp** command output.

**Table 2-63** *show port cdp* Command Output Fields

Field	Description
CDP	Status of whether CDP is enabled or not.
Message-Interval	Interval between CDP message exchange with a neighbor.
Hold Time	Hold time setting.
Version	CDP version.
Port	Module and port number.
CDP Status	CDP status of the port (enabled, disabled).

■ show port cdp

---

**Related Commands**

[set cdp](#)  
[show cdp](#)

# show port channel

Use the **show port channel** command to display EtherChannel information.

```
show port channel [all | mod[/port]] [statistics]
```

```
show port channel [all | mod[/port]] {info [type]}
```

<b>Syntax Description</b>	<b>all</b>	(Optional) Displays information about PAgP and LACP channels.
	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.
	<b>statistics</b>	(Optional) Displays statistics about the port (PAgP packets sent and received).
	<b>info</b>	(Optional) Displays port information such as speed, duplex status, priority, secure or dynamic status, and trunk status.
	<i>type</i>	(Optional) Displays feature-related parameters; valid values are <b>spantree</b> , <b>trunk</b> , <b>protocol</b> , <b>gmrp</b> , <b>gvrp</b> , <b>qos</b> , <b>rsvp</b> , <b>cops</b> , <b>dot1qtunnel</b> , <b>auxiliaryvlan</b> , and <b>jumbo</b> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The protocol conditions are as follows:

- On indicates the port will receive all the flood traffic for that protocol.
- Off indicates the port will not receive any flood traffic for that protocol.
- Auto indicates the port will not receive any flood traffic for that protocol.

The GVRP registration status is defined as follows:

- Normal allows dynamic registering and deregistering each VLAN (except VLAN 1) on the port.
- Fixed supports manual VLAN creation and registration and prevents VLAN deregistration.
- Forbidden statically deregisters all the VLANs (except VLAN 1) from the port.

When you enter the **option** keyword with any of the options (**spantree** | **trunk** | **protocol** | **gmrp** | **gvrp** | **qos** | **rsvp** | **cops** | **dot1qtunnel** | **auxiliaryvlan** | **jumbo**), associated VLANs and the specified feature-related parameters are displayed.

If you do not specify a *mod* or a *port*, EtherChannel information is shown for all PAgP channeling ports on all modules.

If you enter the **all** keyword, information about PAgP and LACP channels is displayed.

## show port channel

### Examples

This example shows how to display Ethernet channeling information for module 1:

```

Console> show port channel 1
Port  Status      Channel  Admin Ch
      Mode        Group Id
-----
1/1   nonconnect  on      195   769
1/2   connected   on      195   769

Port  Device-ID                Port-ID                Platform
-----
1/1
1/2
Console>

```

This example shows how to display port statistics:

```

Console> show port channel 4 statistics
Port  Admin  PAgP Pkts  PAgP Pkts  PAgP Pkts  PAgP Pkts  PAgP Pkts
      Group  Transmitted Received  InFlush  RetnFlush  OutFlush  InError
-----
4/1   69      20      0      0      0      0      0
4/2   69     105     60      0      0      0      0
4/3  151      0      0      0     10      0      0
4/4  151      0      5      0      0      0      0
4/5   70      0      0      0      0      0      0
4/6   70     42      0      0      2      0      0
4/7  152      0     92      0      0      0      0
4/8  152      0      0      0      0      0      0
Console>

```

This example shows how to display port information:

```

Console> show port channel 1 info
Switch Frame Distribution Method:mac both

Port  Status      Channel  Admin Channel Speed Duplex Vlan PortSecurity/
      mode        group id          0 1000 full  1 -
-----
1/1   notconnect  auto      1      0 1000 full  1 -
1/2   connected   auto      1      0 1000 full  1 -

Port  ifIndex Oper-group Neighbor Oper-Distribution
      Oper-group Method
-----
1/1   -      1      mac both
1/2   -      2      mac both

Port  Device-ID                Port-ID                Platform
-----
1/1
1/2

Port  Trunk-status Trunk-type Trunk-vlans
-----
1/1   not-trunking negotiate 1-1005
1/2   not-trunking negotiate 1-1005

Port  Portvlancost-vlans
-----
1/1
1/2

Port  Port Portfast Port Port

```

```

-----
      priority      vlanpri  vlanpri-vlans
-----
1/1      32 disabled      0
1/2      32 disabled      0

Port  IP      IPX      Group
-----
1/1  on      auto-on  auto-on
1/2  on      auto-on  auto-on

Port  GMRP      GMRP      GMRP
      status  registration forwardAll
-----
1/1  enabled  normal    disabled
1/2  enabled  normal    disabled

Port  GVRP      GVRP      GVRP
      status  registration applicant
-----
1/1  disabled normal    normal
1/2  disabled normal    normal

Port  Qos-Tx  Qos-Rx  Qos-Trust  Qos-DefCos
-----
1/1  2q2t   1q4t   untrusted  0
1/2  2q2t   1q4t   untrusted  0
Console>

```

These examples show how to display feature-specific parameter information:

```

Console> (enable) show port channel 3 info spantree
Port  Port      Portfast  Port      Port
      priority      vlanpri  vlanpri-vlans
-----
3/1      32 disabled      12 2,4,90
3/2      32 disabled      12 2,4,90
3/3      32 disabled      12 2,4,90
3/4      32 disabled      12 2,4,90
Console>

Console> (enable) show port channel 3 info trunk
Port  Trunk-status  Trunk-type  Trunk-vlans
-----
3/1  not-trunking  negotiate   1-1005
3/2  not-trunking  negotiate   1-1005
3/3  not-trunking  negotiate   1-1005
3/4  not-trunking  negotiate   1-1005
Console>

Console> (enable) show port channel 3 info protocol
Port  IP      IPX      Group
-----
3/1  on      auto-on  auto-on
3/2  on      auto-on  auto-on
3/3  on      auto-on  auto-on
3/4  on      auto-on  auto-on
Console>

Console> (enable) show port channel 3 info gmrp
Port  GMRP      GMRP      GMRP
      status  registration forwardAll
-----
3/1  enabled  normal    disabled
3/2  enabled  normal    disabled
3/3  enabled  normal    disabled

```

## ■ show port channel

```
3/4 enabled normal disabled
Console>
```

```
Console> (enable) show port channel 1 info gvrp
```

```
Port  GVRP      GVRP      GVRP
     status  registration applicant
-----
1/1   disabled normal      normal
1/2   disabled normal      normal
Console>
```

```
Console> (enable) show port channel 1 info qos
```

```
Port  Qos-Tx  Qos-Rx  Qos-Trust  Qos-DefCos  Qos-Interface
     PortType PortType Type                Type
-----
1/1   2q2t    1q4t    untrusted   0 port-based
1/2   2q2t    1q4t    untrusted   0 port-based
-----
```

```
Port  ACL name                Type
-----
1/1
                                     IP
                                     IPX
                                     MAC
1/2
                                     IP
                                     IPX
                                     MAC
```

```
Port  Policy Source
-----
1/1           COPS
1/2           COPS
Console>
```

[Table 2-64](#) describes the possible fields (depending on the type of port queried) and the values in the **show port channel** command outputs.

**Table 2-64** show port channel Command Outputs Fields

Field	Description
Port	Module and port number.
Status	Channeling status of the port (connected, notconnect).
Channel mode	Status of whether EtherChannel is on, off, auto, or desirable on the port.
Admin Group	Number of the admin group.
PAGP Pkts Transmitted	Number of PAGP packets transmitted.
PAGP Pkts Received	Number of PAGP packets received.
PAGP Pkts InFlush	Number of PAGP flush packets received.
PAGP Pkts RetnFlush	Number of PAGP flush packets returned.
PAGP Pkts OutFlush	Number of PAGP flush packets transmitted.
PAGP Pkts InError	Number of PAGP error packets received.
Channel ID	Number of the channel group.
Neighbor device	Neighboring device with which the port is channeling.
Neighbor port	Port on the neighboring device with which the port is channeling.

**Table 2-64** *show port channel Command Outputs Fields (continued)*

Field	Description
Speed	Speed setting for the port (auto, 10, 100, 1000).
Duplex	Duplex setting for the port (auto, full, half).
Vlan	VLAN to which the port belongs.
Port priority	Priority associated with the port.
PortSecurity/Dynamic port	Status of whether the port is secure or dynamic.
ifIndex	Interface number to which the port belongs.
Oper-group	Capability of the group.
Neighbor device-id	Device ID of the neighboring device with which the port is channeling.
Neighbor port-id	Port ID of the neighboring device with which the port is channeling.
Neighbor Oper-group	Capability of the neighboring device.
Oper-Distribution	Frame distribution method operating status on a per-port basis (ip source, ip destination, ip both, mac source, mac destination, mac both, hotstandby-active, or hotstandby-idle).
Trunk-status	Status of whether the port is trunking or not.
Trunk-type	Type of trunk port.
Trunk-vlans	VLANs to which the port belongs.
Portvlancost-vlans	Port VLAN cost.
Portfast	Status of whether the PortFast-start mode is enabled or disabled.
Port vlanpri	Port VLAN priority.
Port vlanpri-vlans	Priority VLAN number.
IP	Status of the IP protocol (on, off, auto).
IPX	Status of the IPX protocol (on, off, auto).
Group	Status of the VINES, AppleTalk, and DECnet protocols (on, off, auto).
GMRP status	Status of whether GMRP is enabled or disabled.
GMRP registration	Status of the administrative control of an outbound port (normal, fixed, forbidden).
GMRP forward/all	Status of whether the Forward All feature is enabled or disabled.
GVRP status	Status of whether GVRP is enabled or disabled.

Table 2-64 show port channel Command Outputs Fields (continued)

Field	Description
GVRP registration	Status of the administrative control of an outbound port (normal, fixed, forbidden).
Qos-Tx	Transmit drop threshold.
Qos-Rx	Receive drop threshold.
Qos-Trust	Status of whether the port is trusted or untrusted.
Qos-DefCos	CoS value.
Qos Port-based	Status of whether the port is port-based QoS or not.
ACL name	Name of the ACL.
Policy Source	Type of policy source.
COPS Admin Roles	COPS admin role designation.
Dot1q tunnel mode	Status of the dot1q tunnel mode.
Jumbo	Status of the jumbo feature.
Auxiliaryvlan	Number of the auxiliary VLAN.
Protocol	Protocol associated with the port.

## Related Commands

[set port channel](#)  
[show channel](#)  
[show channel group](#)

# show port cops

Use the **show port cops** command to display COPS information on all or individual ports.

**show port cops** [*mod*[/*port*]]

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value or a *port* value, information is shown for all ports on all modules. For a few minutes after a switchover from the active to the standby supervisor engine, note that if you enter the **show port cops** command, the output may be incorrect. If this is the case, the following warning displays:

```
COPS High Availability Switch Over in progress, hardware may be
programmed differently than as suggested by the output of these
commands.
```

**Examples** This example shows how to display COPS information for all ports:

```
Console> show port cops
Port      Admin Roles                               Oper Roles
-----  -
1/1      backbone_port                             backbone_port
        branch_office_port                       -
        access_port                             -
1/2      -                                           -
3/1      -                                           -
3/2      backbone_port                             backbone_port
3/3      backbone_port                             backbone_port
3/4      access_port                               access_port
3/5      access_port                               branch_office_port
        backbone_port                           -
        branch_office_port                       -
        net_port                                 -
3/6      access_port                               access_port
3/7      -                                           -
3/8      -                                           -
Console>
```

This example shows how to display COPS information for a specific port:

```

Console> show port cops 1/1
Port      Admin Roles                               Oper Roles
-----
 1/1      backbone_port                             backbone_port
          branch_office_port                       -
          access_port                             -
 1/2      -                                           -
Console>

```

Table 2-65 describes the fields displayed in the **show port cops** command output.

**Table 2-65** *show port cops Command Output Fields*

Field	Description
Port	Module and port number.
Admin Roles	Administration role.
Oper Roles	Operating role.

#### Related Commands

**clear port cops**  
**set port cops**

# show port counters

Use the **show port counters** command to show all the counters for a port.

**show port counters** [*mod*[/*port*]]

Syntax Description	<i>mod</i>	(Optional) Number of the module for which to show port counter information.
	<i>port</i>	(Optional) Number of the port on the module for which to show port counter information.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown.  
If you do not specify a *port* value, all the ports on the module are shown.

**Examples** This example shows counters for all ports:

```

Console> show port counters
Port  Align-Err  FCS-Err    Xmit-Err   Rcv-Err    UnderSize
-----
1/1      0           0           0           0           0
1/2      0           0           0           0           0
4/1      0           0           0           0           0
4/2      0           0           0           0           0
4/3      0           0           0           0           0
4/4      0           0           0           0           0

Port  Single-Col  Multi-Coll  Late-Coll   Excess-Col  Carri-Sen  Runts    Giants
-----
1/1      12          0           0           0           0           0         0
1/2      0           0           0           0           0           0         0
4/1      0           0           0           0           0           0         0
4/2      0           0           0           0           0           0         0
4/3      0           0           0           0           0           0         0
4/4      0           0           0           0           0           0         0

Last-Time-Cleared
-----
Wed Jan 11 2000, 14:58:19

```

Table 2-66 describes the possible fields (depending on the port type queried) in the **show port counters** command output.

**Table 2-66** *show port counters Command Output Fields*

Field	Description
Port	Module and port number.
Align-Err	Number of frames with alignment errors (frames that do not end with an even number of octets and have a bad CRC) received on the port.
FCS-Err	Number of frame check sequence errors that occurred on the port.
Xmit-Err	Number of transmit errors that occurred on the port (indicating that the internal transmit buffer is full).
Rcv-Err	Number of receive errors that occurred on the port (indicating that the internal receive buffer is full).
UnderSize	Number of received frames less than 64 octets long (but are otherwise well-formed).
Single-Coll	Number of times one collision occurred before the port successfully transmitted a frame to the media.
Multi-Coll	Number of times multiple collisions occurred before the port successfully transmitted a frame to the media.
Late-Coll	Number of late collisions (collisions outside the collision domain).
Excess-Col	Number of excessive collisions that occurred on the port (indicating that a frame encountered 16 collisions and was discarded).
Carri-Sen	Number of times the port sensed a carrier (to determine whether the cable is currently being used).
Runts	Number of received runt frames (frames that are smaller than the minimum IEEE 802.3 frame size) on the port.
Giants	Number of received giant frames (frames that exceed the maximum IEEE 802.3 frame size) on the port.
Last-Time-Cleared	Last time the port counters were cleared.

#### Related Commands

[clear counters](#)  
[show port](#)

# show port debounce

Use the **show port debounce** command to display whether the port debounce timers are enabled or disabled.

**show port debounce** [*mod* | *mod/port*]

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>mod/port</i>	(Optional) Number of the module and the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a port, all ports are displayed.

**Examples** This example shows how to display the debounce link timer for a specific port on a specific module:

```
Console> show port debounce 2/1
Port Debounce link timer
-----
 2/1  disable
Console>
```

**Related Commands** [set port debounce](#)

# show port dot1qtunnel

Use the **show port dot1qtunnel** command to display the dot1q tunnel mode status.

```
show port dot1qtunnel [mod[/port]]
```

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to display the dot1q tunnel mode status for a specific module:

```
Console> (enable) show port dot1qtunnel 4
Port   Dot1q tunnel mode
-----
4/1    access
4/2    access
4/3    access
4/4    access
4/5    trunk
4/6    trunk
4/7    trunk
4/8    disabled
Console> (enable)
```

**Related Commands** [set port dot1qtunnel](#)

# show port dot1x

Use the **show port dot1x** command to display all the configurable and current state values associated with the authenticator port access entity (PAE) and backend authenticator and statistics for the different types of Extensible Authentication Protocol (EAP) packets transmitted and received by the authenticator on a specific port.

```
show port dot1x [mod[/port]]
```

```
show port dot1x statistics [mod[/port]]
```

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.
<b>statistics</b>	Displays statistics for different EAP packets transmitted and received by the authenticator on a specific port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display all the configurable and current state values associated with the authenticator PAE and backend authenticator on a specific port:

```
Console> show port dot1x 3/3
Port  Auth-State          BEnd-State  Port-Control          Port-Status
-----
 3/3  force-authorized      idle        force-authorized      authorized
Port  Multiple-Host  Re-authentication
-----
 3/3  disabled          disabled
Console>
```

This example displays the statistics of different types of EAP packets that are transmitted and received by the authenticator on a specific port:

```
Console> show port dot1x statistics 4/1,4/2
Port  Tx_Req/Id  Tx_Req  Tx_Total  Rx_Start  Rx_Logff  Rx_Resp/Id  Rx_Resp
4/1   1          2       4         2         0         1           0
4/2   3          4       6         0         1         1           0

Port  Rx_Invalid  Rx_Len_Err  Rx_Total  Last_Rx_Frm_Ver  Last_Rx_Frm_Src_Mac
4/1   0           0           3         1                 00-f0-3b-2b-d1-a9
4/2   0           0           3         1                 00-d0-62-95-7b-ff
Console>
```

■ show port dot1x

---

**Related Commands**

[clear dot1x config](#)  
[set port dot1x](#)  
[show dot1x](#)

# show port errdisable-timeout

Use the **show port errdisable-timeout** command to display the configuration and status of the errdisable timeout for a particular port.

**show port errdisable-timeout** [*mod[/port]*]

## Syntax Description

*mod[/port]* (Optional) Number of the module and the port on the module.

## Defaults

This command has no default settings.

## Command Types

Switch command.

## Command Modes

Normal.

## Usage Guidelines

If the port is disabled and the reason is disabled globally, the No Change value is displayed in the Action on Timeout field regardless of the value in the Port ErrDisableTimeout field. If the port is not in errdisabled state, the No Change value always is displayed in the Action on Timeout field.

## Examples

This example shows how to display the errdisable timeout configuration and status for a particular port:

```
Console> show port errdisable-timeout 3/3
Port  Status      ErrDisableReason  Port ErrDisableTimeout  Action on Timeout
-----
 3/3  errdisable  udld              Disable                Remain Disabled
Console>
```

This example shows the output for a port in errdisabled state with the timeout flag enabled and with the reason disabled:

```
Console> show port errdisable-timeout 3/3
Port  Status      ErrDisableReason  Port ErrDisableTimeout  Action on Timeout
-----
 3/3  errdisable  udld              Enable                 No Change
Console>
```

This example shows the output for a port in errdisabled state with the timeout flag enabled and with the reason enabled:

```
Console> show port errdisable-timeout 3/3
Port  Status      ErrDisableReason  Port ErrDisableTimeout  Action on Timeout
-----
 3/3  errdisable  udld              Enable                 Enabled
Console>
```

This example shows the output for a port in errdisabled state with the timeout flag disabled and the reason disabled:

```
Console> show port errdisable-timeout 3/3
```

Port	Status	ErrDisableReason	Port	ErrDisableTimeout	Action on Timeout
3/3	errdisable	udld		Disable	No Change

```
Console>
```

This example shows the output for a port in errdisabled state with the timeout flag disabled and the reason enabled:

```
Console> show port errdisable-timeout 3/3
```

Port	Status	ErrDisableReason	Port	ErrDisableTimeout	Action on Timeout
3/3	errdisable	udld		Disable	Remain Disabled

```
Console>
```

This example shows the output for a port that is not errdisabled state with the timeout flag enabled and with the reason disabled:

```
Console> show port errdisable-timeout 3/3
```

Port	Status	ErrDisableReason	Port	ErrDisableTimeout	Action on Timeout
3/3	connected	-		Enable	No Change

```
Console>
```

#### Related Commands

[set errdisable-timeout](#)  
[set port errdisable-timeout](#)  
[show errdisable-timeout](#)

# show port flowcontrol

Use the **show port flowcontrol** command to display per-port status information and statistics related to flow control.

**show port flowcontrol** [*mod*[/*port*]]

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown.  
If you do not specify a *port* value, all the ports on the module are shown.

**Examples** This example shows how to display the flow-control port status and statistics for module 6:

```

Console> show port flowcontrol 6
Port      Send FlowControl   Receive FlowControl  RxPause  TxPause
         admin    oper      admin    oper
-----
 6/1    desired  off       off      off      0        0
 6/2    desired  off       off      off      0        0
 6/3    desired  off       off      off      0        0
 6/4    desired  off       off      off      0        0
 6/5    desired  off       off      off      0        0
 6/6    desired  off       off      off      0        0
 6/7    desired  off       off      off      0        0
 6/8    desired  off       off      off      0        0
Console>

```

[Table 2-67](#) describes the fields in the **show port flowcontrol** command output.

**Table 2-67** *show port flowcontrol* Command Output Fields

Field	Description
Port	Module and port number.
Send Flowcontrol Admin	Flow-control administration. Possible settings: on indicates the local port sends flow control to the far end; off indicates the local port does not send flow control to the far end; desired indicates the local end sends flow control to the far end if the far end supports it.

*Table 2-67 show port flowcontrol Command Output Fields (continued)*

Field	Description
Send Flowcontrol Oper	Flow-control operation. Possible setting: on indicates flow control is operational; off indicates flow control is not operational; disagree indicates the two ports could not agree on a link protocol.
Receive Flowcntl Admin	Flow-control administration. Possible settings: on indicates the local port requires the far end to send flow control; off indicates the local port does not allow the far end to send flow control; desired indicates the local end allows the far end to send flow control.
Receive Flowcntl Oper	Flow-control operation. Possible setting: on indicates flow control is operational; off indicates flow control is not operational; disagree indicates the two ports could not agree on a link protocol.
RxPause	Number of Pause frames received.
TxPause	Number of Pause frames transmitted.

Related Commands [set port flowcontrol](#)

# show port inlinepower

Use the **show port inlinepower** command to display the port power administration and operational status.

```
show port inlinepower [mod[/port]]
```

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** An inline power-capable device can still be detected even if the inline power mode is set to off. The Operational (Oper) status field descriptions are as follows:

- on—Power is being supplied by the port.
- off—Power is not being supplied by the port.
- denied—The system does not have enough available power for the port; power is not being supplied by the port.
- faulty—The port is unable to provide power to the connected device.

**Examples** This example shows how to display the inline power for multiple ports on a specific module:

```
Console> show port inlinepower 3/2-6
Default Inline Power allocation per port: 9.500 Watts (0.22 Amps @42V)
Total inline power drawn by module 3: 0 Watt
Port      InlinePowered      PowerAllocated
      Admin Oper   Detected mWatt mA @42V
-----
 3/2 auto  on    yes    10.00 0.250
 3/3 auto  on    yes     9.8  0.198
 3/4 auto  denied yes     0    0
 3/5 off   off   no     0    0
 3/6 off   off   yes     0    0
Console>
```

**Related Commands**

- [set inlinepower defaultallocation](#)
- [set port inlinepower](#)
- [show environment](#)

# show port jumbo

Use the **show port jumbo** command to display the jumbo frame settings for all ports with the feature enabled.

## **show port jumbo**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the jumbo frame settings for ports with the feature enabled:

```
Console> show port jumbo
Jumbo frames MTU size is 9216 bytes.
Jumbo frames enabled on port(s) 6/1-2,7/1-8.
Console>
```

This example shows the display if the jumbo frame feature could not be enabled on some ports at system startup:

```
Console> show port jumbo
Jumbo frames MTU size is 9216 bytes.
Jumbo frames enabled on port(s) 6/1-2.
Jumbo frames are in an inconsistent state on port(s) 7/1-8
Console>
```

---

**Related Commands** [set port jumbo](#)

# show port l2protocol-tunnel

Use the **show port l2protocol-tunnel** command to display Layer 2 protocol tunneling information on a port or range of ports.

**show port l2protocol-tunnel** [*mod[/port]*]

<b>Syntax Description</b>	<i>mod[/port]</i>	(Optional) Number of the module and the number of the port or range of ports on the module. See the “Usage Guidelines” section for more information.
---------------------------	-------------------	--

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a port or range or ports, Layer 2 protocol tunneling information is displayed for all tunneling ports.

**Examples** This example shows how to display Layer 2 protocol tunneling information for a range of ports:

```
Console> show port l2protocol-tunnel 7/1-2
```

Port	Tunnel Protocol(s)	Drop Threshold	Shutdown Threshold
7/1	None	1000	20000
7/2	None	0	0

```
Console>
```

**Related Commands**

- [clear l2protocol-tunnel cos](#)
- [clear l2protocol-tunnel statistics](#)
- [set l2protocol-tunnel cos](#)
- [set port l2protocol-tunnel](#)
- [show l2protocol-tunnel statistics](#)

# show port lacp-channel

Use the **show port lacp-channel** command to display information about LACP channels by port or module number.

```
show port lacp-channel [mod[/port]] [statistics]
```

```
show port lacp-channel [mod[/port]] info [type]
```

<b>Syntax Description</b>	<i>mod[/port]</i>	(Optional) Number of the module and the port number on the module.
	<b>statistics</b>	(Optional) Displays the LACP channel statistics.
	<b>info</b>	Displays detailed LACP channel information.
	<i>type</i>	(Optional) Displays feature-related parameters; valid values are <b>auxiliaryvlan</b> , <b>cops</b> , <b>dot1qtunnel</b> , <b>gmrp</b> , <b>gyrp</b> , <b>jumbo</b> , <b>protocol</b> , <b>qos</b> , <b>rsvp</b> , <b>spantree</b> , <b>trunk</b> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not enter a module or a port number, information about all modules is displayed. If you enter the module number only, information about all ports on the module is displayed. For differences between PAgP and LACP, refer to the “Guidelines for Port Configuration” section of the “Configuring EtherChannel” chapter of the *Catalyst 6500 Series Software Configuration Guide*.

**Examples** This example shows how to display LACP channel information for all system modules:

```
Console> show port lacp-channel
Port  Channel  Admin Ch   Partner Oper          Partner
      Mode     Key   Id     Sys ID
-----
 2/1  active   143   768   1276,45-12-24-AC-78-90  5/1
 2/2  active   143   768   1276,45-12-24-AC-78-90  5/2
-----
 4/3  passive  151   769   13459,89-BC-24-56-78-90  1/1
 4/4  passive  151   769   13459,89-BC-24-56-78-90  1/2
-----
 4/7  passive  152   770   8000,AC-12-24-56-78-90   4/3
 4/8  passive  152   770   8000,AC-12-24-56-78-90   4/4
-----
Console>
```

This example shows how to display LACP channel information for all ports on module 4:

```
Console> show port lacp-channel 4
Port Channel Admin Ch Partner Oper Partner
      Mode Key Id Sys ID Port
-----
4/1 active 69 0 0,00-00-00-00-00-00 3/1
4/2 active 69 0 0,00-00-00-00-00-00 4/5
4/3 passive 151 769 13459,89-BC-24-56-78-90 1/1
4/4 passive 151 769 13459,89-BC-24-56-78-90 1/2
4/5 active 70 0 0,00-00-00-00-00-00 7/3
4/6 active 70 0 0,00-00-00-00-00-00 7/4
4/7 passive 152 770 8000,AC-12-24-56-78-90 4/3
4/8 passive 152 770 8000,AC-12-24-56-78-90 4/4
Console>
```

This example shows how to display LACP channel information for port 7 on module 4:

```
Console> show port lacp-channel 4/7
Port Channel Admin Ch Partner Oper Partner
      Mode Key Id Sys ID Port
-----
4/7 passive 152 770 8000,AC-12-24-56-78-90 4/3
4/8 passive 152 770 8000,AC-12-24-56-78-90 4/4
Console>
```

This example shows how to display detailed LACP channel information for port 7 on module 4:

```
Console> show port lacp-channel 4/7 info
I = Isolated Port. C = Channeling Port. N = Not Connected.
H = Hot Stand-by Port. S = Suspended Port.

Port LACP Port Port Speed Duplex Vlan Trunk status Port STP Port PortSecurity/
      Priority Status      1000 full 1 not-trunking Cost Priority Dynamic port
-----
4/7 130 C 1000 full 1 not-trunking 4 32
4/8 131 C 1000 full 1 not-trunking 4 32

Port Admin Channel_id ifIndex Partner Oper Partner Partner Partner
      Key          31 Sys ID Port prior port Oper Key
-----
4/7 152 770 31 8000,AC-12-24-56-78-90 248 4/3 15678
4/8 152 770 31 8000,AC-12-24-56-78-90 249 4/4 15768
Console>
```

This example shows how to display LACP channel statistics for all ports on module 4:

```
Console> show port lacp-channel 4 statistics
Port Admin LACP Pkts LACP Pkts Marker Pkts LACP Pkts
      Key Transmitted Received Transmitted Received Errors
-----
4/1 69 20 0 0 0 0
4/2 69 105 60 0 0 0
4/3 151 0 0 0 10 0
4/4 151 0 5 0 0 0
4/5 70 0 0 0 0 0
4/6 70 42 0 0 2 0
4/7 152 0 92 0 0 0
4/8 152 0 0 0 0 0
Console>
```

This example shows how to display LACP channel statistics for port 7 on module 4:

```

Console> show port lacp-channel 4/7 statistics
Port  Admin    LACP Pkts  LACP Pkts  Marker Pkts  Marker Pkts  LACP Pkts
      Key      Transmitted Received    Transmitted    Received    Errors
-----
4/7    152         0          92          0            0            0
4/8    152         0           0           0            0            0
Console>

```

## Examples

```

clear lacp-channel statistics
set channelprotocol
set lacp-channel system-priority
set port lacp-channel
set spantree channelcost
set spantree channelvlancost
show lacp-channel

```

# show port mac

Use the **show port mac** command to display port MAC counter information.

**show port mac** [*mod*[/*port*]]

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display port MAC counter information for a specific module:

```
Console> show port mac 1
```

Port	Rcv-Unicast	Rcv-Multicast	Rcv-Broadcast
1/1	0	0	0
1/2	0	0	0
1/3	0	0	0
1/4	0	0	0

Port	Xmit-Unicast	Xmit-Multicast	Xmit-Broadcast
1/1	0	0	0
1/2	0	0	0
1/3	0	0	0
1/4	0	0	0

Port	Rcv-Octet	Xmit-Octet
1/1	0	0
1/2	0	0
1/3	0	0
1/4	0	0

MAC	Dely-Exced	MTU-Exced	In-Discard	Ln-Discrd	In-Lost	Out-Lost
1/1	0	0	0	0	0	0
1/2	0	0	0	0	0	0
1/3	0	0	0	0	0	0
1/4	0	0	0	0	0	0

Last-Time-Cleared

```
-----
Fri Sep 1 2000, 20:03:06
Console>
```

Table 2-68 describes the possible fields in the **show port mac** command output.

*Table 2-68 show port mac Command Output Fields*

Field	Description
Rcv-Unicast	Number of unicast frames received on the port.
Rcv-Multicast	Number of multicast frames received on the port.
Rcv-Broadcast	Number of broadcast frames received on the port.
Xmit-Unicast	Number of unicast frames transmitted by the port.
Xmit-Multicast	Number of multicast frames transmitted by the port.
Xmit-Broadcast	Number of broadcast frames transmitted by the port.
Rcv-Octet	Number of octet frames received on the port.
Xmit-Octet	Number of octet frames transmitted on the port.
Dely-Exced	Number of transmit frames aborted due to excessive deferral.
MTU-Exced	Number of frames for which the MTU size was exceeded.
In-Discard	Number of incoming frames that were discarded because the frame did not need to be switched.
Out-Discard	Number of outbound packets chosen to be discarded even though no errors had been detected to prevent their being transmitted.
In-Lost	Number of incoming frames.
Out-Lost	Number of outbound packets.

#### Related Commands

[clear counters](#)

# show port mac-address

Use the **show port mac-address** command to display the MAC address associated with a physical port or ports.

**show port mac-address** [*mod*[/*port*]]

<b>Syntax Description</b>	<i>mod</i> [/ <i>port</i> ]	(Optional) Number of the module and optionally, the number of the port on the module.
---------------------------	-----------------------------	---

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a module number, the MAC addresses for all ports on all modules are shown. If you specify a module number but no port number, the MAC addresses for all ports on the specified module are shown.

**Examples** This example shows how to display the MAC address for port 1 on module 2:

```
Console> show port mac-address 2/1
Port  Mac address
-----
 2/1  00-50-3e-7e-71-3c
Console>
```

This example shows how to display the MAC addresses for all ports on module 2:

```
Console> show port mac-address 2
Port  Mac address
-----
 2/1  00-50-3e-7e-71-3c
 2/2  00-50-3e-7e-71-3d
Console>
```

This example shows how to display the MAC addresses for all ports on all modules:

```
Console> show port mac-address
Port  Mac address
-----
 2/1  00-50-3e-7e-71-3c
 2/2  00-50-3e-7e-71-3d

Port  Mac address
-----
 5/1  00-d0-d3-33-80-9c
 5/2  00-d0-d3-33-80-9d
```

```
show port mac-address
```

```
.  
. .  
5/48 00-d0-d3-33-80-cb  
  
Port  Mac address  
-----  
7/1  00-50-54-6c-94-9c  
7/2  00-50-54-6c-94-9d  
7/3  00-50-54-6c-94-9e  
7/4  00-50-54-6c-94-9f  
7/5  00-50-54-6c-94-a0  
7/6  00-50-54-6c-94-a1  
7/7  00-50-54-6c-94-a2  
7/8  00-50-54-6c-94-a3  
Console>
```

# show port negotiation

Use the **show port negotiation** command to display the link negotiation protocol setting for the specified port.

**show port negotiation** [*mod*[/*port*]]

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is not supported on the 16-Port Gigabit Ethernet Switching Module (WS-X6316-GE-TX) and on the 16-Port 10/100/1000BASE-T Switching Module (WS-X6516-GE-TX).

**Examples** This example shows how to display the link negotiation protocol settings for all ports on module 4:

```

Console> show port negotiation 4
Port   Link Negotiation  Link Negotiation
      admin                oper
-----
4/1   enabled          enabled
4/2   enabled          enabled
4/3   enabled          enabled
4/4   enabled          enabled
4/5   enabled          enabled
4/6   enabled          enabled
4/7   enabled          enabled
Console>

```

**Related Commands**

- [set port negotiation](#)
- [show port flowcontrol](#)

# show port protocol

Use the **show port protocol** command to view protocol filters configured on the EtherChannel ports.

```
show port protocol [mod[/port]]
```

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *port* value, filters configured on all the ports on the module are shown.

**Examples** This example shows how to view protocol filters on configured ports:

```
Console> show port protocol
Port      Vlan      IP        IP Hosts  IPX       IPX Hosts  Group      Group Hosts
-----
1/1       1         on        0         on        0         on        0
1/2       1         on        0         on        0         on        0
2/1       1         on        3         auto-on   0         auto-on   0
2/2       1         on        0         on        0         on        0
2/3       1         on        0         on        0         on        0
2/4       1         on        0         on        0         on        0
2/5       1         on        0         on        0         on        0
2/6       1         on        0         on        0         on        0
2/7       1         on        0         on        0         on        0
2/8       1         on        0         on        0         on        0
2/9       1         on        0         on        0         on        0
2/10      1         on        0         on        0         on        0
2/11      1         on        0         on        0         on        0
2/12      1         on        0         on        0         on        0
Console>
```

**Related Commands** [set port protocol](#)

# show port qos

Use the **show port qos** command to display QoS-related information.

**show port qos** [*mod*[/*port*]]

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

## Usage Guidelines



### Note

When a switchover occurs, you cannot view the ACLs and policers deployed using COPS-DS until the COPS-DS client on the new active supervisor engine establishes connection to the PDP and downloads the QoS policy. The runtime fields in the output display will be blank until QoS policy is downloaded to the new active supervisor engine.

**Examples** This example shows how to display QoS-related information for a specific module and port:

```
Console> show port qos 2/1
QoS is enabled for the switch.
QoS policy source for the switch set to local.
```

Port	Interface	Type	Interface	Type	Policy	Source	Policy	Source
	config		runtime		config		runtime	
2/1	vlan-based		vlan-based			COPS		local

  

Port	TxPort	Type	RxPort	Type	Trust	Type	Trust	Type	Def	CoS	Def	CoS
					config		runtime		config		runtime	
2/1	2q2t		1q4t		untrusted		untrusted		0			

Config:

Port	ACL name	Type
No ACL is mapped to port 2/1.		

Runtime:

Port	ACL name	Type
No ACL is mapped to port 2/1.		

## show port qos

Console>

This example shows how to display QoS-related information for a single port on a specific module, which, in this example, is connected to a port on a phone device:

Console> (enable) **show port qos 3/4**

QoS is disabled for the switch.

Configured settings are not used.

QoS policy source for the switch set to local.

Port	Interface config	Type	Interface runtime	Type	Policy config	Source	Policy runtime	Source
3/4		-		-		local		local

  

Port	TxPort	Type	RxPort	Type	Trust config	Type	Trust runtime	Type	Def config	CoS	Def runtime	CoS
3/4		2q2t		1q4t	untrusted		trust-cos		0		0	

  

Port	Ext-Trust	Ext-Cos
3/4	untrusted	0

(\*)Trust type set to untrusted.

Config:

Port	ACL name	Type
No ACL is mapped to port 3/4.		

No ACL is mapped to port 3/4.

Runtime:

Port	ACL name	Type
No ACL is mapped to port 3/4.		

No ACL is mapped to port 3/4.

Console> (enable)

This example shows how to display QoS-related information for a single port on a specific module, which, in this example, trusts only Cisco IP phones:

Console> (enable) **show port qos 4/1**

QoS is enabled for the switch.

QoS policy source for the switch set to local.

Port	Interface config	Type	Interface runtime	Type	Policy config	Source	Policy runtime	Source
4/1	port-based		port-based			COPS		local

  

Port	TxPort	Type	RxPort	Type	Trust config	Type	Trust runtime	Type	Def config	CoS	Def runtime	CoS
4/1		lp3qlt		lp1q0t	trust-cos		trust-cos*		0		0	

  

Port	Ext-Trust	Ext-Cos	Trust-Device
4/1	untrusted	0	ciscoIPPhone

(\*)Runtime trust type set to untrusted.

```
Config:
Port  ACL name                               Type
-----
No ACL is mapped to port 4/1.

Runtime:
Port  ACL name                               Type
-----
No ACL is mapped to port 4/1.
Console> (enable)
```

**Related Commands**

- set port qos**
- set port qos cos**
- set port qos trust**
- set port qos trust-device**

# show port rsvp

Use the **show port rsvp** command to display RSVP information on a per-port basis.

**show port rsvp** [*mod*[/*port*]]

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display RSVP information for a specific port:

```
Console> (enable) show port rsvp 2
Port  DSBM      Managed Configured Elected DSBM DSBM IP Address
      Election Segment Priority  Priority
-----
 2/1  enabled    yes      232      232    171.21.34.25
 2/2  disabled   no       128      -
Console> (enable)
```

**Related Commands** [set port rsvp dsbm-election](#)

# show port security

Use the **show port security** command to view port security configuration information and statistics.

**show port security** [*mod*[/*port*]]

**show port security statistics** {*mod*[/*port*]}

**show port security statistics system**

Syntax Description		
<i>mod</i>	(Optional) Number of the module.	
<i>port</i>	(Optional) Number of the port on the module.	
<b>statistics</b>	Displays security statistics.	
<b>system</b>	Displays system-wide configuration information.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display port security configuration information on a specific port that is a secured port:

```
Console> (enable) show port security 4/1
Port Security Violation Shutdown-Time Age-Time Maximum-Adrs Trap IfIndex
-----
4/1 enabled shutdown 120 1440 25 disabled 3

Port Secure-Src-Adrs Age-Left Last-Src-Addr Shutdown Shutdown-Time-Left
-----
4/1 00-11-22-33-44-55 4 00-11-22-33-44-55 No -
    00-10-14-da-77-f1 100
Console> (enable)
```

This example shows the display on a port that has experienced a security violation:

```
Console> (enable) show port security 4/1
Port Security Violation Shutdown-Time Age-Time Maximum-Adrs Trap IfIndex
-----
4/1 enabled shutdown 120 600 25 disabled 3

Port Secure-Src-Adrs Age-Left Last-Src-Addr Shutdown Shutdown-Time-Left
-----
4/1 00-11-22-33-44-55 60 00-11-22-33-44-77 Yes -
    00-10-14-da-77-f1 200
    00-11-22-33-44-66 200
Console> (enable)
```

**show port security**

This example shows that port 4/1 has been shut down and that the timeout left is 60 minutes before the port will be reenabled:

```

Console> (enable) show port security 4/1
Port  Security Violation Shutdown-Time Age-Time Maximum-Adrrs Trap      IfIndex
-----
 4/1  enabled restrict  120          600          25          disabled 3

Port Secure-Src-Adrrs  Age-Left Last-Src-Adrr      Shutdown Shutdown-Time-Left
-----
 4/1 00-11-22-33-44-55 60          00-11-22-33-44-77 Yes      -
      00-10-14-da-77-ff
Console> (enable)

```

This example shows how to display system-wide configuration information:

```

Console> (enable) show port security statistics system
Module 1:
  Total ports: 2
  Total secure ports: 0
  Total MAC addresses: 2
  Total global address space used (out of 1024): 0
  Status: installed
Module 2:
  Total ports: 1
  Total secure ports: 0
  Total MAC addresses: 0
  Total global address space used (out of 1024): 0
  Status: removed
Module 3:
  Module does not support port security feature
Module 5:
  Total ports: 48
  Total secure ports: 0
  Total MAC addresses: 48
  Total global address space used (out of 1024): 0
  Status: installed
Module 15:
  Module does not support port security feature
Total secure ports in the system: 0
Console> (enable)

```

This example shows how to display security statistical information for a specific module:

```

Console> (enable) show port security statistics 2
Port  Total-Adrrs Maximum-Adrrs
-----
Module 2:
  Total ports: 1
  Total secure ports: 0
  Total MAC addresses: 0
  Total global address space used (out of 1024): 0
  Status: removed
Console> (enable)

```

**Related Commands**

[clear port security](#)  
[set port security](#)

# show port spantree

Use the **show port spantree** command to view port spanning tree information.

**show port spantree** [*mod*[/*port*]]

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

## Defaults

This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown. If you do not specify a *port* value, all the ports on the module are shown.

**Examples** This example shows how to display spanning tree information on a specific module:

```
Console> (enable) show port spantree 5
Port(s)          Vlan  Port-State      Cost      Prio  Portfast  Channel_id
-----
5/1              1     not-connected   2684354   32    disabled  0
5/2              1     not-connected   2684354   32    disabled  0
5/3              1     not-connected   2684354   32    disabled  0
5/4              1     not-connected   2684354   32    disabled  0
5/5              1     not-connected   2684354   32    disabled  0
5/6              1     not-connected   2684354   32    disabled  0
5/7              1     not-connected   2684354   32    disabled  0
5/8              1     not-connected   2684354   32    disabled  0
5/9              1     forwarding      268435    32    disabled  0
.
.
.
```

**Related Commands** [show spantree](#)

# show port status

Use the **show port status** command to display port status information.

```
show port status [mod[/port]]
```

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown. If you do not specify a *port* value, all the ports on the module are shown.

**Examples** This example shows how to display port status information for all ports:

```
Console> show port status
Port Name          Status      Vlan      Duplex Speed  Type
-----
1/1                connected  52        half   100    100BaseTX
1/2                notconnect
Console>
```

[Table 2-69](#) describes the fields in the **show port status** command output.

**Table 2-69 show port status Command Output Fields**

Field	Description
Port	Module and port number.
Name	Name (if configured) of the port.
Status	Status of the port (connected, notconnect, connecting, standby, faulty, inactive, shutdown, disabled, or monitor).
Vlan	VLANs to which the port belongs.
Duplex	Duplex setting for the port (auto, full, half).
Speed	Speed setting for the port (auto, 10, 100, 1000).
Type <sup>1</sup>	Port type (100BASE-TX).

1. These fields will change according to the system configuration.

# show port sync-restart-delay

Use the **show port sync-restart-delay** command to display a port's synchronization restart delay.

```
show port sync-restart-delay mod/port
```

<b>Syntax Description</b>	<i>mod/port</i> Number of the module and the port on the module.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	The <b>set port sync-restart-delay</b> and <b>show port sync-restart-delay</b> commands are available in both binary mode and text configuration mode, but the synchronization delay you specify is only saved in text configuration mode.
<b>Related Commands</b>	<a href="#">clear config</a> <a href="#">set port sync-restart-delay</a>

# show port trap

Use the **show port trap** command to display port trap status.

```
show port trap [mod[/port]]
```

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a *mod* value, the ports on all modules are shown. If you do not specify a *port* value, all the ports on the module are shown.

**Examples** This example shows how to display the port trap status for a specific module:

```
Console> show port trap 1
```

```
Port   Trap
-----
 1/1   disabled
 1/2   enabled
 1/3   disabled
 1/4   disabled
Console>
```

**Related Commands** [set port trap](#)

# show port trunk

Use the **show port trunk** command to display port trunk information.

**show port trunk** [*mod*[/*port*]]

<b>Syntax Description</b>	<i>mod</i> (Optional) Number of the module.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Normal.
<b>Usage Guidelines</b>	If you do not specify a <i>mod</i> value, the ports on all modules are shown. If you do not specify a <i>port</i> value, all the ports on the module are shown.
<b>Examples</b>	<p>This example shows how to display trunking information for a specific port:</p> <pre> Console&gt; (enable) <b>show port trunk 4/5</b> * - indicates vtp domain mismatch  Port      Mode           Encapsulation  Status      Native vlan ----- 4/5      nonegotiate   dot1q          trunking    1  Port      Vlans allowed on trunk ----- 4/5      1-1005  Port      Vlans allowed and active in management domain ----- 4/5      1-3,1003,1005  Port      Vlans in spanning tree forwarding state and not pruned ----- 4/5      1005 Console&gt; (enable) </pre>

Table 2-70 describes the fields in the **show port trunk** command output.

**Table 2-70 show port trunk Command Output Fields**

Field	Description
Port	Module and port numbers.
Mode	Trunk administrative status of the port (on, off, auto, or desirable).
Encapsulation	Trunking type configured by administration.
Status	Status of whether the port is trunking or nontrunking.
Native VLAN	Number of the native VLAN for the trunk link (for 802.1Q trunks, the VLAN for which untagged traffic can be transmitted and received over the trunk; for ISL trunks, packets are tagged on all VLANs, including the native VLAN).
Vlans allowed on trunk	Range of VLANs allowed to go on the trunk (default is 1 to 1000).
Vlans allowed and active in management domain	Range of active VLANs within the allowed range.
Vlans in spanning tree forwarding state and not pruned	Range of VLANs that actually go on the trunk with Spanning Tree Protocol forwarding state.

**Related Commands**    [set trunk](#)

# show port voice

Use the **show port voice** command to display voice port information.

**show port voice [noalias]**

<b>Syntax Description</b>	<b>noalias</b> (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	This command is not supported by the NAM.
-------------------------	---

<b>Examples</b>	This example shows how to display voice port information:
-----------------	---

```
Console> show port voice
```

Port	Name	Status	Vlan	Duplex	Speed	Type
7/1		connected	100	full	1	T1
7/2		notconnect	100	full	1	T1
7/3		connected	100	full	1	T1
7/4		connected	100	full	1	T1
7/5		notconnect	100	full	1	T1

Port	DHCP	MAC-Address	IP-Address	Subnet-Mask
7/1	disable	00-e0-b0-ff-31-c0	sjcf-12a-sw1-p7	255.255.254.0
7/2	disable	00-e0-b0-ff-31-c1	sjcf-12a-sw1-p7	255.255.254.0
7/3	disable	00-e0-b0-ff-31-c2	sjcf-12a-sw1-p7	255.255.254.0
7/4	disable	00-e0-b0-ff-31-c3	sjcf-12a-sw1-p7	255.255.254.0
7/5	disable	00-e0-b0-ff-31-c4	sjcf-12a-sw1-p7	255.255.254.0

Port	Call-Manager(s)	DHCP-Server	TFTP-Server	Gateway
7/1	gigantic-2.cisc* 10.34.1.11	-	10.34.1.11	10.34.10.1
7/2	10.34.16.10* 10.34.1.11	-	10.34.1.11	10.34.10.1
7/3	10.34.16.10* 10.34.1.11	-	10.34.1.11	10.34.10.1
7/4	10.34.16.10* 10.34.1.11	-	10.34.1.11	10.34.10.1
7/5	10.34.1.11* 10.34.16.10 10.34.42.11	-	10.34.1.11	10.34.10.1

(\*):Primary

## show port voice

```

Port      DNS-Server(s)      Domain
-----
7/1      dns-sj3.cisco.c*  cisco.com
         dns-sj4.cisco.c
7/2      dns-sj3.cisco.c*  cisco.com
         dns-sj4.cisco.c
7/3      dns-sj3.cisco.c*  cisco.com
         dns-sj4.cisco.c
7/4      dns-sj3.cisco.c*  cisco.com
         dns-sj4.cisco.c
7/5      dns-sj3.cisco.c*  cisco.com
         dns-sj4.cisco.c
(*) : Primary

Port      CallManagerState  DSP-Type
-----
7/1      registered        C549
7/2      registered        C549
7/3      registered        C549
7/4      registered        C549
7/5      registered        C549

Port      NoiseRegen  NonLinearProcessing
-----
7/1      enabled    enabled
7/2      enabled    enabled
7/3      enabled    enabled
7/4      enabled    enabled
7/5      enabled    enabled
Console>

```

This example shows how to display voice port information without displaying the IP address in DNS name format:

```

Console> show port voice noalias
Port  Name              Status      Vlan      Duplex  Speed  Type
-----
7/1   connected         100        full     1 T1
7/2   notconnect       100        full     1 T1
7/3   connected         100        full     1 T1
7/4   connected         100        full     1 T1
7/5   notconnect       100        full     1 T1

Port      DHCP      MAC-Address      IP-Address      Subnet-Mask
-----
7/1      disable  00-e0-b0-ff-31-c0  10.34.10.11     255.255.254.0
7/2      disable  00-e0-b0-ff-31-c1  10.34.10.12     255.255.254.0
7/3      disable  00-e0-b0-ff-31-c2  10.34.10.13     255.255.254.0
7/4      disable  00-e0-b0-ff-31-c3  10.34.10.14     255.255.254.0
7/5      disable  00-e0-b0-ff-31-c4  10.34.10.15     255.255.254.0

Port      Call-Manager(s)  DHCP-Server      TFTP-Server      Gateway
-----
7/1      10.34.16.10*    -                10.34.1.11       10.34.10.1
         10.34.1.11
7/2      10.34.16.10*    -                10.34.1.11       10.34.10.1
         10.34.1.11
7/3      10.34.16.10*    -                10.34.1.11       10.34.10.1
         10.34.1.11
7/4      10.34.16.10*    -                10.34.1.11       10.34.10.1
         10.34.1.11
7/5      10.34.1.11*     -                10.34.1.11       10.34.10.1
         10.34.16.10
         10.34.42.11

```

(\*):Primary

Port	DNS-Server(s)	Domain
7/1	171.68.10.70* 171.68.10.140	cisco.com
7/2	171.68.10.70* 171.68.10.140	cisco.com
7/3	171.68.10.70* 171.68.10.140	cisco.com
7/4	171.68.10.70* 171.68.10.140	cisco.com
7/5	171.68.10.70* 171.68.10.140	cisco.com

(\*):Primary

Port	CallManagerState	DSP-Type
7/1	registered	C549
7/2	registered	C549
7/3	registered	C549
7/4	registered	C549
7/5	registered	C549

Port	NoiseRegen	NonLinearProcessing
7/1	enabled	enabled
7/2	enabled	enabled
7/3	enabled	enabled
7/4	enabled	enabled

#### Related Commands

**set port voice interface dhcp**  
**show port voice fdl**  
**show port voice interface**

# show port voice active

Use the **show port voice active** command to display active call information on a port.

```
show port voice active [mod/port] [all | call | conference | transcode] [ipaddr]
```

Syntax Description	
<i>mod/port</i>	(Optional) Number of the module and port on the module.
<b>all</b>	(Optional) Displays all calls (regular calls, conference calls, and transcoding calls) in the system.
<b>call</b>	(Optional) Displays call information for the 24-port FXS analog interface and the 8-port T1/E1 PSTN interface modules.
<b>conference</b>	(Optional) Displays call information for the 8-port T1/E1 PSTN interface module configured for conferencing.
<b>transcode</b>	(Optional) Displays call information for the 8-port T1/E1 PSTN interface module configured for transcoding.
<i>ipaddr</i>	(Optional) Remote IP address.

**Defaults** The default is all active calls are displayed.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The information displayed when using the **show port voice active** command is not available through the supervisor engine SNMP agent.

The **call** keyword is supported by the 24-port FXS analog interface and the 8-port T1/E1 PSTN interface modules.

The **conference** and **transcode** keywords are supported by the 8-port T1/E1 PSTN interface module.

You can use the optional *mod* or *mod/port* variables to display calls that belong to the specified module or port in detailed format.

There are up to eight calls per port for the 8-port T1/E1 ISDN PRI services-configured module but only one call per port for the 24-port FXS analog station interface services-configured module.

The *ipaddr* option displays one specific call for the specified IP address. You can also use an IP alias.

This command is not supported by the NAM.

**Examples**

This example shows how to display all calls (regular calls, conference calls, and transcoding calls) in the system:

```

Console> show port voice active
Port  Type          Total Conference-ID/ Party-ID IP-Address
                Transcoding-ID
-----
 6/3  transcoding    1    2                12    192.1.1.12
                10    10.6.106.101
 8/2  call            1    -                -    123.46.1.100
 8/5  call            1    -                -    123.46.1.101
 8/7  conferencing   1    1                8     192.1.1.5
                7     123.45.1.52
                9     192.1.1.14

Total: 3
Console> (enable)

```

This example shows how to display regular calls:

```

Console> (enable) show port voice active call
Port  Total IP-Address
-----
 8/2  1     123.46.1.100
 8/5  1     123.46.1.101

Total: 2 calls
Console> (enable)

```

This example shows the output display for the 8-port T1/E1 PSTN interface module configured for transcoding:

```

Console> (enable) show port voice active transcode
Port  Total Transcoding-ID Party-ID IP-Address
-----
 6/3  1     2                12    192.1.1.12
                10    10.6.106.101

Total: 1 transcoding session
Console> (enable)

```

This example shows the output display for the 8-port T1/E1 PSTN interface module configured for conferencing:

```

Console> (enable) show port voice active conference
Port  Total Conference-ID Party-ID IP-Address
-----
 8/7  1     1                8     192.1.1.5
                7     123.45.1.52
                9     192.1.1.14

Total: 1 conferencing session
Console> (enable)

```

This example shows how to display calls for a specified port:

```

Console> show port voice active 3/2
Port 3/2:
Channel #1:
  Remote IP address      : 165.34.234.111
  Remote UDP port       : 124
  Call state             : Ringing
  Codec Type            : G.711
  Coder Type Rate       : 35243
  Tx duration           : 438543 sec
  Voice Tx duration     : 34534 sec
  ACOM Level Current    : 123213
  ERL Level             : 123 dB

```

```
show port voice active
```

```

Fax Transmit Duration           : 332433
Hi Water Playout Delay         : 23004 ms
Logical If index               : 4
Low water playout delay       : 234 ms
Receive delay                  : 23423 ms
Receive bytes                  : 2342342332423
Receive packets                : 23423423402384
Transmit bytes                 : 23472377
Transmit packets               : 94540
Channel #2:
Remote IP address              : 165.34.234.112
Remote UDP port                : 125
Call state                     : Ringing
Codec Type                     : G.711
Coder Type Rate                : 35243
Tx duration                    : 438543 sec
Voice Tx duration              : 34534 sec
ACOM Level Current             : 123213
ERL Level                      : 123 dB
Fax Transmit Duration         : 332433
Hi Water Playout Delay         : 23004 ms
Logical If index               : 4
Low water playout delay       : 234 ms
Receive delay                  : 23423 ms
Receive bytes                  : 2342342332423
Receive packets                : 23423423402384
Transmit bytes                 : 23472377
Transmit packets               : 94540
Port 3/7 :
Conference ID: 1
Party ID: 8
  Remote IP address            : 192.1.1.5
  UDP Port                     : 28848
  Codec Type                   : G729 B CS ACELP VAD
  Packet Size (ms)             : 20
Party ID: 7
  Remote IP address            : 123.45.1.52
  UDP Port                     : 28888
  Codec Type                   : G711 ULAW PCM
  Packet Size (ms)             : 20
Party ID: 9
  Remote IP address            : 192.1.1.14
  UDP Port                     : 28898
  Codec Type                   : G711 ULAW PCM
  Packet Size (ms)             : 20
Total: 2
Console>

```

This example shows the output display for a specified IP address on a 24-port FXS analog interface module or the 8-port T1/E1 PSTN interface module:

```

Console> show port voice active 3/2 171.69.67.91
Remote IP address              : 171.69.67.91
Remote UDP port                : 125
Call state                     : Ringing
Codec Type                     : G.711
Coder Type Rate                : 35243
Tx duration                    : 438543 sec
Voice Tx duration              : 34534 sec
ACOM Level Current             : 123213
ERL Level                      : 123 dB
Fax Transmit Duration         : 332433
Hi Water Playout Delay         : 23004 ms
Logical If index               : 4

```

```
Low water playout delay      : 234 ms
Receive delay                : 23423 ms
Receive bytes                : 2342342332423
Receive packets              : 23423423402384
Transmit bytes                : 23472377
Transmit packets             : 94540
Console>
```

**Related Commands**    [set port voice interface dhcp](#)

# show port voice fdl

Use the **show port voice fdl** command to display the facilities data link (FDL) statistics for the specified ports.

```
show port voice fdl [mod[/port]]
```

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

**Examples** This example shows how to display FDL information on an 8-port T1/E1 ISDN PRI services-configured module:

```
Console> (enable) show port voice fdl 7/1-3
Port  ErrorEvents      ErroredSecond      SeverlyErroredSecond
      Last 15' Last 24h Last 15' Last 24h Last 15' Last 24h
-----
7/1  17      18      19      20      21      22
7/2  17      18      19      20      21      22
7/3  17      18      19      20      21      22

Port  FailedSignalState FailedSignalSecond
      Last 15' Last 24h Last 15' Last 24h
-----
7/1  37      38      39      40
7/2  37      38      39      40
7/3  37      38      39      40

Port          LES              BES              LCV
      Last 15' Last 24h Last 15' Last 24h Last 15' Last 24h
-----
7/1  41      48      49      50      53      54
7/2  41      48      49      50      53      54
7/3  41      48      49      50      53      54
Console> (enable)
```

Table 2-71 describes the possible fields (depending on the port type queried) in the **show port voice fdl** command output.

*Table 2-71 show port voice fdl Command Output Fields*

Field	Description
ErrorEvents	Count of errored events.
ErroredSecond	Count of errored seconds.
SeverelyErroredSecond	Count of severely errored seconds.
FailedSignalState	Count of failed signal state errors.
FailedSignalSecond	Count of failed signal state.
LES	Line errored seconds detected.
BES	Bursty errored seconds detected.
LCV	Line code violation seconds detected.

**Related Commands**    [show port voice](#)

# show port voice interface

Use the **show port voice interface** command to display the port voice interface configuration.

**show port voice interface** [*mod*[/*port*]]

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** This command is not supported by the NAM.

**Examples** This example shows how to display voice interface information for a specific module:

```

Console> show port voice interface 5
Port      DHCP      MAC-Address      IP-Address      Subnet-Mask
-----
5/1-24    disable   00-10-7b-00-13-ea 10.6.15.158     255.255.255.0

Port      Call-Manager(s)  DHCP-Server      TFTP-Server      Gateway
-----
5/1-24    10.6.15.155      -                 10.6.15.155      -

Port      DNS-Server(s)    Domain
-----
5/1-24    12.2.2.1*        cisco.cisco.com
          7.7.7.7
(*) : Primary
Console>

```

**Related Commands**

- [set port voice interface dhcp](#)
- [show port voice](#)
- [show port voice active](#)

# show proc

Use the **show proc** command to display CPU, memory allocation, and process utilization information.

**show proc [cpu | mem]**

Syntax Description	cpu	(Optional) Specifies CPU information.
	mem	(Optional) Specifies memory allocation information.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can enter this command only in privileged mode.

If you do not specify **cpu** or **mem**, process information is displayed. The **mem** keyword allows you to display memory allocation information, such as how much each process has allocated and freed.

**Examples** This example shows how to display CPU information:

```
Console> (enable) show proc cpu
(W)CPU utilization for five seconds: 1.0%; one minute: 1.0%; five minutes: 1.0%

PID Runtime(ms) Invoked uSecs 5Sec 1Min 5min TTY Process
0 0 0 0 99.10% 99.0 % 99.0 % 0 idle
1 1 36 1000 0.0 % 0.0 % 0.0 % 0 Flash MIB Updat
2 1342 2846 460000 0.0 % 0.0 % 0.0 % 0 SynDiags
3 730172 4440594 400000 0.0 % 0.0 % 0.0 % 0 SynConfig
4 33752 424120 1000 0.0 % 0.0 % 0.0 % 0 Statuspoll
5 7413 44916 1000 0.0 % 0.0 % 0.0 % 0 SWPoll164bCnt
6 9568 15889836 1000 0.0 % 0.0 % 0.0 % 0 SL_TASK
7 746 636118 105000 0.0 % 0.0 % 0.0 % 0 RedundantTask
Console> (enable)
```

This example shows how to display process utilization information:

```
Console> (enable) show proc
PID Q T PC Runtime(ms) Invoked uSecs Stacks TTY Process
0 1 rd 0x80407b10 0 0 0 1640/6144 0 idle
1 65376 st 0x80407d8c 1 36 1000 1188/6144 0 Flash MIB
Upda
2 2 st 0x80407d8c 1342 2846 460000 3160/6144 0 SynDiags
3 1 rd 0x80407d8c 729979 4439406 400000 1672/6144 0 SynConfig
4 2 si 0x80407d8c 33739 424007 1000 1572/6144 0 Statuspoll
5 4 si 0x80407d8c 7413 44916 1000 1888/6144 0 SWPoll164bCnt
6 2 si 0x80407d8c 9565 15885713 1000 1096/6144 0 SL_TASK
7 2 si 0x80407d8c 746 635948 105000 1192/6144 0 RedundantTask
```

## show proc

```

Memory Pool Utilization
Memory Pool Type 1Min  5Min  10Min
-----
DRAM              49%   49%   49%
FLASH            82%   82%   82%
NVRAM            49%   49%   49%
MBUF              2%    2%    2%
CLUSTER          12%   12%   12%
MALLOC           15%   15%   15%
Console> (enable)

```

This example shows how to display process information:

```
Console> (enable) show proc mem
```

```

Memory Used:  7141936
Free: 53346800
Total: 60488736

```

PID	TTY	Allocated	Freed	Holding	Process
1	-2	2928912	4544	2924368	Kernel and Idle
2	-2	160	0	160	Flash MIB Updat
3	-2	160	0	160	L2L3IntHdlr
4	-2	0	0	0	L2L3PatchRev
5	-2	288	0	288	SynDiags
6	-2	128	0	128	GenMsgHndlr
7	-2	1158560	526480	632080	SynConfig
8	-2	32	0	32	TempMon
9	-2	16	0	16	EM_garbageColle
10	-2	192	0	192	PowerMgmt
11	-2	1136	0	1136	FabricConfig
12	-2	97536	0	97536	SL_TASK
13	-2	18368	5056	13312	RedundantTask
14	-2	2384	0	2384	Status Poll
15	-2	96	0	96	SWPoll64bCnt
16	0	384	0	384	HavailTask
17	-2	10304	0	10304	SyncTask
18	-2	48	0	48	SecurityRx
19	-2	144	0	144	DeviceLinkChk
20	-2	10576	10560	16	Earl
21	-2	2768	2464	304	DTP_Rx
22	-2	280624	151680	128944	EthChnlRx
23	-2	0	0	0	llcSSTPFlood
24	-2	1584	1152	432	EthChnlConfig
25	-2	1232	0	1232	ACL
26	-2	27760	3552	24208	VaclLog
27	0	0	0	0	L3Aging
28	0	209168	0	209168	NetFlow
29	0	2688400	112	2688288	Fib
30	-2	0	0	0	Fib_bg_task
31	-2	176	0	176	ProtocolFilter
32	-2	16	0	16	telnetd
33	-2	16	0	16	tftpd
34	-2	1744	1632	112	ProtocolTimer
35	-2	96	0	96	ciscoRmonTimer
36	-2	96	0	96	ciscoUsrHistory
37	-2	112	0	112	rmonMediaIndep
38	-2	0	0	0	SnmpTraps
39	-2	0	0	0	memPoolMain
40	-2	16	0	16	Acct Send Bkg
41	-2	80	0	80	l2t_server
42	-2	144	0	144	Authenticator_S
43	-2	16	0	16	dotlx_rx

```

44      -2      16      0      16      Backend_Rx
45      -2      16      0      16      Backend_SM
46      -2     3216     2992     224     Debug Port Coun
47      -2      16      0      16      SysLogTask
48      -2     112      0      112     pinggateA
49      -2     8704     8000     704     cdpd
50      -2    124576    124416    160     cdpdtimer
51      -2     1296     1088     208     SptTimer
52      -2     2336     1120     1216    SptBpduRx
53      -2      144      0      144     SptBpduTx
54      -2      0        0        0       GL2Prot_Tunnel
55      -2      176      0      176     VtpTimer
56      -2      16      1072    4294966240 HPConfig
57      -2      96       0       96      RMON AlarmTimer
58      -2      0        0        0       sptTraps
59      -2     6128     5952     176     McastRx
60      -2      16       0       16      IGMPQuerierProc
61      -2      272      0       272     M-MLS_stats
62      -2     5808     1504     4304    M-MLS_manager
63      -2    47520    15216    32304   QoSTask
64      0     11936     0       11936   Read Stats Task
65      0      32       0       32      QDE Task
66      -2      144      0      144     EnvMon
67      -2     1120     0      1120    VlanStatsTask
70      -2      16       0       16      HPActive
71      -2      48       0       48      HPTrapMgr
143     0     57200    4208    52992   Console
144     -2    256208    29920    226288  snmpdm
145     -2      208      0       208     VtpRx
146     2252448660 68448    6864    61584   telnet146
191     -2     29360    19504    9856    AclManager

```

```

Memory Pool Utilization
Memory Pool Type 1Min  5Min  10Min
-----
DRAM              45%   45%   45%
FLASH             83%   83%   83%
NVRAM             49%   49%   49%
MBUF              2%    2%    2%
CLUSTER           11%   11%   11%
MALLOC            11%   11%   11%

```

Console> (enable)

Table 2-72 describes the possible fields in the **show proc** command outputs.

**Table 2-72 show proc Command Output Fields**

Field	Description
CPU Utilization	Sum of all the loads from all the processes running on the CPU in the last 5 seconds, 1 minute, and 5 minutes.
PID	Process ID.
Runtime	Time the process has run since initiation (in milliseconds).
Invoked	Number of times the process was invoked since initiation.
uSecs	Maximum time a process ran in a single invocation.
5sec	Amount of time this process ran on the CPU in the last 5-second interval.
1Min	Average memory pool usage over the last 1-minute interval.

*Table 2-72 show proc Command Output Fields (continued)*

Field	Description
5Min	Average memory pool usage over the last 5-minute interval.
10Min	Average memory pool usage over the last 10-minute interval.
TTY	TTY associated with the process.
Process	Name of the process.
Allocated	Amount of all the memory allocated by the process since it was initiated, including the memory previously freed up.
Freed	Amount of memory the process has freed up until now.
Holding	Amount of memory the process is currently holding.
Q	Process priority in terms of numbers. A low number means high priority.
T	State of the process (Running, we = waiting for event, st = sleeping, si = sleeping on an interval, rd = ready to run, id = idle, xx = dead/zombie).
PC	Calling PC for “show_process” function.
Stacks	Size of the stack used by the process/the total stack size allocated to the process (in bytes).

# show protocolfilter

Use the **show protocolfilter** command to list whether protocol filtering is enabled or disabled.

## **show protocolfilter**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display whether protocol filtering is enabled or disabled:

```
Console> show protocolfilter  
Protocol filtering is enabled on this switch.  
Console>
```

---

**Related Commands** [set port protocol](#)

# show pvlan

Use the **show pvlan** command to show the configuration for a given private VLAN.

```
show pvlan [vlan | primary | isolated | community | twoway-community]
```

Syntax Description		
	<i>vlan</i>	(Optional) Number of the private VLAN.
	<b>primary</b>	(Optional) Displays the primary private VLANs.
	<b>isolated</b>	(Optional) Displays the isolated private VLANs.
	<b>community</b>	(Optional) Displays the community private VLANs.
	<b>twoway-community</b>	(Optional) Displays the bidirectional community private VLANs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** A **twoway-community** private VLAN is a bidirectional community private VLAN that carries traffic among community ports and to and from community ports to and from the MSFC.

**Examples** This example shows how to display the status for VLAN 10:

```
Console> show pvlan 10
Primary Secondary Secondary-Type Ports
-----
10      20      isolated      6/1
Console>
```

This example shows how to display the status for all VLANs set as primary:

```
Console> show pvlan primary
Primary Secondary Secondary-Type Ports
-----
10      20      isolated      6/1
11      21      isolated      6/2
30      -       -             -
Console>
```

This example shows how to display the status for all VLANs set as isolated:

```
Console> show pvlan isolated
Primary Secondary Secondary-Type Ports
-----
10      20      isolated      6/1
11      21      isolated      6/2
-       31      isolated
Console>
```

Console>

This example shows how to display the status for all VLANs set as community:

```
Console> show pvlan community
Primary Secondary Secondary-Type Ports
-----
7          902          community      2/4-6
Console>
```

#### Related Commands

- [clear config pvlan](#)
- [clear pvlan mapping](#)
- [clear vlan](#)
- [set pvlan](#)
- [set pvlan mapping](#)
- [set vlan](#)
- [show pvlan mapping](#)
- [show vlan](#)

# show pvlan capability

Use the **show pvlan capability** command to determine whether or not a port can be made a private port.

**show pvlan capability** *mod/port*

Syntax Description	<i>mod/port</i>	Number of the module and the port on the module.
--------------------	-----------------	--

Defaults	This command has no default settings.	
----------	---------------------------------------	--

Command Types	Switch command.	
---------------	-----------------	--

Command Modes	Normal.	
---------------	---------	--

Examples	This example shows how to determine if a port can be made into a private VLAN:	
----------	--	--

```
Console> (enable) show pvlan capability 5/20
Ports 5/13 - 5/24 are in the same ASIC range as port 5/20.
```

```
Port 5/20 can be made a private vlan port.
Console> (enable)
```

These examples show the output if a port cannot be made into a private VLAN:

```
Console> (enable) show pvlan capability 3/1
Port 3/1 cannot be made a private vlan port due to:
-----
Promiscuous ports cannot be made private vlan ports.
Console> (enable)
```

```
Console> (enable) show pvlan capability 5/1
Ports 5/1 - 5/12 are in the same ASIC range as port 5/1.
```

```
Port 5/1 cannot be made a private vlan port due to:
-----
Trunking ports are not Private Vlan capable.
Conflict with Promiscuous port(s) : 5/2
Console> (enable)
```

```
Console> (enable) show pvlan capability 5/2
Ports 5/1 - 5/12 are in the same ASIC range as port 5/2.
```

```
Port 5/2 cannot be made a private vlan port due to:
-----
Promiscuous ports cannot be made private vlan ports.
Conflict with Trunking port(s) : 5/1
Console> (enable)
```

```
Console> (enable) show pvlan capability 5/3
Ports 5/1 - 5/12 are in the same ASIC range as port 5/3.
```

```
Port 5/3 cannot be made a private vlan port due to:
-----
Conflict with Promiscuous port(s) : 5/2
Conflict with Trunking port(s) : 5/1
Console> (enable)

Console> (enable) show pvlan capability 15/1
Port 15/1 cannot be made a private vlan port due to:
-----
Only ethernet ports can be added to private vlans.
Console> (enable)
```

---

**Related Commands**

**clear config pvlan**  
**clear pvlan mapping**  
**clear vlan**  
**set pvlan**  
**set pvlan mapping**  
**set vlan**  
**show pvlan capability**  
**show pvlan mapping**  
**show vlan**

# show pvlan mapping

Use the **show pvlan mapping** command to show the private VLAN mappings configured on promiscuous ports.

```
show pvlan mapping [private_vlan | mod/port]
```

Syntax Description	
<i>private_vlan</i>	(Optional) Number of the private VLAN.
<i>mod/port</i>	(Optional) Number of the module and port.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the private VLAN mapping by port:

```
Console> show pvlan mapping
Port Primary Secondary
-----
 6/3 10      20
Console>
```

This example shows how to display the private VLAN mapping for a specific VLAN:

```
Console> show pvlan mapping 10
Primary Secondary Ports
-----
10      20      6/3
Console>
```

This example shows how to display the private VLAN mapping for a specific port:

```
Console> show pvlan mapping 6/3
Port Primary Secondary
-----
 6/3 10      20
Console>
```

This example shows the results when no VLANs are mapped:

```
Console> show pvlan mapping
Port Primary Secondary
-----
No Private Vlan Mappings configured.
Console>
```

---

**Related Commands**

**clear config pvlan**  
**clear pvlan mapping**  
**clear vlan**  
**set pvlan**  
**set pvlan mapping**  
**set vlan**  
**show pvlan mapping**  
**show vlan**

# show qos acl editbuffer

Use the **show qos acl editbuffer** command to display ACL names in the edit buffer.

**show qos acl editbuffer**

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** Enter the **show qos acl editbuffer** command to display the committed access lists that you configured. The information is helpful when you are adding or deleting ACEs.

**Examples** This example shows how to display QoS ACL edit buffer contents:

```
Console> (enable) show qos acl editbuffer
ACL                               Type Status
-----
ip1                                IP   Committed
ipx1                               IPX  Committed
mac1                               MAC  Committed
```

**Related Commands** [commit](#)  
[rollback](#)

# show qos acl info

Use the **show qos acl info** command to display QoS ACL information.

```
show qos acl info default-action {ip | ipx | mac | all}
```

```
show qos acl info runtime {acl_name | all}
```

```
show qos acl info config {acl_name | all} [editbuffer [editbuffer_index]]
```

Syntax Description	
<b>default-action</b>	Displays default action (using the <b>set qos acl default-action</b> command) for packets that do not match any entry in an access list.
<b>ip</b>	Displays QoS IP ACL information.
<b>ipx</b>	Displays all QoS IPX ACL information.
<b>mac</b>	Displays all QoS MAC ACL information.
<b>all</b>	Displays all QoS ACL information.
runtime	Displays runtime ACE information.
acl_name	Name of the ACL to be displayed.
config	Displays configured ACE information.
<b>editbuffer</b>	(Optional) Displays edit buffer information.
editbuffer_index	(Optional) Position of the ACE in the ACL.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to display all ACL default configurations:

```
Console> (enable) show qos acl info default-action all
set qos acl default-action
-----
ip dscp 7 my1 my2
ipx dscp 0
mac dscp 0
Console> (enable)
```

This example shows how to display edit buffer information for a specific ACL:

```
Console> (enable) show qos acl info my_ip_acl editbuffer
set qos acl ip my_ip_acl
-----
1. set qos acl ip my_ip_acl trustdscp microflow my-micro tcp 1.2.3.4 255.0.0.0
eq port 21 172.20.20.1 255.255.255.0
```

```

2. set qos acl ip my_ip_acl trustdscp microflow my-micro aggregate agg tcp
173.22.3.4 255.0.0.0 eq port 19 173.22.20.1 255.255.255.0 tos 5
ACL status: Not Committed
Console> (enable)

```

This example shows how to display information for a specific ACL:

```

Console> (enable) show qos acl info my_ip_acl
set qos acl ip my_ip_acl
-----
1. trust-dscp microflow my-micro tcp 1.2.3.4 255.0.0.0 eq
port 21 172.20.20.1 255.255.255.0 tos 5
2. trust-dscp microflow my-micro aggregate agg tcp
173.22.3.4 255.0.0.0 eq port 19 173.22.20.1 255.255.255.0 tos 5
Console> (enable)

```

This example shows how to display runtime information for all ACLs:

```

Console> (enable) show qos acl info runtime all
set qos acl IP _Cops_1
-----
1. dscp 0 any

set qos acl IP _Cops_2
-----
1. dscp 8 ip 10.0.0.0 0.255.255.255 10.0.0.0 0.255.255.255
2. dscp 16 tcp any any
3. dscp 24 udp any any
Console> (enable)

```

#### Related Commands

[clear qos policer](#)  
[set qos acl default-action](#)  
[set qos policer](#)

# show qos acl map

Use the **show qos acl map** command to display the ACL mapping information.

```
show qos acl map { config | runtime } { acl_name | mod/port | vlan | all }
```

Syntax Description		
	<b>config</b>	Displays NVRAM QoS information.
	<b>runtime</b>	Displays QoS runtime information.
	<i>acl_name</i>	Name of the list.
	<i>mod/port</i>	Number of the module and the port.
	<i>vlan</i>	VLAN list.
	<b>all</b>	Displays information regarding all ACLs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can enter the **config** keyword to display information that was configured through the CLI and saved in NVRAM, regardless of the current runtime information.



**Note**

When a switchover occurs, you cannot view the ACLs and policers deployed using COPS-DS until the COPS-DS client on the new active supervisor engine establishes connection to the PDP and downloads the QoS policy. The runtime fields in the output display will be blank until QoS policy is downloaded to the new active supervisor engine.

**Examples** This example shows how to display information for all ACLs:

```
Console> show qos acl map all
ACL name   Vlan #       Ports
-----
web-acc    1,4-7
isp1       2            1/1
Console>
```

This example shows how to display information for a specific VLAN:

```
Console> show qos acl map 1
Vlan  ACL name
----  -
1     web-acc
Console>
```

**show qos acl map**

This example shows how to display information for a specific ACL:

```
Console> show qos acl map isp1
```

ACL name	Vlan #	Ports
isp1	2	1/1

```
Console>
```

**Related Commands**

**clear qos acl**  
**set qos acl map**

# show qos acl resource-usage

Use the **show qos acl resource-usage** command to display ACL management information.

**show qos acl resource-usage**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display ACL management information:

```
Console> (enable) show qos acl resource-usage
ACL resource usage:
Label:0%
Logical Operation Unit:0%
TCAM mask:0%
TCAM value:0%
Console> (enable)
```

---

**Related Commands** [commit](#)  
[rollback](#)

# show qos bridged-packet-policing

Use the **show qos bridged-packet-policing** command to display the VLAN-bridged packet-policing status.

```
show qos bridged-packet-policing {config | runtime} [vlan]
```

Syntax Description	
<b>config</b>	Displays NVRAM configuration.
<b>runtime</b>	Displays the run time configuration.
<i>vlan</i>	(Optional) Number of the VLAN.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** If you do not specify a VLAN number, the status of all VLANs are displayed.

**Examples** This example shows how to display the NVRAM configuration of a specific VLAN:

```
Console> show qos bridged-microflow-policing config 1
QoS microflow policing is disabled for bridged packets on vlan 1.
Console>
```

This example shows how to display the NVRAM configuration of all VLANs:

```
Console> show qos bridged-microflow-policing config
QoS microflow policing is disabled for bridged packets on vlan(s) 1-1000,1025-40
94.
Console>
```

**Related Commands**

- [clear qos policer](#)
- [set qos bridged-microflow-policing](#)
- [set qos policer](#)

# show qos info

Use the **show qos info** command to display QoS-related information for a specified port.

```
show qos info { runtime | config } { mod/port }
```

```
show qos info config port_type { tx | rx }
```

<b>Syntax Description</b>	<b>runtime</b>	Shows the current QoS runtime information.
	<b>config</b>	Displays NVRAM QoS configuration.
	<i>mod/port</i>	Number of the module and port.
	<i>port_type</i>	Port type; valid values are <b>2q2t</b> , <b>1p3q1t</b> , <b>1p2q2t</b> , <b>1p2q1t</b> for transmit and <b>1q4t</b> , <b>1p1q4t</b> , and <b>1p1q0t</b> , <b>1p1q8t</b> for receive. See the “Usage Guidelines” section for additional information.
	<b>tx</b>	Displays transmit port information.
	<b>rx</b>	Displays receive port information.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** You can enter the **show qos info runtime mod/port** command to view the currently used values in the hardware or the **show qos info runtime mod/port** command to view the values that have been configured administratively (present in NVRAM). The outputs differ when QoS has been disabled. When you disable QoS, the values set on all the ports are different from the values present in NVRAM. When you enable QoS, the values in NVRAM are used to program the hardware.

The display of **show qos info runtime mod/port** shows both the absolute values and the percentages you specified for the drop thresholds, queue sizes, and WRR. However, the absolute values may not exactly match the percentages specified due to the granularity of permitted settings in hardware.

The number preceding the **t** letter in the *port\_type* value (for example, **2q2t**, **1p2q2t**, **1q4t**, or **1p1q4t**) determines the number of threshold values the hardware supports. For example, with **2q2t** and **1p2q2t**, the number of thresholds specified is two; with **1q4t** and **1p1q4t**, the number of thresholds specified is four. Due to the granularity of programming the hardware, the values set in hardware will be close approximations of the values provided.

The number preceding the **q** letter in the *port\_type* value determines the number of the queues that the hardware supports. For example, with **2q2t** and **1p2q2t**, the number of queues specified is two; with **1q4t** and **1p1q4t**, the number of queues specified is four. The system defaults for the transmit queues attempt to keep the maximum latency through a port at a maximum of 10 ms.

The number preceding the **p** letter in the *port\_type* value (for example, **1p2q2t** and **1p1q4t**) determines the threshold in the priority queue.

The **1p2q1t** and **1p1q8t** port types are not supported.



#### Note

When a switchover occurs, you cannot view the ACLs and policers deployed using COPS-DS until the COPS-DS client on the new active supervisor engine establishes connection to the PDP and downloads the QoS policy. The runtime fields in the output display will be blank until QoS policy is downloaded to the new active supervisor engine.

#### Examples

This example shows how to display QoS-related NVRAM-transmit threshold information:

```
Console> (enable) show qos info config 2q2t tx
QoS setting in NVRAM for 2q2t transmit:
QoS is disabled
  CoS = 0
Queue and Threshold Mapping:
Queue Threshold CoS
-----
1      1      0 1
1      2      2 3
2      1      4 5
2      2      6 7
Tx drop thresholds:
Queue #  Thresholds - percentage (abs values )
-----
1          40% 100%
2          40% 100%
Queue Sizes:
Queue #  Sizes - percentage (abs values )
-----
1          80%
2          20%
WRR Configuration:
Ports have transmit ratios between queue 1 and 2 of
100:256
Console> (enable)
```

This example shows how to display QoS-related NVRAM receive-threshold information:

```
Console> (enable) show qos info config 1p1q4t rx
QoS setting in NVRAM for 1p1q4t receive:
QoS is disabled
Queue and Threshold Mapping for 1p1q4t (rx):
Queue Threshold CoS
-----
1      1      0
1      2      2 3
1      3      4 5
1      4      1 6 7
2      1
Rx drop thresholds:
Queue #  Thresholds - percentage (abs values )
-----
1          50% 60% 80% 100%
Console> (enable)
```

This example shows how to display all QoS-related NVRAM threshold information:

```
Console> (enable) show qos info config 2q2t tx
QoS setting in NVRAM for 2q2t transmit:
QoS is enabled
Queue and Threshold Mapping:
```

```

Queue Threshold CoS
-----
1    1    0 1
1    2    2 3
2    1    4 5
2    2    6 7
Tx drop thresholds:
Queue #  Thresholds - percentage (abs values )
-----
1        40% 100%
2        40% 100%
Queue Sizes:
Queue #  Sizes - percentage (abs values )
-----
1        80%
2        20%
WRR Configuration:
Ports with 2q2t have ratio of 100:255 between transmit queue 1 and 2
Console> (enable)

```

This example shows how to display the current QoS runtime information:

```

Console> (enable) show qos info runtime 1/1
Run time setting of QoS:
QoS is enabled on 2/1
Port 2/1 has 2 transmit queue with 2 drop thresholds (2q2t).
Port 2/1 has 1 receive queue with 4 drop thresholds (1q4t).
The qos trust type is set to trust-cos.
      CoS = 0
Queue and Threshold Mapping:
Queue Threshold CoS
-----
1    1    0 1
1    2    2 3
2    1    4 5
2    2    6 7
Rx drop thresholds:
Queue #  Thresholds - percentage (abs values )
-----
1        50% (38912 bytes) 60% (46688 bytes) 80% (62240 bytes) 100% (73696
bytes)
Tx drop thresholds:
Queue #  Thresholds - percentage (abs values )
-----
1        40% (144224 bytes) 100% (360416 bytes)
2        40% (32864 bytes) 100% (77792 bytes)
Queue Sizes:
Queue #  Sizes - percentage (abs values)
-----
1        80% (360416 bytes)
2        20% (81888 bytes)
WRR Configuration:
Ports with speed 1000Mbps have ratio of 100:255 between transmit queue 1
and 2 (25600:65280 bytes)
Console> (enable)

```

This example shows how to display the current QoS configuration information:

```

Console> (enable) show qos info config 8/1
QoS setting in NVRAM:
QoS is disabled
Port 8/1 has 3 transmit queue with 2 drop thresholds (1p2q2t).
Port 8/1 has 2 receive queue with 4 drop thresholds (1p1q4t).
ACL attached:

```

```

The qos trust type is set to untrusted.
  CoS = 0
Queue and Threshold Mapping for lp2q2t (tx):
Queue Threshold CoS
-----
1      1      0 1
1      2      2 3
2      1      4 5
2      2      7
3      1      6
Queue and Threshold Mapping for lp1q4t (rx):
Queue Threshold CoS
-----
1      1      0
1      2      2 3
1      3      4 5
1      4      1 6 7
2      1
Rx drop thresholds:
Rx drop thresholds are disabled for untrusted ports.
Queue #  Thresholds - percentage (abs values )
-----
1          50% 60% 80% 100%
Tx drop thresholds:
Tx drop-thresholds feature is not supported for this port type.
Tx WRED thresholds:
Queue #  Thresholds in percentage ( in abs values )
-----
1          80% 100%
2          80% 100%
Queue Sizes:
Queue #  Sizes - percentage (abs values )
-----
1          70%
2          15%
3          15%
WRR Configuration of ports with speed 1000Mbps:
Queue #  Ratios (abs values )
-----
1          100
2          255
Console> (enable)

```

This example shows another display of the current QoS configuration information:

```

Console> (enable) show qos info config lp2q2t tx
QoS setting in NVRAM for lp2q2t transmit:
QoS is enabled
Queue and Threshold Mapping:
Tx WRED thresholds:
Queue #  Thresholds - percentage
-----
1          0%:60% 0%:90%
2          0%:50% 0%:90%
Tx queue size ratio:
Queue #  Sizes - percentage
-----
1          70%
2          15%
3          15%
WRR Configuration of ports with lp2q2t:
Queue #  Ratios
-----
1          5

```

```
2          255
Console> (enable)
```

**Related Commands** [set qos](#)

# show qos mac-cos

Use the **show qos mac-cos** command to display the currently configured QoS-related information for the MAC address and VLAN pair.

```
show qos mac-cos dest_mac [vlan] [config]
```

```
show qos mac-cos all [config]
```

Syntax Description	
<i>dest_mac</i>	MAC address of the destination host.
<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005.
<b>config</b>	(Optional) Displays NVRAM QoS configuration.
<b>all</b>	Specifies all MAC address and VLAN pairs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** You can enter the **show qos mac-cos** command to display the currently configured QoS-related information.

You can enter the **config** keyword to display information that was configured through the CLI and saved in NVRAM, regardless of the current runtime information.

**Examples** This example shows how to display currently configured QoS-related information for all MAC address and VLAN pairs:

```
Console> (enable) show qos mac-cos all
VLAN  Dest MAC          CoS
----  -
1      01-02-03-04-05-06    2
9      04-05-06-07-08-09    3
Console> (enable)
```

This example shows how to display currently configured QoS-related information for a specific MAC address:

```
Console> (enable) show qos mac-cos 01-02-03-04-05-06
VLAN  Dest MAC          CoS
----  -
1      01-02-03-04-05-06    2
Console> (enable)
```

**Related Commands**

[clear qos mac-cos](#)  
[set qos mac-cos](#)

# show qos maps

Use the **show qos maps** command to display the mapping of different maps.

```
show qos maps {config | runtime} [[cos-dscp-map | ipprec-dscp-map | dscp-cos-map |
  policed-dscp-map [normal-rate | excess-rate]]
```

Syntax Description	<b>config</b>	Displays NVRAM QoS configuration.
	<b>runtime</b>	Displays current QoS configuration.
	<b>cos-dscp-map</b>	(Optional) Specifies the CoS-to-DSCP map.
	<b>ipprec-dscp-map</b>	(Optional) Specifies the IP precedence-to-DSCP map.
	<b>dscp-cos-map</b>	(Optional) Specifies the DSCP-to-CoS map.
	<b>policed-dscp-map</b>	(Optional) Specifies the marked-down map.
	<b>normal-rate</b>	(Optional) Specifies normal rate.
	<b>excess-rate</b>	(Optional) Specifies excess rate.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** You can enter the **config** keyword to display information that was configured through the CLI and saved in NVRAM, regardless of the current runtime information.

If you do not specify an option, all maps are displayed.



**Note**

When a switchover occurs, you cannot view the ACLs and policers deployed using COPS-DS until the COPS-DS client on the new active supervisor engine establishes connection to the PDP and downloads the QoS policy. The runtime fields in the output display will be blank until QoS policy is downloaded to the new active supervisor engine.

**Examples** This example shows how to display the cos-dscp-map map:

```
Console> show qos maps cos-dscp-map
CoS - DSCP map:
CoS   DSCP
---   -
0     10
...
7     52
Console>
```

This example shows how to display the ipprec-dscp-map map:

```
Console> show qos maps ipprec-dscp-map
IP-Precedence - DSCP map:
IP-Prec  DSCP
-----  -----
0         1
...
7         52
Console>
```

This example shows how to display the dscp-cos-map map:

```
Console> show qos maps dscp-cos-map
DSCP - CoS map:
DSCP          CoS
-----  -----
34-40,60      0
...
50            7
Console>
```

This example shows how to display the policed-dscp-map map:

```
Console> show qos maps policed-dscp-map
DSCP policed-dscp map:
In-profile DSCP  Policed DSCP
-----  -----
0-20            0
Console>
```

This example shows how to display all maps:

```
Console> show qos maps
CoS - DSCP map:
CoS  DSCP
---  -----
0    10
...
7    52

IP-Precedence - DSCP map:
IP-Prec  DSCP
-----  -----
0         1
...
7         52

IP-Precedence - CoS map:
IP-Prec  CoS
-----  -----
0         0
...
7         7

DSCP - CoS map:
DSCP          CoS
-----  -----
34-40,60      0
...
50            7
```

## show qos maps

```
DSCP policed-dscp map:
In-profile DSCP   Policed DSCP
-----
0-20              0
Console>
```

This example shows how to display normal-rate maps:

```
Console> (enable) show qos maps config policed-dscp-map normal-rate
DSCP - Policed DSCP map normal-rate:
DSCP ----- Policed DSCP -----
                                0, 24-63 0
                                1 1
                                2 2
                                3 3
                                4 4
                                5 5
                                6 6
                                7 7
                                8 8
                                9 9
                                10 10
                                11 11
                                12 12
                                13 13
                                14 14
                                15 15
                                16 16
                                17 17
                                18 18
                                19 19
                                20 20
                                21 21
                                22 22
                                23 23
Console>
```

### Related Commands

```
clear qos cos-dscp-map
clear qos policed-dscp-map
set qos map
```

# show qos policer

Use the **show qos policer** command to display microflow or aggregate policers currently configured.

```
show qos policer { config | runtime } { microflow [policer_name] | aggregate [policer_name] | all }
```

Syntax Description		
	<b>config</b>	Displays NVRAM QoS configuration.
	<b>runtime</b>	Shows the current QoS runtime information.
	<b>microflow</b>	Specifies microflow policing information.
	<b>aggregate</b>	Specifies aggregate policing rule information.
	<i>policer_name</i>	(Optional) Name of the policer.
	<b>all</b>	Specifies all policing information.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** When a switchover occurs, you cannot view the ACLs and policers deployed using COPS-DS until the COPS-DS client on the new active supervisor engine establishes connection to the policy decision point (PDP) and downloads the QoS policy. The runtime fields in the output display will be blank until QoS policy is downloaded to the new active supervisor engine.

**Examples** This example shows how to display all currently configured policing information:

```
Console> show qos policer config all
QoS microflow policers:
Microflow name           Avg. rate Burst size Exceed action
-----
mic                       55       64 drop
                          ACL attached
-----

QoS aggregate policers:
No aggregate policer found.
Console>
```

This example shows how to display microflow policing information:

```
Console> show qos policer config microflow
QoS microflow policers:
Microflow name           Average rate   Burst size   Exceed action
-----
my-micro                 1000          2000        drop
Microflow name           ACL attached
```

## ■ show qos policer

```
-----
my-micro          my-acl
Console>
```

This example shows how to display aggregate policing information:

```
Console> show qos policer config aggregate
QoS aggregate policers:
No aggregate policer found.
Console>
```

This example shows how to display aggregate policing information for a specific policer:

```
Console> (enable) show qos policer config aggregate
QoS aggregate policers:
Aggregate name          Normal rate (kbps)  Burst size (kb)  Normal action
-----
test2                   64                 100             policed-dscp
                       Excess rate (kbps)  Burst size (kb)  Excess action
-----
                       8000000           100             policed-dscp
ACL attached
-----

Console> (enable)
```

### Related Commands

[clear qos policer](#)  
[set qos policer](#)

# show qos policy-source

Use the **show qos policy-source** command to display the QoS policy source information.

**show qos policy-source**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** This command displays whether the QoS policy source is set to local or COPS.

---

**Examples** This example shows how to view the QoS policy source:

```
Console> show qos policy-source
QoS policy source for the switch set to local.
Console>
```

---

**Related Commands** [set qos policy-source](#)

# show qos rsvp

Use the **show qos rsvp** command to display RSVP information.

**show qos rsvp info**

**show qos rsvp flow-info**

Syntax Description	Command	Description
	<b>info</b>	Displays RSVP status information.
	<b>flow-info</b>	Displays RSVP flow information.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The maximum number of RSVP flows displayed in the **show qos rsvp flow-info** command output are as follows:

- 1024 for switches configured with the Supervisor Engine 1 with Layer 3 Switching Engine Policy Feature Card (WS-F6K-PFC).
- 1056 for systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2)

**Examples** This example shows how to display RSVP status information:

```
Console> (enable) show qos rsvp info
RSVP disabled.
RSVP policy timeout set to 30 minutes.
RSVP local policy set to forward.
Console> (enable)
```

This example shows how to display RSVP flow information:

```
Console> (enable) show qos rsvp flow-info
RSVP enabled. Only RSVP qualitative service supported.
RSVP policy timeout set to 30 minutes.
```

Flow #	SrcAddr	DstAddr	SrcPort	DstPort	Prot	DSCP	Time	Valid
1	172.21.23.34	177.23.45.67	3001	3101	UDP	6	30	
2	172.21.23.34	177.23.45.67	3002	3102	UDP	4	15	
3	172.21.23.34	177.23.45.67	3003	3103	TCP	2	68	
4	172.21.34.67	177.68.89.23	4004	4005	UDP	1	23	

```
Console> (enable)
```

**Related Commands**

[clear qos policer](#)  
[set qos rsvp](#)

# show qos statistics

Use the **show qos statistics** command to display the various QoS-related counters for a specified port.

```
show qos statistics {mod[/port]}
```

```
show qos statistics l3stats
```

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and, optionally, the number of the port on the module.
	<b>l3stats</b>	Displays Layer 3 statistics information.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** In the **show qos statistics** output, the Threshold #:Packets dropped field lists each threshold and the number of packets dropped. For example, 1:0 pkt, 2:0 pkts indicates that threshold 1 and threshold 2 dropped 0 packets.

**Examples** This example shows how to display the QoS statistics for module 2, port 1:

```
Console> (enable) show qos statistics 2/1
Warning: QoS is disabled.
On Transmit:Port 2/1 has 2 Queue(s) 2 Threshold(s)
Q # Threshold #:Packets dropped
-----
1 1:0 pkts, 2:0 pkts
2 1:0 pkts, 2:0 pkts
On Receive:Port 2/1 has 1 Queue(s) 4 Threshold(s)
Q # Threshold #:Packets dropped
-----
1 1:0 pkts, 2:0 pkts, 3:0 pkts, 4:0 pkts
Console> (enable)
```

This example shows how to display the QoS Layer 3 statistics:

```
Console> (enable) show qos statistics l3stats
Warning: QoS is disabled.
QoS Layer 3 Statistics show statistics since last read.
Packets dropped due to policing: 0
IP packets with ToS changed: 0
IP packets with CoS changed: 26
Non-IP packets with CoS changed: 0
Console> (enable)
```

This example shows how to display the QoS statistics for module 2:

```
Console> (enable) show qos statistics 2
Warning: QoS is disabled.
On Transmit:Port 2/1 has 2 Queue(s) 2 Threshold(s)
Q # Threshold #:Packets dropped
-----
1 1:0 pkts, 2:0 pkts
2 1:0 pkts, 2:0 pkts
On Receive:Port 2/1 has 1 Queue(s) 4 Threshold(s)
Q # Threshold #:Packets dropped
-----
1 1:0 pkts, 2:0 pkts, 3:0 pkts, 4:0 pkts

On Transmit:Port 2/2 has 2 Queue(s) 2 Threshold(s)
Q # Threshold #:Packets dropped
-----
1 1:0 pkts, 2:0 pkts
2 1:0 pkts, 2:0 pkts
On Receive:Port 2/2 has 1 Queue(s) 4 Threshold(s)
Q # Threshold #:Packets dropped
-----
1 1:0 pkts, 2:0 pkts, 3:0 pkts, 4:0 pkts
Console> (enable)
```

#### Related Commands

- [set qos](#)
- [set qos drop-threshold](#)
- [set qos mac-cos](#)
- [set qos txq-ratio](#)
- [set qos wrr](#)

# show qos statistics export info

Use the **show qos statistics export info** command to display QoS data export configuration and statistical information.

## show qos statistics export info

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display QoS data export configuration and statistical information:

```

Console> (enable) show qos statistics export info
QoS Statistics Status and Configuration Information
-----
Export Status: disabled.
Export time interval: 35 seconds
Export destination: Stargate, UDP port 9996

Port      Export
-----
 1/1      enabled
 1/2      disabled
 2/2      enabled
 2/5      enabled
 2/7      enabled

Aggregate name  Export
-----
ipagg_1         enabled
ipagg_2         disabled
ipagg_3         enabled
Console> (enable)

```

**Related Commands** [set qos statistics export aggregate](#)  
[set qos statistics export port](#)

# show qos status

Use the **show qos status** command to display if QoS is enabled on the switch.

**show qos status**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display if QoS is enabled on the switch:

```
Console> (enable) show qos status  
Qos is enabled on this switch.  
Console> (enable)
```

---

**Related Commands** [set qos](#)

# show radius

Use the **show radius** command to display configured RADIUS parameters.

**show radius [noalias]**

## Syntax Description

**noalias** (Optional) Forces the display to show IP addresses, not IP aliases.

## Defaults

This command has no default settings.

## Command Types

Switch command.

## Command Modes

Normal.

## Usage Guidelines

You can enter this command in normal or privileged mode, but the RADIUS key is displayed only if this command is entered in privileged mode.

## Examples

This example shows how to display RADIUS information:

```

Console> show radius
Login Authentication: Console Session  Telnet Session
-----
tacacs                disabled          disabled
radius                disabled          disabled
local                 enabled(primary) enabled(primary)

Enable Authentication: Console Session  Telnet Session
-----
tacacs                disabled          disabled
radius                disabled          disabled
local                 enabled(primary) enabled(primary)

Radius Deadtime:           0 minutes
Radius Key:
Radius Retransmit:        2
Radius Timeout:           5 seconds

Radius-Server              Status  Auth-port
-----
172.20.52.3                primary 1812
Console>

```

---

**Related Commands**

**set radius deadtime**  
**set radius key**  
**set radius retransmit**  
**set radius server**  
**set radius timeout**

# show rcp

Use the **show rcp** command to display rcp information.

**show rcp**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display rcp information:

```
Console> (enable) show rcp
rcp username for VMPS :xena
rcp username for others :jdoe
Console> (enable)
```

---

**Related Commands** [clear rcp](#)  
[set rcp username](#)

# show reset

Use the **show reset** command to display scheduled reset information.

**show reset**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display scheduled reset information:

```
Console> (enable) show reset
Reset schedule for Fri Jan 21 2000, 23:00:00 (in 3 days 12 hours 56 minutes 57 seconds).
Reset reason: Software upgrade
Console> (enable)
```

---

**Related Commands** [reset—switch](#)

# show rgmp group

Use the **show rgmp group** command to display all multicast groups or the count of multicast groups that are joined by RGMP-capable routers.

```
show rgmp group [mac_addr] [vlan_id]
```

```
show rgmp group count [vlan_id]
```

Syntax Description	
<i>mac_addr</i>	(Optional) MAC destination address reserved for the use of RGMP packets.
<i>vlan_id</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005.
count	Displays the total number of entries in a VLAN group that are joined by RGMP-capable routers.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example displays all multicast groups joined by RGMP-capable routers:

```
Console> show rgmp group
```

```
Vlan          Dest MAC/Route Des      RGMP  Joined Router Ports
-----
1             01-00-5e-00-01-28      5/1,5/15
1             01-00-5e-01-01-01      5/1
2             01-00-5e-27-23-70*     3/1,5/1
Total Number of Entries=3
```

```
`*'- Configured manually
```

```
Console>
```

This example displays the total number of entries of VLAN group 1 that are joined by RGMP-capable routers:

```
Console> show rgmp group count 1
```

```
RGMP enabled.
```

```
Total Number of Entries=2
```

```
Console>
```

**Related Commands**

- [clear rgmp statistics](#)
- [set rgmp](#)
- [show rgmp statistics](#)

# show rgmp statistics

Use the **show rgmp statistics** command to display all the RGMP-related statistics for a given VLAN.

**show rgmp statistics** [*vlan*]

<b>Syntax Description</b>	<i>vlan</i> (Optional) Number of the VLAN.
---------------------------	--

<b>Defaults</b>	The default is VLAN 1.
-----------------	------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example displays RGMP-related statistics for a specific VLAN:
-----------------	--

```

Console> show rgmp statistics 23
RGMP enabled
RGMP Statistics for vlan <23>:
Recieve:
Valid pkts:      20
Hellos:         10
Joins:          5
Leaves:         5
Join Alls:      0
Leave Alls:      0
Byes:           0
Discarded:     0
Transmit:
Total Pkts:     10
Failures:       0
Hellos:        10
Joins:         0
Leaves:        0
Join Alls:     0
Leave Alls:     0
Byes:          0
Console>

```

<b>Related Commands</b>	<a href="#">clear rgmp statistics</a> <a href="#">set rgmp</a> <a href="#">show rgmp group</a>
-------------------------	--

# show rspan

Use the **show rspan** command to display the remote SPAN configuration.

**show rspan**

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The fields displayed depends on the configuration. For example, if this is a source session, the Destination, Incoming Packets, and Learning fields are not displayed. If this is a destination session, the Admin Source, Oper Source, Direction, Multicast, Filter, and Max Bandwidth fields are not displayed. If there is no VLAN filtering on the source session, the Filter field is not displayed.

**Examples** This example shows the display output from the **show rspan** command:

```

Console> (enable) show rspan

Destination      : -
Rspan Vlan       : 900
Admin Source     : VLAN 50
Oper Source      : Port 2/1,2/3,2/5,2/7,2/9,2/11,2/13,2/15,2/17,2/19
Direction        : receive
Incoming Packets : -
Learning         : -
Multicast        : disabled
Filter           : 10,20,30,40,500,600,700,800,900
Status           : active

-----

Destination      : Port 3/1
Rspan Vlan       : 901
Admin Source     : -
Oper Source      : -
Direction        : -
Incoming Packets : disabled
Learning         : disabled
Multicast        : -
Filter           : -
Status           : active

-----

Destination      : Port 6/1

```

```
Rspan Vlan      : 906
Admin Source    : -
Oper Source     : -
Direction      : -
Incoming Packets: disabled
Learning        : -
Multicast       : -
Filter          : -
```

```
-----
Destination     : -
Rspan Vlan      : 903
Admin Source    : INBAND
Oper Source     : INBAND
Direction      : transmit
Incoming Packets: -
Learning        : -
Multicast       : disabled
Filter          : -
```

```
-----
Destination     : Port 7/1
Rspan Vlan      : 902
Admin Source    : -
Oper Source     : -
Direction      : -
Incoming Packets: enabled
Learning        : -
Multicast       : -
Filter          : -
Console> (enable)
```

## Related Commands [set rspan](#)

# show running-config

Use the **show running-config** command to display the configuration information currently running on the switch or the configuration for a specific ACL.

```
show running-config [system | mod_num] [all]
```

```
show running-config acl location
```

```
show running-config qos acl {acl_name| all}
```

Syntax Description	
<b>system</b>	(Optional) Displays current system configuration.
<i>mod_num</i>	(Optional) Number of the module.
<b>all</b>	(Optional) Specifies all modules and system configuration information, including the IP address.
<b>acl location</b>	Displays current ACL configuration information.
<b>qos acl</b> <i>acl_name</i>	Displays current QoS ACL configuration information for a specific ACL.
<b>qos acl all</b>	Displays current QoS ACL configuration information for all ACLs.

**Defaults** The default displays only nondefault configurations.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can view the entire configuration by entering the **all** keyword.

**Examples** This example shows how to display the nondefault system and module configuration:

```
Console> (enable) show running-config
This command shows non-default configurations only.
Use 'show config all' to show both default and non-default configurations.
.....
.....
.....
..
begin
!
```

```

# ***** NON-DEFAULT CONFIGURATION *****
!
!
#time: Mon Jun 11 2001, 08:22:17
!
#version 6.3(0.56)PAN
!

!
#!
#vtp
set vtp domain dan
set vtp mode transparent
set vlan 1 name default type ethernet mtu 1500 said 100001 state active
set vlan 1002 name fddi-default type fddi mtu 1500 said 101002 state active
set vlan 1004 name fddinet-default type fddinet mtu 1500 said 101004 state active
set stp ieee
set vlan 1005 name trnet-default type trbrf mtu 1500 said 101005 state active
set sptp ibm
set vlan 2,10-11
set vlan 1003 name token-ring-default type trcrf mtu 1500 said 101003 state active
set mode srb aremaxhop 7 stemaxhop 7 backupcrf off
!
#ip
set interface sc0 1 172.20.52.19/255.255.255.224 172.20.52.31

set ip route 0.0.0.0/0.0.0.0          172.20.52.1
!
#set boot command
set boot config-register 0x10f
set boot system flash bootflash:cat6000-sup2-d.6-3-0-56-PAN.bin
set boot system flash bootflash:cat6000-sup2-d.6-3-0-54-PAN.bin
set boot system flash bootflash:cat6000-sup2-d.6-3-0-46-PAN.bin
set boot system flash bootflash:cat6000-sup2-d.6-3-0-44-PAN.bin
set boot system flash bootflash:
!
#qos
set qos wred lp2q2t tx queue 1 60:80 80:100
set qos wred lp2q2t tx queue 2 60:80 80:100
set qos wred lp3qlt tx queue 1 80:100
set qos wred lp3qlt tx queue 2 80:100
set qos wred lp3qlt tx queue 3 80:100
!
#mmls nonrpf
set mmls nonrpf timer 0
!
#security ACLs
clear security acl all
#pbf set
set pbf mac 00-01-64-61-39-c3
#adj set
set security acl adjacency ADJ2 10 00-00-00-00-00-0a 00-00-00-00-00-0b mtu 9600
#
commit security acl all
!
# default port status is enable
!
!
#module 1 empty
!
#module 2 : 2-port 1000BaseX Supervisor
!
#module 3 : 48-port 10/100BaseTX Ethernet
set vlan 10    3/1

```

## show running-config

```

set vlan 11 3/2
!
#module 4 empty
!
#module 5 : 0-port Switch Fabric Module
!
#module 6 empty
!
#module 7 empty
!
#module 8 empty
!
#module 9 empty
!
#module 15 empty
!
#module 16 empty
end
Console> (enable)

```

This example shows how to display the nondefault system configuration for module 3:

```

Console> (enable) show running-config 3
This command shows non-default configurations only.
Use 'show config <mod> all' to show both default and non-default configurations.
.....
begin
!
# ***** NON-DEFAULT CONFIGURATION *****
!
!
#time: Mon Jun 11 2001, 08:33:25
!
# default port status is enable
!
!
#module 3 : 48-port 10/100BaseTX Ethernet
set vlan 10 3/1
set vlan 11 3/2
end
Console> (enable)

```

### Related Commands

[clear config](#)  
[show startup-config](#)  
[write](#)

# show security acl

Use the **show security acl** command to display the contents of the VACL that are currently configured or last committed to NVRAM and hardware.

**show security acl**

**show security acl** [editbuffer]

**show security acl info** {acl\_name | adjacency| all} [editbuffer [editbuffer\_index]]

Syntax Description		
<b>editbuffer</b>	(Optional)	Displays the VACLs in the edit buffer.
<b>info</b>		Displays the contents of a VACL that were last committed to NVRAM and hardware.
<i>acl_name</i>		Name of the VACL to be displayed.
adjacency		Displays adjacency information.
<b>all</b>		Displays all ACL information.
<i>editbuffer_index</i>	(Optional)	Name of the edit buffer index.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the name and type of the VACLs currently configured:

```
Console> show security acl
ACL                               Type  VLANS
-----
ip1                               IP    3,5,8
ip2                               IP    12,47
ip3                               IP    56
ipx1                              IPX   5,12,45
ipx2                              IPX
ipx3                              IPX
mac2                              MAC   5
iplast                            IP
Console>
```

This example shows how to display VACLs in the edit buffer:

```
Console> show security acl editbuffer
ACL                               Type  Status
-----
ip1                               IP    Committed
ip2                               IP    Committed
ip3                               IP    Committed
```

## ■ show security acl

```

ipx1                IPX  Committed
ipx2                IPX  Committed
ipx3                IPX  Committed
mac2                MAC  Committed
iplast              IP   Committed
Console>

```

This example shows how to display the configuration for a specified VACL last committed to NVRAM and hardware:

```

Console> show security acl info ip1
set security acl ip ip1
-----
1. permit any
Console>

```

This example shows how to display the configuration for all VACLs last committed to NVRAM and hardware:

```

Console> show security acl info all
set security acl adjacency a_1
-----
1. 2 00-0a-0a-0a-0a-0a

set security acl adjacency a_2
-----
1. 2 00-0a-0a-0a-0a-0b

set security acl adjacency a_3
-----
1. 2 00-0a-0a-0a-0a-0c

set security acl adjacency a_4
-----
1. 2 00-0a-0a-0a-0a-0d

set security acl adjacency b_1
-----
1. 1 00-20-20-20-20-20

set security acl adjacency b_2
-----
1. 1 00-20-20-20-20-21

set security acl adjacency b_3
-----
1. 1 00-20-20-20-20-22

set security acl adjacency b_4
-----
1. 1 00-20-20-20-20-23

set security acl ip ip1
-----
arp permit
1. redirect a_1 ip host 44.0.0.1 host 43.0.0.1
2. redirect a_2 ip host 44.0.0.2 host 43.0.0.2
3. redirect a_3 ip host 44.0.0.3 host 43.0.0.3
4. redirect a_4 ip host 44.0.0.4 host 43.0.0.4
5. permit ip any any

set security acl ip ip2
-----

```

```
arp permit
1. redirect b_1 ip host 43.0.0.1 host 44.0.0.1
2. redirect b_2 ip host 43.0.0.2 host 44.0.0.2
3. redirect b_3 ip host 43.0.0.3 host 44.0.0.3
4. redirect b_4 ip host 43.0.0.4 host 44.0.0.4
5. permit ip any any
```

Console>

This example shows how to display the contents of the VACL edit buffer:

```
Console> show security acl info ip1 editbuffer
set security acl ip ip1
-----
1. permit any

ACL Status:Committed
Console>
```

---

**Related Commands**

[clear security acl](#)  
[commit](#)  
[rollback](#)

# show security acl capture-ports

Use the **show security acl capture-ports** command to display the capture port list.

**show security acl capture-ports**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to display capture port list entries:

```
Console> (enable) show security acl capture-ports  
ACL Capture Ports: 1/2,2/2  
Console> (enable)
```

---

**Related Commands** [clear security acl capture-ports](#)  
[set security acl capture-ports](#)

# show security acl log

Use the **show security acl log** command to display VACL log information.

**show security acl log config**

**show security acl log flow protocol** {*src\_ip\_spec* | *dest\_ip\_spec*} [**vlan** *vlan\_num*]

**show security acl log flow {ip}** {*src\_ip\_spec* | *dest\_ip\_spec*} [**vlan** *vlan\_num*]

**show security acl log flow {icmp | 1}** {*src\_ip\_spec* | *dest\_ip\_spec*} [*icmp\_type* [*icmp\_code*]]  
[**vlan** *vlan\_num*]

**show security acl log flow {tcp | 6}** {{*src\_ip\_spec* [*operator* *port* [*port*]]} | {*dest\_ip\_spec* [*operator*  
*port* [*port*]]}} [**vlan** *vlan\_num*]

**show security acl log flow {udp | 17}** *src\_ip\_spec* [*operator* *port* [*port*]] *dest\_ip\_spec* [*operator*  
*port* [*port*]] [**vlan** *vlan\_num*]

Syntax Description	config	Displays the VACL log configuration information including the maximum number of the flow pattern and redirect rate.
	<b>flow</b>	Displays the flow information specified by the arguments since its last syslog report.
	<i>protocol</i>	Keyword or number of an IP protocol; valid numbers are from 0 to 255 representing an IP protocol number. See the “Usage Guidelines” section for the list of valid keywords.
	<i>src_ip_spec</i>	Source IP address and the source mask. See the “Usage Guidelines” section for the format.
	<i>dest_ip_spec</i>	Destination IP address and the destination mask. See the “Usage Guidelines” section for the format.
	<b>vlan</b> <i>vlan_num</i>	(Optional) Number of the VLAN to be displayed; valid values are from 1 to 1005 and from 1025 to 4094.
	<b>ip</b>	Matches any Internet Protocol packets.
	<b>icmp   1</b>	Keyword or number to match ICMP packets.
	<i>icmp_type</i>	(Optional) ICMP message type name or a number; valid values are from 0 to 255. See the “Usage Guidelines” section for a list of valid names.
	<i>icmp_code</i>	(Optional) ICMP message code name or a number; valid values are from 0 to 255. See the “Usage Guidelines” section for a list of valid names.
	<b>tcp   6</b>	Keyword or number to match TCP packets.
	<i>operator</i>	(Optional) Operands; valid values include <b>lt</b> (less than), <b>gt</b> (greater than), <b>eq</b> (equal), <b>neq</b> (not equal), and <b>range</b> (inclusive range).
	<i>port</i>	(Optional) Number or name of a TCP or UDP port; valid port numbers are from 0 to 65535. See the “Usage Guidelines” section for a list of valid names.
	<b>udp   17</b>	Keyword or number to match UDP packets.

## Defaults

This command has no default settings.

**Command Types**

Switch command.

**Command Modes**

Privileged.

**Usage Guidelines**

This command is supported on systems configured with Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2) only.

Configurations you make by entering this command are saved to NVRAM and hardware only after you enter the **commit** command. Enter ACEs in batches and then enter the **commit** command to save them in NVRAM and in the hardware.

When you specify the source IP address and the source mask, use the form *source\_ip\_address source\_mask* and follow these guidelines:

- The *source\_mask* is required; 0 indicates a care bit, 1 indicates a don't-care bit.
- Use a 32-bit quantity in four-part dotted-decimal format.
- Use the keyword **any** as an abbreviation for a *source* and *source-wildcard* of 0.0.0.0 255.255.255.255.
- Use **host** source as an abbreviation for a *source* and *source-wildcard* of source 0.0.0.0.

Valid *protocol* keywords include **icmp** (1), **ip**, **ipinip** (4), **tcp** (6), **udp** (17), **igrp** (9), **eigrp** (88), **gre** (47), **nos** (94), **ospf** (89), **ahp** (51), **esp** (50), **pcp** (108), and **pim** (103). The IP number is displayed in parentheses. Use the keyword **ip** to match any Internet Protocol.

ICMP packets that are matched by ICMP message type can also be matched by the ICMP message code.

Valid names for *icmp\_type* and *icmp\_code* are administratively-prohibited, alternate-address, conversion-error, dod-host-prohibited, dod-net-prohibited, echo, echo-reply, general-parameter-problem, host-isolated, host-precedence-unreachable, host-redirect, host-tos-redirect, host-tos-unreachable, host-unknown, host-unreachable, information-reply, information-request, mask-reply, mask-request, mobile-redirect, net-redirect, net-tos-redirect, net-tos-unreachable, net-unreachable, network-unknown, no-room-for-option, option-missing, packet-too-big, parameter-problem, port-unreachable, precedence-unreachable, protocol-unreachable, reassembly-timeout, redirect, router-advertisement, router-solicitation, source-quench, source-route-failed, time-exceeded, timestamp-reply, timestamp-request, traceroute, ttl-exceeded, and unreachable.

If the operator is positioned after the source and source-wildcard, it must match the source port. If the operator is positioned after the destination and destination-wildcard, it must match the destination port. The range operator requires two port numbers. All other operators require one port number.

TCP port names can be used only when filtering TCP. Valid names for TCP ports are bgp, chargen, daytime, discard, domain, echo, finger, ftp, ftp-data, gopher, hostname, irc, klogin, kshell, lpd, nntp, pop2, pop3, smtp, sunrpc, syslog, tacacs-ds, talk, telnet, time, uucp, whois, and www.

UDP port names can be used only when filtering UDP. Valid names for UDP ports are biff, bootpc, bootps, discard, dns, dnsix, echo, mobile-ip, nameserver, netbios-dgm, netbios-ns, ntp, rip, snmp, snmptrap, sunrpc, syslog, tacacs-ds, talk, tftp, time, who, and xdmcp.

The number listed with the protocol type is the layer protocol number (for example, **udp** | 17).

---

**Examples**

This example shows how to display VACL log information:

```
Console> (enable) show security acl log config
VACL LOG Configuration
-----
Max Flow Pattern      : 512
Redirect Rate (pps)  : 1000
Console> (enable)
```

This example shows how to display the flow information:

```
Console> (enable) show security acl log flow ip vlan 1
Total matched entry number = 1
Entry No. #1, IP Packet
-----
Vlan Number           : 1
Mod/Port Number      : 2/1
Source IP address     : 21.0.0.0
Destination IP address : 255.255.255.255
TCP Source port       : 2000
TCP Destination port  : 3000
Received Packet Number : 10
Console> (enable)
```

---

**Related Commands**

[clear security acl log flow](#)  
[set security acl log](#)

# show security acl map

Use the **show security acl map** command to display VACL-to-VLAN mapping for a specified VACL or VLAN.

```
show security acl map acl_name
```

```
show security acl map vlan
```

Syntax Description	<i>acl_name</i>	Name of the VACL to be displayed.
	<i>vlan</i>	Number of the VLAN to be displayed; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the mappings of a specific VACL:

```
Console> (enable) show security acl map IPACL1
ACL IPACL1 is mapped to VLANs:
1
Console> (enable)
```

This example shows how to display the mappings of a specific VLAN:

```
Console> (enable) show security acl map 1
VLAN 1 is mapped to IP ACL IPACL1.
VLAN 1 is mapped to IPX ACL IPXACL1.
VLAN 1 is mapped to MAC ACL MACACL1.
Console> (enable)
```

**Related Commands**

- [clear security acl map](#)
- [commit](#)
- [rollback](#)
- [set security acl map](#)

# show security acl resource-usage

Use the **show security acl resource-usage** command to display VACL management information.

**show security acl resource-usage**

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The switch interface mapping table that associates an interface (for example, VLANs) into flows programmed in TCAM.

Hardware resources are used to calculate Layer 4 port operation; for example, if you enter the **permit tcp any lt 20 host 1.2.3.4 gt 30** command, “lt 20” and “gt 30” are the Layer 4 port operation.

**Examples** This example shows how to display VACL management information:

```
Console> (enable) show security acl resource-usage
ACL resource usage:
ACL storage (mask/value) :(50%/19%)
ACL to switch interface mapping table :2%
ACL layer 4 port operators :0%
Console> (enable)
```

[Table 2-73](#) describes the possible fields in the **show security acl resource-usage** command output.

**Table 2-73** show security acl resource-usage Command Output Fields

Field	Description
ACL storage (mask/value)	Status of mask entry usage, where mask is the percentage of mask entries used, and value is the percentage of value entries currently used.
ACL to switch interface mapping table	Percentage of ACL to switch interface mapping table usage.
ACL layer 4 port operators	Percentage of ACL Layer 4 port operators.

**Related Commands**

- [clear security acl](#)
- [commit](#)
- [rollback](#)

# show snmp

Use the **show snmp** command to display SNMP information.

**show snmp [noalias]**

<b>Syntax Description</b>	<b>noalias</b> (Optional) Keyword that forces the display to show IP addresses, not IP aliases.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal and privileged.
----------------------	------------------------

<b>Usage Guidelines</b>	If you enter <b>show snmp</b> in privileged mode, the output display includes information for the read-only, the read-write, and the read-write-all community strings. If you enter <b>show snmp</b> in normal mode, the display includes only information for the read-only community string.
-------------------------	--

<b>Examples</b>	This example shows SNMP information when you enter the <b>show snmp</b> command in normal mode:
-----------------	---

```

Console> show snmp
RMON:                               Disabled
Extended RMON Netflow Enabled : None.
Memory usage limit for new RMON entries: 85 percent
Traps Enabled:
None
Port Traps Enabled: None

Community-Access      Community-String
-----
read-only             public

Trap-Rec-Address      Trap-Rec-Community
-----
192.122.173.42       public
Console>

```

	This example shows SNMP information when you enter the <b>show snmp</b> command in privileged mode:
--	---

```

Console> (enable) show snmp
SNMP:Enabled
RMON:Disabled
Extended RMON:Extended RMON module is not present
Extended RMON Netflow:Disabled
Extended RMON Vlanmode:Disabled
Extended RMON Vlanagent:Disabled
Traps Enabled:
None
Port Traps Enabled:None

```

```

Community-Access Community-String
-----
read-only public
read-write private
read-write-all secret
Trap-Rec-Address Trap-Rec-Community Trap-Rec-Port Trap-Rec-Owner Trap-Rec-Index
-----
Console> (enable)

```

Table 2-74 describes the possible fields (depending on the port type queried) in the **show snmp** command output.

**Table 2-74 show snmp Command Output Fields**

Field	Description
SNMP	Status of whether SNMP processing is enabled or disabled.
RMON	Status of whether RMON is enabled or disabled.
Extended RMON	Status of whether extended RMON is enabled or disabled.
Extended RMON Netflow	Status of whether extended RMON Netflow is enabled or disabled.
Extended RMON Vlanmode	Status of whether extended RMON VLAN mode is enabled or disabled.
Extended RMON Vlanagent	Status of whether extended RMON VLAN agent is enabled or disabled.
Traps Enabled	Trap types that are enabled.
Port Traps Enabled	Set of ports whose linkup/linkdown trap is enabled.
Community-Access	Configured SNMP communities.
Community-String	SNMP community strings associated with each SNMP community.
Trap-Rec-Address	IP address or IP alias of trap receiver hosts.
Trap-Rec-Community	SNMP community string used for trap messages to the trap receiver.

#### Related Commands

[set snmp](#)  
[set snmp rmon](#)  
[set snmp trap](#)

# show snmp access

Use the **show snmp access** command to display SNMP access information.

```
show snmp access [volatile | nonvolatile | read-only]
```

```
show snmp access [-hex] groupname security-model {v1 | v2c}
```

```
show snmp access [-hex] groupname security-model v3 {noauthentication | authentication |
  privacy} [context [-hex] contextname]
```

Syntax Description	
<b>volatile</b>	(Optional) Displays information for volatile storage types.
<b>nonvolatile</b>	(Optional) Displays information for nonvolatile storage types.
<b>read-only</b>	(Optional) Displays information for read-only storage types.
<b>-hex</b>	(Optional) Displays <i>groupname</i> , <i>username</i> , and <i>contextname</i> as a hexadecimal character.
<i>groupname</i>	Name of the SNMP group or collection of users who have a common access policy.
<b>security-model v1   v2c   v3</b>	Specifies security model v1, v2c, or v3.
<b>noauthentication</b>	Displays information for security models not set to use authentication protocol.
<b>authentication</b>	Displays information for authentication protocol.
<b>privacy</b>	Displays information regarding messages sent on behalf of the user that are protected from disclosure.
<b>context contextname</b>	(Optional) Specifies the name of a context string.

**Defaults** The default storage type is **volatile**.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you use special characters for the *groupname* (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

If you do not enter a context name, a NULL context string is used.

There are three versions of SNMP:

- Version 1 (SNMPv1)—This is the initial implementation of SNMP. Refer to RFC 1157 for a full description of functionality.

- Version 2 (SNMPv2c)—The second release of SNMP, described in RFC 1902, has additions and enhancements to data types, counter size, and protocol operations.
- Version 3 (SNMPv3)—This is the most recent version of SNMP and is fully described in RFC 2571, RFC 2572, RFC 2573, RFC 2574, and RFC 2575. SNMPv3 has significant enhancements to administration and security.

The SNMP functionality on the Catalyst enterprise LAN switches for SNMP v1 and SNMP v2c remains intact; however, the functionality has greatly expanded for SNMPv3. Refer to the “Configuring SNMP” chapter of the *Catalyst 6500 Series Software Configuration Guide* for more information on SNMPv3.

The **read-only** keyword is supported for security model v3 only.

---

## Examples

This example shows how to display all SNMP access information:

```
Console> (enable) show snmp access
Group Name:defaultROgroup
Context:
Security Model:v1
Security Level:noauthentication
Context Match:vlan-1
Read View:defaultAdminView
Write View:
Notify View:defaultAdminView
Storage Type:read-only
Row Status:active

Group Name:defaultROgroup
Context:
Security Model:v2c
Security Level:noauthentication
Context Match:vlan-55
Read View:defaultAdminView
Write View:
Notify View:defaultAdminView
Storage Type:read-only
Row Status:active
```

---

## Related Commands

[clear snmp access](#)  
[set snmp access](#)  
[show snmp context](#)

# show snmp community

Use the **show snmp community** command to display SNMP context information.

**show snmp community**

**show snmp community** [**read-only** | **volatile** | **nonvolatile**]

**show snmp community index** [**-hex**] {*index name*}

<b>Syntax Description</b>	<b>read-only</b>	(Optional) Specifies that the community is defined as read only.
	<b>volatile</b>	(Optional) Specifies the community type is defined as temporary memory and the content is deleted if the device is turned off.
	<b>nonvolatile</b>	(Optional) Specifies the community type is defined as persistent memory and the content remains after the device is turned off and on again.
	<b>index</b>	Specifies the index of community names.
	<b>-hex</b>	(Optional) Displays <i>index name</i> as a hexadecimal character.
	<i>index name</i>	Name of the community index.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal and privileged.

**Usage Guidelines** If you enter the **show snmp community** command in privileged mode, the output display includes information for the read-only, the read-write, and the read-write-all community strings. If you enter the **show snmp community** command in normal mode, the display includes only information for the read-only community string.

**Examples** This example shows the output when you enter the **show snmp community** command for the read-only community string in normal mode:

```
Console> show snmp community
Community Index: sysCommunityRo.0
Community Name: public
Security Name: public
Context Name:
Transport Tag:
Storage Type: read-only
Row Status: active
Console>
```

This example shows the display output when you enter the **show snmp community** command for the read-only, the read-write, and the read-write-all community strings in privileged mode:

```
Console> (enable) show snmp community
Community Index: sysCommunityRo.0
Community Name: public
Security Name: public
Context Name:
Transport Tag:
Storage Type: read-only
Row Status: active

Community Index: sysCommunityRw.0
Community Name: private
Security Name: private
Context Name:
Transport Tag:
Storage Type: read-only
Row Status: active

Community Index: sysCommunityRwa.0
Community Name: secret
Security Name: secret
Context Name:
Transport Tag:
Storage Type: read-only
Row Status: active

Console> (enable)
```

---

**Related Commands**

[clear snmp community](#)  
[set snmp community](#)

# show snmp context

Use the **show snmp context** command to display SNMP context information.

## **show snmp context**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display SNMP context information:

```
Console> (enable) show snmp context
Index Context
-----
0
1 vlan-1
2 vlan-55
3 vlan-1002
4 vlan-1003
5 vlan-1004
6 vlan-1005
Console> (enable)
```

---

**Related Commands**

- [clear snmp access](#)
- [set snmp access](#)
- [show snmp access](#)

# show snmp counters

Use the **show snmp counters** command to display SNMP counter information.

```
show snmp counters [v3 | {{mod/port} {dot1d | dot3 | hcrmon | ifmib | rmon}}]
```

Syntax Description	
<b>v3</b>	(Optional) Specifies SNMPv3 counters.
<i>mod/port</i>	Module number and port number.
<b>dot1d</b>	Specifies dot1d counters.
<b>dot3</b>	Specifies dot3 counters.
<b>hcrmon</b>	Specifies HCRMON counters.
<b>ifmib</b>	Specifies if-MIB counters.
<b>rmon</b>	Specifies RMON counters.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal

**Usage Guidelines** There are three versions of SNMP:

- Version 1 (SNMPv1)—This is the initial implementation of SNMP. Refer to RFC 1157 for a full description of functionality.
- Version 2 (SNMPv2c)—The second release of SNMP, described in RFC 1902, has additions and enhancements to data types, counter size, and protocol operations.
- Version 3 (SNMPv3)—This is the most recent version of SNMP and is fully described in RFC 2571, RFC 2572, RFC 2573, RFC 2574, and RFC 2575. SNMPv3 has significant enhancements to administration and security.

The SNMP functionality on the Catalyst enterprise LAN switches for SNMP v1 and SNMP v2c remains intact; however, the functionality has greatly expanded for SNMPv3. Refer to the “Configuring SNMP” chapter of the *Catalyst 6500 Series Software Configuration Guide* for more information on SNMPv3.

**Examples** This example shows how to display all SNMP counters:

```
Console> show snmp counters
mib2 SNMP group counters:
snmpInPkts                = 13993
snmpOutPkts               = 13960
snmpInBadVersions         = 0
snmpInBadCommunityNames  = 33
snmpInBadCommunityUses   = 0
snmpInASNParseErrs       = 0
```

## show snmp counters

```

snmpInTooBig          = 0
snmpInNoSuchNames    = 0
snmpInBadValues      = 0
snmpInReadOnlys      = 0
snmpInGenErrs        = 0
snmpInTotalReqVars   = 61747
snmpInTotalSetVars   = 0
snmpInGetRequests    = 623
snmpInGetNexts       = 13337
snmpInSetRequests    = 0
snmpInGetResponses   = 0
snmpInTraps          = 0
snmpOutTooBig        = 0
snmpOutNoSuchNames   = 230
snmpOutBadValues     = 0
snmpOutGenErrs       = 0
snmpOutGetRequests   = 0
snmpOutGetNexts      = 0
snmpOutSetRequests   = 0
snmpOutGetResponses  = 13960
snmpOutTraps         = 0
Console>

```

Table 2-75 describes the fields in the **show snmp counters** command output.

**Table 2-75** show snmp counters Command Output Fields

Field	Description
snmpInPkts	Number of messages delivered to the SNMP entity from the transport service.
snmpOutPkts	Number of SNMP messages passed from the SNMP protocol entity to the transport service.
snmpInBadVersions	Number of SNMP messages delivered to the SNMP entity for an unsupported SNMP version.
snmpInBadCommunityNames	Number of SNMP messages delivered to the SNMP entity that used an SNMP community name not known to said entity.
snmpInBadCommunityUses	Number of SNMP messages delivered to the SNMP entity that represented an SNMP operation not allowed by the SNMP community named in the message.
snmpInASNParseErrs	Number of ASN.1 or BER errors encountered by the SNMP entity when decoding received SNMP messages.
snmpInTooBig	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “tooBig.”
snmpInNoSuchNames	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “noSuchName.”
snmpInBadValues	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “badValue.”
snmpInReadOnlys <sup>1</sup>	Number of valid SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “readOnly.”
snmpInGenErrs	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “genErr.”

**Table 2-75** *show snmp counters Command Output Fields (continued)*

Field	Description
snmpInTotalReqVars	Number of MIB objects retrieved successfully by the SNMP protocol entity as the result of receiving valid SNMP Get-Request and Get-Next PDUs.
snmpInTotalSetVars	Number of MIB objects altered successfully by the SNMP protocol entity as the result of receiving valid SNMP Set-Request PDUs.
snmpInGetRequests	Number of SNMP Get-Request PDUs accepted and processed by the SNMP protocol entity.
snmpInPkts	Number of messages delivered to the SNMP entity from the transport service.
snmpOutPkts	Number of SNMP messages passed from the SNMP protocol entity to the transport service.
snmpInBadVersions	Number of SNMP messages delivered to the SNMP entity for an unsupported SNMP version.
snmpInBadCommunityNames	Number of SNMP messages delivered to the SNMP entity that used an SNMP community name not known to said entity.
snmpInBadCommunityUses	Number of SNMP messages delivered to the SNMP entity that represented an SNMP operation not allowed by the SNMP community named in the message.
snmpInASNParseErrs	Number of ASN.1 or BER errors encountered by the SNMP entity when decoding received SNMP messages.
snmpInTooBig	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “tooBig.”
snmpInNoSuchNames	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “noSuchName.”
snmpInBadValues	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “badValue.”
snmpInGenErrs	Number of SNMP PDUs delivered to the SNMP protocol entity with the value of the error-status field as “genErr.”
snmpInTotalReqVars	Number of MIB objects retrieved successfully by the SNMP protocol entity as the result of receiving valid SNMP Get-Request and Get-Next PDUs.
snmpInTotalSetVars	Number of MIB objects altered successfully by the SNMP protocol entity as the result of receiving valid SNMP Set-Request PDUs.
snmpInGetRequests	Number of SNMP Get-Request PDUs accepted and processed by the SNMP protocol entity.
snmpInGetNexts	Number of SNMP Get-Next PDUs accepted and processed by the SNMP protocol entity.
snmpInSetRequests	Number of SNMP Set-Request PDUs accepted and processed by the SNMP protocol entity.
snmpInGetResponses	Number of SNMP Get-Response PDUs accepted and processed by the SNMP protocol entity.

Table 2-75 show snmp counters Command Output Fields (continued)

Field	Description
snmpInTraps	Number of SNMP Trap PDUs accepted and processed by the SNMP protocol entity.
snmpOutTooBig	Number of SNMP PDUs generated by the SNMP protocol entity with the value of the error-status field as “tooBig.”
snmpOutNoSuchNames	Number of SNMP PDUs generated by the SNMP protocol entity with the value of the error-status as “noSuchName.”
snmpOutBadValues	Number of SNMP PDUs generated by the SNMP protocol entity with the value of the error-status field as “badValue.”
snmpOutGenErrs	Number of SNMP PDUs generated by the SNMP protocol entity with the value of the error-status field as “genErr.”
snmpOutGetRequests	Number of SNMP Get-Request PDUs generated by the SNMP protocol entity.
snmpOutGetNexts	Number of SNMP Get-Next PDUs generated by the SNMP protocol entity.
snmpOutSetRequests	Number of SNMP Set-Request PDUs generated by the SNMP protocol entity.
snmpOutGetResponses	Number of SNMP Get-Response PDUs generated by the SNMP protocol entity.
snmpOutTraps	Number of SNMP Trap PDUs generated by the SNMP protocol entity.

1. It is a protocol error to generate an SNMP PDU that contains the value “readOnly” in the error-status field. This object is provided as a means of detecting incorrect implementations of the SNMP.

This example shows how to display the SNMPv3 counters:

```

Console> show snmp counters v3
snmpv3 MPD statistics:
snmpUnknownSecurityModels      = 0
snmpInvalidMsgs                = 0
snmpUnknownPDUHandlers        = 0

snmpv3 TARGET statistics:
snmpUnavailableContexts       = 0
snmpUnknownContexts          = 0

snmpv3 USM statistics:
usmStatsUnsupportedSecLevels   = 0
usmStatsNotInTimeWindows      = 0
usmStatsUnknownUserNames      = 0
usmStatsUnknownEngineIDs      = 0
usmStatsWrongDigests          = 0
usmStatsDecryptionErrors      = 0
Console>

```

# show snmp engineid

Use the **show snmp engineid** command to display the SNMP local engine ID.

**show snmp engineid**

**Syntax Description** This command has no arguments or keywords.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If the SNMP engine ID is cleared, the system automatically regenerates a local SNMP engine ID. The SNMP engine and the SNMP entity have a one-to-one mapping. You can also identify the SNMP entity, which is represented as hexadecimal numbers only, and must be from 5 to 32 bytes long; for example, 00:00:00:09:0a:fe:ff:12:97:33:45:12.

**Examples** This example shows how to display the SNMP engine ID:

```
Console> (enable) show snmp engineid
EngineId: 00:00:00:09:00:d0:00:4c:18:00
Engine Boots: 1234455
Console> (enable)
```

[Table 2-76](#) describes the fields in the **show snmp engineid** command output.

**Table 2-76** *show snmp engineid* Command Output Fields

Field	Description
EngineId	String identifying the name of the SNMP copy on the device.
Engine Boots	Number of times an SNMP engine has been started or reinitialized.

**Related Commands** [show snmp](#)

# show snmp group

Use the **show snmp group** command to display the name of the SNMP group or collection of users who have a common access policy.

```
show snmp group [volatile | nonvolatile | read-only]
```

```
show snmp group [-hex] {groupname} [-hex] user {username}
[security-model {v1 | v2c | v3}]
```

<b>Syntax Description</b>	<b>volatile</b>	(Optional) Specifies the storage type is defined as temporary memory and the content is deleted if the device is turned off.
	<b>nonvolatile</b>	(Optional) Specifies the storage type is defined as persistent memory and the content remains after the device is turned off and on again.
	<b>read-only</b>	(Optional) Specifies that the storage type is defined as read only.
	<b>-hex</b>	(Optional) Displays <i>groupname</i> and <i>username</i> as a hexadecimal character.
	<i>groupname</i>	Name of the SNMP group or collection of users who have a common access policy.
	<b>user</b> <i>username</i>	Specifies the SNMP group username.
	<b>security-model</b> <b>v1   v2c   v3</b>	(Optional) Specifies security model v1, v2c, or v3.

**Defaults** The default storage type is **volatile**.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you use special characters for the *groupname* and *username* (nonprintable delimiters for these parameters), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

There are three versions of SNMP:

- Version 1 (SNMPv1)—This is the initial implementation of SNMP. Refer to RFC 1157 for a full description of functionality.
- Version 2 (SNMPv2c)—The second release of SNMP, described in RFC 1902, has additions and enhancements to data types, counter size, and protocol operations.
- Version 3 (SNMPv3)—This is the most recent version of SNMP and is fully described in RFC 2571, RFC 2572, RFC 2573, RFC 2574, and RFC 2575. SNMPv3 has significant enhancements to administration and security.

The SNMP functionality on the Catalyst enterprise LAN switches for SNMP v1 and SNMP v2c remains intact; however, the functionality has greatly expanded for SNMPv3. Refer to the “Configuring SNMP” chapter of the *Catalyst 6500 Series Software Configuration Guide* for more information on SNMPv3.

The **read-only** keyword is supported for security model v3 only.

## Examples

This example shows how to display the SNMP group:

```

Console> (enable) show snmp group
Security Model: v1
Security Name: public
Group Name: defaultROgroup
Storage Type: volatile
Row Status: active

Security Model: v1
Security Name: secret
Group Name: defaultRWALLgroup
Storage Type: volatile
Row Status: active

Security Model: v1
Security Name: private
Group Name: defaultRWgroup
Storage Type: volatile
Row Status: active

Security Model: v2c
Security Name: public
Group Name: defaultROgroup
Storage Type: volatile
Row Status: active
Console> (enable)

```

Table 2-77 describes the fields in the **show snmp group** command output.

**Table 2-77** *show snmp group Command Output Fields*

Field	Description
Security Model	Security model used by the group.
Security Name	Security string definition.
Group Name	Name of the SNMP group or collection of users who have a common access policy.
Storage Type	Indicates whether the settings are volatile or nonvolatile.
Row Status	Status of the entry.

## Related Commands

**clear snmp group**  
**set snmp group**

# show snmp notify

Use the **show snmp notify** command to display the snmpNotifyTable configuration.

```
show snmp notify [volatile | nonvolatile | read-only]
```

```
show snmp notify [-hex] {notifyname}
```

<b>Syntax Description</b>	<b>volatile</b>	(Optional) Specifies the storage type is defined as temporary memory and the content is deleted if the device is turned off.
	<b>nonvolatile</b>	(Optional) Specifies the storage type is defined as persistent memory and the content remains after the device is turned off and on again.
	<b>read-only</b>	(Optional) Specifies that the storage type is defined as read only.
	<b>-hex</b>	(Optional) Displays <i>notifyname</i> as a hexadecimal character.
	<i>notifyname</i>	A unique identifier to index the snmpNotifyTable.

**Defaults** The default storage type is **nonvolatile**.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you use special characters for the *notifyname* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

The **read-only** keyword is supported for security model v3 only.

**Examples** This example shows how to display the SNMP notify information for a specific *notifyname* value:

```
Console> (enable) show snmp notify snmpV1Notification
Notify Name: snmpV1Notification
Notify Tag: snmpV1Trap
Notify Type: trap
Storage Type: volatile
Row Status: active
Console> (enable)
```

[Table 2-78](#) describes the fields in the **show snmp notify** command output.

*Table 2-78 show snmp notify Command Output Fields*

Field	Description
Notify Name	Unique identifier used to index the snmpNotifyTable.
Notify Tag	Name of the entry in the snmpNotifyTable.
Notify Type	Type of notification.
Storage Type	Storage type (volatile or nonvolatile).
Row Status	Status of the entry.

**Related Commands**

[clear snmp notify](#)  
[set snmp notify](#)

# show snmp rmonmemory

Use the **show snmp rmonmemory** command to display the memory usage limit in percentage.

**show snmp rmonmemory**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** The percentage value displayed indicates that you cannot create new RMON entries or restore entries from the NVRAM if the specified memory usage is exceeded.

---

**Examples** This example shows how to display the RMON memory limit use:

```
Console> (enable) show snmp rmonmemory
85 percent
Console> (enable)
```

---

**Related Commands** [set snmp rmonmemory](#)

# show snmp targetaddr

Use the **show snmp targetaddr** command to display the SNMP target address entries in the snmpTargetAddressTable.

```
show snmp targetaddr [volatile | nonvolatile | read-only]
```

```
show snmp targetaddr [-hex] {addrname}
```

<b>Syntax Description</b>	<b>volatile</b>	(Optional) Specifies the storage type is defined as temporary memory and the content is deleted if the device is turned off.
<b>nonvolatile</b>	(Optional) Specifies the storage type is defined as persistent memory and the content remains after the device is turned off and on again.	
<b>read-only</b>	(Optional) Specifies that the storage type is defined as read only.	
<b>-hex</b>	(Optional) Displays <i>addrname</i> as a hexadecimal character.	
<i>addrname</i>	Name of the target agent; the maximum length is 32 bytes.	

**Defaults** The default storage type is **nonvolatile**.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you use special characters for the *addrname* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

The **read-only** keyword is supported for security model v3 only.

**Examples** This example shows how to display specific target address information in the snmpTargetAddressTable:

```
Console> (enable) show snmp targetaddr cisco
Target Address Name: cisco
IP Address: 170.0.25.1
UDP Port#: 165
Timeout: 100
Retry count: 5
Tag List: tag1 tag2 tag3
Parameters: jeorge
Storage Type: nonvolatile
Row Status: active
Console> (enable)
```

Table 2-79 describes the fields in the **show snmp targetaddr** command output.

*Table 2-79 show snmp targetaddr Command Output Fields*

Field	Description
Target Address Name	Name of the target address.
IP Address	Target IP address.
UDP Port #	Number of the UDP port of the target host to use.
Timeout	Number of timeouts.
Retry count	Number of retries.
Tag List	Tags that point to target addresses to send notifications to.
Parameters	Entry in the snmpTargetParamsTable; the maximum length is 32 bytes.
Storage Type	Storage type (volatile or nonvolatile).
Row Status	Status of the entry.

#### Related Commands

**clear snmp targetaddr**  
**set snmp targetaddr**

# show snmp targetparams

Use the **show snmp targetparams** command to display the SNMP parameters used in the snmpTargetParamsTable when generating a message to a target.

```
show snmp targetparams [volatile | nonvolatile | read-only]
```

```
show snmp targetparams [-hex] {paramsname}
```

<b>Syntax Description</b>	<b>volatile</b>	(Optional) Specifies that the storage type is defined as temporary memory and that the content is deleted if the device is turned off.
	<b>nonvolatile</b>	(Optional) Specifies the storage type is defined as persistent memory and that the content remains after the device is turned off and on again.
	<b>read-only</b>	(Optional) Specifies that the storage type is defined as read only.
	<b>-hex</b>	(Optional) Displays <i>paramsname</i> as a hexadecimal character.
	<i>paramsname</i>	Name of the parameter in the snmpTargetParamsTable; the maximum length is 32 bytes.

**Defaults** The default storage type is **volatile**.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you use special characters for the *paramsname* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

The **read-only** keyword is supported for security model v3 only.

**Examples** This example shows how to display specific target parameter information in the snmpTargetParamsTable:

```
Console> (enable) show snmp targetparams snmpV1TrapParams
Target Parameter Name: snmpV1TrapParams
Message Processing Model: v1
Security Name: public
Security Level: noauthentication
Storage Type: volatile
Row Status: active
Console> (enable)
```

Table 2-80 describes the fields in the **show snmp targetparams** command output.

*Table 2-80 show snmp targetparams Command Output Fields*

Field	Description
Target Parameter Name	A unique identifier used to index the snmpTargetParamsTable.
Message Processing Model	Version number used by the Message Processing Model.
Security Name	Security string definition.
Security Level	Type of security level: <ul style="list-style-type: none"> <li>• Authentication—The security level is set to use the authentication protocol.</li> <li>• Noauthentication—The security level is not set to use the authentication protocol.</li> </ul>
Storage Type	Status of whether the settings are volatile or nonvolatile.
Row Status	Status of the entry.

#### Related Commands

**clear snmp targetparams**  
**set snmp targetparams**

# show snmp user

Use the **show snmp user** command to display SNMP information for a specific user.

```
show snmp user [volatile | nonvolatile | read-only]
```

```
show snmp user [-hex] {user} [remote {engineid}]
```

```
show snmp user summary
```

<b>Syntax Description</b>	<b>volatile</b>	(Optional) Specifies the storage type is defined as temporary memory and the content is deleted if the device is turned off.
	<b>nonvolatile</b>	(Optional) Specifies the storage type is defined as persistent memory and the content remains after the device is turned off and on again.
	<b>read-only</b>	(Optional) Specifies that the storage type is defined as read only.
	<b>-hex</b>	(Optional) Displays <i>user</i> as a hexadecimal character.
	<i>user</i>	Name of the SNMP user.
	<b>remote</b> <i>engineid</i>	(Optional) Specifies the username on a remote SNMP engine.
	<b>summary</b>	Specifies a summary of SNMP users.

**Defaults** The default storage type is **nonvolatile**, and the local SNMP engine ID is used.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you use special characters for the *user* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

The **read-only** keyword is supported for security model v3 only.

**Examples** This example shows how to display specific user information:

```
Console> (enable) show snmp user joe
EngineId: 00:11:22:33:44
User Name: joe
Authentication Protocol: md5
Privacy Protocol: des56
Storage Type: volatile
Row Status: active
Console> (enable)
```

Table 2-81 describes the fields in the **show snmp user** command output.

*Table 2-81 show snmp user Command Output Fields*

Field	Description
EngineId	String identifying the name of the copy of SNMP on the device.
User Name	String identifying the name of the SNMP user.
Authentication Protocol	Type of authentication protocol.
Privacy Protocol	Type of privacy authentication protocol.
Storage Type	Status of whether the settings are volatile or nonvolatile.
Row Status	Status of the entry.

---

**Related Commands**

**clear snmp user**  
**set snmp user**

# show snmp view

Use the **show snmp view** command to display the SNMP MIB view configuration.

```
show snmp view [volatile | nonvolatile | read-only]
```

```
show snmp view [-hex] {viewname} {subtree}
```

<b>Syntax Description</b>	<b>volatile</b>	(Optional) Specifies the storage type is defined as temporary memory and the content is deleted if the device is turned off.
	<b>nonvolatile</b>	(Optional) Specifies the storage type is defined as persistent memory and the content remains after the device is turned off and on again.
	<b>read-only</b>	(Optional) Specifies that the storage type is defined as read only.
	<b>-hex</b>	(Optional) Displays the <i>viewname</i> as a hexadecimal character.
	<i>viewname</i>	Name of a MIB view.
	<i>subtree</i>	Name of the subtree.

**Defaults** The default view is **volatile**.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you use special characters for the *viewname* value (nonprintable delimiters for this parameter), you must use a hexadecimal keyword, which is one or two hexadecimal digits separated by a colon (:); for example, 00:ab:34.

A MIB subtree used with a mask defines a view subtree; it can be in OID format or a text name mapped to a valid OID.

The **read-only** keyword is supported for security model v3 only.

**Examples** This example shows how to display the SNMP MIB view:

```
Console> (enable) show snmp view
View Name: defaultUserView
Subtree OID: 1.3.6.1
Subtree Mask:
View Type: included
Storage Type: volatile
Row Status: active
Control> (enable)
```

Table 2-82 describes the fields in the **show snmp view** command output.

*Table 2-82 show snmp view Command Output Fields*

Field	Description
View Name	Name of a MIB view.
Subtree OID	Name of a MIB subtree in OID format or a text name mapped to a valid OID.
Subtree Mask	Subtree mask can be all ones, all zeros, or a combination of both.
View Type	Status of whether the MIB subtree is included or excluded.
Storage Type	Storage type (volatile or nonvolatile).
Row Status	Status of the entry.

---

**Related Commands**

**clear snmp view**  
**set snmp view**

# show span

Use the **show span** command to display information about the current SPAN configuration.

**show span [all]**

<b>Syntax Description</b>	<b>all</b> (Optional) Displays local and remote SPAN configuration information.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	<p>This example shows how to display SPAN information for the switch. In this example, the SPAN source is port 2/1 and the SPAN destination is port 2/12. Only transmit traffic is monitored. Normal incoming packets are disabled on the SPAN destination port. Monitoring multicast traffic is enabled.</p>
-----------------	---

```

Console> (enable) show span
-----
Destination      : Port 4/1
Admin Source     : Port 2/2
Oper Source      : Port 2/2
Direction        : transmit/receive
Incoming Packets : enabled
Learning         : -
Multicast        : enabled
Filter           : 10,20,30,40,50,60,70,80,90,100
Status           : inactive
Console> (enable)

```

[Table 2-83](#) describes the fields in the **show span** command output.

**Table 2-83 show span Command Output Fields**

Field	Description
Destination	Destination port for SPAN information.
Admin Source	Source port or VLAN for SPAN information.
Oper Source	Operator port or VLAN for SPAN information.
Direction	Status of whether transmit, receive, or transmit and receive information is monitored.
Incoming Packets	Status of whether reception of normal incoming packets on the SPAN destination port is enabled or disabled.
Learning	Status of whether learning is enabled or disabled for the SPAN destination port.

*Table 2-83 show span Command Output Fields (continued)*

Field	Description
Multicast	Status of whether monitoring multicast traffic is enabled or disabled.
Filter	Monitored VLANs in source trunk ports.
Max. Bandwidth	Bandwidth limits for SPAN traffic, in Mbps.

**Related Commands**

[clear config](#)  
[set spantree root](#)

# show spantree

Use the **show spantree** command to display spanning tree information for a VLAN or port.

**show spantree** [*vlan*] [**active**]

**show spantree** *mod/port*

<b>Syntax Description</b>	<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1001 and from 1025 to 4094.
	<b>active</b>	(Optional) Displays only the active ports.
	<i>mod/port</i>	Number of the module and the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify the VLAN number, VLAN 1 is displayed.

If you are in MISTP mode, instance information is not displayed.

The maximum length of the channel port list can be 47. The spaces in the Port(s) column may not be enough to display the entire list in one line. If this is the case, the port list is split into multiple lines. For example, in the following display, ports 6/5-8, 6/13, 6/15, 6/17, 6/19 are channeling:

```

...
Port(s)                Vlan Port-State   Cost      Prio Portfast Channel_id
-----
6/5-8,6/13,6/15,6/17,6/1 1    not-connected 2684354   32   disabled 0
9
...

```

The LACP channel protocol does not support half-duplex links. If a port is in active/passive mode and becomes half duplex, the port is suspended (and a syslog message is generated). The port is shown as “connected” using the **show port** command and as “not connected” using the **show spantree** command. This discrepancy is because the port is physically connected but never joined spanning tree. To get the port to join spanning tree, either set the duplex to full or set the channel mode to off for that port.

**Examples** This example (while in PVST+ mode) shows how to display the active spanning tree port configuration for VLAN 1:

```

Console> (enable) show spantree 1 active
VLAN 1
Spanning tree mode          PVST+
Spanning tree type          ieee

```

## show spantree

```
Spanning tree enabled

Designated Root          00-60-70-4c-70-00
Designated Root Priority  16384
Designated Root Cost     19
Designated Root Port     2/3
Root Max Age  14 sec  Hello Time 2 sec  Forward Delay 10 sec

Bridge ID MAC ADDR       00-d0-00-4c-18-00
Bridge ID Priority       32768
Bridge Max Age 20 sec  Hello Time 2 sec  Forward Delay 15 sec

Port                    Vlan Port-State  Cost      Prio Portfast Channel_id
-----
 2/3                    1 forwarding    19       32 disabled 0
 2/12                   1 forwarding    19       32 disabled 0
Console> (enable)
```

This example (while in MISTP mode) shows how to display the active spanning tree port configuration for VLAN 1:

```
Console> (enable) show spantree 1 active
VLAN 1
Spanning tree mode      MISTP
Spanning tree type      ieee
Spanning tree enabled
VLAN mapped to MISTP Instance: 1

Port                    Vlan Port-State  Cost      Prio Portfast Channel_id
-----
 2/3                    1 forwarding   200000    32 disabled 0
 2/12                   1 forwarding   200000    32 disabled 0
Console> (enable)
```

Table 2-84 describes the fields in the **show spantree** command output:

**Table 2-84 show spantree Command Output Fields**

Field	Description
VLAN	VLAN for which the spanning tree information is shown.
Spanning tree	Status of whether Spanning Tree Protocol is enabled or disabled.
Designated Root	MAC address of the designated spanning tree root bridge.
Designated Root Priority	Priority of the designated root bridge.
Designated Root Cost	Total path cost to reach the root.
Designated Root Port	Port through which the root bridge can be reached (shown only on nonroot bridges).
Root Max Age	Amount of time a BPDU packet should be considered valid.
Hello Time	Number of times the root bridge sends BPDUs.
Forward Delay	Amount of time the port spends in listening or learning mode.
Port	Port number.
Vlan	VLAN to which the port belongs.
Port-State	Spanning tree port state (disabled, inactive, not-connected, blocking, listening, learning, forwarding, bridging, or type-pvid-inconsistent).
Cost	Cost associated with the port.

*Table 2-84 show spantree Command Output Fields (continued)*

Prio	Priority associated with the port.
Portfast	Status of whether the port is configured to use the PortFast feature.
Channel_id	Channel ID number.

**Related Commands**

**show spantree backbonefast**  
**show spantree blockedports**  
**show spantree portvlancost**  
**show spantree statistics**  
**show spantree summary**  
**show spantree uplinkfast**

# show spantree backbonefast

Use the **show spantree backbonefast** command to display whether the spanning tree BackboneFast Convergence feature is enabled.

**show spantree backbonefast**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Usage Guidelines** This command is not available in MISTP mode or in MST mode.

---

**Examples** This example shows how to display whether the spanning tree BackboneFast Convergence feature is enabled:

```
Console> show spantree backbonefast
Backbonefast is enabled.
Console>
```

---

**Related Commands** [set spantree backbonefast](#)  
[show spantree defaultcostmode](#)

# show spantree blockedports

Use the **show spantree blockedports** command to display only the blocked ports on a per-VLAN or per-instance basis.

**show spantree blockedports** [*vlangs*]

**show spantree blockedports mistp-instance** [*instance*]

**show spantree blockedports mst** [*instance*]

Syntax Description	
<i>vlangs</i>	(Optional) Number of the VLANs.
<i>mistp-instance instance</i>	Keyword and optional variable to display instance-specific information; valid values are from 1 to 16.
<i>mst instance</i>	Keyword and optional variable to display instance-specific information; valid values are 0 to 15.

**Defaults** The default is all blocked ports in all VLANs are displayed.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If you do not specify a VLAN number, all blocked ports in the system are displayed.

**Examples** This example shows how to display the blocked ports for VLAN 1002:

```
Console> show spantree blockedports 1002
Number of blocked ports (segments) in VLAN 1002 : 0
Console>
```

This example shows how to display the blocked ports for an MISTP instance:

```
Console> show spantree blockedports mistp-instance 1
Number of blocked ports (segments) in Instance 1 : 0
Console>
```

This example shows how to display the blocked ports for an MST instance:

```
Console> show spantree blockedports mst 0
Number of blocked ports (segments) in Instance 0: 0
Console>
```

**Related Commands** [show spantree](#)

# show spantree bpdu-filter

Use the **show spantree bpdu-filter** command to display information about BPDU filtering.

```
show spantree bpdu-filter [mod[/port]]
```

Syntax Description	<i>mod</i>	(Optional) Number of the module.
	<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display information about BPDU filtering on module 1:

```
Console> show spantree bpdu-filter 1
Global BPDU Filter is disabled on the switch.
Port                BPDU-Filter
-----
1/1                  Enable
1/2                  Default
Console>
```

**Related Commands** [set spantree bpdu-filter](#)

# show spantree bpdu-guard

Use the **show spantree bpdu-guard** command to display information about BPDU guard.

```
show spantree bpdu-guard [mod[/port]]
```

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display information about BPDU guard on module 1:

```
Console> show spantree bpdu-guard 1
Global BPDU Guard is disabled on the switch.
Port                BPDU-Guard
-----
1/1                  Enable
1/2                  Default
Console>
```

**Related Commands** [set spantree bpdu-guard](#)

# show spantree bpdu-skewing

Use the **show spantree bpdu-skewing** command to display BPDU skewing detection status.

```
show spantree bpdu-skewing vlan [mod/port]
```

```
show spantree bpdu-skewing { mistp-instance instance } mod/port
```

```
show spantree bpdu-skewing mst [instance | mod/port]
```

Syntax Description		
<i>vlan</i>		Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.
<i>mod/port</i>		(Optional) Number of the module and the port on the module.
<i>mistp-instance instance</i>		Displays instance-specific information; valid values are from 1 to 16.
<b>mst</b>		Displays MST instance information.
<i>instance</i>		(Optional) Number of the instance; valid values are from 1 to 15.
<i>mod/port</i>		(Optional) Number of the module and the port on the module.

**Defaults** The default is the BPDU skew status for all VLANs is displayed.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is not supported by the NAM.

The **mistp-instance** *instance* options are available in MISTP mode only.

You can use this command to troubleshoot slow network convergence due to skewing. Skewing occurs when spanning tree timers lapse, expected BPDUs are not received, and spanning tree detects topology changes. The difference between the expected result and the BPDUs actually received is a *skew*. The skew causes BPDUs to reflow the network to keep the spanning tree topology database up to date.

**Examples** This example shows how to display the BPDU skew status for a VLAN:

```
Console> show spantree bpdu-skewing 1
```

```
Bpdu skewing statistics for vlan 1
```

Port	Last Skew (ms)	Worst Skew (ms)	Worst Skew Time
8/2	5869	108370	Tue Nov 21 2000, 06:25:59
8/4	4050	113198	Tue Nov 21 2000, 06:26:04
8/6	113363	113363	Tue Nov 21 2000, 06:26:05

```

.
.
8/24                4111                113922 Tue Nov 21 2000, 06:26:05
8/26                113926               113926 Tue Nov 21 2000, 06:26:05
8/28                4111                113931 Tue Nov 21 2000, 06:26:05
Console> (enable)

```

This example shows how to display the BPD skew status for a specific module and port on a VLAN:

```

Console> (enable) show spantree bpd-skewing 1 5/9
Bpdu skewing statistics for vlan 1

Port                Last Skew (ms)    Worst Skew (ms)    Worst Skew Time
-----
5/9                 3992              4407 Mon Mar 26 2001, 11:31:37
Console> (enable)

```

[Table 2-85](#) describes the fields in the **show spantree bpd-skewing** command output.

**Table 2-85** *show spantree bpd-skewing Command Output Fields*

Field	Description
Last Skew (ms)	Duration of the last skew; absolute time in milliseconds.
Worst Skew (ms)	Duration of the worst skew; absolute time in milliseconds.
Worst Skew Date	Date and time of the worst skew duration.

#### Related Commands

[set spantree bpd-skewing](#)  
[show spantree summary](#)

# show spantree conflicts

Use the **show spantree conflicts** command to display the MAC address of the root switch in the instance, the time remaining before the VLAN joins the instance, and the number of seconds left before the entry expires and is removed from the table.

**show spantree conflicts** *vlan*

Syntax Description	<i>vlan</i>	Number of the VLAN.
--------------------	-------------	---------------------

Defaults	This command has no default settings.
----------	---------------------------------------

Command Types	Switch command.
---------------	-----------------

Command Modes	Normal.
---------------	---------

Usage Guidelines	This command is available in MISTP or MISTP/PVST+ mode only.
------------------	--

This command is not available in MST mode.

When only one entry is printed (or when all the entries are associated to the same instance), the VLAN is mapped to that instance. If two or more entries are associated with different instances, then the VLAN has a conflict, is blocked, and is not mapped to any instance.

The time left timers associated with the mapping of a VLAN to an MISTP instance are started with the maximum age of the BPDU and can be up to the maximum age. This field can show “inactive” to indicate the MAC address is the same as the MAC address of the switch (for example, the switch is the root). In all the other cases, the entry is a number, and the timer restarts every time an incoming BPDU confirms the mapping.

The delay timer field can display the following:

- Number in seconds that represents the timer running; this timer can be up to the maximum forward delay. The timer is initialized with the fwd delay.
- If the timer is not running, “inactive” is displayed because the VLAN is already mapped to the instance or a conflict is in progress.

Examples	This example shows the output if there are no conflicts on the specified VLAN:
----------	--

```
Console> (enable) show spantree conflicts 1
No conflicts for vlan 1
Inst MAC                Delay      Time left
-----
 1 00-30-a3-4a-0c-00  inactive      35
Console> (enable)
```

This example shows the output if there are conflicts on the specified VLAN:

```
Console> (enable) show spantree conflicts 1
Inst MAC                Delay      Time left
-----
 1  00-30-a3-4a-0c-00  inactive   35
 3  00-30-f1-e5-00-01  inactive   23
Console> (enable)
```

Table 2-86 describes the fields in the **show spantree conflicts** command output.

**Table 2-86** *show spantree conflicts Command Output Fields*

Field	Description
Inst	Instance number that is requesting to map the VLAN.
MAC	MAC address of the root sending the BPDU claiming the VLAN, taken from the root ID of the BPDU.
Delay	Time remaining before the VLAN joins the instance.
Time left	Age of the entry, as time in seconds left before the entry expires and is removed from the table.

**Related Commands**    [show spantree mistp-instance](#)

# show spantree defaultcostmode

Use the **show spantree defaultcostmode** command to display the current default port cost mode.

**show spantree defaultcostmode**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the default port cost mode:

```
Console> (enable) show spantree defaultcostmode  
Portcost and portvlancost set to use 802.1d default values.  
Console> (enable)
```

---

**Related Commands** [set spantree defaultcostmode](#)

# show spantree guard

Use the **show spantree guard** command to display spanning tree guard information for the VLANs or instances on a port.

**show spantree guard** [*vlan*]

**show spantree guard** [*mod/port*]

**show spantree guard mistp-instance** [*instance*]

**show spantree guard mistp-instance** [*mod/port*]

**show spantree guard mst** [*instance*]

**show spantree guard mst** [*mod/port*]

Syntax Description		
<i>vlan</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.	
<i>mod/port</i>	(Optional) Number of the module and the port on the module.	
<b>mistp-instance</b>	Displays MISTP information.	
<i>instance</i>	(Optional) Number of the instance; valid values are from 1 to 16.	
<b>mst</b>	Displays MST information.	
<i>instance</i>	(Optional) Number of the instance; valid values are from 0 to 15.	

**Defaults** The default is VLAN 1, and the default port list is “all the ports” in the specified or default VLAN.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** When you enable the spanning tree root guard or loop guard feature, the command works on a per-port basis. When you enable the feature on a port, a logical port is blocked on a per-VLAN basis. This means that you can specify a port (or a list of ports) and specify a VLAN, but you cannot specify both.

**Examples**

This example shows how to display spanning tree guard information for a specific VLAN:

```

Console> show spantree guard 1004
Port Vlan Port-State      Guard type
-----
1/1  1004  root-inconsistent    root
1/2  1004  not-connected        none
2/1  1004  loop-inconsistent    loop
2/2  1004  forwarding           loop
.
.
.
Console>

```

This example shows how to display spanning tree guard information for a specific instance:

```

Console> show spantree guard mistp-instance 3
Port          Inst Port-State  Guard Type
-----
1/1          3    listening   root
1/2          3    listening   root
Console>

```

**Related Commands** [set spantree guard](#)

# show spantree mapping

Use the **show spantree mapping** to display VLAN and instance mapping information.

**show spantree mapping [config]**

<b>Syntax Description</b>	<b>config</b> (Optional) Displays mappings configured on the local switch.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	<p>If you do not enter the optional <b>config</b> keyword, the mapping information propagated from the root switch in the instance is displayed. This runtime command is available in MISTP or MISTP-PVST+ mode only. If you enter the <b>config</b> keyword, the list of mappings configured on the local switch is displayed. It is available in PVST+ mode.</p>
-------------------------	--

If you enter this command in PVST mode, this message displays:

```
Runtime vlan and instance mapping information is only available in MISTP
or
MISTP-PVST mode. Use 'show spantree mapping config' to view mappings
configured on the local switch.
```

<b>Examples</b>	This example shows how to display runtime VLAN and instance mapping information:
-----------------	--

```
Console> (enable) show spantree mapping
Inst Root Mac          Vlans
-----
1    00-50-3e-78-70-00  1
2    00-50-3e-78-70-00  -
3    00-50-3e-78-70-00  -
4    00-50-3e-78-70-00  -
5    00-50-3e-78-70-00  -
6    00-50-3e-78-70-00  -
7    00-50-3e-78-70-00  -
8    00-50-3e-78-70-00  -
9    00-50-3e-78-70-00  -
10   00-50-3e-78-70-00  -
11   00-50-3e-78-70-00  -
12   00-50-3e-78-70-00  -
13   00-50-3e-78-70-00  -
14   00-50-3e-78-70-00  -
15   00-50-3e-78-70-00  -
16   00-50-3e-78-70-00  -
Console> (enable)
```

This example shows how to display mappings configured on the local switch:

```
Console> (enable) show spantree mapping config
```

```
Inst Root Mac Vlan
```

```
-----  
1 - 1  
2 - -  
3 - -  
4 - -  
5 - -  
6 - -  
7 - -  
8 - -  
9 - -  
10 - -  
11 - -  
12 - -  
13 - -  
14 - -  
15 - -  
16 - -
```

```
Console> (enable)
```

**Related Commands** [set vlan](#)

# show spantree mistp-instance

Use the **show spantree mistp-instance** command to display instance information.

**show spantree mistp-instance** [*instance*] [**active**]

**show spantree mistp-instance** *mod/port*

Syntax Description	
<i>instance</i>	(Optional) Instance number; valid values are from 1 to 16.
<b>active</b>	(Optional) Displays only active ports.
<i>mod/port</i>	Number of the module and the port on the module.

**Defaults** The default instance is 1.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is available in MISTP mode only.  
If you specify the *mod/port* number only, the VLAN mapping information is not displayed.

**Examples** This example shows how to display information regarding active instances only:

```

Console> show spantree mistp-instance active
Instance 1
Spanning tree mode          MISTP
Spanning tree type          ieee
Spanning tree instance enabled

Designated Root             00-d0-00-4c-18-00
Designated Root Priority     32769 (root priority: 32768, sys ID ext: 1)
Designated Root Cost        0
Designated Root Port        none
VLANs mapped:               1
Root Max Age 20 sec Hello Time 2 sec Forward Delay 15 sec

Bridge ID MAC ADDR          00-d0-00-4c-18-00
Bridge ID Priority           32769 (bridge priority: 32768, sys ID ext: 1)
VLANs mapped:               1
Bridge Max Age 20 sec Hello Time 2 sec Forward Delay 15 sec

Port                        Inst Port-State    Cost      Prio Portfast Channel_id
-----
2/3                         1 forwarding      200000    32 disabled 0
2/12                        1 forwarding      200000    32 disabled
Console>

```

Table 2-87 describes the fields in the **show spantree mistp-instance** command output:

**Table 2-87 show spantree mistp-instance Command Output Fields**

Field	Description
Instance	Instance for which spanning tree information is shown.
Spanning tree mode	Spanning tree mode.
Spanning tree type	Spanning tree type.
Spanning tree instance	Status of whether spanning tree instance is enabled or disabled.
Designated Root	MAC address of the designated spanning tree root bridge.
Designated Root Priority	Priority of the designated root bridge.
Designated Root Cost	Total path cost to reach the root.
Designated Root Port	Port through which the root bridge can be reached (shown only on nonroot bridges).
VLANs mapped	Number of VLANs mapped.
Root Max Age	Amount of time a BPDU packet should be considered valid.
Hello Time	Number of times the root bridge sends BPDUs.
Forward Delay	Amount of time the port spends in listening or learning mode.
Bridge ID MAC ADDR	Bridge MAC address.
Bridge ID Priority	Part of the bridge identifier and is taken as the most significant part of the bridge ID comparisons.
Bridge Max Age	Bridge maximum age.
Hello Time	Amount of time the bridge sends BPDUs.
Forward Delay	Amount of time the bridge spends in listening or learning mode.
Port	Port number.
Instance	Instance to which the port belongs.
Port-State	Spanning tree port state (disabled, inactive, not-connected, blocking, listening, learning, forwarding, bridging, or type-pvid-inconsistent).
Cost	Cost associated with the port.
Prio	Priority associated with the port.
Portfast	Status of whether the port is configured to use the PortFast feature.
Channel_id	Channel ID number.

#### Related Commands

**set spantree portinstancecost**  
**set spantree portinstancepri**

# show spantree mst

Use the **show spantree mst** command to display multiple spanning tree (MST) information.

**show spantree mst** [*instance* | *mod/port*]

**show spantree mst active**

Syntax Description	
<i>instance</i>	Number of the instance; valid values are from 0 to 15.
<i>mod/port</i>	Number of the module and the port on the module.
<b>active</b>	Displays active IST ports only.

**Defaults** The default instance is instance 0 (IST).

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** You can use the **show spantree mst** command to display VLAN-specific spanning tree information.

**Examples** This example shows how to display MST information:

```

Console> (enable) show spantree mst
Spanning tree mode           MST
Instance                     0
VLANs Mapped:                2-4094

Designated Root              00-04-9b-ba-48-00
Designated Root Priority     32768 (root priority:32768, sys ID ext:0)
Designated Root Cost         2000000
Designated Root Port         7/48
Root Max Age 20 sec Hello Time 2 sec Forward Delay 15 sec

IST Master ID MAC ADDR       00-d0-00-b3-68-00
IST Master ID Priority        32768
IST Master Path Cost          0           Remaining Hops 20

Bridge ID MAC ADDR           00-d0-00-b3-68-00
Bridge ID Priority            32768 (bridge priority:32768, sys ID ext:0)
Bridge Max Age 20 sec Hello Time 2 sec Forward Delay 15 sec Max Hops 20

Port                          State          Role Cost      Prio Type
-----
5/1                          forwarding    DESG  20000    32 P2P, Boundary(STP)
5/2                          forwarding    DESG  20000    32 P2P, Boundary(STP)
7/48                          forwarding    ROOT 2000000    32 Shared, Boundary
Console> (enable)

```

This example shows how to display MST instance-specific information for instance 1:

```

Console> (enable) show spantree mst 1
Spanning tree mode           MST
Instance                     1
VLANs Mapped:                1

Designated Root              00-d0-00-b3-68-00
Designated Root Priority      32769 (root priority:32768, sys ID ext:1)
Designated Root Cost         0      Remaining Hops 20
Designated Root Port         1/0

Bridge ID MAC ADDR           00-d0-00-b3-68-00
Bridge ID Priority            32769 (bridge priority:32768, sys ID ext:1)

Port                          State          Role Cost    Prio Type
-----
5/1                           forwarding    BDRY   20000    32 P2P, Boundary(STP)
5/2                           forwarding    BDRY   20000    32 P2P, Boundary(STP)
7/48                          forwarding    BDRY  2000000  32 Shared, Boundary
Console> (enable)

```

This example shows how to display MST instance-specific information for port 6 on module 3:

```

console> show spantree mst 3/6
Boundary Port: Yes (STP)
Edge Port: No, (Configured) Default
Port Guard: Default
Link Type: P2P(Configured) Auto
Inst State      Role Cost    Prio VLANs
-----
--
0 forwarding    ROOT 2000000  32 1
Console>

```

#### Related Commands

[clear spantree mst](#)  
[set spantree mst config](#)  
[set spantree mst redetect-protocol](#)  
[show spantree](#)  
[show spantree mst config](#)

# show spantree mst config

Use the **show spantree mst config** command to display the MST region information present in NVRAM and to display changes that have not been applied to the MST region configuration yet.

## show spantree mst config

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display the MST region information:

```

Console> show spantree mst config
Currnet (NVRAM) MST Configuration
Configuration Name: Cisco                               Revision: 1
Instance Vlans
-----
IST      401-1005,1025-1999,2201-4096
1        1-50
2        51-100
3        101-300
4        -
5        -
6        2000-2200
7        301-400
8        -
9        -
10       -
11       -
12       -
13       -
14       -
15       -
=====
New MST Region Configuration (Not applied yet)

Region Name: Catalyst                               Revision: 6000
Instance Vlans
-----
IST      1-50,401-1005,1025-1999,2201-4096
1        -
2        51-100
3        101-300
4        -
5        -
6        2000-2200

```

```
show spantree mst config
```

```
7          301-400
8          -
9          -
10         -
11         -
12         -
13         -
14         -
15         -
=====
Edit buffer is locked by: Console
Console> (enable)
```

#### Related Commands

```
clear spantree mst
set spantree mst config
set spantree mst redetect-protocol
```

# show spantree portfast

Use the **show spantree portfast** command to display PortFast information.

**show spantree portfast** [*mod/port*]

<b>Syntax Description</b>	<i>mod/port</i> (Optional) Number of the module and the port on the module.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	When you enter the <b>show spantree portfast</b> command, if the designation for a port is displayed as an edge port, it is a PortFast port. Refer to Chapter 8, “Configuring Spanning Tree,” and Chapter 9, “Configuring Spanning Tree PortFast, UplinkFast, BackboneFast, and Loop Guard,” of the <i>Catalyst 6500 Series Software Configuration Guide</i> for more information about PortFast.
-------------------------	---

<b>Examples</b>	This example shows how to display PortFast information:
-----------------	---

```
Console> show spantree portfast
Portfast BPDU guard is disabled.
Portfast BPDU filter is disabled.
Console>
```

This example shows how to display PortFast information for a specific module and port:

```
Console> show spantree portfast 3/1
Portfast:      Default
BPDU Filter:  Enable
BPDU Guard:   Default
Portfast BPDU guard is disabled.
Portfast BPDU filter is disabled.
Console>
```

<b>Related Commands</b>	<a href="#">set spantree portfast</a> <a href="#">set spantree portfast bpdu-filter</a> <a href="#">set spantree portfast bpdu-guard</a>
-------------------------	--

# show spantree portinstancecost

Use the **show spantree portinstancecost** command to show the path cost for the instances on a port.

**show spantree portinstancecost** *mod/port*

<b>Syntax Description</b>	<i>mod/port</i> Number of the module and the port on the module.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display the path cost for the MISTP instances on port 1/1:
-----------------	--

```
Console> show spantree portinstancecost 1/1
Port 1/1 instances 1-16 have path cost 20000.
Console>
```

<b>Related Commands</b>	<a href="#">clear spantree portinstancecost</a> <a href="#">set spantree portinstancecost</a>
-------------------------	--

# show spantree portvlancost

Use the **show spantree portvlancost** command to show the path cost for the VLANs or extended-range VLANs.

**show spantree portvlancost** *mod/port* | **extended-range**

<b>Syntax Description</b>	<i>mod/port</i>	Number of the module and the port on the module.
	<b>extended-range</b>	Specifies extended-range VLANs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** This command is valid in PVST+ mode only.  
Extended-range VLANs are from 1025 to 4094 and cannot be managed using VTP.

**Examples** This example shows how to display the path cost for the VLANs on port 2/12:

```
Console> show spantree portvlancost 2/12
Port 2/12 VLANs 1-1005 have path cost 19.
Console>
```

**Related Commands** [clear spantree portvlancost](#)  
[set spantree portvlancost](#)

# show spantree statistics

Use the **show spantree statistics** command to show spanning tree statistical information.

**show spantree statistics** *mod/port* [*vlan*]

**show spantree statistics** *mod/port* **mistp-instance** [*instance*]

**show spantree statistics** *mod/port* **mst** [*instance*]

Syntax Description		
<i>mod/port</i>		Number of the module and the port on the module.
<i>vlan</i>		(Optional) Number of the VLAN; valid values are from 1 to 1001 and from 1025 to 4094.
<b>mistp-instance</b> <i>instance</i>		Displays MISTP instance-specific information; valid values are from 1 to 16.
<b>mst</b> <i>instance</i>		Displays MST instance-specific information; valid values are from 0 to 15.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display statistical information:

```
Console> (enable) show spantree statistics 1/2 1005
```

```
SpanningTree enabled for vlanNo = 1005
```

```

                BPDU-related parameters
port spanning tree      enabled
state                   disabled
port_id                 0xcccf
port number             0x7eb
path cost                80
message age (port/VLAN) 0(10)
designated_root          00-10-2f-52-eb-ec
designated_cost          0
designated_bridge        00-10-2f-52-eb-ec
designated_port          0xcccf
top_change_ack          FALSE
config_pending          FALSE

```

```

                PORT based information & statistics
config bpdu's xmitted (port/VLAN) 0(0)
config bpdu's received (port/VLAN) 0(0)
tcn bpdu's xmitted (port/VLAN) 0(0)
tcn bpdu's received (port/VLAN) 0(0)

```

```

forward trans count          0

      Status of Port Timers
forward delay timer         INACTIVE
forward delay timer value   0
message age timer          INACTIVE
message age timer value    0
topology change timer      INACTIVE
topology change timer value 0
hold timer                 INACTIVE
hold timer value           0
delay root port timer      INACTIVE
delay root port timer value 0

      VLAN based information & statistics
spanningtree type          ibm
spanningtree multicast address c0-00-00-00-01-00
bridge ID priority          32768 (bridge priority: 32768, sys ID ext:
64)
bridge mac address         00-10-2f-52-eb-ec
bridge hello time          2 sec
bridge forward delay       4 sec
topology change initiator: 1/0
topology change            FALSE
topology change time       14
topology change detected   FALSE
topology change count      0

      Other port-specific info
dynamic max age transitions 0
port bpdu ok count         0
msg age expiry count       0
link loading               1
bpdu in processing         FALSE
num of similar bpdus to process 0
next state                 0
src mac count:            0
total src mac count        0
curr_src_mac               00-00-00-00-00-00
next_src_mac               00-00-00-00-00-00
channel_src_mac            00-00-00-00-00-00
channel src count          0
channel ok count           0
Console> (enable)

```

This example shows how to display instance-specific information:

```

Console> (enable) show spantree statistics 2 mistp-instance 2
Port 2/1 Instance 2

```

```

SpanningTree enabled for instance = 2

```

```

      BPDU-related parameters
port spanning tree         enabled
state                     forwarding
port_id                   0x8041
port number               0x41
path cost                 20000
message age (port/inst)   1(20)
designated_root            00-50-3e-8f-8c-00
designated_cost            0
designated_bridge          00-50-3e-8f-8c-00
designated_port            0x8001
top_change_ack            FALSE

```

## show spantree statistics

```

config_pending                FALSE
port_inconsistency           none

                                PORT based information & statistics
config bpdu's xmitted (port/inst)  0(0)
config bpdu's received (port/inst) 102(490)
tcn bpdu's xmitted (port/inst)    0(0)
tcn bpdu's received (port/inst)    0(0)
forward trans count             0
scp failure count               0

                                Status of Port Timers
forward delay timer             INACTIVE
forward delay timer value       15
message age timer               ACTIVE
message age timer value         1
topology change timer           INACTIVE
topology change timer value     0
hold timer                      INACTIVE
hold timer value                0
delay root port timer           INACTIVE
delay root port timer value     0
delay root port timer restarted is FALSE

                                Instance based information & statistics
spanningtree type              ieee
spanningtree multicast address  01-80-c2-00-00-00
bridge priority                 32770
bridge mac address              00-d0-00-b3-68-00
bridge hello time               2 sec
bridge forward delay            15(15) sec
topology change initiator:      15/63
last topology change occurred:  Sun Jun 7 2000, 09:00:03
topology change                 FALSE
topology change time            35
topology change detected        FALSE
topology change count           0
topology change last recvd. from 00-00-00-00-00-00

                                Other port-specific info
dynamic max age transitions      0
port bpdu ok count              0
msg age expiry count            0
link loading                     1
bpdu in processing               FALSE
num of similar bpdus to process  0
received_inferior_bpdu          FALSE
next state                       3
src mac count:                   0
total src mac count              0
curr_src_mac                     00-00-00-00-00-00
next_src_mac                      00-00-00-00-00-00
channel_src_mac                   00-00-00-00-00-00
channel src count                 0
channel ok count                  0
Console>

```

This example shows how to display MST instance-specific information:

```

Console> show spantree statistics 8/1 mst 0
Port 8/1 Instance 0

SpanningTree enabled for instance = 0

                BPDU-related parameters
port spanning tree      enabled
state                   forwarding
port_id                 0x81c1
port number             0x1c1
path cost                20000
message age (port/VLAN) 0(20)
designated_root          00-04-9b-ba-48-00
designated_cost          33920
designated_bridge        00-10-7b-bb-2f-00
designated_port          0x81c1
top_change_ack          FALSE
config_pending          FALSE
port_inconsistency      none

                PORT based information & statistics
config bpdu's xmitted (port/inst) 101(212)
config bpdu's received (port/inst) 101(205)
tcn bpdu's xmitted (port/inst) 0(1)
tcn bpdu's received (port/inst) 0(2)
forward trans count      0
scp failure count        0
root inc trans count (port/inst) 0(0)
inhibit loopguard        FALSE
loop inc trans count (port/inst) 0(0)

                Status of Port Timers
forward delay timer      INACTIVE
forward delay timer value 0
message age timer        INACTIVE
message age timer value 0
topology change timer    INACTIVE
topology change timer value 0
hold timer                INACTIVE
hold timer value         0
delay root port timer    INACTIVE
delay root port timer value 0
delay root port timer restarted is FALSE

                Vlan based information & statistics
spanningtree type        ieee
spanningtree multicast address 01-80-c2-00-00-00
bridge priority           32768
bridge mac address        00-10-7b-bb-2f-00
bridge hello time         2 sec
bridge forward delay      15(15) sec
topology change initiator: 1/0
last topology change occurred: Fri Sep 7 2001, 09:52:22
topology change           FALSE
topology change time      35
topology change detected   FALSE
topology change count      3
topology change last recvd. from 00-00-00-00-00-00

                Other port-specific info
dynamic max age transitions 0
port bpdu ok count         0

```

■ show spantree statistics

```

msg age expiry count          0
link loading                  0
bpdu in processing           FALSE
num of similar bpdus to process 0
received_inferior_bpdu      FALSE
next state                    3
src mac count:                0
total src mac count          0
curr_src_mac                  00-00-00-00-00-00
next_src_mac                  00-00-00-00-00-00
channel_src_mac               00-00-00-00-00-00
channel src count             0
channel ok count              0
Console>

```

Table 2-88 describes the possible fields in the **show spantree statistics** command output.

**Table 2-88 show spantree statistics Command Output Fields**

Field	Description
<b>BPDU-related parameters</b>	
port spanning tree	Status of whether Spanning Tree Protocol is enabled or disabled on the port.
state	Spanning tree port state (disabled, listening, learning, forwarding, or blocking).
port_id	Port identifier of the associated port.
port number	Port number.
path cost	Contribution of the path through this root port. This applies to the total path cost to the root for this bridge.
message age (port/VLAN)	Age of the received protocol information recorded for a port and the value of the Max Age parameter (shown in parentheses) recorded by the switch.
designated_root	MAC address of the designated spanning tree root bridge.
designated_cost	Cost of the path to the root offered by the designated port on the LAN to which this port is attached.
designated_bridge	Bridge identifier of the bridge assumed to be the designated bridge for the LAN associated with the port.
designated_port	Port identifier of the bridge port assumed to be the designated port for the LAN associated with the port.
top_change_ack	Value of the Topology Change Acknowledgement flag in the next configured BPDU to be transmitted on the associated port. The flag is set in reply to a Topology Change Notification BPDU.
config_pending	Boolean parameter set to record that a configured BPDU should be transmitted on expiration of the hold timer for the associated port.
port_inconsistency	Status of whether the port is in an inconsistent (PVID or port type) state or not.
<b>PORT-based information and statistics</b>	
config bpdu's xmitted (port/VLAN)	Number of BPDUs transmitted from the port. The number in parentheses is the number of configured BPDUs transmitted by the switch for this instance of spanning tree.
config bpdu's received (port/VLAN)	Number of BPDUs received by this port. The number in parentheses is the number of configured BPDUs received by the switch for this instance of spanning tree.
tcn bpdu's xmitted (port/VLAN)	Number of TCN BPDUs transmitted on this port.

Table 2-88 show spantree statistics Command Output Fields (continued)

Field	Description
tcn bpdu's received (port/VLAN)	Number of TCN BPDUs received on this port.
forward trans count	Number of times the port state transitioned to forwarding state.
scp failure count	Number of SCP failures.
<b>Status of Port Timers</b>	
forward delay timer	Status of the forward delay timer. This timer monitors the time spent by a port in the listening and learning states.
forward delay timer value	Current value of the forward delay timer.
message age timer	Status of the message age timer. This timer measures the age of the received protocol information recorded for a port.
message age timer value	Current value of the message age timer.
topology change timer	Status of the topology change timer. This timer determines the time period in which configured BPDUs are transmitted with the topology change flag set by the bridge when it is the root following the detection of a topology change.
topology change timer value	Current value of the topology change timer.
hold timer	Status of the hold timer. This timer ensures that configured BPDUs are not transmitted too frequently through any bridge port.
hold timer value	Current value of the hold timer.
delay root port timer	Status of the delay root port timer. This timer enables fast convergence on linkup when the UplinkFast feature is enabled.
delay root port timer value	Current value of the delay root port timer.
<b>VLAN-based information and statistics</b>	
spanningtree type	Type of spanning tree (IEEE, IBM, CISCO).
spanningtree multicast address	Destination address used to send out configured BPDUs on a bridge port.
bridge ID priority	Part of the bridge identifier and is taken as the most significant part bridge ID comparisons.
bridge mac address	Bridge MAC address.
bridge hello time	Value of the Hello Time parameter when the bridge is the root or is attempting to become the root.
bridge forward delay	Value of the Forward Delay parameter when the bridge is the root or is attempting to become the root.
topology change initiator:	Number of the port that caused the topology change.
topology change	Boolean parameter set to record the value of the topology change flag in config BPDUs to be transmitted by the bridge on LANs for which the bridge is the designated bridge.
topology change time	Time period for which BPDUs are transmitted with the topology change flag set by the bridge when it is the root following the detection of a topology change. It is equal to the sum of the bridge's Max Age and Forward Delay parameters.

■ show spantree statistics

**Table 2-88** show spantree statistics Command Output Fields (continued)

Field	Description
topology change detected	Boolean parameter set to TRUE when a topology change has been detected by or notified to the bridge.
topology change count	Number of times the topology change has occurred.
topology change last recvd. from	MAC address of the bridge that transmitted the last TCN BPDU.
<b>Other port-specific info</b>	
dynamic max age transitions	Number of dynamic max age transitions.
port bpdu ok count	Number of reported port BPDU counts.
msg age expiry count	Number of message age expires.
link loading	Status of whether the link is oversubscribed.
bpdu in processing	Status of whether the BPDU is under processing.
num of similar bpdus to process	Number of similar BPDUs to process that are received on a specific port.
received_inferior_bpdu	Status of whether the port received an inferior BPDU or in response to an RLQ BPDU.
next state	Port state before it is actually set by spanning tree, to facilitate other tasks in using the new value.
src mac count:	Number of BPDUs with the same source MAC address.
total src mac count	Number of BPDUs with all the source MAC addresses.
curr_src_mac	Source MAC address of the configured BPDU received on a particular port. It should always be set to NULL for the Catalyst 6500 series switches.
next_src_mac	MAC address from the different source. It should always be set to NULL for the Catalyst 6500 series switches.
channel_src_mac	Source MAC address of the channel port. It is used to detect channel misconfiguration and avoid spanning tree loops.
channel src count	Number of times channel_src_mac gets changed and if the limit is exceeded, a channel misconfiguration is detected.
channel ok count	Number of times the channel ok condition was detected.

**Related Commands**

[clear spantree statistics](#)  
[show spantree](#)

# show spantree summary

Use the **show spantree summary** command to display a summary of spanning tree information.

**show spantree summary [novlan]**

**show spantree summary {mistp-instance | mst} [noinstance]**

Syntax Description	
<b>novlan</b>	(Optional) Displays non-VLAN-specific information only.
<b>mistp-instance</b>	Displays MISTP instance-specific information only.
<b>mst</b>	Displays MST instance-specific information only.
<b>noinstance</b>	(Optional) Displays non-instance-specific information only.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** If the switch is not the root for any VLANs, “none” is displayed in the “Root switch for vlans” field.

**Examples** This example shows how to display a summary of spanning tree information:

```

Console> show spantree summary
MAC address reduction: disabled
Root switch for vlans: none.
BPDU skewing detection disabled for the bridge
BPDU skewed for vlans: none.
Portfast bpdu-guard disabled for bridge.
Portfast bpdu-filter disabled for bridge.
Uplinkfast disabled for bridge.
Backbonefast disabled for bridge.

Summary of connected spanning tree ports by vlan

VLAN  Blocking Listening Learning Forwarding STP Active
-----
      1          0          0          0          3          3

          Blocking Listening Learning Forwarding STP Active
          -----
Total          0          0          0          3          3
Console>

```

This example shows how to display non-VLAN-specific information only:

```

Console> (enable) show spantree summary novlan
MAC address reduction:disabled

```

## show spantree summary

```

Root switch for vlans:1-8,10-500,911.
BPDU skewing detection enabled for the bridge
BPDU skewed for vlans:1-8,10-500,911.
Portfast bpdu-guard disabled for bridge.
Portfast bpdu-filter disabled for bridge.
Uplinkfast disabled for bridge.
Backbonefast disabled for bridge.

      Blocking Listening Learning Forwarding STP Active
-----
Total      506          0          0          506          1012
Console> (enable)

```

This example shows how to display a summary of spanning tree instance information:

```

Console> show spantree summary mistp-instance
MAC address reduction:disabled
Root switch for vlans:1-8,10-500,911.
BPDU skewing detection enabled for the bridge
BPDU skewed for vlans:1-8,10-500,911.
Portfast bpdu-guard disabled for bridge.
Portfast bpdu-filter disabled for bridge.
Uplinkfast disabled for bridge.
Backbonefast disabled for bridge.

Summary of connected spanning tree ports by mistp-instance

```

Inst	Blocking	Listening	Learning	Forwarding	STP	Active
1	0	0	0	8		0
2	4	0	0	4		8
3	4	0	0	4		8
4	4	0	0	4		8
5	4	0	0	4		8
6	4	0	0	4		8
7	4	0	0	4		8
8	4	0	0	4		8
9	4	0	0	4		8
10	4	0	0	4		8
11	4	0	0	4		8
12	4	0	0	4		8
13	4	0	0	4		8
14	4	0	0	4		8
15	4	0	0	4		8
16	0	0	0	0		0
	Blocking	Listening	Learning	Forwarding	STP	Active
Total	56	0	0	64		112

```

Console>

```

This example shows how to display a summary of spanning tree MST instance information:

```

Console> show spantree summary mst
MAC address reduction:disabled
Root switch for MST instances:none.
Global loopguard is disabled on the switch.
Global portfast is disabled on the switch.
BPDU skewing detection enabled for the bridge.
BPDU skewed for MST instances: none.
Portfast bpdu-guard disabled for bridge.
Portfast bpdu-filter disabled for bridge.

Summary of connected spanning tree ports by MST instances

```

Inst	Blocking	Listening	Learning	Forwarding	STP Active
0	0	0	0	3	3
1	0	0	0	0	0
2	0	0	0	0	0
3	0	0	0	0	0
4	0	0	0	0	0
5	0	0	0	0	0
6	0	0	0	0	0
7	0	0	0	0	0
8	0	0	0	0	0
9	0	0	0	0	0
10	0	0	0	0	0
11	0	0	0	0	0
12	0	0	0	0	0
13	0	0	0	0	0
14	0	0	0	0	0
15	0	0	0	0	0
Total	0	0	0	3	3

Console>

This example shows how to display a summary of spanning tree noninstance-specific MST information:

```

Console> show spantree summary mst noinstance
MAC address reduction:disabled
Root switch for MST instances:none.
Global loopguard is disabled on the switch.
Global portfast is disabled on the switch.
BPDU skewing detection enabled for the bridge.
BPDU skewed for MST instances: none.
Portfast bpdu-guard disabled for bridge.
Portfast bpdu-filter disabled for bridge.

```

Blocking	Listening	Learning	Forwarding	STP Active
Total	0	0	0	3

Console>

Related Commands [show spantree](#)

# show spantree uplinkfast

Use the **show spantree uplinkfast** command to show the UplinkFast feature settings.

```
show spantree uplinkfast [{mistp-instance instances}] | vlangs
```

Syntax Description	<b>mistp-instance</b> <i>instances</i>	(Optional) Keyword and (optional) variable to display instance-specific information; valid values are from 1 to 16.
	<i>vlangs</i>	(Optional) Number of the VLAN; valid values are from 1 to 1005 and from 1025 to 4094.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The **mistp-instance** *instances* keyword and optional variable are available in MISTP or MISTP/PVST+ mode only.

The *vlangs* variable is available in PVST+ mode only.

You can enter a single VLAN or instance or a range of VLANs or instances separated by commas.

If you do not specify a VLAN or instance, all VLANs or instances are displayed.

This command is not available in MST mode.

**Examples** This example shows how to display the UplinkFast feature settings for all VLANs:

```
Console> show spantree uplinkfast
Station update rate set to 15 packets/100ms.
uplinkfast all-protocols field set to off.
VLAN port list
-----
1-20   1/1(fwd),1/2-1/5
21-50  1/9(fwd), 1/6-1/8, 1/10-1/12
51-100 2/1(fwd), 2/12
Console>
```

This example shows how to display the UplinkFast feature settings for a specific instance:

```
Console> show spantree uplinkfast mistp-instance 1
Station update rate set to 15 packets/100ms.
uplinkfast all-protocols field set to off.
Inst  port list
-----
1     4/1(fwd)
Console>
```

**Related Commands**

[clear spantree uplinkfast](#)  
[set spantree uplinkfast](#)

# show startup-config

Use the **show startup-config** command to display the startup configuration file contained in NVRAM or specified by the CONFIG\_FILE environment variable.

## show startup-config

<b>Syntax Description</b>	This command has no arguments or keywords.
<b>Defaults</b>	This command has no default settings.
<b>Command Types</b>	Switch command.
<b>Command Modes</b>	Privileged.
<b>Usage Guidelines</b>	To view specific information within the <b>show startup-config</b> output, if you enter <i>/text</i> and press the <b>Return</b> key at the --More-- prompt, the display starts two lines above the line containing the <i>text</i> string. If the text string is not found, "Pattern Not Found" is displayed. You can also enter " <b>n</b> " at the --More-- prompt to search for the last entered <i>text</i> string.
<b>Examples</b>	<p>This example shows how to display the switch startup configuration:</p> <pre> Console&gt; (enable) <b>show startup-config</b> This command shows non-default configurations only. Use 'show config all' to show both default and non-default configurations. .....  .....  ..  begin ! # ***** NON-DEFAULT CONFIGURATION ***** ! ! #time: Mon Jun 11 2001, 06:56:10 ! #version 6.3(0.56)PAN !  ! #! </pre>

```

#vtp
set vtp domain dan
set vtp mode transparent
set vlan 1 name default type ethernet mtu 1500 said 100001 state active
set vlan 1002 name fddi-default type fddi mtu 1500 said 101002 state active
set vlan 1004 name fddinet-default type fddinet mtu 1500 said 101004 state active
set stp ieee
set vlan 1005 name trnet-default type trbrf mtu 1500 said 101005 state active
set vtp mode transparent
set vlan 2,10-11
set vlan 1003 name token-ring-default type trcrf mtu 1500 said 101003 state active
set vtp mode srbrf aremaxhop 7 stemaxhop 7 backupcrf off
!
#ip
set interface sc0 1 172.20.52.19/255.255.255.224 172.20.52.31

set ip route 0.0.0.0/0.0.0.0 172.20.52.1
!
#set boot command
set boot config-register 0x10f
set boot system flash bootflash:cat6000-sup2-d.6-3-0-56-PAN.bin
set boot system flash bootflash:cat6000-sup2-d.6-3-0-54-PAN.bin
set boot system flash bootflash:cat6000-sup2-d.6-3-0-46-PAN.bin
set boot system flash bootflash:cat6000-sup2-d.6-3-0-44-PAN.bin
set boot system flash bootflash:
!
#qos
set qos wred lp2q2t tx queue 1 60:80 80:100
set qos wred lp2q2t tx queue 2 60:80 80:100
set qos wred lp3qlt tx queue 1 80:100
set qos wred lp3qlt tx queue 2 80:100
set qos wred lp3qlt tx queue 3 80:100
!
#mmls nonrpf
set mmls nonrpf timer 0
!
#security ACLs
clear security acl all
#pbf set
set pbf mac 00-01-64-61-39-c3
#adj set
set security acl adjacency ADJ2 10 00-00-00-00-00-0a 00-00-00-00-00-0b mtu 9600
#
commit security acl all
!
# default port status is enable
!
!
#module 1 empty
!
#module 2 : 2-port 1000BaseX Supervisor
!
#module 3 : 48-port 10/100BaseTX Ethernet
set vlan 10 3/1
set vlan 11 3/2
!
#module 4 empty
!
#module 5 : 0-port Switch Fabric Module
!
#module 6 empty
!
#module 7 empty
!

```

**show startup-config**

```
#module 8 empty
!  
#module 9 empty
!  
#module 15 empty
!  
#module 16 empty
end  
Console> (enable)
```

**Related Commands**    [show running-config](#)

# show summertime

Use the **show summertime** command to display the current status of the **summertime** feature.

## **show summertime**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the current status of the **summertime** feature:

```
Console> show summertime
Summertime is disabled and set to ''
Start : Thu Apr 13 2000, 04:30:00
End   : Mon Jan 21 2002, 05:30:00
Offset: 1440 minutes (1 day)
Recurring: no
Console>
```

---

**Related Commands** [set summertime](#)

# show system

Use the **show system** command to display system information.

## show system

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The switching bus traffic values displayed apply to a single bus.

**Examples** This example shows how to display system information:

```

Console> show system
PS1-Status PS2-Status
-----
none      ok

Fan-Status Temp-Alarm Sys-Status Uptime d,h:m:s Logout
-----
ok        off      ok        1,22:38:21  20 min

PS1-Type          PS2-Type
-----
none              WS-CAC-1300W
Modem  Baud  Traffic Peak Peak-Time
-----
disable 9600  0%      0% Mon Jan 10 2000, 15:23:31

PS1 Capacity: 1153.32 Watts (27.46 Amps @42V)

System Name          System Location          System Contact          CC
-----
Information Systems  Closet 230 4/F           Xena ext. 24
Console>

```

This example shows how to display system information on a system configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

```

Console> show system
Console> (enable) show system
PS1-Status PS2-Status
-----
ok          none

Fan-Status Temp-Alarm Sys-Status Uptime d,h:m:s Logout
-----
ok          off          ok          5,22:12:33    20 min

PS1-Type          PS2-Type
-----
WS-CAC-1300W     none

Modem   Baud   Backplane-Traffic Peak Peak-Time
-----
disable 9600   0%                0% Tue Mar 5 2002, 11:44:07

PS1 Capacity: 1153.32 Watts (27.46 Amps @42V)

System Name          System Location          System Contact          CC
-----
Fab Chan Input Output
-----
0      0%    0%
1      0%    0%
2      0%    0%
3      0%    0%
4      0%    0%
5      0%    0%
6      0%    0%
7      0%    0%
8      0%    0%
9      0%    0%
10     0%    0%
11     0%    0%
12     0%    0%
13     0%    0%
14     0%    0%
15     0%    0%
16     0%    0%
17     0%    0%

Core Dump          Core File
-----
disabled          slot0:crashinfo

Console>

```

Table 2-89 describes the fields in the **show system** command output.

**Table 2-89** *show system* Command Output Fields

Field	Description
PS1-Status	Status of power supply 1 (ok, fan failed, faulty, or none).
PS2-Status	Status of power supply 2 (ok, fan failed, faulty, or none).

*Table 2-89 show system Command Output Fields (continued)*

Field	Description
Fan-Status	Status of the fan (ok, faulty, or other).
Temp-Alarm	Status of whether the temperature alarm is off or on.
Sys-Status	System status (ok or faulty). Corresponds to system LED status.
Uptime d, h:m:s	Amount of time in days, hours, minutes, and seconds, that the system has been up and running.
Logout	Amount of time after which an idle session is disconnected.
PS1-Type	Part number of the power supply.
PS2-Type	Part number of the redundant power supply, if present.
Modem	Status of the modem status (enable or disable).
Baud	Baud rate to which the modem is set.
Traffic	Current traffic percentage.
Peak	Peak percentage of traffic on the backplane.
Peak-Time	Time stamp when peak percentage was recorded.
PS1 Capacity	Power supply 1 maximum capacity.
PS2 Capacity	Power supply 2 maximum capacity.
PS Configuration	Power supply configuration.
System Name	System name.
System Location	System location.
System Contact	System contact information.
CC	Country code string.
Backplane-Traffic	Current traffic percentage.
Fabric Chan	Number of the fabric channel.
Input	Percentage of fabric channel utilization for input.
Output	Percentage of fabric channel utilization for output.

**Related Commands**

[set system baud](#)  
[set system contact](#)  
[set system location](#)  
[set system modem](#)  
[set system name](#)

# show system highavailability

Use the **show system highavailability** command to display the system high-availability configuration settings.

**show system highavailability**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the system high-availability configuration settings:

```
Console> (enable) show system highavailability
Highavailability:disabled
Highavailability versioning:disabled
Highavailability Operational-status:OFF(high-availability-not-enabled)
Console> (enable)
```

---

**Related Commands** [set system highavailability](#)  
[set system highavailability versioning](#)

# show system switchmode

Use the **show system switchmode** command to display the system switching mode setting.

**show system switchmode**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the system switching mode:

```
Console> show system switchmode
Switching-mode allow:truncated
Switching-mode threshold:2
Console>
```

---

**Related Commands** [set system switchmode allow](#)

# show tacacs

Use the **show tacacs** command to display the TACACS+ protocol configuration.

**show tacacs [noalias]**

<b>Syntax Description</b>	<b>noalias</b> (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

**Examples** This example shows how to display the TACACS+ protocol configuration:

```

Console> show tacacs
Login Authentication: Console Session  Telnet Session
-----
tacacs                disabled          disabled
local                 enabled(primary)  enabled(primary)

Enable Authentication: Console Session  Telnet Session
-----
tacacs                disabled          disabled
local                 enabled(primary)  enabled(primary)

Tacacs login attempts:3
Tacacs timeout:5 seconds
Tacacs direct request:disabled

Tacacs-Server                Status
-----
171.69.193.114              primary
Console>

```

[Table 2-90](#) describes the fields in the **show tacacs** command output.

**Table 2-90 show tacacs Command Output Fields**

Field	Description
Login authentication	Display of the login authentication types.
Console Session	Status of whether the console session is enabled or disabled.
Telnet Session	Status of whether the Telnet session is enabled or disabled.
Enable Authentication	Display of the enable authentication types.
Tacacs login attempts	Number of failed login attempts allowed.

*Table 2-90 show tacacs Command Output Fields (continued)*

Field	Description
Tacacs timeout	Time in seconds to wait for a response from the TACACS+ server.
Tacacs direct request	Status of whether TACACS+ directed-request option is enabled or disabled.
Tacacs-Server	IP addresses or IP aliases of configured TACACS+ servers.
Status	Primary TACACS+ server.

**Related Commands**

[set tacacs attempts](#)  
[set tacacs directedrequest](#)  
[set tacacs key](#)  
[set tacacs server](#)  
[set tacacs timeout](#)

# show tech-support

Use the **show tech-support** command to display system and configuration information you can provide to the Cisco Technical Assistance Center when reporting a problem.

```
show tech-support [{module mod} | {port mod/port}] [vlan vlan] [mistp-instance instance]
[mst instance] [memory] [config]
```

Syntax Description		
<b>module</b> <i>mod</i>	(Optional)	Specifies the module number of the switch ports.
<b>port</b> <i>mod/port</i>	(Optional)	Specifies the module and port number of the switch ports.
<b>vlan</b> <i>vlan</i>	(Optional)	Specifies the VLAN; valid values are from 1 to 1001 and from 1025 to 4094.
<b>mistp-instance</b> <i>instance</i>	(Optional)	Specifies the MISTP instance number; valid values are from 1 to 16.
<b>mst</b> <i>instance</i>	(Optional)	Specifies the MST instance number; valid values are from 0 to 15.
<b>memory</b>	(Optional)	Displays memory and processor state data.
<b>config</b>	(Optional)	Displays switch configuration.

**Defaults** By default, this command displays the output for technical-support-related **show** commands. Use keywords to specify the type of information to be displayed. If you do not specify any parameters, the system displays all configuration, memory, module, port, instance, and VLAN data.

**Command Types** Switch command.

**Command Modes** Normal.

## Usage Guidelines



### Caution

Avoid running multiple **show tech-support** commands on a switch or multiple switches on the network segment because spanning tree instability might occur.

The **show tech-support** command may time out if the configuration file output takes longer to display than the configured session timeout time. If this happens, enter a **set logout timeout** value of 0 to disable automatic disconnection of idle sessions or enter a longer *timeout* value.

The **show tech-support** command output is continuous; it does not display one screen at a time. To interrupt the output, press **Ctrl-C**.

If you specify the **config** keyword, the **show tech-support** command displays the output of these commands:

- **show config**
- **show flash**
- **show log**
- **show microcode**
- **show module**
- **show port**
- **show spantree active**
- **show spantree summary**
- **show system**
- **show test**
- **show trunk**
- **show version**
- **show vlan**



Note

If MISTP is running, the output from the **show spantree mistp-instance active** and **show spantree summary mistp-instance** commands are displayed instead of the output from the **show spantree active** and **show spantree summary** commands.



Note

If MST is running, the output from the **show spantree mst** and **show spantree summary mst** commands are displayed instead of the output from the **show spantree active** and **show spantree summary** commands.

If you specify the **memory** keyword, the **show tech-support** command displays the output of these commands:

- **ps**
- **ps -c**
- **show cam static**
- **show cam system**
- **show flash**
- **show memory buffers**
- **show microcode**
- **show module**
- **show proc**
- **show proc mem**
- **show proc cpu**
- **show system**

- **show spantree active**
- **show version**

If you specify a module, port, or VLAN number, the system displays general system information and information for the component you specified.

---

**Related Commands** See the commands listed in the “Usage Guidelines” section.

# show test

Use the **show test** command to display the errors reported from the diagnostic tests and the diagnostic level.

**show test** [*mod*]

**show test** [**diaglevel**]

<b>Syntax Description</b>	<i>mod</i>	(Optional) Number of the module. If you do not specify a number, test statistics are given for the general system as well as for the supervisor engine.
<b>diaglevel</b>		(Optional) Displays the diagnostic level.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** Only error conditions are displayed. If there are no errors, PASS is displayed in the Line Card Status field.

**Examples** This example shows the error display for module 2:

```

Console> show test 2

Module 2 : 2-port 1000BaseX Supervisor
Network Management Processor (NMP) Status: (. = Pass, F = Fail, U = Unknown)
  ROM: .   Flash-EEPROM: .   Ser-EEPROM: .   NVRAM: .   EOBC Comm: .

Line Card Status for Module 2 : PASS

Port Status :
  Ports 1  2
  -----
  .   .

Line Card Diag Status for Module 2  (. = Pass, F = Fail, N = N/A)

Module 2
Cafe II Status :
  NewLearnTest:          .
  IndexLearnTest:       .
  DontForwardTest:      .
  DontLearnTest:        .
  ConditionalLearnTest: .
  BadBpduTest:          .
  TrapTest:             .

```

```

Loopback Status [Reported by Module 2] :
Ports 1 2
-----
. .

Channel Status :
Ports 1 2
-----
. .

```

This example shows the error display for module 3:

```

Console> show test 3

Module 3 : 12-port 1000BaseX Ethernet

Line Card Status for Module 3 : PASS

Port Status :
Ports 1 2 3 4 5 6 7 8 9 10 11 12
-----
. . . . . . . . . . . . . .

Line Card Diag Status for Module 3 (. = Pass, F = Fail, N = N/A)
Loopback Status [Reported by Module 3] :
Ports 1 2 3 4 5 6 7 8 9 10 11 12
-----
. . . . . . . . . . . . . .

Channel Status :
Ports 1 2 3 4 5 6 7 8 9 10 11 12
-----
. . . . . . . . . . . . . .

```

This example shows the display when errors are reported by the LCP for module 3:

```

Console> show test 3

Module 3 : 12-port 1000BaseX Ethernet

Line Card Status for Module 3 : FAIL
Error                                                                    Device Number
-----
Port asic error                                                            1,2,5,12
CPU error                                                                    0
Line Card Diag Status for Module 3 (. = Pass, F = Fail, N = N/A)
Loopback Status [Reported by Module 1] :
Ports 1 2 3 4 5 6 7 8 9 10 11 12
-----
. . . . . . . . . . . . . .

Channel Status :
Ports 1 2 3 4 5 6 7 8 9 10 11 12
-----
. . . . . . . . . . . . . .

```

This example shows the display if you do not specify a module:

```

Console> show test

Environmental Status (. = Pass, F = Fail, U = Unknown, N = Not Present)
PS1:..    PS2:N    PS1 Fan:..    PS2 Fan:N
Chassis-Ser-EEPROM:..    Fan:..
Clock(A/B):A    Clock A:..    Clock B:..
VTT1:..    VTT2:..    VTT3:..

```

```

Module 1 :2-port 1000BaseX Supervisor
Network Management Processor (NMP) Status:(. = Pass, F = Fail, U =
Unknown)
  ROM: .   Flash-EEPROM:.   Ser-EEPROM:.   NVRAM:.   EOBC Comm:.

Line Card Status for Module 1 :PASS

Port Status :
  Ports 1 2
  -----
  . .

Line Card Diag Status for Module 1 (. = Pass, F = Fail, N = N/A)

Module 1
  Earl IV Status :
    NewLearnTest: .
    IndexLearnTest: .
    DontForwardTest: .
    DontLearnTest: .
    ConditionalLearnTest: .
    BadBpduTest: .
    TrapTest: .
    MatchTest: .
    SpanTest: .
    CaptureTest: .
Loopback Status [Reported by Module 1] :
  Ports 1 2
  -----
  . .

Channel Status :
  Ports 1 2
  -----
  . .

```

This example shows how to display diagnostic level status:

```

Console> (enable) show test diaglevel
Diagnostic mode at last bootup : minimal
Diagnostic mode at next reset : bypass
Console> (enable)

```

Table 2-91 describes the possible fields in the **show test** command output. The fields shown depend on the module type queried.

**Table 2-91** *show test Command Output Fields*

Field	Description
Environmental Status	Test results that apply to the general system environment.
PS (3.3V)	Test results for the 3.3V power supply.
PS (12V)	Test results for the 12V power supply.
PS (24V)	Test results for the 24V power supply.
PS1	Test results for power supply 1.
PS2	Test results for power supply 2.
Temperature	Test results for the temperature.
Fan	Test results for the fan.
Module #	Test results that apply to the module #. The module type is indicated as well.
Network Management Processor (NMP) Status	Test results that apply to the NMP on the supervisor engine module.
ROM	Test results for the ROM.
Flash-EEPROM	Test results for the Flash EEPROM.
Ser-EEPROM	Test results for the serial EEPROM.
NVRAM	Test results for the NVRAM.
EARL Status	Fields that display the EARL status information.
NewLearnTest	Test results for the NewLearn test (EARL).
IndexLearnTest	Test results for the IndexLearn test (EARL).
DontForwardTest	Test results for the DontForward test (EARL).
MonitorTest	Test results for the Monitor test (EARL).
DontLearn	Test results for the DontLearn test (EARL).
FlushPacket	Test results for the FlushPacket test (EARL).
ConditionalLearn	Test results for the ConditionalLearn test (EARL).
EarlLearnDiscard	Test results for the EarlLearnDiscard test (EARL).
EarlTrapTest	Test results for the EarlTrap test (EARL).
LCP Diag Status for Module 1	Test results for the specified module.
CPU	Test results for the CPU.
Sprom	Test results for the serial PROM.
Bootsum	Test results for the Boot ROM checksum.
Archsum	Test results for the archive Flash checksum.
RAM	Test results for the RAM.
LTL	Test results for the local-target logic.
CBL	Test results for the color-blocking logic.

*Table 2-91 show test Command Output Fields (continued)*

Field	Description
DPRAM	Test results for the dual-port RAM.
SAMBA	Test results for the SAMBA chip.
Saints	Test results for the SAINT chips.
Pkt Bufs	Test results for the packet buffers.
Repeater	Test results for the repeater module.
FLASH	Test results for the Flash memory.
EOBC	Channel through which a module exchanges control messages with the other modules in the system.
Local Power	Status of the DC converter on a module that supplies power to the entire module except the power management block on the module.
Phoenix	Test results for the Phoenix.
TrafficMeter	Test results for the TrafficMeter.
UplinkSprom	Test results for the Uplink SPROM.
PhoenixSprom	Test results for the Phoenix SPROM.
MII Status	Test results for the MII ports.
SAINT/SAGE Status	Test results for the individual SAINT/SAGE chip.
Phoenix Port Status	Test results for the Phoenix ports.
Packet Buffer Status	Test results for the individual packet buffer.
Phoenix Packet Buffer Status	Test results for the Phoenix packet buffer.
Loopback Status	Test results for the loopback test.
Channel Status	Test results for the channel test.

**Related Commands** [set test diaglevel](#)

# show time

Use the **show time** command to display the current time of day in the system clock.

## **show time**

---

**Syntax Description** This command has no keywords or arguments.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the current time:

```
Console> show time
Wed Jan 12 2000, 14:18:52
Console>
```

The output shows the day of the week, month, day, year, hour, minutes, and seconds.

---

**Related Commands** [set time](#)

# show timezone

Use the **show timezone** command to display the current time zone and offset.

**show timezone**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to display the current time zone and offset:

```
Console> show timezone
Timezone set to 'pst', offset from UTC is -8 hours
Console>
```

---

**Related Commands** [clear timezone](#)  
[set timezone](#)

# show top

Use the **show top** command to start the TopN process.

```
show top [N] [metric] [interval interval] [port_type] [background]
```

Syntax Description	
<i>N</i>	(Optional) Number of ports displayed; valid values are <b>1</b> to a maximum number of physical ports.
<i>metric</i>	(Optional) Port statistic to sort on; valid values are as follows: <b>util</b> —utilization <b>bytes</b> —in/out bytes <b>pkts</b> —in/out packets <b>best</b> —in/out broadcast packets <b>mcst</b> —in/out multicast packets <b>errors</b> —in errors <b>overflow</b> —buffer overflow
<b>interval</b>	(Optional) Specifies duration of sample (in seconds).
<i>interval</i>	(Optional) Number of seconds for sample; valid values are <b>0</b> and from <b>10</b> to <b>999</b> seconds. If the value is 0, the N topmost ports by absolute counter values are displayed.
<i>port_type</i>	(Optional) Type of switch ports to use for report; valid values are as follows: <b>all</b> —All port types are used <b>eth</b> —All Ethernet port types are used <b>10e</b> —10-Mbps Ethernet ports types are used <b>fe</b> —Fast Ethernet port types are used <b>ge</b> —Gigabit Ethernet port types are used <b>10ge</b> —10-Gigabit Ethernet port types are used
<b>background</b>	(Optional) Specifies the TopN report not to print to the screen when the task is done. Instead, a notification is sent out when the reports are ready.

## Defaults

The defaults are as follows:

- Number of ports displayed is **20**.
- Port statistics to report on is **util**.
- Sample duration is **30** seconds.
- Switch port type is **all**.

## Command Types

Switch command.

## Command Modes

Normal.

**Usage Guidelines**

You can terminate TopN processes with the **background** option specified only by using the **clear top** [*report\_num*] command.

TopN reports with the **background** option specified are not displayed on the screen unless you enter a **show top report** [*report\_num*] command.

If you do not specify the **background** option, the output TopN results are dumped to the screen when the task is done, and the results are printed one time only and are not saved.

You can terminate TopN processes (without the **background** option) by pressing **Ctrl-C** in the same Telnet or console session, or by entering a **clear top** [*report\_num*] command from a separate Telnet or console session. The prompt is not printed before the TopN report completely displays. Other commands are blocked until the report has displayed.

**Examples**

This example shows how to start the TopN process with the **background** option:

```
Console> show top 10 util interval 600 background
03/09/2000,14:05:38:MGMT-5: TopN report 2 started by telnet/172.20.22.7/.
Console>
03/09/2000,14:15:38:MGMT-5: TopN report 2 available.
```

This example shows how to start the TopN process without the **background** option:

```
Console> show top 10 util interval 600
Start Time:    03/19/2000,12:04:16
End Time:     03/19/2000,12:14:18
PortType:     all
Metric:       util
Port  Band-  Uti  Tx/Rx-bytes          Tx/Rx-pkts Tx/Rx-bcst Tx/Rx-mcst In-  Buf-
      width %                               Tx/Rx-pkts Tx/Rx-bcst Tx/Rx-mcst err  Ovflw
-----
1/1  100    0  65433                824         0         719         0    0
5/48 10    0  3543                 45          0         34          0    0
5/47 10    0  45367                124         0        219          0    0
5/46 10    0  23456                 49          0        108          0    0
Console>
```

This example shows how to start the TopN process for a specific port type:

```
Console> show top 5 10e interval 0
Start Time:    03/09/2000,11:03:21
End Time:     03/09/2000,11:03:21
PortType:     10Mbps Ethernet
Metric:       util
Port  Band-  Uti  Bytes          Pkts          Bcst          Mcst          Error Over
      width %  (Tx + Rx)    (Tx + Rx)    (Tx + Rx)    (Tx + Rx)    (Rx)  flow
-----
2/1   10    0           0           0           0           0           0    0
3/12  auto  0           0           0           0           0           0    0
3/11  auto  0           0           0           0           0           0    0
3/10  auto  0           0           0           0           0           0    0
3/9   auto  0           0           0           0           0           0    0
Console>
```

**Related Commands**

[clear top](#)  
[show top report](#)

# show top report

Use the **show top report** command to list all TopN processes and specific TopN reports.

**show top report** [*report\_num*]

<b>Syntax Description</b>	<i>report_num</i> (Optional) TopN report number for each process.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	If you do not specify the <i>report_num</i> value, this command lists all the active TopN processes and all the available TopN reports for the switch. Each process is associated with a unique report number. All TopN processes (both with and without a background option) are shown in the list.
-------------------------	--

An asterisk displayed after the pending status field indicates that it is not a background TopN and the results are not saved.

<b>Examples</b>	This example shows how to display all the active TopN processes and all the available TopN reports for the switch:
-----------------	--

```
Console> show top report
Rpt  Start time          Int N  Metric      Status  Owner (type/machine/user)
-----
  1  03/09/2000,11:34:00  60  20  Tx/Rx-Bytes  done   telnet/172.20.22.7/
  2  03/09/2000,11:34:08  600  10  Util         done   telnet/172.34.39.6/
  4  03/09/2000,11:35:17  300  20  In-Errors    pending Console//
  5  03/09/2000,11:34:26  60  20  In-Errors    pending* Console//
Console>
```

This example shows an attempt to display a TopN report 5 (shown in the first example) that is still in pending status:

```
Console> show top report 5
Rpt  Start time          Int N  Metric      Status  Owner (type/machine/user)
-----
  5  03/09/2000,11:34:26  60  20  In-Errors    pending* Console//
Console>
```

This example shows how to display the available TopN report 2 (shown in the first example) for the switch:

```
Console> show top report 2
Start Time:      03/09/2000,11:34:00
End Time:        03/09/2000,11:34:33
PortType:       all
```

■ show top report

```

Metric:          util
Port  Band-  Uti  Tx/Rx-bytes          Tx/Rx-pkts Tx/Rx-bcst Tx/Rx-mcst  In-  Buf-
      width %                               -----
-----
 /15  100   88  98765432109876543210 9876543210 98765      12345      123  321
5/48  10    75  44532                5389       87         2         0    0
5/47  10    67  5432                 398        87         2         0    0
5/46  10    56  1432                 398        87         2         0    0
5/45  10    54  432                  398        87         2         0    0
5/44  10    48  3210                 65         10         10        15    5
5/43  10    45  432                  5398       87         2         2    0
5/42  10    37  5432                 398        87         2         0    0
5/41  10    36  1432                 398        87         2         0    0
5/40  10    14  2732                 398        87         2         0    0
Console>

```

#### Related Commands

[clear top](#)  
[show top](#)

# show traffic

Use the **show traffic** command to display traffic and peak information.

## show traffic

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows the traffic and peak information display on a system configured with the Supervisor Engine 1 with Layer 3 Switching Engine (WS-F6K-PFC):

```
Console> (enable) show traffic
Threshold: 100%
Traffic Peak Peak-Time
-----
0%      0% Tue Apr 25 2000, 12:07:32
Console> (enable)
```

This example shows the traffic and peak information display on a system configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC II):

```
Console> (enable) show traffic
Threshold:100%
Backplane-Traffic Peak Peak-Time
-----
0%      0% Thu Jul 27 2000, 14:03:27

Fab Chan Input Output
-----
      0      0%      0%
      1      0%      0%
      2      0%      0%
      3      0%      0%
      4      0%      0%
      .
      .
      .
     14      0%      0%
     15      0%      0%
     16      0%      0%
     17      0%      0%
```

**Related Commands** [show system](#)

# show trunk

Use the **show trunk** command to display trunking information for the switch.

**show trunk** [*mod*[/*port*]] [**detail**] [**extended-range**]

Syntax Description	
<i>mod</i>	(Optional) Number of the module.
<i>port</i>	(Optional) Number of the port on the module.
<b>detail</b>	(Optional) Shows detailed information about the specified trunk port.
<b>extended-range</b>	(Optional) Shows trunking information for extended-range VLANs.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** Entering the **show trunk** command without specifying a module or port number displays only the actively trunking ports. To display the trunking configuration for a port that is not actively trunking, specify the module and port number of the port you want to display. The MSM port displays as a port that is always trunking, with allowed and active VLANs for each VLAN configured on the MSM.

Entering the **show trunk** command displays untagged traffic received over the dot1q trunk. For ISL trunks, packets are tagged on all VLANs (including native VLANs).

In the **show trunk detail** command output, the Peer-Port field displays either the module and port number of the peer connection or multiple or unknown. Multiple is displayed if connected to shared media, and unknown is displayed if DTP is not running on the other side.

If you enter the **show trunk** command on a trunk where a VTP domain mismatch exists, an asterisk is displayed after the trunk status and this message appears:

\* - indicates vtp domain mismatch.

In the **show trunk** command output, the ports and VLANs listed in the spanning tree forward state and not pruned fields are the same regardless of whether or not VTP or GVRP is running.

**Examples** This example shows how to display trunking information for the switch:

```

Console> (enable) show trunk
* - indicates vtp domain mismatch
Port      Mode           Encapsulation  Status      Native vlan
-----
15/1      nonegotiate    isl             trunking    1

Port      Vlans allowed on trunk
-----

```

```

15/1      1-1005,1025-4094

Port      Vlans allowed and active in management domain
-----
15/1

Port      Vlans in spanning tree forwarding state and not pruned
-----
15/1
Console> (enable)

```

This example shows how to display detailed information about the specified trunk port:

```

Console> (enable) show trunk 1/1 detail
Port      Mode          Encapsulation  Status      Native vlan
-----
 1/1      auto          negotiate      not-trunking  1

Port      Peer-Port  Mode          Encapsulation  Status
-----
 1/1      2/3        auto          n-isl          not-trunking

Port      TrunkFramesTx      TrunkFramesRx      WrongEncap
-----
 1/1                        0                  0              0

Port      Vlans allowed on trunk
-----
 1/1      1-1005

Port      Vlans allowed and active in management domain
-----
 1/1      1

Port      Vlans in spanning tree forwarding state and not pruned
-----
 1/1
Console> (enable)

```

This example shows how to display detailed information about the specified trunk port that has a VTP domain mismatch:

```

Console> (enable) show trunk 3/1 detail
Port      Mode          Encapsulation  Status      Native vlan
-----
 3/1      auto          negotiate      not-trunking*  1

Port      Peer-Port  Mode          Encapsulation  Status
-----
 3/1      2/3        auto          n-isl          not-trunking

Port      TrunkFramesTx      TrunkFramesRx      WrongEncap
-----
 3/1                        0                  0              0

Port      Vlans allowed on trunk
-----
 3/1      1-1005

Port      Vlans allowed and active in management domain
-----
 3/1      2

Port      Vlans in spanning tree forwarding state and not pruned
-----

```

```
-----
3/1
Console> (enable)
```

This example shows how to include information about extended-range VLANs:

```
Console> (enable) show trunk extended-range
Port      Status      Vlans allowed on trunk
-----
1/2       Trunking    1-1005, 2000-4094
2/2       Trunking    1-1005, 2100-4094
2/3       Non-Trunking 1-1005, 1025-2000, 3001-4094
.....
Console> (enable)
```

Table 2-92 describes the fields in the **show trunk** command outputs.

**Table 2-92 show trunk Command Output Fields**

Field	Description
Port	Module and port numbers.
Mode	Trunk administrative status of the port (on, off, auto, desirable, or nonegotiate).
Encapsulation	Trunking type configured by administration.
Status	Status of whether the port is trunking or nontrunking.
Native vlan	Number of the native VLAN for the trunk link (the VLAN for which untagged traffic can be transmitted and received over the dot1q trunk).
Vlans allowed on trunk	Range of VLANs allowed to go on the trunk (default is 1 to 1000).
Vlans allowed and active in management domain	Range of active VLANs within the allowed range.
Vlans in spanning tree forwarding state and not pruned	Range of VLANs that actually go on the trunk with Spanning Tree Protocol forwarding state.
Peer-Port	Peer connection information (module and port number of peer connection, multiple, or unknown).
TrunkFramesTx	Number of ISL/802.1Q frames transmitted on a port.
TrunkFramesRx	Number of ISL/802.1Q frames received on a port.
WrongEncap	Number of frames with the wrong encapsulation received on a port.

Related Commands [set trunk](#)

# show udld

Use the **show udld** command to display UDLD information.

**show udld**

**show udld port** [*mod*[/*port*]]

Syntax Description	port	Specifies module and ports or just modules.
	<i>mod</i>	(Optional) Number of the module for which UDLD information is displayed.
	<i>port</i>	(Optional) Number of the port for which UDLD information is displayed.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to find out whether or not UDLD is enabled:

```
Console> show udld
UDLD      : enabled
Message Interval :15 seconds
Console>
```

This example shows how to display UDLD information for a specific module and port:

```
Console> show udld port 2/1
UDLD      :enabled
Message Interval :15 seconds
Port      Admin Status  Aggressive Mode  Link State
-----  -----
2/1      enabled          disabled          undertermined
Console>
```

This example shows how to display UDLD information for all ports on a specific module:

```
Console> (enable) show udld port 1
UDLD      :enabled
Message Interval :15 seconds
Port      Admin Status  Aggressive Mode  Link State
-----  -----
1/1      disabled          disabled          not applicable
1/2      disabled          enabled           not applicable
Console>
```

Table 2-93 describes the fields in the **show udd** command output.

**Table 2-93 show udd Command Output Fields**

Field	Description
UDLD	Status of whether UDLD is enabled or disabled.
Port	Module and port numbers.
Admin Status	Status of whether administration status is enabled or disabled.
Aggressive Mode	Status of whether aggressive mode is enabled or disabled.
Link State	Status of the link: undetermined (detection in progress, UDLD has been disabled on the neighbors), not applicable (UDLD is not supported on the port, UDLD has been disabled on the port, or the port is disabled), shutdown (unidirectional link has been detected and the port disabled), bidirectional (bidirectional link has been detected).

#### Related Commands

[set udd](#)  
[set udd aggressive-mode](#)  
[set udd interval](#)

# show users

Use the **show users** command to show if the console port is active and to list all active Telnet sessions with the IP address or IP alias of the originating host.

**show users [noalias]**

<b>Syntax Description</b>	<b>noalias</b> (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display the users of the active Telnet sessions:
-----------------	--

```
Console> show users
```

```
Console Port
```

```
-----
```

```
Active
```

```
Telnet Sessions
```

```
User
```

```
-----
```

```
172.16.10.75
```

```
172.16.10.75
```

```
171.31.1.203
```

```
Console>
```

<b>Related Commands</b>	<a href="#">disconnect</a>
-------------------------	----------------------------

# show version

Use the **show version** command to display software, hardware, and web interface version information.

**show version** [*mod*]

<b>Syntax Description</b>	<i>mod</i> (Optional) Number of the module.
---------------------------	---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display the software and hardware versions on systems configured with the Supervisor Engine 1 with Layer 3 Switching Engine (WS-F6K-PFC):
-----------------	---

```

Console> show version
WS-C6009 Software, Version NmpSW: 6.2(0.11)KEY
Copyright (c) 1995-2000 by Cisco Systems
NMP S/W compiled on Oct 5 2000, 01:18:33

System Bootstrap Version: 5.2(1)

Hardware Version: 1.0 Model: WS-C6009 Serial #: SCA030900JA

```

Mod	Port	Model	Serial #	Versions
1	2	WS-X6K-SUP1A-2GE	SAD03392376	Hw : 1.0 Fw : 5.2(1) Fw1: 5.1(1)CSX Sw : 6.2(0.11)KEY Sw1: 6.2(0.11)KEY
3	2	L3 Switching Engine WS-X6380-NAM	SAD03365068 JAB0343055Y	Hw: 1.0 Hw : 0.201 Fw : 4B4LZ0XA Fw1: 4.2(0.24)DAY68 Sw : 1.1(0.20) Sw1: 6.2(0.11)KEY
5	48	WS-X6248-RJ-45	SAD03181291	Hw : 1.0 Fw : 4.2(0.24)VAI78 Sw : 6.2(0.11)KEY
15	1	WS-F6K-MSFC	SAD03366264	Hw : 1.2 Fw : 12.1(2)E, Sw : 12.1(2)E,

Module	DRAM			FLASH			NVRAM		
	Total	Used	Free	Total	Used	Free	Total	Used	Free
1	65408K	45402K	20006K	16384K	8683K	7701K	512K	253K	259K

Uptime is 1 day, 19 hours, 54 minutes  
Console> (enable)

This example shows how to display version information for a specific module:

```
Console> (enable) show version 3
Mod Port Model                Serial #   Versions
-----
3   2   WS-X6380-NAM                JAB0343055Y Hw : 0.201
                                       Fw : 4B4LZ0XA
                                       Fw1: 4.2(0.24)DAY68
                                       Sw  : 1.1(0.20)
                                       Sw1: 6.2(0.11)KEY
```

Console> (enable)

This example shows how to display the software and hardware versions on systems configured with the Supervisor Engine 2 with Layer 3 Switching Engine II (PFC2):

```
Console> show version
WS-C6506 Software, Version NmpSW:6.1(0.142-Eng)
Copyright (c) 1995-2000 by Cisco Systems
NMP S/W compiled on Jul 27 2000, 18:36:52

System Bootstrap Version:6.1(194)

Hardware Version:2.0 Model:WS-C6506 Serial #:TBA04140397

Mod Port Model                Serial #   Versions
-----
2   2   WS-X6K-SUP2-2GE            SAD041104M3 Hw :0.212
                                       Fw :6.1(194)
                                       Fw1:4.2(0.24)DAY84-Eng
                                       Sw  :6.1(0.142-Eng)
                                       Sw1:6.1(0.142)
3   48   L3 Switching Engine WS-X6248-RJ-45 SAD04130E6X Hw :0.303
                                       SAD04140BZ1 Hw :1.2
                                       Fw :5.1(1)CSX
                                       Sw  :6.1(0.142)
16  1   WS-F6K-MSFC2              SAD04040BP6 Hw :0.201
                                       Fw :12.1(0.11)EP1(0.43)
                                       Sw  :12.1(0.11)EP1(0.43)

      DRAM                FLASH                NVRAM
Module Total  Used   Free   Total  Used   Free   Total Used  Free
-----
2      130944K  57916K  73028K  16384K  12003K  4381K  512K  257K  255K
```

Uptime is 0 day, 0 hour, 34 minutes  
Console>

Table 2-94 describes the fields in the **show version** command output.

**Table 2-94 show version Command Output Fields**

Field	Description
NmpSW	Version number of the NMP software.
NMP S/W compiled on	Date and time that the NMP software was compiled.
System Bootstrap Version	System bootstrap version number.

**Table 2-94 show version Command Output Fields (continued)**

Field	Description
Web Interface Version	Web interface version number.
Hardware Version	Hardware version number.
Model	Switch model number.
Serial #	Switch serial number.
Module	Module number.
Port	Number of ports on the module.
Model	Model number of the module.
Serial #	Serial number of the module.
Versions	Hardware, software, and firmware versions of the module.
Hw	Hardware version of the module.
Fw	Version of the boot code (for switching modules) or bootstrap (for the supervisor engine).
Fw1	Version of the firmware boot code (on the supervisor engine).
Sw	Version of the firmware runtime installed (on the switching module) or the software version (on the supervisor engine).
Sw1	Version of the firmware runtime (on the supervisor engine).
DRAM Total	Total dynamic RAM installed on the module.
Used	Amount of DRAM in use.
Free	Amount of available DRAM.
FLASH Total	Total Flash memory installed on the module.
Used	Amount of Flash memory in use.
Free	Amount of available Flash memory.
NVRAM Total	Total NVRAM installed on the module.
Used	Amount of NVRAM in use.
Free	Amount of available NVRAM.
Uptime is	Number of uninterrupted days, hours, minutes, and seconds the system has been up and running.

# show vlan

Use the **show vlan** command to display VLAN information.

**show vlan [trunk]**

**show vlan vlans [notrunk]**

**show vlan mapping**

**show vlan type**

Syntax Description	trunk	(Optional) Forces the display to show information only on trunk ports.
	<i>vlans</i>	Number or range of VLANs; valid values are from 1 to 1000 and from 1025 to 4094.
	<b>notrunk</b>	(Optional) Forces the display to show information only on nontrunk ports.
	<b>mapping</b>	Displays VLAN mapping table information.
	<i>type</i>	Type of the VLAN; valid values are <b>ethernet</b> , <b>fddi</b> , <b>fddinet</b> , <b>trbrf</b> , or <b>trcrf</b> .

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** Each Ethernet switch port and Ethernet repeater group belong to only one VLAN. Trunk ports can be on multiple VLANs.

If you do not specify the VLAN number, all VLANs are displayed.

**Examples** This example shows how to display information for all VLAN trunks:

```

Console> show vlan trunk
VLAN Name                Status      IfIndex Mod/Ports, Vlans
-----
1    default                active      5      2/1-2
                               6/4-8
10   VLAN0010                active      18     6/1,6/3
11   VLAN0011                active      19     6/2
20   VLAN0020                active      20
21   VLAN0021                active      21
30   VLAN0030                active      22
31   VLAN0031                active      23
1002 fddi-default            active      6
1003 token-ring-default    active      9
1004 fddinet-default       active      7

```

## show vlan

```

1005 trnet-default          active      8      8

VLAN Type SAID      MTU  Parent RingNo BrdgNo Stp  BrdgMode Trans1 Trans2
-----
1    enet  100001  1500 -    -    -    -    -    0    0
10   enet  100010  1500 -    -    -    -    -    0    0
11   enet  100011  1500 -    -    -    -    -    0    0
20   enet  100020  1500 -    -    -    -    -    0    0
21   enet  100021  1500 -    -    -    -    -    0    0
30   enet  100030  1500 -    -    -    -    -    0    0
31   enet  100031  1500 -    -    -    -    -    0    0
1002 fddi  101002  1500 -    -    -    -    -    0    0
1003 trcrf 101003  1500 0     0x0  -    -    -    0    0
1004 fdnet 101004  1500 -    -    0x0  ieee -    0    0
1005 trbrf 101005  1500 -    -    0x0  ibm  -    0    0

```

```

VLAN Inst DynCreated RSPAN
-----
1     1     static disabled
10    -     static disabled
11    -     static disabled
20    -     static disabled
21    -     static disabled
30    -     static disabled
31    -     static disabled
1002  -     static disabled
1003  1     static disabled
1004  2     static disabled
1005  -     static disabled

```

```

VLAN AREHops STEHops Backup CRF lq VLAN
-----
1003 7         7         off

```

```

Primary Secondary Secondary-Type Ports
-----
10     20     isolated      6/1,6/3
11     21     isolated      6/2
30     -     -
-      31     isolated

```

This example shows how to display the VLAN mapping table information:

```

Console> show vlan mapping
802.lq vlan      ISL vlan      Effective
-----
3000             300           true
Console>

```

This example shows how to display information for a specific VLAN and type:

```

Console> show vlan 2 fddi
VLAN Name                Status      IfIndex Mod/Ports, Vlans
-----
1002 fddi-default          active      6

VLAN Type SAID      MTU  Parent RingNo BrdgNo Stp  BrdgMode Trans1 Trans2
-----
2    fddi  101002  1500 -    -    -    -    -    0    0

```

```
VLAN Inst DynCreated RSPAN
-----
2 - static disabled
Console>
```

This example shows how to display information for nontrunk ports only on a specific VLAN:

```
Console> (enable) show vlan 2 notrunk
VLAN Name                               Status   IfIndex Mod/Ports, Vlans
-----
2   VLAN0002                             active   60
```

```
VLAN Type SAID      MTU   Parent RingNo BrdgNo Stp   BrdgMode Trans1 Trans2
-----
2   enet  100002    1500 -     -     -     -     -     0     0
```

```
VLAN Inst DynCreated RSPAN
-----
2 - static disabled
```

```
VLAN AREHops STEHops Backup CRF lq VLAN
-----
```

Console>

This example shows how to display extended-range VLANs:

```
Console> (enable) show vlan 4000
VLAN Name                               Status   IfIndex Mod/Ports, Vlans
-----
Unable to access VTP Vlan 4000 information.
```

```
VLAN Type SAID      MTU   Parent RingNo BrdgNo Stp   BrdgMode Trans1 Trans2
-----
Unable to access VTP Vlan 4000 information.
```

```
VLAN Inst DynCreated RSPAN
-----
Unable to access VTP Vlan 4000 information.
```

```
VLAN AREHops STEHops Backup CRF lq VLAN
-----
```

Console> (enable)

[Table 2-95](#) describes the fields in the **show vlan** command output.

**Table 2-95** *show vlan Command Output Fields*

Field	Description
VLAN	VLAN number.
Name	Name, if configured, of the VLAN.
Status	Status of the VLAN (active or suspend).
IfIndex	Number of the ifIndex.

**Table 2-95 show vlan Command Output Fields (continued)**

Field	Description
Mod/Ports, VLANs	Ports that belong to the VLAN.
Type	Media type of the VLAN.
SAID	Security association ID value for the VLAN.
MTU	Maximum transmission unit size for the VLAN.
Parent	Parent VLAN, if one exists.
RingNo	Ring number for the VLAN, if applicable.
BrdgNo	Bridge number for the VLAN, if applicable.
Stp	Spanning Tree Protocol type used on the VLAN.
BrdgMode	Bridging mode for this VLAN. Possible values are SRB and SRT; the default is SRB.
Inst	Instance number.
DynCreated	Status of whether the VLAN is created statically or dynamically.
RSPAN	Status of whether RSPAN is enabled or disabled.
AREHops	Maximum number of hops for All-Routes Explorer frames. Possible values are 1 through 13; the default is 7.
STEHops	Maximum number of hops for Spanning Tree Explorer frames. Possible values are 1 through 13; the default is 7.
Backup CRF	Status of whether the TrCRF is a backup path for traffic.
802.1Q Vlan	Number of the 802.1Q VLAN.
ISL Vlan	Number of the ISL VLAN.
Effective	Status of the VLAN. If the VLAN is active and its type is Ethernet, true is displayed; if not, false is displayed.
Primary	Number of the primary VLAN in a private VLAN.
Secondary	Number of the secondary VLAN in a private VLAN.
Secondary-Type	Type of secondary VLAN port. Possible values are isolated, community, or -.
Ports	Number of the module and ports associated to a specific private VLAN pair.

---

Related Commands

[set trunk](#)  
[set vlan](#)  
[show trunk](#)

# show vlan counters

Use the **show vlan counters** command to display counters for all VLANs or a range of VLANs:

```
show vlan counters [vlans]
```

<b>Syntax Description</b>	<i>vlan</i> s	Number or range of VLANs; valid values are from 1 to 1005 and from 1025 to 4094.
---------------------------	---------------	--

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display counters for VLAN 1:

```
Console> show vlan counters 1

Vlan      :1
L2-Unicast-Pkts           :3081
L3-In-Unicast-Pkts        :0
L3-Out-Unicast-Pkts       :0
L2-NonUnicast-Pkts + L3-In-NonUnicast-Pkts :4021
L3-Out-NonUnicast-Pkts    :0
L2-Unicast-Octets         :238081
L3-In-Unicast-Octets      :0
L3-Out-Unicast-Octets     :0
L2-NonUnicast-Octets + L3-In-NonUnicast-Octets :273025
L3-Out-NonUnicast-Octets  :0
Console>
```

[Table 2-96](#) describes the fields in the **show vlan counters** command output.

**Table 2-96 show vlan counters Output Fields**

Field	Description
L2-Unicast-Pkts	Layer 2 unicast packets forwarded per VLAN.
L3-In-Unicast-Pkts	Layer 3 unicast packets forwarded per input VLAN.
L3-Out-Unicast-Pkts	Layer 3 unicast packets forwarded per output VLAN.
L2-NonUnicast-Pkts + L3-In-NonUnicast-Pkts	Layer 2 nonunicast packets forwarded per VLAN and Layer 3 nonunicast packets forwarded per input VLAN.

**Table 2-96** *show vlan counters Output Fields (continued)*

Field	Description
L3-Out-NonUnicast-Pkts	Layer 3 nonunicast packets forwarded per output VLAN.
L2-Unicast-Octets	Layer 2 unicast octets per VLAN.
L3-In-Unicast-Octets	Layer 3 unicast octets per input VLAN.
L3-Out-Unicast-Octets	Layer 3 unicast octets per output VLAN.
L2-NonUnicast-Octets + L3-In-NonUnicast-Octets	Layer 2 nonunicast octets per VLAN and Layer 3 nonunicast octets per input VLAN.
L3-Out-NonUnicast-Octets	Layer 3 nonunicast octets per output VLAN.

**Related Commands**[clear vlan counters](#)

# show vmps

Use the **show vmps** command to display VMPS configuration information.

**show vmps** [**noalias**]

<b>Syntax Description</b>	<b>noalias</b> (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to display VMPS configuration information:
-----------------	---

```

Console> show vmps
VMPS Server Status:
-----
Management Domain: (null)
State: disabled
Operational Status: inactive
TFTP Server: default
TFTP File: vmps-config-database.1
Fallback VLAN: (null)
Secure Mode: open
VMPS No Domain Req: allow

VMPS Client Status:
-----
VMPS VQP Version: 1
Reconfirm Interval: 60 min
Server Retry Count: 3
VMPS domain server:

No dynamic ports configured.
Console>

No dynamic ports configured.
Console>

```

[Table 2-97](#) describes the fields in the **show vmps** command output.

**Table 2-97** *show vmps* Command Output Fields

Field	Description
VMPS Server Status	Status of VMPS server.
Management Domain	Management domain supported by this server.

**Table 2-97** *show vmps Command Output Fields*

Field	Description ( <i>continued</i> )
State	Status on whether VMPS is enabled or disabled.
Operational Status	VMPS status (active, inactive, or downloading).
TFTP Server	IP address of the VMPS server.
TFTP File	VMPS configuration filename.
Fallback VLAN	VLAN assigned if a VLAN is not assigned to a MAC address in the database.
Secure Mode	Secure mode status (open or secure).
VMPS No Domain Req	Status on whether the server accepts requests from clients with no domain name.
VMPS Client Status	Status of the VMPS client.
VMPS VQP Version	Version of VMPS VQP.
VMPS domain server	VMPS domain server name.

**Related Commands**

[download](#)  
[set vmps server](#)  
[set vmps state](#)

# show vmps mac

Use the **show vmps mac** command to display the MAC-address-to-VLAN mapping table.

```
show vmps mac [mac_addr]
```

<b>Syntax Description</b>	<i>mac_addr</i> (Optional) MAC address that allows you to see mapping information.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Usage Guidelines</b>	If you do not specify a MAC address, the entire mapping table is displayed.
-------------------------	---

<b>Examples</b>	This example shows the entire MAC-address-to-VLAN mapping table:
-----------------	--

```
Console> show vmps mac
MAC Address      VLAN Name Last Requestor  Port ID Last Accessed Last Response
-----
00-00-c0-23-c8-34 Hardware  198.4.222.111  3/5    0, 01:25:30  Success
00-00-c0-25-c9-42 --NONE--  198.4.222.111  2/1    0, 05:20:00  Denied
Console>
```

[Table 2-98](#) describes the fields in the **show vmps mac** command output.

**Table 2-98 show vmps mac Command Output Fields**

Field	Description
MAC Address	MAC address.
VLAN Name	VLAN name assigned to the MAC address.
Last Requestor	IP address of the client that last requested a VLAN assignment for this MAC address.
Port ID	Port ID in the last request.
Last Accessed	Time when the last request was processed for this MAC address.
Last Response	Response sent by the server for the last request.

<b>Related Commands</b>	<a href="#">show vmps</a>
-------------------------	---------------------------

# show vmps statistics

Use the **show vmps statistics** command to display the VMPS statistics.

## show vmps statistics

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Usage Guidelines** The statistics shown are based on the results of the [reconfirm vmps](#) command.

**Examples** This example shows how to display the VMPS statistics:

```
Console> show vmps statistics
VMPS Statistics:
Last Enabled At:                2,01:30:05
Config Requests:                20
Invalid Requests:              0
Status 'Error' Responses:       0
Status 'Deny' Responses:       5
MAC Address of Last Failed Request: 00-60-00-cc-01-02
Console>
```

[Table 2-99](#) describes the fields in the **show vmps statistics** command output.

**Table 2-99 show vmps statistics Command Output Fields**

Field	Description
Last Enabled At	Time when the VMPS was enabled.
Config Requests	Number of configuration requests.
Invalid Requests	Number of invalid requests.
Status 'Error' Responses	Number of error responses.
Status 'Deny' Responses	Number of "Access Denied" and "Port Shutdown" responses.
MAC Address of Last Failed Request	MAC address of the last request for which the response was not successful.

■ `show vmps statistics`

---

Related Commands [clear vmps statistics](#)

# show vmps vlan

Use the **show vmps vlan** command to display all the MAC addresses assigned to a VLAN in the VMPS table.

**show vmps vlan** *vlan\_name*

<b>Syntax Description</b>	<i>vlan_name</i> Name or number of the VLAN.
---------------------------	--

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display all MAC addresses assigned to the VLAN named Hardware:

```
Console> show vmps vlan Hardware
```

```
MAC Address      VLAN Name Last Requestor  Port ID Last Accessed Last Response
-----
00-00-c0-23-c8-34 Hardware  198.4.222.111  3/5     0, 01:25:30  Success
Console>
```

Table 2-100 describes the fields in the **show vmps vlan** command output.

**Table 2-100 show vmps vlan Command Output Fields**

Field	Description
MAC Address	MAC address.
VLAN Name	VLAN name assigned to the MAC address.
Last Requestor	IP address of the client that last requested a VLAN assignment for this MAC address.
Port ID	Port ID in the last request.
Last Accessed	Time when the last request was processed for this MAC address.
Last Response	Response sent by the server for the last request.

**Related Commands** [show vmps](#)

# show vtp domain

Use the **show vtp domain** command to display VTP domain information.

**show vtp domain**

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display VTP domain information:

```

Console> show vtp domain
Domain Name                               Domain Index VTP Version Local Mode Password
-----
                                           1             2             server      -

Vlan-count Max-vlan-storage Config Revision Notifications
-----
15          1023             5             disabled

Last Updater V2 Mode Pruning PruneEligible on Vlans
-----
172.20.44.30 enabled disabled 2-1000
Console>

```

[Table 2-101](#) describes the fields in the **show vtp domain** command output.

**Table 2-101 show vtp domain Command Output Fields**

Field	Description
Domain Name	Name of the VTP domain.
Domain Index	Domain index number of the domain.
VTP Version	VTP version number.
Local Mode	VTP mode (server, client, or transparent).
Password	Password required or not.

*Table 2-101 show vtp domain Command Output Fields (continued)*

Field	Description
Vlan-count	Total number of VLANs in the domain.
Max-vlan-storage	Maximum number of VLANs allowed on the device.
Config Revision	VTP revision number used to exchange VLAN information.
Notifications	Notifications to SNMP (enabled or disabled).
Last Updater	IP address through which VTP was last updated.
V2 Mode	Status on whether VTP V2 mode is enabled or disabled.
Pruning	Status on whether VTP pruning is enabled or disabled.
PruneEligible on Vlans	VLANs on which pruning is allowed.

**Related Commands**

[set vtp](#)  
[show vtp statistics](#)

# show vtp statistics

Use the **show vtp statistics** command to display VTP statistics.

## show vtp statistics

**Syntax Description** This command has no keywords or arguments.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Normal.

**Examples** This example shows how to display VTP statistics:

```

Console> show vtp statistics
VTP statistics:
summary advts received          0
subset advts received           0
request advts received          0
summary advts transmitted       72
subset advts transmitted        7
request advts transmitted       0
No of config revision errors    0
No of config digest errors      0

VTP pruning statistics:

Trunk      Join Transmitted  Join Received  Summary advts received from GVRP PDU
-----  -----  -----  -----  non-pruning-capable device  Received
4/2        0          0          0          -----  -----

```

[Table 2-102](#) describes the fields in the **show vtp statistics** command output.

**Table 2-102 show vtp statistics Command Output Fields**

Field	Description
summary advts received	Total number of summary advts received.
subset advts received	Total number of subset advts received.
request advts received	Total number of request advts received.
summary advts transmitted	Total number of summary advts transmitted.
subset advts transmitted	Total number of subset advts transmitted.
request advts transmitted	Total number of request advts transmitted.

*Table 2-102 show vtp statistics Command Output Fields (continued)*

Field	Description
No of config revision errors	Number of config revision errors.
No of config digest errors	Number of config revision digest errors.
Trunk	Trunk port participating in VTP pruning.
Join Transmitted	Number of VTP-Pruning Joins transmitted.
Join Received	Number of VTP-Pruning Joins received.
Summary advts received from nonpruning-capable device	Number of Summary advts received from nonpruning-capable devices.
GVRP PDU Received	Number of GVRP messages received on VTP trunks.

**Related Commands**

[clear vtp statistics](#)  
[set vtp](#)

# slip

Use the **slip** command to attach or detach Serial Line Internet Protocol (SLIP) for the console port.

**slip {attach | detach}**

Syntax Description	attach	Deactivates SLIP for the console port.
	detach	Activates SLIP for the console port.

**Defaults** The default is SLIP is not active (detached).

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** You can use the **slip** command from a console port session or a Telnet session.

**Examples** This example shows how to enable SLIP for a console port during a console port session:

```
Console> (enable) slip attach
Console port now running SLIP.
<console port running SLIP>
```

This example shows how to disable SLIP for a console port during a Telnet session:

```
Console> (enable) slip detach
SLIP detached on Console port.
<console port back to RS-232 Console>
Console> (enable)
```

**Related Commands** [set interface](#)

# squeeze

Use the **squeeze** command to delete Flash files permanently.

**squeeze** [*m/*]*device*:

<b>Syntax Description</b>	<i>m/</i>	(Optional) Module number of the supervisor engine containing the Flash device.
	<i>device</i> :	Device where the Flash resides.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A colon (:) is required after the specified device.

**Examples** These examples show how to use the **squeeze** command to delete the slot0 Flash files and then use the **show flash** command to confirm the deletion:

```

Console> squeeze slot0:
All deleted files will be removed, proceed (y/n) [n]?y
Squeeze operation may take a while, proceed (y/n) [n]?y
.....
Console> show flash
-#- ED --type-- --crc--- -seek-- nlen -length- -----date/time----- name
  1 .. 2          f3a3e7c1 607f80  24 6061822 Mar 31 2000 15:42:49 cat6000-sup.
5-5-1.bin
7336000 bytes available (1052608 bytes used)
Console>

```

**Related Commands**

- [dir—switch](#)
- [show flash](#)
- [undelete](#)

# stack

Use the **stack** command to dump a stack trace of frames.

```
stack [-d | -m] [num]
```

Syntax Description	<b>-d</b>	(Optional) Dumps the ROM monitor stack.
	<b>-m</b>	(Optional) Specifies addresses to dump.
	<i>num</i>	(Optional) Number of frames.

**Defaults** The default for *num* is five frames.

**Command Types** ROM monitor command.

**Command Modes** Normal.

**Usage Guidelines** The frames are dumped from the kernel stack and the process stack (if one is available) of a booted image. Use the **frame** command to display an individual stack frame.

The minus sign (-) is required with the **-d** and **-m** options.

**Examples** This example shows how to use the **stack** command to dump a stack trace of eight frames:

```
rommon 5 > stack 8
Kernel Level Stack Trace:
Initial SP = 0x60276a98, Initial PC = 0x60033054, RA = 0x6006d380
Frame 0 : FP= 0x60276a98, PC= 0x60033054, 0 bytes
Frame 1 : FP= 0x60276a98, PC= 0x6006d380, 24 bytes
Frame 2 : FP= 0x60276ab0, PC= 0x600e5218, 40 bytes
Frame 3 : FP= 0x60276ad8, PC= 0x600dcd48, 32 bytes
Frame 4 : FP= 0x60276af8, PC= 0x60033fdc, 0 bytes

Process Level Stack Trace:
Initial SP = 0x80007ce8, Initial PC = 0x600dfd38, RA = 0x600dfd20
Frame 0 : FP= 0x80007ce8, PC= 0x600dfd38, 24 bytes
Frame 1 : FP= 0x80007d00, PC= 0x6005b260, 32 bytes
Frame 2 : FP= 0x80007d20, PC= 0x6005c05c, 192 bytes
Frame 3 : FP= 0x80007de0, PC= 0x6005b54c, 24 bytes
Frame 4 : FP= 0x80007df8, PC= 0x600e82e0, 56 bytes
Frame 5 : FP= 0x80007e30, PC= 0x600e9484, 40 bytes
Frame 6 : FP= 0x80007e58, PC= 0x600e8b28, 24 bytes
Frame 7 : FP= 0x80007e70, PC= 0x600de224, 72 bytes
```

**Related Commands** [frame](#)

# switch

Use the **switch** command to switch the clock from the supervisor clock to the internal clock or from the active supervisor engine to the standby supervisor engine.

**switch** { **clock** | **supervisor** }

Syntax Description	
<b>clock</b>	Switches the clock from the supervisor clock to the internal clock.
<b>supervisor</b>	Switches from the active supervisor engine to the standby supervisor engine.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to switch the clock:

```
Console> (enable) switch clock
This command will reset system and force a clock switch-over.
Do you want to continue (y/n) [n]?
Console> (enable)
```

This example shows how to switch to the standby supervisor engine:

```
Console> (enable) switch supervisor
This command will force a switch-over to the standby Supervisor module.
Do you want to continue (y/n) [n]?
Console> (enable)
```

# switch console

Use the **switch console** command to switch the console connection physically to the MSFC on the active supervisor engine.

**switch console** [*mNo*]

<b>Syntax Description</b>	<i>mNo</i> (Optional) Module number.
---------------------------	--------------------------------------

<b>Defaults</b>	The default is supervisor engine console.
-----------------	---

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	This command is not supported on Telnet sessions.
-------------------------	---

The **switch console** command allows you to change to the MSFC that shares the slot with the active supervisor engine. To use this command, it is necessary to have active and redundant supervisor engine consoles. Otherwise, you cannot use the **switch console** command to switch to the console of the MSFC placed in the redundant supervisor engine slot.

If you place the MSFC on a supervisor engine installed in slot 1, the MSFC is recognized as module 15. If you install the supervisor engine in slot 2, the MSFC is recognized as module 16. If the optional argument *mNo* is excluded, the console will switch to MSFC on the active supervisor engine.

To exit from the router CLI back to the switch CLI, press **Ctrl-C** three times at the Router> prompt.

<b>Examples</b>	This example shows how to switch the console connection to the MSFC on the active supervisor engine:
-----------------	--

```
Console> (enable) switch console 15
Trying Router-15...
Connected to Router-15.
Type ^C^C to switch back...
```

# switch fabric

Use the **switch fabric** command to reset the active Switch Fabric Module and allow the standby Switch Fabric Module to take over.

**switch fabric** [*mNo*]

<b>Syntax Description</b>	<i>mNo</i> (Optional) Switch Fabric Module number.
---------------------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Privileged.
----------------------	-------------

<b>Usage Guidelines</b>	This command is not supported on Telnet sessions.
-------------------------	---

<b>Examples</b>	This example shows how to reset the active Switch Fabric Module:
-----------------	--

```
Console> (enable) switch fabric  
This command will force a switch-over to the standby fabric module.  
Do you want to continue (y/n) [n]?  
Console> (enable)
```

# sync

Use the **sync** command to write the working in-core copy of environment variables and the aliases out to NVRAM so they are read on the next reset.

## **sync**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** ROM monitor command.

---

**Command Modes** Normal.

---

**Examples** This example shows how to use the **sync** command:

```
rommon 10 > sync  
rommon 11 >
```

# sysret

Use the **sysret** command to display the return information from the last booted system image.

**sysret**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** ROM monitor command.

---

**Command Modes** Normal.

---

**Usage Guidelines** The stack dump information displayed has a maximum of eight frames.

---

**Examples** This example shows how to use the **sysret** command to display the return information from the last booted system image:

```
rommon 8 > sysret
System Return Info:
count: 19, reason: user break
pc:0x60043754, error address: 0x0
Stack Trace:
FP: 0x80007e78, PC: 0x60043754
FP: 0x80007ed8, PC: 0x6001540c
FP: 0x80007ef8, PC: 0x600087f0
FP: 0x80007f18, PC: 0x80008734
```

# telnet

Use the **telnet** command to start a Telnet connection to a remote host.

```
telnet host [port]
```

Syntax Description	<i>host</i>	Name or IP address of the remote host to which you want to connect.
	<i>port</i>	(Optional) Specific port connection on the remote host.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to open and close a Telnet session with the host elvis:

```
Console> (enable) telnet elvis
Trying 192.122.174.11...
Connected to elvis.
Escape character is '^]'.

UNIX(r) System V Release 4.0 (elvis)

login: fred
Password:
Last login: Thu Oct 15 09:25:01 from forster.cisc.rum
Sun Microsystems Inc. SunOS 5.4 Generic July 1994
You have new mail.
% logout

Console> (enable)
```

**Related Commands** [disconnect](#)

# test snmp trap

Use the **test snmp trap** command to send an SNMP trap message to the trap receivers.

```
test snmp trap trap_num [specific_num]
```

Syntax Description	<i>trap_num</i>	Number of the trap.
	<i>specific_num</i>	(Optional) Number of a predefined trap.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Examples** This example shows how to run trap 0:

```
Console> (enable) test snmp trap 0  
SNMP trap message sent. (4)  
Console> (enable)
```

**Related Commands** [set snmp trap](#)  
[show snmp](#)

# tracert

Use the **tracert** command to display a hop-by-hop path through an IP network from the Catalyst 6500 series switch to a specific destination host.

```
tracert [-n] [-w wait_time] [-i initial_ttl] [-m max_ttl] [-p dest_port] [-q nqueries] [-t tos]
        host [data_size]
```

Syntax Description	
<b>-n</b>	(Optional) Option that prevents <b>tracert</b> from performing a DNS lookup for each hop on the path. Only numerical IP addresses are printed.
<b>-w</b> <i>wait_time</i>	(Optional) Option used to specify the amount of time (in seconds) that <b>tracert</b> will wait for an ICMP response message. The allowed range for <i>wait_time</i> is from 1 to 300 seconds.
<b>-i</b> <i>initial_ttl</i>	(Optional) Option that causes <b>tracert</b> to send ICMP datagrams with a TTL value equal to <i>initial_ttl</i> instead of the default TTL of 1. This causes <b>tracert</b> to skip processing for hosts that are less than <i>initial_ttl</i> hops away.
<b>-m</b> <i>max_ttl</i>	(Optional) Option used to specify the maximum TTL value for outgoing ICMP datagrams. The allowed range for <i>max_ttl</i> is from 1 to 255.
<b>-p</b> <i>dest_port</i>	(Optional) Option used to specify the base UDP destination port number used in <b>tracert</b> datagrams. This value is incremented each time a datagram is sent. The allowed range for <i>dest_port</i> is from 1 to 65535. Use this option in the unlikely event that the destination host is listening to a port in the default tracert port range.
<b>-q</b> <i>nqueries</i>	(Optional) Option used to specify the number of datagrams to send for each TTL value. The allowed range for <i>nqueries</i> is from 1 to 1000.
<b>-t</b> <i>tos</i>	(Optional) Option used to specify the ToS to be set in the IP header of the outgoing datagrams. The allowed range for <i>tos</i> is from 0 to 255.
<i>host</i>	IP alias or IP address in dot notation ( <i>a.b.c.d</i> ) of the destination host.
<i>data_size</i>	(Optional) Number of bytes, in addition to the default of 40 bytes, of the outgoing datagrams. The allowed range is from 0 to 1420.

**Defaults** Entering the **tracert** *host* command without options sends three 40-byte ICMP datagrams with an initial TTL of 1, a maximum TTL of 30, a timeout period of 5 seconds, and a ToS specification of 0 to destination UDP port number 33434. For each host in the processed path, the initial TTL for each host and the destination UDP port number for each packet sent are incremented by one.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** To interrupt **tracert** after the command has been issued, press **Ctrl-C**.

The **traceroute** command uses the TTL field in the IP header to cause routers and servers to generate specific return messages. Traceroute starts by sending a UDP datagram to the destination host with the TTL field set to 1. If a router finds a TTL value of 1 or 0, it drops the datagram and sends back an ICMP “time-exceeded” message to the sender. The traceroute facility determines the address of the first hop by examining the source address field of the ICMP time-exceeded message.

To identify the next hop, traceroute again sends a UDP packet but this time with a TTL value of 2. The first router decrements the TTL field by 1 and sends the datagram to the next router. The second router sees a TTL value of 1, discards the datagram, and returns the time-exceeded message to the source. This process continues until the TTL is incremented to a value large enough for the datagram to reach the destination host (or until the maximum TTL is reached).

To determine when a datagram has reached its destination, traceroute sets the UDP destination port in the datagram to a very large value that the destination host is unlikely to be using. When a host receives a datagram with an unrecognized port number, it sends an ICMP “port unreachable” error to the source. This message indicates to the traceroute facility that it has reached the destination.

Catalyst 6500 series switches can participate as the source or destination of the **traceroute** command. However, because they are Layer 2 devices, Catalyst 6500 series switches do not examine the TTL field in the IP header and do not decrement the TTL field or send ICMP time-exceeded messages. Thus, a Catalyst 6500 series switch does not appear as a hop in the **traceroute** command output.

Use the *tos* option to see if different types of service cause routes to change.

---

## Examples

This example shows how to use the **traceroute** command to determine the path from the source to the destination host server10:

```
Console> (enable) traceroute server10
traceroute to server10.company.com (172.16.22.7), 30 hops max, 40 byte packets
 1  engineering-1.company.com (172.31.192.206)  2 ms  1 ms  1 ms
 2  engineering-2.company.com (172.31.196.204)  2 ms  3 ms  2 ms
 3  gateway_a.company.com (172.16.1.201)      6 ms  3 ms  3 ms
 4  server10.company.com (172.16.22.7)       3 ms  *   2 ms
Console> (enable)
```

Table 2-103 describes the fields in the **tracert** command output.

**Table 2-103 tracert Command Output Fields**

Field	Description
30 hops max, 40 byte packets	Maximum TTL value and the size of the ICMP datagrams being sent.
2 ms 1 ms 1 ms	Total time (in milliseconds) for each ICMP datagram to reach the router or host plus the time it took for the ICMP time-exceeded message to return to the host.  An exclamation point following any of these values (for example, 20 ms !) indicates that the port-unreachable message returned by the destination had a TTL of 0 or 1. Typically, this occurs when the destination uses the TTL value from the arriving datagram as the TTL in its ICMP reply. The reply does not arrive at the source until the destination receives a tracert datagram with a TTL equal to the number of hops between the source and destination.
3 ms * 2 ms	“*” indicates that the timeout period (default of 5 seconds) expired before an ICMP time-exceeded message was received for the datagram.

If **tracert** receives an ICMP error message other than a time-exceeded or port-unreachable message, it prints one of the error codes shown in Table 2-104 instead of the round-trip time or an asterisk (\*).

**Table 2-104 tracert Error Messages**

ICMP Error Code	Meaning
!N	No route to host. The network is unreachable.
!H	No route to host. The host is unreachable.
!P	Connection refused. The protocol is unreachable.
!F	Fragmentation needed but do not fragment (DF) bit was set.
!S	Source route failed.
!A	Communication administratively prohibited.
?	Unknown error occurred.

#### Related Commands [ping](#)

# unalias

Use the **unalias** command to remove the alias name and associated value from the alias list.

**unalias** *name*

## Syntax Description

<i>name</i>	Name of the alias.
-------------	--------------------

## Defaults

This command has no default settings.

## Command Types

ROM monitor command.

## Command Modes

Normal.

## Usage Guidelines

You must enter a **sync** command to save your change. Otherwise, the change is not saved and the **reset—ROM monitor** command removes your change.

## Examples

This example shows how to use the **unalias** command to remove the **s** alias and then check to ensure it was removed:

```
rommon 5 > alias
r=repeat
h=history
?=help
b=boot
ls=dir
i=reset
k=stack
s=set
rommon 6 > unalias s
rommon 7 > alias
r=repeat
h=history
?=help
b=boot
ls=dir
i=reset
k=stack
rommon 8 > s
monitor: command "s" not found
=====
```

## Related Commands

**alias**

# undelete

Use the **undelete** command to recover a deleted file on a Flash memory device. The deleted file can be recovered using its index (because there could be multiple deleted files with the same name).

**undelete** *index* *[[m/]device:]*

Syntax Description	<i>index</i>	Index number of the deleted file.
	<i>m/</i>	(Optional) Module number of the supervisor engine containing the Flash device.
	<i>device:</i>	(Optional) Device where the Flash resides.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A colon (:) is required after the specified device. See the **dir—switch** command to learn the index number of the file to be undeleted. A file cannot be undeleted if a valid file with the same name exists. You must delete the existing file before you can undelete the target file. A file can be deleted and undeleted up to 15 times. To delete all deleted files permanently on a device, use the **squeeze** command.

**Examples** This example shows how to recover the deleted file with index 1 and use the **show flash** command to confirm:

```

Console> (enable) undelete 1 bootflash:
Console> (enable)
Console> (enable) show flash
-#- ED --type-- --crc--- -seek-- nlen -length- -----date/time----- name
  1 .. ffffffff fec05d7a 4b3a4c 25 4667849 Mar 03 2000 08:52:09 cat6000-sup-
5-3-4-CSX.bin
  2 .. ffffffff 4e5efc31 c0fadc 30 7716879 May 19 2000 06:50:55 cat6000-sup-
d.6-1-0.bin

3605796 bytes available (12384988 bytes used)
Console> (enable)

```

**Related Commands**

- [delete](#)
- [show flash](#)
- [squeeze](#)

# unset=varname

Use the **unset=varname** command to remove a variable name from the variable list.

**unset=varname**

---

<b>Syntax Description</b>	<i>varname</i> Name of the variable.
---------------------------	--------------------------------------

---

---

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

---

<b>Command Types</b>	ROM monitor command.
----------------------	----------------------

---

<b>Command Modes</b>	Normal.
----------------------	---------

---

<b>Usage Guidelines</b>	You must enter the <b>sync</b> command to save your change to NVRAM. Otherwise, the change is not saved and a <b>reset</b> removes your change.
-------------------------	---

---

<b>Examples</b>	This example shows how to use the <b>set</b> command to display the variable list, remove a variable name from the variable list, and then display the variable list to verify:
-----------------	---

```
rommon 2 > set
PS1=rommon ! >
BOOT=
?=0
rommon 3 > unset=0
rommon 4 > set
PS1=rommon ! >
BOOT=
```

---

<b>Related Commands</b>	<a href="#">varname=</a>
-------------------------	--------------------------

varname=

## varname=

Use the *varname=* command to set the variable *VARNAME* to *varvalue*. Note that the syntax *varname=* sets the variable to a NULL string.

*varname=value*

Syntax Description	<i>varname=</i>	Name of the variable.
	<i>value</i>	Any ROM monitor command.

**Defaults** This command has no default settings.

**Command Types** ROM monitor command.

**Command Modes** Normal.

**Usage Guidelines** Do not put a space before or after the equal (=) sign. If there are spaces, you must place the *value* in quotes. Spell out variable names in uppercase letters to make them conspicuous.

**Examples** This example shows how to assign a variable name to a value:

```
rommon 1 > s=set
rommon 2 > s
PS1=rommon ! >
BOOT=
?=0
```

**Related Commands** [unset=varname](#)

# verify

Use the **verify** command to confirm the checksum of a file on a Flash device.

**verify** *[[m/]device:] filename*

<b>Syntax Description</b>	<i>m/</i>	(Optional) Module number of the supervisor engine containing the Flash device.
	<i>device:</i>	(Optional) Device where the Flash resides.
	<i>filename</i>	Name of the configuration file.

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** A colon (:) is required after the specified device.

**Examples** This example shows how to use the **verify** command:

```
Console> verify cat6k_r47_1.cbi
.....
File cat6k_r47_1.cbi verified OK.
```

# wait

Use the **wait** command to cause the CLI to pause for a specified number of seconds before executing the next command. This command might be included in a configuration file.

**wait** *seconds*

<b>Syntax Description</b>	<i>seconds</i>	Number of seconds for the CLI to wait before executing the next command.
---------------------------	----------------	--

<b>Defaults</b>	This command has no default settings.
-----------------	---------------------------------------

<b>Command Types</b>	Switch command.
----------------------	-----------------

<b>Command Modes</b>	Normal.
----------------------	---------

<b>Examples</b>	This example shows how to pause the CLI for 5 seconds:
-----------------	--

```
Console> wait 5
```

```
Console>
```

# whichboot

Use the **whichboot** command to determine which file booted.

## **whichboot**

---

**Syntax Description** This command has no arguments or keywords.

---

**Defaults** This command has no default settings.

---

**Command Types** Switch command.

---

**Command Modes** Privileged.

---

**Examples** This example shows how to use the **whichboot** command:

```
Console> whichboot  
Boot image name is 'slot0:cat6000-sup.6-1-1.bin'.  
Console>
```

# write

Use the **write** command to upload the current configuration to the network or display the configuration information currently in running memory.

**write network** [**all**]

**write terminal** [**all**]

**write** {*host file*} [**all**] [**rcp**]

**write memory**

Syntax Description		
<b>network</b>	Specifies interactive prompting for the IP address or IP alias of the host and the filename to upload.	
<b>all</b>	(Optional) Specifies default and nondefault configuration settings.	
<b>terminal</b>	Displays the nondefault configuration file on the terminal.	
<i>host</i>	IP address or IP alias of the host.	
<i>file</i>	Name of the configuration file.	
<b>rcp</b>	(Optional) Uploads a software image to a host using rcp.	
<b>memory</b>	Keyword that specifies to upload the current configuration to a specified location.	

**Defaults** This command has no default settings.

**Command Types** Switch command.

**Command Modes** Privileged.

**Usage Guidelines** The **write terminal** command is exactly the same as the **show config** command. The **write host file** command is a shorthand version of the **write network** command.

You cannot use the **write network** command to upload software to the ATM module.

With the **write network** command, the file must already exist on the host (use the UNIX **touch filename** command to create it).

Before you can enter the **write memory** command, you must enter text configuration mode. Enter text configuration mode by entering the **set config mode text** command.

**Examples**

This example shows how to upload the system5.cfg file to the mercury host:

```
Console> (enable) write network
IP address or name of host? mercury
Name of configuration file to write? system5.cfg
Upload configuration to system5.cfg on mercury (y/n) [y]? y
/
Done. Finished Network Upload. (9003 bytes)
Console> (enable)
```

This example shows how to upload the system5.cfg file to the mercury host:

```
Console> (enable) write mercury system5.cfg
Upload configuration to system5.cfg on mercury (y/n) [y]? y
/
Done. Finished Network Upload. (9003 bytes)
Console> (enable)
```

This example shows how to display the configuration file on the terminal (partial display):

```
Console> (enable) write terminal
!
....
.....

.....

.....

begin
!
#version 4.2(0.24)VAI58 set password $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
set enablepass $1$FMFQ$HfZR5DUszVHIRhrz4h6V70
set prompt Console>
set length 24 default
set logout 20
set banner motd ^C^C
!
#system
set system baud 9600
set system modem disable
set system name
set system location
set system contact
!
#power
set power redundancy enable
!
#snmp
set snmp community read-only public
set snmp community read-write private
set snmp community read-write-all secret
set snmp rmon disable
set snmp trap disable module

...
<<<< output truncated >>>>
```

This example shows how to upload the running system configuration to a prespecified location:

```
Console> (enable) write memory
Upload configuration to bootflash:switch.cfg
7165844 bytes available on device bootflash, proceed (y/n) [n]? y
Console> (enable)
```

---

**Related Commands**

[copy](#)  
[set config mode](#)  
[show config](#)

# write tech-support

Use the **write tech-support** command to generate a report that contains status information about your switch or upload the output of the command to a TFTP server, where you can send it to the Technical Assistance Center.

```
write tech-support host file [module mod] [vlan vlan] [mistp-instance instance] [mst instance]
[memory] [config]
```

```
write tech-support host file [port mod/port] [vlan vlan] [mistp-instance instance] [mst instance]
[memory] [config]
```

## Syntax Description

<i>host</i>	IP address or IP alias of the host.
<i>file</i>	Name of the configuration file.
<b>module</b> <i>mod</i>	(Optional) Specifies the module number.
<b>vlan</b> <i>vlan</i>	(Optional) Specifies the VLAN; valid values are from 1 to 1001 and from 1025 to 4094.
<b>port</b> <i>mod/port</i>	(Optional) Keyword and variables to specify the module and port on the module.
<b>mistp-instance</b> <i>instance</i>	(Optional) Specifies the MISTP instance number; valid values are from 1 to 16.
<b>mst</b> <i>instance</i>	(Optional) Specifies the MST instance number; valid values are from 0 to 15.
<b>memory</b>	(Optional) Specifies memory and processor state information.
<b>config</b>	(Optional) Specifies switch configuration information.

## Defaults

By default, this command displays the output for technical-support-related **show** commands. Use keywords to specify the type of information to be displayed. If you do not specify any parameters, the system displays all configuration, memory, module, port, instance, and VLAN data.

## Command Types

Switch command.

## Command Modes

Privileged.

## Usage Guidelines



### Caution

Avoid running multiple **write tech-support** commands on a switch or multiple switches on the network segment. Doing so may cause spanning tree instability.



### Note

If you press **Ctrl-C** while the **write tech-support** is outputting, the output file to the TFTP server might be incomplete.

**Note**

---

If you are uploading the information to a file, make sure the file already exists in the TFTP server, the file has appropriate permissions, and the network connections are good before you issue the **write tech-support** command.

---

If you specify the **config** keyword, the **write tech-support** command displays the output of these commands:

- **show config**
- **show flash**
- **show log**
- **show microcode**
- **show module**
- **show port**
- **show spantree active**
- **show spantree summary**
- **show system**
- **show test**
- **show trunk**
- **show version**
- **show vlan**

**Note**

---

If MISTP is running, the output from the **show spantree mistp-instance active** and **show spantree summary mistp-instance** commands are displayed instead of the output from the **show spantree active** and **show spantree summary** commands.

---

**Note**

---

If MST is running, the output from the **show spantree mst** and **show spantree summary mst** commands are displayed instead of the output from the **show spantree active** and **show spantree summary** commands.

---

If you specify the **memory** keyword, the **write tech-support** command displays the output of these commands:

- **ps**
- **ps -c**
- **show cam static**
- **show cam system**
- **show flash**
- **show memory buffers**
- **show microcode**
- **show module**
- **show proc**

- **show proc mem**
- **show proc cpu**
- **show system**
- **show spantree active**
- **show version**

If you specify a module, port, or VLAN number, the system displays general system information and information for the component you specified.

---

**Examples**

This example shows how to upload the technical report:

```
Console> (enable) write tech-support 172.20.32.10 tech.txt  
Upload tech-report to tech.txt on 172.20.32.10 (y/n) [n]? y  
/  
Finished network upload. (67784 bytes)  
Console> (enable)
```

---

**Related Commands****show tech-support**

See the commands listed in the “Usage Guidelines” section.

■ write tech-support



# Acronyms

Table A-1 defines the acronyms used in this publication.

**Table A-1** List of Acronyms

Acronym	Expansion
AAA	authentication, authorization, accounting
AAL	ATM adaptation layer
ACE	access control entry
ACL	access control list
AFI	authority and format identifier
AMP	active monitor present
APaRT	automated packet recognition and translation
ARP	Address Resolution Protocol
ASLB	accelerated server load balancing
ATM	Asynchronous Transfer Mode
BDD	binary decision diagram
BES	bursty errored seconds
BIA	bottom interface adapter
BPDU	bridge protocol data unit
BRF	bridge relay function
BUS	broadcast and unknown server
CAM	content-addressable memory
CDP	Cisco Discovery Protocol
CEF	Cisco Express Forwarding
CLI	command-line interface
COPS	Common Open Policy Service
COPS-DS	COPS Differentiated Services
COPS-PR	COPS for Provisioning
CoS	class of service
CPLD	Complex Programmable Logic Device

**Table A-1 List of Acronyms (continued)**

<b>Acronym</b>	<b>Expansion</b>
CRC	cyclic redundancy check
CRF	concentrator relay function
DCC	Data Country Code
DEC	Digital Equipment Corporation
DFI	Domain-Specific Part Format Identifier
DHCP	Dynamic Host Configuration Protocol
DISL	Dynamic Inter-Switch Link
DMP	data movement processor
DNS	Domain Name System
DRAM	dynamic RAM
DRiP	Dual Ring Protocol
DSAP	destination service access point
DSBM	Designated Subnet Bandwidth Manager
DSCP	differentiated services code point
DSP	digital signal processing or processor
DTP	Dynamic Trunking Protocol
DWDM	dense wavelength division multiplexing
EAP	Extensible Authentication Protocol
EARL	Enhanced Address Recognition Logic
EEPROM	electrically erasable programmable read-only memory
ESI	end-system identifier
FCS	frame check sequence
FDL	facilities data link
FEFI	far end fault indication
GARP	General Attribute Registration Protocol
GBIC	Gigabit Interface Converter
GMRP	GARP Multicast Registration Protocol
GSR	Gigabit Switch Router
GVRP	GARP VLAN Registration Protocol
HCRMON	High Capacity RMON
HDD	hard disk drive driver
HTTP	HyperText Transfer Protocol
ICD	International Code Designator
ICMP	Internet Control Message Protocol
IETF	Internet Engineering Task Force
IDP	initial domain part

**Table A-1** *List of Acronyms (continued)*

<b>Acronym</b>	<b>Expansion</b>
IDS	Intrusion Detection System Module
IGMP	Internet Group Management Protocol
ILMI	Integrated Local Management Interface
IP	Internet Protocol
IPC	interprocessor communication
IPX	Internetwork Packet Exchange
ISL	Inter-Switch Link
ISO	International Organization of Standardization
IST	Internal Spanning Tree
KDC	Key Distribution Center
LACP	Link Aggregation Control Protocol
LAN	local-area network
LANE	LAN Emulation
LCP	Link Control Protocol
LCV	line code violation seconds
LDA	LocalDirector Accelerator
LEC	LAN emulation client
LECS	LAN emulation configuration server
LEM	link error monitor
LER	link error rate
LES	LAN emulation server or line errored seconds
LLC	logical link control
MAC	Media Access Control
MDG	multiple default gateway
MIB	Management Information Base
MII	media-independent interface
MISTP	Multi-Instance Spanning Tree Protocol
MLS	multilayer switching
MMLS	multicast multilayer switching
MOP	Maintenance Operation Protocol
MOTD	message of the day
MSFC	Multilayer Switch Feature Card
MSM	Multilayer Switch Module
MST	multiple spanning tree
MTP	Media Termination Point
MTU	maximum transmission unit

**Table A-1** *List of Acronyms (continued)*

<b>Acronym</b>	<b>Expansion</b>
MVAP	multiple VLAN access port
NAM	Network Analysis Module
NDE	NetFlow Data Export
NMP	Network Management Processor
NSAP	network service access point
NTP	Network Time Protocol
NVRAM	nonvolatile RAM
OAM	Operation, Administration, and Maintenance
ODM	order dependent merge
OID	object identifier
OSI	Open System Interconnection
OUI	organizational unique identifier
PAE	port access entity
PAgP	Port Aggregation Protocol
PBF	policy-based forwarding
PCM	pulse code modulation
PCR	peak cell rate
PDP	policy decision point
PDU	protocol data unit
PEP	policy enforcement point
PFC	Policy Feature Card
PHY	physical sublayer
PIB	policy information base
PPP	Point-to-Point Protocol
PRID	policy rule identifiers
PROM	programmable read-only memory
PVID	port VLAN identifier
PVST	per VLAN spanning tree
QoS	quality of service
RADIUS	Remote Access Dial-In User Service
RAM	random-access memory
rcp	Remote Copy Protocol
RGMP	Router-Ports Group Management Protocol
RIF	Routing Information Field
RMON	Remote Monitoring
ROM	read-only memory

**Table A-1** *List of Acronyms (continued)*

<b>Acronym</b>	<b>Expansion</b>
RSA	Rivest, Shamir, and Adleman (a public-key cryptographic system)
RSPAN	remote SPAN
RST	reset
RSVP	ReSerVation Protocol
SAID	Security Association Identifier
SAP	service access point
SCP	Service Control Point
SIMM	single in-line memory module
SLCP	Supervisor Line-Card Processor
SLIP	Serial Line Internet Protocol
SMP	standby monitor present
SMT	station management
SNAP	Subnetwork Access Protocol
SNMP	Simple Network Management Protocol
SPAN	Switched Port Analyzer
SRB	source-route bridging
SRT	source-route transparent bridging
SSH	Secure Shell
STE	Spanning Tree Explorer
STP	Spanning Tree Protocol
SVC	switched virtual circuit
TAC	Technical Assistance Center (Cisco)
TACACS+	Terminal Access Controller Access Control System Plus
TCP/IP	Transmission Control Protocol/Internet Protocol
TFTP	Trivial File Transfer Protocol
TGT	ticket granting ticket
TOS	type of service
TLV	type-length value
TrBRF	Token Ring Bridge Relay Function
TrCRF	Token Ring Concentrator Relay Function
TTL	time to live
UART	Universal Asynchronous Receiver/Transmitter
UDLD	UniDirectional Link Detection
UDLP	UniDirectional Link Protocol
UDP	User Datagram Protocol
UNI	User-Network Interface

**Table A-1** *List of Acronyms (continued)*

<b>Acronym</b>	<b>Expansion</b>
UTC	Coordinated Universal Time
VACL	VLAN access control list
VCC	virtual channel connection (in ATM technology), virtual channel circuit
VCI	virtual circuit identifier
VCR	virtual configuration register
VIP	virtual IP address
VLAN	virtual LAN
VMPS	VLAN Membership Policy Server
VoIP	Voice over IP
VTP	VLAN Trunk Protocol
VID	VLAN ID
VVID	voice VLAN identifier
WRED	weighted random early detection
WRR	weighted round-robin



---

## Symbols

- ?
- command completion [1-11](#)
- displaying matches [1-11](#)
- ? (help)
- switch CLI [1-9](#)

---

## Numerics

- 3DES key
  - defining [2-291](#)
  - removing [2-36](#)
- 802.1x
  - configuring on a port [2-356](#)
  - displaying authenticator information [2-805](#)
  - displaying backend authenticator information [2-805](#)
  - displaying system capabilities and protocol version [2-649](#)
  - displaying timer values [2-649](#)
  - initializing on port [2-356](#)
  - manually initiating reauthentication [2-356](#)
  - setting number of frame [2-235](#)
  - setting retransmission authentication time [2-235](#)
  - setting retransmission time [2-235](#)
  - specifying port control type
    - auto [2-356](#)
    - force-authorized [2-356](#)
    - force-unauthorized [2-356](#)

---

## A

access control

- entries
  - See QoS ACL
  - See security ACL
  - See VACL
- lists
  - See QoS ACL
  - See security ACL
  - See VACL

accounting

  RADIUS

- disabling accounting of normal login session [2-183](#)
- disabling accounting of system events [2-186](#)
- enabling accounting of normal login session [2-183](#)
- enabling accounting of system events [2-186](#)

  TACACS+

- disabling accounting of normal login session [2-183](#)
- disabling accounting of system events [2-186](#)
- disabling suppression of accounting information [2-185](#)
- enabling accounting of normal login session [2-183](#)
- enabling accounting of outbound connection events [2-182](#)
- enabling accounting of system events [2-186](#)
- enabling command event accounting [2-181](#)
- enabling suppression of accounting information [2-185](#)
- setting accounting update frequency [2-188](#)

acronyms, list of [A-1](#)

adding to permit list [2-277](#)

Address Recognition Protocol

  See ARP

adjacency

  displaying PBF information [2-771](#)

aggregate rate limit

  clearing [2-80](#)

alias

- clearing [2-6](#)
- defining [2-191](#)
- displaying [2-601](#)

ARP

- displaying table [2-602](#)

ARP table

- adding entries [2-192](#)
- adding IP address-to-MAC address mapping entries [2-192](#)
- clearing entries [2-7](#)
- displaying table [2-602](#)
- setting aging time [2-192](#)
- setting ARP agingtime [2-192](#)

ASLB

- configuring ASLB information [2-295](#)
- displaying ASLB information [2-702](#)
- removing ASLB MLS entries [2-40](#)
- removing MAC address entries [2-40](#)
- saving ASLB configuration to NVRAM [2-130](#)

authentication

- displaying [2-603](#)
- specifying lockout time [2-194](#)
- specifying number of connection attempts [2-194](#)
- specifying primary login method [2-197](#)
- specifying primary method [2-194](#)

authorization

TACACS+

- disabling [2-199](#)
- disabling authorization of privileged mode events [2-201](#)
- enabling [2-199](#)
- enabling authorization of EXEC mode events [2-203](#)
- enabling authorization of normal login mode [2-203](#)
- enabling authorization of privileged mode events [2-201](#)
- enabling authorization of session events [2-203](#)

auto-config

- synchronizing [2-212, 2-217](#)

auto-config file

- configuring [2-212, 2-217](#)

auxiliary VLAN

- configuring ports [2-343](#)
- displaying port status [2-782](#)

---

## B

banner

- clearing MOTD banner [2-8](#)
- configuring LCD banner [2-205](#)
- configuring message-of-the-day banner [2-206](#)
- configuring telnet banner [2-207](#)
- displaying LCD banner [2-605](#)
- displaying MOTD banner [2-605](#)

baud rate

- setting console port baud rate [2-554](#)

bidirectional VLAN

- grouping ports [2-583](#)
- mapping [2-583](#)
- setting type [2-583](#)

boot

- clearing NAM boot string [2-10](#)
- configuring auto-config file [2-212](#)
- displaying NAM boot string [2-607](#)
- setting IDS environment [2-215](#)
- setting NAM environment [2-215](#)
- synchronizing auto-config file [2-217](#)

boot configuration register

- setting [2-209](#)

BOOT environment variable

- clearing [2-11](#)
- displaying contents [2-606](#)
- setting [2-218](#)

boot file

- determining which file booted [2-1037](#)

bootflash

- displaying information [2-662](#)

broadcast/multicast suppression

- disabling [2-63](#)

displaying information [2-784](#)

broadcast suppression

setting [2-345](#)

## C

CAM table

adding entries [2-220](#)

clearing entries [2-12](#)

configuring traffic filtering [2-220](#)

deleting entry [2-12](#)

displaying [2-607](#)

aging time information [2-610](#)

number of entries [2-611](#)

router MAC-VLAN entries [2-612](#)

displaying entries [2-608](#)

setting

aging time [2-220](#)

setting agingtime [2-220](#)

capture port list

removing entry [2-88](#)

CDP

configuring hold time [2-222](#)

configuring message interval [2-222](#)

disabling [2-222](#)

displaying information [2-613](#)

displaying port CDP state and message interval [2-791](#)

enabling [2-222](#)

selecting version [2-222](#)

CEF

clearing adjacencies associated with CEF entries [2-51](#)

clearing statistics summary [2-48](#)

displaying

adjacencies [2-730](#)

entry information [2-730](#)

interfaces [2-719](#)

MAC addresses [2-721](#)

displaying CEF table information [2-722](#)

channel

displaying channel port utilization based on MAC counters [2-629](#)

displaying EtherChannel group status information [2-622](#)

displaying port or module information [2-793](#)

display MAC information [2-627](#)

setting channel path cost [2-224](#)

setting channel VLAN cost [2-226](#)

channel hash

displaying hash information [2-626](#)

Cisco Discovery Protocol

See CDP

Cisco Express Forwarding

See CEF

clear [2-48](#)

CLI

exiting session [2-168](#)

pausing CLI for specified number of seconds [2-1036](#)

ROM monitor CLI

accessing [1-13](#)

operating [1-13](#)

switch CLI

accessing [1-1](#)

command aliases [1-8](#)

command help [1-9](#)

command-line processing [1-3](#)

command modes [1-3](#)

console port [1-2](#)

ending session [2-168](#)

IP addresses [1-11](#)

IP aliases [1-11](#)

IPX addresses [1-11](#)

MAC addresses [1-11](#)

operating [1-3](#)

Telnet [1-2](#)

clock

displaying summertime status [2-969](#)

setting [2-338, 2-552](#)

closing active console [2-149](#)

- command accounting
  - clearing command log entries [2-43](#)
  - displaying command log entries [2-708](#)
- command alias
  - clearing [2-6](#)
  - displaying [2-2](#)
  - removing alias name and value [2-1031](#)
  - setting [2-2](#)
- command completion
  - keyword lookup
    - keyword lookup [1-11](#)
  - partial keyword lookup [1-11](#)
  - self-repeat function [1-11](#)
- command history, switch CLI [1-8](#)
- command history buffer
  - displaying contents [2-159](#)
- command history log
  - clearing [2-43](#)
  - displaying [2-708](#)
- command-line editing [1-4](#)
  - completing partial command [1-4](#)
  - controlling capitalization [1-7](#)
  - deleting entries [1-6](#)
  - designating keystroke as command entry [1-7](#)
  - editing wrapping command lines [1-5](#)
  - moving around [1-4](#)
  - pasting in buffer entries [1-5](#)
  - redisplaying current command line [1-7](#)
  - scrolling down line or screen [1-6](#)
  - scrolling to specified text [1-6](#)
  - transposing mistyped characters [1-7](#)
- command-line-interface
  - See CLI
- command logging
  - clearing log entry table [2-43](#)
  - displaying command log entries [2-708](#)
- command modes
  - switch CLI, normal mode [1-3](#)
  - switch CLI, privileged mode [1-3](#)
  - top-level, normal mode [1-9](#)
  - top-level, privileged mode [1-9](#)
- command shorthands
  - clearing [2-6](#)
  - displaying [2-2](#)
  - setting [2-2](#)
- common access policy
  - displaying group name [2-914](#)
  - displaying user collection [2-914](#)
- Common Open Policy Service
  - See COPS
- community and associated access types
  - defining [2-478](#)
- completing command or keyword
  - using Tab key [1-12](#)
- configuration file
  - clearing contents [2-9](#)
  - deleting [2-143](#)
  - specifying file to use [2-208](#)
- configuration register setting
  - displaying [2-606](#)
  - setting [2-11](#)
- configuration register utility
  - configuring [2-133](#)
- configuring [2-205](#)
- console
  - setting port baud rate [2-554](#)
  - switching console connection physically to MSFC on active supervisor engine [2-1022](#)
- contact person [2-555](#)
- content-addressable memory
  - See CAM table
- context-sensitive help [1-10](#)
- COPS
  - clearing domain name [2-17](#)
  - clearing port roles [2-65](#)
  - clearing roles [2-17](#)
  - clearing servers [2-17](#)
  - configuring

- domain name [2-230](#)
    - policy server names [2-230](#)
  - creating port roles [2-350](#)
  - displaying COPS information [2-799](#)
  - displaying COPS information for RSVP [2-637](#)
  - displaying policy tree information [2-637](#)
  - displaying ports assigned to each role [2-637](#)
  - setting
    - connection retry interval [2-230](#)
    - memory usage [2-230](#)
  - core dump file
    - disabling [2-556](#)
    - enabling [2-556](#)
    - naming [2-557](#)
  - CoS-to-DSCP map
    - clearing [2-73](#)
  - counters
    - clearing
      - MAC counters [2-19](#)
      - port counters [2-19](#)
    - displaying hardware counters [2-640](#)
    - displaying port counters [2-801](#)
    - restoring
      - MAC counters [2-177](#)
      - port counters [2-177](#)
  - country code
    - setting [2-558](#)
  - CPU
    - displaying information [2-845](#)
  - crossbar fabric
    - selecting fallback action [2-559](#)
- 
- D**
- data export
    - disabling globally [2-438](#)
    - disabling on aggregate policer [2-439](#)
    - disabling on port [2-442](#)
    - enabling globally [2-438](#)
    - enabling on aggregate policer [2-439](#)
    - enabling on port [2-442](#)
    - setting export destination [2-440](#)
  - daylight saving time
    - displaying clock [2-969](#)
    - setting clock [2-338, 2-552](#)
  - debugging information
    - displaying trace category and level [2-991](#)
  - default IP gateway
    - specifying [2-280](#)
  - default port status
    - displaying [2-647](#)
    - setting [2-233](#)
  - deleted file
    - recovering [2-1032](#)
  - designating ports [1-10](#)
  - designating VLANs [1-10](#)
  - DHCP
    - configuring interfaces [2-267](#)
  - diagnostic tests
    - errors [2-980](#)
    - level [2-980](#)
    - module [2-980](#)
    - setting level [2-573](#)
    - system [2-980](#)
  - disabling module [2-326](#)
  - disabling UDLD information display [2-579](#)
  - displaying [2-605](#)
  - displaying configuration information [2-1038](#)
  - displaying current cd command setting [2-167](#)
  - displaying Layer 2 path [2-160](#)
  - displaying setting [2-821](#)
  - displaying system information [2-970](#)
  - DNS
    - defining IP address of DNS server [2-273](#)
    - defining server as primary [2-273](#)
    - disabling [2-271](#)
    - enabling [2-271](#)
    - setting default DNS domain name [2-272](#)

## documentation

- audience [xxiii](#)
- conventions [xxiv](#)
- organization [xxiii](#)

## domain naming service

- See DNS

## dot1q

- configuring tagging mode [2-234](#)
- configuring tunneling mode [2-354](#)
- displaying tagging mode status [2-648](#)
- displaying tunneling mode status [2-804](#)

## dot1x

- clearing configuration [2-21](#)
- configuring on a port [2-356](#)
- configuring on a system [2-235](#)
- disabling authentication [2-235](#)
- disabling reauthentication [2-235](#)
- displaying authenticator information [2-805](#)
- displaying backend authenticator information [2-805](#)
- displaying system capabilities and protocol version [2-649](#)
- displaying timer values [2-649](#)
- enabling authentication [2-235](#)
- enabling reauthentication [2-235](#)
- initializing on port [2-356](#)
- manually initiating reauthentication [2-356](#)
- setting idle time [2-235](#)
- setting number of frame retransmissions [2-235](#)
- setting retransmission authentication time [2-235](#)
- setting retransmission time [2-235](#)
- specifying port control type
  - auto [2-356](#)
  - force-authorized [2-356](#)
  - force-unauthorized [2-356](#)

## downloading

- forcing module to accept SCP download [2-170](#)
- rcp configuration file [2-131](#)

downloading image [2-150](#)

## DSCP-to-CoS map

- clearing [2-74](#)

## dump log

- clearing [2-42](#)
- displaying [2-706](#)

## DVLAN

- displaying statistics [2-650](#)

## Dynamic Host Configuration Protocol

- See DHCP

## E

## EAP

- configuring dot1x [2-235](#)

enabling module [2-326](#)

## entries

- See security ACL

## environment

- displaying inline power status [2-651](#)
- displaying system status information [2-651](#)

## error detection

- disabling [2-241](#)
- displaying settings [2-657](#)
- enabling [2-241](#)
- inband [2-241](#)
- memory [2-241](#)
- port counter [2-241](#)

## error disable

- configuring timeout for ports in errdisable state [2-239](#)
- displaying configuration and status information [2-656](#)
- displaying configuration and status of errdisable timeout for ports [2-807](#)
- preventing errdisabled ports from becoming enabled [2-360](#)

## EtherChannel

- displaying channel information [2-617](#)

exiting CLI session [2-168](#)

## Extensible Authentication Protocol

- See EAP

---

**F**

## fabric

- resetting active module and allowing standby fabric to take over [2-1023](#)

## fabric channel

- displaying utilization [2-970](#)

## Flash configuration file

- appending [2-212](#)
- overwriting [2-212](#)
- recurrence [2-212](#)

## Flash device

- confirming checksum of file on Flash device [2-1035](#)
- recovering deleted file [2-1032](#)
- setting system default Flash device [2-5](#)

## Flash files

- deleting [2-1019](#)

## Flash memory

- copying image from host [2-150](#)
- displaying contents of file saved to Flash memory [2-661](#)

## Flash PC card

- displaying information [2-662](#)
- formatting [2-155](#)

## flow control

- configuring ports [2-361](#)
- port guidelines [2-361](#)

---

**G**

## GARP

- displaying timer values [2-665](#)
- setting timers [2-245](#)

## GARP Multicast Registration Protocol

See GMRP

## GARP VLAN Registration Protocol

See GVRP

## General Attribute Registration Protocol

See GARP

## GMRP

- clearing statistics information [2-22](#)
- disabling Forward All [2-247](#)
- disabling in all VLANs [2-246](#)
- disabling on specified ports [2-363](#)
- displaying configuration information [2-667](#)
- displaying statistical information [2-668](#)
- displaying timer values [2-669](#)
- enabling Forward All [2-247](#)
- enabling in all VLANs [2-246](#)
- enabling on specified ports [2-363](#)
- setting registration type [2-248](#)
- setting timers [2-249](#)

## GVRP

- clearing statistics information [2-23](#)
- disabling dynamic VLAN creation [2-253](#)
- disabling globally [2-251](#)
- disabling on port [2-251](#)
- disabling on specified ports [2-364](#)
- displaying configuration information [2-670](#)
- displaying statistics [2-672](#)
- enabling dynamic VLAN creation [2-253](#)
- enabling globally [2-251](#)
- enabling on port [2-251](#)
- enabling on specified ports [2-364](#)
- setting administrative control [2-254](#)
- setting timers [2-256](#)
- VLAN declaration [2-252](#)

---

**H**

## hardware

- displaying versions [2-998](#)

## high availability

- disabling [2-560](#)
- disabling versioning [2-561](#)
- displaying configuration settings [2-973](#)
- enabling [2-560](#)
- enabling versioning [2-561](#)

## hop-by-hop path

- displaying [2-1028](#)
- 
- ICMP
    - disabling redirect messages [2-279](#)
    - disabling unreachable messages [2-282](#)
    - enabling redirect messages [2-279](#)
    - enabling unreachable messages [2-282](#)
    - sending echo-request packets
      - configuring ping [2-164](#)
  - identifying [2-555](#)
  - idle session timeout
    - setting [2-311](#)
  - idling
    - timeout [2-311](#)
  - ifIndex
    - displaying information [2-674](#)
  - IGMP
    - clearing statistics information [2-24](#)
    - disabling fastleave processing [2-259](#)
    - disabling rate limiting [2-264](#)
    - disabling snooping [2-258](#)
    - displaying IGMP mode [2-676](#)
    - displaying IGMP rate limit information [2-678](#)
    - displaying IGMP statistics [2-679](#)
    - enabling fastleave processing [2-259](#)
    - enabling rate limiting [2-264](#)
    - enabling snooping [2-258](#)
    - setting IGMP snooping mode [2-261](#)
    - setting rate limit for snooping packets [2-264](#)
  - in-band interfaces
    - configuring [2-267](#)
  - inline power
    - displaying status [2-651](#)
  - instances
    - assigning port path cost [2-536](#)
    - displaying BPDU skew status [2-936](#)
    - displaying information summary [2-961](#)
    - displaying instance information [2-945](#)
    - displaying list of MAC addresses, instance numbers, and timers [2-938](#)
    - displaying MAC address of root switch [2-938](#)
    - displaying only blocked ports [2-933](#)
    - displaying path cost [2-952](#)
    - displaying portfast information [2-951](#)
    - displaying spanning tree guard information [2-941](#)
    - displaying statistics information [2-954](#)
    - displaying time remaining before VLAN joins instance [2-938](#)
    - resetting port instance priority [2-105](#)
    - restoring default path cost [2-103](#)
    - setting bridge forward delay [2-511](#)
    - setting bridge hello time [2-517](#)
    - setting bridge maximum aging time [2-520](#)
    - setting bridge priority [2-545](#)
    - setting port priority [2-538](#)
    - setting primary root [2-547](#)
    - setting secondary root [2-547](#)
  - Internet Control Message Protocol
    - See ICMP
  - Internet Group Management Protocol
    - See IGMP
  - IP addresses [2-277](#)
    - clearing [2-28](#)
    - designating in CLI [1-11](#)
  - IP alias
    - adding [2-270](#)
    - clearing [2-25](#)
    - designating in CLI [1-11](#)
    - displaying [2-684](#)
  - IP DNS
    - clearing default DNS domain name [2-26](#)
    - defining IP address of DNS server [2-273](#)
    - displaying DNS domain name [2-685](#)
    - displaying DNS name server [2-685](#)
    - displaying DNS name servers [2-684](#)

removing DNS server [2-27](#)

IP fragmentation

- disabling [2-274](#)
- enabling [2-274](#)

IP permit list

- clearing IP address and mask [2-28](#)
- disabling [2-277](#)
- displaying [2-689](#)
- enabling [2-277](#)

IP precedence-to-DSCP map

- clearing [2-75](#)

IP routing table

- adding IP addresses [2-280](#)
- adding IP aliases [2-280](#)
- deleting entries [2-30](#)
- displaying entries [2-691](#)
- specifying default IP gateway [2-280](#)

IP subnet address

- format guidelines [2-50, 2-58](#)

IPX address

- format guidelines [2-49, 2-57](#)

IPX addresses, designating in CLI [1-11](#)

---

## J

jumbo frames

- displaying settings [2-812](#)
- enabling [2-368](#)
- port guidelines [2-368](#)
- setting MTU size
  - contacting TAC [2-368](#)

---

## K

Kerberos

- authenticating users [2-285](#)
- clearing Kerberos realm to DNS domain name map [2-34](#)
- clearing secret key [2-36](#)

- clearing specific Kerberos entry [2-35](#)
- defining secret key [2-291](#)
- deleting all Kerberos credentials [2-33](#)
- disabling credentials forwarding [2-32](#)
- disabling mandatory authentication [2-31](#)
- displaying configuration information [2-693](#)
- displaying credentials information [2-693](#)
- enabling authentication [2-194](#)
- enabling mandatory authentication [2-283](#)
- enabling primary authentication login method [2-197](#)
- entering SRVTAB file from command line [2-288](#)
- forwarding user credentials [2-284](#)
- mapping realm to DNS domain name [2-286](#)
- providing file containing secret key [2-290](#)
- specifying which KDC to use [2-287](#)

---

## L

l2trace [2-160](#)

Layer 2

- displaying path [2-160](#)

Layer 2 protocol tunneling

- applying a CoS value to ingress tunneling ports [2-292](#)
- clearing CoS value for ingress tunneling ports [2-37](#)
- clearing tunneling statistics [2-38](#)
- displaying tunneling information [2-813](#)
- displaying tunneling statistics [2-695](#)
- setting tunneling parameters [2-369](#)

LCD banner [2-205, 2-605](#)

LCP

- configuring error action [2-294](#)
- displaying error action [2-701](#)

LDA

- configuring ASLB information [2-295](#)

Link Control Protocol

- See LCP

link negotiation protocol [2-821](#)

- disabling on port [2-376](#)

listing Flash memory device files [2-146](#)

- local command accounting
    - clearing command log entries [2-43](#)
    - displaying command log entries [2-708](#)
  - local director accelerator
    - See LDA
  - local engine ID
    - displaying [2-913](#)
  - login password
    - changing [2-341](#)
    - limiting console login attempts [2-197](#)
    - limiting Telnet login attempts [2-197](#)
  - loop guard
    - disabling [2-515](#)
    - displaying information [2-941](#)
    - enabling [2-515](#)
- 
- M**
- MAC addresses
    - clearing from secure MAC addresses list [2-68](#)
    - clearing MAC address from list of secure MAC addresses [2-68](#)
    - designating in CLI [1-11](#)
    - displaying port MAC counter information [2-817](#)
  - MAC counters
    - displaying [2-712](#)
  - MDG
    - disabling
    - enabling
  - membership assignments
    - reconfirming [2-169](#)
  - memory allocation
    - displaying information [2-845](#)
  - message log
    - setting size of syslog table [2-301](#)
  - message-of-the-day banner
    - clearing [2-8](#)
  - messages
    - disabling logging [2-307](#)
    - disabling logging on Telnet sessions [2-308](#)
    - enabling logging [2-307](#)
    - enabling logging on Telnet sessions [2-308](#)
    - sending logging messages to current login session [2-307](#)
    - sending logging messages to new Telnet sessions [2-308](#)
  - MIB
    - displaying CISCO-IMAGE-MIB information [2-681](#)
  - MIB view entry
    - removing [2-100](#)
  - microcode
    - displaying version [2-715](#)
  - microflow policing rule
    - clearing [2-80](#)
  - MISTP
    - clearing statistical information [2-112](#)
    - disabling [2-507](#)
    - displaying information summary [2-961](#)
    - displaying instance information [2-945](#)
    - displaying spanning tree guard information [2-941](#)
    - displaying statistics information [2-954](#)
    - enabling [2-509](#)
    - mapping VLANs [2-583](#)
    - setting [2-522](#)
    - setting bridge forward delay [2-511](#)
    - setting bridge hello time [2-517](#)
    - setting bridge maximum aging time [2-520](#)
    - setting bridge priority [2-545](#)
    - setting primary root [2-547](#)
    - setting secondary root [2-547](#)
  - MISTP-PVST
    - setting [2-522](#)
  - MLS
    - adding protocols to protocol statistics list [2-323](#)
    - clearing excluded protocol port [2-52, 2-53](#)
    - clearing IP MLS cache entries [2-49, 2-57](#)
    - clearing IP MLS statistics [2-49, 2-55](#)
    - clearing IPX MLS cache entries [2-49, 2-57](#)
    - clearing IPX MLS statistics [2-49, 2-55](#)
    - clearing MLS statistics from MSFC [2-53](#)

- configuring NDE flow [2-319](#)
- disabling NDE [2-319](#)
- displaying configuration of packet checking [2-748](#)
- displaying excluded protocols [2-736](#)
- displaying IP MLS state information [2-724](#)
- displaying IP MLS statistics information [2-744](#)
- displaying IP multicast MLS information [2-737](#)
- displaying IPX MLS statistics information [2-744](#)
- displaying IPX state information [2-724](#)
- displaying MLS Layer 3 packet information [2-716, 2-743](#)
- displaying MLS state information [2-724](#)
- displaying MLS statistics information [2-744](#)
- displaying MSFC MLS statistics information [2-744](#)
- displaying NDE information [2-716, 2-742, 2-743](#)
- displaying router processor MLS information [2-724](#)
- displaying summaries from ACL routing information [2-718](#)
- enabling NDE [2-319](#)
- enabling or disabling packet checking [2-324](#)
- resetting NDE filter [2-54](#)
- setting MLS aging time [2-312](#)
- setting MLS bridged flow statistics [2-314](#)
- setting MLS fast aging time [2-312](#)
- specifying collector [2-319](#)
- specifying minimum flow mask used [2-317](#)
- specifying NDE version [2-319](#)
- specifying protocol port to be excluded from being shortcut [2-316](#)
- module configuration
  - displaying nondefault configuration [2-630](#)
- module error log
  - clearing [2-42](#)
- modules
  - disabling [2-326](#)
  - displaying contents of system module initiation log [2-752](#)
  - displaying status and information [2-749](#)
  - enabling [2-326](#)
  - naming [2-328](#)
  - shutting down NAM and IDS modules [2-330](#)
  - turning off power to module [2-329](#)
  - turning on power to module [2-329](#)
- monitoring traffic
  - configuring threshold [2-576](#)
- MSFC
  - disabling auto state [2-331](#)
  - disabling line protocol state [2-331](#)
  - displaying auto state status [2-754](#)
  - displaying interface state status [2-754](#)
  - enabling auto state [2-331](#)
  - enabling line protocol state [2-331](#)
- MSM
  - accessing MSM [2-179](#)
  - disabling line protocol state [2-332](#)
  - displaying current status of line protocol state determination of MSM [2-755](#)
  - displaying line protocol state [2-755](#)
  - enabling line protocol state [2-332](#)
- MST
  - clearing mapping of VLANs [2-101](#)
  - detecting legacy bridges and boundary ports [2-528](#)
  - displaying MST configuration [2-949](#)
  - displaying MST information [2-947](#)
  - displaying system and configuration information when in MST mode [2-977](#)
  - setting mapping of VLANs [2-529](#)
  - setting maximum number of hops [2-527](#)
  - setting MST region information [2-524](#)
  - setting port link type [2-526](#)
- multicast
  - displaying multicast protocols status [2-759](#)
- multicast group
  - displaying configuration [2-756](#)
  - displaying total count of multicast addresses (groups) in VLAN [2-758](#)
- multicast router
  - clearing port list [2-60](#)
  - configuring port [2-333](#)
  - displaying ports with IGMP-capable routers [2-760](#)
- multicast suppression

setting [2-345](#)

Multi-Instance Spanning Tree Protocol

See MISTP

Multilayer Switch Module

See MSM [A-3](#)

multiple default gateway

See MDG

---

## N

### NAM

clearing NAM boot string [2-10](#)

clearing password [2-59](#)

disabling SNMP extended RMON support [2-480](#)

displaying NAM boot string [2-607](#)

enabling SNMP extended RMON support [2-480](#)

setting boot environment [2-215](#)

shutting down module [2-330](#)

naming module [2-328](#)

naming system [2-565](#)

### NDE

displaying information

displaying MLS Layer 3 packet information [2-743](#)

### NDE filter

resetting [2-54](#)

### NetFlow Data Export

See NDE

### network interfaces

displaying information [2-682](#)

### network statistics

displaying [2-762](#)

### Network Time Protocol

See NTP

### nonvolatile RAM

See NVRAM

### normal mode

returning from privileged mode [2-148](#)

### NTP

configuring IP address of NTP server [2-337](#)

configuring server authentication key [2-337](#)

configuring time-adjustment factor [2-335](#)

disabling switch as NTP client [2-336](#)

displaying current NTP status [2-769](#)

enabling switch as NTP client [2-336](#)

removing servers from table [2-61](#)

removing server table entry [2-61](#)

returning to default time zone [2-62](#)

setting daylight saving time [2-338](#)

### NVRAM

clearing stored module configuration information [2-14](#)

clearing stored system configuration information [2-14](#)

committing ACEs [2-128](#)

committing ASLB configuration [2-130](#)

copying ACL configuration from DRAM back into NVRAM [2-228](#)

---

## O

opening module session [2-179](#)

---

## P

### PAGP

clearing statistical information [2-13](#)

configuring ports [2-347](#)

displaying port or module information [2-793](#)

displaying port statistics [2-617](#)

partial keyword lookup [1-11](#)

### password

changing [2-341](#)

setting password for privileged level [2-238](#)

### PBF

clearing MAC address [2-63](#)

configuring MAC address [2-342](#)

displaying adjacency information [2-771](#)

displaying adjacency map [2-771](#)

displaying statistical information [2-771](#)

### peak

- displaying information [2-991](#)
- per port utilization
  - disabling statistics data export [2-439](#)
  - displaying packet and byte rates [2-712](#)
  - enabling statistics data export [2-439](#)
- per VLAN spanning tree
  - See PVST
- policed-dscp table
  - resetting to default [2-79](#)
- policy-based forwarding
  - See PBF
- Port Aggregation Protocol
  - See PAgP
- port mapping
  - clearing [2-16](#)
- port name
  - setting [2-375](#)
- port roles
  - clearing [2-65](#)
  - creating [2-350](#)
- ports
  - clearing MAC addresses from secure MAC addresses list [2-68](#)
  - clearing port configuration for optimizing host connection [2-66](#)
  - configuring access port on Cisco IP phone [2-387](#)
  - configuring dot1q tunnel mode [2-354](#)
  - configuring duplex mode [2-358](#)
  - configuring flow control
    - pause frames [2-361](#)
  - configuring port security [2-389](#)
  - configuring speed [2-391](#)
  - creating EtherChannel port bundles [2-347](#)
  - defining EtherChannel administrative groups [2-347](#)
  - disabling [2-353](#)
  - disabling link negotiation protocol [2-376](#)
  - disabling protocol membership [2-377](#)
  - disabling standard SNMP link trap [2-393](#)
  - displaying flow control information [2-809](#)
  - displaying information [2-833](#)
  - displaying link negotiation protocol setting [2-821](#)
  - displaying MAC counter information [2-817](#)
  - displaying port capabilities [2-786](#)
  - displaying port security configuration [2-827](#)
  - displaying port status [2-774](#)
  - displaying protocol filters configured on EtherChannel ports [2-822](#)
  - displaying status [2-830](#)
  - displaying trap status information [2-832](#)
  - enabling [2-359](#)
  - enabling jumbo frames [2-368](#)
  - enabling link negotiation protocol [2-376](#)
  - enabling or disabling GMRP [2-363](#)
  - enabling or disabling GVRP on specified ports [2-364](#)
  - enabling protocol membership [2-377](#)
  - enabling standard SNMP link trap [2-393](#)
  - optimizing port configuration for host connection [2-366](#)
  - returning to factory-set default for all packets arriving through untrusted port [2-67](#)
  - setting default value for packets arriving through untrusted port [2-381](#)
  - setting inline power mode [2-367](#)
  - setting interface interpretation as physical port [2-379](#)
  - setting interface interpretation as VLAN [2-379](#)
  - setting port name [2-375](#)
  - setting trusted state [2-384](#)
  - setting trusted state for devices [2-386](#)
  - setting VLAN membership assignment [2-373](#)
  - specifying frame-distribution method for switch [2-347](#)
- port security
  - clearing MAC addresses from secure MAC addresses list [2-68](#)
  - configuring [2-389](#)
- port speed
  - configuring [2-391](#)
- powering module [2-329](#)
- power redundancy
  - turning redundancy between power supplies on or off [2-396](#)

## power supplies

- turning redundancy on or off [2-396](#)

## private VLAN

- See PVLAN

## privileged level

- setting password [2-238](#)

## privileged mode

- activating [2-154](#)

- returning to normal mode [2-148](#)

## process utilization

- displaying information [2-845](#)

## prompt

- changing [2-397](#)

## protocol filtering

- activating [2-398](#)

- deactivating [2-398](#)

- displaying status [2-849](#)

## protocol membership

- disabling on port [2-377](#)

- enabling on port [2-377](#)

## pruning

- disabling VTP pruning [2-594](#)

- enabling VTP pruning [2-594](#)

- specifying pruning-eligible VTP domain VLANs [2-596](#)

## PVLAN

- bidirectional VLAN [2-583](#)

- binding port to private VLAN [2-399](#)

- binding VLAN to primary VLAN [2-399](#)

- clearing configuration [2-16](#)

- deleting mapping [2-69](#)

- determining PVLAN capability [2-852](#)

- displaying configuration [2-850](#)

- displaying mapping configuration [2-854](#)

- grouping ports [2-583](#)

- mapping [2-583](#)

- mapping VLAN to primary VLAN [2-401](#)

- setting type [2-583](#)

## PVST

- setting [2-522](#)

## Q

## QoS

- clearing changes from edit buffer [2-178](#)

- clearing CoS-to-DSCP map [2-73](#)

- clearing DSCP-to-CoS map [2-74](#)

- clearing IP precedence-to-DSCP map [2-75](#)

- clearing mac-cos values [2-76](#)

- clearing map values [2-77](#)

- clearing statistic counters [2-82](#)

- configuring access port [2-387](#)

- configuring a device to trust on a port [2-386](#)

- configuring transmit and drop thresholds [2-420](#)

- deleting CoS assigned to MAC addresses [2-72](#)

- displaying counters [2-878](#)

- displaying current information for MAC address and VLAN pair [2-868](#)

- displaying information for MAC address and VLAN pair [2-868](#)

- displaying information on per-port basis [2-823](#)

- displaying map information [2-870](#)

- displaying policy source information [2-875](#)

- displaying related information [2-863](#)

- displaying status [2-881](#)

- enabling microflow policing

- disabling microflow policing [2-418](#)

- mapping CoS values [2-426](#)

- mapping IP precedence-to-DSCP [2-423](#)

- returning to factory-set CoS defaults [2-67](#)

- returning to factory-set default for all packets arriving through untrusted port [2-67](#)

- returning to factory-set default values [2-72](#)

- returning to factory-set threshold, queue, and threshold map defaults [2-72](#)

- setting CoS values [2-425](#)

- setting default for all packets arriving through untrusted port [2-381](#)

- setting DSCP-to-CoS map [2-422](#)

- setting packet buffer memory [2-436, 2-443](#)

- setting packet value [2-381](#)

- setting policy source to COPS-PR [2-432](#)
- setting policy source to local NVRAM [2-432](#)
- setting port policy source [2-379](#)
- setting port policy source to COPS [2-382](#)
- setting port policy source to local NVRAM [2-382](#)
- setting switch to participate in DSBM election [2-388](#)
- setting trusted state [2-384](#)
- specifying CoS-to-DSCP map [2-419](#)
- specifying interface as port or VLAN [2-379](#)
- specifying WRED threshold [2-445](#)
- specifying WRR weights [2-447](#)
- turning off [2-403](#)
- turning on [2-403](#)
- turning QoS on [2-403](#)
- turning QoS RSVP off [2-434](#)
- turning QoS RSVP on [2-434](#)

#### QoS access lists

- attaching to interface [2-416](#)
- defining IP access lists [2-406](#)
- defining IPX access lists [2-411](#)
- defining MAC access lists [2-414](#)

#### QoS ACL

- attaching ACL to interface [2-416](#)
- clearing changes to ACL edit buffer [2-178](#)
- committing to NVRAM [2-128](#)
- defining default action [2-404](#)
- defining IP access lists [2-406](#)
- defining IPX access lists [2-411](#)
- defining MAC access lists [2-414](#)
- detaching ACL [2-70](#)
- displaying ACL management information [2-861](#)
- displaying ACL names in edit buffer [2-856](#)
- displaying committed access lists [2-636](#)
- displaying configuration file location [2-630](#)
- displaying configured ACE information [2-857](#)
- displaying default action [2-857](#)
- displaying QoS ACL mapping [2-859](#)
- displaying running configuration [2-890](#)
- displaying runtime ACE information [2-857](#)

- displaying VLAN-bridged packet-policing status [2-862](#)
- removing ACE [2-70](#)
- removing default actions [2-70](#)
- removing IP ACE default actions [2-70](#)
- removing IPX ACE default actions [2-70](#)
- removing MAC-layer ACE default actions [2-70](#)

#### QoS policing

- clearing aggregate rate limit [2-80](#)
- clearing microflow policing rule [2-80](#)
- displaying policing information [2-873](#)
- mapping in-profile DSCPs changes when policed [2-429](#)
- resetting policed-dscp table to default [2-79](#)
- specifying excess rate and excess burst sizes [2-430](#)
- specifying microflow policing rule [2-430](#)

#### Quality of Service

See QoS

---

## R

### RADIUS

- clearing RADIUS server table [2-83](#)
- clearing RADIUS shared key [2-83](#)
- disabling accounting of normal login session [2-183](#)
- disabling accounting of system events [2-186](#)
- displaying RADIUS configuration parameters [2-882](#)
- enabling accounting of normal login session [2-183](#)
- enabling accounting of system events [2-186](#)
- enabling authentication [2-194](#)
- enabling primary authentication login method [2-197](#)
- setting deadtime [2-449](#)
- setting encryption and authentication [2-450](#)
- setting time between retransmissions [2-453](#)
- setting up RADIUS server [2-452](#)
- specifying RADIUS retransmit times [2-451](#)

### rcp

- clearing information [2-84](#)
- copying software image to Flash memory [2-150](#)
- deleting user name [2-123](#)
- downloading configuration file [2-131](#)

- downloading Flash image or switch configuration [2-137](#)
    - setting username [2-454](#)
    - uploading Flash image or switch configuration [2-137](#)
  - Remote Copy Protocol
    - See [rcp](#)
  - remote span
    - creating remote SPAN sessions [2-456](#)
    - displaying remote SPAN configuration [2-888](#)
  - repeating command [2-171](#)
  - ReSerVation Protocol
    - See [RSVP](#)
  - reset
    - cancel [2-174](#)
    - displaying scheduled reset information [2-885](#)
    - module [2-174](#)
    - schedule reset [2-174](#)
    - switch [2-174](#)
  - restoring factory-set defaults [2-114](#)
  - return information
    - displaying information from last booted system image [2-1025](#)
  - RGMP
    - clearing statistics information [2-85](#)
    - disabling [2-455](#)
    - displaying multicast group count [2-886](#)
    - displaying multicast groups [2-886](#)
    - displaying statistics information [2-887](#)
    - enabling [2-455](#)
  - ROM monitor
    - booting up external process [2-4](#)
    - configuring configuration register utility [2-133](#)
    - displaying command aliases [2-2](#)
    - displaying context of loaded image [2-135](#)
    - displaying main memory information [2-163](#)
    - displaying NVRAM information [2-163](#)
    - displaying packet memory information [2-163](#)
    - displaying supported DRAM configurations [2-163](#)
    - displaying variable names [2-180](#)
    - dumping stack trace of frames [2-1020](#)
    - listing available device IDs [2-144](#)
    - listing device files [2-145](#)
    - performing soft reset [2-173](#)
    - repeating command [2-171](#)
    - setting ROM monitor variable name values [2-180](#)
    - soft reset [2-173](#)
    - writing environment variables and aliases to NVRAM [2-1024](#)
  - ROM monitor CLI
    - accessing [1-13](#)
    - operating [1-13](#)
  - root guard
    - disabling [2-515](#)
    - displaying information [2-941](#)
    - enabling [2-515](#)
  - Router-Ports Group Management Protocol
    - See [RGMP](#)
  - RSA
    - configuring key pair [2-232](#)
    - displaying key pair information [2-646](#)
    - generating key pair [2-232](#)
    - removing key pairs [2-20](#)
  - RSVP
    - displaying COPS information [2-637](#)
    - displaying port information [2-826](#)
    - displaying switch information [2-876](#)
    - setting switch to participate in DSBM election [2-388](#)
    - turning QoS RSVP off [2-434](#)
- 
- S
- security access lists
    - See [security ACL](#)
  - security ACL
    - clearing changes from edit buffer [2-178](#)
    - committing to NVRAM [2-128](#)
    - configuring adjacency [2-459](#)
    - configuring log table [2-469](#)
    - creating new entry in non-IP VACL [2-470](#)

- creating new entry in non-IPX VACL [2-470](#)
- creating new entry in standard IPX VACL [2-466](#)
- displaying ACL management information [2-861](#)
- displaying capture port list entries [2-896](#)
- displaying committed ACL [2-893](#)
- displaying configuration file location [2-630](#)
- displaying current configuration [2-893](#)
- displaying mapped ACL [2-900](#)
- displaying running configuration [2-890](#)
- displaying VACL log information [2-897](#)
- displaying VACL management information [2-901](#)
- mapping existing VACL-to-VLAN [2-472](#)
- removing all ACEs from VACL [2-86](#)
- removing entry from capture port list [2-88](#)
- removing VACL from editbuffer [2-86](#)
- removing VACL-to-VLAN mapping [2-90](#)
- setting ports to capture traffic [2-460](#)
- setting security ACL
- security ACL log table
  - clearing [2-89](#)
- self-repeat function [1-11](#)
- Serial Line Internet Protocol
  - See SLIP
- server table
  - clearing RADIUS server table [2-83](#)
- setting VARNAME variable [2-1034](#)
- shared key
  - clearing [2-83](#)
- Simple Network Management Protocol
  - See SNMP
- SLIP
  - attaching [2-1018](#)
  - configuring interfaces [2-267](#)
  - detaching [2-1018](#)
- SNMP
  - adding trap receiver table entry [2-489](#)
  - clearing community mapping [2-93](#)
  - clearing SNMP trap receiver entry [2-98](#)
  - clearing target parameters [2-97](#)
  - configuring MIB view [2-493](#)
  - configuring new user [2-491](#)
  - configuring target address entry [2-485](#)
  - configuring target parameters [2-487](#)
  - defining access rights for specific context string [2-476](#)
  - defining access rights for specific security type [2-476](#)
  - defining community and associated access types [2-478](#)
  - defining group access rights [2-476](#)
  - disabling extendedrmon [2-480](#)
  - disabling RMON support [2-483](#)
  - disabling standard SNMP link trap [2-393](#)
  - displaying access information [2-904](#)
  - displaying community information [2-906](#)
  - displaying context information [2-908](#)
  - displaying counter information [2-909](#)
  - displaying group or users with common access policy [2-914](#)
  - displaying information [2-902](#)
  - displaying information for specific user [2-923](#)
  - displaying local engine ID [2-913](#)
  - displaying MIB view configuration [2-925](#)
  - displaying snmpNotifyTable configuration [2-916](#)
  - displaying target address entries [2-919](#)
  - displaying target parameter entries [2-921](#)
  - enabling extendedrmon [2-480](#)
  - enabling of standard SNMP link trap [2-393](#)
  - enabling RMON support [2-483](#)
  - establishing relationship between group and user [2-481](#)
  - removing access rights for specific context string [2-92](#)
  - removing access rights for specific security type [2-92](#)
  - removing group access rights [2-92](#)
  - removing individual user [2-99](#)
  - removing MIB view entry [2-100](#)
  - removing notifyname [2-95](#)
  - removing SNMP user from SNMP group [2-94](#)
  - removing target address entry [2-96](#)
  - setting notifyname entry [2-482](#)
  - setting notifytag entry [2-482](#)
- SNMP group

- defining access rights for specific context string [2-476](#)
- defining access rights for specific security type [2-476](#)
- defining group access rights [2-476](#)
- removing access rights for specific context string [2-92](#)
- removing access rights for specific security type [2-92](#)
- removing group access rights [2-92](#)
- removing user [2-94](#)
- SNMP permit list
  - adding [2-277](#)
  - clearing [2-28](#)
- SNMP trap receiver table
  - removing entry [2-98](#)
  - sending message [2-1027](#)
- soft reset [2-173](#)
- software
  - displaying versions [2-998](#)
- SPAN
  - configuring [2-495](#)
  - disabling [2-495](#)
  - displaying information [2-927](#)
  - enabling [2-495](#)
- spanning tree
  - assigning path cost [2-541](#)
  - assigning port path cost for instances [2-536](#)
  - clearing statistics [2-112](#)
  - disabling [2-507](#)
  - disabling BackboneFast [2-498](#)
  - disabling BPDU packet filtering [2-499, 2-534](#)
  - disabling BPDU skewing [2-501](#)
  - disabling instance [2-507](#)
  - disabling MAC address reduction [2-519](#)
  - disabling PortFast BPDU guard feature [2-500, 2-535](#)
  - disabling PortFast-start feature [2-532](#)
  - disabling UplinkFast [2-550](#)
  - display BackboneFast convergence status [2-932](#)
  - displaying BPDU skew status [2-936](#)
  - displaying current default port cost mode [2-940](#)
  - displaying information summary [2-961](#)
  - displaying instance-based guard information [2-941](#)
  - displaying instance information [2-945](#)
  - displaying list of instance numbers [2-938](#)
  - displaying list of MAC addresses [2-938](#)
  - displaying list of timers [2-938](#)
  - displaying only blocked ports [2-933](#)
  - displaying path cost for instances [2-952](#)
  - displaying portfast information [2-951](#)
  - displaying port information [2-829, 2-929](#)
  - displaying statistics information [2-954](#)
  - displaying time left before entry expires [2-938](#)
  - displaying UplinkFast settings [2-964](#)
  - displaying VLAN and instance mapping information [2-943](#)
  - displaying VLAN-based guard information [2-941](#)
  - displaying VLAN information [2-929](#)
  - displaying VLAN path cost [2-953](#)
  - enabling [2-509](#)
  - enabling BackboneFast [2-498](#)
  - enabling BPDU packet filtering [2-499, 2-534](#)
  - enabling BPDU skewing [2-501](#)
  - enabling instance [2-509](#)
  - enabling MAC address reduction [2-519](#)
  - enabling PortFast BPDU guard feature [2-500, 2-535](#)
  - enabling PortFast-start feature [2-532](#)
  - enabling UplinkFast [2-550](#)
  - loop guard
    - disabling [2-515](#)
    - enabling [2-515](#)
  - resetting port instance priority [2-105](#)
  - resetting port VLAN priority [2-109](#)
  - restoring default bridge priority [2-110](#)
  - restoring default forward delay [2-110](#)
  - restoring default hello time [2-110](#)
  - restoring default maxage [2-110](#)
  - restoring default path cost [2-107](#)
  - restoring default path cost to instance [2-103](#)
  - restoring factory-set defaults [2-110](#)
  - root guard
    - disabling [2-515](#)

- enabling 2-515
  - setting bridge forward delay 2-511
  - setting bridge hello time 2-517
  - setting bridge maximum aging time 2-520
  - setting instance bridge priority 2-545
  - setting mode 2-522
  - setting port bridge priority 2-540
  - setting port cost mode 2-505
  - setting port path cost 2-530
  - setting port priority 2-543
  - setting port priority for instances 2-538
  - setting primary root 2-547
  - setting secondary root 2-547
  - setting VLAN bridge priority 2-545
  - turning off UplinkFast 2-114
- SSH permit list
  - adding 2-277
  - clearing 2-28
- stack frame
  - displaying 2-157
- standby clock
  - switching 2-1021
- statistics data export
  - disabling globally 2-438
  - disabling on aggregate policer 2-439
  - disabling on port 2-442
  - displaying configuration and status information 2-880
  - enabling globally 2-438
  - enabling on aggregate policer 2-439
  - enabling on port 2-442
  - setting export destination 2-440
  - setting export interval 2-441
- summertime
  - displaying status 2-969
  - setting daylight saving time 2-338, 2-552
- switch CLI
  - accessing 1-1
  - aliases 1-8
  - categories, definition 1-10
  - command aliases 1-8
  - command help 1-9
  - command-line editing features 1-4
  - command-line processing 1-3
  - command modes 1-3
  - console port 1-2
  - designating modules 1-10
  - help
    - switch CLI 1-9
  - history substitution 1-8
  - IP addresses 1-11
  - IP aliases 1-11
  - MAC addresses 1-11
  - operating 1-3
  - Telnet 1-2
- Switched Port Analyzer
  - See SPAN
- switch fabric channel
  - displaying counter information 2-658
  - displaying switch mode and status 2-658
  - displaying utilization 2-658
- Switch Fabric Module
  - configuring LCD banner 2-205
  - displaying LCD banner 2-605
- switching
  - from active supervisor engine to standby supervisor engine 2-1021
  - from clock from supervisor engine to internal clock 2-1021
  - physically to MSFC on active supervisor engine 2-1022
- switching mode
  - setting system mode 2-974
- syslog server
  - adding 2-305
- system
  - displaying information 2-970
- system clock
  - changing 2-574
  - displaying current time of day 2-985

- system configuration
  - displaying nondefault configuration [2-630](#)
  - displaying the system configuration mode [2-635](#)
- system contact
  - identifying [2-555](#)
- system disconnect
  - idle session timeout [2-311](#)
- system error log
  - clearing [2-42](#)
- system location
  - identifying [2-563](#)
  - setting [2-558](#)
- system log
  - clearing buffer [2-44](#)
  - displaying [2-706](#)
  - displaying logging buffer [2-711](#)
  - displaying system log configuration [2-706](#)
- system logging messages
  - disabling [2-305](#)
  - disabling time-stamp display [2-309](#)
  - enabling [2-305](#)
  - enabling time-stamp display [2-309](#)
  - sending to console [2-300](#)
- system logging server
  - deleting [2-47](#)
  - displaying [2-709](#)
- system messages
  - setting facility level [2-302](#)
  - setting severity level [2-302](#)
- system modem
  - disabling [2-564](#)
  - enabling [2-564](#)
- system name
  - configuring [2-565](#)
- system switching mode
  - setting [2-566](#)

---

**T**
**TAC**

- displaying system and configuration information [2-977](#)

**TACACS+**

- configuring maximum number of login attempts [2-568](#)
- defining TACACS+ server [2-571](#)
- disabling accounting of normal login session [2-183](#)
- disabling accounting of system events [2-186](#)
- disabling authorization [2-199](#)
- disabling authorization of privileged mode events [2-201](#)
- disabling suppression of accounting information [2-185](#)
- disabling TACACS+ directed-request option [2-569](#)
- displaying accounting information [2-597](#)
- displaying authorization information [2-604](#)
- displaying protocol configuration [2-975](#)
- enabling accounting of normal login session [2-183](#)
- enabling accounting of outbound connection events [2-182](#)
- enabling accounting of system events [2-186](#)
- enabling authentication [2-194](#)
- enabling authorization [2-199](#)
- enabling authorization of EXEC mode events [2-203](#)
- enabling authorization of normal login mode [2-203](#)
- enabling authorization of privileged mode events [2-201](#)
- enabling authorization of session events [2-203](#)
- enabling command event accounting [2-181](#)
- enabling primary authentication login method [2-197](#)
- enabling suppression of accounting information [2-185](#)
- enabling TACACS+ directed-request option [2-569](#)
- removing host [2-116](#)
- removing key setting [2-115](#)
- setting accounting update frequency [2-188](#)
- setting authentication and encryption key [2-570](#)
- setting response timeout interval [2-572](#)

**target address entry**

- removing [2-96](#)

**Technical Assistance Center**

- See TAC

- technical support
    - displaying system and configuration information [2-977](#)
  - Telnet
    - closing session [2-149](#)
    - connecting [2-1026](#)
    - disconnecting [2-149](#)
    - limiting login attempts [2-197](#)
    - listing all active Telnet sessions [2-997](#)
    - specifying authentication login method
      - disabling authentication [2-197](#)
      - specifying authentication method [2-194](#)
  - Telnet permit list
    - adding [2-277](#)
    - clearing [2-28](#)
  - temperature
    - displaying system status information [2-651](#)
  - Terminal Access Controller Access Control System Plus
    - See TACACS+
  - terminal display
    - setting default number of lines on screen [2-298](#)
    - setting number of lines on screen [2-298](#)
  - text mode
    - configuring text mode [2-229](#)
    - displaying text mode [2-635](#)
  - time-stamp display
    - disabling on system logging messages [2-309](#)
    - enabling on system logging messages [2-309](#)
  - time zone
    - displaying [2-986](#)
    - returning to default, UTC [2-117](#)
    - setting [2-575](#)
  - TopN
    - displaying all TopN processes and specific TopN reports [2-989](#)
    - starting [2-987](#)
    - stopping process [2-118](#)
  - traffic
    - displaying information [2-991](#)
  - traffic log
    - configuring threshold [2-576](#)
  - traps
    - displaying status information [2-832](#)
  - trunk
    - clearing VLAN from allowed VLAN list [2-119](#)
    - displaying information [2-992](#)
    - displaying port information [2-833](#)
    - restoring trunk port to default trunk type and mode [2-119](#)
  - trunk ports
    - adding VLANs [2-577](#)
    - configuring [2-577](#)
  - two-way community
    - configuring PVLANS [2-583](#)
    - configuring VLAN [2-583](#)
    - displaying PVLAN configuration [2-850](#)
- 
- ## U
- UDLD
    - disabling aggressive mode [2-581](#)
    - displaying information [2-995](#)
    - enabling aggressive mode [2-581](#)
    - enabling UDLD information display [2-579](#)
    - setting message interval [2-582](#)
  - unicast suppression
    - setting [2-345](#)
  - UniDirectional Link Detection Protocol
    - See UDLD
  - UplinkFast
    - displaying settings [2-964](#)
  - uploading current configuration [2-1038](#)
  - uploading current configuration to file [2-1041](#)
- 
- ## V
- VACL
    - creating new entry in non-IP VACL [2-470](#)
    - creating new entry in non-IPX VACL [2-470](#)

- creating new entry in standard IP VACL [2-461](#)
- creating new entry in standard IPX VACL [2-466](#)
- displaying ACL management information [2-861](#)
- displaying capture port list entries [2-896](#)
- displaying configuration file location [2-630](#)
- displaying current configuration [2-893](#)
- displaying VACL management information [2-901](#)
- displaying VACL-to-VLAN mapping [2-900](#)
- mapping existing VACL-to-VLAN [2-472](#)
- removing all ACEs from VACL [2-86](#)
- removing entry from capture port list [2-88](#)
- removing VACL from editbuffer [2-86](#)
- removing VACL-to-VLAN mapping [2-90](#)
- setting ports to capture traffic [2-460](#)
- VACL logging
  - clearing all flows in log table [2-89](#)
  - configuring log table [2-469](#)
  - displaying log information [2-897](#)
- VACL-to-VLAN mapping
  - removing [2-90](#)
- variable name
  - removing [2-1033](#)
- virtual LAN
  - See VLAN
- VLAN
  - deleting [2-120](#)
  - deleting reserved mapping [2-122](#)
  - deleting VLAN-mapped pairs [2-122](#)
  - displaying nontrunk port information [2-1001](#)
  - displaying trunk port information [2-1001](#)
  - displaying VLAN information [2-1001](#)
  - displaying VLAN mapping table information [2-1001](#)
  - grouping ports into VLAN
  - mapping 802.1Q VLANs to ISL VLANs [2-587](#)
  - mapping reserved VLANs to nonreserved VLANs [2-587](#)
  - VTP configuration caution [2-120](#)
- VLAN access control list
  - See VACL
- VLAN membership
  - setting assignment to port [2-373](#)
- VLAN path cost
  - displaying [2-953](#)
- VLANs
  - mapping instances [2-583](#)
- VLAN Trunk Protocol
  - See VTP
- VMPS
  - configuring server [2-591](#)
  - deleting rcp user name [2-123](#)
  - deleting server [2-124](#)
  - deleting statistics [2-125](#)
  - disabling [2-593](#)
  - displaying configuration information [2-1008](#)
  - displaying MAC addresses in VLAN [2-1013](#)
  - displaying MAC-address-to-VLAN mapping table [2-1010](#)
  - displaying statistics [2-1011](#)
  - enabling [2-593](#)
  - reconfirming membership assignments [2-169](#)
  - specifying download method [2-589](#)
  - specifying server [2-590](#)
- voice
  - configuring access port on Cisco IP phone [2-387](#)
  - displaying active call information [2-838](#)
  - displaying FDL information [2-842](#)
  - displaying inline power status [2-651](#)
  - displaying port voice information [2-835](#)
  - displaying port voice interface [2-844](#)
  - displaying power administration status [2-811](#)
  - displaying power operational status [2-811](#)
  - setting default power allocation [2-266](#)
  - setting inline power mode [2-367](#)
  - setting port voice interface
    - DHCP server [2-394](#)
    - DNS server [2-394](#)
    - TFTP server [2-394](#)
- VTP

- clearing statistics [2-127](#)
- defining VTP password [2-594](#)
- disabling VTP pruning [2-594](#)
- displaying VTP domain information [2-1014](#)
- displaying VTP statistics [2-1016](#)
- enabling VTP pruning [2-594](#)
- setting options [2-594](#)
- setting version 2 mode [2-594](#)
- setting VTP domain name [2-594](#)
- setting VTP mode [2-594](#)
- specifying pruning-eligible VTP domain VLANs [2-596](#)
- specifying pruning-ineligible VTP domain VLANs [2-126](#)

---

## W

### web interface

- configuring TCP port number [2-275](#)
- disabling HTTP server [2-276](#)
- displaying HTTP configuration [2-687](#)
- displaying version information [2-998](#)
- enabling HTTP server [2-276](#)

### weighted random early detection

See WRED

### weighted round robin

See WRR

### WRED

- configuring threshold values [2-445](#)
- mapping guidelines [2-427](#)
- port type description [2-427](#)
- setting amount of packet buffer memory [2-436](#)

### WRR

- specifying weights [2-447](#)

