

User's Guide

Making Life Easier and Safer

Staying in touch with your family and friends is convenient and easy when using vour microTALK® radio. Some of the many uses you will discover include:

Communicating with others while hiking, biking, and working; keeping track of family and friends at a crowded public event; checking with travel companions in another car; talking with neighbors; arranging meeting spots with others while shopping at the mall.

Talk Button

Press and hold to communicate with others. With the microphone about five cm (two inches) from your mouth, speak in a normal voice.

Release the Talk button when you are finished talking and listen for a response. You cannot receive incoming calls while pressing the Talk button.



For Customer Assistance in Canada or the U.S.A.

In this user's manual, you should find all the information you need to operate your microTALK® radio. If you require further assistance after reading this manual, Cobra® Electronics offers the following customer assistance services:

Automated Help Desk English only.

24 hours a day, 7 days a week 773-889-3087 (phone).

Customer Assistance Operators English and Spanish. 8:00 a.m. to 6:00 p.m. CT, Monday through Friday (except holidays) 773-889-3087 (phone).

Questions English and Spanish.

Faxes can be received at 773-622-2269 (fax).

O

Technical Assistance English and French

www.cobra.ca (on-line: Frequently Asked Questions). English and Spanish. productinfo@cobra.com (e-mail).

For Assistance Outside Canada, the U.S.A. or in French Contact Your Local Dealer

Channel Numbers

While in Standby mode or when selecting a channel, shows current channel (1 through 22).

Battery Low Icon

When adjusting the volume, shows current level (1 through 8).

Visible when transmitting a message.

Transmit Icon

Receive Icon

Visible when receiving a message.

Privacy Code Numbers

While in Standby mode, shows current privacy code (00 through 38).



& Cobra

Your microTALK® radio has a unique circuit designed to extend battery life. If there are no transmissions within 10 seconds, the radio will automatically switch to **Battery Save** mode. This will not affect the radio's ability to receive

Blinks when battery power level is low.

incoming transmissions.

Mode/Power Button Batteries

Press and hold to turn the radio on or off.

Press and release to enter mode functions to change channels or privacy codes.

The channel numbers or privacy code numbers will blink when that mode is selected. Use the Up/Down buttons to select a channel or privacy code.



To Install or Replace Batteries



Remove belt clip and battery compartment cover. Insert three AAA alkaline batteries according to polarity markings in the radio. Replace cover and belt clip.



Maximum range may vary and is based on unobstructed line-of-sight communication

Up/Down Buttons

Press and release to adjust the volume

While in mode functions, press and release to change channels or privacy codes

under ideal conditions.

Trademark Acknowledgement

Cobra®, microTALK®, Nothing comes close to a Cobra® and the snake design are registered trademarks of Cobra Electronics Corporation, U.S.A. Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, U.S.A.



For Products Used in the U.S.A.



Battery Compartment Cover

Call Button

Press and release to alert others that you are calling

Product Service Questions

If you have any questions about operation or installing your new Cobra product, or if you are missing parts...

Please call Cobra first! DO NOT RETURN THIS PRODUCT TO THE STORE! See customer assistance above.

Please call Cobra Instal DO NOT HETURN THIS PHODUCT TO THE STORE!

See customer assistance above.

For Products Purchased in Canada

For out of warranty service, ship prepaid this product to: AVS Technologies Inc., 2100 Trans

Canada Hwy S., Montread, Quebec, H9P 2NA, www.cobra.ca. We reserve the right to repair or

replace the radio or charger with equivalent products. Please include the following information:

Date of Purchase, Model Number, Dealer Purchased From, Dealer Address, Dealer Phone Number.

For Products Purchased in the U.S.A.

If your product should require factory service, please call Cobra first before sending your

radio, charger or battery pack(s). This will ensure the fastest turn-around time on your repair.

You may be asked to send your products to the Cobra factory, It will be necessary to furnish

the following to have the product serviced and returned. 1) For warranty repair include some

form of proof-of-purchase, such as a mechanical reproduction or carbon of a sales receipt. If you send the original receipt, It cannot be returned. 2) Send the entire product. 3 Enclose a

description of what is happening with the product. Include 2 styped or clearly printed name

and address of where the product is to be returned. 5) Shit prepaid and insured by

way of a traceable carter such as United Parcel Service (UPS) of First Class Mail to

avoid loss in transit to: Cobra Factory Service, Cobra Betchronics Corporation, 6500 West

Cortiand Street, Chicago, Illinois 65070 U.S.A. 6) If the product is in warranty, upon receipt

of your product It will either be repaired or exchanged depending on the model. be your product it will be repaired or techning a depending of in model.

Please allow approximately three to four weeks before contacting Cobra for status. If the product is out of warranty, a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 773-889-3087 for assistance.

For Products Purchased Outside the U.S.A. or Canada Please contact your local dealer for product service info

Limited One-Year Warranty on Radio(s) and Charger

For Products Purchased in Canada
Your new Cobra GMRS radio and charger are covered by a one year replacement warranty.
If any manufacturing defect becomes apparent in these products within one year from the
original date of purchase, they will be replaced. Please return the GMRS radio or charger to
your dealer with original or copy of datel proof of purchase. This warrandy does not cover

damages due to careless handling, negligence, accident, abuse or failure to follow operating instructions. Alteration of these products or defacing of the serial number cancels all obligations of this warranty. This warranty gives you specified legal rights Additional warranty rights may be provided by law in some areas.

Additional warrainty rights may be provided by law in some areas. For Products Purchased in the U. S.A. Cobra Electronics Corporation warrants that its Cobra GMRS radios and charger, and the component parts thereof, will be free of defects in workmanship and materials for a period of one (1) year from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A. Cobra will, without charge, repair or replace, at its option, defective GMRS radios, chargers, products or component parts upon delivery to the Cobra Factory Service department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

a upin.caee copy or a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty. This worranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Exclusions: This limited warranty does not apply:

1) To any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of nuarthorized alterations or repairs; 3) if the serial number has been altered, defaced, or removed; 4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. Cobra shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages. so the above limitations may not apply to you

For Products Purchased Outside the U.S.A. or Canada Please contact your local dealer for warranty information



Hold the transmitter approximately two inches from your face and speak in a normal voice, with the antenna pointed up and away.

For Products Used in the U.S.A.
FCC Licensing Required
This two-way radio operates on GMRs (General Mobile Radio Service) frequencies which
require an FCC (Federal Communications Commission) license. A user must be licensed prior
to operating on channels 1 through 7 or 15 through 22, which comprise the GMRS channels of
this Commission Service perhalise could result for unificensed use of GMRs channels, or violation of
FCC rules, as stipulated in the Communication Act's Sections 501 and 502 (amended).

Licensed users will be issued a call sign by the FCC, which should be used for station identification when operating this radio. GMRS users should also cooperate by engaging in permissible transmissions only, avoiding channel interference with other GMRS users, and being prudent with the length of their transmission time.

For licensing information and application forms, please call the FCC Hotline at 800-418-FORM Request form #159 and form #605. Questions regarding the license application should be directed to the FCC at 888-CALL-FCC. Additional information is available on the FCC's website at www for one.

National an wavacucupur. Safety Information for microTALK* Radios Your writelss handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commission (FCC) adopted RF expourer guidelines with safety levels for handheld writelses devices.

Important: FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with Cobra accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna. Inauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) his device must accept any interference received, including interference that may cause undesired operation.

FCC Warnings: Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra may cause a violation of the technical regulations of part 95 of the FCC rules, or violation of type acceptance requirements of part 2 of the rules.

For Products Used in Canada

Normal Position:

Industry Canada Notice
Operation is subject to the following two conditions: 1) this device may not or interference, and 2) this device must accept any interference, including interfer that may cause undesired operation of the device.

«IC» before the equipment certification number signifies that the Industry Canada technical specifications were met. It does not guarantee that the certified product will operate to the user's satisfaction.

The Cobra line of quality products includes:

CB Radios • microTALK® Radios • Radar/Laser Detectors • Safety Alert® Traffic Warning Systems • Handheld GPS Receivers • Mobile GPS Navigation Systems • HighGear® Accessories • CobraMarine™ VHF Radios • Power Inverters • Accessories