

## TABLE OF CONTENTS

Chapter	Title	Page
1	<b>INTRODUCTION</b>	1-1
	1. General	1-1
	1.02 Scope	1-1
	1.03 Organization	1-1
	1.04 Reference	1-1
	2. System Overview	1-1
	2.01 General	1-1
2	<b>PRIOR TO INSTALLATION</b>	2-1
	1. Site Preparation	2-1
	2. Unpacking and Inventory	2-1
	2.01 Unpacking	2-1
	2.02 Precautions	2-1
	2.03 Inventory	2-1
	3. Tools and Test Equipment	2-2
	3.01 Tools	2-2
	3.02 Test Equipment	2-2
3	<b>HARDWARE INSTALLATION</b>	3-1
	1. Introduction	3-1
	1.01 General	3-1
	1.03 Chapter Organization	3-1
	1.04 Disclaimer	3-2
	2. Installation Map	3-2
	3. Equipment Placement	3-3
	3.01 General	3-3
	3.03 Printers	3-3
	4. Card Strapping	3-3
	4.01 General	3-3
	4.02 IBM PC-AT System Board	3-4
	4.03 AST Advantage Premium Card	3-4
	4.04 AST Async Cluster Adapter Card	3-4
	4.05 Brooktrout Voice Response Cards	3-7

## TABLE OF CONTENTS (Cont'd)

Chapter	Title	Page
3	5. Installation Procedures	3-7
	5.01 Disk Drives	3-7
	5.02 IBM Monochrome Display <sup>etc.</sup> and Printer Adapter Card	3-7
	5.03 Plug-In Card Installation Procedure	3-7
	6. Report Printer Connection	3-10
	7. Backup Printer Connection	3-12
	8. Processor Interface Link (PIL) from PBX to PC	3-13
	9. SMDR Connection from PBX to PC	3-16
	10. PMS Interface Link	3-21
	11. HOBIC Link Connection	3-23
	12. Connection of PBX to PC Voice Lines	3-24
4	<b>SOFTWARE INSTALLATION</b>	4-1
	1. General	4-1
	2. Start Concurrent DOS (CDOS)	4-1
	3. Copy the Software Disks	4-2
	4. Format the PC Hard Disk	4-3
	5. Install CDOS and the Hard Disk Loader	4-5
	6. Install the Lodging II Application Software	4-6
	7. Install the CCMI Rate Tables	4-6
	8. Set the Lodging II Communication Ports	4-7
	9. Customer Database Entry	4-9
5	<b>INSTALLATION TESTS</b>	5-1
	1. General	5-1
	1.02 Preparation	5-1
	1.03 Sequence	5-1
	2. PBX to PC, Report Printer, PIL, HOBIC, and PMS Connections	5-1
	3. Call Record Buffer	5-2
	4. Voice Lines	5-3

## TABLE OF CONTENTS (Cont'd)

### LIST OF TABLES

Table	Title	Page
4-1	Serial Port Configuration Parameters	1-1

### LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1	Lodging II System	1-1
3-1	IBM PC-AT System Board Switch and Jumper Settings	3-4
3-2	AST Advantage Premium Card Switch and Jumper Settings	3-5
3-3	AST Async Cluster Adapter Card - One Switch	3-6
3-4	AST Async Cluster Adapter Card - Three Switches	3-6
3-5	First Brooktrout Voice Response Card	3-8
3-6	Second Brooktrout Voice Response Card	3-9
3-7	Local Report Printer Connection	3-10
3-8	Remote Report Printer Connection	3-11
3-9	Local Backup Printer Connection	3-12
3-10	Remote Report Printer Connection	3-13
3-11	Local PIL Connection	3-14
3-12	Remote PIL Connection	3-15
3-13	Local PBX to PC SMDR Link with Call Record Buffer	3-17
3-14	Remote PBX to PC SMDR Link with Call Record Buffer	3-18
3-15	Local PBX to PC SMDR Link without Call Record Buffer	3-19
3-16	Remote PBX to PC SMDR Link without Call Record Buffer	3-20
3-17	Local PC to PMS Interface Connection	3-22
3-18	Remote PC to PMS Interface Connection	3-22
3-19	Local HOBIC Connection	3-23
3-20	Remote HOBIC Connection	3-24



## CHAPTER 1 INTRODUCTION

### 1. GENERAL

**1.01** This manual describes how to install the **focus** Lodging II Application Processor (AP). It should be read before installation so that the procedures are familiar. These procedures should be performed in the order in which they are outlined to assure proper installation of the AP.

**1.02 Scope.** This manual deals only with actual installation procedures. Operational information is included only when necessary to complete an installation step.

**1.03 Organization.** The following is a brief outline of what is contained in each chapter.

- Chapter 2, PRIOR TO INSTALLATION, explains what tools must be on-hand and discusses hardware unpacking and inventory.
- Chapter 3, HARDWARE INSTALLATION, discusses how to install the plug-in cards in the PC chassis. It then explains the connections from PBX to PC and PC to peripheral devices.
- Chapter 4, SOFTWARE INSTALLATION, describes the procedures involved in installing the Lodging II software. Step-by-step instructions guide you in installing Concurrent DOS, the Lodging II applications software, and the CCMI rate tables.
- Chapter 5, INSTALLATION TESTS, outlines the procedures for starting the Lodging II system and checking to see if it is operating properly.

**1.04 References.** Other documents provide additional information about the Lodging II system and should be on hand during installation.

**1.05** The following documents describe equipment supplied by Fujitsu Business Communications and are necessary for proper installation of the Application Processor.

- **focus 960** Customer System Specifications, Section 105-214-002
- **focus 960** Maintenance and Administration Commands Manual, Section 105-090-000
- **focus 960** Installation/Maintenance Manual, Section 105-056-000
- Lodging II Customer System Specifications, Section 115-202-000
- Lodging II User Guide, Section 115-043-000
- Lodging II System Administrator Manual, Section 115-052-000
- Lodging II Site Planning Guide, Section 115-068-000
- Lodging II Troubleshooting Guide, Section 115-067-000

**1.06** The following manufacturer documentation should be available.

- PC Installation and User Guide
- User guide for selected printer(s)
- User guide for selected call record buffer
- User guide for Property Management System (PMS)

### 2. SYSTEM OVERVIEW

**2.01 General.** The Lodging II AP provides an interface between the **focus 960** PBX and a Property Management System (PMS).

2.02 The AP includes call costing and pricing information as well as a link between PBX and PMS for various guest room information.

2.03 Figure 1-1 shows a simplified diagram of a Lodging II installation with its connections to the focus 960 PBX, PMS, and the various AP peripheral devices. The major system components are:

- Application Processor (installed in a PC)
- Call Record Buffer (optional)
- Report Printer
- Backup Printer

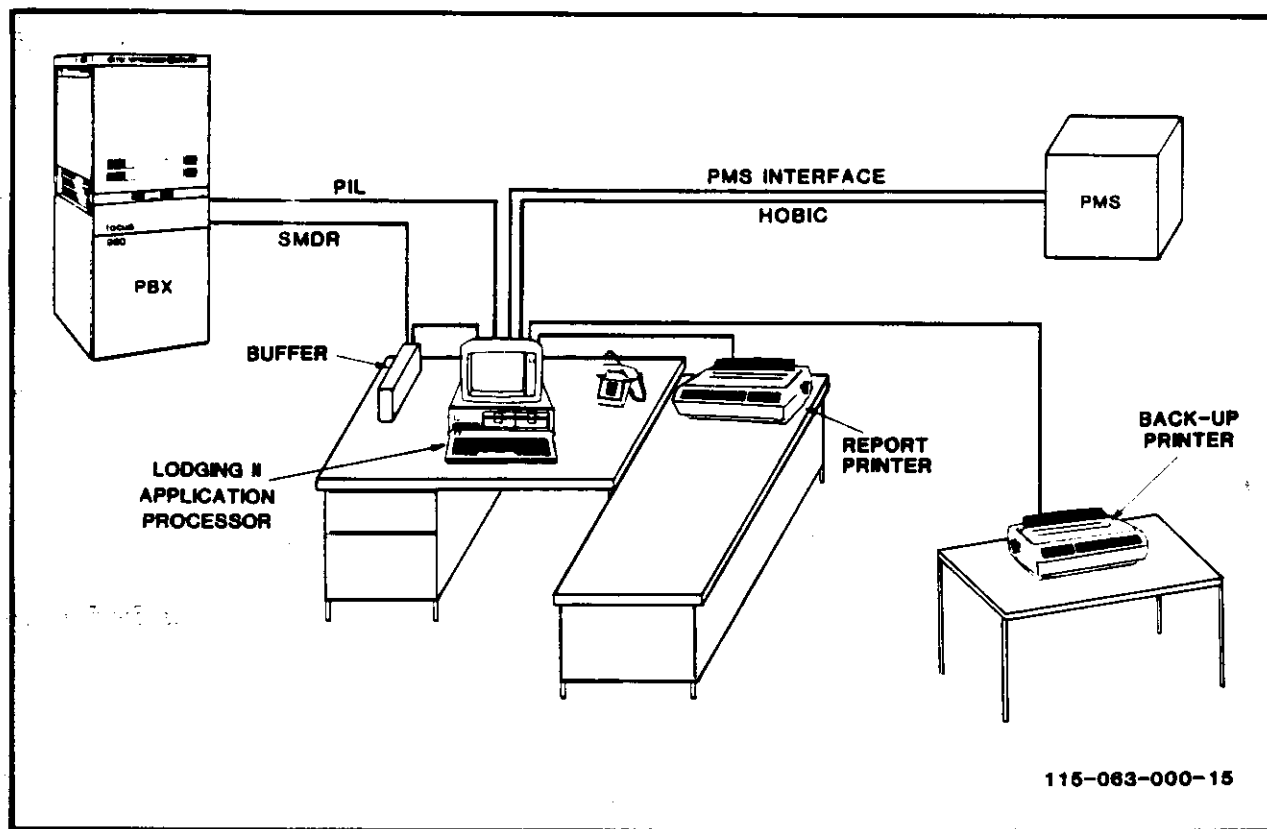


Figure 1-1. Lodging II System Overview

## CHAPTER 2 PRIOR TO INSTALLATION

### 1. SITE PREPARATION

1.01 Before installing the Lodging II system, the following should be completed:

1. The site should be selected and prepared. The preparation will include:
  - A suitable desk in place for the PC.
  - A stand or table in place for both the report and backup printers.
  - Electrical outlets available or installed for all the equipment.
2. Refer to the Lodging II Site Planning Guide for detailed instructions on the various requirements for an adequate installation site.

### 2. UNPACKING AND INVENTORY

2.01 **Unpacking.** It is suggested that the entire system be unpacked, checked for completeness and tested prior to actual installation on-site.

2.02 **Precautions.** When unpacking the Lodging II equipment, certain procedures and precautions should be taken. These include:

- Remove items that generate static from your work area. These include styrofoam, cellophane, etc.
- Spray the area with an anti-static spray.
- Ground yourself before handling any equipment.
- Remove hardware carefully from its packaging. Never puncture or tear containers. Use a pair of scissors or a knife to cut where needed.
- Visually inspect all equipment for obvious faults.
- Hold plug-in cards by non-conductor edges only. Do not touch connectors or components.
- Keep static-sensitive components in their anti-static bags until you are ready to install them in the computer.
- Keep disks in their protective envelopes whenever they are not being used. Never touch the recording surfaces.
- Do not stack plug-in cards on top of each other. This can damage the components on the cards.

2.03 **Inventory.** After the Lodging II equipment is unpacked and inspected, inventory should be taken. To do this, check the items received against the items ordered. Use the Lodging II Site Planning Guide to verify what should have been ordered for the various connections.