












GN 9050

2.4 GHz Wireless Headset System





Charge battery for 3 hours prior to initial use.

User Guide

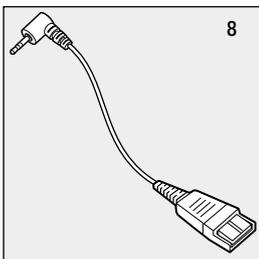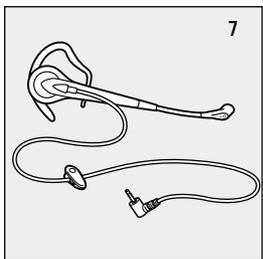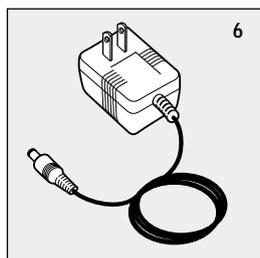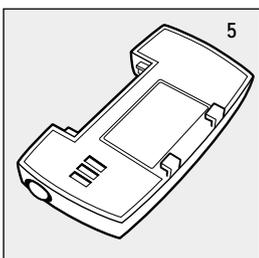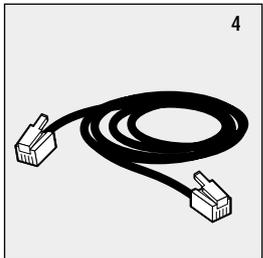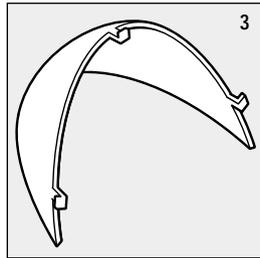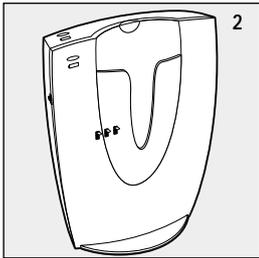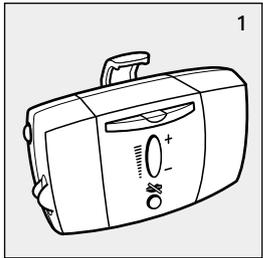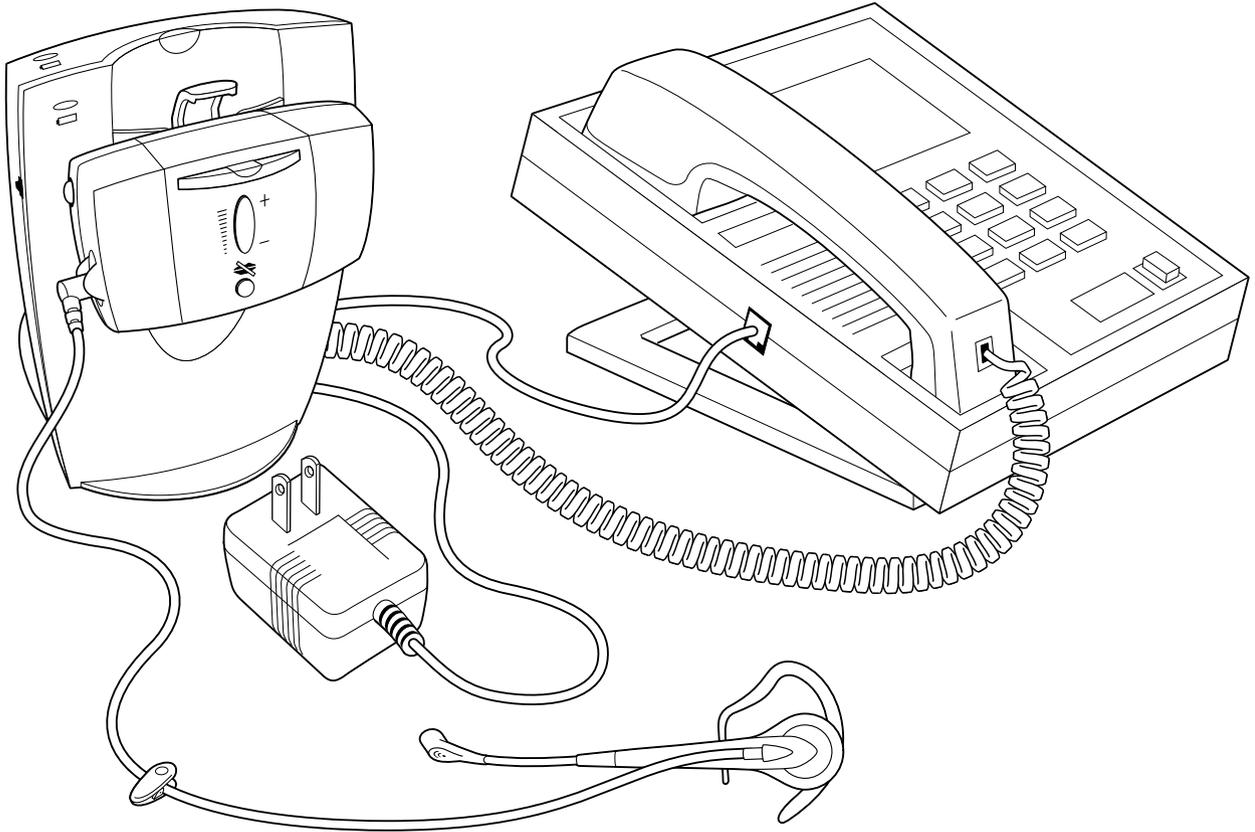

Components

- 1 Remote Beltpack
- 2 Base
- 3 Base Stand
- 4 Telephone Cord
- 5 Remote Battery
- 6 AC Power Adapter
- 7 Headset
(included with System purchase or as an option)
- 8 Remote Headset Adapter
(Quick Disconnect to 2.5mm cord adapts your existing headset for remote use-included with non-System purchase)

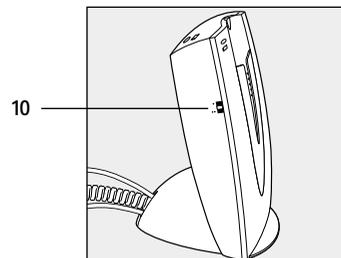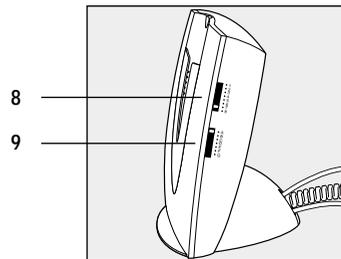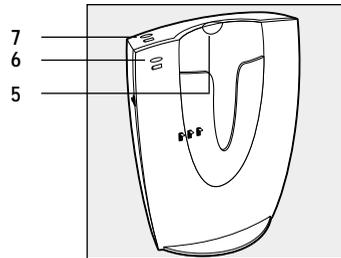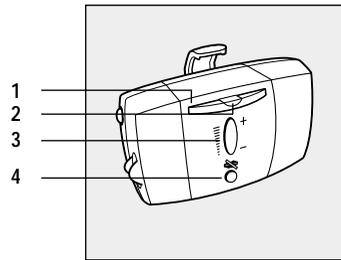

Remote Beltpack Functions





- 1 **Headset/Handset Button/
Optional Handset Lifter Button:**
Press to enter Headset or Handset Mode as desired (LED on Remote blinks and LED on Base lights in Headset Mode; no lights in Handset Mode). Also for use with optional Remote Handset Lifter: see Remote Handset Lifter user guide for instructions.
- 2 **Headset Mode Indicator:**
Blinks when the system is in Headset Mode; no light in Handset Mode.
- 3 **Volume Control:**
Press + to increase volume.
Press - to decrease volume.
- 4 **Mute Button:**
Press to activate mute and disable the transmit/microphone; press again to enable transmit/microphone.

Base Functions/Indicators

- 5 **Headset Mode/Online Indicator:**
Lights when the system is in Headset Mode; no light in Handset Mode.
- 6 **Battery Charge Indicator:**
Lights red when the Remote is properly seated in the Base Charger (if LED blinks, battery is not charging; remove the Remote, wipe the battery charging contacts and replace); turns green when Battery is fully charged.
- 7 **Spare Battery Charge Indicator:**
Lights red when the Battery is properly seated in the Base Spare Battery Charger (if LED blinks, battery is not charging; remove the Remote, wipe the battery charging contacts and replace); turns green when Battery is fully charged.
- 8 **Transmit Settings:**
Adjusts the volume of your voice.
1 is the softest, 8 is the loudest.
- 9 **Telephone Compatibility Settings:**
Fine tunes the system to your telephone system.
- 10 **Bass/Treble Tone Settings:**
3-position switch to customize receive tone.

Audio Indicators	
Out of Range	Tone sounds in headset every 10 seconds
Mute	Tone sounds in headset every 15 seconds
Low Battery	Tone sounds in headset every 20 seconds
Volume	Tone sounds in headset at maximum and minimum setting
Headset/Handset Mode	Tone sounds in headset when entering Headset or Handset Mode

Battery Information	
Battery Type	Nickel Metal Hydride (NiMH), 3.6 V 450 mAh (GN Netcom part number 1601-809)
Capacity On-Line	Fully charged battery provides minimum of 6 hours continuous use without recharging. The base has two charging ports; additional battery can be purchased for longer operation.
Capacity Off-Line	Fully charged battery provides minimum 80 hours without recharging.
Recharging Time	Maximum 3 hours to completely recharge a discharged battery; battery cannot be overcharged.
Battery Life	2 years if battery is recharged when not in use and never completely discharged.



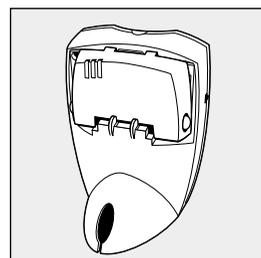
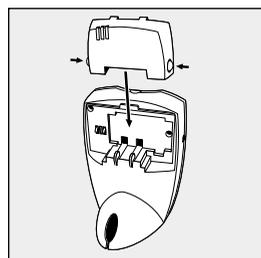
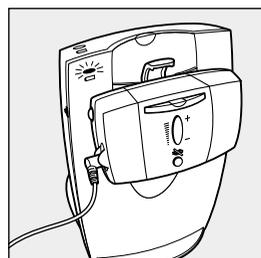
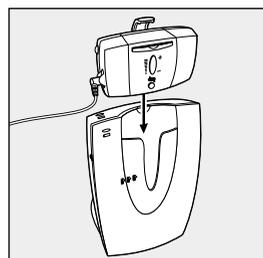


Recharging the Battery




Slide the Remote into the Charger on the front of the Base. To use your Headset while charging, put the system in Headset Mode. To charge overnight, put the system in the Handset Mode.

Use the charging port on the rear of the Base to charge a second battery (optional).

Setting Up

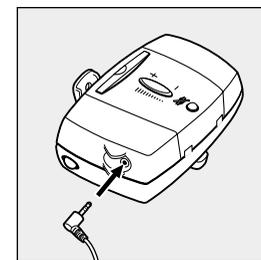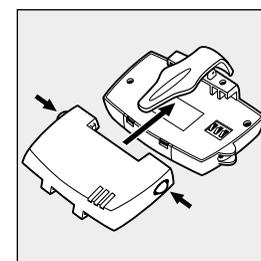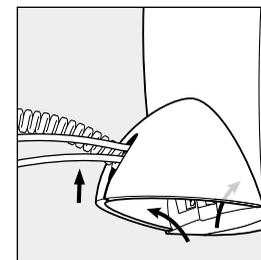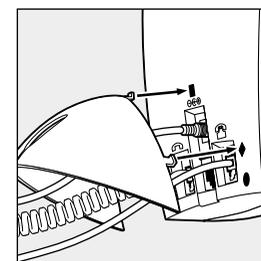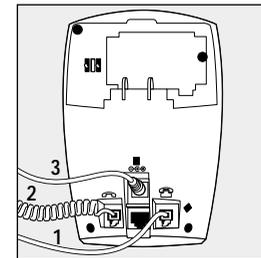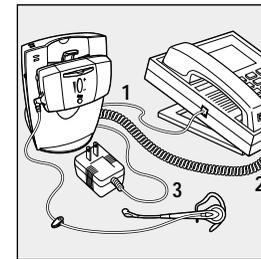

1. **Connect all Cords.**
Unplug the handset cord from the telephone and plug the Telephone Cord into the vacated handset cord port. The location of this port is different for each phone and is often on the underside of the phone.
Some telephones must be programmed for headset use.

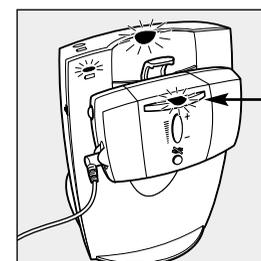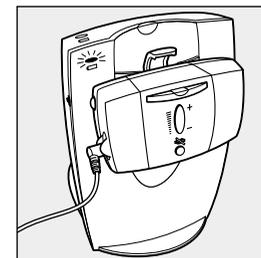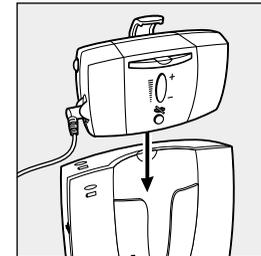


5. Slide the Remote into the Charger on the front of the Base. The Battery Charge light on the front of the Base illuminates. Charge the Battery for a full 3 hours. You may use the handset while the Battery charges.
Battery Charge Indicator turns green when battery is fully charged.

2. Attach the Base Stand.


3. Attach the Battery to the Remote.
Simultaneously press both buttons on the sides of the Battery while inserting into the Remote.

4. Connect the Headset to the Remote.

6. Press the Headset/Handset Button to put the system in Headset Mode. The Headset Mode light on the Remote blinks, and the Headset Mode light on the Base illuminates.
It will take up to 45 seconds to establish a channel with first use.

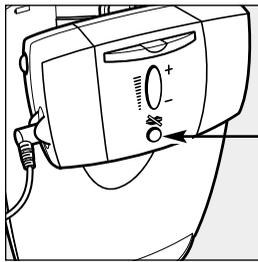


7. Make sure the Mute is off.
When Mute is on, a tone sounds in the Headset every 15 seconds.

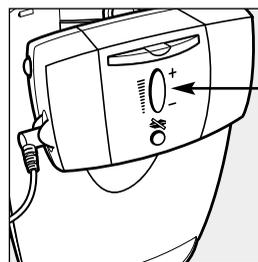


10. Use the Remote Beltpack to adjust the receive (speaker) volume. If your telephone has volume control, set it at low to mid-range.


Using The Remote

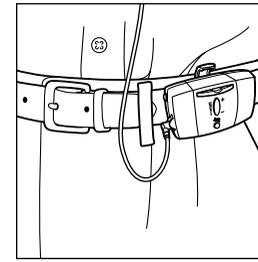


12. To roam up to 150 ft. (45 m) from the Base, remove the Remote from the Base Charger and clip it to your belt. If you move out of range, a tone sounds in your headset every 10 seconds. Calls are not disconnected when out of range, but are, in effect, put on hold. Move back into range to re-establish communications.

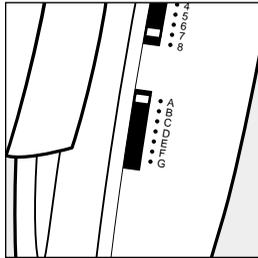



8. Put the Headset on and select a telephone compatibility setting until dial tone is clear. If dial tone is clear for both A and G, set to A. Most phones will require setting A or G.

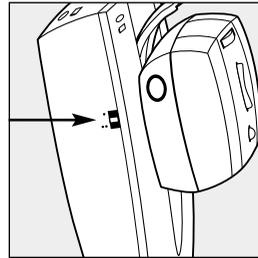

11. To customize the receive tone, adjust the 3-position switch.
Top: Increase Treble
Mid: Neutral
Bottom: Increase Bass

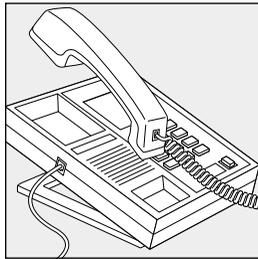


9. Remove the handset and make a call. While switching between the Headset and Handset, adjust the transmit (microphone) setting until your voice is the same volume on both devices (1 is the softest, 8 is the loudest).
Disconnect the optional Remote Handset Lifter from the Base while setting the volume.

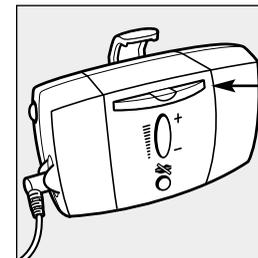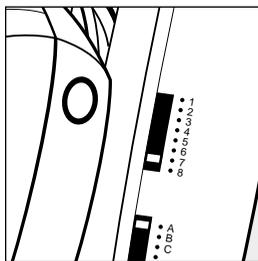

Adjusting Remote Beltpack Ring Tone

Press the Headset/Handset Button on the Remote to put the system in Handset Mode (the indicator lights on the Remote and Base are not illuminated). Simultaneously press the increase Volume Button (+) as well as the Mute Button for 3 seconds and release. The Headset Mode Indicator light on the remote lights up indicating you are in Ring Setting Mode. Use the Volume Control on the Remote to select one of the four available options: Maximum, Medium, Minimum, Mute. Press + to increase the volume of the ring and press - to decrease or mute the ring tone. Within 10 seconds, the setting will be stored and the Headset Mode Indicator light will go out.

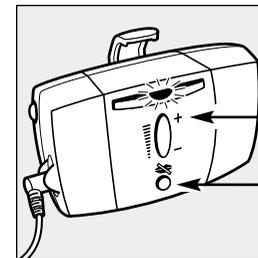

Frequently Asked Questions

What should I check if I don't hear a dial tone?

- Check to see that all cords and jacks are connected.
- Make sure that the Headset cord is fully inserted into the Remote.
- Make sure that the AC Adapter is plugged in and has power.
- Try the compatibility setting on A and G.
- Make sure the system is in Headset Mode.
- Make sure that the Battery is properly installed in the Beltpack.
- Make sure that the Battery is fully charged (3 hours minimum).
- Check that the serial numbers on the bottom of the Base unit and back of Beltpack units match: because of the security circuits, the Beltpack and Base unit must match for operation.

What should I check if the other party has a hard time hearing me?

- Make sure the Mute on the Beltpack is off.
- Increase the transmit level (1 is the softest, 8 is loudest).
- Check the position of the Headset Microphone and make sure that it is placed at the corner of your mouth.

What should I do if I hear a buzz or humming sound in my Headset?

- Move the Base farther away from the telephone.

What should I do if I hear an echo in my Headset while speaking?

- Lower your transmit adjustment. If this makes the transmit too weak, try adjusting the Telephone Compatibility Switch setting.
- Lower the receive volume on your telephone.

What should I do if I hear noise or static or if the signal is weak?

- You may be out of range; move closer to the Base for a stronger signal.

What should I do if my battery is not charging?

- Remove the Remote from the Base Charger and wipe the battery charging contacts on the back of the Remote/Battery. (Battery Charge Indicator LED lights solid red while charging; if LED blinks, clean contacts as indicated.)


Do I need to lift the handset to make calls?

- Some telephone systems allow on-hook dialing; refer to your telephone system user guide for instructions.

How many GN Netcom wireless systems, can be used in one location?


- The number varies greatly due to environmental factors; no specific count can be provided.

Accessories

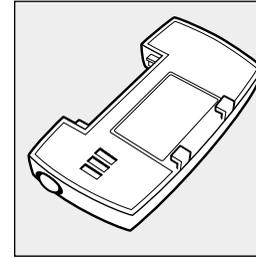


Battery

To prolong operating time from 6 to 12 hours, an additional Battery can be purchased (GN Netcom part number 1601-809).

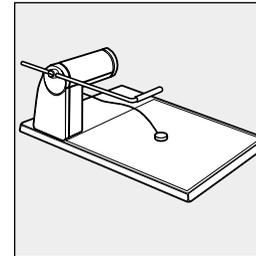

ReadiLine Remote Handset Lifter with GN ReadiLine Interface Kit

The Remote Handset Lifter lifts the handset from your telephone enabling you to answer and hang up calls without returning to your desk.

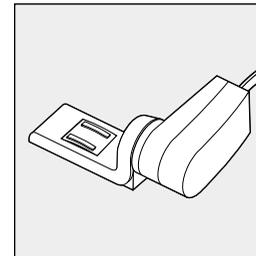

Remote Handset Lifter

The Remote Handset Lifter lifts the handset from your telephone enabling you to answer and hang up calls without returning to your desk.



For more information and technical specifications:
www.gnnetcom.com

CORPORATE HEADQUARTERS
77 Northeastern Blvd.
Nashua, NH • 03062
1-800-826-4656
1-603-598-1100
Fax: 1-603-598-1122

© 2002 GN Netcom, Inc. • All rights reserved.
1557-159A • Printed in China.