

## SIMPLIFIED USER GUIDE PagePac 6 Plus Voice Paging System

### PLACING AN OUTSIDE CALL

1. Lift the receiver.
2. Dial 9, or wait for Automatic Outside Line Access (see programming instructions below). Listen for dial tone.
3. Dial number.
4. Replace receiver when call is completed.

### PAGING

1. Lift the receiver, listen for PagePac 6 Plus dial tone.
2. Dial the zone code (see figure 1), listen for connection tone, if active (see programming instructions below).
3. Make page.
4. Gently replace the receiver.

### SELECTING OPTIONS

First lift the receiver. You will receive PagePac 6 Plus dial tone, then follow the instructions below. The tone you will hear after each step is shown in parenthesis, example-(program tone). If you get a **fast busy** tone, **hang up and start over**.

**\* Indicates the default condition.**

#### Connection Tone

1. Connection tone ON\*, dial 835 (program tone).
2. Connection tone OFF, dial 834 (program tone).

#### Music In Zones

1. Music in Zone 1 ON, dial 811 (program tone).
2. Music in Zone 2 ON, dial 812 (program tone).
3. Music in Zone 3 ON, dial 813 (program tone).
4. Music in all zones OFF\*, dial 814 (program tone).

#### Talkback On Line 1 And Line 2

1. Talkback on Line 1 OFF, dial 891 (program tone).
2. Talkback on Line 2 OFF, dial 892 (program tone).
3. Talkback on Lines 1 and 2 ON\*, dial 893 (program tone).

#### Talkback In Zones

1. Talkback in Zone 1 OFF, dial 821 (program tone).
2. Talkback in Zone 2 OFF, dial 822 (program tone).
3. Talkback in Zone 3 OFF, dial 823 (program tone).
4. Talkback in all zones ON\*, dial 824 (program tone).

#### Talkback Warning Tones

1. Initial Warning tone OFF, dial 831 (program tone).
2. Repetitive Warning tones OFF, dial 832 (program tone).
3. Both Warning tones ON\*, dial 833 (program tone).
4. Time between Repetitive tone 15 SECONDS, dial 841 (program tone).
5. Time between Repetitive tone 30 SECONDS\*, dial 842 (program tone).

#### All Zone Paging

1. All-zone paging OFF, dial 851 (program tone).
2. All-zone paging ON\*, dial 852 (program tone).

#### Automatic Outside Line Access On Line 1

1. AOLA OFF, dial 861 (program tone).
2. AOLA after 2 SECONDS, dial 862 (program tone).
3. AOLA after 4 SECONDS\*, dial 863 (program tone).
4. AOLA after 10 SECONDS, dial 864 (program tone).

#### Automatic Outside Line Access On Line 2

1. AOLA OFF, dial 865 (program tone).
2. AOLA after 2 SECONDS, dial 866 (program tone).
3. AOLA after 4 SECONDS\*, dial 867 (program tone).
4. AOLA after 10 SECONDS, dial 868 (program tone).

**FIGURE 1. PAGEPAC 6 PLUS ZONE DIAL CODES**

ZONE DIAL CODES	
ZONE #	DIAL
All Zones	7
1	1
2	2
3	3
2 and 3	4
1 and 3	5
1 and 2	6