


# INSTALLATION MANUAL

ELECTRONIC MODULAR SWITCHING SYSTEM

## KX-T123210

EASA-PHONE

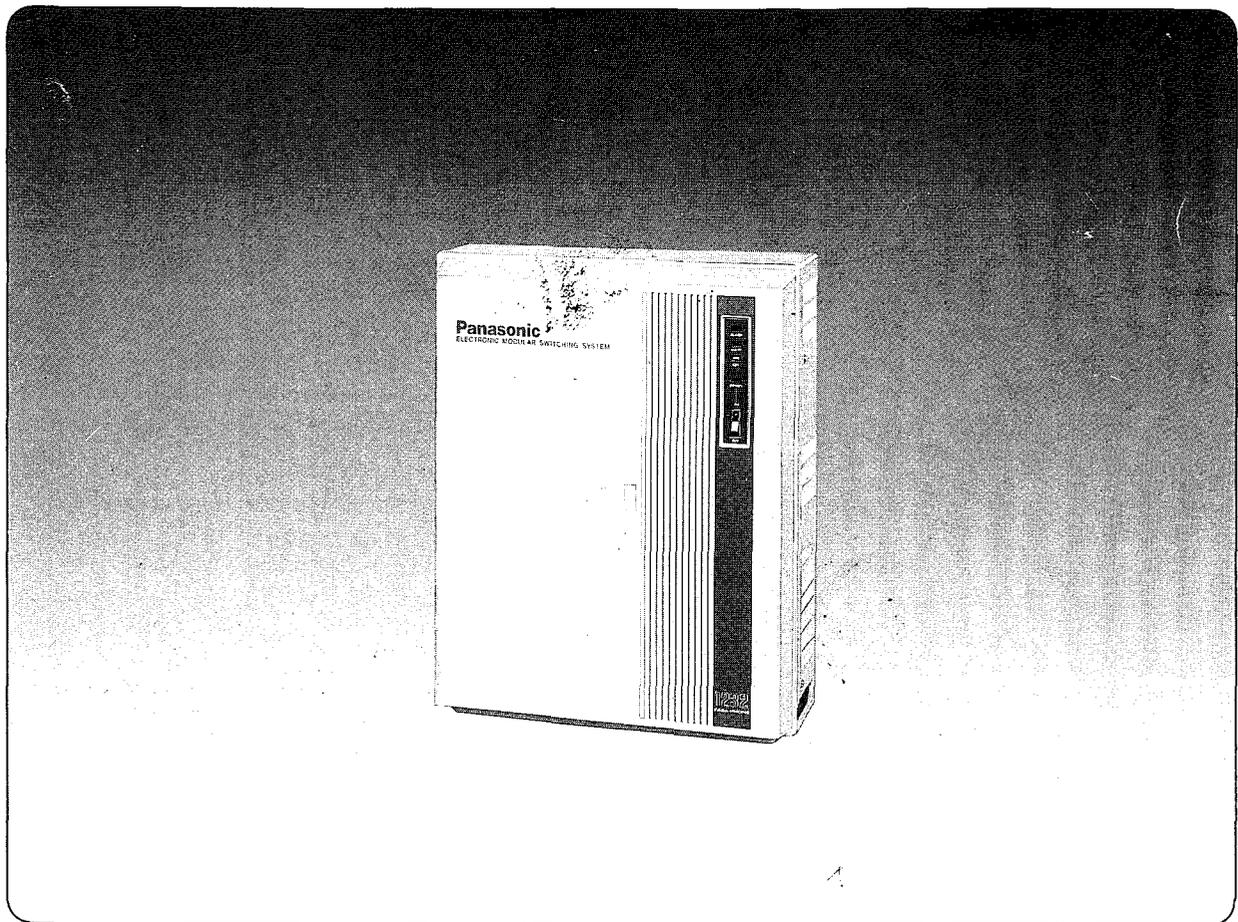

**Panasonic**

Please read this manual before connecting the KX-T123210

Thank you for purchasing the Panasonic Model KX-T123210,  
Electronic Modular Switching System (EMSS).

## SYSTEM COMPONENT

Model No.	Description	
<b>Service unit</b>	KX-T123210 Electronic Modular Switching System	
<b>Telephone</b>	KX-T123220 EMSS Proprietary Telephone (12 CO's)	
	KX-T123230 EMSS Proprietary Telephone with LCD (12 CO's)	
	KX-T123250 EMSS Proprietary Telephone (12 CO's)	
	KX-T61620 EMSS Proprietary Telephone (6 CO's)	
<b>Telephone</b>	KX-T61630 EMSS Proprietary Telephone with LCD (6 CO's)	
	KX-T61631 EMSS Proprietary Telephone with LCD (6 CO's)	
	KX-T61650 EMSS Proprietary Telephone (6 CO's)	
	KX-T30820 EMSS Proprietary Telephone (3 CO's)	
<b>Telephone</b>	KX-T30830 EMSS Proprietary Telephone with LCD (3 CO's, 8 DSS's)	
	KX-T30850 EMSS Proprietary Telephone (3 CO's)	
	<b>Optional equipment</b>	KX-T123240 DSS Console (32 DSS's, 16 Feature buttons)
		KX-T61640 DSS Console (16 DSS's, 16 Feature buttons)
<b>Optional equipment</b>	KX-T123241 DSS Console Card	
	KX-T123270 Expansion Card (up to eight extension lines)	
	KX-T123271 Expansion Card (up to four extension lines)	
	KX-T123280 Expansion Card (up to four CO lines)	
	KX-T123281 Expansion Card (up to two CO lines)	
<b>Optional equipment</b>	KX-T30860D(only) Doorphone Adaptor	
	KX-T30865 Doorphone	
	KX-T30890 Headset	
	KX-A26 Battery Adaptor	

# NOTIFY THE TELEPHONE COMPANY

Installation must be performed by a qualified professional installer.

## Notify the Telephone Company

Before connecting this equipment to any telephone, call the telephone company and inform them of the following :

- Telephone numbers to which the system will be connected .....
- Make ..... Panasonic
- Model ..... KX-T123210
- FCC Registration No. .... ACJ 96 N-19294-MF-E
- Ringer Equivalence ..... 0.4B
- Facility Interface Code ..... 02LS2
- Service Order Code ..... 9.0F
- Required Network Interface Jack ..... RJ11

Present FCC Regulations prohibit connecting this unit to a party line, or to a coin operated telephone.

Please read the section on "Telephone Company and FCC Requirements and Responsibilities" on page 6-8.

The serial number of this product may be found on the label affixed to the side of the unit. You should note the serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid in identification in the event of theft.

MODEL NO . : **KX-T123210**

SERIAL NO . : \_\_\_\_\_

### For your future reference

DATE OF PURCHASE \_\_\_\_\_

NAME OF DEALER \_\_\_\_\_

DEALER'S ADDRESS \_\_\_\_\_

# PROGRAMMING FEATURE OUTLINE

	Page		
System	Date and Time .....	3-4	
	System Speed Dialing .....	3-5	
	Extension Number .....	3-8	
	Operator .....	3-9	
	DSS Console .....	3-10, 3-11	
	Day/Night Service .....	3-12	
	Call Hunting .....	3-15	
	Toll Restriction .....	3-17	
	Hold .....	3-25, 3-26	
	Transfer Recall Time .....	3-27	
	Call Forwarding Starting Time .....	3-28	
	Pickup Dial Delay Time .....	3-29	
	CO-to-CO Duration Time Limit .....	3-30	
	Station Message Detail Recording .....	3-31	
	Duration Time Count Start Mode .....	3-40	
	External Paging Access Tone .....	3-41	
	Outside Line	CO Connection .....	3-42
		Dial Mode (DTMF/Pulse) .....	3-43
		Host PBX Access Codes .....	3-45
Trunk Group .....		3-46	
Outward Dialing .....		3-47	
Ringing .....		3-49	
Delayed Ringing .....		3-52	
CO Direct In Line .....		3-54	
Pause Time .....		3-59	
Hookswitch Flash Timing .....		3-60	
Calling Party Control Signal .....		3-61	
Disconnect Time .....	3-62		
Extension	Extension Group .....	3-63	
	Service Class of Toll Restriction .....	3-64	
	Extension Name .....	3-68	
	Account Code .....	3-70	
	Call Transfer/Call Forwarding .....	3-71, 3-72	
	Executive Override .....	3-73	
Do not Disturb Override .....	3-74		
Doorphone .....	3-75		
Call on Hold for Standard Telephone ..	3-77		
System Data Clear .....	3-78		

# TABLE OF CONTENTS

<b>Quick Reference</b> .....		1-9
<b>Name and Location</b> .....		2-1
<b>Installation</b> .....		2-1
<b>Connection</b> .....		2-5
Central Office Line Connection (CO1 through 6) .....		2-7
Extension Connection .....		2-8
Optional Cards Installation .....		2-9
Extension Connection Option .....		2-10
Central Office Line Connection Option .....		2-12
Optional DSS Console Connection (KX-T123240/KX-T61640) .....		2-14
Optional Doorphone Connection .....		2-15
Polarity Sensitive Telephone Connection .....		2-17
Battery Connection .....		2-17
Printer Connection .....		2-18
Paging Equipment .....		2-20
External Music Source .....		2-20
<b>Programming</b>		
Programming Instructions .....		3-1
Example of Programming .....		3-3
<b>System Feature</b>	<b>Default</b>	
Date and Time Setting .....		3-4
System Speed Dialing Entry .....	has not been stored	3-5
Extension Number Assignment .....	(see page)	3-8
Operator Assignment .....	has not been stored	3-9
Paired Telephone Assignment		
for DSS Console .....	Console 1 : Jack no. 01 Console 2 : Jack no. 02	3-10
Automatic CO Hold Using DSS Button...	Automatic Hold	3-11
Day/Night Service Mode		
Switching of Service Mode .....	manual mode	3-12
Starting Time .....	day service 9 : AM night service 5 : PM	3-13
Call Hunting		
Setting .....	Disable	3-15
Hunting Type .....	Terminate	3-16
Toll Restriction .....		3-17
Area Type Selection .....	Type A	3-18
CO Operator Call-Boundary Class...	Class 1	3-19
Toll Restriction of Speed Dialing ..	Restriction	3-20
Exchange Code Selection .....	has not been stored	3-21
Area Code Entry For Class 3 .....	has not been stored	3-22

CONNECTION

PROGRAMMING

OPERATION

Exchange Code Entry For Class 5 ..	has not been stored	.....	3-23
Exchange Code Entry For Class 7 ..	has not been stored	.....	3-24
Hold Time Reminder .....	after 3 minutes	.....	3-25
Hold Recall Time Set .....	after 30 seconds	.....	3-26
Transfer Recall Time .....	after 30 seconds	.....	3-27
Call Forwarding Starting Time .....	3 rings delay	.....	3-28
Pickup Dial Delay Time .....	dial after 3 seconds	.....	3-29
CO-to-CO Duration Time Limit .....	10 minutes	.....	3-30
Station Message Detail Recording (SMDR) .....			3-31
RS-232C Communication			
Parameters .....	(see page)	.....	3-32
SMDR Parameters .....	(see page)	.....	3-35
Incoming/Outgoing Call			
Selection for printing .....	Incoming : ON Outgoing : ON	.....	3-36
Secret Speed Dial/One Touch			
Dial Printing .....	No Printing	.....	3-36
System Data Dump .....	All parameters	.....	3-37
Duration Time Count Start Mode .....	5 seconds after dial	.....	3-40
External Paging Access Tone .....	has been added	.....	3-41

## Outside Line Feature

CO Connection Assignment .....	Connect	.....	3-42
Dial Mode (DTMF/Pulse)			
DTMF/Pulse Selection .....	DTMF mode	.....	3-43
Pulse Speed Selection .....	Low speed	.....	3-44
Host PBX Access Codes Assignment...	has not been stored	.....	3-45
Trunk Group Assignment .....	(see page)	.....	3-46
Flexible Outward Dialing Assignment			
Day Mode .....	all CO's have been assigned on all extensions	.....	3-47
Night Mode .....	all CO's have been assigned on all extensions	.....	3-48
Flexible Ringing Assignment			
Day Mode .....	all CO's have been assigned on all extensions	.....	3-49
Night Mode .....	all CO's have been assigned on all extensions	.....	3-51

Delayed Ringing Assignment			
Day Mode .....	Immdtly	.....	3-52
Night Mode .....	Immdtly	.....	3-53
CO Direct In Line Assignment			
Day Mode .....	Normal mode	.....	3-54
Night Mode .....	Normal mode	.....	3-57
Pause Time Assignment .....	3.5 seconds	.....	3-59
Hookswitch Flash Timing .....	600 m seconds	.....	3-60
Calling Party Control (CPC) Signal ...	400 m seconds	.....	3-61
Disconnect Time .....	1.5 second	.....	3-62

### Extension Feature

Extension Group Assignment .....	all CO's have been assigned on group 1.	.....	3-63
Service Class Assignment of Toll Restriction			
Day Mode .....	Class 1	.....	3-64
Night Mode .....	Class 1	.....	3-66
Extension Name .....	has not been stored	.....	3-68
Account Code input Mode .....	Option	.....	3-70
Call Transfer to Outside Line .....	Disable	.....	3-71
Call Forwarding to Outside Line .....	Disable	.....	3-72
Executive Override .....	Disable	.....	3-73
Do not Disturb Override .....	Disable	.....	3-74

### Doorphone Feature

Ringing Assignment from Doorphone			
Day Mode .....	all extensions can be received call	.....	3-75
Night Mode .....	all extensions can be received call	.....	3-76
Call on Hold for Standard Telephone .....	Hold-1 mode	.....	3-77
System Data Clear .....	All parameters	.....	3-78
Example of Flexible CO Button .....			3-81

**Operation for EMSS Proprietary Telephone**  
 (KX-T123230, KX-T123220, KX-T123250, KX-T61631, KX-T61630, KX-T61620,  
 KX-T61650, KX-T30830, KX-T30820, KX-T30850)

**Making Calls**

Inter Office Calling (Intercom) .....	4-1
Outward Dialing .....	4-2
Speed Dialing .....	4-3
One Touch Dialing .....	4-4
Calling Doorphone .....	4-6
Operator Call .....	4-6
Distinctive Dial Tone .....	4-6

**When a Line is Busy**

Automatic Call Back Busy (Camp-On) .....	4-7
Last Number Redial .....	4-8
Busy Station Signaling .....	4-8
Executive Override (Barge-In) .....	4-9

**Receiving Calls**

Answer .....	4-10
Automatic Answer-Intercom .....	4-10
Dial Call Pickup .....	4-11
Directed Call Pickup .....	4-11
Call Park .....	4-12
Doorphone .....	4-13
Distinctive Ring Tone .....	4-13

**While Having a Conversation**

Call on Hold .....	4-14
Call on Exclusive Hold .....	4-15
Conference .....	4-16
Privacy Release .....	4-17
Call Transfer-To Extension .....	4-18
Call Transfer-To Outside Line .....	4-19
Call Waiting .....	4-20
Call Splitting-Between CO and Intercom .....	4-21
Call Splitting-Intercom .....	4-22
Mute Operation .....	4-22
Switching between Using Handset and Hands-free .....	4-23

**Paging**

All Extensions .....	4-23
Group .....	4-24
External .....	4-24
Paging And Transfer .....	4-25
Answer .....	4-25

**Use of Other Features**

Call Forwarding-All Calls/Busy or No Answer .....	4-26
Call Forwarding-To Outside Line .....	4-28
Dial Call Pickup Deny .....	4-29
Do Not Disturb .....	4-30
Do Not Disturb Override .....	4-31
Saved Number Redial .....	4-31

Executive Override Deny .....	4-32
Switching to Tone Alerting .....	4-33
Background Music .....	4-33
Absent Message Capability .....	4-34
Message Waiting .....	4-36
Flexible Night Service .....	4-37
External Feature Access .....	4-38
Account Code .....	4-39
Data line Security .....	4-41
Call Waiting Tone-From CO/Extension Deny .....	4-42
DSS Console (KX-T123240 or KX-T61640) .....	4-43
Pulse/Tone Conversion .....	4-45
Station Feature Clear .....	4-45
Busy Lamp Field .....	4-46
Power Failure Transfer .....	4-47
Duration Time of Call Display .....	4-47
Lockout .....	4-47
Mixed Station Dialing .....	4-47

### **Station Programming**

One Touch Access for System Features .....	4-48
Auto CO Hunting .....	4-49
Automatic Answering Selection .....	4-51
Flexible CO Button .....	4-53
Intercom Voice Alerting Mode .....	4-56
Flexible DSS Button .....	4-57
CO Line Ringing Selection .....	4-58
Date and Time Setting .....	4-59
Station Number Check .....	4-60
F3-One Touch Button Mode Selection .....	4-60
Call Waiting Tone Selection .....	4-61
Station Program Clear .....	4-61


### **Operation for a Standard Telephone**

Making Calls .....	5-1
When a Line is Busy .....	5-2
Receiving Calls .....	5-3
While Having a Conversation .....	5-4
Paging .....	5-7
Use of Other Features .....	5-8
Troubleshooting .....	6-1
Table of System Features .....	6-5
List of Tones .....	6-6
List of Ring Tones .....	6-6
Specification .....	6-7
Telephone Company and FCC Requirements and Responsibilities .....	6-8
Others .....	6-9
Warranty .....	6-10
Servicenter List .....	6-11
Phone Number Directory .....	7-1
Programming Table .....	7-3
Index .....	7-26

# INSTALLATION (Quick Reference)

## Frame Ground Connection

(See page 2-2)

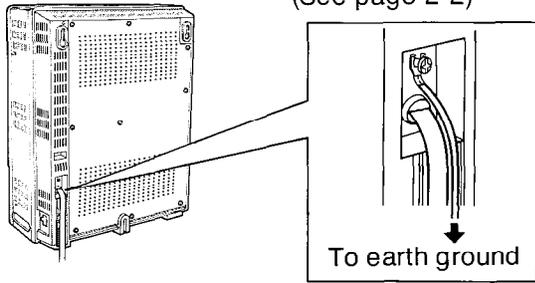


For earth ground, see page 2-2.

## Wall Mounting

(See page 2-3)


1. Place the templet (included) on the wall to mark the 3 screw positions.
2. Install the 3 screws into the wall.
3. Hook the unit on the screw heads.

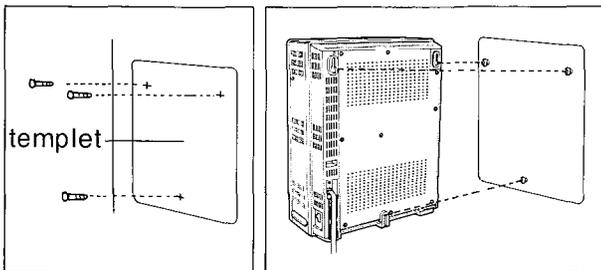

## How to remove the front cover from unit


(See page 2-4)

1. Unscrew the front cover of the unit. There are four screws.
2. Open the front cover in the direction of the arrow (A).

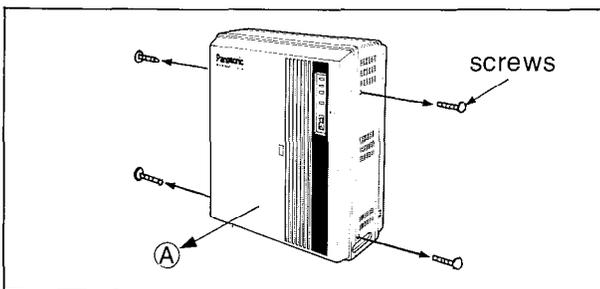


## Rechargeable Battery Installation

(See page 2-4)

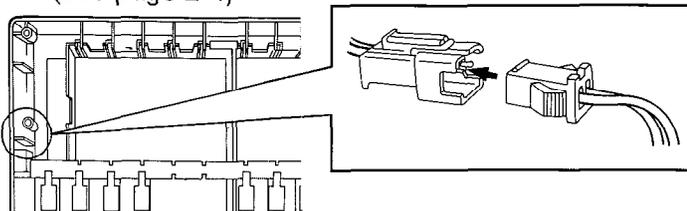

## Central Office Line Connection (CO1 through 6)


(See page 2-7)

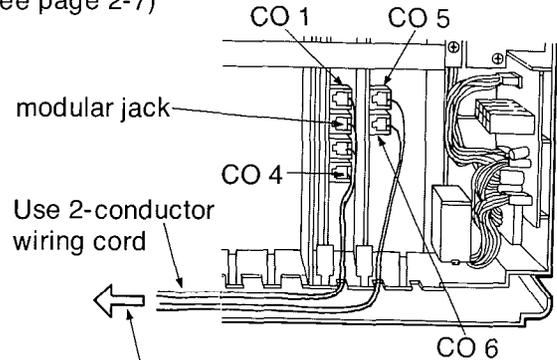


- To Terminal Board or Modular Jacks from the Central Office (CO).

## Extension Connection (Jack number 1 through 16)

(See page 2-8)

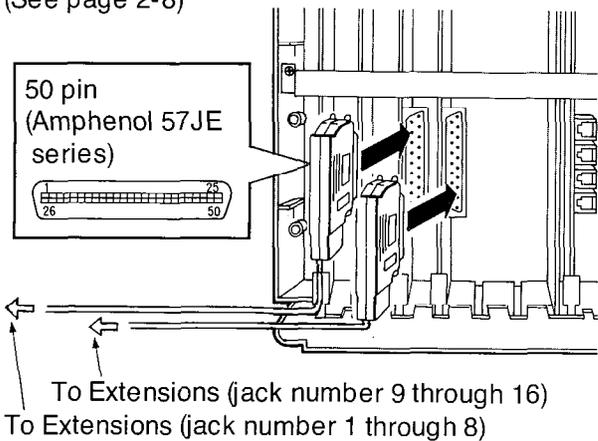

- To Extensions (jack number 9 through 16)
- To Extensions (jack number 1 through 8)

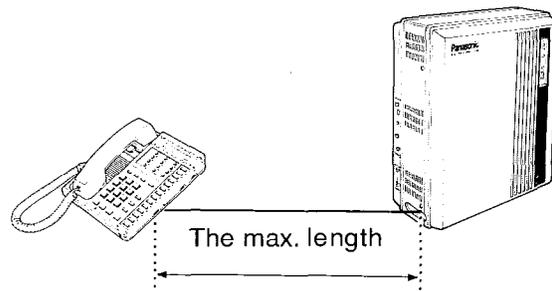

### Proprietary Telephone

- 26 AWG: Under 460 feet
- 24 AWG: Under 750 feet
- 22 AWG: Under 1180 feet

Twisted cable

### Standard Telephone

- 26 AWG: Under 2290 feet
- 24 AWG: Under 3700 feet
- 22 AWG: Under 5900 feet

Twisted cable

### Cable Pin Numbers to be connected

- Connection of the Proprietary Telephone (4-conductor wiring is required for each extension.)



CONN. PIN	CABLE COLOR	CLIP NO.	LC-1		LC-2		
26	WHT-BLU	1	JACK NO.1	T	JACK NO.9	T	
1	BLU-WHT	2		R		D1	R
27	WHT-ORN	3		D2		D2	D1
2	ORN-WHT	4					D2
28	WHT-GRN	5					
3	GRN-WHT	6					
29	WHT-BRN	7	JACK NO.2	T	JACK NO.10	T	
4	BRN-WHT	8		R		D1	R
30	WHT-SLT	9		D2		D2	D1
5	SLT-WHT	10					D2
31	RED-BLU	11					
6	BLU-RED	12					
32	RED-ORN	13	JACK NO.3	T	JACK NO.11	T	
7	ORN-RED	14		R		D1	R
33	RED-GRN	15		D2		D2	D1
8	GRN-RED	16					D2
34	RED-BRN	17					
9	BRN-RED	18					
35	RED-SLT	19	JACK NO.4	T	JACK NO.12	T	
10	SLT-RED	20		R		D1	R
36	BLK-BLU	21		D2		D2	D1
11	BLU-BLK	22					D2
37	BLK-ORN	23					
12	ORN-BLK	24					
38	BLK-GRN	25	JACK NO.5	T	JACK NO.13	T	
13	GRN-BLK	26		R		D1	R
39	BLK-BRN	27		D2		D2	D1
14	BRN-BLK	28					D2
40	BLK-SLT	29					
15	SLT-BLK	30					
41	YEL-BLU	31	JACK NO.6	T	JACK NO.14	T	
16	BLU-YEL	32		R		D1	R
42	YEL-ORN	33		D2		D2	D1
17	ORN-YEL	34					D2
43	YEL-GRN	35					
18	GRN-YEL	36					
44	YEL-BRN	37	JACK NO.7	T	JACK NO.15	T	
19	BRN-YEL	38		R		D1	R
45	YEL-SLT	39		D2		D2	D1
20	SLT-YEL	40					D2
46	VIO-BLU	41					
21	BLU-VIO	42					
47	VIO-ORN	43	JACK NO.8	T	JACK NO.16	T	
22	ORN-VIO	44		R		D1	R
48	VIO-GRN	45		D2		D2	D1
23	GRN-VIO	46					D2
49	VIO-BRN	47					
24	BRN-VIO	48					
50	VIO-SLT	49					
25	SLT-VIO	50					

T : Tip      D1 : Data 1  
R : Ring     D2 : Data 2

- Connection of a Standard Telephone (2-conductor wiring is required for each extension.)  
Connect the pin number of "T" and "R" only.


### Optional Cards Installation

1. To protect the printed circuit board from static electricity, first discharge any body static by touching the metal board.
2. Loosen the screws to remove the metal board.
3. The location of the optional cards for the KX-T123210 is shown in the following.

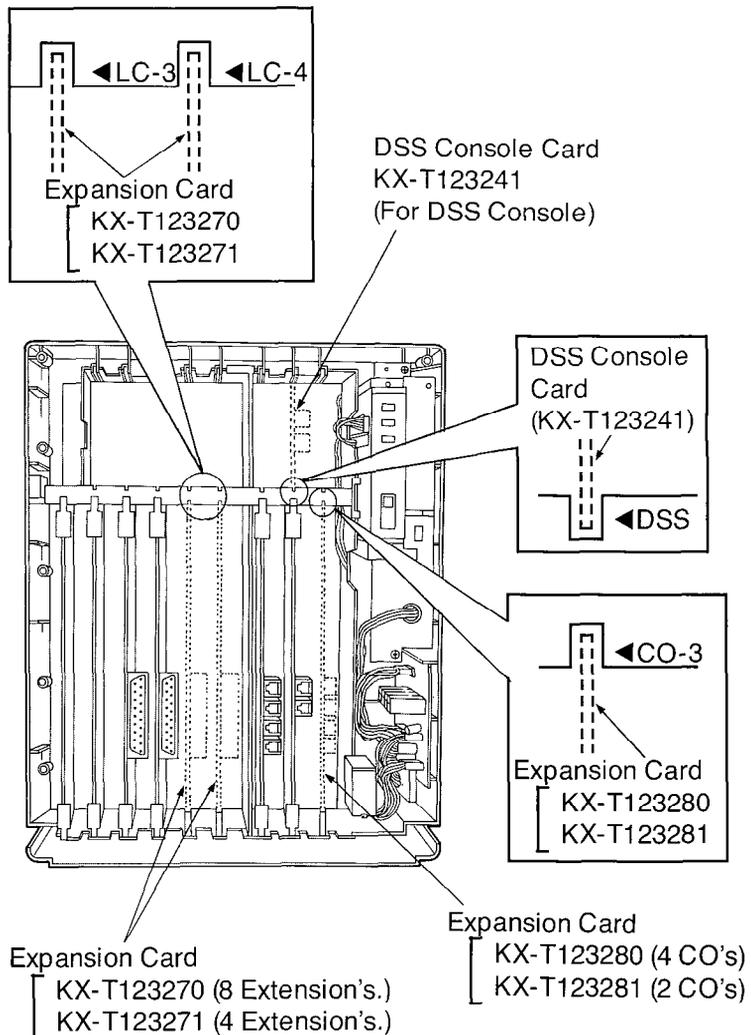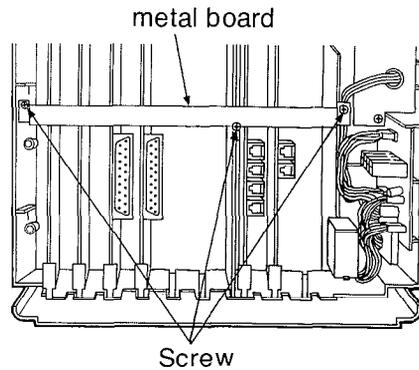


**Extension Connection**  
(Jack number 17 through 32) option

(See page 2-10)

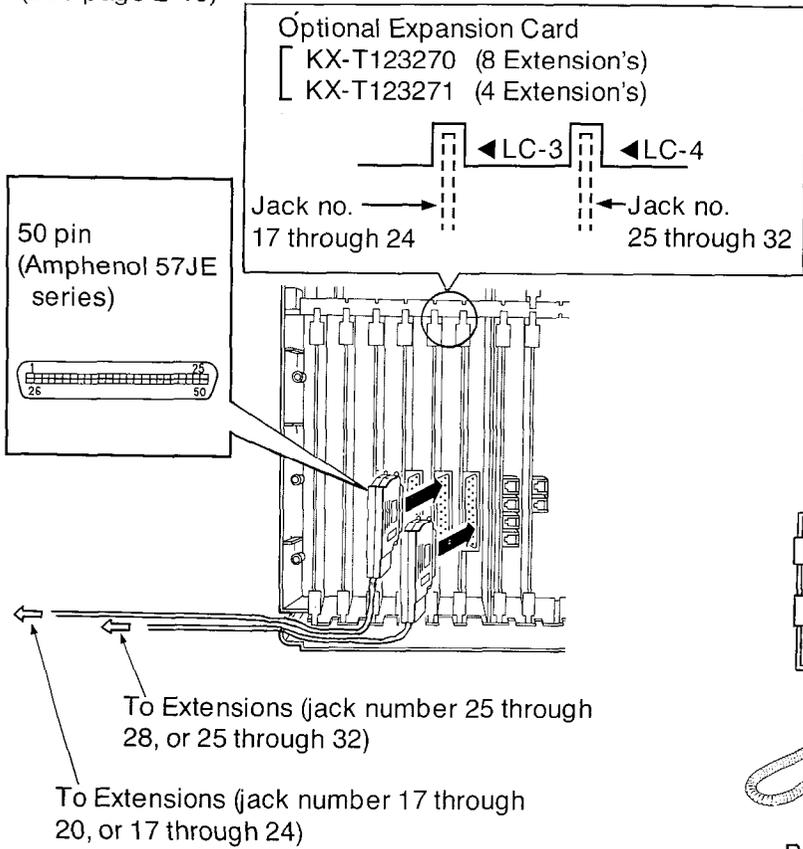


**Optional DSS Console Connection**  
(KX-T123240 / KX-T61640)

(See page 2-14)

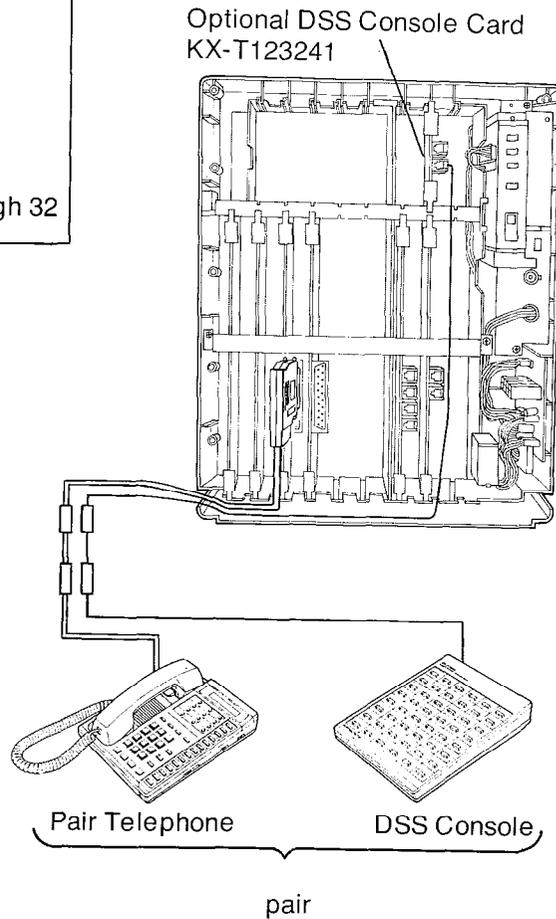

**Central Office Line Connection**  
(CO9 through 12) option


(See page 2-12)

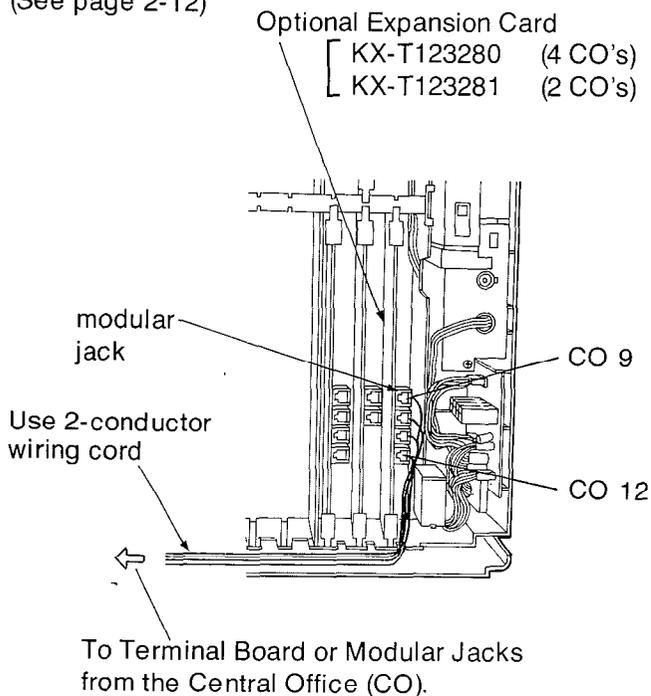

- The DSS Console (KX-T123240 or KX-T61640) needs a paired Telephone (EMSS Proprietary Telephone) for proper operation, because the DSS console cannot work by itself.
- When using the DSS Console, program must be done. See page 3-10.


**Battery Connection**

(See page 2-17)

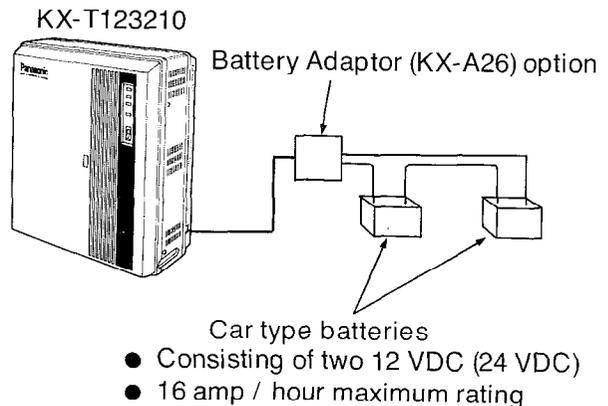


## Optional Doorphone Connection

(See page 2-15.)

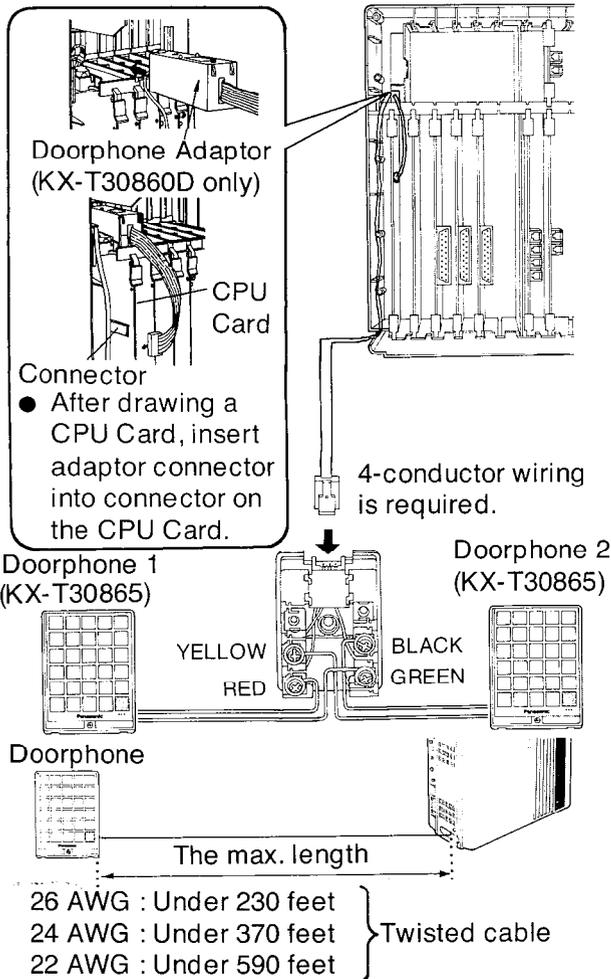


## Paging Equipment

(See page 2-20.)

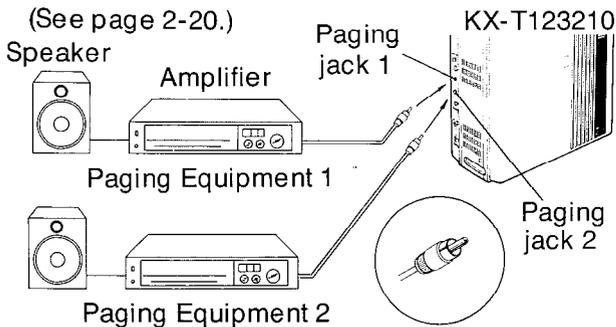


## External Music Source

(See page 2-20.)

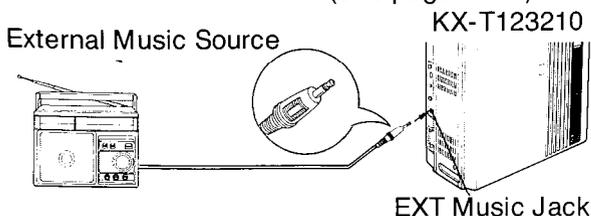

## Printer Connection

(See page 2-18.)

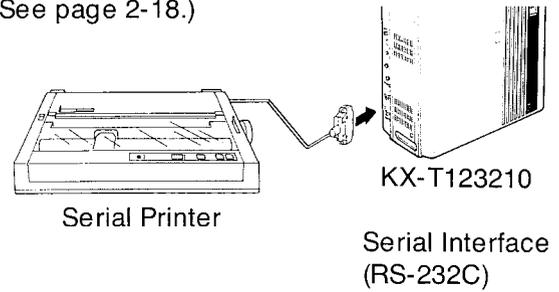

- Cables must be shielded and the maximum length is 6.5 feet.

### Connection Chart: KX-T123210 RS-232C

KX-T123210 RS-232C			Printer RS-232C		
Circuit Type (EIA)	Signal Name	Pin No.	Pin No.	Signal Name	Circuit Type (EIA)
AA	FG	1	1	FG	AA
BA	TXD	2	3	RXD	BB
BB	RXD	3	2	TXD	BA
CB	CTS	5	5	CTS	CB
CC	DSR	4,6	6	DSR	CC
AB	SG	7	7	SG	AB
CD	DTR	20	20	DTR	CD
			8	DCD	CF

### Communication parameters

If the Panasonic printer which is used has a (KX-P11D or KX-P17) board and is connected to the KX-T123210, set the communication parameters the following.

	KX-T123210	KX-P11D		KX-P17	
		DIP Switch	Setting	DIP Switch	Setting
Word length	7bit (default)	SW1-1	ON	SW1-4	ON
Parity	Program to "EVEN" (see page 3-32.)	SW1-2	ON	SW1-5	OFF
		SW1-3	ON	SW1-6	OFF
Baud Rate	1200B (default)	SW1-5	ON	SW1-1	OFF
		SW1-6	OFF	SW1-2	OFF
		SW1-7	OFF	SW1-3	ON
		SW1-8	OFF		
Protocol	XON / XOFF mode only	SW2-8	OFF	SW1-8	ON

# PROGRAMMING (Quick Reference)

## System Feature

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM	DEFAULT	PAGE	
				FOR DETAILS	PROGRAM TABLE
Date and Time Setting	00	<p>NEXT AB → SELECT → CD → SELECT → EF</p> <p>.....year .....month .....day ..... day of the week</p> <p>→ GH → SELECT MEMORY END</p> <p>.....minute .....AM / PM</p>	/	3-4	/
System Speed Dialing Entry	01 or AUTO	<p>SELECT</p> <p>NEXT AB CD phone number MEMORY END</p> <p>9 : automatic line access number</p> <p>8 1 through 8 8 : access number of Trunk Group</p> <p>..... Speed access code (00 through 99)</p>	Nothing is stored	3-5	7-1
Extension Number Assignment	02	<p>NEXT NEXT CDE MEMORY END</p> <p>.....dial the extension number (100 through 199)</p> <p>.....until the desired jack number appears</p>	101 : jack number 01 102 : jack number 02 ..... 131 : jack number 31 132 : jack number 32	3-8	7-3
Operator Assignment	03	<p>NEXT NEXT AB MEMORY END</p> <p>..... dial the jack number which is set operator</p> <p>..... until the desired operator number appears</p>	Nothing is stored	3-9	7-3
Paired Telephone Assignment for DSS Console	04	<p>NEXT NEXT AB MEMORY NEXT CD MEMORY END</p> <p>..... jack number paired with console 2</p> <p>..... jack number paired with console 1</p>	jack number 01 : console 1 jack number 02 : console 2	3-10	7-3
Automatic CO Hold Using DSS Button	05	<p>NEXT SELECT MEMORY END</p> <p>.....With Transfer / Without Transfer</p>	With Transfer	3-11	7-3
Day/Night Service Mode	06	<p>NEXT SELECT MEMORY END</p> <p>.....Manual / Automatic</p>	Manual	3-12	7-4
Switching of Service Mode	07	<p>NEXT AB → CD → SELECT MEMORY NEXT</p> <p>.....minute ..... AM / PM</p> <p>..... starting time for day service (hour)</p>	Day Service : 9:00AM Night Service : 5:00PM	3-13	7-4
Starting Time		<p>→ EF → GH → SELECT MEMORY END</p> <p>.....minute ..... AM / PM</p> <p>..... starting time for night service (hour)</p>			
Call Hunting Setting	08	<p>NEXT NEXT SELECT MEMORY END</p> <p>..... Disable / Enable</p> <p>..... until the desired extension group number appears</p>	Disable : all 8 extension groups	3-15	7-4
Hunting Type	09	<p>NEXT NEXT SELECT MEMORY END</p> <p>..... Terminate / Circular</p> <p>..... until the desired extension group number appears</p>	Terminate : all 8 extension groups	3-16	7-4

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM	DEFAULT	PAGE	
				FOR DETAILS	PROGRAM TABLE
Toll Restriction Area Type Selection	<b>10</b>	<b>NEXT SELECT MEMORY END</b> ..... Type A / Type B / Type C	Type A	3-18	7-4
CO Operator Call-Boundary Class	<b>11</b>	<b>NEXT A MEMORY END</b> .....dial the boundary class number (1 through 8)	Class 1	3-19	7-4
Toll Restriction of Speed Dialing	<b>12</b>	<b>NEXT SELECT MEMORY END</b> ..... Restriction / No restriction	Restriction	3-20	7-5
Exchange Code Selection	<b>13</b>	<b>NEXT NEXT CDE MEMORY END</b> .....exchange code with 3 digits ..... until the desired memory code number appears	Nothing is stored	3-21	7-5
Area Code Entry for class 3	<b>14</b>	<b>NEXT NEXT CDE MEMORY END</b> ..... area code with 3 digits ..... until the desired memory code number appears	Nothing is stored	3-22	7-5
Exchange Code Entry for Class 5	<b>15</b>	<b>NEXT NEXT CDE MEMORY END</b> ..... exchange code with 3 digits ..... until the desired memory code number appears	Nothing is stored	3-23	7-5
Exchange Code Entry for Class 7	<b>16</b>	<b>NEXT NEXT CDE MEMORY END</b> ..... exchange code with 3 digits ..... until the desired memory code number appears	Nothing is stored	3-24	7-6

TO SET	PROGRAM ADDRESS	PROGRAMMING	PROGRAM TABLE
Hold Time Reminder	<b>17</b>	Refer to page 3-25	7-6
Hold Recall Time Set	<b>18</b>	Refer to page 3-26	7-6
Transfer Recall Time	<b>19</b>	Refer to page 3-27	7-6
Call Forwarding Starting Time	<b>20</b>	Refer to page 3-28	7-6
Pickup Dial Delay Time	<b>21</b>	Refer to page 3-29	7-6
CO-to-CO Duration Time Limit	<b>22</b>	Refer to page 3-30	7-7
External Paging Access Tone	<b>29</b>	Refer to page 3-41	7-9

TO SET	PROGRAM ADDRESS	PROGRAMMING	PROGRAM TABLE
SMDR RS-232C Communication Parameters	<b>23</b>	Refer to page 3-32	7-7
SMDR Parameters	<b>24</b>	Refer to page 3-35	7-8
Incoming/Outgoing call Selection for printing	<b>25</b>	Refer to page 3-36	7-8
Secret Speed dial/One Touch Dial Printing	<b>26</b>	Refer to page 3-36	7-8
System Data Dump	<b>27</b>	Refer to page 3-37	7-8
Duration Time Count Start Mode	<b>28</b>	Refer to page 3-40	7-9

# Outside Line Feature

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM	DEFAULT	PAGE	
				FOR DETAILS	PROGRAM TABLE
CO Connection Assignment	40	<p>..... Connect / Not Connect .....until the desired CO number appears</p>	Connect : all CO's	3-42	7-9
Dial Mode (DTMF/Pulse) DTMF / Pulse Selection	41	<p>.....DTMF Mode / Pulse Mode .....until the desired CO number appears</p>	DTMF : all CO's	3-43	7-9
Pulse Speed Selection	42	<p>..... Low Speed / High Speed .....until the desired CO number appears</p>	Low speed : all CO's	3-44	7-9
Trunk Group Assignment	44	<p>..... dial the trunk group number (1 through 8) .....until the desired CO number appears</p>	Trunk-G1 : CO 1 Trunk-G2 : CO 2 Trunk-G3 : CO 3 Trunk-G4 : CO 4 Trunk-G5 : CO 5 Trunk-G6 : CO 6 Trunk-G7 : CO 7 Trunk-G8 : CO 8, CO 9, CO 10, CO 11 CO 12	3-46	7-10
Flexible Outward Dialing Assignment Day Mode	45	<p>other CO number other jack number ..... Enable / Disable .....until the desired jack number appears .....until the desired CO number appears</p>	Enable : all jack numbers	3-47	7-11
Night Mode	46	<p>other CO number other jack number ..... Enable / Disable .....until the desired jack number appears .....until the desired CO number appears</p>	Enable : all jack numbers	3-48	7-12
Flexible Ringing Assignment Day Mode	47	<p>other CO number other jack number ..... Enable / Disable .....until the desired jack number appears .....until the desired CO number appears</p>	Enable : all jack numbers	3-49	7-13
Night Mode	48	<p>other CO number other jack number ..... Enable / Disable .....until the desired jack number appears .....until the desired CO number appears</p>	Enable : all jack numbers	3-51	7-14

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM	DEFAULT	PAGE	
				FOR DETAILS	PROGRAM TABLE
CO Direct In Line Assignment Day Mode	51	<ul style="list-style-type: none"> <li>• Selecting "Normal" mode  <pre> NEXT NEXT SELECT MEMORY END                        ----- Normal                        ----- until the desired CO number appears </pre> </li> <li>• Selecting "DIL" mode  <pre> NEXT NEXT SELECT CD MEMORY END                        ----- DIL                        ----- Dial jack number                        ----- until the desired CO number appears </pre> </li> </ul>	Normal : all CO's	3-54	7-19
Night Mode	52	<ul style="list-style-type: none"> <li>• Selecting "Normal" mode  <pre> NEXT NEXT SELECT MEMORY END                        ----- Normal                        ----- until the desired CO number appears </pre> </li> <li>• Selecting "DIL" mode  <pre> NEXT NEXT SELECT CD MEMORY END                        ----- DIL                        ----- Dial jack number                        ----- until the desired CO number appears </pre> </li> </ul>	Normal : all CO's	3-57	7-19

TO SET	PROGRAM ADDRESS	PROGRAMMING	PROGRAM TABLE	TO SET	PROGRAM ADDRESS	PROGRAMMING	PROGRAM TABLE
Host PBX Access Codes Assignment	43	Refer to page 3-45	7-10	Pause Time Assignment	53	Refer to page 3-59	7-20
Delayed Ringing Assignment Day Mode	49	Refer to page 3-52	7-15 7-16	Hookswitch Flash Timing	54	Refer to page 3-60	7-20
Night Mode	50	Refer to page 3-53	7-17 7-18	Calling Party Control (CPC) Signal	55	Refer to page 3-61	7-20
				Disconnect Time	56	Refer to page 3-62	7-20

### Extension Feature

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM	DEFAULT	PAGE	
				FOR DETAILS	PROGRAM TABLE
Extension Group Assignment	60	<pre> NEXT NEXT A MEMORY END                        ----- dial the extension group number (1 through 8)                        ----- until the desired jack number appears </pre>	EXT GRP-1 : all jack numbers	3-63	7-21
Call Transfer To Outside Line	65	<pre> NEXT NEXT SELECT MEMORY END                        ----- Enable / Disable                        ----- until the desired jack number appears </pre>	Disable : all jack numbers	3-71	7-23

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM	DEFAULT	PAGE	
				FOR DETAILS	PROGRAM TABLE
Service Class Assignment of Toll Restriction Day Mode	61	<p>..... dial the service class number (1 through 8) .....until the desired jack number appears</p>	Class 1 : all jack numbers	3-64	7-21
Night Mode	62	<p>..... dial the service class number (1 through 8) .....until the desired jack number appears</p>	Class 1 : all jack numbers	3-66	7-22
Call Forwarding To Outside Line	66	<p>..... Enable / Disable .....until the desired jack number appears</p>	Disable : all jack numbers	3-72	7-23
Executive Override	67	<p>..... Enable / Disable .....until the desired jack number appears</p>	Disable : all jack numbers	3-73	7-23
Do not Disturb Override	68	<p>..... Enable / Disable .....until the desired jack number appears</p>	Disable : all jack numbers	3-74	7-24

TO SET	PROGRAM ADDRESS	PROGRAMMING	PROGRAM TABLE	TO SET	PROGRAM ADDRESS	PROGRAMMING	PROGRAM TABLE
Extension Name	63	Refer to page 3-68	7-1	Ringing Assignment from Doorphone Day Mode Night Mode	70	Refer to page 3-75	7-24
Account Code Input Mode	64	Refer to page 3-70	7-22		71	Refer to page 3-76	7-25








TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM	DEFAULT	PAGE	
				FOR DETAILS	PROGRAM TABLE
System Data Clear	99	<ul style="list-style-type: none"> <li>• All Parameters</li> <li>• System Parameter</li> <li>• Speed Call</li> </ul> <p>..... All Para / System Para / CO Para / EXT Para / DSS Para / Speed Call</p> <ul style="list-style-type: none"> <li>• CO Parameter</li> </ul> <p>..... dial CO number .....until the CO Para appears</p> <ul style="list-style-type: none"> <li>• EXT Parameter</li> </ul> <p>..... dial jack number .....until the EXT Para appears</p> <ul style="list-style-type: none"> <li>• DSS Parameter</li> </ul> <p>..... dial DSS number (1 or 2) .....until the DSS Para appears</p>	All Parameters	3-78	

# OPERATION FOR EMSS PROPRIETARY TELEPHONE

## (Quick Reference)



<b>MAKING CALLS</b>			
<ul style="list-style-type: none"> <li>● Lift the handset or press the SP-PHONE button first.</li> <li>● After finishing your conversation, hang up the handset or press the SP-PHONE button.</li> </ul>			For further details, see page below
<b>INTER OFFICE CALLING</b> (Intercom)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Dial extension no. (100 through 199)</div>		4 - 1
<b>OUTWARD DIALING</b> Individual Line Access	 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Dial phone number</div>	4 - 2	
Automatic Line Access	 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Dial phone number</div>	4 - 2	
Individual Trunk Group Access	 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Dial Trunk Group number (1 through 8)</div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 20px;">Dial phone number</div>	4 - 3	
<b>SPEED DIALING</b>	 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Dial speed access code (00 through 99)</div>	4 - 3	
<b>ONE TOUCH DIALING</b>	 (Press the PROGRAMMABLE FEATURE button.)		4 - 4
<b>WHEN A LINE IS BUSY</b>			
<b>AUTOMATIC CALL BACK BUSY</b> For Outside Calls	 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Hear a busy tone</div>	 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Hang up handset or press "SP-PHONE"</div>	4 - 7
For Intercom Calls	<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Dial extension no. (100 through 199)</div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Hear a busy tone</div>	 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Hang up handset or press "SP-PHONE"</div>	
<b>BUSY STATION SIGNALING</b>	<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Dial extension no. (100 through 199)</div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Hear a busy tone</div>		4 - 8
<b>LAST NUMBER REDIAL</b>	<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Lift handset or press "SP-PHONE"</div> 		4 - 8
<b>EXECUTIVE OVERRIDE (Barge-in)</b>	<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Dial extension no. (100 through 199)</div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Hear a busy tone</div>		4 - 9
<b>RECEIVING CALLS</b>			
<b>ANSWER</b>	<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Lift handset</div> <div style="margin: 0 10px;">or</div>  <div style="margin-left: 10px;">You may press the CO or ICM button.</div>		4 - 10
<b>DIAL CALL PICKUP</b>	<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Lift handset or press "SP-PHONE"</div>   <ul style="list-style-type: none"> <li>● You may dial the ringing extension number instead of 0.</li> </ul>		4 - 11

## WHILE HAVING A CONVERSATION
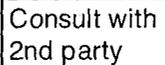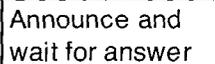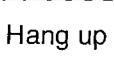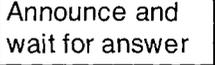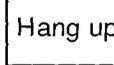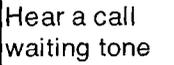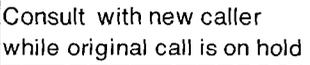
<b>CALL PARK</b>	To park a call   Dial parking station no.(20 through 29) 	4 - 12
	To retrieve a parked call at any extension  Dial parked station no.(20 through 29)	
<b>CALL ON HOLD</b>	To place call on hold 	4 - 14
	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;">                     To retrieve (Outside calls on hold)                     <ul style="list-style-type: none"> <li>● at the holding extension   [flashing slowly in green]</li> <li>● from another extension   [flashing slowly in red]</li> </ul> </div> <div style="width: 45%; border-left: 1px dashed black; padding-left: 10px;">                     (Intercom call on hold)                     <ul style="list-style-type: none"> <li>● at the holding extension  </li> <li>● from another extension   Dial holding extension no. (100 through 199)</li> </ul> </div> </div>	
<b>CONFERENCE</b>	 Dial 2nd party  	4 - 16
<b>CALL TRANSFER- TO EXTENSION</b> To Transfer after the Other Extension Answers	 Dial extension no. (100 through 199)  	4 - 18
<b>TO OUTSIDE LINE</b> To transfer after the Other Outside party Answers	  Dial phone no.  	4 - 19
<b>CALL WAITING</b> To place the Original Call on Hold and Talk to the New Caller	   or   <ul style="list-style-type: none"> <li>● To terminate the original call and talk to the new caller, you need not to press the HOLD button.</li> </ul>	4 - 20

## PAGING

Lift the handset or press the SP-PHONE button first.
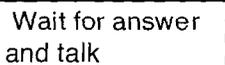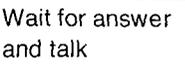
<b>PAGING ALL EXTENSIONS</b> To Access	   Hear 1 beep  	4 - 23
<b>PAGING GROUP</b> To Access	  Dial extension group (1 through 8)   	4 - 24
<b>ANSWER</b> To Paging through Built-in Speaker	  Hear 1 beep 	4 - 25














## OTHER FEATURES

- Lift the handset or press the SP-PHONE button first.
- After hearing confirmation tone (1 or 2 beeps), hang up the handset or press the SP-PHONE button.


<b>CALL FORWARDING</b> All Calls	Setting   Dial extension no. (100 through 199) 	4 - 26	
Busy or No Answer	Setting   Dial extension no. (100 through 199) 		
To Outside Line	Setting    Dial phone number 		
	To cancel   	4 - 26 4 - 28	
<b>DO NOT DISTURB</b>	Setting   	To cancel   	4 - 30
<b>ABSENT MESSAGE CAPABILITY</b>	Setting Message 1. "Will Return Soon"    	To cancel    	4 - 34
	Message 2. "Gone Home"    		
	Message 3. "At Ext <u>extension no.</u> "    Dial extension no. (100 through 199) 		
<b>MESSAGE WAITING</b> To Leave the Message at each Extension from the Operator	Dial extension no. (100 through 199)  	4 - 36	
To Call the Operator from the Extension where the Message is left.	 		
To Cancel the Message which is left in the extension.	From the extension   		
	From the operator Dial extension no. (100 through 199)  		
<b>FLEXIBLE NIGHT SERVICE</b> (Extension of jack no 01 only)	Setting    	To cancel    	4 - 37
<b>SAVED NUMBER REDIAL</b>	Programming  	Dialing 	4 - 31
<b>STATION FEATURE CLEAR</b>	  	● Following features can be canceled. Dial Call Pickup Deny, Do Not Disturb, Call Forwarding, Call Waiting Tone Deny, Data Line Security, Absent message capability, Background Music, Executive Override Deny. Message Waiting.	4 - 45

## STATION PROGRAMMING

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM” first.
- After programming, return the MEMORY switch to “SET”.
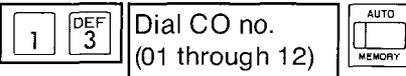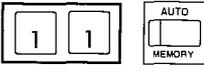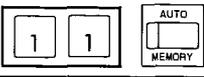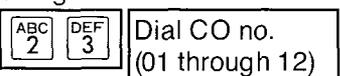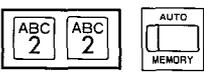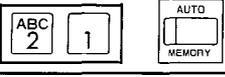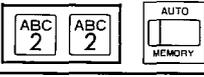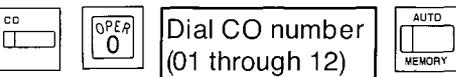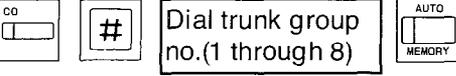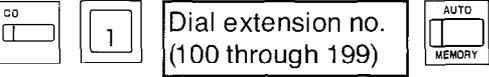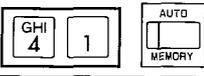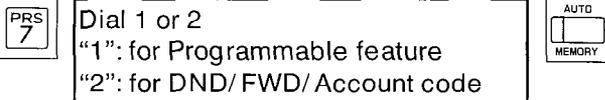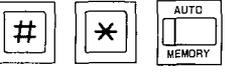
<b>AUTO CO HUNTING</b> Prime Line Preference- Outgoing	Setting 	To cancel 	4 - 49
Idle Line Preference- Outgoing	Setting 	To cancel 	4 - 50
<b>AUTOMATIC ANSWERING SELECTION</b> Prime Line Preference- Incoming	Setting 	To cancel 	4 - 51
No Line Preference- Incoming	Setting 	To cancel 	4 - 52
<b>FLEXIBLE CO BUTTON</b> To change into other CO numbers	Setting 		4 - 53
To assign into trunk group access number	Setting 		4 - 53
To change into DSS button	Setting 		4 - 54
To change into other all CO numbers	Setting 		4 - 55
To change into message waiting button	Setting 		4 - 55
<b>INTERCOM VOICE ALERTING MODE</b>	Setting 	To cancel 	4 - 56
<b>STATION NUMBER CHECK</b>			4 - 60
<b>F 3-ONE TOUCH BUTTON MODE SELECTION</b> (for KX-T30850, KX-T61650, KX-T123250)	Setting 		4 - 60
<b>STATION PROGRAM CLEAR</b>	 <ul style="list-style-type: none"> <li>● Following programs can be reset to the default data. Auto CO Hunting, Automatic Answering Selection, Intercom Voice Alerting Mode, CO Line Ringing Selection, Call Waiting Tone Selection, F3-One Touch Button Mode Selection.</li> </ul>		4 - 61

# NAME AND LOCATION

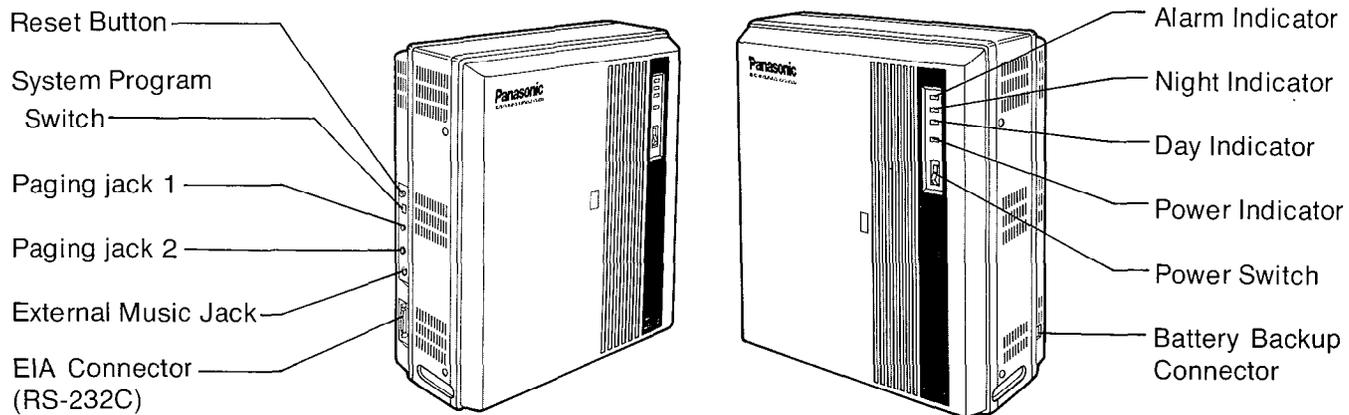

CONNECTION

## INSTALLATION

### Installation

#### Cautions

- Avoid installing in the following places. (Doing so may result in malfunction, noise, or discoloration.)
  1. In direct sunlight and hot, cold, or humid places. (Temperature range: 32°F-104°F)
  2. Sulfuric gases produced in areas where there are thermal springs, etc. may damage the equipment or contacts.
  3. Places in which shocks or vibrations are frequent or strong.
  4. Dusty places, or places where water or oil may come into contact with the unit.
  5. Near high-frequency generating devices such as sewing machines or electric welders.
  6. On or near computers, telexes, or other office equipment, as well as microwave ovens or air conditioners. (It is preferable not to be installed in the same room with the above equipment.)
  7. Install at least 6 feet from televisions. (both the electronic modular switching system and EMSS proprietary telephones)
  8. Do not obstruct area around the electronic modular switching system. (for reasons of maintenance and inspection-be especially careful to allow space for cooling above and at the sides of the electronic modular switching system)

### Wiring


#### Cautions

1. Do not wire the telephone cable in parallel with an AC power source, computer, telex, etc. If the cables are run near those wires, shield the cables with metal tubing or use shielded cables and ground the shields.
2. If cables are run on the floor, use protectors or the like to protect the wires where they may be stepped on. Avoid wiring under carpets.
3. Avoid using the same 120 VAC power supply outlet for computers, telexes, and other office equipment. Otherwise, the KX-T123210's system operation may be interrupted by the induction noise from such equipments.

## Frame Ground Connection

### IMPORTANT!!!

Surely connect the frame of the KX-T123210 to earth ground properly to protect the unit.

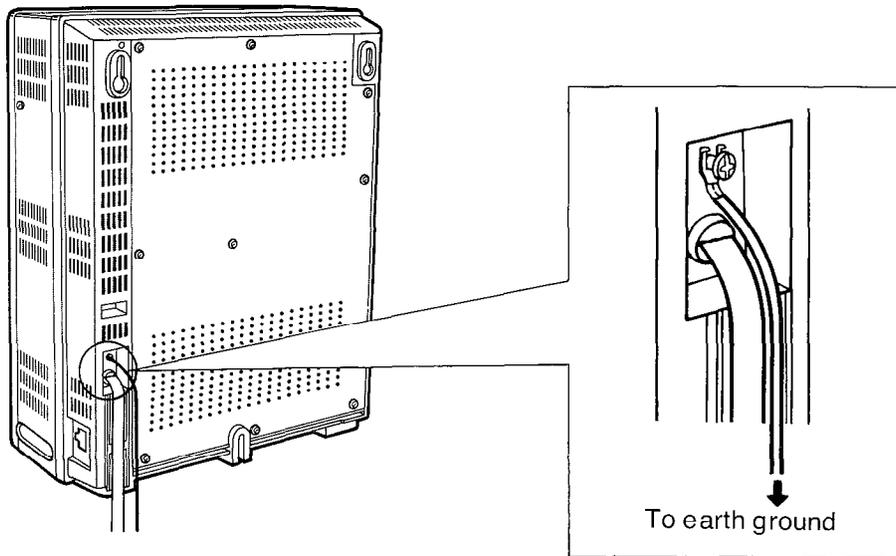

In most continental United States, the ground provided by the "third wire ground" at the commercial power outlet will be satisfactory however, in a small percentage this ground may be installed incorrectly. Therefore, the following test procedure should be performed.

### Test Procedure

1. Obtain a suitable voltmeter and set it for a possible reading of up to 250 VAC.
2. Connect the meter probes between the two main AC voltage points on the wall outlet. The reading obtained should be 108-132 VAC.
3. Move one of the meter probes to the 3rd prong terminal (GND). Either the same reading or a reading of 0 volt should be obtained.
4. If a reading of 0 volt at one terminal and a reading of 108-132 VAC at the other terminal is not obtained, the outlet is not properly grounded. This condition should be corrected by a qualified electrician (per article 250 of the National Electrical Code).
5. If a reading of 0 volt at one terminal and a reading of 108-132 VAC at the other terminal is obtained, then set the meter to the "OHMS/RX1" scale, place one probe at the GND Terminal and the other probe at the terminal which gave a reading of 0 volt.

A reading of less than 1 ohm should be obtained.


If the reading is not obtained the outlet is not adequately grounded, see qualified electrician.

## Wall Mounting


The wall where the KX-T123210 is to be mounted must be able to support the weight of the KX-T123210. If screws other than the ones supplied are used, use the same-sized diameter screws as the enclosed ones.

### To Wall Mount:


1. Place the templet (included) on the wall to mark the 3 screw positions.

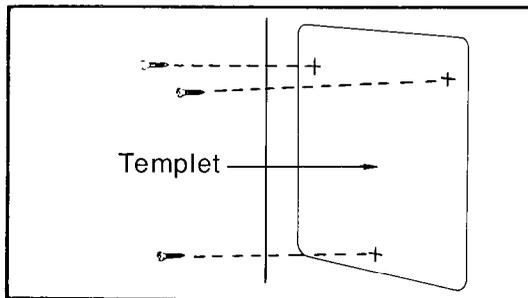

2. Install the 3 screws into the wall.

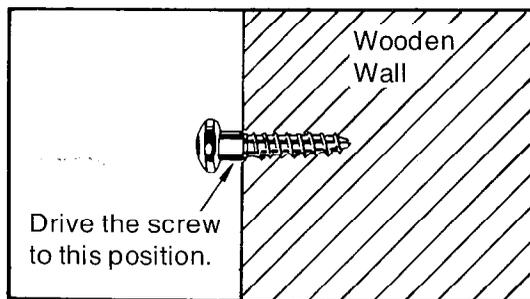


3. Hook the unit on the screw heads.

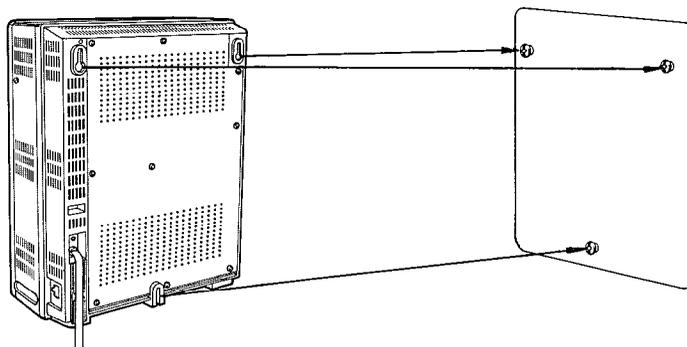


### To Mount on Concrete or Mortar Walls:

1. Place the templet (included) on the wall to mark the 3 screw positions.
2. Drill 3 holes and drive the anchor plugs (included) with a hammer, flush to the wall.

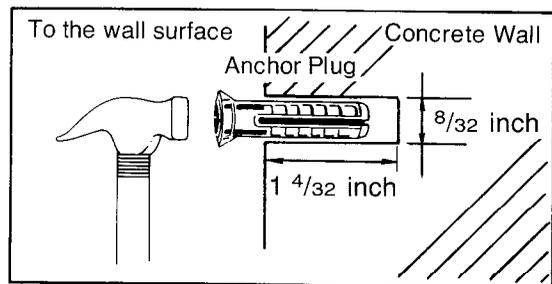


3. Install the 3 screws into the anchor plugs.

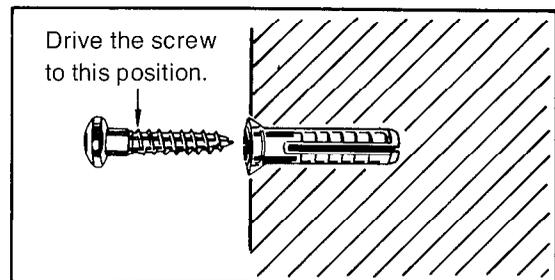

4. Hook the unit on the screw heads.

## To remove the front cover from unit


1. Unscrew the front cover of the unit.  
There are four screws.
2. Open the front cover in the direction of arrow A

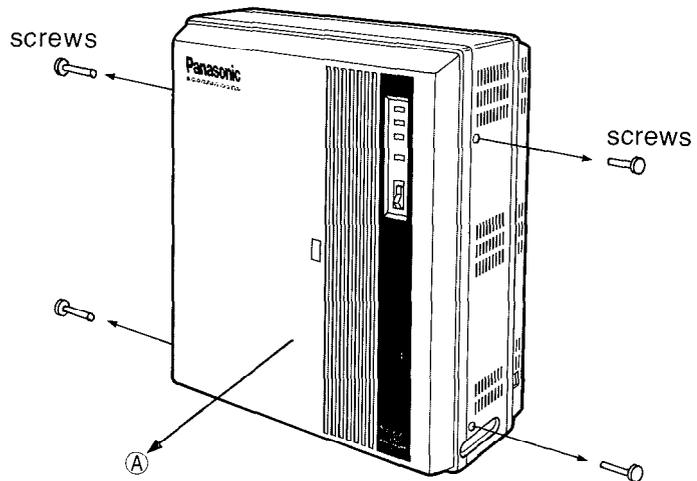


## Rechargeable Battery Installation

When a power failure take place, there is no memory loss except for the camp-on, saved number redial, the last number redial, Call park and Message waiting during power failure, memory is protected by 21 day rechargeable battery.



1. Connect the battery (included) as shown (Fig.1)

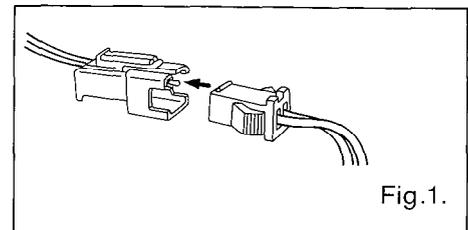

2. Install the battery into the battery compartment. (Fig.2)

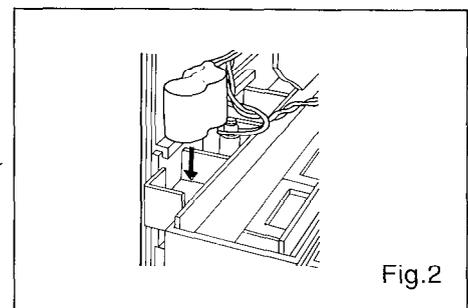

- Replace the battery every 5 years with (P-01H-F2G1). To remove connector, depress the lock to release and slide (pull) apart connector. (Fig3)

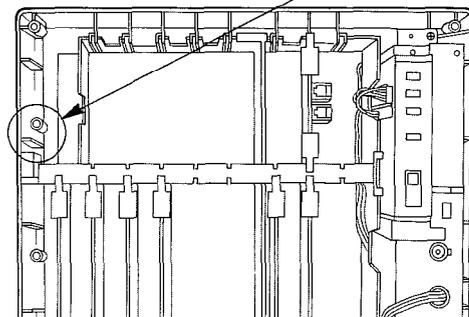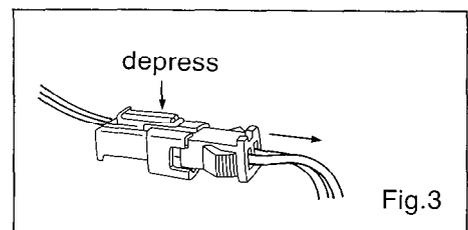


# CONNECTION



- The Power Switch of the KX-T123210 must be off during wiring. After all the wiring are completed, turn the Power Switch ON.
- Mis-Wiring may cause the KX-T123210 to operate improperly. Refer "During Installation" page 6-1 and "During Connection" page 6-2.
- 50 pin configuration and Color coding (Refer page 2-11.)
- Max. length and kind of wire (Refer pages 2-8, 2-14 and 2-16)
- Insertion of Option Card (Refer page 2-9)
- Connection of printer (Refer page 2-18)
- If an extension does not operate properly (for example : The LCD of the KX-T123230 / KX-T61631 / KX-T61630 / KX-T30830 does not display properly.), disconnect the telephone from the extension line and then connect again, or turn OFF the power switch of the KX-T123210 and then ON again.

- This product is equipped with a 3-wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
- In areas of frequent electrical storms and/or power failures, we recommend for additional equipment protection, surge protectors such as TELESPIKE BLOK MODEL TSB (TRIPPE MFG. CO.), SPIKE BLOK MODEL SK6-0 (TRIPPE MFG. CO.), Super MAX™ (PANAMAX) or MP1 (ITW LINX).


## Paging Speaker 1

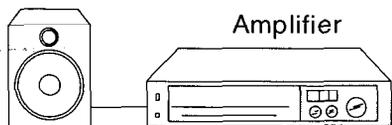

## Paging Speaker 2

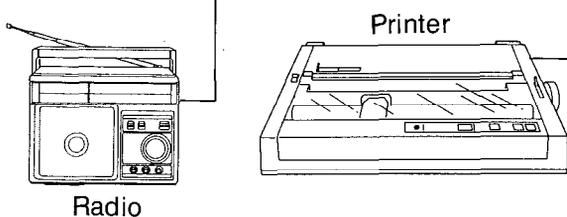
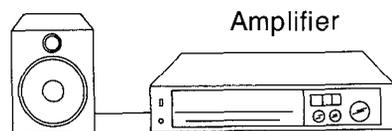


- Avoid using the same AC outlet for office equipment and KX-T123210. Use dedicated AC outlet only.

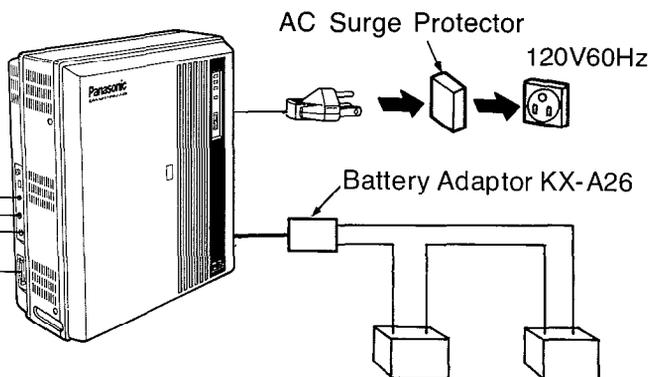

## Car type batteries


- Consisting of two 12VDC (24VDC)

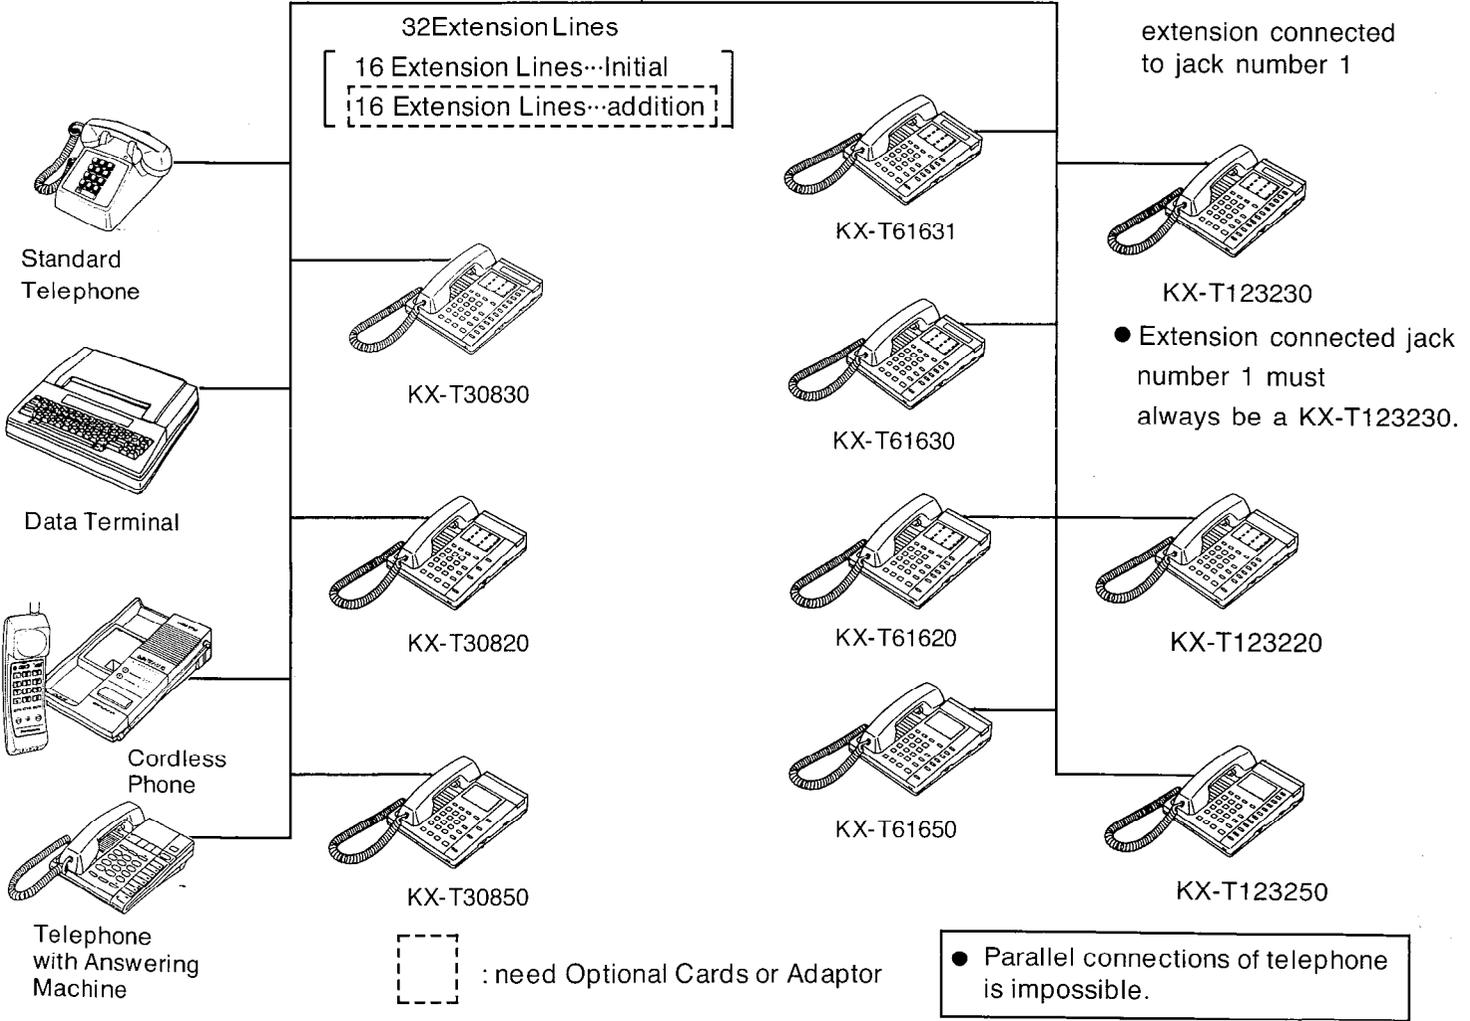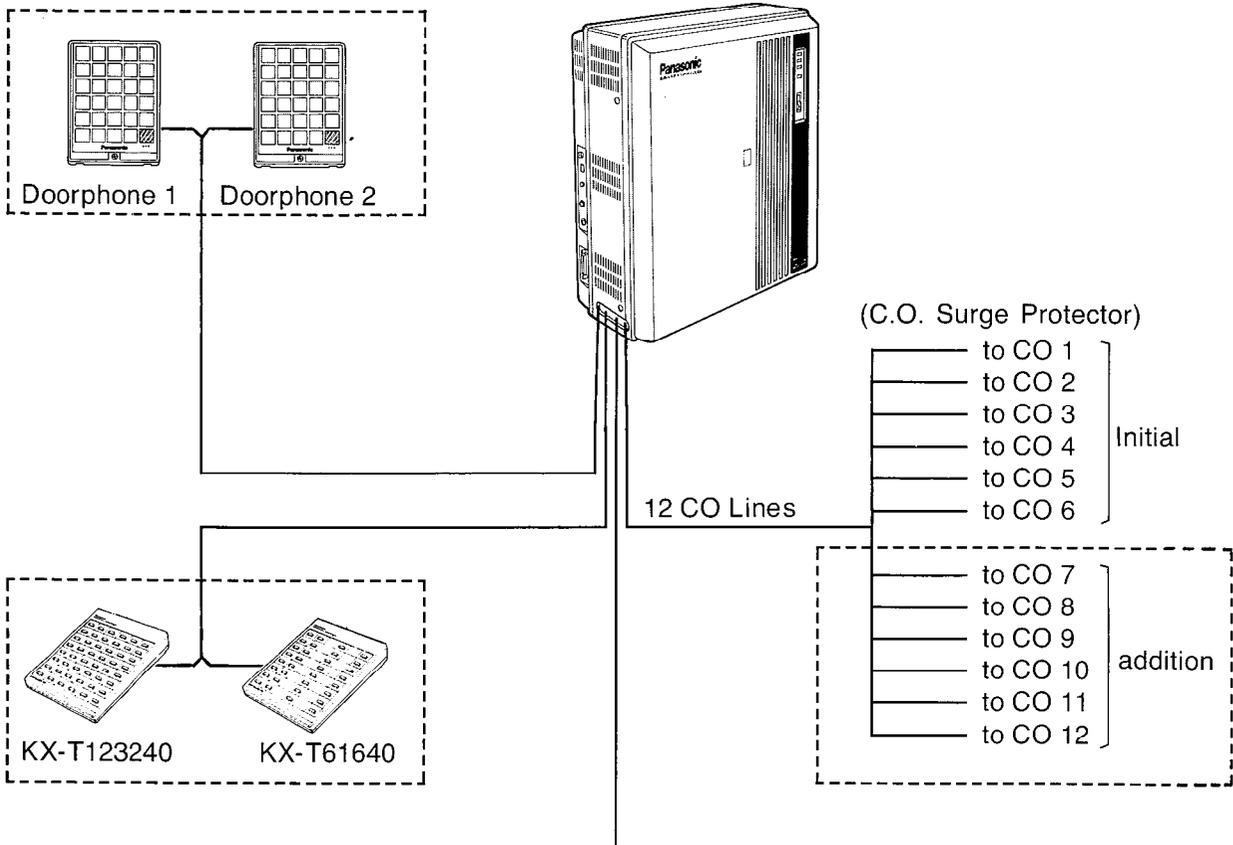

## Central Office Line Connection (CO1 through 6)

- We recommend that telephone CO jack is used RJ11.

Insert the modular plug of the telephone line cord (2-conductor wiring) into the modular jack on the KX-T123210.

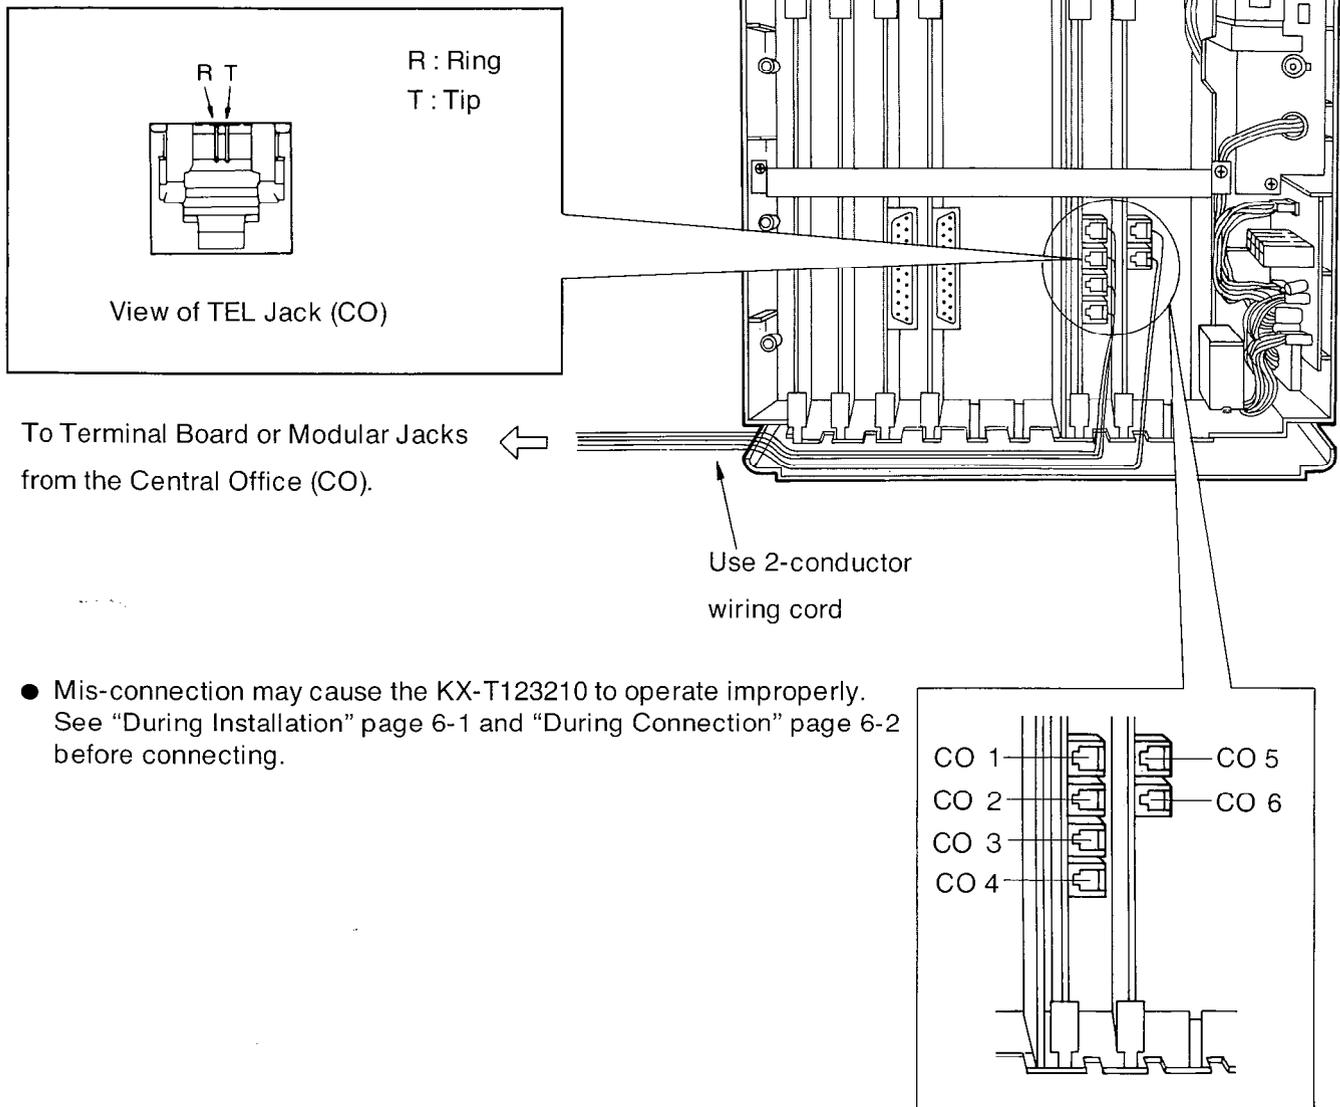


- Mis-connection may cause the KX-T123210 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

## Extension Connection (Jack number 1 through 16)

for Proprietary Telephone (KX-T123220 / KX-T123230 / KX-T123250 / KX-T61620 / KX-T61630 / KX-T61631 / KX-T61650 / KX-T30820 / KX-T30830 / KX-T30850 ) and a Standard Telephone


To connect jack number 1 through 8 and 9 through 16, insert connector to the KX-T123210 as shown right.

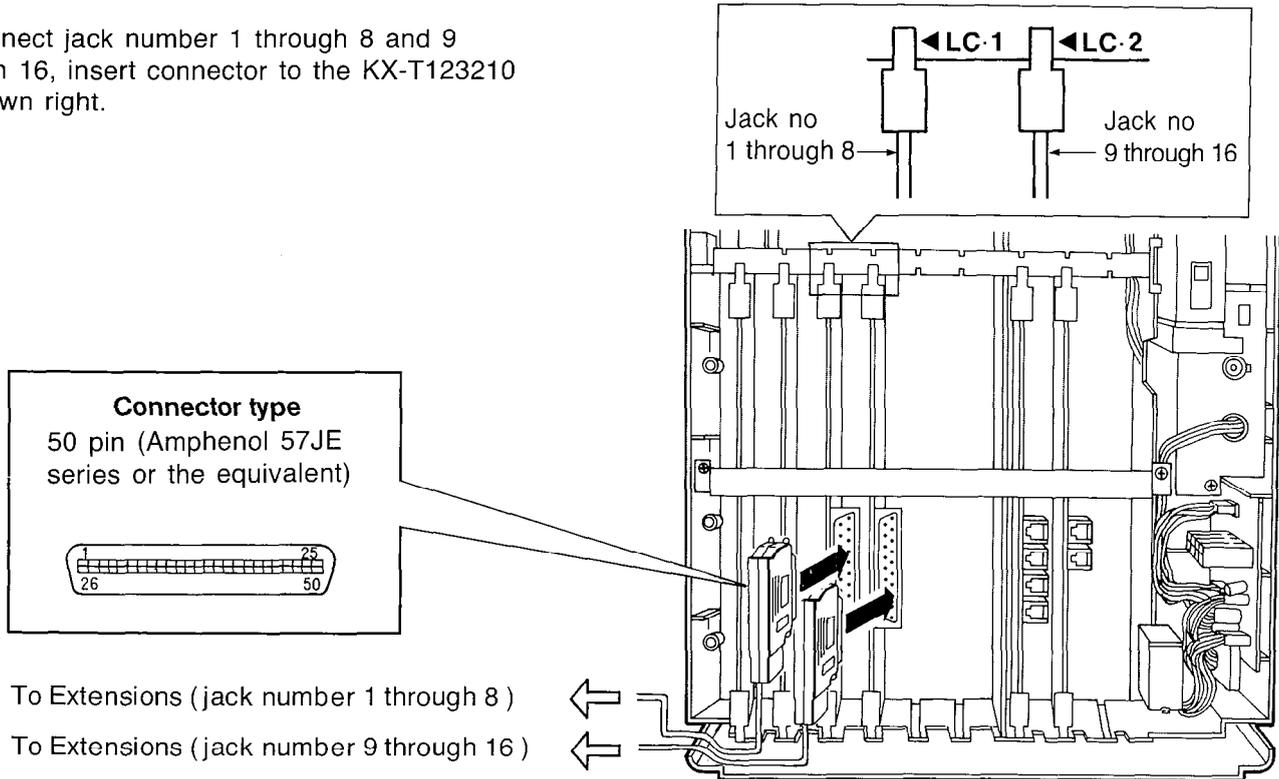

### Cable Pin Numbers to be connected

See page 2-11.

- The max. length of the extension line cord (twisted cable) that connects the KX-T123210 and the extension is shown below.

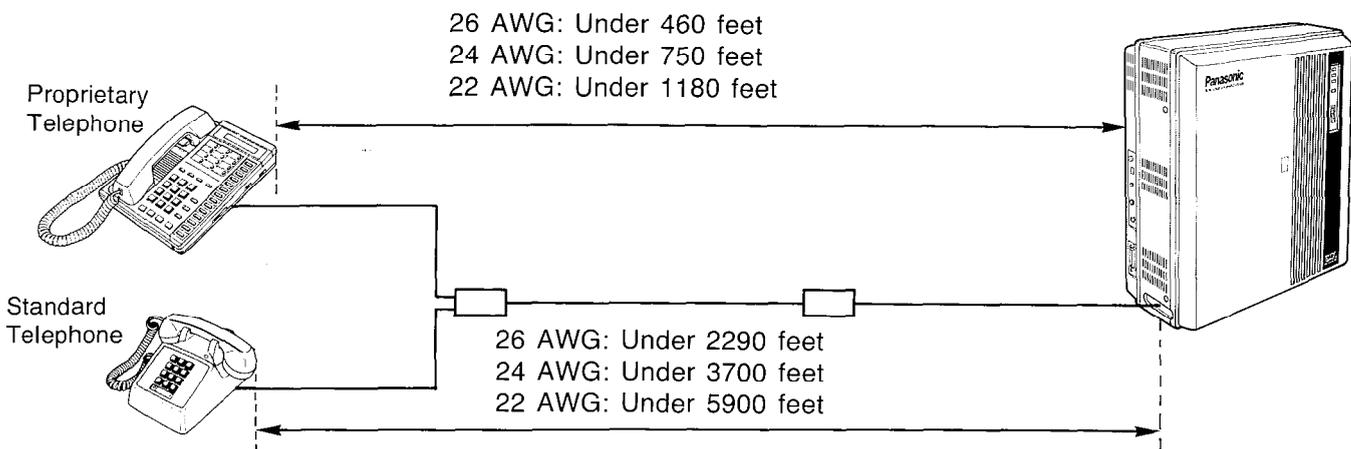


- If a telephone or answering machine with an A-A1 relay is connected to the KX-T123210, set the A-A1 relay switch of the telephone or answering machine to OFF.
- Mis-connection may cause the KX-T123210 to operate improperly.  
See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

## Optional Cards Installation

1. To protect the printed circuit board from static electricity, first discharge any body static by touching the metal board.
2. Loosen the screws to remove the metal board.
3. The location of the optional cards for the KX-T123210 is shown in the following.

- Insert the optional card with holding a levers of the card into the KX-T123210 surely.  
Do not touch parts on the card.

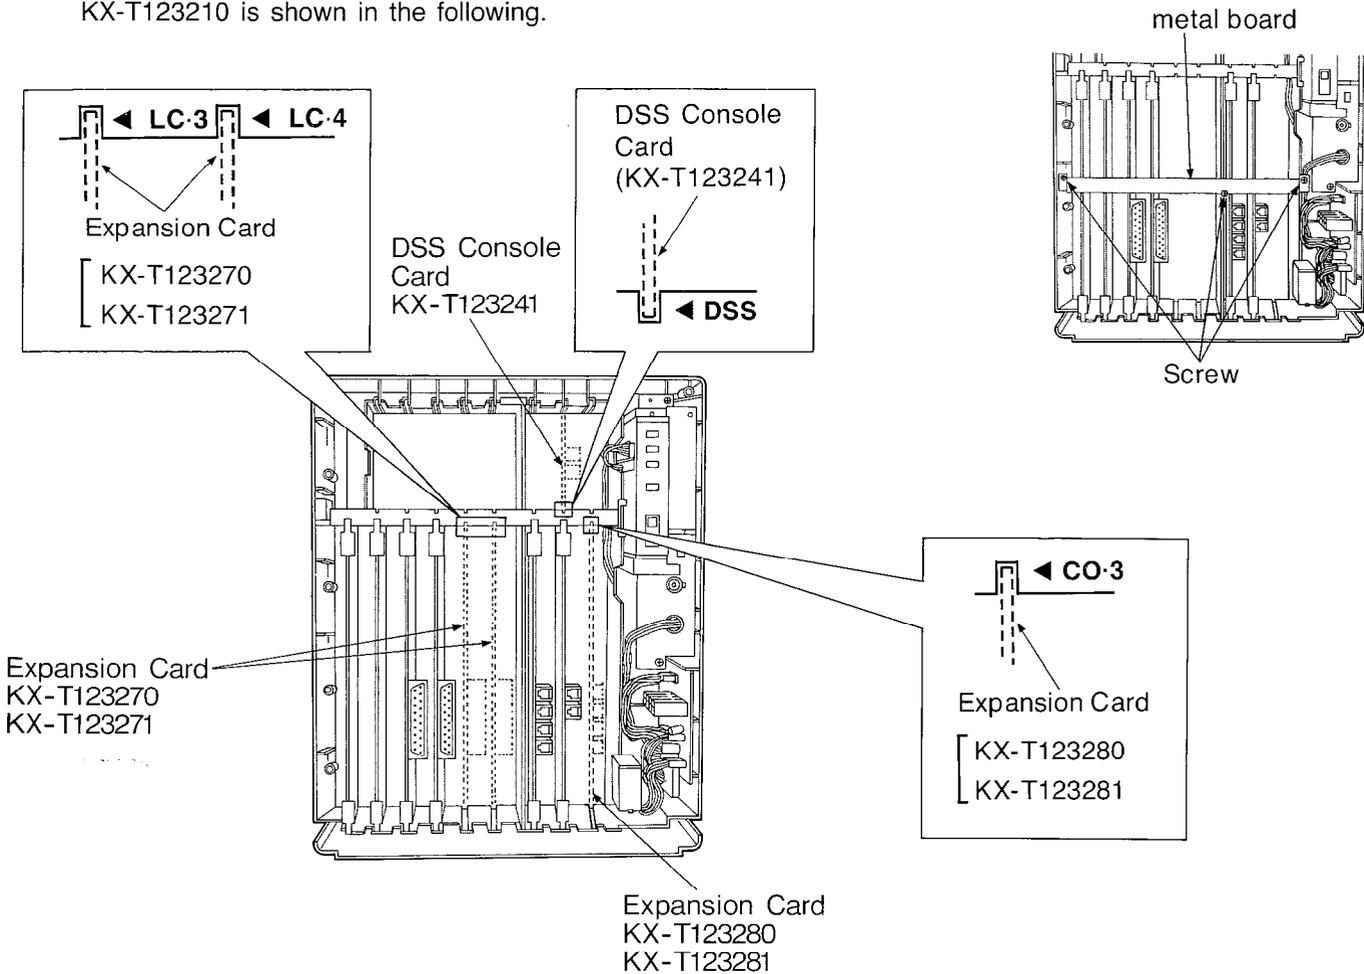

CONNECTION

### Optional Cards

	Model No	Description	Reference Page
<b>Expansion Cards</b>	KX-T123270	This card adds 8 Extension's.	2-10
	KX-T123271	This card adds 4 Extension's.	2-10
	KX-T123280	This card adds 4 CO's.	2-12, 2-13
	KX-T123281	This card adds 2 CO's.	2-12
<b>DSS Console Card</b>	KX-T123241	The DSS Console requires the DSS Console Card for the operation.	2-14

## Extension Connection (Jack number 17 through 24) Option

To add eight extensions (jack number 17 through 24), use the optional expansion card KX-T123270.


To add four extensions (jack number 17 through 20), use the optional expansion card KX-T123271.

1. Insert the expansion card KX-T123270 or KX-T123271 into the KX-T123210.
2. Insert connector to the KX-T123270 or KX-T123271 as shown at right.

### Cable Pin Numbers to be connected

See page 2-11.

- Mis-connection may cause the KX-T123210 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting. To Extensions (jack number 17 through 20, or 17 through 24 )

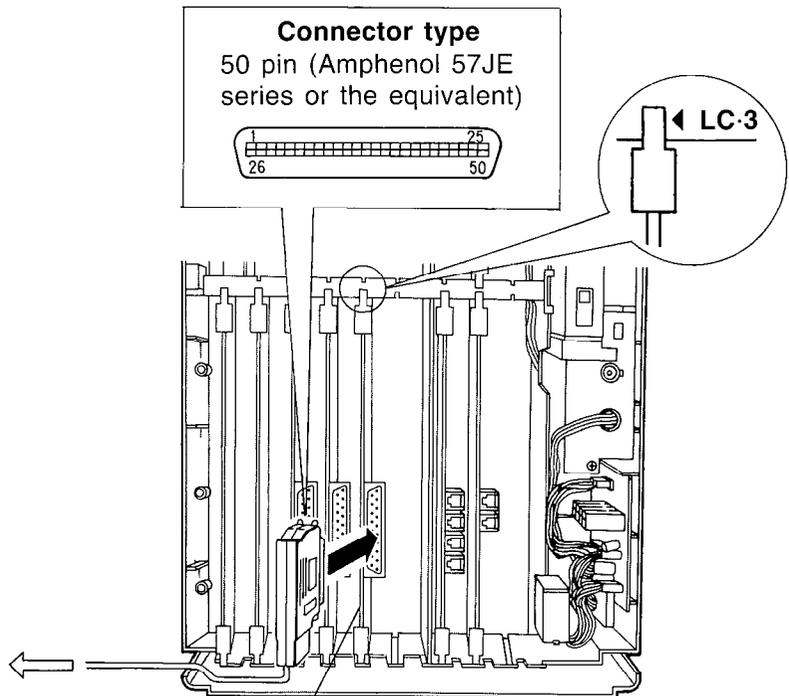

Expansion card

KX-T123270 ... jack number 17 through 24  
KX-T123271 ... jack number 17 through 20

## Extension Connection (Jack number 25 through 32) Option

To add eight extensions (jack number 25 through 32), use the optional expansion card KX-T123270.


To add four extensions (jack number 25 through 28), use the optional expansion card KX-T123271.

1. Insert the expansion card KX-T123270 or KX-T123271 into the KX-T123210.
2. Insert connector to the KX-T123270 or KX-T123271 as shown at right.

### Cable Pin Numbers to be connected

See page 2-11.

- Mis-connection may cause the KX-T123210 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting. To Extensions (jack number 25 through 28, or 25 through 32 )

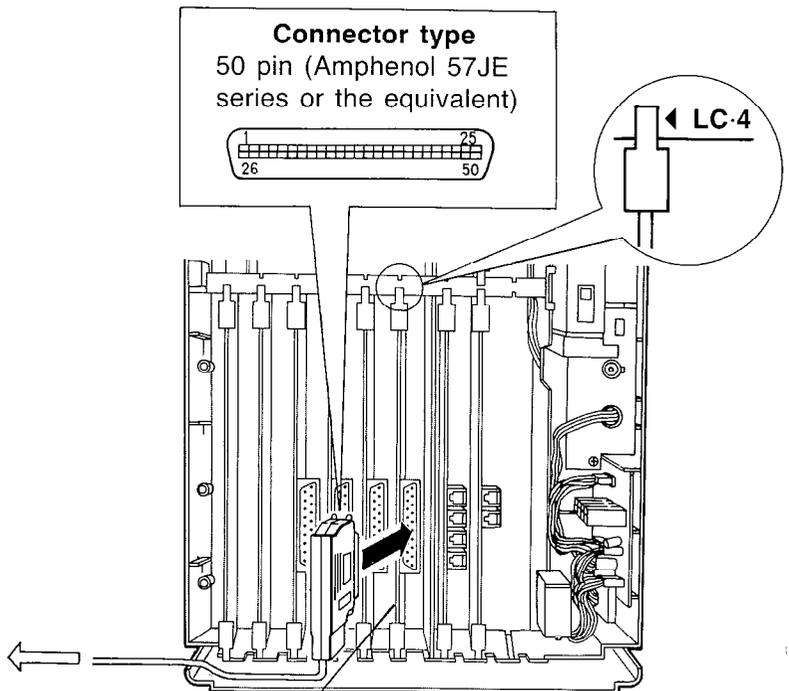

Expansion card

KX-T123270 ... jack number 25 through 32  
KX-T123271 ... jack number 25 through 28

Cable Pin Numbers to be connected

● Connection of the Proprietary Telephone


T:Tip D1:Data1  
R:Ring D2:Data2

● Connection of a Standard Telephone

Connect the only pin number of "T" and "R".

CONN. PIN	CABLE COLOR	CLIP NO.	LC-1		LC-2		LC-3		LC-4	
26	WHT-BLU	1	JACK No.1	T	JACK No.9	T	JACK No.17	T	JACK No.25	T
1	BLU-WHT	2		R		R		R		R
27	WHT-ORN	3		D1		D1		D1		D1
2	ORN-WHT	4		D2		D2		D2		D2
28	WHT-GRN	5								
3	GRN-WHT	6								
29	WHT-BRN	7	JACK No.2	T	JACK No.10	T	JACK No.18	T	JACK No.26	T
4	BRN-WHT	8		R		R		R		R
30	WHT-SLT	9		D1		D1		D1		D1
5	SLT-WHT	10		D2		D2		D2		D2
31	RED-BLU	11								
6	BLU-RED	12								
32	RED-ORN	13	JACK No.3	T	JACK No.11	T	JACK No.19	T	JACK No.27	T
7	ORN-RED	14		R		R		R		R
33	RED-GRN	15		D1		D1		D1		D1
8	GRN-RED	16		D2		D2		D2		D2
34	RED-BRN	17								
9	BRN-RED	18								
35	RED-SLT	19	JACK No.4	T	JACK No.12	T	JACK No.20	T	JACK No.28	T
10	SLT-RED	20		R		R		R		R
36	BLK-BLU	21		D1		D1		D1		D1
11	BLU-BLK	22		D2		D2		D2		D2
37	BLK-ORN	23								
12	ORN-BLK	24								
38	BLK-GRN	25	JACK No.5	T	JACK No.13	T	JACK No.21	T	JACK No.29	T
13	GRN-BLK	26		R		R		R		R
39	BLK-BRN	27		D1		D1		D1		D1
14	BRN-BLK	28		D2		D2		D2		D2
40	BLK-SLT	29								
15	SLT-BLK	30								
41	YEL-BLU	31	JACK No.6	T	JACK No.14	T	JACK No.22	T	JACK No.30	T
16	BLU-YEL	32		R		R		R		R
42	YEL-ORN	33		D1		D1		D1		D1
17	ORN-YEL	34		D2		D2		D2		D2
43	YEL-GRN	35								
18	GRN-YEL	36								
44	YEL-BRN	37	JACK No.7	T	JACK No.15	T	JACK No.23	T	JACK No.31	T
19	BRN-YEL	38		R		R		R		R
45	YEL-SLT	39		D1		D1		D1		D1
20	SLT-YEL	40		D2		D2		D2		D2
46	VIO-BLU	41								
21	BLU-VIO	42								
47	VIO-ORN	43	JACK No.8	T	JACK No.16	T	JACK No.24	T	JACK No.32	T
22	ORN-VIO	44		R		R		R		R
48	VIO-GRN	45		D1		D1		D1		D1
23	GRN-VIO	46		D2		D2		D2		D2
49	VIO-BRN	47								
24	BRN-VIO	48								
50	VIO-SLT	49								
25	SLT-VIO	50								

Station wiring (2-pair twisted cabling):

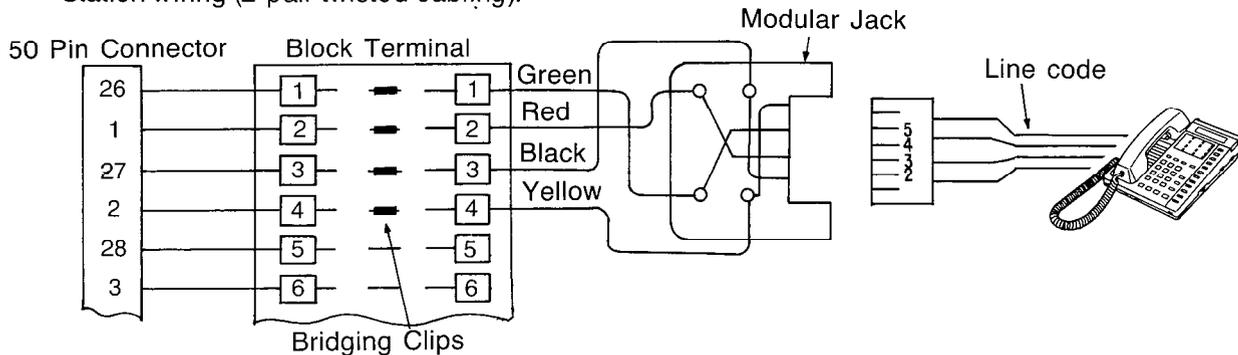


CONNECTION


## Central Office Line Connection (CO 9 through 12) Option

To add four Central Office Lines (CO 9 through 12), use the optional expansion card KX-T123280.

1. Insert the expansion card KX-T123280 into the KX-T123210.
  2. Insert the modular plug of the telephone line cord (2-conductor wiring) into the modular jack on the KX-T123280.
- Mis-connection may cause the KX-T123210 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

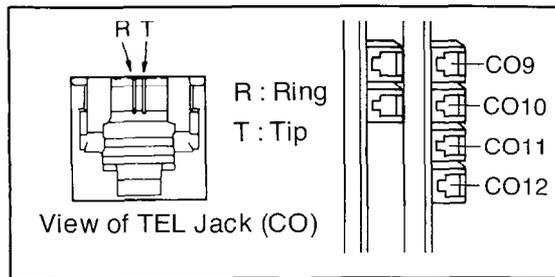


To Terminal Board or Modular Jacks from the Central Office (CO).

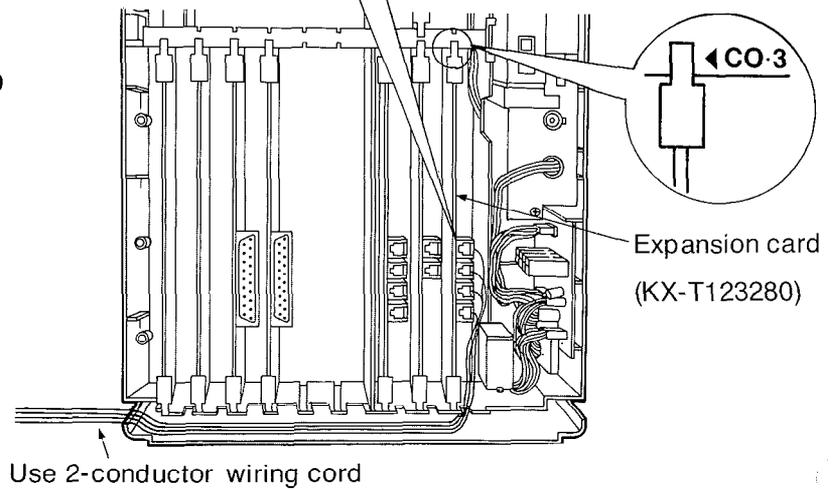


## Central Office Line Connection (CO9 and 10) Option

To add two Central Office lines (CO9 and CO10), use the optional expansion card KX-T123281.

1. Insert the expansion card KX-T123281 into the KX-T123210.
  2. Insert the modular plug of the telephone line cord (2-conductor wiring) into the modular jack on the KX-T123281.
- Mis-connection may cause the KX-T123210 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

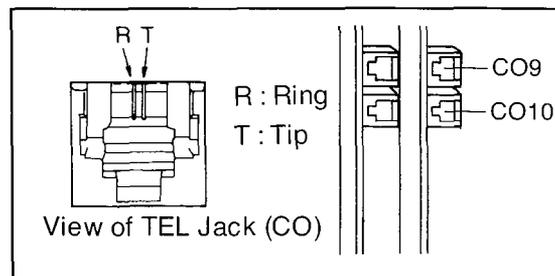




To Terminal Board or Modular Jacks from the Central Office (CO).

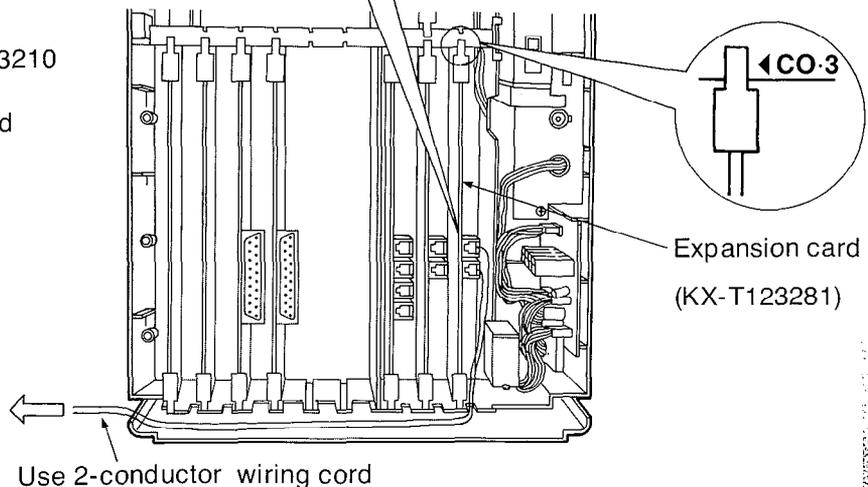

## Central Office Line Connection (CO7 and 8) Option

To add two Central Office lines (CO7 and 8), use the optional expansion card KX-T123280.

1. Remove the card which is inserted into groove marked "CO-2".
  2. Insert the expansion card KX-T123280 into the KX-T123210.
  3. Insert the modular plug of the telephone line cord (2-conductor wiring) into the modular jack on the KX-T123280.
- Mis-connection may cause the KX-T123210 to operate improperly. See "During Installation" page 6-1 and "During Connection" page 6-2 before connecting.

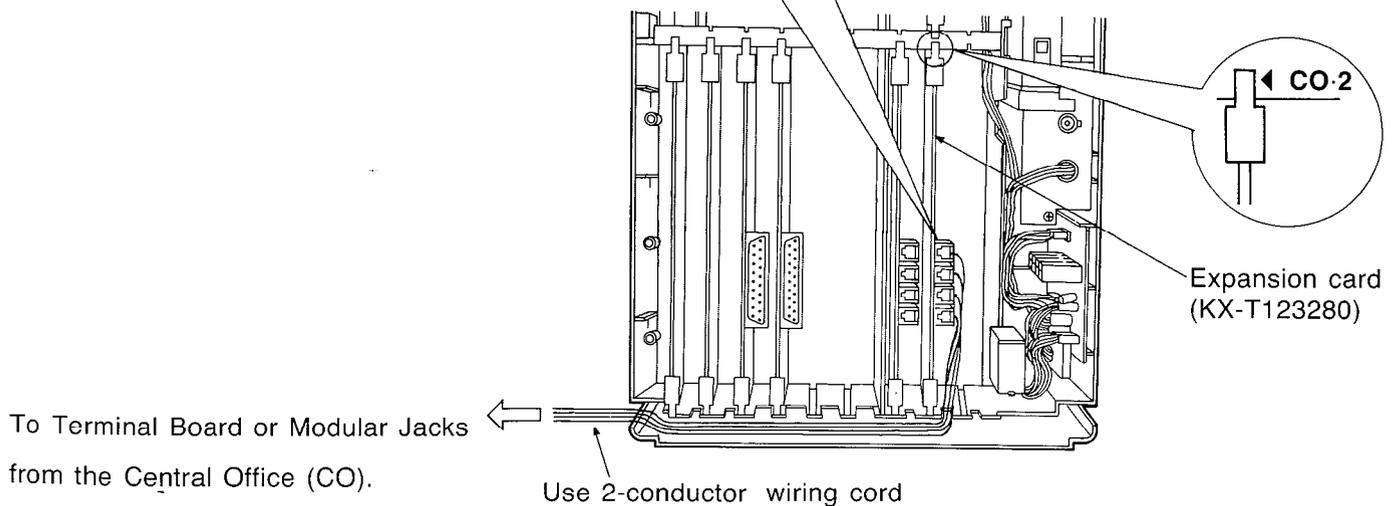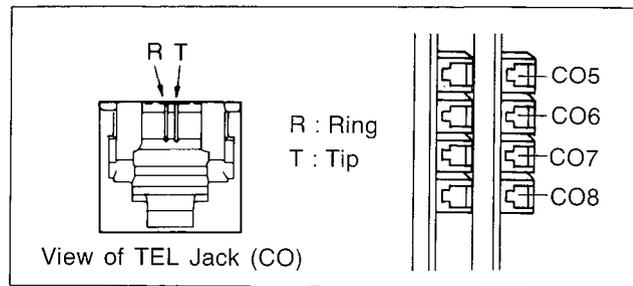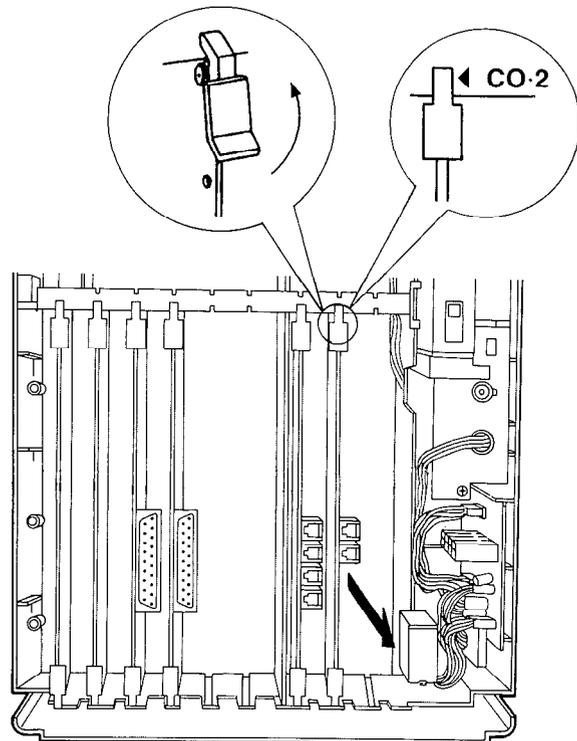

## Optional DSS Console Connection (KX-T123240/KX-T61640)



To connect the optional DSS Console (KX-T123240 or KX-T61640), the optional DSS Console card (KX-T123241) is required.

The DSS Console (KX-T123240 or KX-T61640) needs a paired Telephone (EMSS Proprietary Telephone) for proper operation, because the DSS console cannot work by itself.

The EMSS Proprietary Telephone (such as KX-T123220, KX-T123230, KX-T123250, KX-T61620, KX-T61631, KX-T61630, KX-T61650, KX-T30820, KX-T30830, KX-T30850) is required as the paired telephone for dialing, storing, etc.


Place the KX-T123240 or KX-T61640 and the paired telephone side by side on your desk.

1. Insert the DSS Console card (KX-T123241) into the KX-T123210.
2. Insert the modular plug of the console line cord (4-conductor wiring) into the modular jack on the KX-T123241.

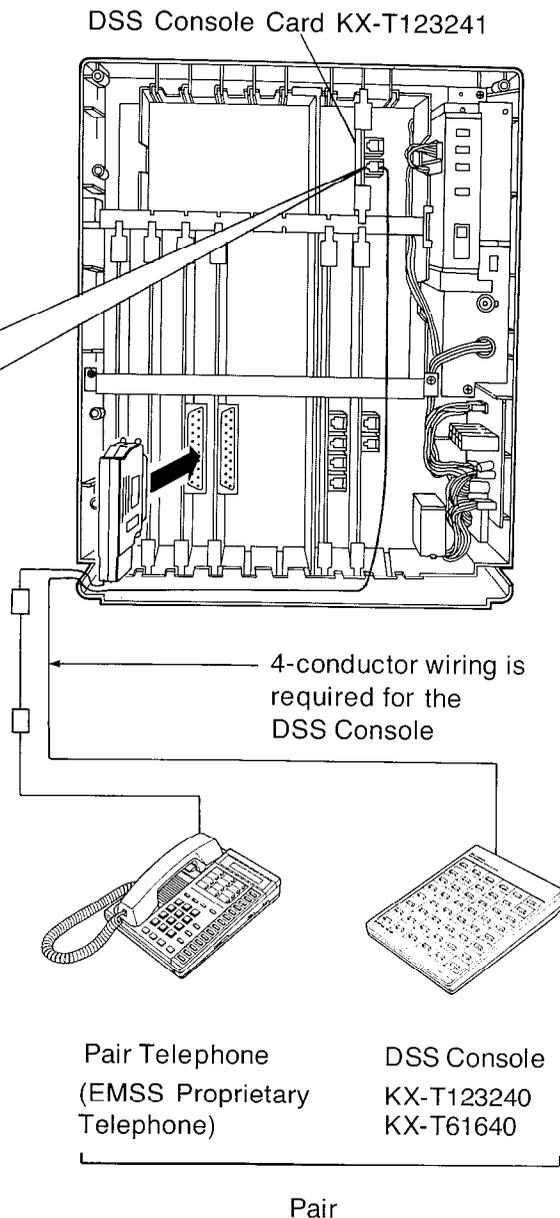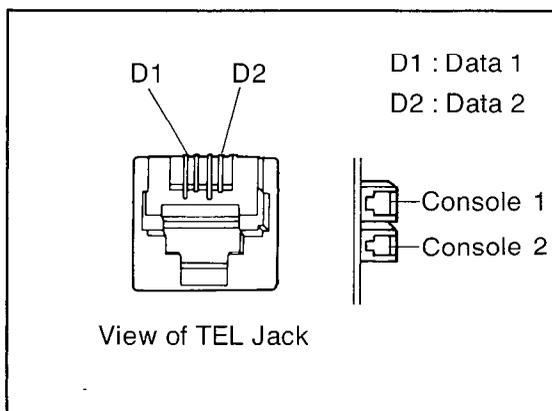

**Notes:**

- Up to 2 KX-T123240's or KX-T61640's can be connected to the KX-T123210. Each console requires its own paired telephone.
- KX-T123240 or KX-T61640 can not be connected in pair with a standard telephone.
- The max. length of the console line cord (twisted cable) that connects the KX-T123210 and the DSS Console is shown below.




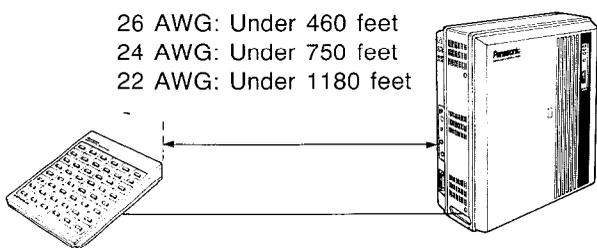


When using the KX-T123240 or KX-T61640, program must be done. Refer to "Paired Telephone Assignment for DSS Console" page 3-10.


## Optional Doorphone Connection (KX-T30865)

For installing the doorphone, use the Optional Doorphone Adaptor (Use the KX-T30860D only).

### Installation of the doorphone

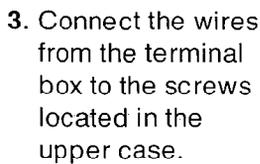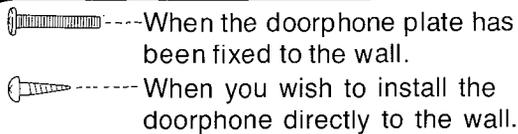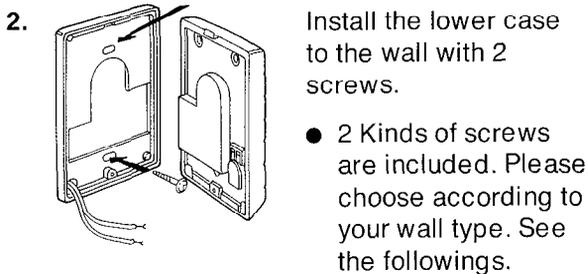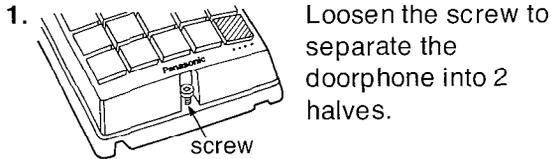


to the terminal box  
(See page 2-16)

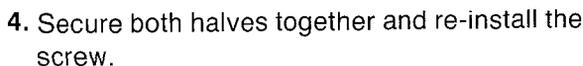


### Installation of the Doorphone Adaptor

How to install the Doorphone Adaptor into the KX-T123210.


1. Connect a 4-conductor modular connector to the doorphone adaptor.

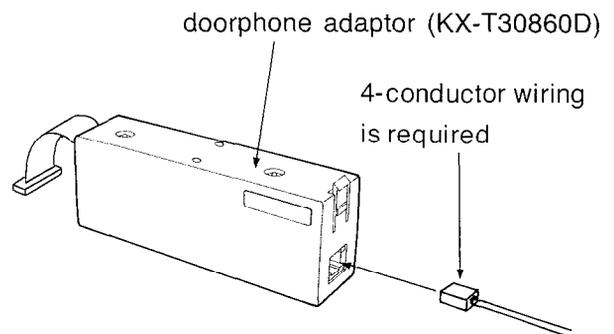

2. Install the doorphone adaptor into the adaptor compartment.

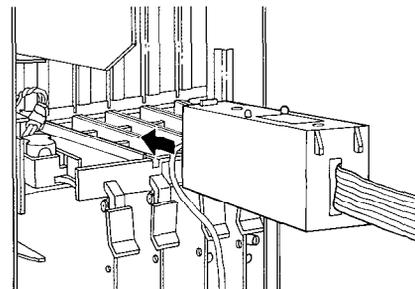


3. After drawing a CPU Card, insert the adaptor connector into connector on the CPU Card (circuit board).

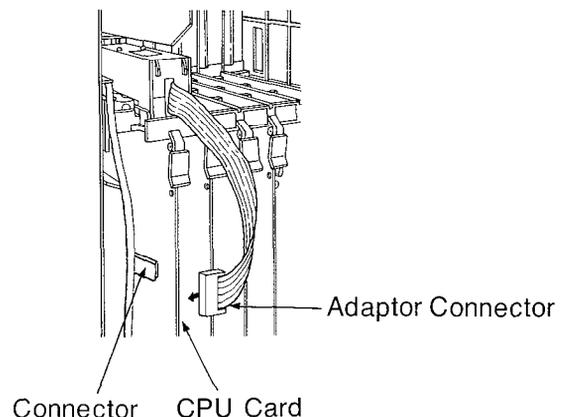


## Doorphone Wiring

- (A) Connect the doorphone adaptor to the terminal box using a 4-conductor modular connector.
- (B) Connect the wires of doorphone 1 to the red and green screws of the terminal box.
- (C) Connect the wires of doorphone 2 to the yellow and black screws of the terminal box.

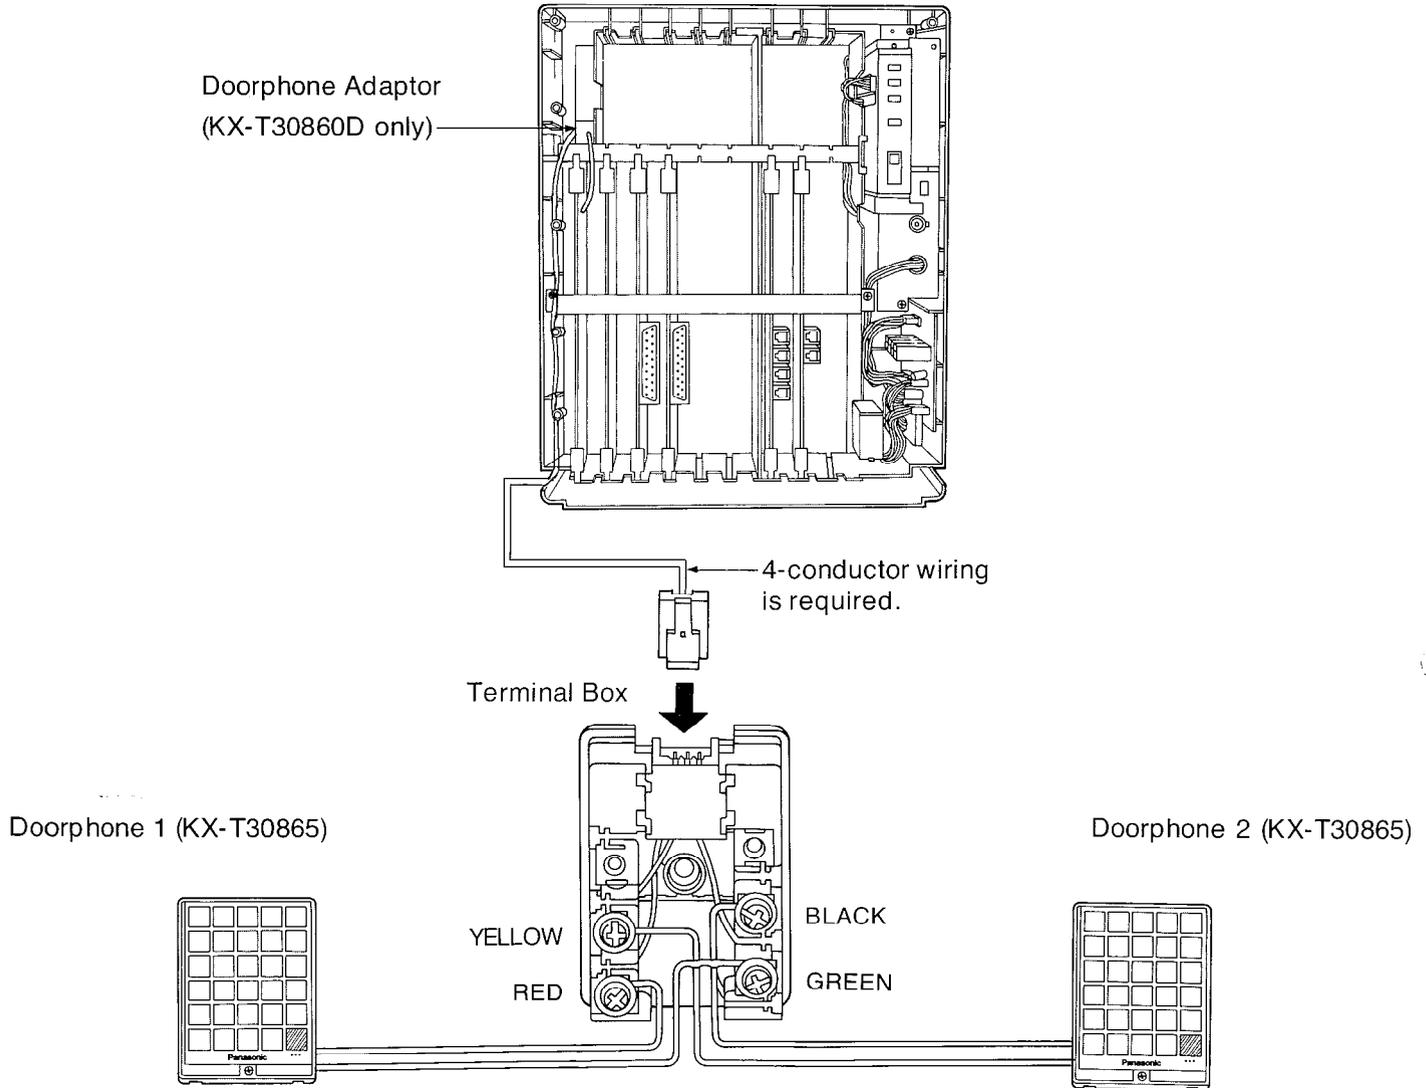


- The max. length of the telephone line cord (twisted cable) that connects the KX-T123210 and the doorphone (KX-T30865) is shown below.

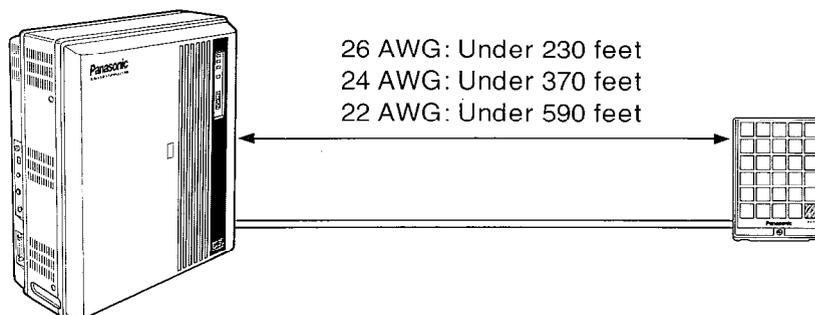

## Polarity Sensitive Telephone Connection

If the telephone you are using with the KX-T123210 is polarity sensitive.


1. Connect all extension wiring to the KX-T123210.
2. Confirm that dialing can be done from all the extensions using a tone telephone.
3. If a dialing can not be done, the polarity between the extension and the KX-T123210 must be reversed.

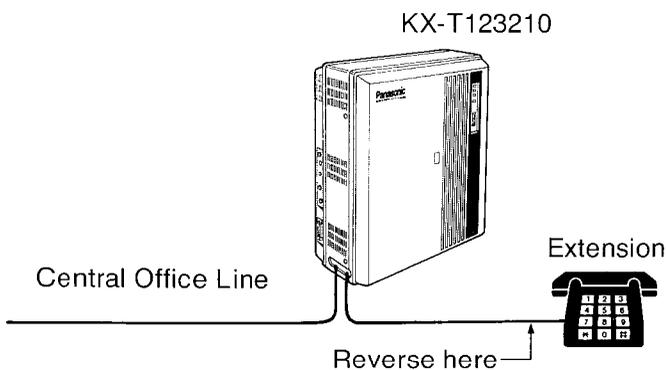

6. Confirm that dialing can be done on the following extensions using a tone telephone.

Extension of jack number 1--CO1  
Extension of jack number 2--CO2  
Extension of jack number 9--CO5  
Extension of jack number 10--CO6  
Extension of jack number 17--CO9  
Extension of jack number 18--CO10

7. If dialing can not be done, the polarity between the KX-T123210 and the Central Office Line must be reversed.

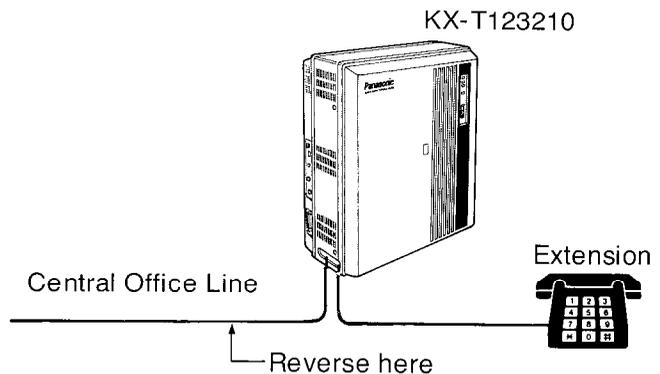

4. Set the Power Switch on the KX-T123210 to the OFF position.
5. Connect all Central Office (CO) Lines.


8. If any extension is changed or replaced, repeat these procedures (from step 1 through step 7).

## Battery Connection


Car type batteries which are customer supplied is available as a back up power supply to the KX-T123210 to operator all the features in the event of power failure.

For connecting car type batteries, use the Optional Battery Adaptor KX-A26.

1. Connect the Battery Adaptor KX-A26 to car type batteries.
2. Connect the Battery Adaptor KX-A26 to the Battery Backup Connector of the KX-T123210.

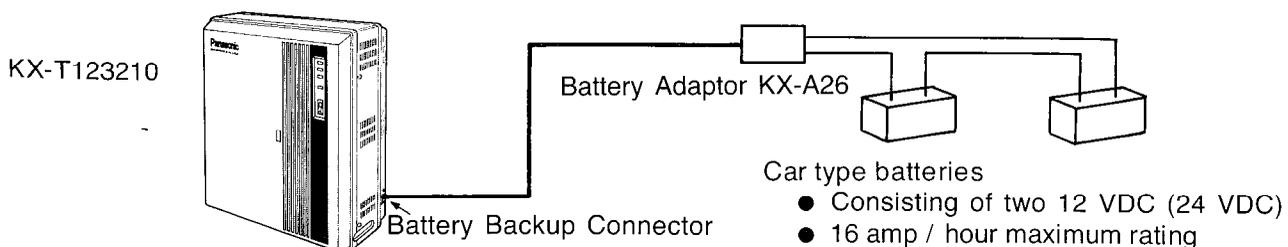

# Printer Connection

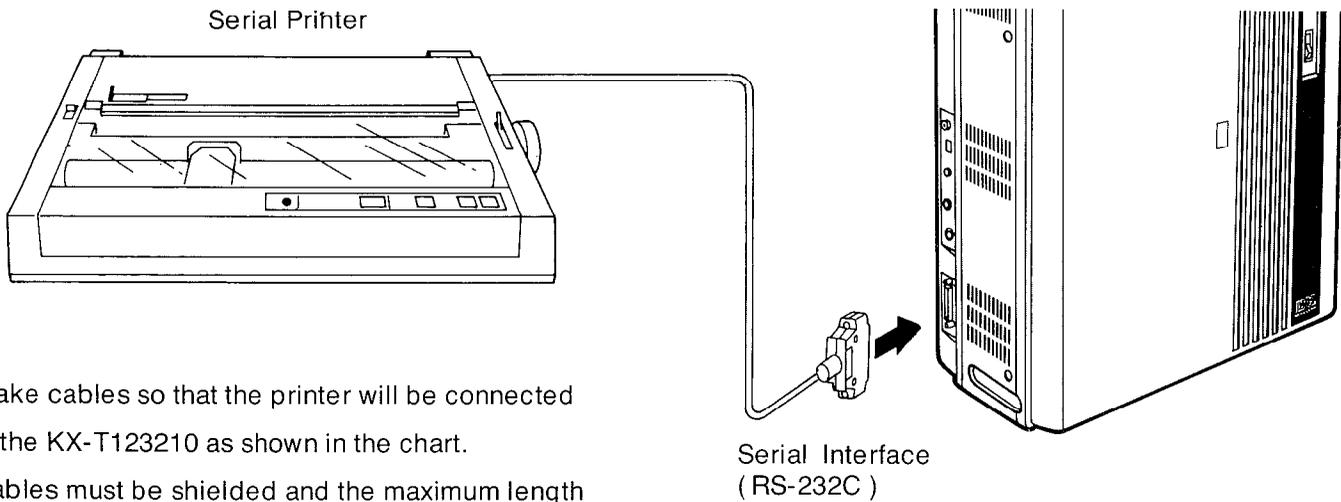

Make cables so that the printer will be connected to the KX-T123210 as shown in the chart.

Cables must be shielded and the maximum length is 6.5 feet.

## Connection Chart :

### KX-T123210 RS-232C

### Printer RS-232C

Circuit Type (EIA)	Signal Name	Pin No.	Pin No.	Signal Name	Circuit Type (EIA)
AA	FG	1	1	FG	AA
BA	TXD	2	3	RXD	BB
BB	RXD	3	2	TXD	BA
CB	CTS	5	5	CTS	CB
CC	DSR	4,6	6	DSR	CC
AB	SG	7	7	SG	AB
CD	DTR	20	20	DTR	CD
			8	DCD	CF

When using special accessories such as cable, the user should use those specified in this installation manual to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules.

The pin configuration of EIA (RS-232C) connector is as follows.

Pin Number	Signal Name	Circuit Type	
		EIA	CCITT
1	FG	AA	101
2	TXD Transmitted Data	BA	103
3	RXD	BB	104
4	RTS Request To Send	CA	105
5	CTS	CB	106
6	DSR Data Set Ready	CC	107
7	SG	AB	102
8	DCD Data Carrier Detect	CF	109
20	DTR Data Terminal Ready	CD	108.2

### ● Panasonic data terminal ;

KX-D4910D, KX-D4911, KX-D4920, KX-D4985, etc.

If you connect this unit to a Panasonic Data

Terminal, the Communication Parameter

Transmit XON / XOFF on the Data Terminal must

be set to the "YES" position.

For further details, see the Operating

Instructions of the Data Terminal.

**EIA SIGNALS:**

**Frame Ground (FG);**

Connects to the unit frame and the earth ground conductor of the AC power cord.

**Transmitted Data (TXD);**.....(output)

Conveys signals from the unit to the printer. A "Mark" condition is held unless data or BREAK signals are being transmitted.

**Received Data (RXD);**.....(input)

Conveys signals from the printer.

**Request To Send (RTS);**.....(output)

This lead is held ON whenever DSR is ON.

**Clear To Send (CTS);**..... (input)

An ON condition of circuit CTS indicates that the printer is ready to receive data from the unit. The unit dose not attempt to transfer data or receive data when circuit CTS is OFF.

**Data Set Ready (DSR);**.....(input)

An On condition of circuit DSR indicates the printer is ready. Circuit DSR ON does not indicate that communication has been established with the printer.

**Signal Ground (SG);**

Connects to the DC ground of the unit for all interface signal.

**Data Terminal Ready (DTR)**.....(output)

This signal line is turned ON by the unit to indicate that it is ON LINE. Circuit DTR ON does not indicate that communication has been established with the printer. It is switched OFF when the unit is OFF LINE.

**Data Carrier Detect (DCD)**.....(input)

The ON condition is an indication to data terminal (DTE) that the carrier signal is being received.


**Communication parameter**

1. If the Panasonic printer which is used has a (KX-P11D or KX-P17) board and is connected to the KX-T123210, set the communication parameters below.


	KX-T123210	KX-P11D		KX-P17	
		DIP switch	Setting	DIP switch	Setting
Word length	7 bit (default)	SW1-1	ON	SW1-4	ON
Parity	Program to "EVEN" (See page 3-32)	SW1-2 SW1-3	ON ON	SW1-5 SW1-6	OFF OFF
Baud Rate	1200B (default)	SW1-5 SW1-6 SW1-7 SW1-8	ON OFF OFF OFF	SW1-1 SW1-2 SW1-3	OFF OFF ON
Protocol	XON / XOFF mode only	SW2-8	OFF	SW1-8	ON

2. If the Panasonic data terminal is a KX-D4985 or KX-D4920 and is connected to the KX-T123210, the default value of communication parameter is the same as that of the KX-T123210.  
If the KX-D4910D is connected to the KX-T123210, set the baud rate of the KX-D4910D to 1200 baud, the other default value is the same as that of the KX-T123210.

## Paging Equipment

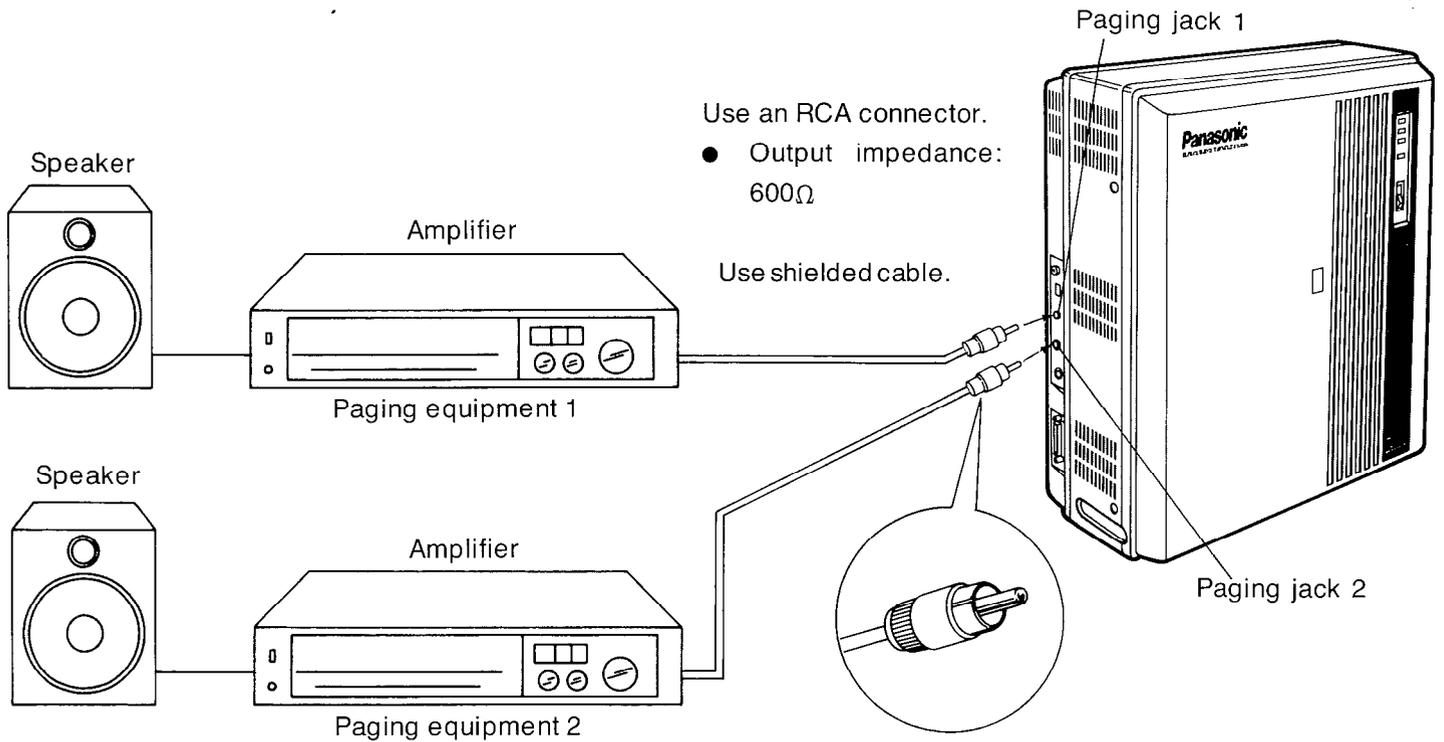

## External Music Source

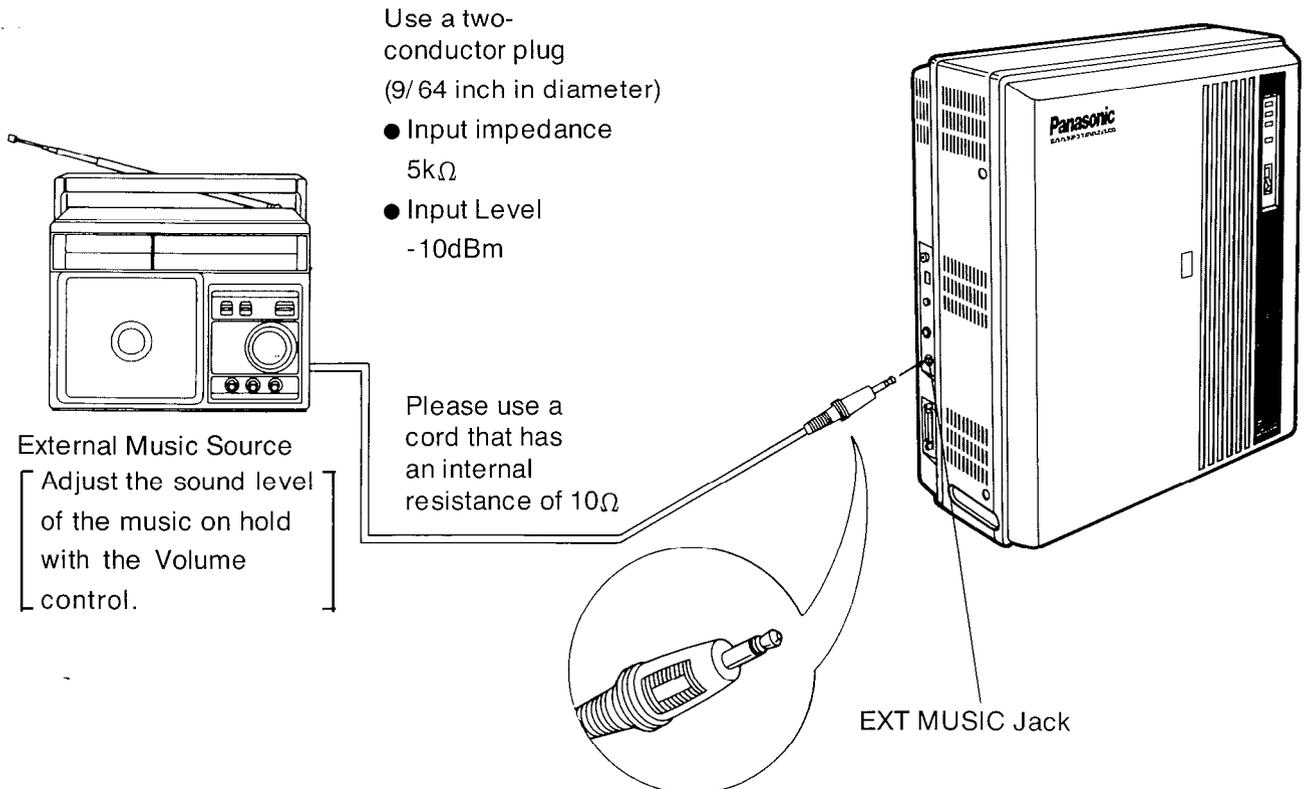

# PROGRAMMING

To activate this system, the requirements from telephone company and the customer must be programmed once the Power Switch has been turned on.

## Programming Instructions

1. At extension connected to jack number 01: All system programming changes (example : system clear, toll restriction, system speed dialing entry...) are done through extension connected to jack number 01.

- **Extension connected to jack number 01 must always be a Panasonic model, KX-T123230.**

2. System Program Switch setting:  
The System Program Switch located on the KX-T123210 must be set to the "PITS" (Proprietary Integrated Telephone System) position while making program changes. After all programming changes are completed, return the program switch to the "SET" position.

3. Overlay:  
This overlay is used for programming the system and the program function names are inscribed on this card. Refer to page 3-2.

4. Before system programming, operate the system clear to set to the default data of the program. See page 3-78.

#### System Clear:

- Set the System Program Switch of the KX-T123210 to the "PITS" position.

1. Dial (99).  
"System Clear" will be displayed.
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the "Menu: All Para" is displayed.


4. Press the MEMORY button to clear system.

5. To return to the initial program mode, press the END button.

- The following parameters are preset as the default data.

- System parameters
- CO parameters
- Extension parameters
- DSS parameters
- Speed call


When the System Program Switch on the KX-T123210 is set to the "PITS" position, the operation of the KX-T123230 connected to jack number 01 will change as follows.

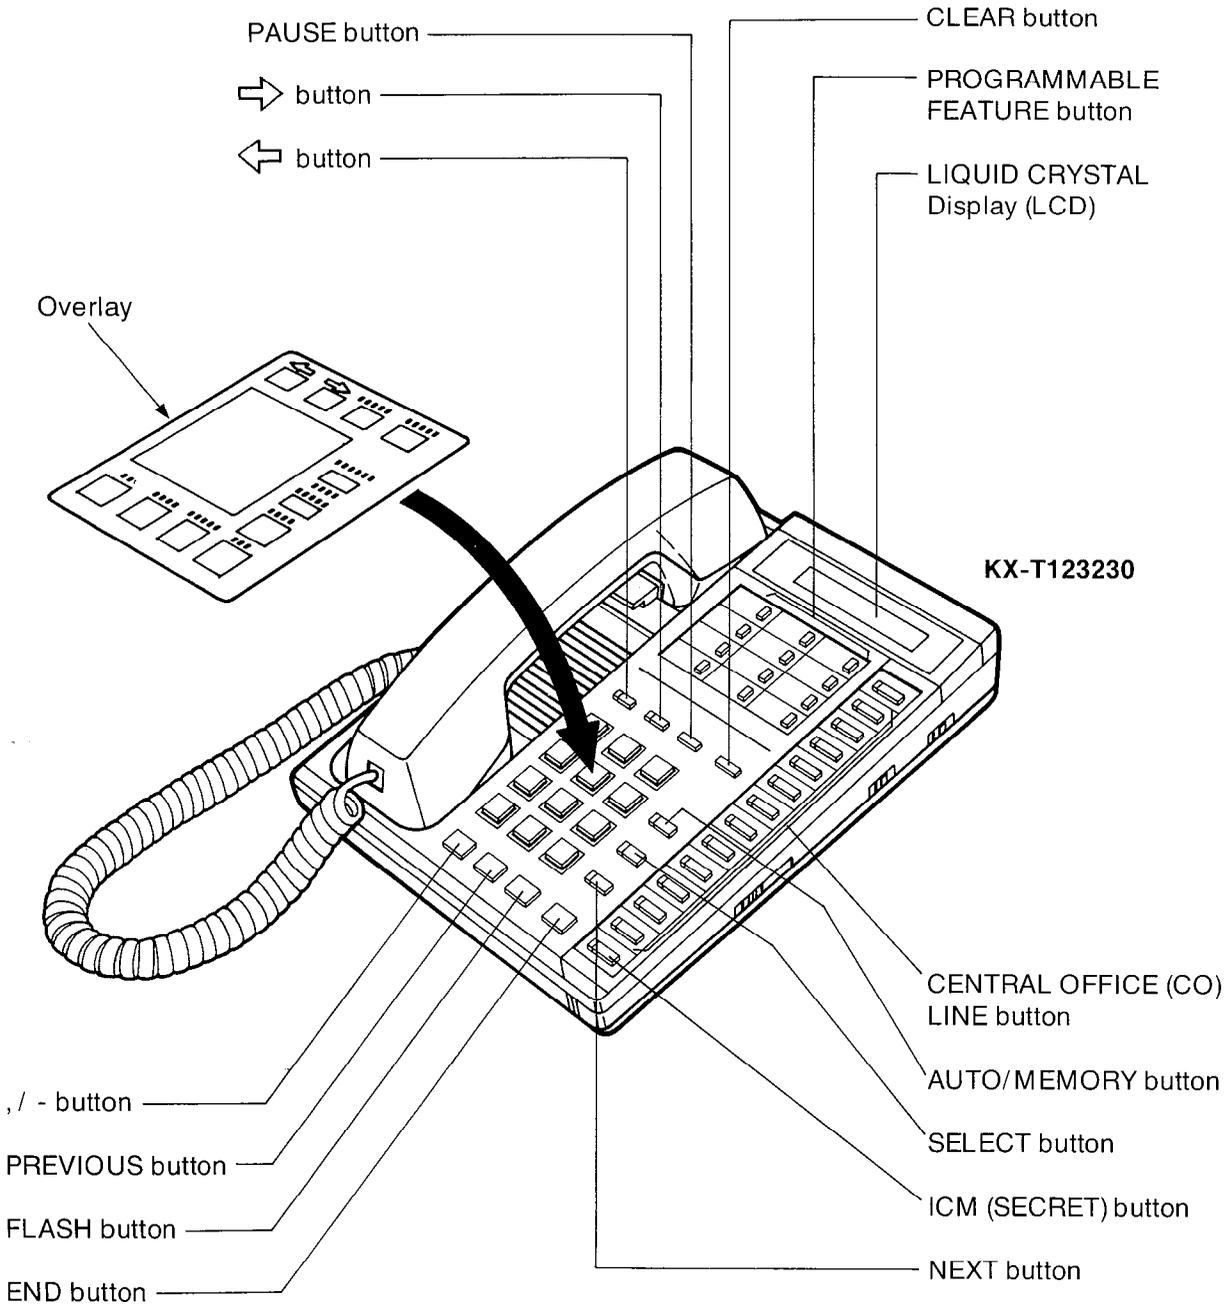

## Example of Programming

1. Turn the Power Switch to ON.
2. Set the System Program Switch to "PITS" position.  
The LCD on the KX-T123230 will show "SYS-PGM NO ?—".
  - Be sure the handset of the extension connected to jack number 01 is in the cradle and the speakerphone button off.
3. To program automatic line access number 9 and the phone number 987-654-3210 into speed access code 00. (Refer to page 3-5.)

KX-T123230 at extension connected to jack number 01. (Extension connected to jack number 01 must be a KX-T123230.)		
1.	Dial (01) or press the Auto button.	Display <span style="border: 1px solid black; padding: 2px;">Speed Dialing</span>
2.	Press the NEXT button.	<span style="border: 1px solid black; padding: 2px;">Speed NO? →</span>
3.	Dial (00) or press the NEXT button.	<ul style="list-style-type: none"> <li>● If nothing is stored in access code "00", <span style="border: 1px solid black; padding: 2px; display: block; margin: 5px 0;">00: Not Stored</span></li> <li>● If already stored the automatic line access number 9 and the phone number 123-456-7890, <span style="border: 1px solid black; padding: 2px; display: block; margin: 5px 0;">00: 9-123-456-789</span></li> </ul>
4.	<ol style="list-style-type: none"> <li>① Dial "9".</li> <li>② Press "—" button.</li> <li>③ Dial "987".</li> <li>④ Press "—" button.</li> <li>⑤ Dial "654".</li> <li>⑥ Press "—" button.</li> <li>⑦ Dial "3210".</li> </ol>	<span style="border: 1px solid black; padding: 2px;">00: -987-654-3210</span>
5.	Press the MEMORY button.	<span style="border: 1px solid black; padding: 2px;">00: -987-654-3210</span>
6.	<ul style="list-style-type: none"> <li>● To program the next access code, press the NEXT button.</li> <li>● To program a desired access code, press the SELECT button and dial speed access code.</li> </ul>	
7.	Repeat steps 4 to 6.	
8.	To return to the initial program mode, press the END button.	<span style="border: 1px solid black; padding: 2px;">SYS-PGM NO ?—</span>

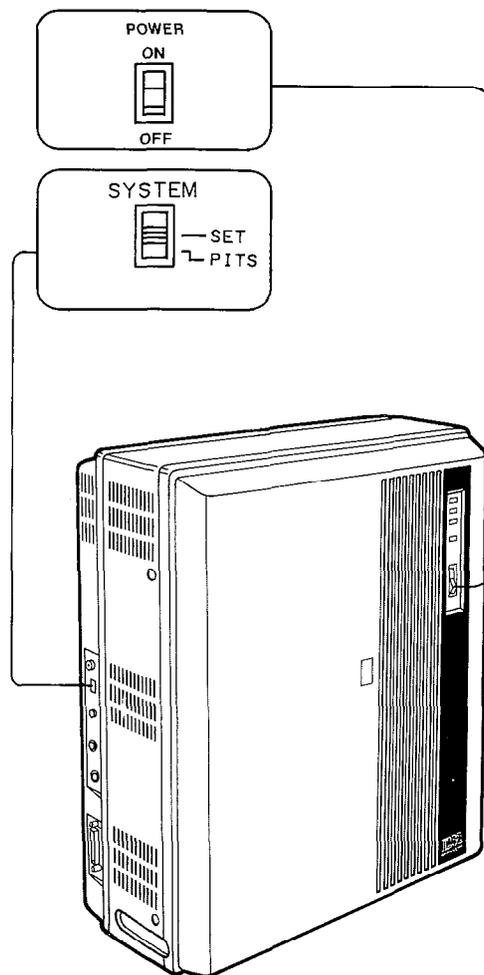

While programming if a mistake is made,


1. Press the "END" button.
2. Start programming procedure from the beginning.

- You will hear a beep after pressing the MEMORY button.
- The MEMORY indicator light will go on when the MEMORY button is pressed, and then the Indicator light will go out when the NEXT or PREV button is pressed.

4. Return the System Program Switch to "SET" position.
  - To make program change, start from the beginning.

# System Feature

## Date and Time Setting

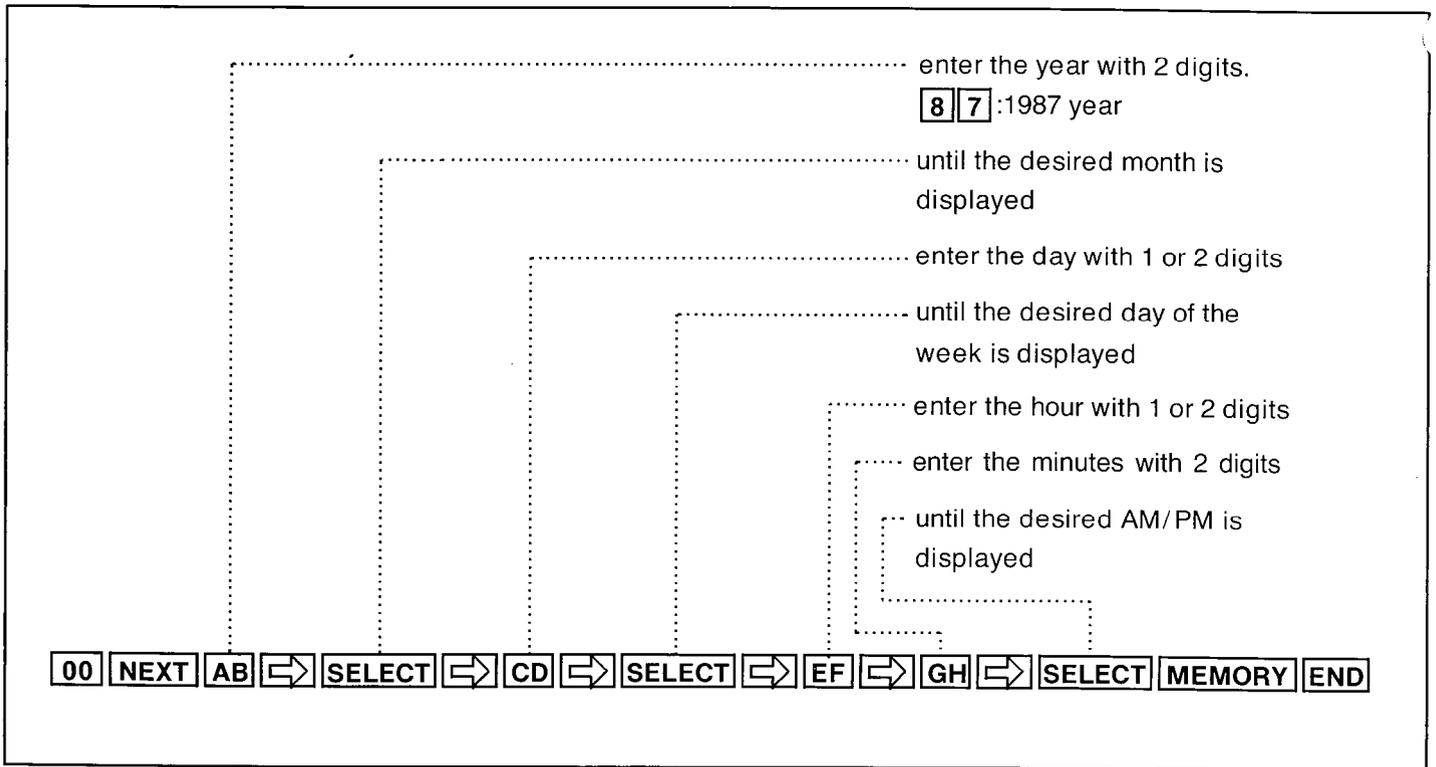

### Description

Entry of the current day, date and time.


### Programming

1. Dial(00).  
"Day/ Time Set" will be displayed.
2. Press the NEXT button.  
"87Jan.1 THU" will be displayed and "87" will blink.
3. Enter the year (last 2 digits) using the dialing button.
4. Press the  button and then repeat pressing the SELECT button until the desired month is displayed.
5. Press the  button and then enter the day with 1 or 2 digits.
6. Press the  button and then repeat pressing the SELECT button until the desired day of the week is displayed.
7. Press the  button. "12:00 AM" will be displayed.
8. Enter the hour with 1 or 2 digits.
9. Press the  button and then enter the minute with 2 digits.
10. Press the  button and then repeat pressing the SELECT button until the desired AM/PM is displayed.
11. Press the MEMORY button.
12. To return to the initial program mode, press the END button.

### Condition

- If  button is pressed, the display will return to the previous sequence in the programming step.
- Instantly after pressing the MEMORY button, the new time will start.  
However, the LCD of extension connected to jack number 01 will display the new time only after the System Program Switch is set to "SET".

## System Speed Dialing Entry

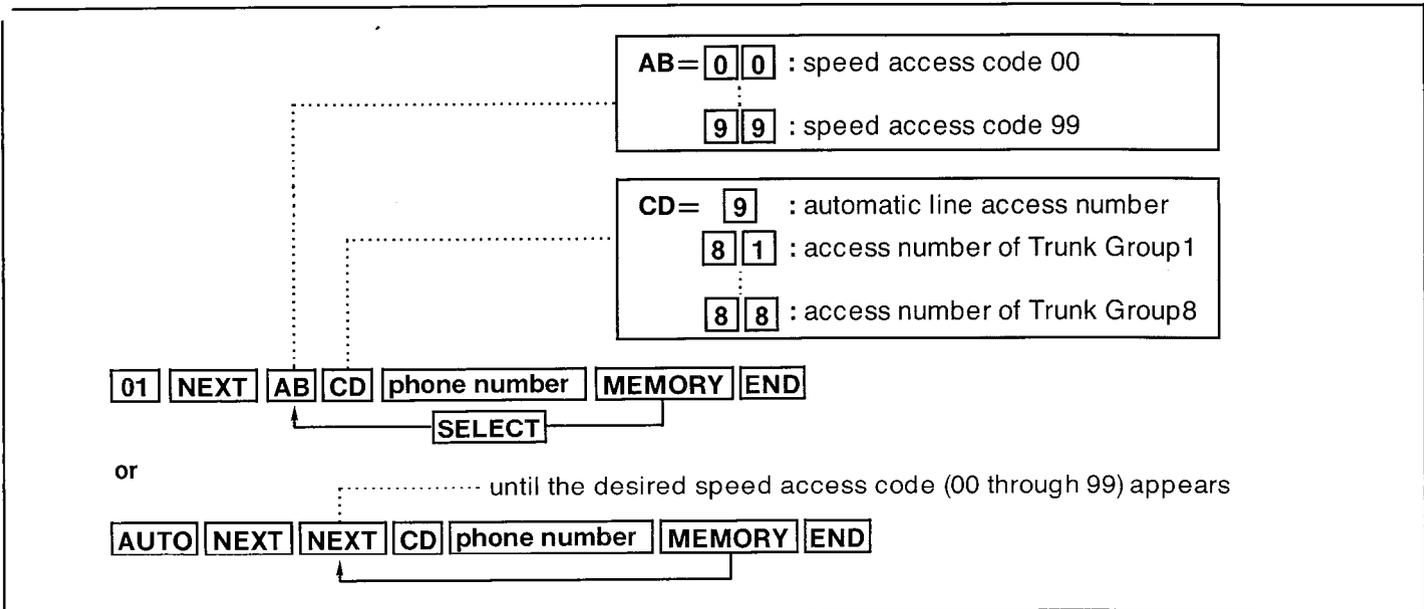

### Description

100 system phone numbers can be stored with each number capable of storing 32 digits and may be accessed from any extension. Pushing the “\*”, “#”, “PAUSE”, “—”, “FLASH” or “ICM (Secret)” button counts as 1 digit.

Refer to “Speed Dialing” on page 4-3.

### Programming

1. Dial (01) or press the AUTO button.  
“Speed Dialing” will be displayed.
2. Press the NEXT button.  
“Speed NO?—” will be displayed.
3. Dial (00 through 99) or press the NEXT button, for speed access code entry.

**Example :**

When dialing (00) or pressing the NEXT button.

- The LCD will show “00:Not Stored” when nothing is stored in speed access code “00”. When the automatic line access number 9 and the phone number 123 - 456 - 7890 are stored, “00: 9- 123- 456- 789” will be displayed.

4. Enter automatic line access number or trunk group number.  
See page 4-2, regarding automatic selection.  
See page 3-46 and 4-3, regarding trunk group.

- 9 : automatic line access number
- 81 : access number of trunk group 1
- 82 : access number of trunk group 2
- 83 : access number of trunk group 3
- 84 : access number of trunk group 4
- 85 : access number of trunk group 5
- 86 : access number of trunk group 6
- 87 : access number of trunk group 7
- 88 : access number of trunk group 8

5. Enter the phone number.
  - You may enter punctuations during a phone number.
  - To erase a wrong entry, press the CLEAR button.
  - When you don't want to display the dialed phone number on the LCD in speed dialing, press the ICM (SECRET) button before and after dialing the phone number that you want to keep secret. Do not press the ICM button before line access number (9 or 81 through 88) and account code.

Example:

9-123- ICM 456 ICM

|  
press the ICM button

The display shows as follows when programming.

01 : 9-123 [456]

The display shows as follows when dialing.

-123---

6. Press the MEMORY button.
  - The memory indicator will be lit.
7. ● To advance to the next speed access code, press the NEXT button.
  - To return to the previous speed access code, press the PREV button.
  - To go to the desired speed access code, press the SELECT button and then dial the speed access code.
8. Repeat steps 4 to 7, to program the other phone numbers.
9. To return to the initial program mode, press the END button.

#### To change

Repeat steps 1 to 9.

#### To erase after programming

1. Dial (01) or press the AUTO button.  
"Speed Dialing" will be displayed.
2. Press the NEXT button.  
"Speed NO ? →" will be displayed.
3. Dial (00 through 99) or press the NEXT button, for speed access code entry.  
The speed access code and the phone number will be displayed.
4. Press the CLEAR button.
5. Press the MEMORY button.
6. ● To advance to the next speed access code, press the NEXT button.
  - To return to the previous speed access code, press the PREV button.
  - To go to the desired speed access code, press the SELECT button and then dial the speed access code.
7. Repeat steps 4 to 6, to erase the programmed other phone number.
8. To return to the initial program mode, press the END button.

#### Conditions

- Use the "⇒", or "⇐" button for scrolling the display.
- Automatic line access number 9 or trunk group access number (81 through 88) should be stored.
- When dialing, the pause is automatically entered after automatic line access number 9 or trunk group access number (81 through 88) has been dialing.
- Continuous use of speed dialing is possible.

#### Example :

**AUTO** **01** **AUTO** **02**

In this case, speed access code "02" should not include the automatic line access number or trunk group access number.


- When dialing, the dialed number will be displayed on the LCD of the KX-T123230 / KX-T61631 / KX-T61630 / KX-T30830.
- The limit of the LCD is 16 characters but will scroll all numbers stored.
- To erase all entries, refer to "System Data Clear" on page 3-78.

There is a blank phone number directory on page 7-1.

**Examples**

1) To enter trunk group access number 81 and telephone number 201-392-4669 into speed access code 00.

(01 NEXT 00 81 201-392-4669 MEMORY END)

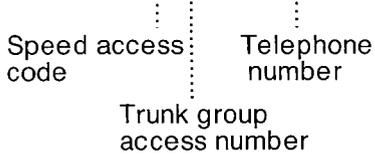


● If punctuation is not entered in a phone number, the LCD will show as below.

**( 00 : 812013924669 )**

2) To enter automatic line access number 9, account code 1234 and telephone number 201-392-4669 into speed access code 02.


(01 NEXT 02 9 \* \* 1234 201-392-4669 MEMORY END)

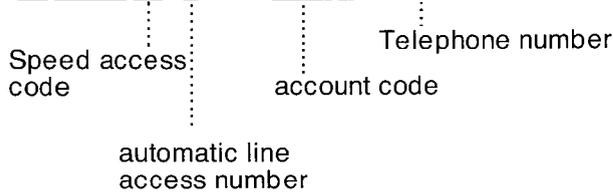

● Refer to "Account code Input mode" page 3-70 and "Account code" page 4-39.


3) To access MCI

(01 NEXT 01 9 123-4567 PAUSE PAUSE 9876 201-348-7000 MEMORY END)

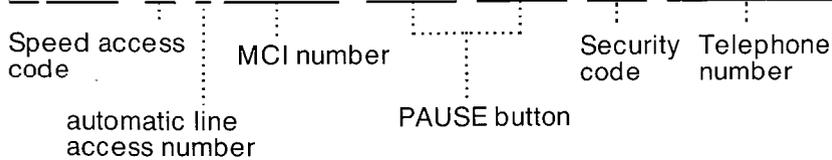


4) To access ITT


(01 NEXT 02 81 765-4321 PAUSE PAUSE 201-348-7000 6789 MEMORY END)

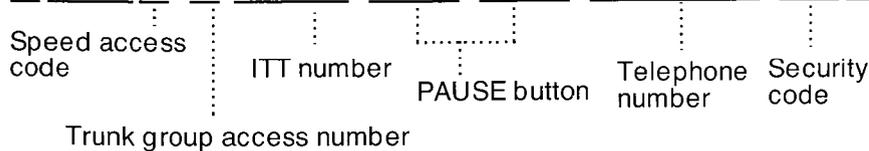

When required to change the dialing mode from the pulse mode to the tone mode. ( See page 4-45)

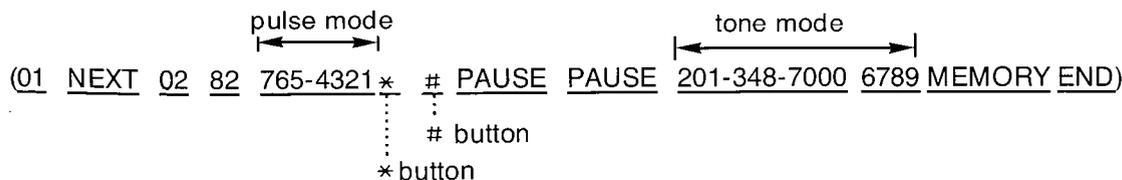

## Extension Number Assignment

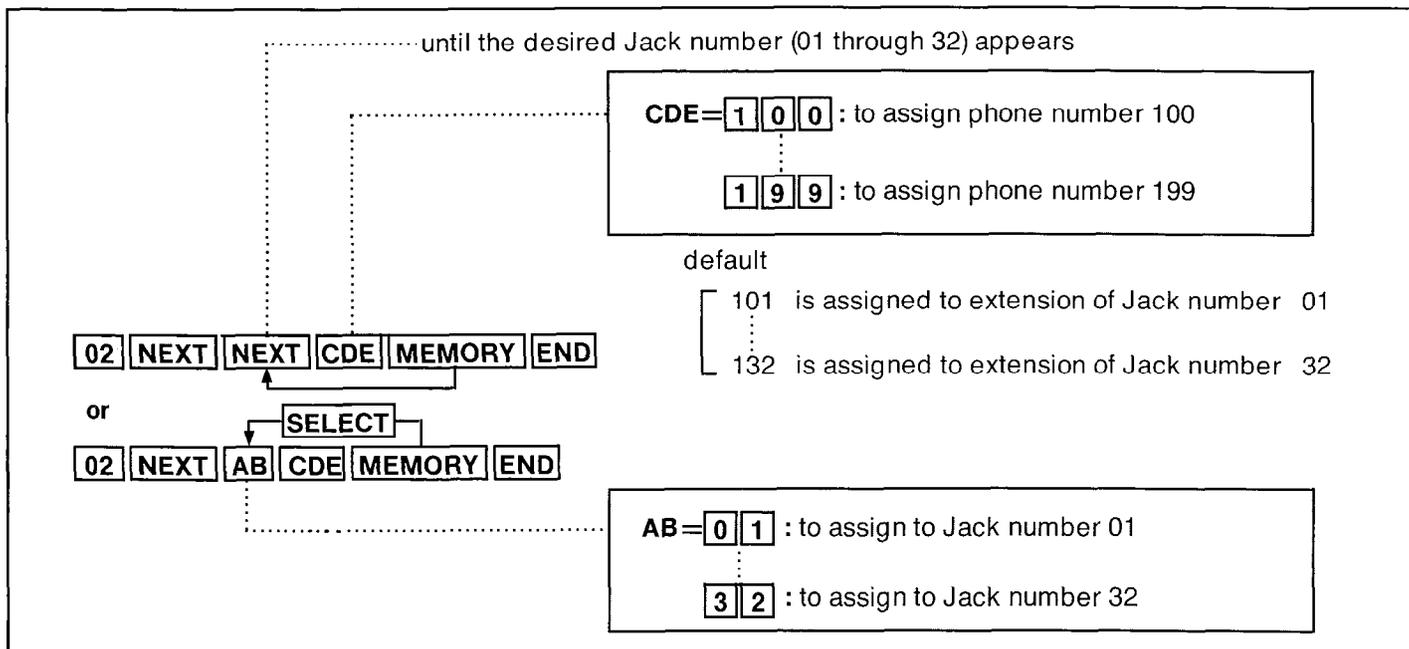

### Description

Enables programming of a 3-digit extension number (100 through 199) for each extension phone. This provides the freedom to develop a logical extension numbering system by department or by building floor as desired.

### Programming

1. Dial (02).  
"Extension NO Set" will be displayed.
2. Press the NEXT button.  
"Jack NO ?→" will be displayed.
3. Press the NEXT button or dial the Jack number (01 through 32).  
"Jack 01 : EXT101" will be displayed and "101" will blink.
4. Dial the extension number which is set newly (100 through 199).
  - When dialing (150), the LCD will show "Jack 01 : EXT150" will be displayed.
  - To erase a wrong entry, press the CLEAR button.
5. Press the MEMORY button.
6. ● To advance to the next jack number, press the NEXT button.
  - To return to the previous jack number, press the PREV button.
  - To go to the desired jack number, press the SELECT button and then dial the jack number.

7. Repeat steps 4 to 6, to program the extension number on the other jack number.
8. To return to the initial program mode, press the END button.
  - The LCD will show the initial program mode, "SYS-PGM NO ?→".

### Conditions

- The extension number has been already programmed can not be entered. In case programmed extension number is the same as what was previously stored, when the MEMORY button is pressed, three beeps will be heard.
- When the extension number 125 have been already assigned to the jack number 25, for programming to assign the extension number 125 to the jack number 02, after programming to assign the other extension number (100 through 199) to the jack number 25, program to assign the extension number 125 to the jack number 02.

### Example:


Jack number 15 ..... Extension number 170  
 Jack number 30 ..... Extension number 180

02 NEXT 15 170 MEMORY SELECT  
30 180 MEMORY END

### Programming Table

See page 7-3.

## Operator Assignment

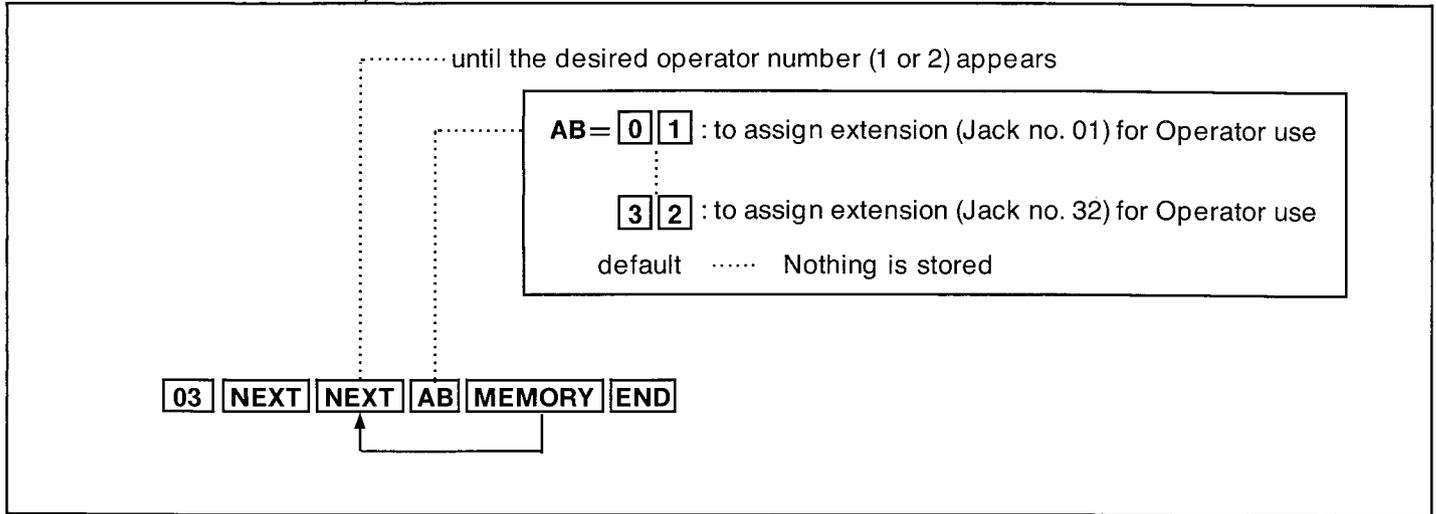

### Description

Up to 2 extension numbers can be selected as operator extensions for any extensions. The Message Waiting (on page 4-36) feature can be used by the extension number assigned as the operator. Also, 01 can be dialed to call operator 1, and 02 can be dialed to call operator 2. "CO Direct In Line Assignment (on page 3-54)" can be used to program all incoming calls to be answered by the operator.

### Programming

1. Dial (03).  
"Operator Ext" will be displayed.
2. Press the NEXT button.  
"Operate NO?→" will be displayed.
3. Press the NEXT button.  
"OPT 1 : Disable" will be displayed and "Disable" will blink.
4. Dial the jack number which is set the operator 1.
  - When you dial (01),  
"OPT 1 : Jack-01" will be displayed.

5. Press the MEMORY button.

The LCD will stop blinking.

6. Repeat steps 3 to 5, to program the jack number which is set the operator 2.
7. To return to the initial program mode, press the END button.


### Conditions

To clear the jack number which is set operator, press the CLEAR button at step 4.

### Programming Table

See page 7-3.

## Paired Telephone Assignment for DSS Console

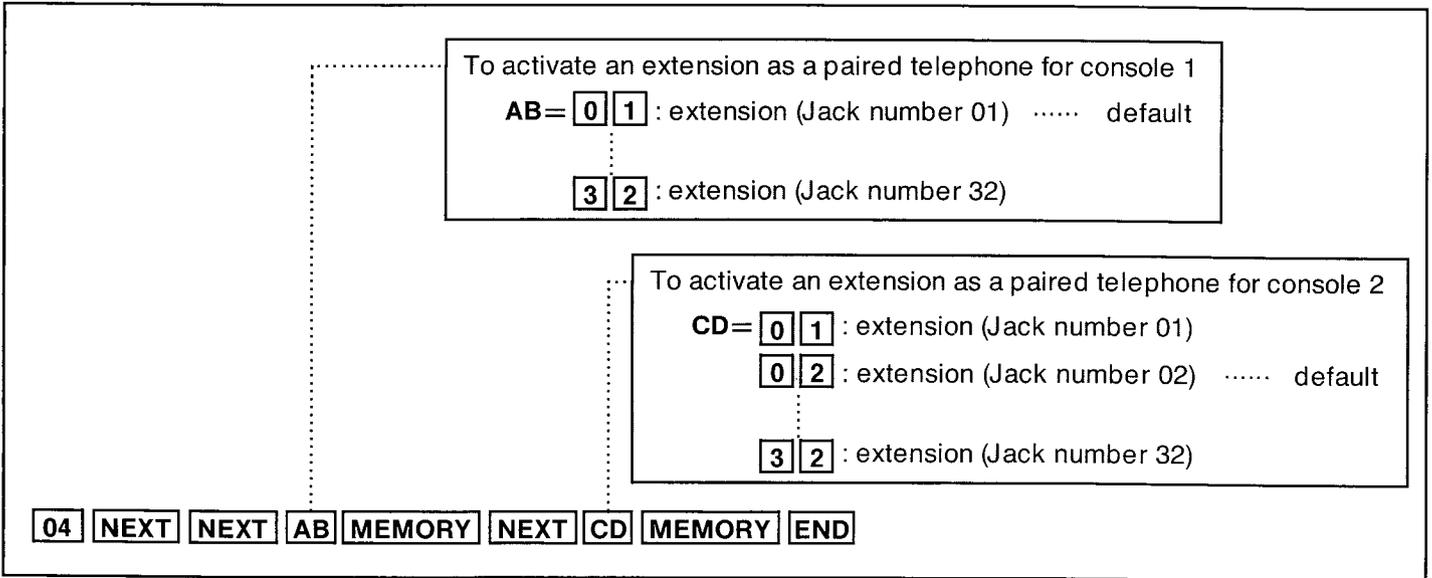

### Description

The extension number paired with the DSS Console (KX-T123240) must be assigned when the DSS Console is used. The jack number of the extension phone is programmed to identify the paired phone. Up to two DSS Consoles can be used for each 32 extension phones. When all in-coming calls on outside lines are set (using "CO Direct In Line Assignment" on page 3-54) to ring at the operator extension phone, assigning the DSS Console to the operator extension will make the operator's job much easier.

### Programming

1. Dial (04)  
"DSS Assign" will be displayed.
2. Press the NEXT button.  
"DSS NO ? →" will be displayed.
3. Press the NEXT button.  
"DSS 1 : Jack - 01" will be displayed and "01" will blink.
4. Dial the jack number which is paired with the console 1.
5. Press the MEMORY button.  
The LCD will stop blinking.
  - If console 2 is not connected, proceed to step 9.
6. Press the NEXT button.  
"DSS 2 : Jack - 02" will be displayed and "02" will blink.

7. Dial the jack number which is paired with the console 2.
8. Press the MEMORY button.  
The LCD will stop blinking.
9. To return to the initial program mode, press the END button.

### Conditions

- Up to two DSS console can be connected.
- The DSS console can not be connected in pair with a standard telephone.

### Example :

If Mr Jay's secretary has KX-T123230 at extension jack number 10 and is to use the DSS console (KX-T123240), the console should be connected to the modular jack (marked MJ1) of the DSS card (KX-T123241).  
(Paired extension is jack number 10.)


If Mr Brown's secretary has KX-T123220 at extension jack number 20 and is to use the DSS console (KX-T123240), the console should be connected to the modular jack (marked MJ2) of the DSS card (KX-T123241).  
(Paired extension is jack number 20.)

04 NEXT NEXT 10 MEMORY  
NEXT 20 MEMORY END

### Programming Table

See page 7-3.

## Automatic CO Hold Using DSS Button

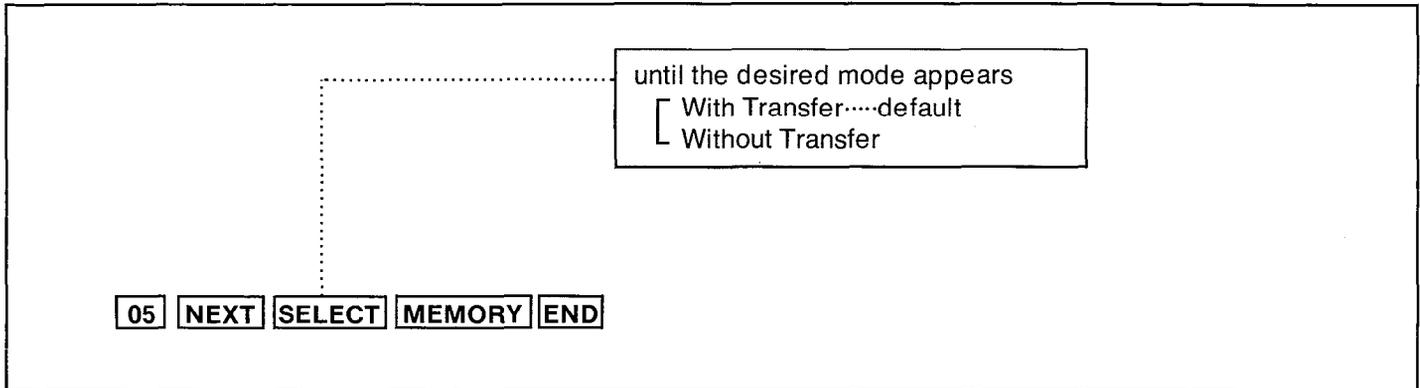

### Description

Outside calls can be transferred to any extension manually.

- While an extension paired with the DSS Console having a conversation with outside calls, “With Transfer” mode allows you to transfer outside call by only pressing the DSS button of the DSS Console.
- While an extension paired with the DSS Console having a conversation with outside calls, “Without Transfer” mode allows you to transfer outside call by pressing the TRANSFER button and then DSS button of the DSS Console.

### Programming Table


See page 7-3.

### Programming

1. Dial (05).  
“DSS Mode” will be displayed.
2. Press the NEXT button.  
“With Transfer” will be displayed and blink.
3. Repeat pressing the SELECT button to alternate between “With Transfer” and “Without Transfer” to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

## Day/Night Service Mode

### Switching of Service Mode

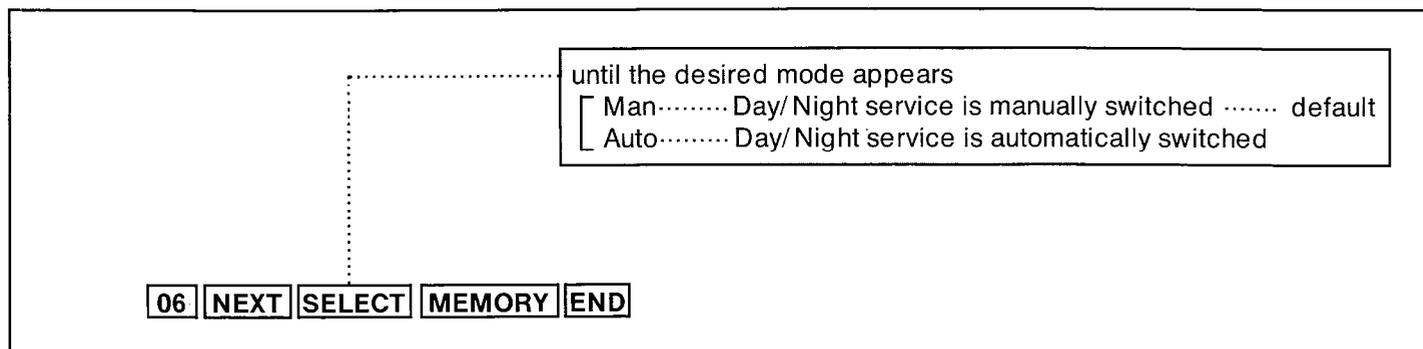

### Description

Allows Day/Night service to be selected manually or automatically.

In case of manual switching, refer to “Flexible Night Service” on page 4-37.

In case of automatic switching, set the “Starting Time (Day/Night Service mode)” on page 3-13.

The following features will be switched Day mode or Night mode.

- “Flexible Outward Dialing Assignment” on page 3-47.
- “Flexible Ringing Assignment” on page 3-49.
- “Delayed Ringing Assignment” on page 3-52.
- “CO Direct In Line Assignment” on page 3-54.
- “Service Class Assignment of Toll Restriction” on page 3-64.
- “Ringing Assignment from Doorphone” on page 3-75.

### Programming

1. Dial (06).  
“Day/Night Mode” will be displayed.
2. Press the NEXT button.  
“Mode Change : Man” will be displayed and “Man” will blink.
3. Press the SELECT button to alternate between “Man” and “Auto” to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

### Conditions

When the Switching of Service Mode (Day/Night Service Mode) is set to “Auto”, the present Day/Night Service mode will not change after you finish programming. To change the present mode, manual operation is required. After you selected the Starting time (Day/Night Service Mode) page 3-13, select the present Day/Night mode by “Flexible Night Service” on page 4-37.

### Programming Table

See page 7-4.

**Starting Time**

**AB=**  : to start at 1 o'clock for day service  
 : to start at 9 o'clock for day service ..... default  
  : to start at 12 o'clock for day service

**CD=**   : to start at 0 minute ..... default  
  : to start at 59 minutes

until the desired mode appears  
 AM ..... default  
 PM

**EF=**  : to start at 1 o'clock for night service  
 : to start at 5 o'clock for night service ..... default  
  : to start at 12 o'clock for night service

**GH=**   : to start at 0 minute ..... default  
  : to start at 59 minutes

until the desired mode appears  
 PM ..... default  
 AM

PROGRAMMING

## Description

If you select the automatic switching mode for day/night service, enter the starting time.

Refer to "Switching of Service Mode (Day/Night Service Mode)" on page 3-12.

## Programming

1. Dial (07).  
"Day/ Night Time" will be displayed.
2. Press the NEXT button.  
"Day: 9:00 AM" will be displayed as a default value and "9" will blink.
3. Enter the starting time for day service using 1 or 2 digits.
4. Press the "⇒" button.  
"00" will blink.
5. Enter the minutes using 2 digits.
6. Press the "⇒" button.  
"AM" will blink.
7. Press the SELECT button to alternate between "AM" and "PM" to select the correct setting.
8. Press the MEMORY button.  
The LCD will stop blinking.
9. Press the NEXT button.  
"Night : 5:00 PM" will be displayed as a default value and "5" will blink.
10. Enter the starting time for night service using 1 or 2 digits.
11. Press the "⇒" button.  
"00" will blink.
12. Enter the minutes using 2 digits.
13. Press the "⇒" button.  
"PM" will blink.
14. Press the SELECT button to alternate between "AM" and "PM" to select the correct setting.
15. Press the MEMORY button.  
The LCD will stop blinking.
16. To return to the initial program mode, press the END button.

## Conditions

- If the NEXT button is pressed at step 3 through 7, the display will advance to the "Night Time input" mode (step 9). The operations of step 3 through 7 will not be stored.
- If the PREV button is pressed at step 10 through 14, the display will return to the "day time input" mode (step 2). The operations of step 10 through 14 will not be stored.

### Example:

8:30 AM ...starting time for day plan

6:30 PM ...starting time for night plan


07	NEXT	8	⇒	30	⇒	MEMORY	NEXT
6	⇒	30	⇒	MEMORY	END		

## Programming Table

See page 7-4.

# Call Hunting

## Setting

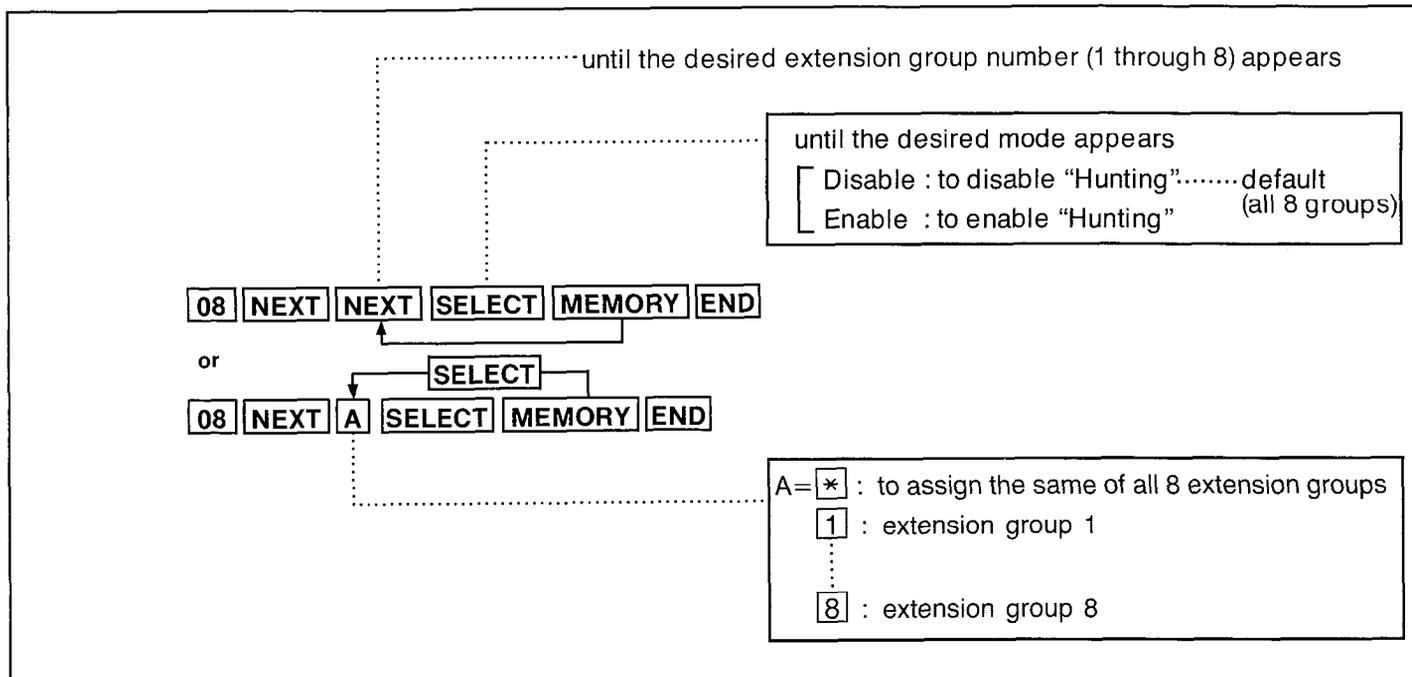

## Description

Enables programming to automatically locate an idle extension within the same extension group as the dialed extension when the dialed extension number is busy. Call Hunting is set by group units. "Extension Group Assignment" (on page 3-63) is used to specify which extensions belong to the each group.

## Programming

1. Dial (08).  
"Hunting Group" will be displayed.
2. Press the NEXT button.  
"Group NO ? → " will be displayed.
3. Press the NEXT button or dial the extension group number ( 1 through 8 ).  
"Group 1 : Disable" will be displayed and "Disable" will blink.
4. Press the SELECT button to alternate between "Disable" and "Enable".

5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next extension group number, press the NEXT button.  
● To return to the previous extension group number, press the PREV button.  
● To go to the desired extension group number, press the SELECT button and then dial the extension group number.
7. Repeat steps 4 to 6, to program the assignment of the other hunting groups.
8. To return to the initial program mode, press the END button.


## Conditions

- When you dial "\*" instead of pressing the NEXT button at step 3, in case all of 8 groups have been programmed to "Disable", "CO \*: Disable" will be displayed. In case each of 8 groups has been programmed either "Disable" or "Enable", "CO \*: Confused" will be displayed.

## Programming Table

See page 7-4.

## Hunting Type

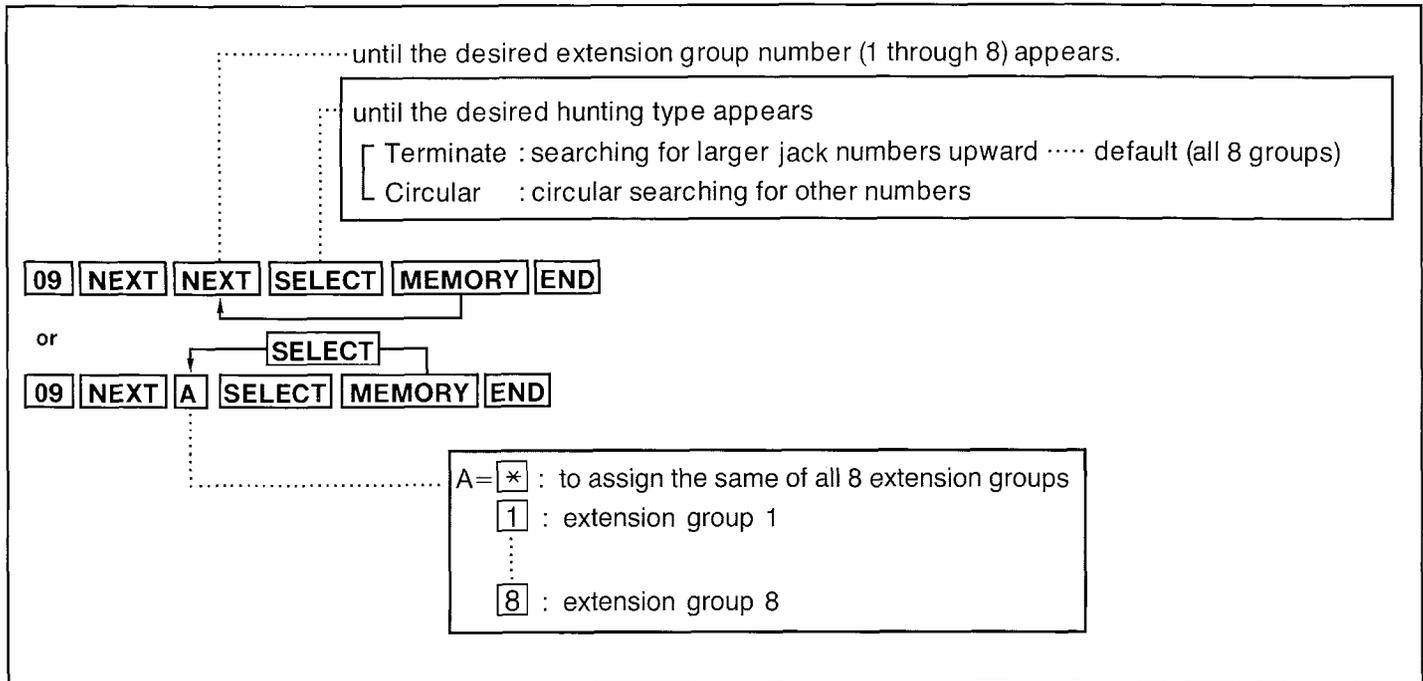

### Discription

Specifies the order in which idle extensions are searched when "Call Hunting" is used.

The "Terminate Mode" searches for idle extensions with a higher order extension than the jack number of the dialed extension, and terminates when the search reaches the highest jack number of extension in the same group. If all higher order numbers are busy, a busy tone will be heard.

The "Circular Mode" searches for any idle extension in the same group.

If all extensions are busy, a busy tone will be heard.

The "Setting (Call Hunting)" on page 3-15 must be set to "Enable" mode for Hunting Type to be used.

### Programming

1. Dial (09).  
"Hunting Type" will be displayed.
2. Press the NEXT button.  
"Group NO ?→" will be displayed.
3. Press the NEXT button or dial the extension group number (1 through 8).  
"Group 1 : Terminate" will be displayed and "Terminate" will blink.
4. Press the SELECT button to alternate between "Terminate" and "Circular".
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next extension group number, press the NEXT button.  
● To return to the previous extension group number, press the PREV button.  
● To go to the desired extension group number, press the SELECT button and then dial the extension group number.
7. Repeat steps 4 to 6, to program the hunting Type of the other groups.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-4.

## Toll Restriction

The selective use of this feature permits restricted dialing to specific stations. A Class of Service can be assigned to a particular station which prohibits or limits that station's dialing ability. The following are the available eight Classes of Service.

	Service Class							
	1	2	3	4	5	6	7	8
operator calls	A	D	D	D	D	D	D	D
international calls	A	D	D	D	D	D	D	D
toll calls	A	A	E	D	D	D	D	D
local calls(charged)	A	A	A	A	F	D	D	D
local calls	A	A	A	A	A	A	G	D

A : Allow

D : Deny

E (Service Class 3) : Only area code selected can be dialed.


F (Service Class 5) : Only Exchange code selected can be dialed.

G (Service Class 7) : Only Exchange code selected cannot be dialed.

The following feature should be set.


- "Area Type Selection" on page 3-18.
- "CO Operator Call-Boundary Class" on page 3-19.
- "Toll Restriction of Speed Dialing" on page 3-20.
- "Exchange Code Selection" on page 3-21.
- "Area Code Entry For Class 3" on page 3-22.
- "Exchange Code Entry For Class 5" on page 3-23.
- "Exchange Code Entry For Class 7" on page 3-24.
- "Service Class Assignment of Toll Restriction" on page 3-64.

## Area Type Selection

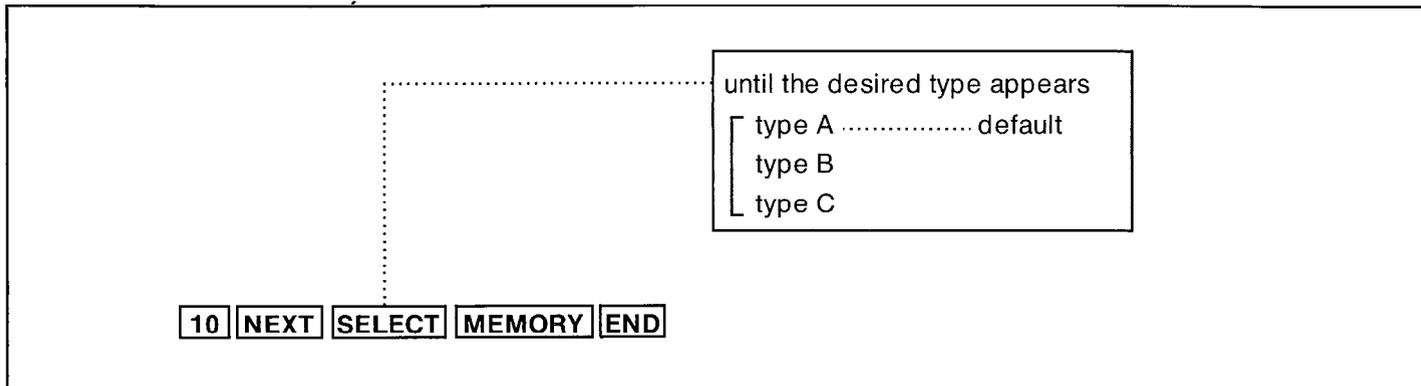

### Description

Area types specific to local telephone numbers can be selected for toll restrictions. There are three area types available as shown below.

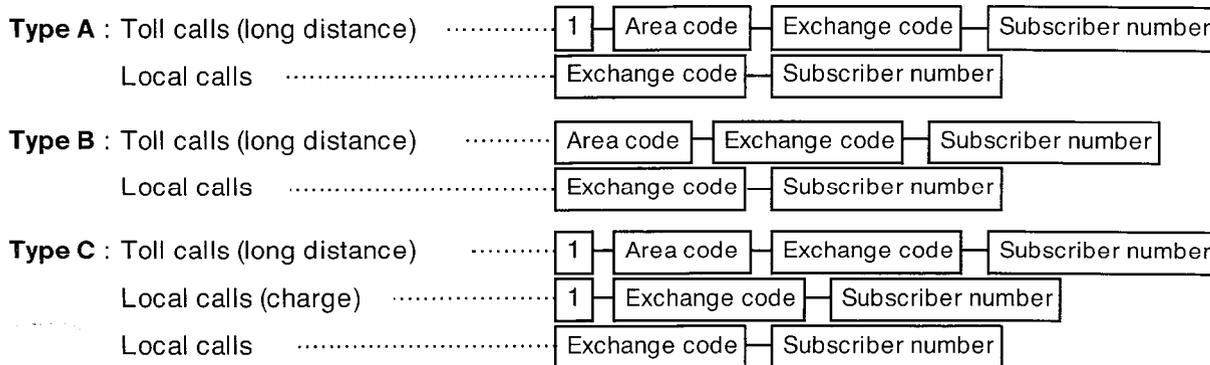

“Service Class Assignment of Toll Restriction” (on page 3-64) should be programmed.

When area type B or C is selected, the selected Exchange Code must be entered using the “Exchange Code Selection” (on page 3-21) programming.


### Programming

1. Dial (10).  
“Area Type” will be displayed.
2. Press the NEXT button.  
“Area Type - A” will be displayed and the “A” will blink.
3. Repeat pressing the SELECT button until the desired type (A, B, C) is displayed.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

### Programming Table

See page 7-4.

## Exchange Code Selection

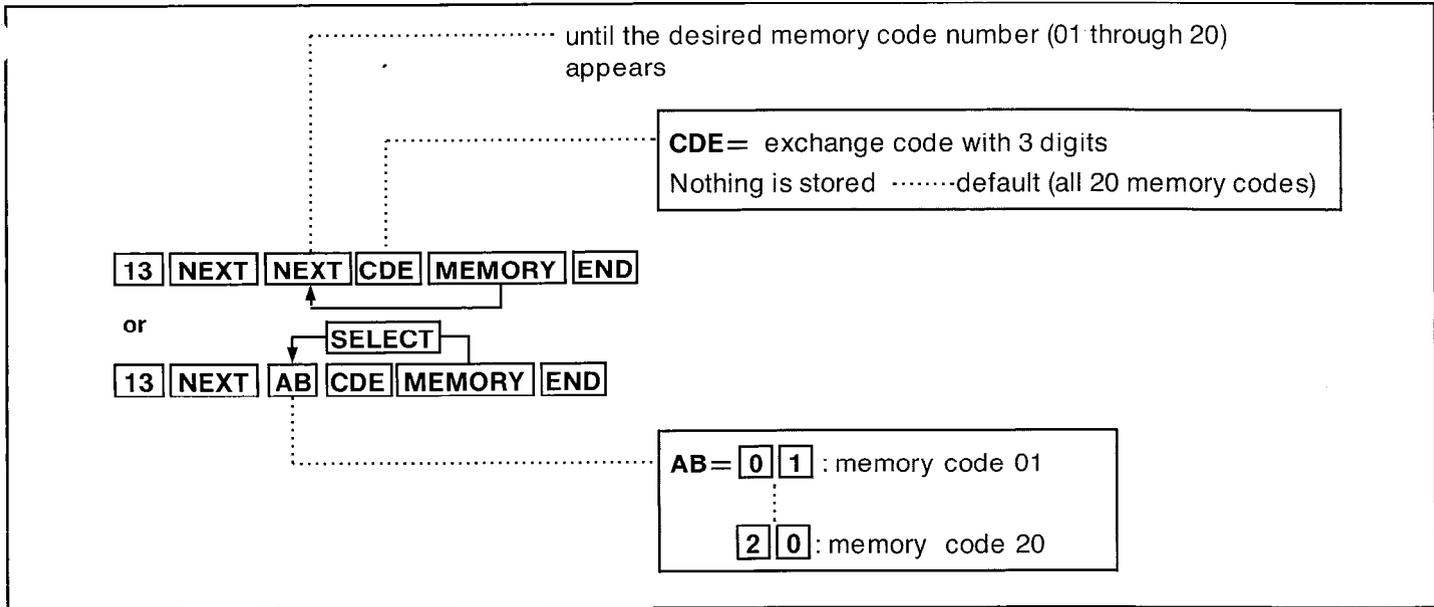


### Description


The exchange code and area code usually differ for local and non-local calls, but in some circumstances an area code may be the same as a local exchange code. These are important when Type B or Type C is selected with the "Area Type Selection" (on page 3-18) programming.

After Type B or Type C is selected with the "Area Type Selection" (on page 3-18) programming, it is therefore necessary to register these Exchange Codes to enable dialing of these numbers.

Local call Exchange Codes when Type B is selected

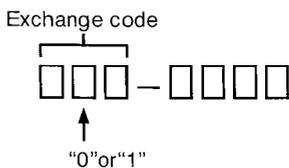

Local call (charge) Exchange Codes when Type C is selected

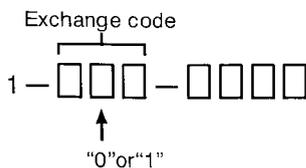

A maximum 20 Exchange Codes can be registered.

### Programming

1. Dial (13).  
"Exc. Local Code" will be displayed.
2. Press the NEXT button.  
"Local NO ? →" will be displayed.
3. Dial the memory code number (01 through 20) or press the NEXT button.

#### Example:

When dialing (01) or pressing the NEXT button.


- The LCD will show "Local 01: ..." when nothing is stored in memory code number "01".
- When area code 212 has been stored, "Local 01 : 212" will be displayed.

4. Dial the local code, using 3 digits.
  - To erase a wrong entry, press the CLEAR button.
5. Press the MEMORY button.
  - The memory indicator will be lit.
6. ● To advance to the next memory code number, press the NEXT button.
  - To return to the previous memory code number, press the PREV button.
  - To go to the desired memory code number, press the SELECT button and then dial the memory code number.
7. Repeat steps 4 to 6.
8. To return to the initial program mode, press the END button.

### Programming Table.

See page 7-5.

## Area Code Entry for Class 3

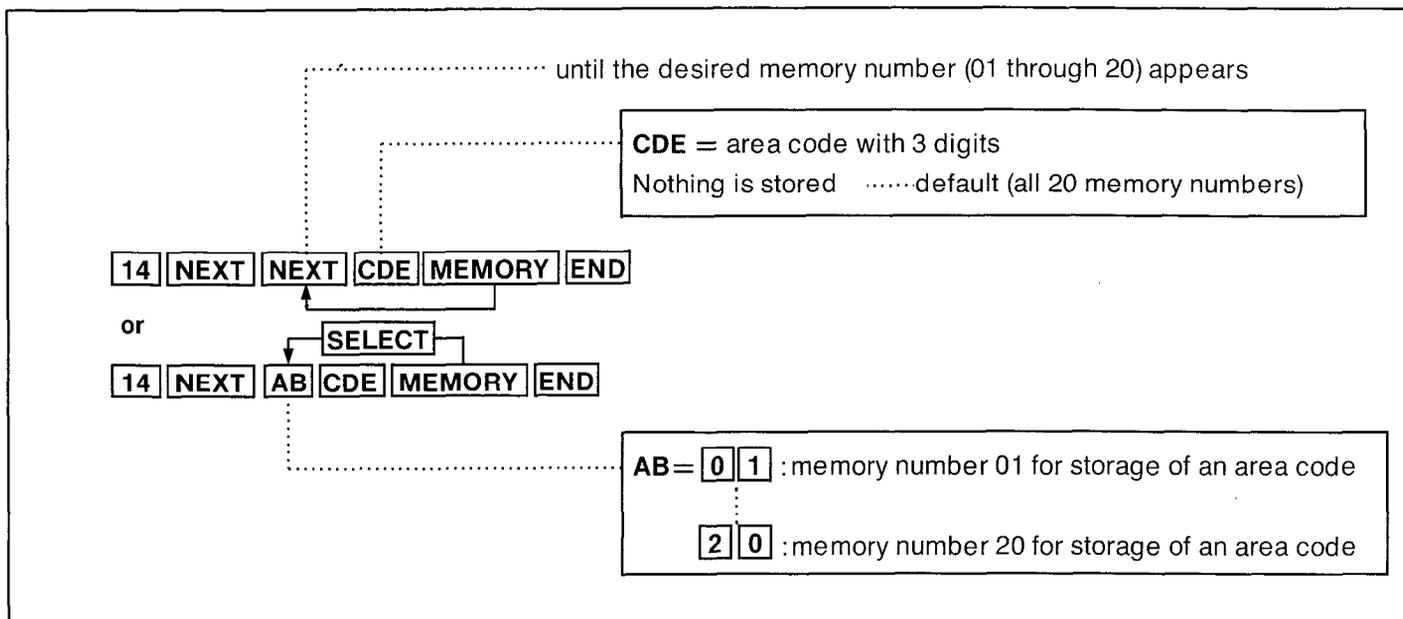

### Description

For Service Class 3 (see "Toll Restriction" on page 3-17), up to 20 area codes can be selected for use in toll dialing.

All area codes except those entered will be denied.

All the extensions that are programmed for Service Class Selections 3 are assigned to the same area code selection plan.

### Programming


1. Dial (14).  
"Cls-3 Area Code" will be displayed.
2. Press the NEXT button.  
"Area NO ? →" will be displayed.
3. Dial the memory number (01 through 20) or press the NEXT button.  
**Example:**  
When dialing (01) or pressing the NEXT button.
  - The LCD will show "Area-01 : ..." when nothing is stored in memory number "01".
 When area code 212 has been stored, "Area - 01 : 212" will be displayed.

4. Dial the area code, using 3 digits.
  - To erase a wrong entry, press the CLEAR button.
5. Press the MEMORY button.
  - The memory indicator will be lit.
6. ● To advance to the next memory number, press the NEXT button.
  - To return to the previous memory number, press the PREV button.
  - To go to the desired memory number, press the SELECT button and then dial the memory number.
7. Repeat steps 4 to 6.
8. To return to the initial program mode, press the END button.

### Programming Table.

See page 7-5.

## CO Operator Call - Boundary Class

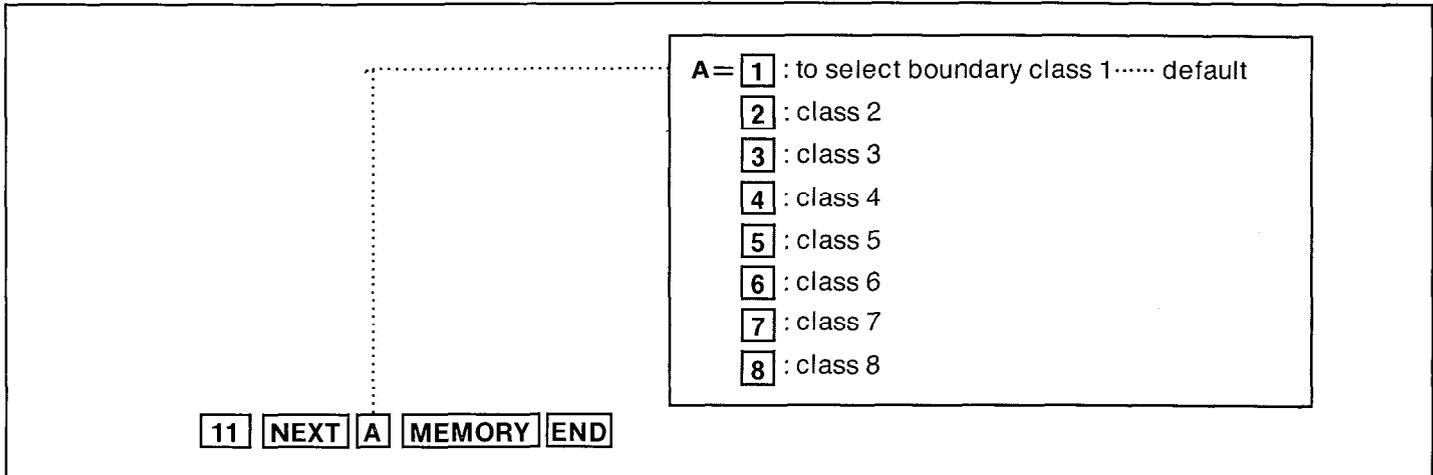

### Description

“Toll Restriction”, if it is programmed, prohibits CO Operator Calls. However, the desired extensions can be permitted to call to CO Operator by programming a boundary number of service class.

CO Operator Calls are allowed at all the extension from service class 1 to the same service class number as the programmed boundary number, but are prohibited at the other extensions.

Example : If Boundary Class 4 is set for All extension numbers for which service classes 1 to 4 have been assigned then CO operator calls are allowed, but extensions assigned service class 5 to 8 will be prohibited from placing CO operator calls. (See the table below.)

### Programming

1. Dial (11).  
“Operator Class” will be displayed.
2. Press the NEXT button.  
“Boundary Class-1” will be displayed and “1” will blink.
3. Dial the boundary class number (1 through 8).
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

### Programming table

See page 7-4.


		Boundary Class Number							
		1	2	3	4	5	6	7	8
Service Class of Toll Restriction	1	A	A	A	A	A	A	A	A
	2	D	A	A	A	A	A	A	A
	3	D	D	A	A	A	A	A	A
	4	D	D	D	A	A	A	A	A
	5	D	D	D	D	A	A	A	A
	6	D	D	D	D	D	A	A	A
	7	D	D	D	D	D	D	A	A
	8	D	D	D	D	D	D	D	A

A : CO Operator Calls are allowed.

D : CO Operator Calls are denied.

See “Service Class Assignment of Toll Restriction” on page 3-64.

## Toll Restriction of Speed Dialing

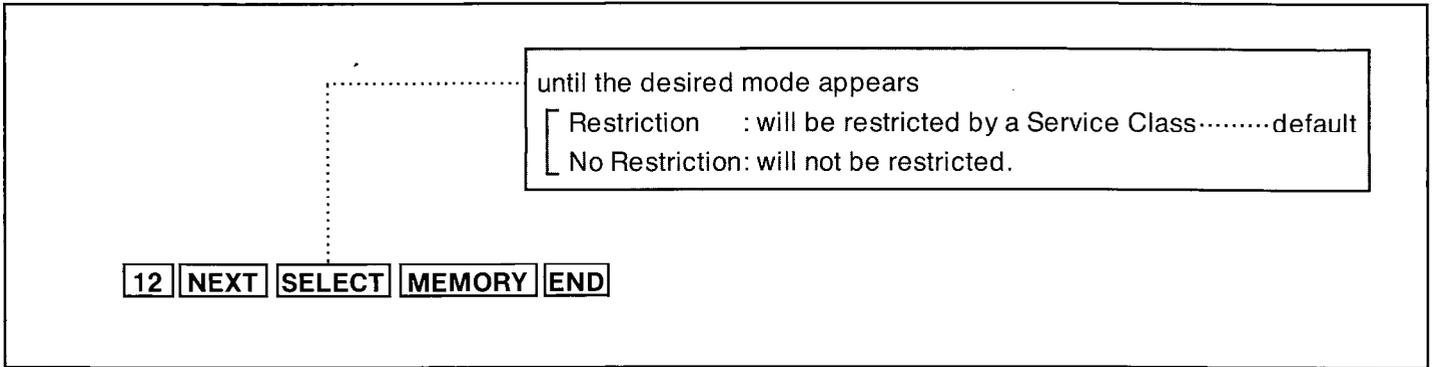

### Description

Through programming, Toll restrictions (service classes 1 through 8) set for each extension can be applied to speed dialing, too.

In the "Restriction" mode, Speed dialing is restricted by the Service Class.

In the "No Restriction" mode, Speed dialing is not restricted by the Service Class.


### Programming Table

See page 7-5.

### Programming

1. Dial (12).  
"Restrct of Speed" will be displayed.
2. Press the NEXT button.  
"Restriction" will be displayed and blink.
3. Press the SELECT button, to alternate between "Restriction" and "No Restriction" to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

## Exchange Code Entry for Class 5

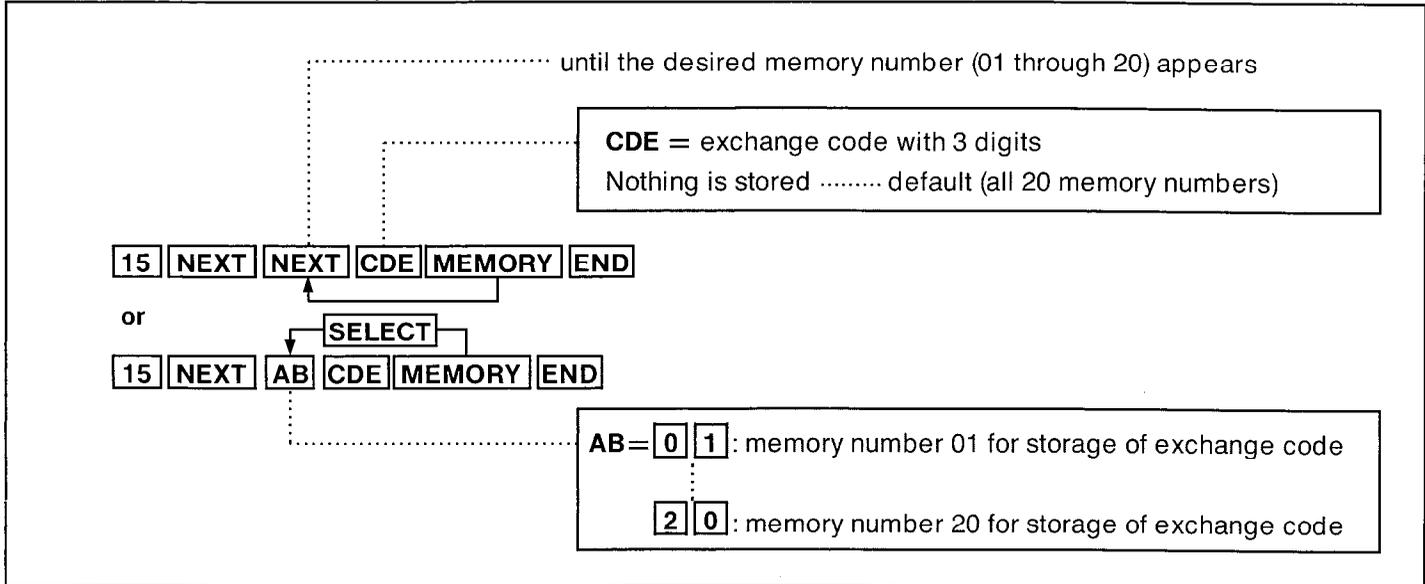

### Description

For Service Class 5 (See "Toll Restriction" on page 3-17), up to 20 exchange codes can be selected for use in local dialing (charged).

All exchange codes except those entered will be denied.

All extensions programmed for Service Class Selections 5 are assigned to the same exchange code selection plan.

### Programming

1. Dial (15).  
"Cls-5 Local Code" will be displayed.
2. Press the NEXT button.  
"Local NO ? →" will be displayed.
3. Dial the memory number (01 through 20) or press the NEXT button.

#### Example:

When dialing (01) or pressing the NEXT button.

- The LCD will show "Local 01 : ..." when nothing is stored in memory number "01".


When exchange code 392 has been stored, "Local 01 : 392" will be displayed.

4. Dial the exchange code, using 3 digits.
  - To erase a wrong entry, press the CLEAR button.
5. Press the MEMORY button.
  - The memory indicator will be lit.
6.
  - To advance to the next memory number, press the NEXT button.
  - To return to the previous memory number, press the PREV button.
  - To go to the desired memory number, press the SELECT button and then dial the memory number.
7. Repeat steps 4 to 6.
8. To return to the initial program mode, press the END button.

### Programming Table.

See page 7-5.

## Exchange Code Entry for Class 7

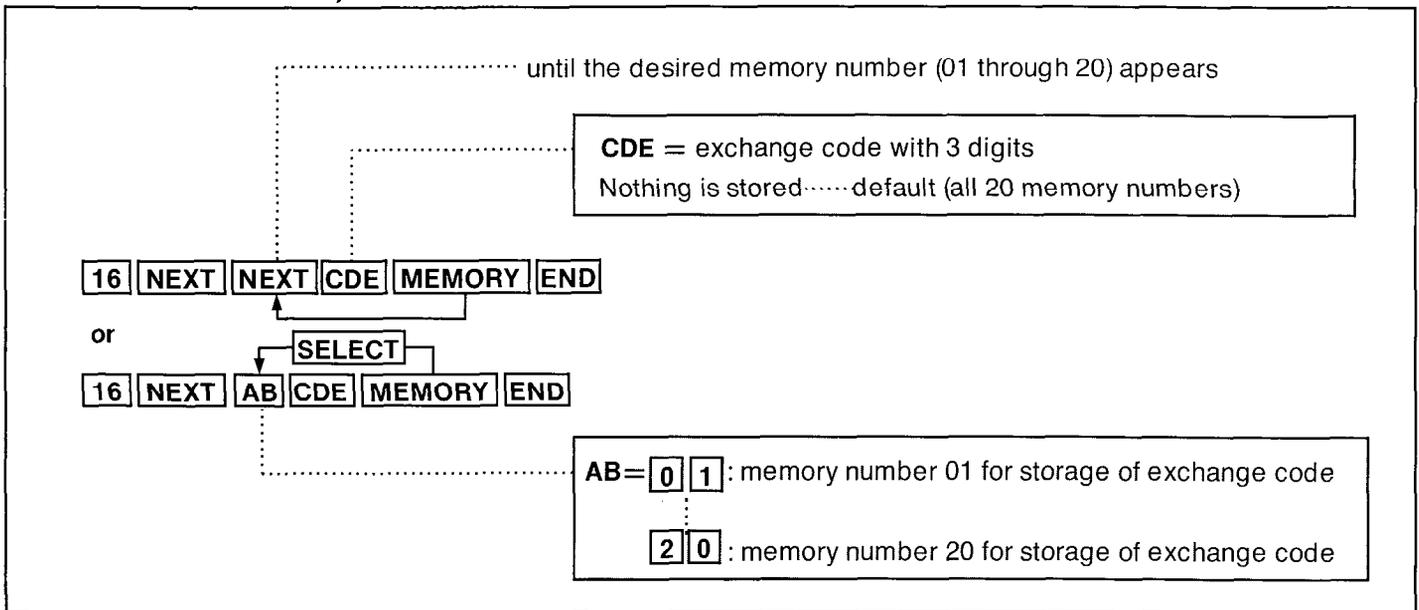

### Description

For Service Class 7 (See "Toll Restriction" on page 3-17), up to 20 exchange codes can be selected for use in local dialing. Exchange codes programmed will be denied. All the extensions that are programmed for Service Class Selections 7 are assigned to the same exchange code selection plan.

### Programming

1. Dial (16).  
"Cls-7 Local Code" will be displayed.
2. Press the NEXT button.  
"Local NO ? →" will be displayed.
3. Dial the memory number (01 through 20) or press the NEXT button.
4. Dial the exchange code, using 3 digits.
  - To erase a wrong entry, press the CLEAR button.
5. Press the MEMORY button.
  - The memory indicator will be lit.
6. ● To advance to the next memory number, press the NEXT button.  
● To return to the previous memory number, press the PREV button.  
● To go to the desired memory number, press the SELECT button and then dial the memory number.
7. Repeat steps 4 to 6.
8. To return to the initial program mode, press the END button.

#### Example:

When dialing (01) or pressing the NEXT button.

- The LCD will show "Local 01 : ..." when nothing is stored in memory number "01".

When exchange code 392 has been stored, "Local 01 : 392" will be displayed.

### Programming Table.

See page 7-6.

## Hold Time Reminder

17 NEXT A MEMORY END

A= 1 : to sound after 1 minute  
2 : after 2 minutes  
3 : after 3 minutes .....default  
4 : after 4 minutes  
5 : after 5 minutes  
6 : after 6 minutes  
7 : after 7 minutes  
8 : after 8 minutes  
9 : after 9 minutes

### Description

An alarm tone indication will be heard at the holding extension to remind the user that he still has a call on hold.

The reminder will sound after 3 minutes but can be changed.

There are 9 choices ranging from (1) minute to (9).

An alarm tone is heard from the built-in speaker of the proprietary telephone and the handset receiver of the standard telephone.

See "List of Tones" on page 6-6.

4. Press the MEMORY button.

The LCD will stop blinking.

5. To return to the initial program mode, press the END button.

### Conditions

The hold time reminder is activated, even if the hold recall time set is programmed to "Disable".

### Example:

4 minutes = 17 NEXT 4 MEMORY END

### Programming

1. Dial (17).

"Auto Hold Alarm" will be displayed.

2. Press the NEXT button.


"Time: 3 min" will be displayed and "3" will blink.

3. Dial the time number (1 through 9).

### Programming Table

See page 7-6.

## Hold Recall Time Set

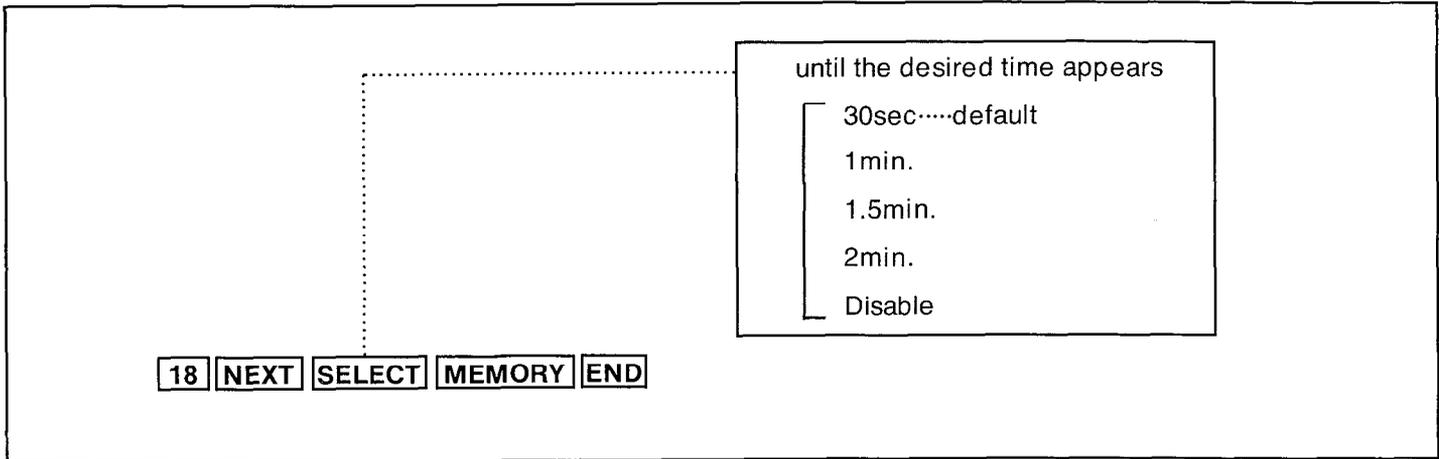

### Description

When the handset of the holding extension is replaced back on call, you may have the automatic hold recall after the desired time elapses.

The hold recall time set can be removed or added at the customer's request.

### Example:

1.5 minutes = 18 NEXT SELECT SELECT  
MEMORY END


### Programming Table

See page 7-6.

### Programming

1. Dial (18).  
"Hold Recall Time" will be displayed.
2. Press the NEXT button.  
"Time: 30 sec" will be displayed and "30 sec" will blink.
3. Repeat pressing the SELECT button until the desired time (30 sec, 1 min, 1.5 min, 2 min, Disable) is displayed.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

## Transfer Recall Time

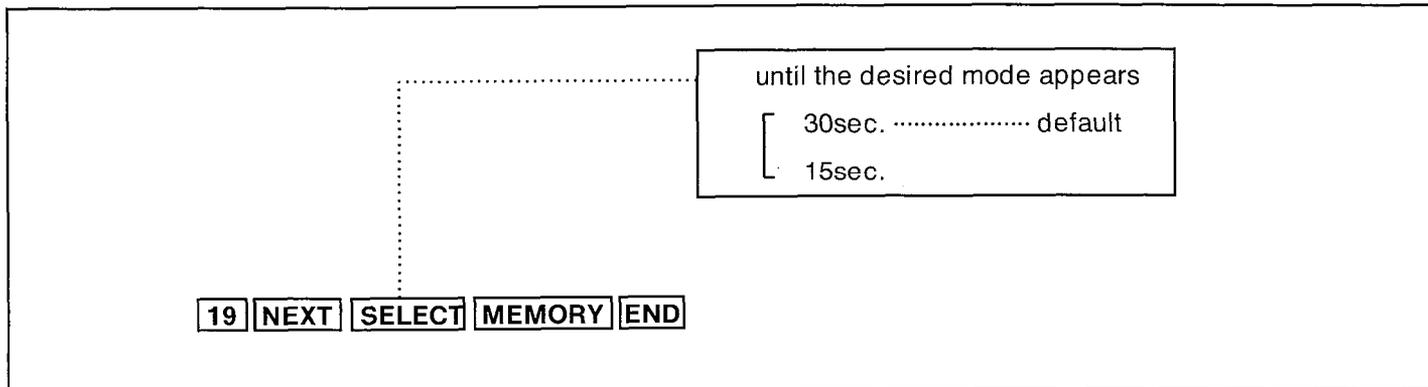

### Description

If a call is transferred to an extension, and the other extension does not answer the transferred call within 30 seconds, the call will return to you. The time may be changed to 15 seconds. Refer to "Call Transfer-To Extension" on page 4-18.


### Programming

1. Dial (19).  
"Transfer Recall" will be displayed.
2. Press NEXT button.  
"Time: 30 sec" will be displayed and the "30" will blink.
3. Press the SELECT button to alternate between "15 sec" and "30 sec" to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

### Programming Table

See page 7-6.

## Call Forwarding Starting Time

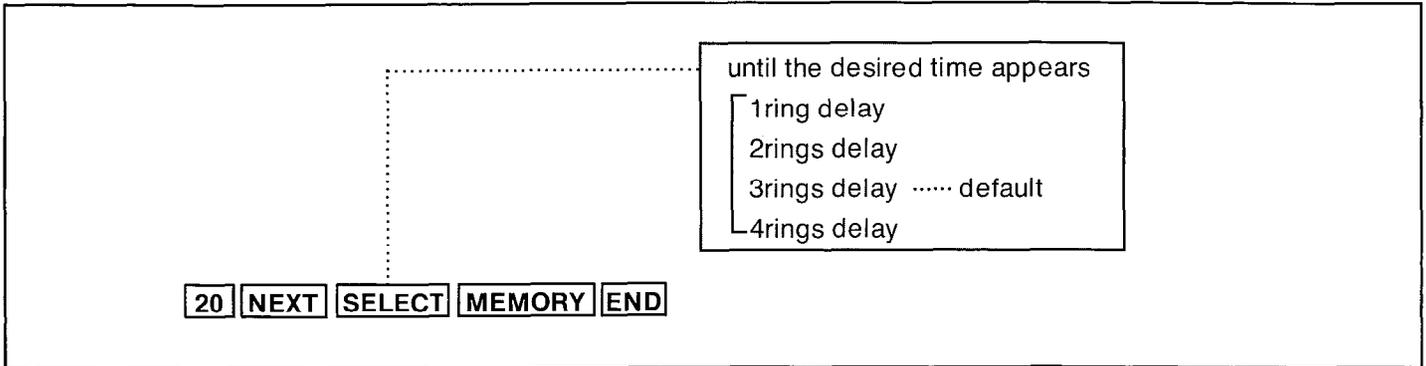

### Description

Enables programming the call forwarding delayed start time (after 1, 2, 3, or 4 rings) in case of not receiving the call when the "Call Forwarding-Busy or No Answer" (on page 4-26) feature is set.


### Programming

1. Dial (20).  
"Call FWD Delay" will be displayed.
2. Press the NEXT button.  
"3 rings delay" will be displayed and will blink.
3. Repeat pressing the SELECT button until the desired time is displayed.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

### Programming Table

See page 7-6.

## Pickup Dial Delay Time

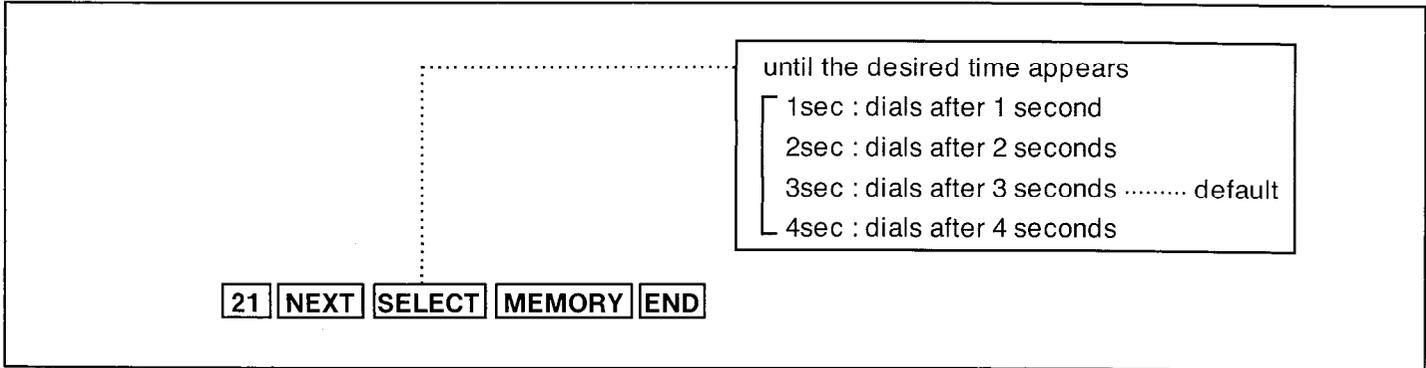

### Description

Enables programming of the pickup dial (on page 5-17) start time (the delay between picking up the handset and automatic dialing). The default is 3 sec., Which can be changed to 1, 2, or 4 sec.


### Programming Table

See page 7-6.

### Programming

1. Dial (21).  
"Pickup Dial Time" will be displayed.
2. Press the NEXT button.  
"PUD Time : 3sec" will be displayed and "3" will blink.
3. Repeat Pressing the SELECT button until the desired time ( 1sec, 2sec, 3sec, 4sec ) is displayed.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

## CO-to-CO Duration Time Limit

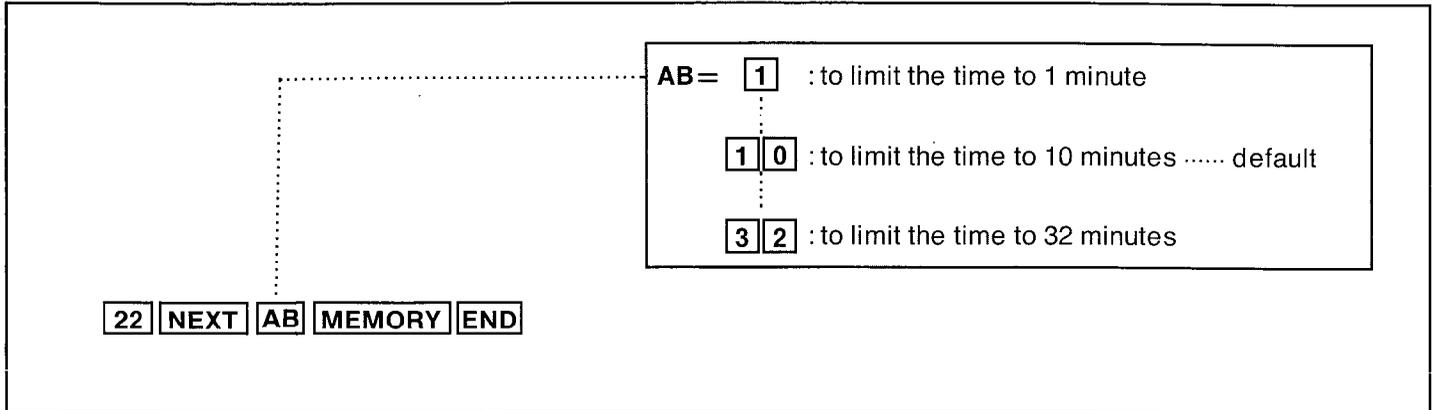

### Description

Enable limiting of the time any outside line can be used when “Call Transfer-To Outside Line” (on page 4-19) or “Call Forwarding-To Outside Line” (on page 4-28) is used to forward a outside call to an outside line.

The default time is 10 min., but this can be changed from 1 minute through 32 minutes.

### Conditions

- To erase a wrong entry, press the CLEAR button.

### Programming Table

See page 7-7.

### Programming

1. Dial (22).  
“CO-CO Dur. Limit” will be displayed.
2. Press the NEXT button.  
“Time : 10 min” will be displayed and “10” will blink.
3. Enter the duration limit with 1 or 2 digits (1 through 32).
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

## Station Message Detail Recording (SMDR)

### Description

SMDR is a cost saving feature that records on a printer a record of all incoming and outgoing calls. The following information is provided on the printout. The SMDR will print out the security code of the long distance service. ( MCI, SPRINT etc. )

### NOTE :

When plugging a printer into the KX-T123210 make sure that the printer power is off. Select the RS-232C Communication Parameters, SMDR Parameters, Incoming/Outgoing Call Selection for printing, Secret Speed Dial/One Touch Dial Printing, System Data Dump, Duration Time Count Start Mode and Account Code Input Mode for proper operation.

### Example of print

Date	Time	EXT.	CO	Dial Number	Duration	Code
4/ 20/ 87	8:00AM	101	06	1-201-234-5678	00:00'30"	0123
..... year ..... day ..... month		..... ..... .....	..... ..... ..... .....	..... ..... ..... .....	..... ..... ..... .....	..... ..... .....
			..... Extension number	..... called party	..... second ..... minute ..... hour	..... account code

- When you have an incoming call, the printer will print <incoming> .
- When “=” appears in the Dial Number, the previous number of “=” indicates the line access number of the Host PBX (See page 3-45).
- When “\*” appears in front of the Time, this means the time that the call is transferred.

■ The following features should be set.

- “RS-232C Communication Parameters” on page 3-32.
- “SMDR Parameters” on page 3-35.
- “Incoming/ Outgoing Call Selection for printing” on page 3-36.
- “Secret Speed Dial/One Touch Dial Printing” on page 3-36.
- “System Data Dump” on page 3-37.
- “Duration Time Count Start Mode” on page 3-40.
- “Account Code Input Mode” on page 3-70.

# RS-232C Communication Parameters

(Carriage return for a new line)

until the desired code appears

- [ CR+LF..... default
- [ CR

23 NEXT SELECT MEMORY

(Baud rate)

until the desired baud rate appears

- [ 110B
- [ 150B
- [ 300B
- [ 600B
- [ 1200B ..... default
- [ 2400B
- [ 4800B
- [ 9600B

NEXT SELECT MEMORY

(Word length)

until the desired length appears

- [ 7bits ..... default
- [ 8bits

NEXT SELECT MEMORY

(Parity)

until the desired mode appears

- [ None
- [ Mark ..... default
- [ Space
- [ Even
- [ Odd

NEXT SELECT MEMORY

(Stop bit length)

until the desired mode appears

- [ 1 bit ..... default
- [ 2 bits

NEXT SELECT MEMORY END

### Carriage return for a new line

A new line code indicates what type of code is needed for the print head on a printer to move the first character position on the next line.

CR+LF	when "CR+LF" is required from a printer.
CR	when "CR" is required from a printer.

CR=Carriage Return  
LF=Line Feed.

### Baud rate

A baud rate code indicates the data transmission speed from the system to a printer.

110 B	when 110 baud is required.
150 B	when 150 baud is required.
300 B	when 300 baud is required.
600 B	when 600 baud is required.
1200 B	when 1200 baud is required.
2400 B	when 2400 baud is required.
4800 B	when 4800 baud is required.
9600 B	when 9600 baud is required.

### Parity

A parity code indicates what type of parity is used to detect an error in a string of bits composing a character.

None	when an error checking function is not required from a printer.
Mark	when a Mark is required from a printer.
Space	when a Space is required from a printer.
Even	when an Even is required from a printer.
Odd	when an Odd is required from a printer.

### Word length

A word length code indicates how many bits compose a character.

7 bits	when 7 bits are required.
8 bits	when 8 bits are required.

### Stop bit length

A stop bit length code indicates the end of a bit string which composes a character.

1 bit	when one bit is required for end detection.
2 bits	when two bits are required for end detection.

The default value is the same as that of the Panasonic data terminal, KX-D4985, KX-D4910D, KX-D4911, KX-D4920, etc, except baud rate.

## Programming

1. Dial (23).  
"RS232C Parameter" will be displayed.
2. Press the NEXT button.  
"NI-Code : CR+LF" will be displayed and "CR+LF" will blink.
3. Press the SELECT button to alternate between "CR+LF" and "CR" to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. Press the NEXT button.  
"Baud Rate : 1200B" will be displayed and the "1200B" will blink.
6. Repeat pressing the SELECT button until the desired baud rate is displayed.
7. Press the MEMORY button.  
The LCD will stop blinking.
8. Press the NEXT button.  
"Word Lengt : 7bits" will be displayed and the "7bits" will blink.
9. Press the SELECT button to alternate between "7bits" and "8bits" to select the desired mode.
10. Press the MEMORY button.  
The LCD will stop blinking.
11. Press the NEXT button.  
"Parity : Mark" will be displayed and the "Mark" will blink.
12. Repeat pressing the SELECT button until the desired parity code is displayed.
13. Press the MEMORY button.  
The LCD will stop blinking.
14. Press the NEXT button.  
"Stop Bit : 1bit" will be displayed and the "1bit" will blink.
15. Press the SELECT button to alternate between "1bit" and "2bits" to select the desired mode.
16. Press the MEMORY button.  
The LCD will stop blinking.
17. To return to the initial program mode, press the END button.

## Programming Table

See page 7-7.


### Conditions

- To return to the previous mode, press the PREV button instead of the NEXT button.
- The following combinations are disallowed.

parity	word length	stop bit length
mark	8	2
space	8	1
space	8	2

If any of the above disallowed combinations are selected, Warning tone will be heard. Press the NEXT button and then repeat the procedure of programming.

## SMDR Parameters

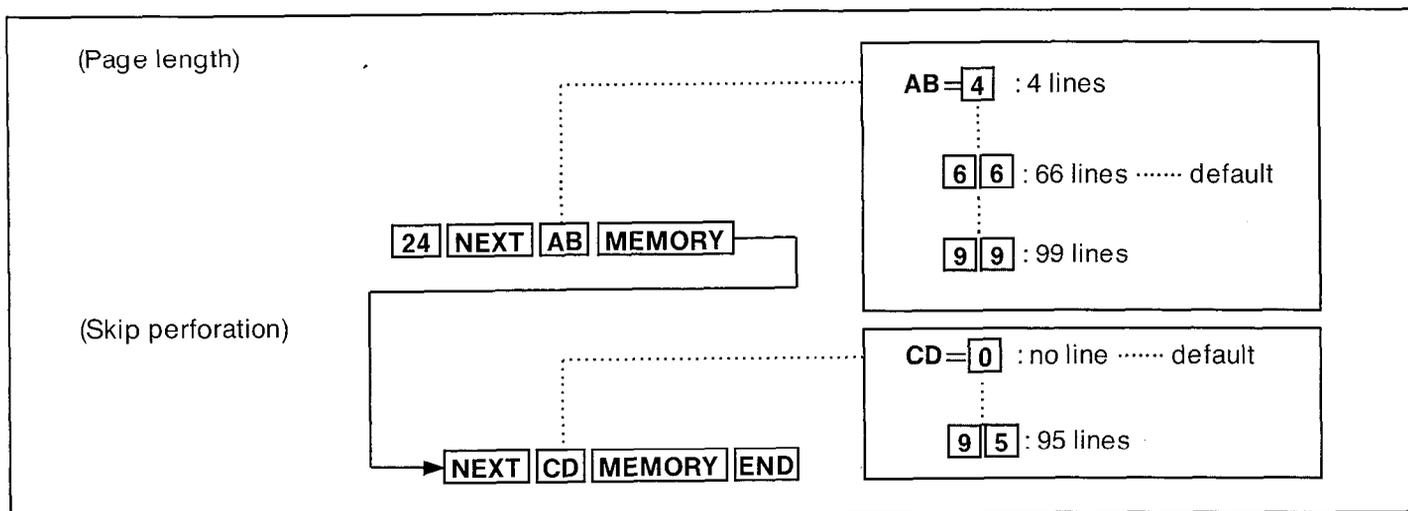

### Page length


The page length may be selected to position a title and data on each page.

A page length code indicates the number of lines per page.

A title will be printed on the first 3 lines of each page.

4	4 lines per page
...	...
99	99 lines per page

### STANDARD CONTINUOUS PAPER(11 inches)

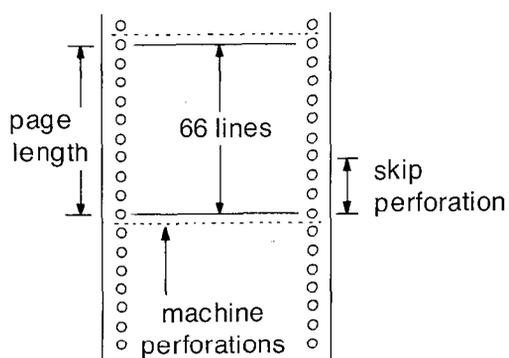

To print data, page length must be longer than skip perforation by 4 or more lines.

### Skip perforation

The skip perforation code indicates the number of lines to be skipped. When the print head reaches the line designated, the print head moves to the top position of the next page.

0	print head does not skip.
1	print head skips the last line.
2	print head skips the last 2 lines.
...	...
95	print head skips the last 95 lines.


### Programming

1. Dial (24).  
"SMDR Parameter" will be displayed.
2. Press the NEXT button.  
"Page Length : 66" will be displayed and the "66" will blink.
3. Dial (4 through 99) for the page length entry.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. Press the NEXT button.  
"Skip Perf : 0" will be displayed and the "0" will blink.
6. Dial (0 through 95) for the skip perforation code entry.
7. Press the MEMORY button.  
The LCD will stop blinking.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-8.

## Incoming / Outgoing Call Selection for printing

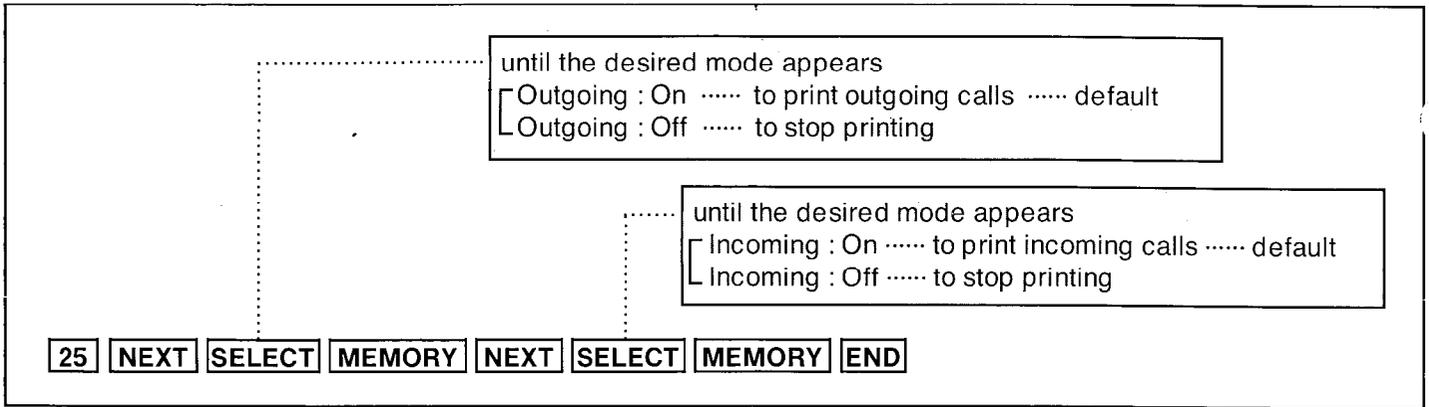

### Description

It is possible to print either outgoing outside calls, incoming outside calls or both.


### Programming

1. Dial (25).  
"Duration Log" will be displayed.
2. Press the NEXT button.  
"Outgoing : On" will be displayed and the "On" will blink.
3. Press the SELECT button to alternate between the "On" and "Off" to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. Press the NEXT button.  
"Incoming : On" will be displayed and the "On" will blink.
6. Press the SELECT button to alternate between "On" and "Off" to select the desired mode.
7. Press the MEMORY button.  
The LCD will stop blinking.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-8.

## Secret Speed Dial / One Touch Dial Printing

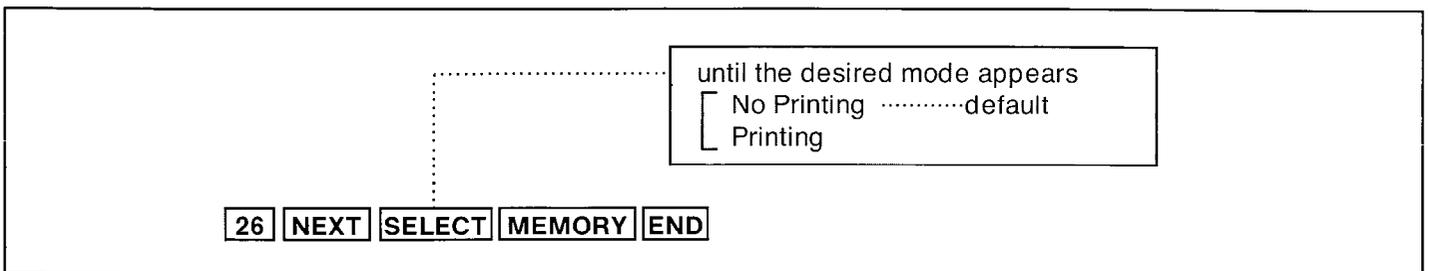

### Description

Enables programming to print out secret dialing numbers, even though these secret numbers are not displayed on the LCD during speed dialing ("System Speed Dialing Entry" on page 3-5) or one-touch dialing (on page 4-4) are used.

### Programming


1. Dial (26)  
"Secret Printing" will be displayed.
2. Press the NEXT button.  
"No Printing" will be displayed and blink.
3. Press the SELECT button to alternate between "No Printing" and "Printing" to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

### Programming Table


See page 7-8.

# System Data Dump


● Stop Output

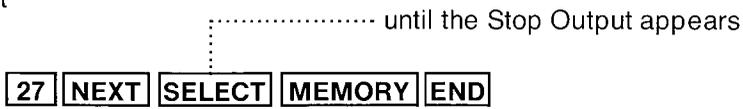


- All Parameters
- System Parameter
- Speed Call

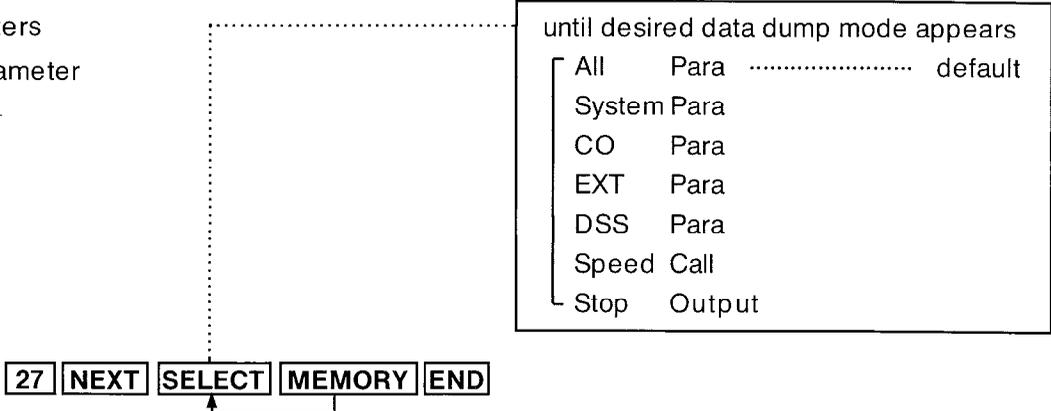


● CO Parameter (Outside)

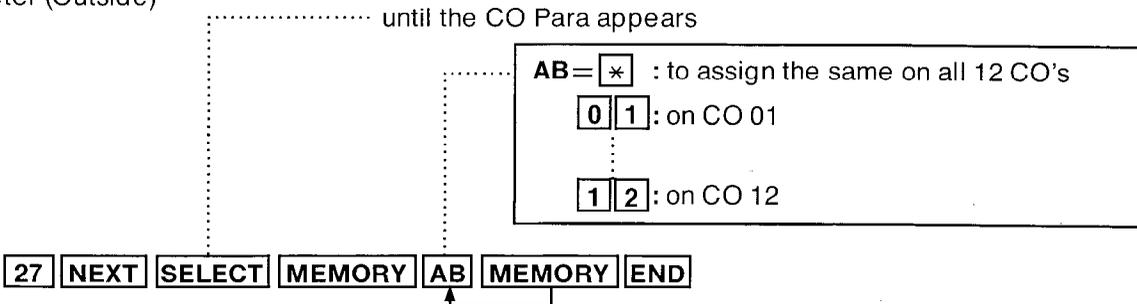

● Extension Parameter

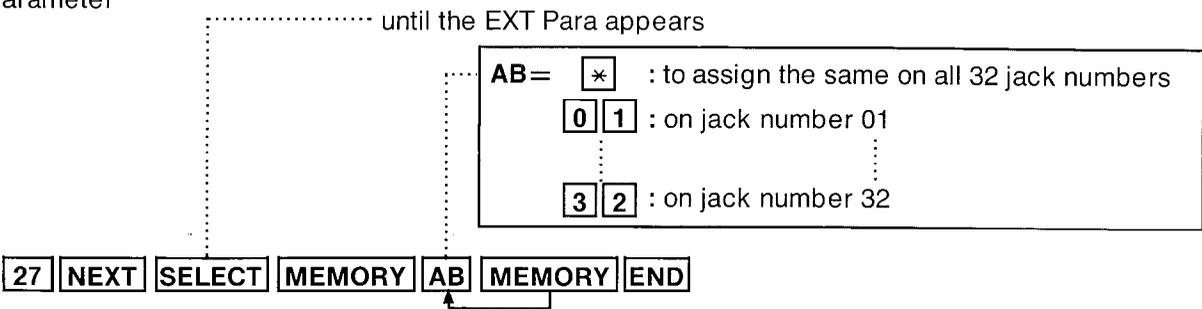

● DSS Parameter

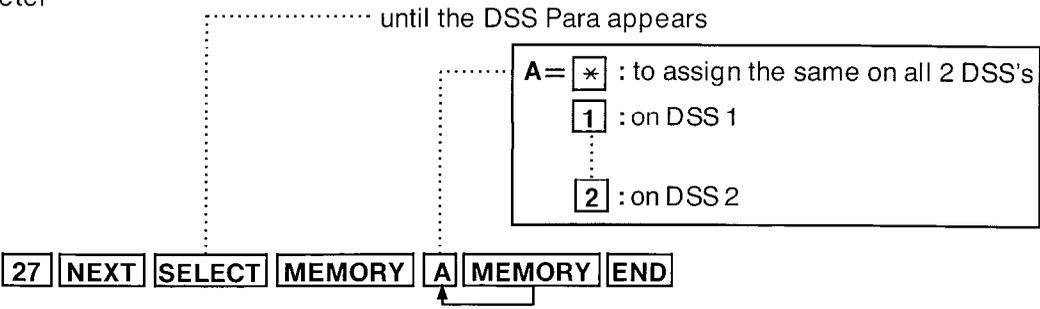

## Description

Six separate printouts are available. They are (1) System parameters (2) CO parameters (3) Extension.parameters (4) DSS parameters (5) Speed call (6) All parameters

### System parameters

Day / Night  
Trunk group assignments  
Extension number assignments  
Extension group assignments  
Hunting group  
Operator extension  
DSS console set  
DSS operation mode  
Doorphone receive extensions  
Area type  
Speed dial restriction  
Operator call class  
Area code of class-3  
Exchange code of class-5  
Exchange code of class-7  
Exchange code with exception  
SMDR (Station Message Detail Recording) parameters  
RS-232C parameters  
Hold recall time  
Auto hold alarm time  
Transfer recall time  
Call forwarding count  
Pickup dial waiting time  
External paging access tone  
Active DTMF receiver  
CO-CO Duration time limit

### CO parameters

Connection  
CO mode  
Dialing parameters  
Trunk group  
Host PBX access code  
Hookswitch flash time  
Disconnect time  
Pause time  
CPC detection  
Outgoing extension  
Incoming extension  
Delayed ringing extension

## Extension parameters

- When the Proprietary telephone is connected at extension.

Telephone type  
Extension name  
Extension group  
Toll restriction  
Account code input mode  
CO transfer mode  
CO forward mode  
Executive busy override  
Executive busy override deny  
DND override  
Outgoing preference  
Incoming preference  
Line ringing assignment  
Intercom call  
BGM mode  
Do not disturb  
Call forwarding  
Call waiting  
Call waiting tone  
Data line security  
Dial Call pickup deny  
Absent message  
Auto answer mode  
CO button assignments  
DSS button assignments  
Feature button assignment  
◀DSS Console Items▶  
Console type  
DSS connection  
DSS button assignments  
Feature button assignments

- (When the standard telephone is connected at extension)

Telephone type  
Extension name  
Extension group  
Toll restriction  
Account code input mode  
CO transfer mode  
CO forward mode  
Executive busy override  
Executive busy override deny  
DND override  
Outgoing preference  
Incoming preference

Line ringing assignment  
Intercom call  
Do not disturb  
Call forwarding  
Call waiting  
Call waiting tone  
Data line security  
Dial call pickup deny  
Absent message  
Pickup dial

#### DSS parameters

Console type  
Pair extension  
DSS connection  
DSS button assignment  
Feature button assignment

#### Speed call

Speed access codes (00 through 99) in which phone numbers are stored may be printed.

#### All parameters

System parameters  
CO parameters  
Extension parameters  
DSS parameters  
Speed call

## Operation

#### To stop the printout ;

1. Dial (27).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until Stop Output is displayed.
4. Press the MEMORY button.

#### To print System Parameters, Speed call or All Parameters ;

1. Dial (27).  
"System Data Out" will be displayed.
2. Press the NEXT button.  
"Menu : All Para" will be displayed and "All Para" will blink.
3. Repeat pressing the SELECT button until the desired data dump mode is displayed.
4. Press the MEMORY button.  
SMDR printer will print out.
5. Repeat steps 3 to 4, to print the other data dumps.

#### To print CO Parameter ;

1. Dial (27).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the "CO Para" is displayed.
4. Press the MEMORY button.  
"CO NO ? →" is displayed.
5. Dial the CO number (01 through 12).  
When dialing (01),  
"CO NO ? → 01" will be displayed.
6. Press the MEMORY button.  
SMDR printer will print out.
7. Repeat steps 5 to 6, to print the other CO parameter.

#### To print Extension Parameter ;

1. Dial (27).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the "EXT Para" is displayed.
4. Press the MEMORY button.  
"Jack NO ? →" will be displayed.
5. Dial the jack number (01 through 32).  
When dialing (01),  
"Jack NO ? → 01" will be displayed.
6. Press the MEMORY button.  
SMDR printer will print out.
7. Repeat steps 5 to 6, to print the other jack number.

#### To print DSS Parameter ;

1. Dial (27).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the "DSS Para" is displayed.
4. Press the MEMORY button.  
"DSS NO ? →" will be displayed.
5. Dial the DSS number (1 or 2).  
When dialing (1),  
"DSS NO ? → 1" will be displayed.
6. Press the MEMORY button.  
SMDR printer will print out.
7. Repeat steps 5 to 6, to print the other DSS parameter.


#### After completing printing, to return to the initial mode ;

1. Press the END button.

## Programming Table

See page 7-8.

## Duration Time Count Start Mode

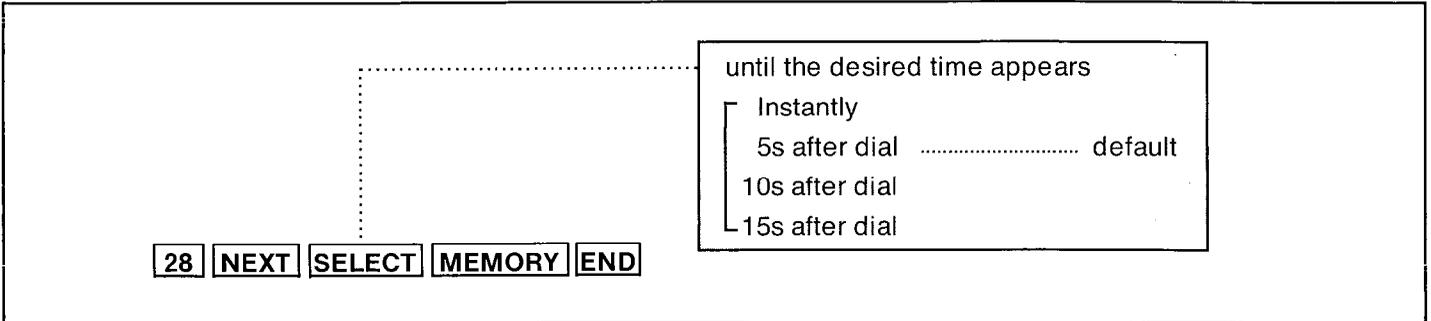

### Description

The duration time of the conversation is displayed on the LCD and is printed on the printer.

Program the starting time of the timer.

- Instantly after the CO line is captured.
- 5 seconds after the dialing.
- 10 seconds after the dialing.
- 15 seconds after the dialing.

### Example:

10 seconds after dialing

= 28 NEXT SELECT MEMORY END


### Programming Table

See page 7-9.

### Programming

1. Dial (28).  
"Durat-Time Count" will be displayed.
2. Press the NEXT button.  
"5s after dial" will be displayed and blink.
3. Repeat pressing the SELECT button until the desired time (Instantly, 5s after dial, 10s after dial, 15s after dial) is displayed.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

## External Paging Access Tone

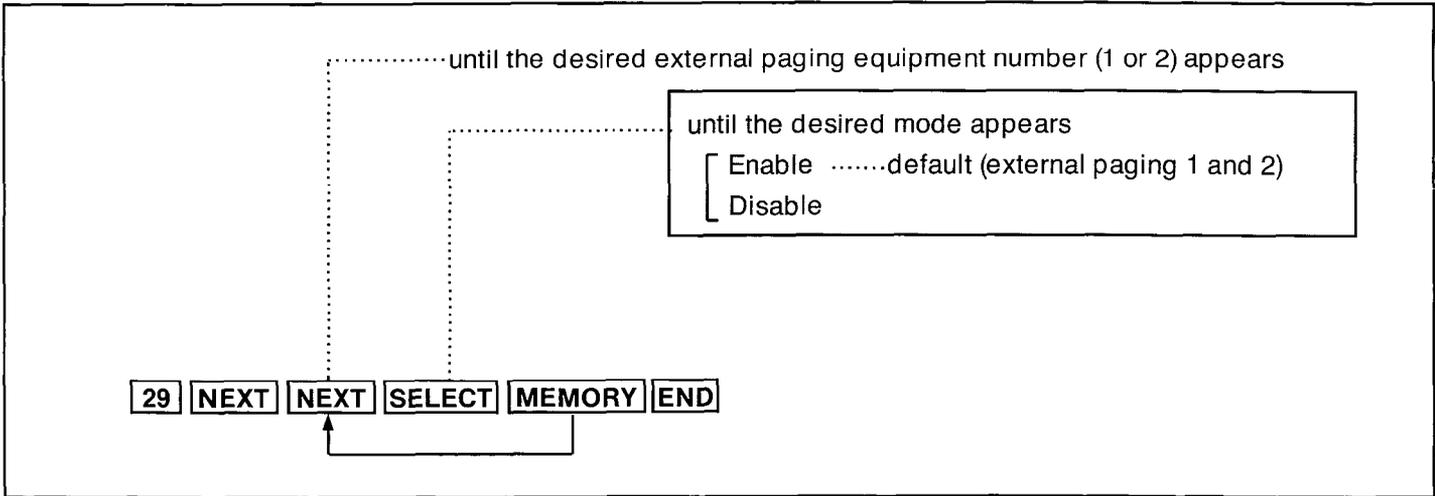

### Description

The acknowledge tone that is heard after accessing the external paging equipment can be removed or added at the customer's request.

Refer to "Paging-External" on page 4-24.

6. Repeat steps 3 to 5, to program the access tone of the other external paging equipment.
7. To return to the initial program mode, press the END button.

### Programming

1. Dial (29).  
"Ext-Pag Ack-Tone" will be displayed.
2. Press the NEXT button.  
"Pag NO?→" will be displayed.
3. Press the NEXT button.  
"Pag 1: Enable" will be displayed and "Enable" will blink.
4. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
5. Press the MEMORY button.  
The LCD will stop blinking.

### Example:

To eliminate the access paging tone on external paging1.


29 NEXT NEXT SELECT MEMORY END

### Programming Table

See page 7-9.

# Outside Line Feature

## CO Connection Assignment

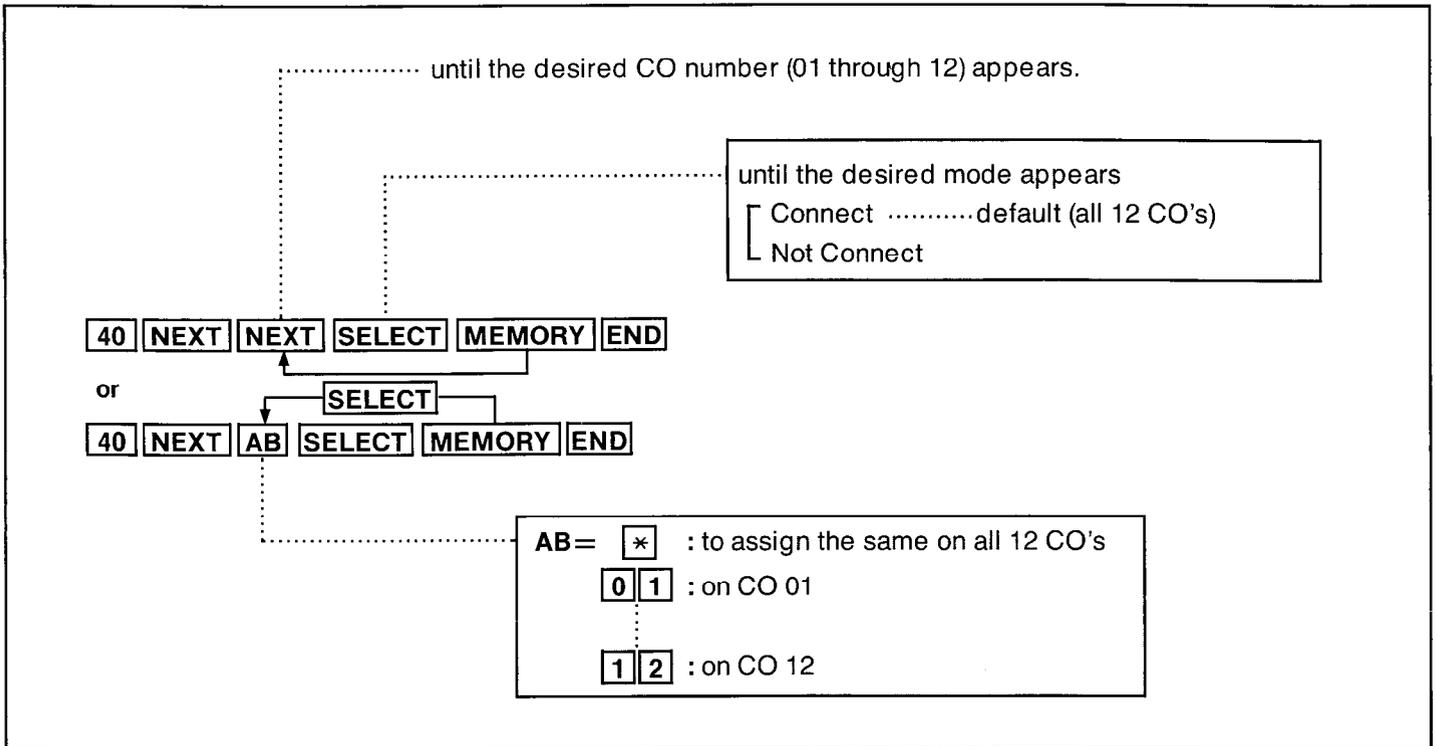

### Description

You can program which outside line is connected and which one is not connected. When an extension automatically selects an idle-outside line, the extension can be connected to it quickly.

7. Repeat steps 4 to 6, to program the mode on the other CO lines.

8. To return to the initial program mode, press the END button.

### Programming

- Dial (40).  
"CO Connection" will be displayed.
- Press the NEXT button.  
"CO NO ? →" will be displayed.
- Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : Connect" will be displayed and "Connect" will blink.
- Press the SELECT button, to alternate between Connect and Not Connect to select the desired mode.
- Press the MEMORY button.  
The LCD will stop blinking.
- To advance to the next CO number, press the NEXT button.
  - To return to the previous CO number, press the PREV button.
  - To go to the desired CO number, press the SELECT button and then dial the CO number.

### Conditions

- When you dial "\*" instead of pressing the NEXT button at step 3, in case all of 12 CO's have been programmed to "Connect", "CO \*: Connect" will be displayed. In case each of 12 CO's has been programmed either "Connect" or "Not Connect", "CO \*: Confused" will be displayed.

### Example :

CO 1 and 2 ..... Connect  
CO 3 ..... Not Connect


- 40 NEXT NEXT MEMORY
- NEXT MEMORY
- NEXT SELECT MEMORY END

### Programming Table

See page 7-9.

# Dial Mode (DTMF/Pulse)

## DTMF/Pulse Selection

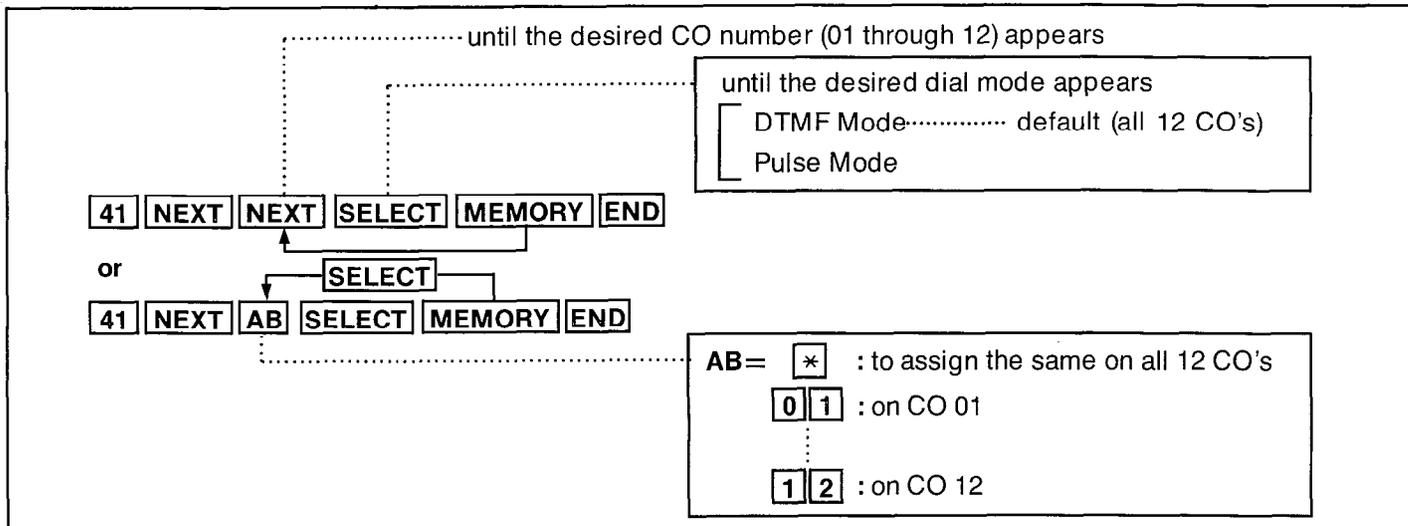

### Description

Allows the user to select the dialing mode (tone or pulse) of each CO (Central Office) line.

- **DTMF Dial Mode**  
The dial signal from the extension (with tone or pulse dial mode) will be converted to TONE. TONE will be transmitted to the Central Office.
- **PULSE Dial Mode**  
The dial signal from the extension (with tone or pulse dial mode) will be converted to PULSE. PULSE will be transmitted to the Central Office.

### Programming

1. Dial (41).  
"CO Dial Mode" will be displayed.
2. Press the NEXT button.  
"CO NO ?→" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : DTMF Mode" will be displayed and "DTMF Mode" will blink.
4. Repeat pressing the SELECT button until the desired dial mode is displayed.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.

7. Repeat Steps 4 to 6, to program the dialing mode on the other central office lines.
8. To return to the initial program mode, press the END button.

### Conditions

- If the KX-T123210 is connected to the Central Office directly or installed behind a host PBX, which receives both tone and pulse dialing mode, the KX-T123210 must be used only in the tone dial mode.
- If your extension is not a Proprietary telephone but a standard telephone, and the dial tone frequency of CO Lines is 600Hz, the KX-T123210 must be used only for the pulse dialing mode for the CO Lines.

### Example:

- TONE on the CO 1 =

41 NEXT 01 MEMORY END

or

41 NEXT NEXT MEMORY END

- PULSE on the CO 2 =

41 NEXT 02 SELECT MEMORY END


or

41 NEXT NEXT NEXT SELECT  
MEMORY END

### Programming Table

See page 7-9.

## Pulse Speed Selection

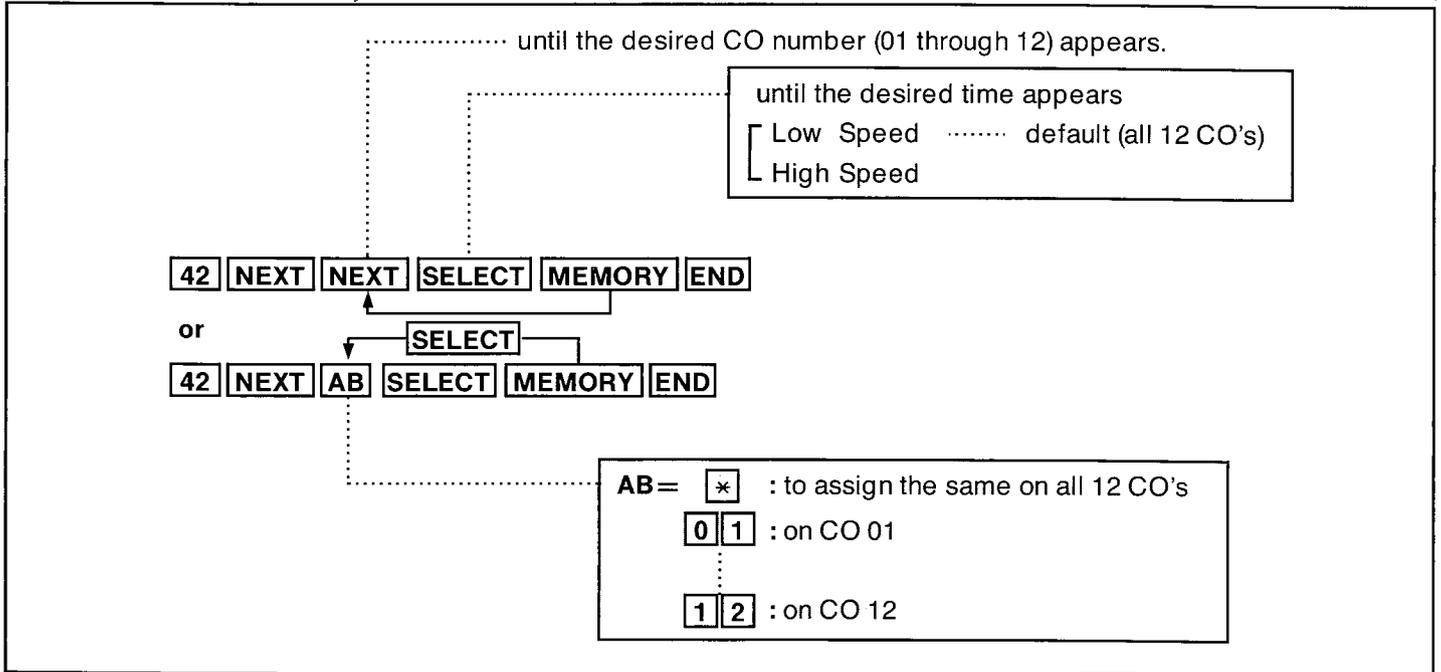

### Description

In "Dial Mode (DTMF/Pulse) Selection" on page 3-43, when "Pulse Dial Mode" is selected, dial pulse may be speeded up by programming. There are Pulse Low (10pps) and Pulse High (20pps) in the Dial Pulse Speed.

### Programming


1. Dial (42).  
"Pulse Speed" will be displayed.
2. Press the NEXT button.  
"CO NO ?→" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : Low Speed" will be displayed and "Low Speed" will blink.
4. Press the SELECT button to alternate between "Low Speed" and "High Speed".

5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
7. Repeat steps 4 to 6, to program the assignment of the other CO numbers.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-9.

# Host PBX Access Codes Assignment

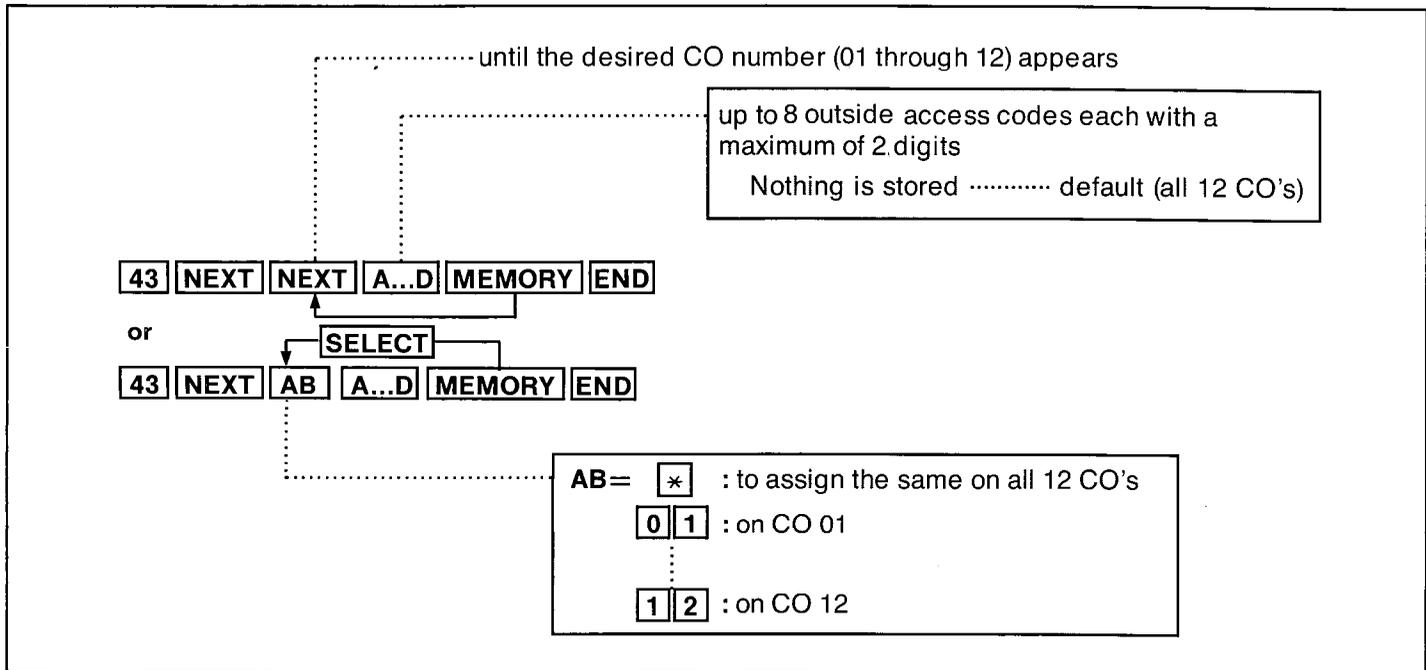

## Description

If the system, (KX-T123210) is installed behind a host PBX, the host PBX may require a pause time to access Central Office Lines. This feature enables the host PBX to automatically pause via programming the outward dialing access codes of the host PBX.

## Programming

- Dial (43).  
"Host PBX Access" will be displayed.
- Press the NEXT button.  
"CO NO ?→" will be displayed.
- Press the NEXT button or dial the CO number (01 through 12).
  - The LCD will show "CO 01 : Not Stored" when nothing is stored in CO 1.  
When the outside access codes 81,82 has been stored, "CO 01 : 81, 82" will be displayed.
- Enter up to 8 outward access codes each with a maximum of 2 digits, punctuating each code with the " ," button.
  - To erase a wrong entry, press the CLEAR button.
- Press the MEMORY button.

- To advance to the next CO number, press the NEXT button.
  - To return to the previous CO number, press the PREV button.
  - To go to the desired CO number, press the SELECT button and then dial the CO number.
- Repeat steps 4 to 6 to program each of the CO's of the KX-T123210.
- To return to the initial program mode, press the END button.

### Example:


- AccessCodes 81,82,83,9 on CO1

43 NEXT 01 81 , 82 , 83 , 9  
MEMORY END

### Programming Table


See page 7-10.

# Trunk Group Assignment

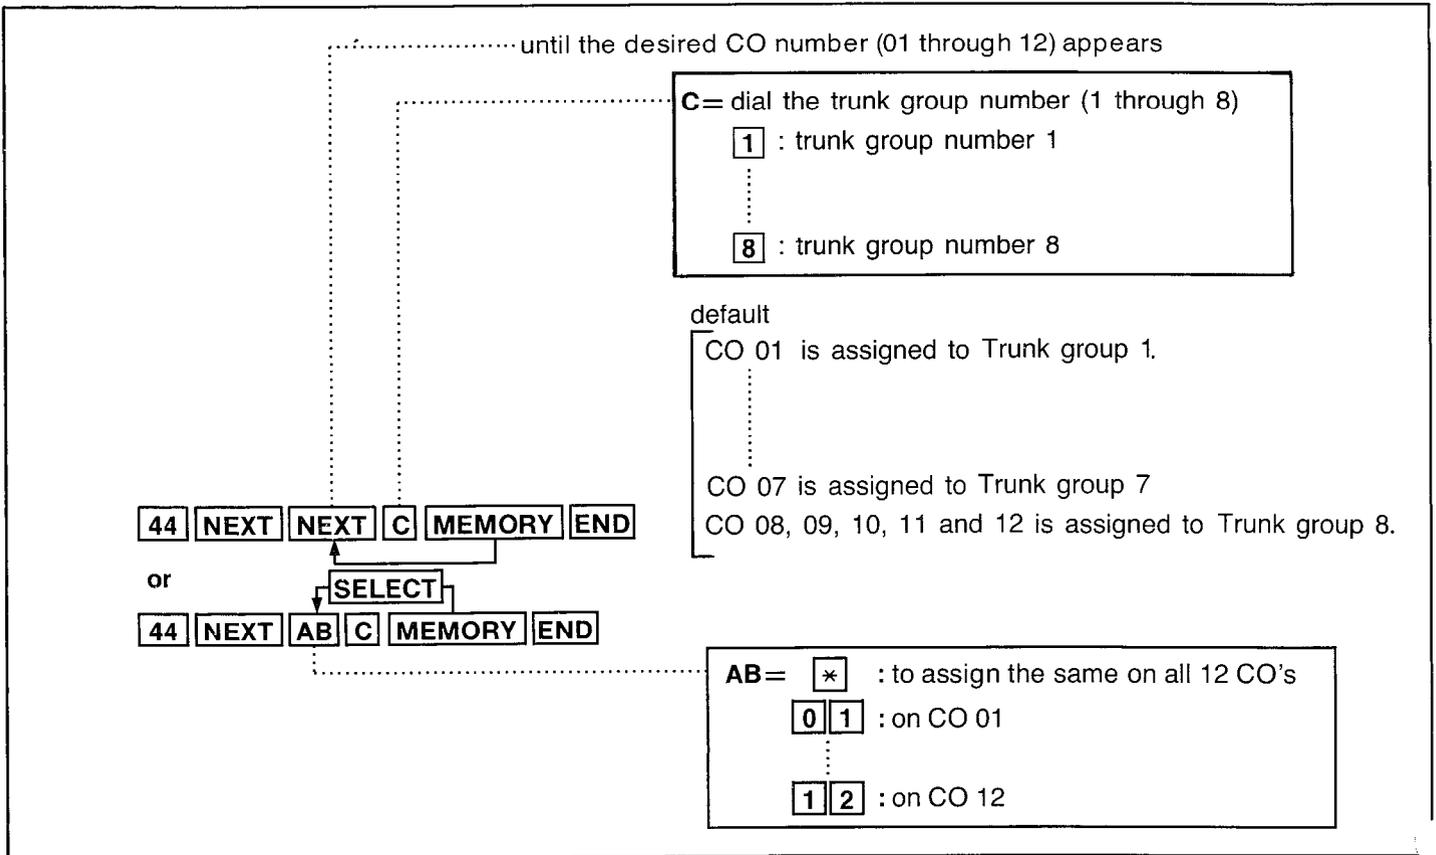

## Description

When outside lines are grouped, an idle line within the trunk group is automatically found and connected when an outside call is placed. A maximum 8 groups can be assigned. For example, if subscribing with multiple telephone service companies, the CO lines can be grouped as shown below by each company.

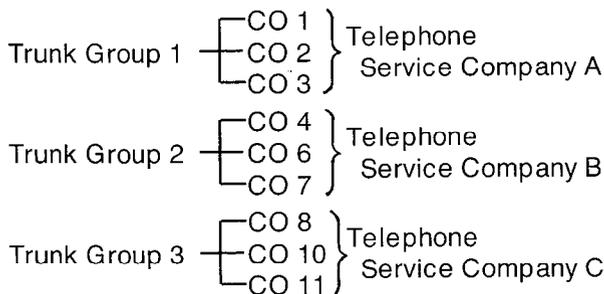

Refer to "Outward Dialing (Individual Trunk Group Access)" on page 4-3 and "Flexible CO Button (To Assign into Trunk Group Access Number)" on page 4-53.

## Programming

1. Dial (44).  
"Trunk Group" will be displayed.


2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01: TRK GRP-1" will be displayed and "1" will blink.
4. Dial the trunk group number (1 through 8).
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
7. Repeat steps 4 to 6, to program the trunk group number on the other CO lines.
8. To return to the initial program mode, press the END button.

## Programming Table

See page 7-10.

# Flexible Outward Dialing Assignment

## Day Mode

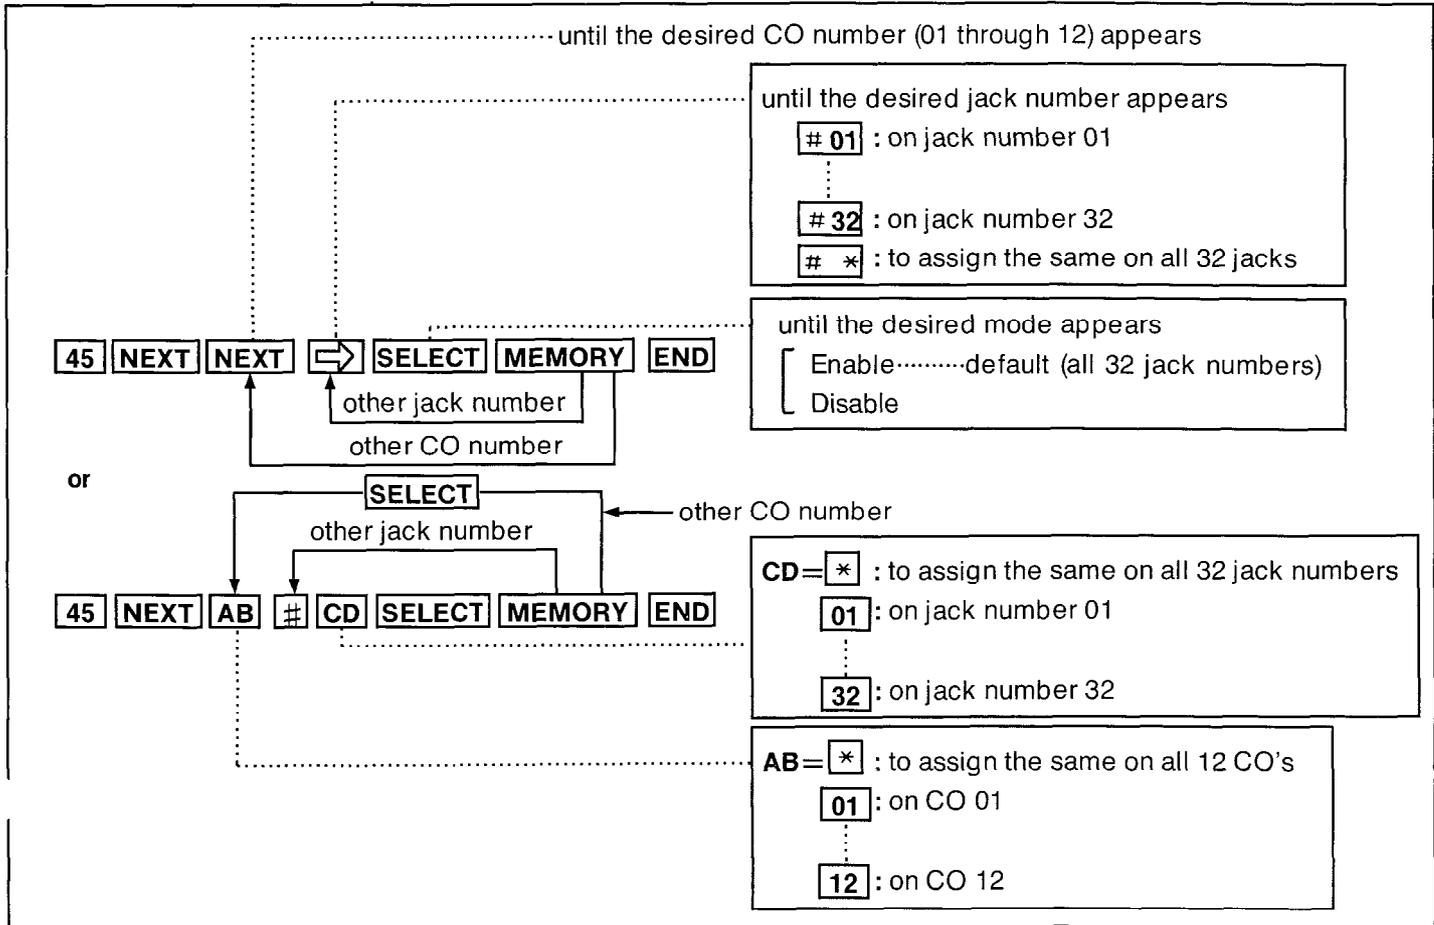

PROGRAMMING

### Description

Through programming, you can select which extensions may be used for outward dialing by using the day mode of operation.


### Programming

1. Dial (45).  
"Day Out CO" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : #01 : Enable" will be displayed.  
 ↖ jack number
4. Repeat pressing the [right arrow] button until the desired jack number appears, or press the [#] button and then dial the jack number.
5. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
6. Press the MEMORY button.  
The LCD will stop blinking.
7. ● To advance to the next jack number, press the [right arrow] button.  
 ● To return to the previous jack number, press the [left arrow] button.  
 ● To go to the desired jack number, press the [#] button and then dial the jack number.
8. Repeat steps 5 to 7, to program the assignment of the other jack numbers.
9. ● To advance to the next CO number, press the NEXT button.  
 ● To return to the previous CO number, press the PREV button.  
 ● To go to the desired CO number, press the SELECT button and then dial the CO number.
10. Repeat steps 4 to 9, to program the assignment of the other CO numbers.
11. To return to the initial program mode, press the END button.

### Programming Table

See page 7-11.

# Night Mode

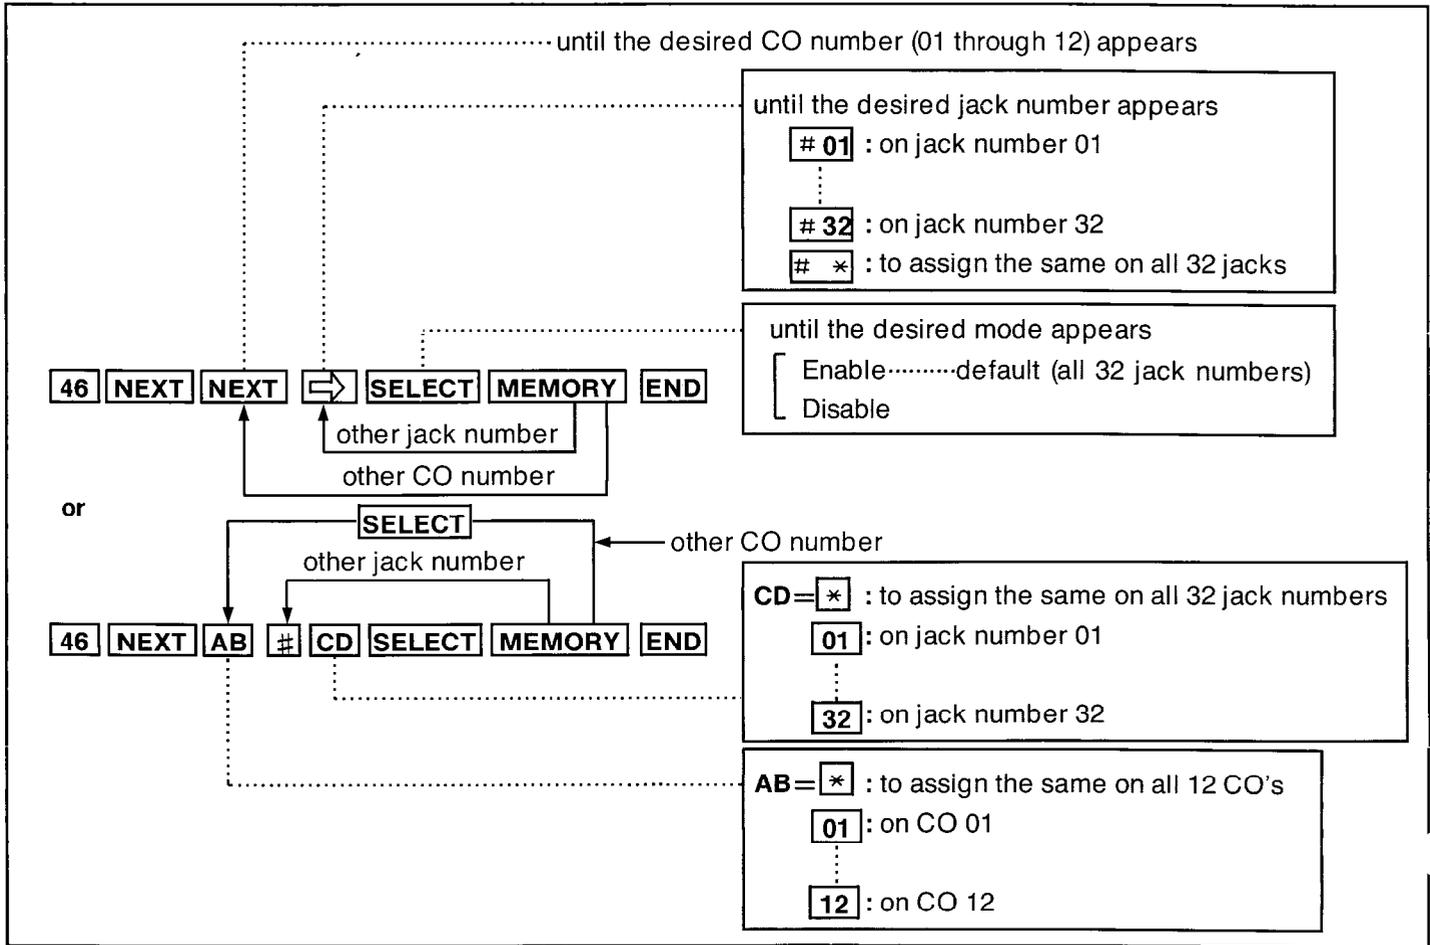

## Description

Through programming, you can select of which extensions may be used for outward dialing by using the night mode of operation.

## Programming

1. Dial (46).  
"Night Out CO" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : #01 : Enable" will be displayed.  
 jack number
4. Repeat pressing the [right arrow] button until the desired jack number appears, or press the [#] button and then dial the jack number.
5. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
6. Press the MEMORY button.  
The LCD will stop blinking.


7. ● To advance to the next jack number, press the [right arrow] button.
  - To return to the previous jack number, press the [left arrow] button.
  - To go to the desired jack number, press the [#] button and then dial the jack number.
8. Repeat steps 5 to 7, to program the assignment of the other jack numbers.
9. ● To advance to the next CO number, press the NEXT button.
  - To return to the previous CO number, press the PREV button.
  - To go to the desired CO number, press the SELECT button and then dial the CO number.
10. Repeat steps 4 to 9, to program the assignment of the other CO numbers.
11. To return to the initial program mode, press the END button.

## Programming Table

See page 7-12.

# Flexible Ringing Assignment

Day Mode

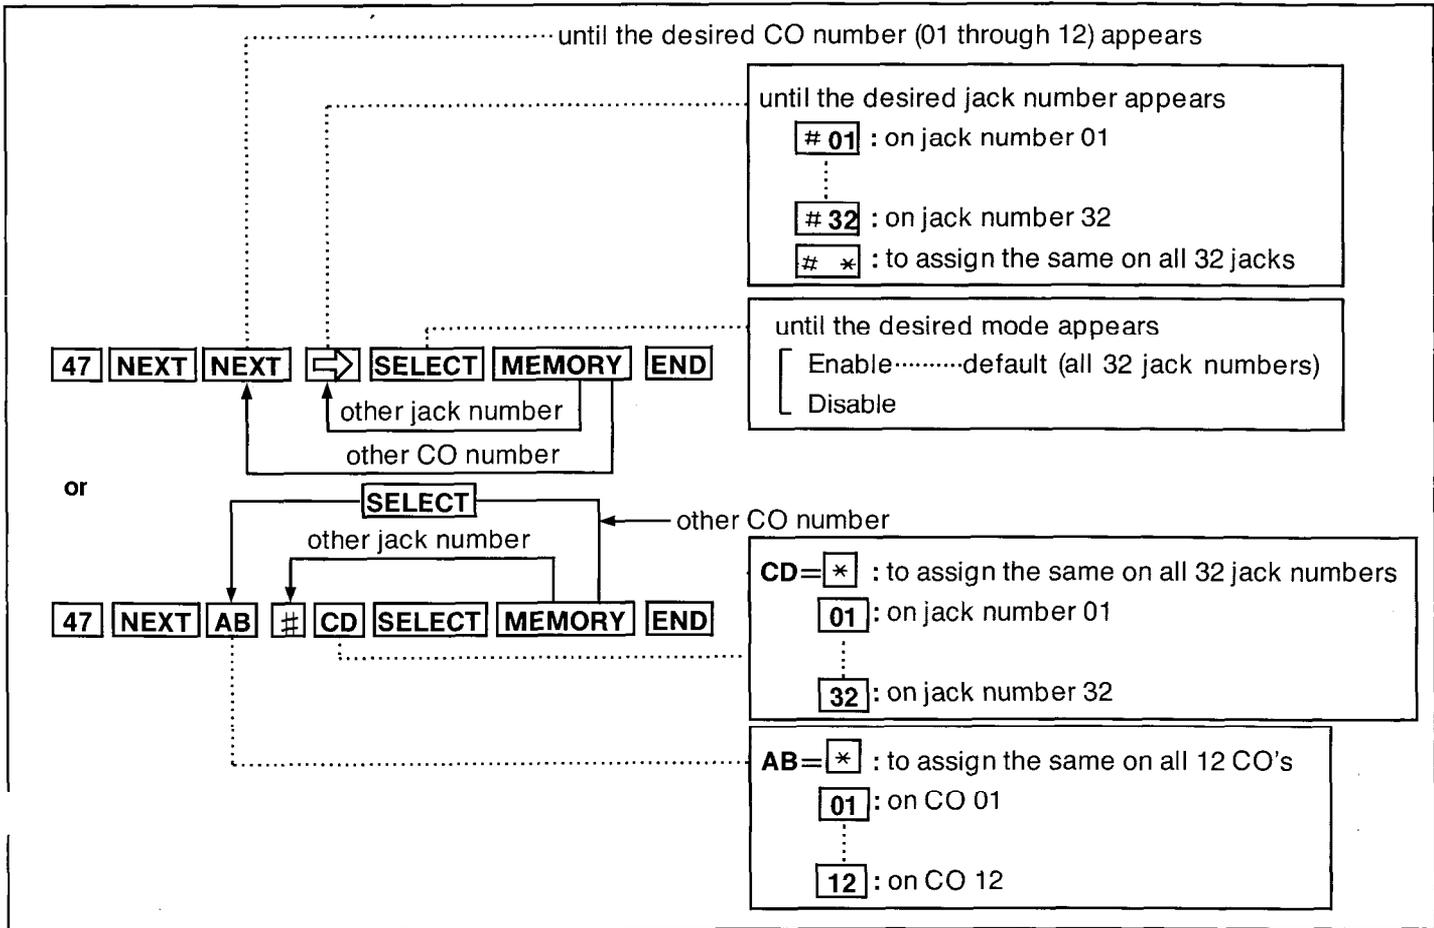

PROGRAMMING

## Description

Through programming, you can select which extensions will ring on incoming calls from the Central Office during the day time.

## Programming

1. Dial (47).  
"Day In CO " will be displayed.
2. Press the NEXT button.  
"CO NO ?→" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : #01 : Enable" will be displayed.  
 ↖ jack number
4. Repeat pressing the  $\Rightarrow$  button until the desired jack number appears, or press the # button and then dial the jack number.
5. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
6. Press the MEMORY button.  
The LCD will stop blinking.

7. ● To advance to the next jack number, press the  $\Rightarrow$  button.
- To return to the previous jack number, press the  $\Leftarrow$  button.
- To go to the desired jack number, press the # button and then dial the jack number.
8. Repeat steps 5 to 7, to program the assignment of the other jack numbers.
9. ● To advance to the next CO number, press the NEXT button.
- To return to the previous CO number, press the PREV button.
- To go to the desired CO number, press the SELECT button and then dial the CO number.
10. Repeat steps 4 to 9, to program the assignment of the other CO numbers.
11. To return to the initial program mode, press the END button.


## Programming Table

See page 7-13.

**Example:**


- Company XYZ would like incoming calls from the Central Office during the day mode to be received at the following zone.

Zone	Jack no. of Extension	Programming CO no.
A	01, 02	01
B	03, 04	02
C	05, 06	03

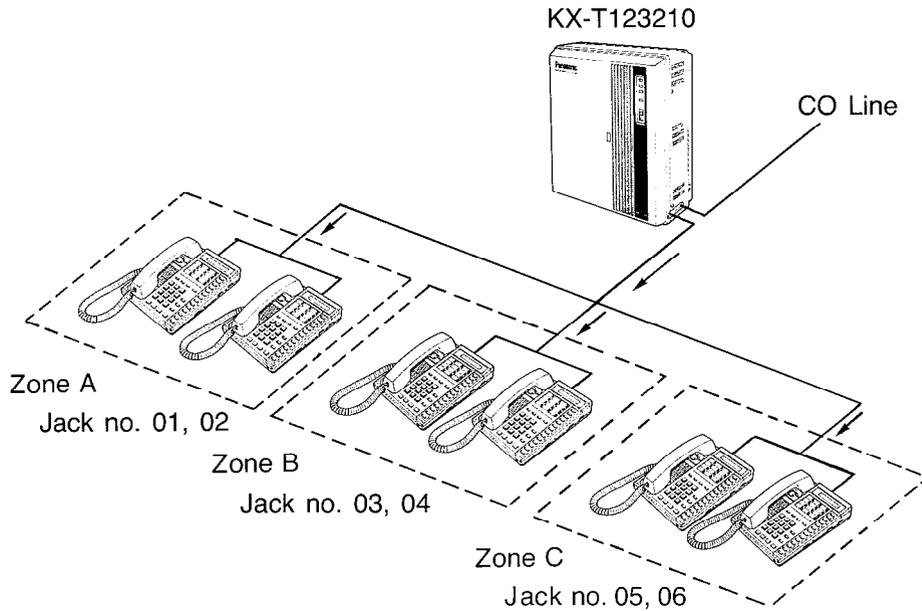

**Programming**

1. **47 NEXT \* # \* SELECT MEMORY** ..... All CO numbers have been set to "Disable" on all jack numbers.
2. ( **NEXT** or **SELECT 01** ) **SELECT MEMORY** ..... CO number 01 has been set to "Enable" on jack number 01.
3. ( **⇒** or **# 02** ) **SELECT MEMORY** ..... CO number 01 has been set to "Enable" on jack number 02.
4. ( **NEXT** or **SELECT 02** ) **# 03 SELECT MEMORY** ..... CO number 02 has been set to "Enable" on jack number 03.
5. ( **⇒** or **#04** ) **SELECT MEMORY** ..... CO number 02 has been set to "Enable" on jack number 04.
6. ( **NEXT** or **SELECT 03** ) **# 05 SELECT MEMORY** ..... CO number 03 has been set to "Enable" on jack number 05.
7. ( **⇒** or **#06** ) **SELECT MEMORY** ..... CO number 03 has been set to "Enable" on jack number 06.
8. **END**

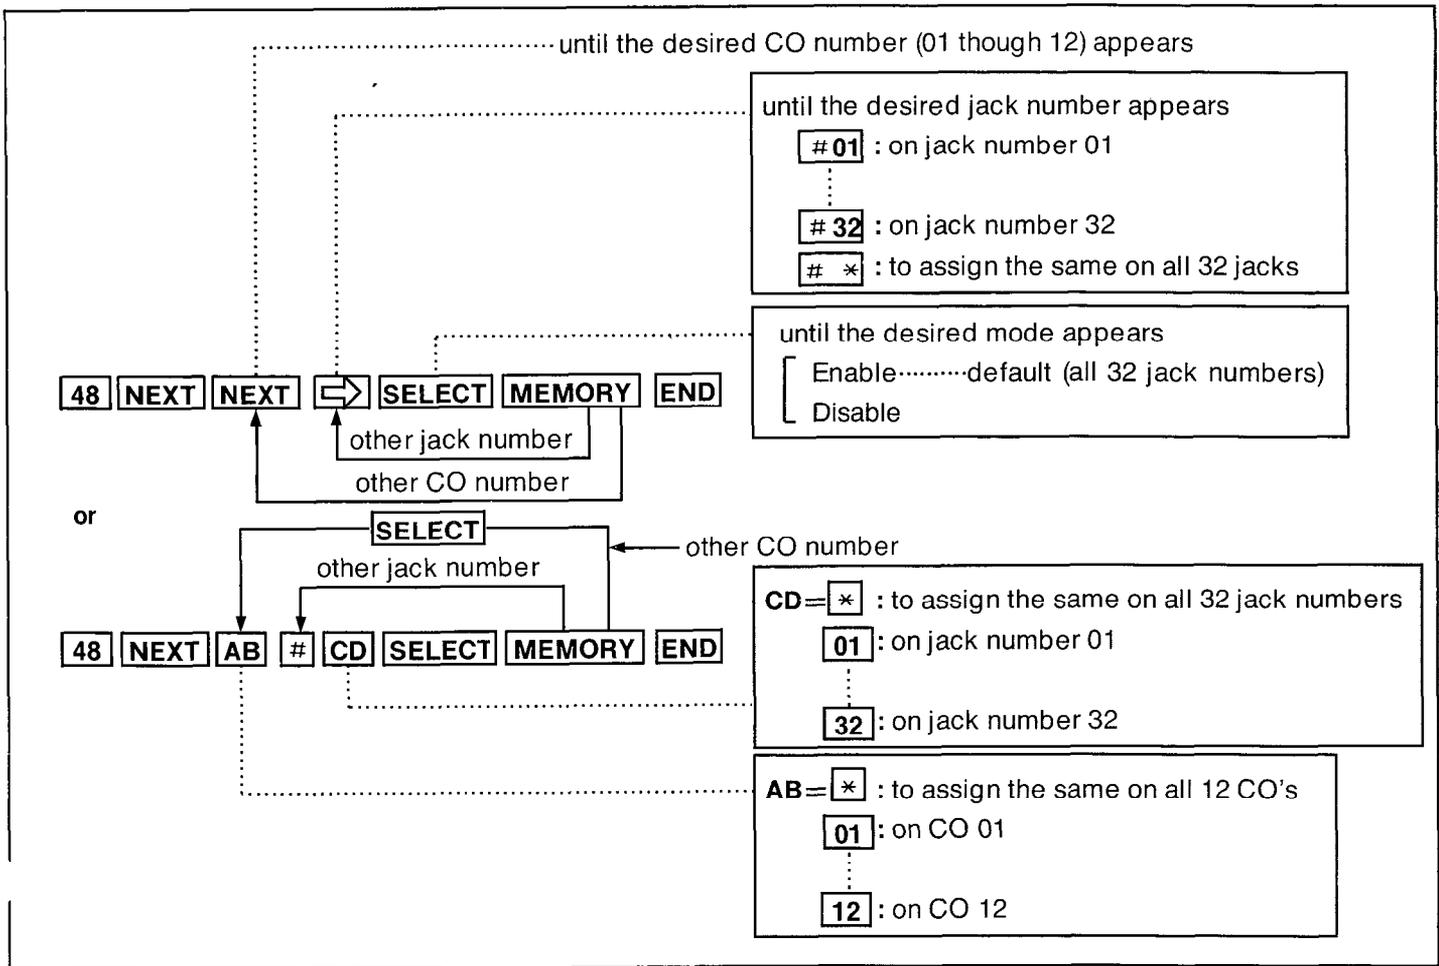

**Description**

Through programming, you can select which extensions will ring on incoming calls from the Central Office during the night time .

**Programming**


1. Dial (48).  
 "Night In CO" will be displayed.
2. Press the NEXT button.  
 "CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
 "CO 01 : #01 : Enable" will be displayed.  
     ↑  
     jack number
4. Repeat pressing the [right arrow] button until the desired jack number appears, or press the [#] button and then dial the jack number.
5. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
6. Press the MEMORY button.  
 The LCD will stop blinking.

7. ● To advance to the next jack number, press the [right arrow] button.
- To return to the previous jack number, press the [left arrow] button.
- To go to the desired jack number, press the [#] button and then dial the jack number.
8. Repeat steps 5 to 7, to program the assignment of the other jack numbers.
9. ● To advance to the next CO number, press the NEXT button.
- To return to the previous CO number, press the PREV button.
- To go to the desired CO number, press the SELECT button and then dial the CO number.
10. Repeat steps 4 to 9, to program the assignment of the other CO numbers.
11. To return to the initial program mode, press the END button.

**Programming Table**  
 See page 7-14.

# Delayed Ringing Assignment

Day Mode

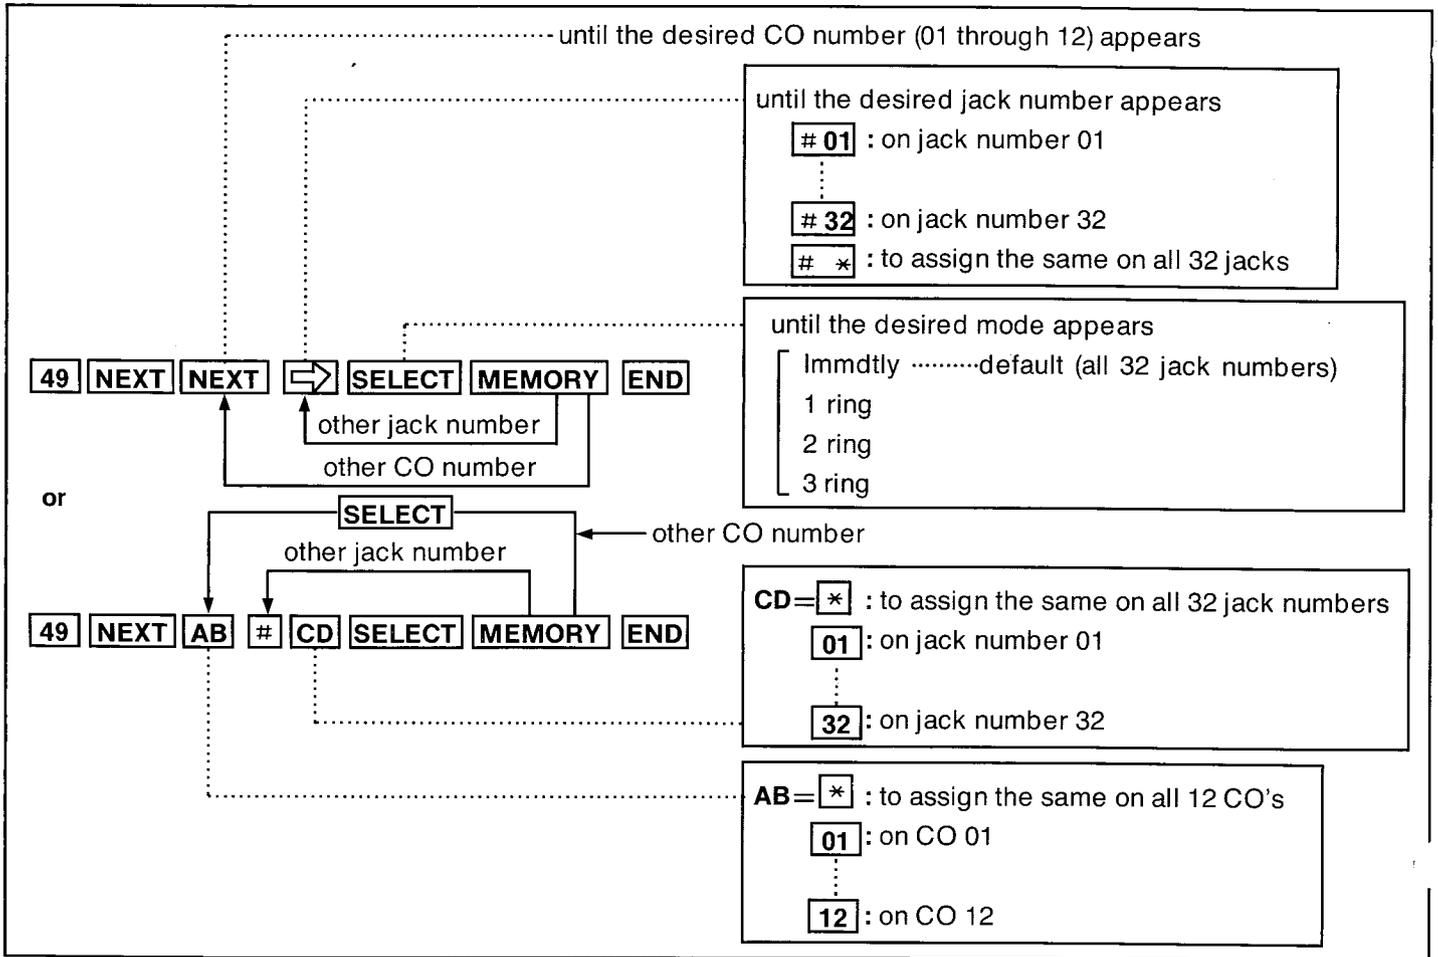

## Description

The ringing start time during the day can be delayed on a designated extension(s) when an incoming call is received from the CO. The CO line(s) that you want to delay the ring start time during the day can be selected through the programming.

## Programming

1. Dial (49).  
"Day Delayed CO" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : #01 : Immdtly" will be displayed.  
  - ↑ jack number
4. Repeat pressing the button until the desired jack number appears, or press the button and then dial the jack number.
5. Repeat pressing the SELECT button until the desired mode is displayed.
6. Press the MEMORY button.  
The LCD will stop blinking.
7. ● To advance to the next jack number, press the button.
- To return to the previous jack number, press the button.
- To go to the desired jack number, press the button and then dial the jack number.
8. Repeat steps 5 to 7, to program the assignment of the other jack numbers.
9. ● To advance to the next CO number, press the NEXT button.
- To return to the previous CO number, press the PREV button.
- To go to the desired CO number, press the SELECT button and then dial the CO number.
10. Repeat steps 4 to 9, to program the assignment of the other CO numbers.
11. To return to the initial program mode, press the END button.

## Programming Table


See pages 7-15 and 7-16.




# CO Direct In Line Assignment

## Day Mode

### ■ Selecting the "Normal" mode

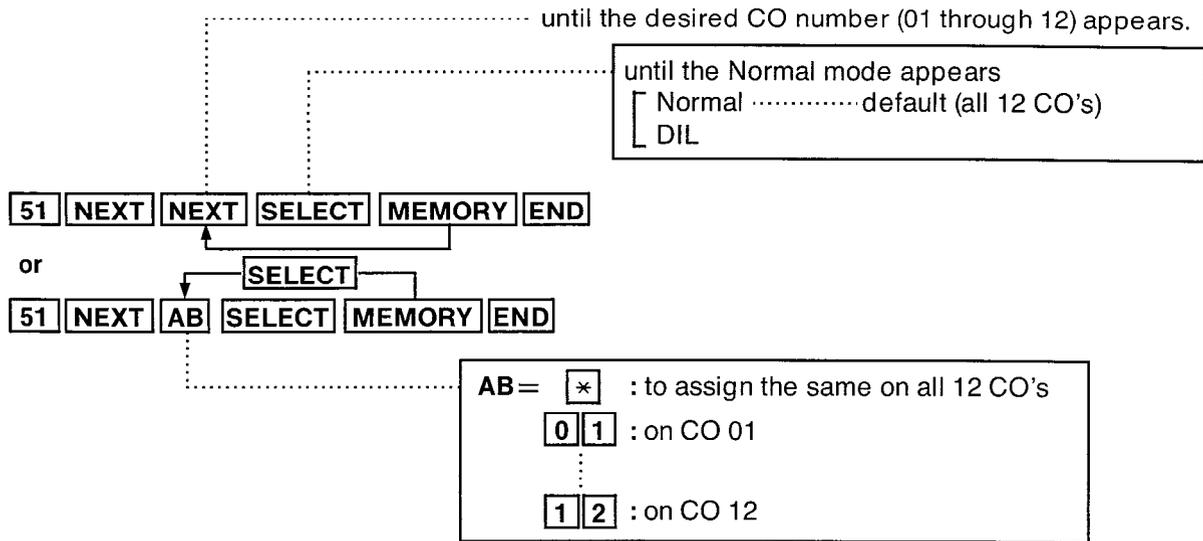

### ■ Selecting the "DIL" mode

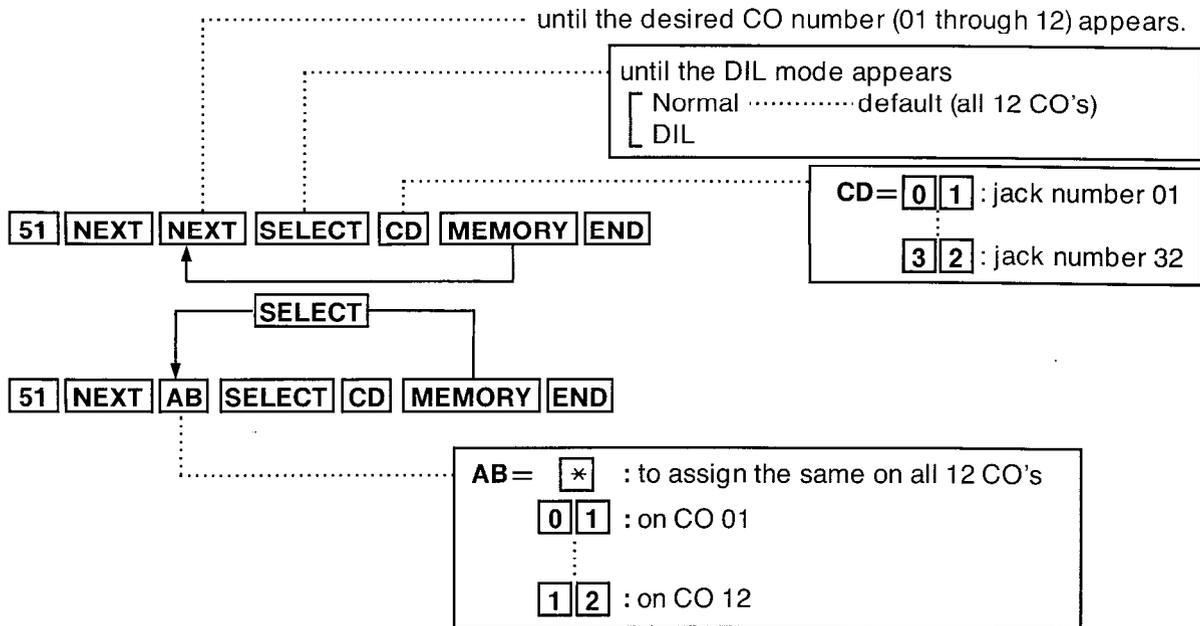

## Description

Enables all outside line incoming calls to be directed to a specific extension phone (e.g., the assigned operator extension) during the day mode. By programming an outside line to the jack number of the corresponding extension phone, all incoming calls on that outside line will be received at the assigned extension phone. The call can be accepted by simply picking up the receiver.

## Programming

### ■ Selecting the "Normal" mode

1. Dial (51).  
"CO Day/ Mode" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : Normal" will be displayed and "Normal" will blink.
4. Press the SELECT button until the "Normal" mode is displayed.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
7. Repeat steps 4 to 6, to program the assignment of the other CO numbers.
8. To return to the initial program mode, press the END button.

### ■ Selecting the "DIL" mode

1. Dial (51).  
"CO Day/ Mode" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : Normal" will be displayed and "Normal" will blink.
4. Press the SELECT button until the "DIL" mode is displayed.  
"CO 01 : DIL : Jack-" will be displayed.
5. Dial the jack number (01 through 32).
6. Press the MEMORY button.  
The LCD will stop blinking.
7. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
8. Repeat steps 4 to 7, to program the assignment of the other CO numbers.
9. To return to the initial program mode, press the END button.

## Programming Table

See page 7-19.


**Example:**

- Company XYZ would like incoming calls from Central Office During the day mode to be received by operators 1 and 2.

Operator 1 has been connected to jack number 01.

Operator 2 has been connected to jack number 02.


Operator	Programming CO no.
1	01, 02,
2	03, 04

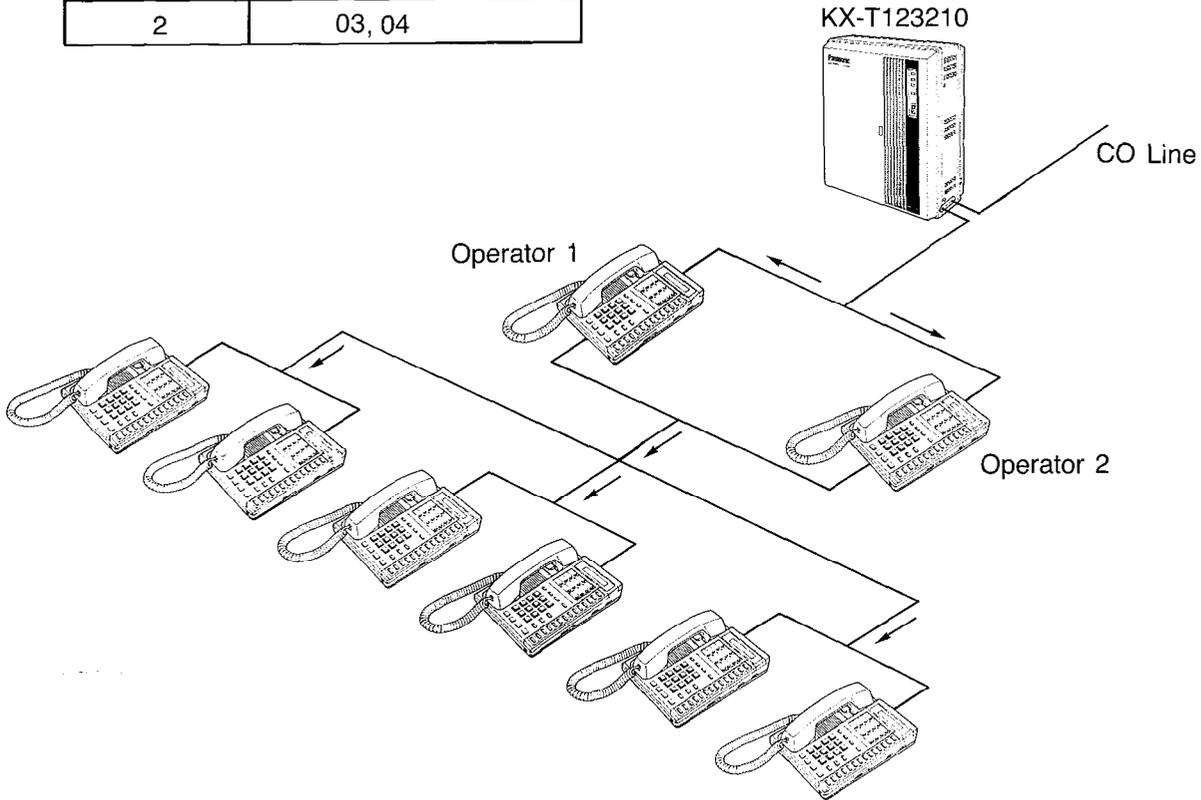


1. **51 NEXT** ( **NEXT** or **01** ) **SELECT 01 MEMORY** ..... Extension jack number 01 only has been set to receive all incoming calls through CO 01.
2. ( **NEXT** or **SELECT 02** ) **SELECT 01 MEMORY** ..... Extension jack number 01 only has been set to receive all incoming calls through CO 02.
3. ( **NEXT** or **SELECT 03** ) **SELECT 02 MEMORY** ..... Extension jack number 02 only has been set to receive all incoming calls through CO 03.
4. ( **NEXT** or **SELECT 04** ) **SELECT 02 MEMORY** ..... Extension jack number 02 only has been set to receive all incoming calls through CO 04.
5. **END**

## Night Mode

### ■ Selecting the "Normal" mode

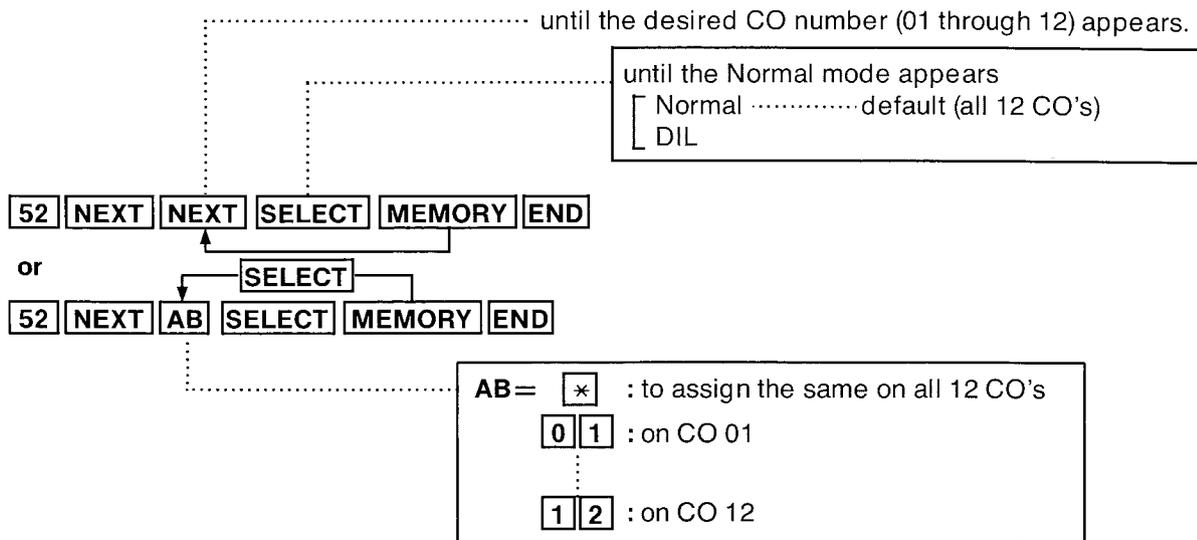

### ■ Selecting the "DIL" mode

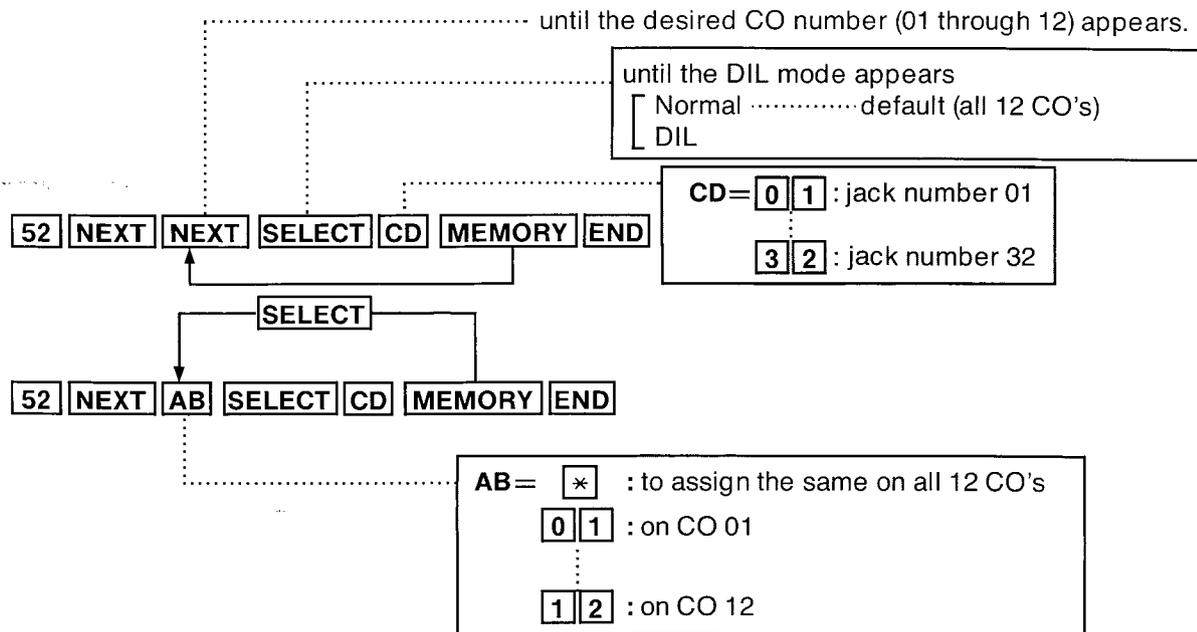

## Description

Enables all outside line incoming calls to be directed to a specific extension phone during the night mode.

By programming an outside line to the jack number of the corresponding extension phone, all incoming calls on that outside line will be received at the assigned extension phone. The call can be accepted by simply picking up the receiver.

## Programming

### ■ Selecting the "Normal" mode

1. Dial (52).  
"CO Night/ Mode" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : Normal" will be displayed and "Normal" will blink.
4. Press the SELECT button until the "Normal" mode is displayed.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
7. Repeat steps 4 to 6, to program the assignment of the other CO numbers.
8. To return to the initial program mode, press the END button.


### ■ Selecting the "DIL" mode

1. Dial (52).  
"CO Night/ Mode" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : Normal" will be displayed and "Normal" will blink.
4. Press the SELECT button until the "DIL" mode is displayed.  
"CO 01 : DIL : Jack-" will be displayed.
5. Dial the jack number (01 through 32).
6. Press the MEMORY button.  
The LCD will stop blinking.
7. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
8. Repeat steps 4 to 7, to program the assignment of the other CO numbers.
9. To return to the initial program mode, press the END button.

## Programming Table

See page 7-19.

## Pause Time Assignment

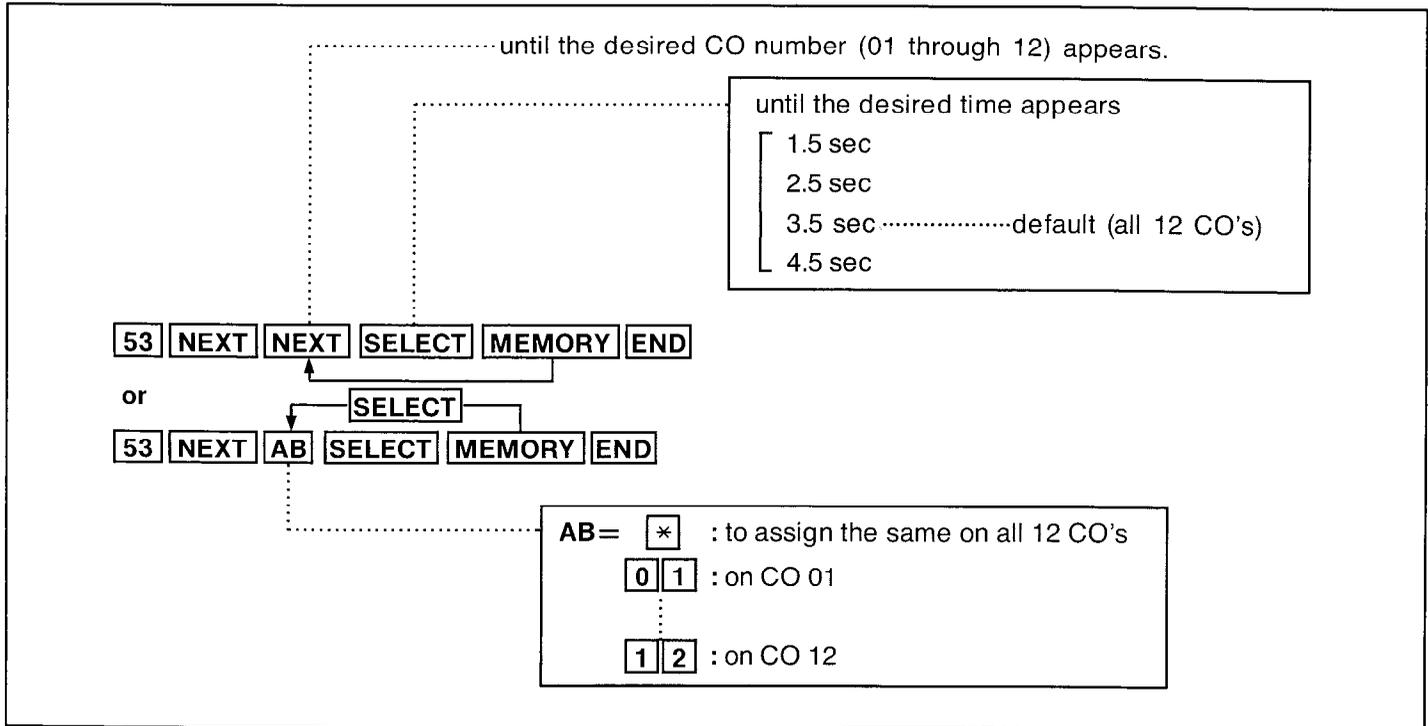

### Description

The KX-T123210 may require a pause time to access Central Office Line or computer accessed line.

The pause time may be changed to 1.5sec, 2.5sec, 3.5sec or 4.5sec.


### Programming

1. Dial (53).  
"Pause Time" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 :3.5sec" will be displayed and 3.5sec will blink.
4. Repeat pressing the SELECT button until the desired time (1.5sec, 2.5sec, 3.5sec, 4.5sec) is displayed.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
7. Repeat steps 4 to 6, to program the assignment of the other CO numbers.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-20.

## Hookswitch Flash Timing

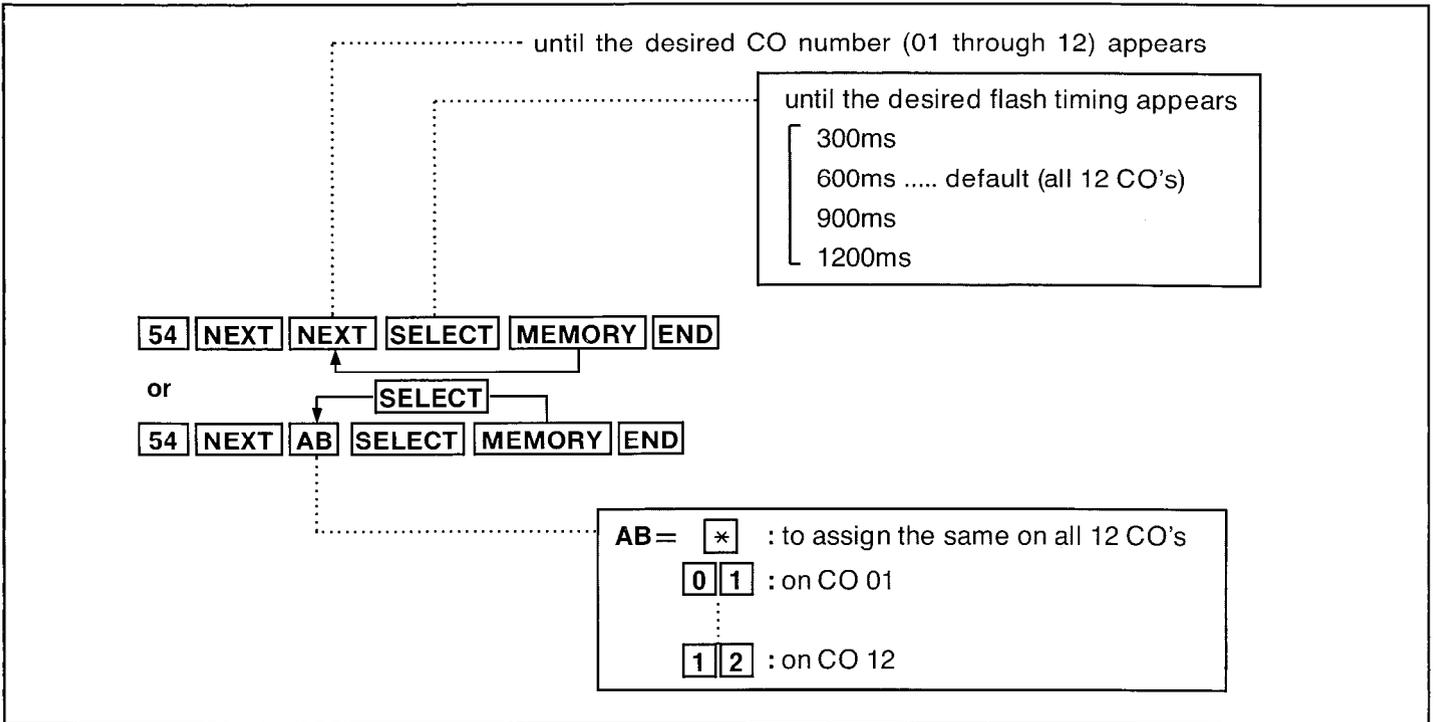

### Description

The timing of the hookswitch flash signal must be within the requirements from your Central Office. There are four choices available 0.3, 0.6, 0.9, or 1.2second.

- 6. ● To advance to the next CO number, press the NEXT button.
- To return to the previous CO number, press the PREV button.
- To go to the desired CO number, press the SELECT button and then dial the CO number.

7. Repeat steps 4 to 6, to set the hookswitch timing of the other CO's.

8. To return to the initial program mode, press the END button.

### Programming

1. Dial (54).  
"Flash Time Set" will be displayed.
2. Press the NEXT button.  
"CO NO ?→" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01 : 600ms" will be displayed and "600ms" will blink.
4. Repeat pressing the SELECT button until the desired value is displayed.
5. Press the MEMORY button.  
The LCD will stop blinking.

#### Example:


0.3 sec on all 12 CO=

54 NEXT \* SELECT SELECT SELECT  
MEMORY END

### Programming Table

See page 7-20.

## Calling Party Control (CPC) Signal

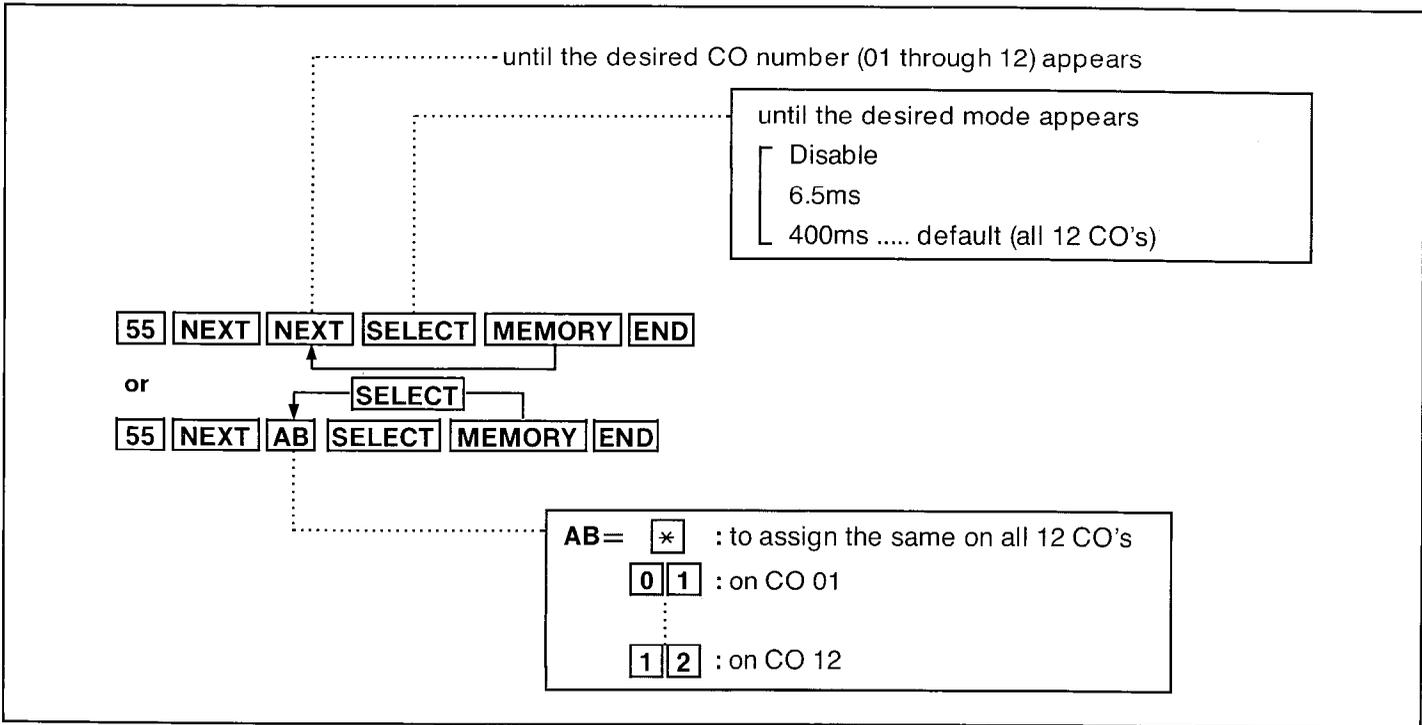

### Description

To detect that an outside party has hung up and then terminated the outside line (after a conversation, conference etc.) a CPC signal is needed. CPC signal detection can be removed or added at customer's request.


### Programming

1. Dial (55).  
"CPC Detection" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01: 400ms" will be displayed and "400ms" will blink.
4. Repeat pressing the SELECT button until the desired mode is displayed.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next CO number, press the NEXT button.  
● To return to the previous CO number, press the PREV button.  
● To go to the desired CO number, press the SELECT button and then dial the CO number.
7. Repeat steps 4 to 6, to program the assignment of the other CO's.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-20.

## Disconnect Time

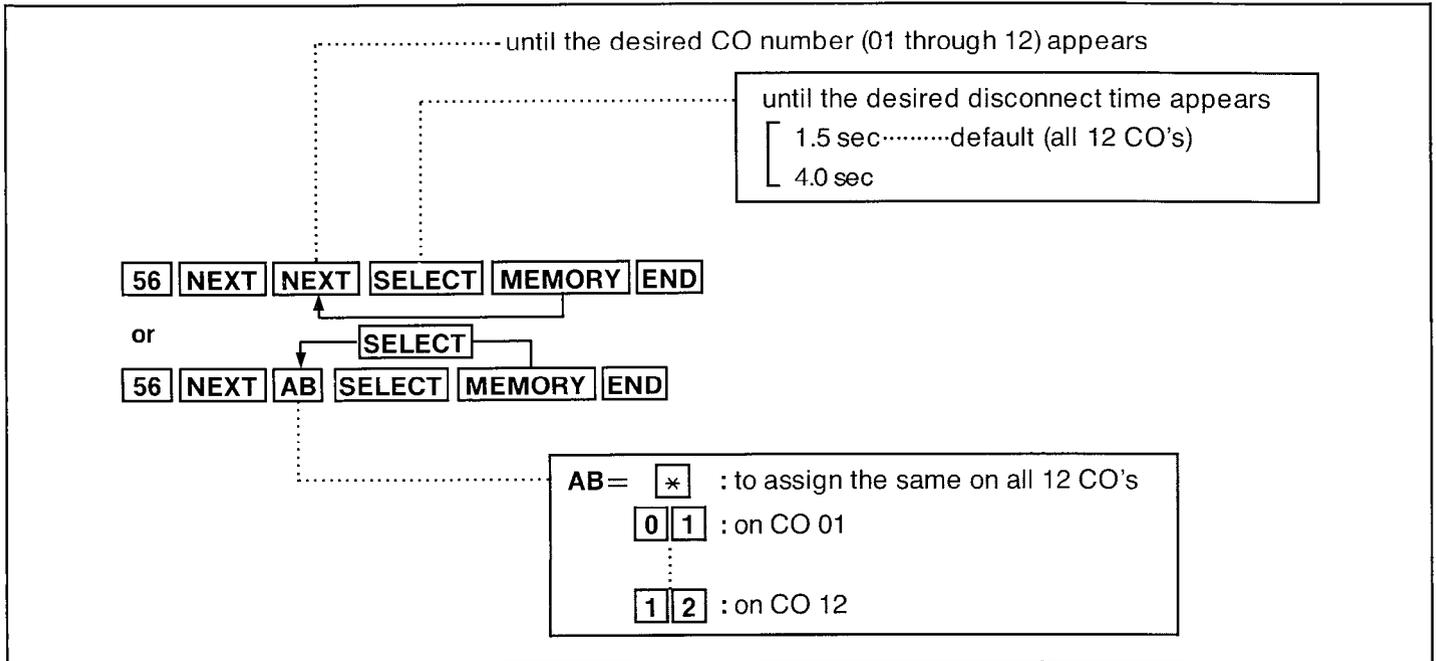

### Description

A certain amount of time is needed for an outside call to be released, this is necessary so that a new call may be attempted after disconnecting with the previous call.

There are two choices available, 1.5 and 4.0 seconds.

The time you select must be longer than the requirements from your Central Office or host PBX.

6. ● To advance to the next CO number, press the NEXT button.
  - To return to the previous CO number, press the PREV button.
  - To go to the desired CO number, press the SELECT button and then dial the CO number.
7. Repeat steps 4 to 6, to set the disconnect time for the other CO's.
  8. To return to the initial program mode, press the END button.

### Programming

1. Dial (56).  
"Disconnect Time" will be displayed.
2. Press the NEXT button.  
"CO NO ? →" will be displayed.
3. Press the NEXT button or dial the CO number (01 through 12).  
"CO 01:1.5 sec" will be displayed and "1.5 sec" will blink.
4. Press the SELECT button to alternate between 1.5 sec and 4.0 sec.
5. Press the MEMORY button.  
The LCD will stop blinking.

#### Example:

- 4.0 sec on all 12 CO's =


56 NEXT \* SELECT MEMORY END

### Programming Table

See page 7-20.

# Extension Feature

## Extension Group Assignment

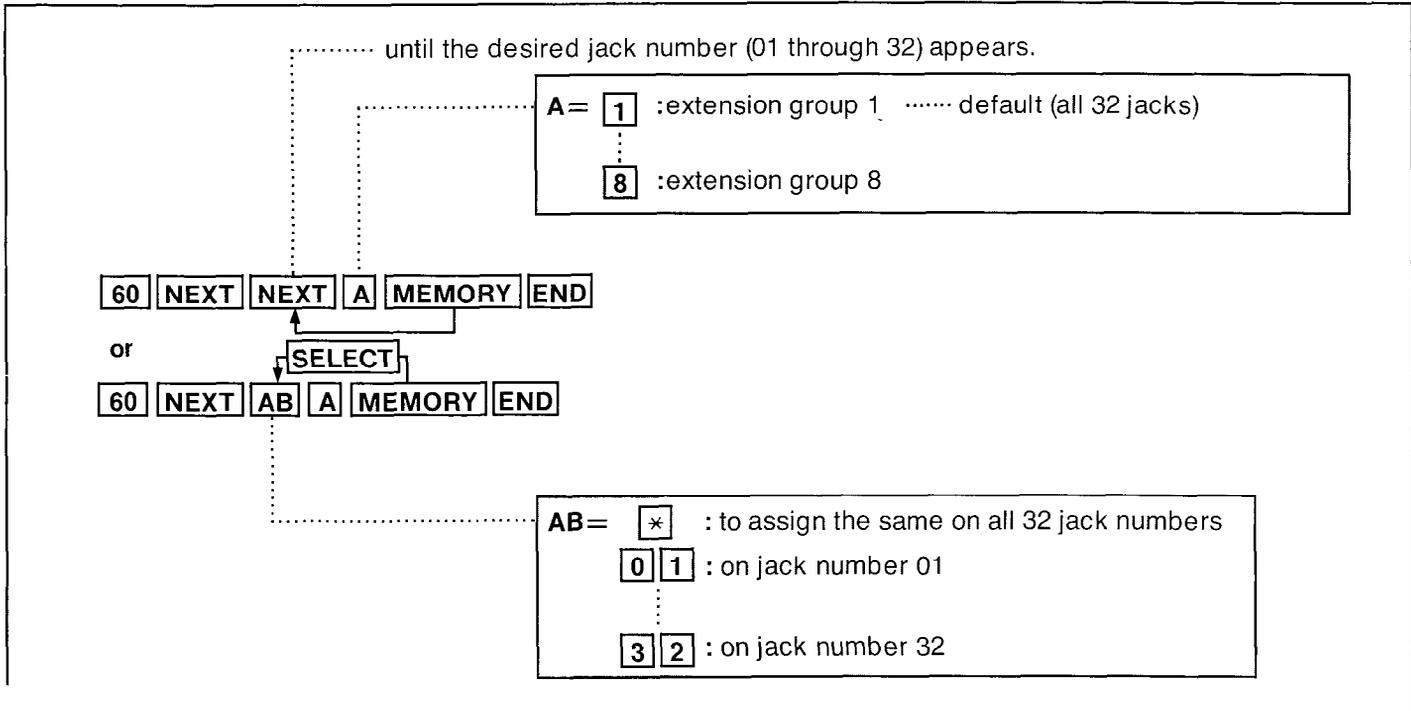

### Description

Enables grouping of extension numbers by department or floor by all extension numbers into a maximum of 8 separate extension groups. Each group has access to the "Paging Group" (on page 4-24), "Call Hunting" (on page 3-15), and "Dial Call Pickup" (on page 4-11) functions.

### Programming

1. Dial (60).  
"Extension Group" will be displayed.
2. Press the NEXT button.  
"Jack NO ? → " will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32).  
"#01 : EXT GRP-1" will be displayed.  
 ↖ jack number
4. Dial the extension group number (1 through 8).

5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next jack number, press the NEXT button.  
● To return to the previous jack number, press the PREV button.  
● To go to the desired jack number, press the SELECT button and then dial the jack number.
7. Repeat steps 4 to 6, to program the assignment of the other jack numbers.
8. To return to the initial program mode, press the END button.

### Conditions


- When you dial "\*" instead of pressing the NEXT button at step 3, in case all of 32 jack numbers have been programmed to extension group 1, "# \*:EXT GRP-1" will be displayed.  
In case each of 32 jack numbers has been programmed from extension group 1 to extension group 8, "# \*:Confused" will be displayed.

### Programming Table

See page 7-21.

## Service Class Assignment of Toll Restriction

### Day Mode

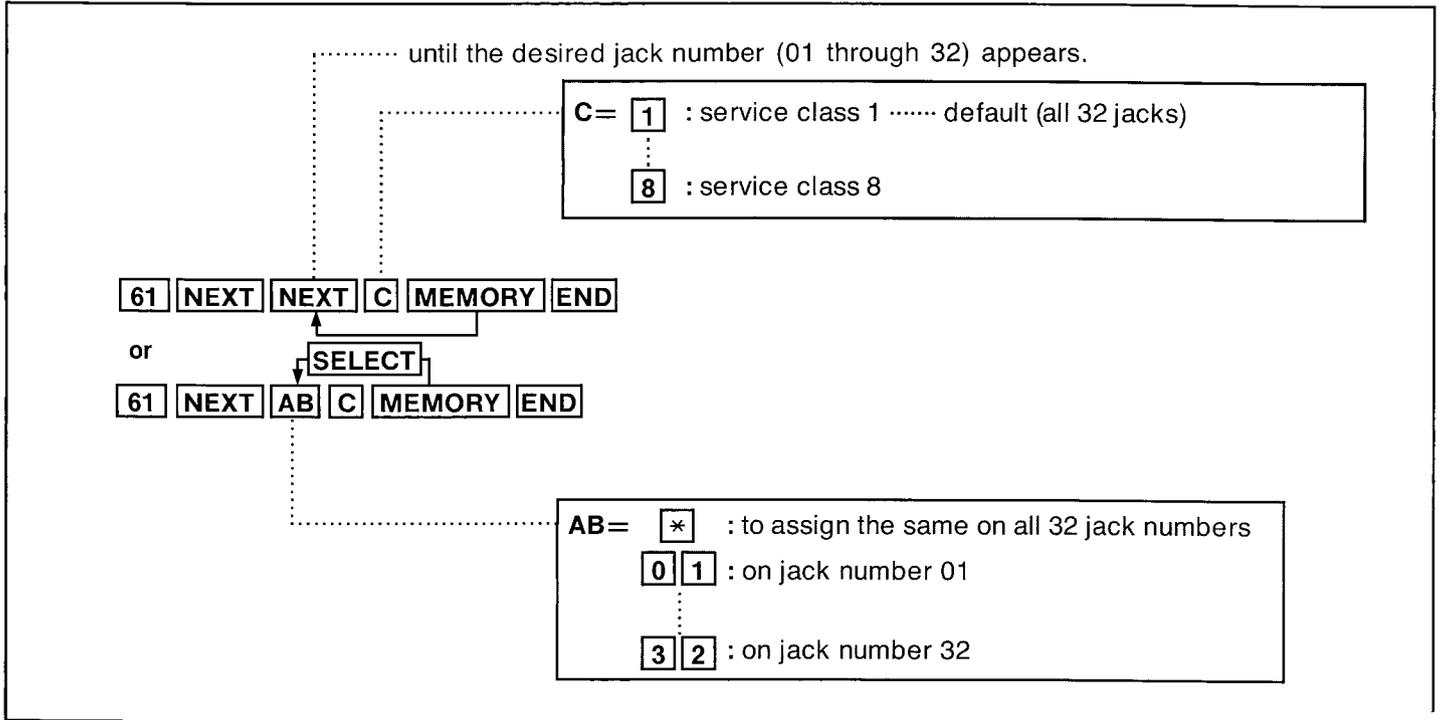

### Description

Used to prohibit selected extensions from making long distance calls during the day time.

Toll restriction can help eliminate telephone abuse and contribute to controlling telephone costs.

There are eight service classes available for each extension.

“Area Type Selection” on page 3-18 should be set.

To allow or deny dialing an Operator Call, see “CO Operator Call-Boundary Class” on page 3-19.

		Service Class Selections	
		Allowed	Denied
1.	all calls		
2.	<ul style="list-style-type: none"> <li>● toll calls</li> <li>● local calls (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> </ul>	
3.	<ul style="list-style-type: none"> <li>● selected area codes</li> <li>● local calls (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● any calls other than specific area code programmed</li> </ul>	
4.	<ul style="list-style-type: none"> <li>● local calls (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> </ul>	
5.	<ul style="list-style-type: none"> <li>● selected exchange codes (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> <li>● any calls other than specific exchange codes (charged) programmed</li> </ul>	
6.	<ul style="list-style-type: none"> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> <li>● local calls (charged)</li> </ul>	
7.	<ul style="list-style-type: none"> <li>● any calls other than specific exchange codes programmed</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> <li>● local calls (charged)</li> <li>● selected exchange codes</li> </ul>	
8.			all calls

- For service class 3, up to 20 area codes can be selected for use in toll dialing. See “Area Code Entry for Class 3” on page 3-22.
- For service class 5, up to 20 exchange code (charged) can be selected for use in local dialing (charged). See “Exchange Code Entry for Class 5” on page 3-23.
- For service class 7, up to 20 exchange code can be selected for no use in local dialing. See “Exchange Code Entry for Class 7” on page 3-24.
- For an area that uses Area code type as the exchange code, up to 20 exchange codes can be selected for use in local dialing. See “Exchange Code Selection” on page 3-21.


## Programming

1. Dial (61).  
“Day Toll Restrct” will be displayed.
2. Press the NEXT button.  
“Jack NO ? → ” will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32 ).  
“#01 : Class-1” will be displayed and “1” will blink.  
  - ↑ jack number
4. Press the service class number (1 through 8).
5. Press the MEMORY button.  
The LCD will stop blinking.
6.
  - To advance to the next jack number, press the NEXT button.
  - To return to the previous jack number, press the PREV button.
  - To go to the desired jack number, press the SELECT button and then dial the jack number.
7. Repeat steps 4 to 6, to program the assignment on the other jack numbers.
8. To return to the initial program mode, press the END button.

## Programming Table

See page 7-21.

**Night Mode**

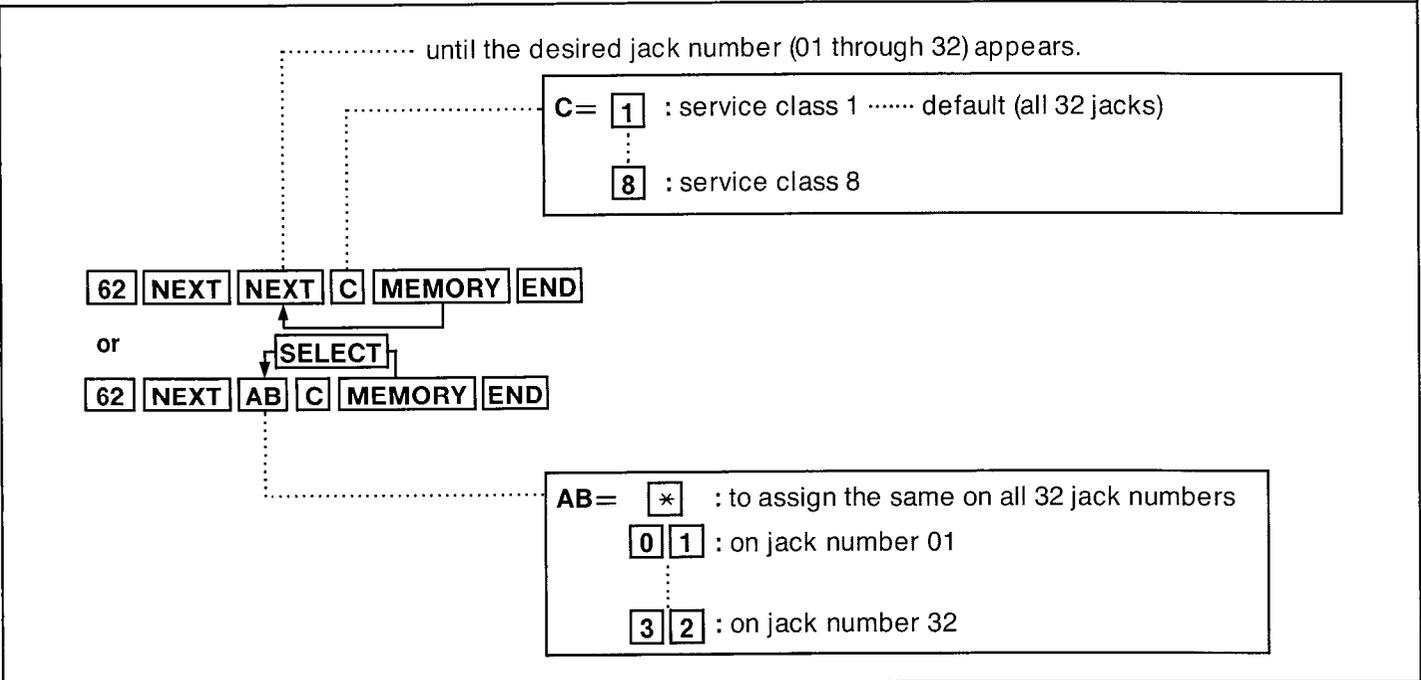

**Description**

Used to prohibit selected extensions from making long distance calls during the night time.

Toll restriction can help eliminate telephone abuse and contribute to controlling telephone costs.

There are eight service classes available for each extension.

“Area Type Selection” on page 3-18 should be set.

To allow or deny dialing an Operator Call, see “CO Operator Call-Boundary Class” on page 3-19.

Service Class Selections		
	Allowed	Denied
1.	all calls	
2.	<ul style="list-style-type: none"> <li>● toll calls</li> <li>● local calls (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> </ul>
3.	<ul style="list-style-type: none"> <li>● selected area codes</li> <li>● local calls (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● any calls other than specific area code programmed</li> </ul>
4.	<ul style="list-style-type: none"> <li>● local calls (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> </ul>
5.	<ul style="list-style-type: none"> <li>● selected exchange codes (charged)</li> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> <li>● any calls other than specific exchange codes (charged) programmed</li> </ul>
6.	<ul style="list-style-type: none"> <li>● local calls</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> <li>● local calls (charged)</li> </ul>
7.	<ul style="list-style-type: none"> <li>● any calls other than specific exchange codes programmed</li> </ul>	<ul style="list-style-type: none"> <li>● international calls</li> <li>● toll calls</li> <li>● local calls (charged)</li> <li>● selected exchange codes</li> </ul>
8.		all calls

- For service class 3, up to 20 area codes can be selected for use in toll dialing. See “Area Code Entry for Class 3” on page 3-22.
- For service class 5, up to 20 exchange code (charged) can be selected for use in local dialing (charged). See “Exchange Code Entry for Class 5” on page 3-23.
- For service class 7, up to 20 exchange code can be selected for no use in local dialing. See “Exchange Code Entry for Class 7” on page 3-24.
- For an area that uses area code type as that exchange code, up to 20 exchange codes can be selected for use in local dialing. See “Exchange Code Selection” on page 3-21.


### Programming

1. Dial (62).  
“Nig Toll Restrct” will be displayed.
2. Press the NEXT button.  
“Jack NO ? → ” will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32 ).  
“#01 : Class-1” will be displayed and “1” will blink.  
    ↑ jack number
4. Press the service class number (1 through 8).
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next jack number, press the NEXT button.  
    ● To return to the previous jack number, press the PREV button.  
    ● To go to the desired jack number, press the SELECT button and then dial the jack number.
7. Repeat steps 4 to 6, to program the assignment on the other jack numbers.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-22.

## Extension Name

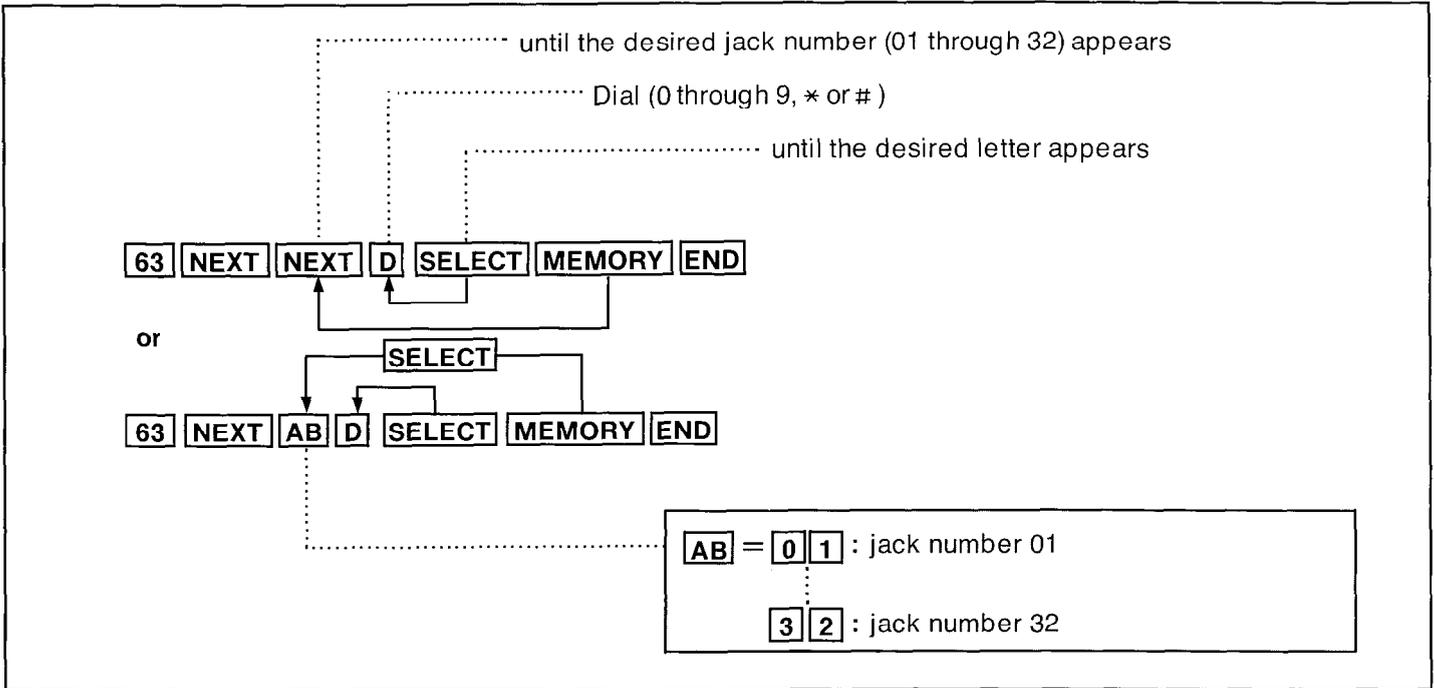

### Description

Each extension can be programmed by name and will be displayed on the display phone when making or receiving intercom calls.

### Programming

1. Dial (63).  
"Extension Name" will be displayed.
2. Press the NEXT button.  
"Jack NO ? →" will be displayed.
3. Press the NEXT button or dial jack number (01 through 32).  
"#01 :       " will be displayed.  
    └─ jack number
4. To program the extension name,
  - ① Dial (0 through 9, \* or #)
  - ② Press the SELECT button until the desired letter appears.
  - ③ Repeat steps ① and ②, to program the desired name.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next jack number, press the NEXT button.  
● To return to the previous jack number, press the PREV button.  
● To go to the desired jack number, press the SELECT button and then dial the jack number.

Dial	Display					
	Press the SELECT button					
1	Q	q	Z	z	!	?
2	A	a	B	b	C	c
3	D	d	E	e	F	f
4	G	g	H	h	I	i
5	J	j	K	k	L	l
6	M	m	N	n	O	o
7	P	p	R	r	S	s
8	T	t	U	u	V	v
9	W	w	X	x	Y	y
0		.	,	'	:	;
*	"	+	-	=	<	>
#	\$	%	&	@	(	)

7. Repeat steps 4 to 6, to program the other extension names of jack numbers.
8. To return to the initial program mode, press the END button.

## Conditions

- To erase all letters, press the CLEAR button.
- To erase one letter, press the  button.
- The maximum numbers of letters can not exceed ten.


### Example:

- To program jack number 01 for ..... Mr.Brown

	Display
1. <b>63</b> <b>NEXT</b> <b>01</b>	
2. Dial (2). .....	#01 : 2
3. Press the SELECT button three times. ....	#01 : B
4. Dial (7). .....	#01 : B7
5. Press the SELECT button four times. ....	#01 : Br
6. Dial (6). .....	#01 : Br6
7. Press the SELECT button six times. ....	#01 : Bro
8. Dial (9). .....	#01 : Bro9
9. Press the SELECT button two times. ....	#01 : Brow
10. Dial (6). .....	#01 : Brow6
11. Press the SELECT button four times. ....	#01 : Brown
12. <b>MEMORY</b> <b>END</b>	

There is a phone number directory on page 7-1

## Account Code Input Mode

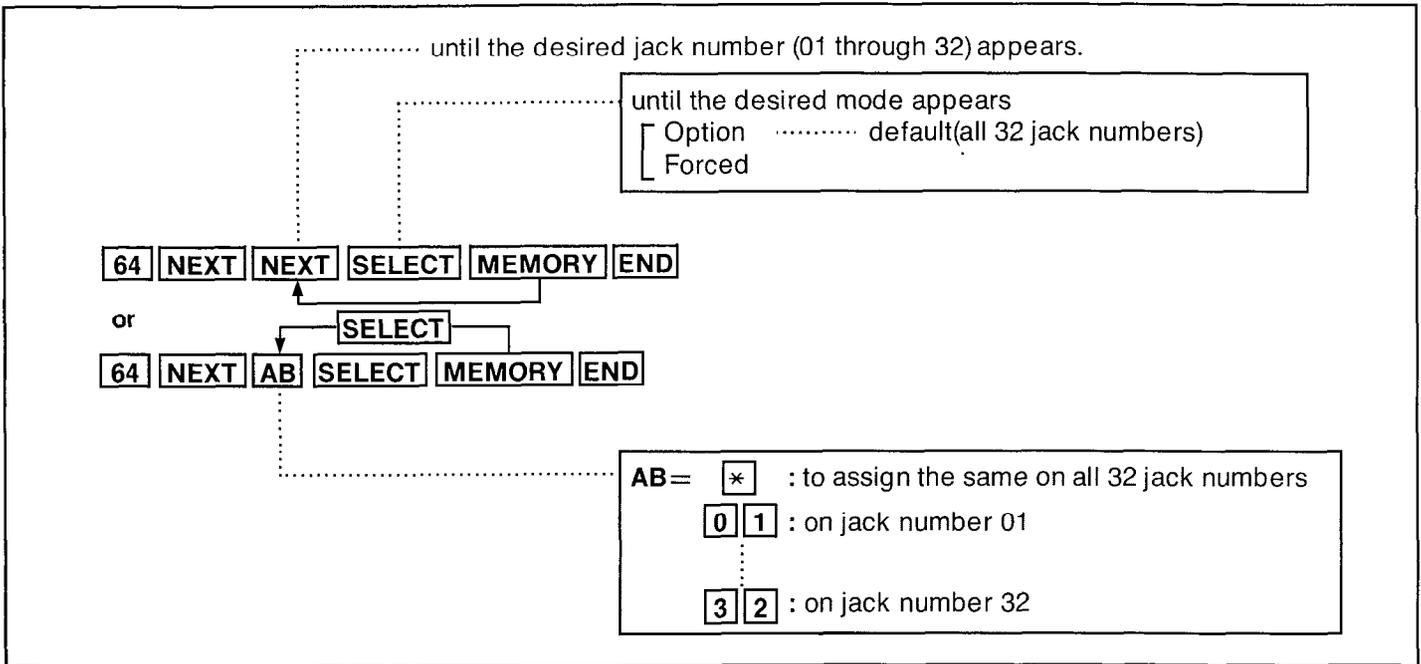

### Description

This feature gives each message of the SMDR an account code of the called or calling party. This feature has two modes "Forced" and "Option". In the "Forced" mode, the account code must be entered every time extension user dials. In the "Option" mode, the account code may be entered when a record is needed. Refer to "Account Code" page 4-39.

### Programming

1. Dial (64).  
"Call Accounting" will be displayed.
2. Press the NEXT button.  
"Jack NO?→" will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32).  
"#01 : Option" will be displayed and the  


jack number  
 "Option" will blink.
4. Press the SELECT button to alternate between "Option" and "Forced" to select the desired mode.

5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next jack number, press the NEXT button.  
● To return to the previous jack number, press the PREV button.  
● To go to the desired jack number, press the SELECT button and then dial the jack number.
7. Repeat steps 4 to 6, to program the account code of the other jack numbers.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-22.

## Call Transfer To Outside Line

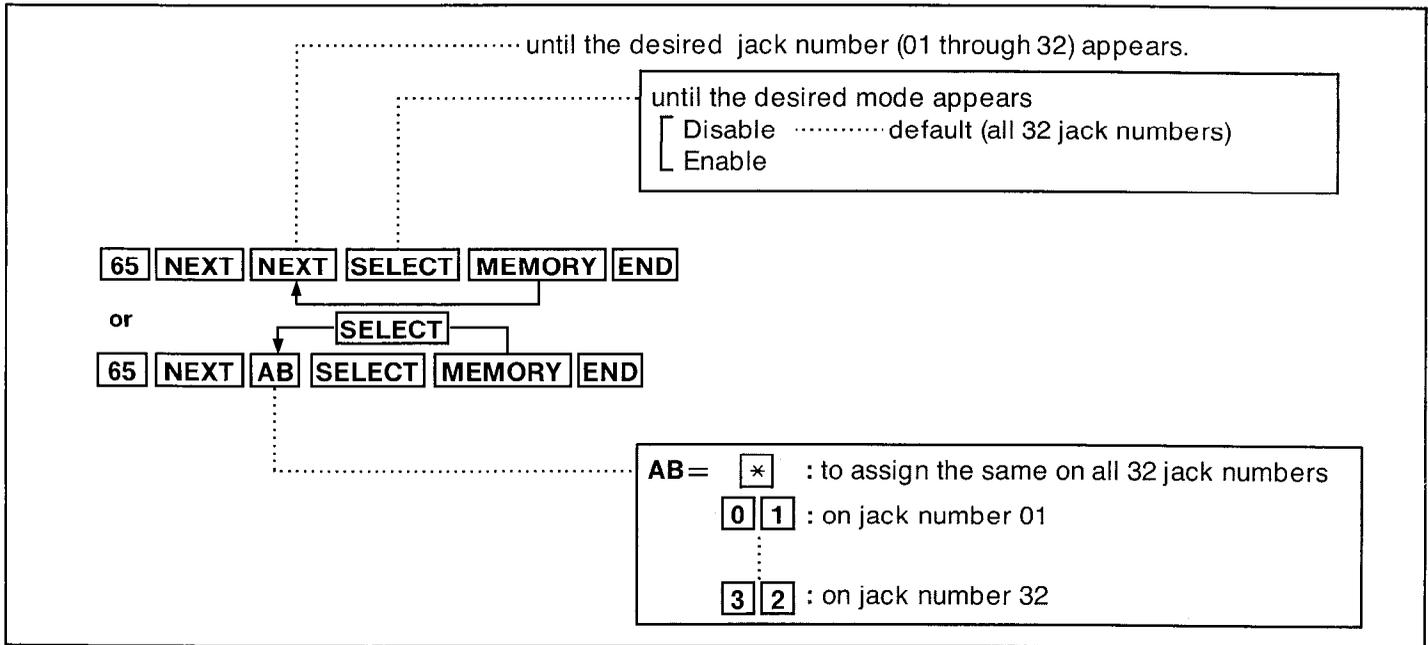

### Description

Through programming, you can select whether an extension can transfer an intercom or outside call to another outside line manually.

### Programming


1. Dial (65).  
"Transfer to CO" will be displayed.
2. Press the NEXT button.  
"Jack NO ? → " will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32).  
"#01 : "Disable" will be displayed and "Disable" will blink.  
 ↑  
jack number
4. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next jack number, press the NEXT button.  
 ● To return to the previous jack number, press the PREV button.  
 ● To go to the desired jack number, press the SELECT button and then dial the jack number.

7. Repeat steps 4 to 6, to program the assignment of the other jack numbers.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-23.

## Call Forwarding To Outside Line

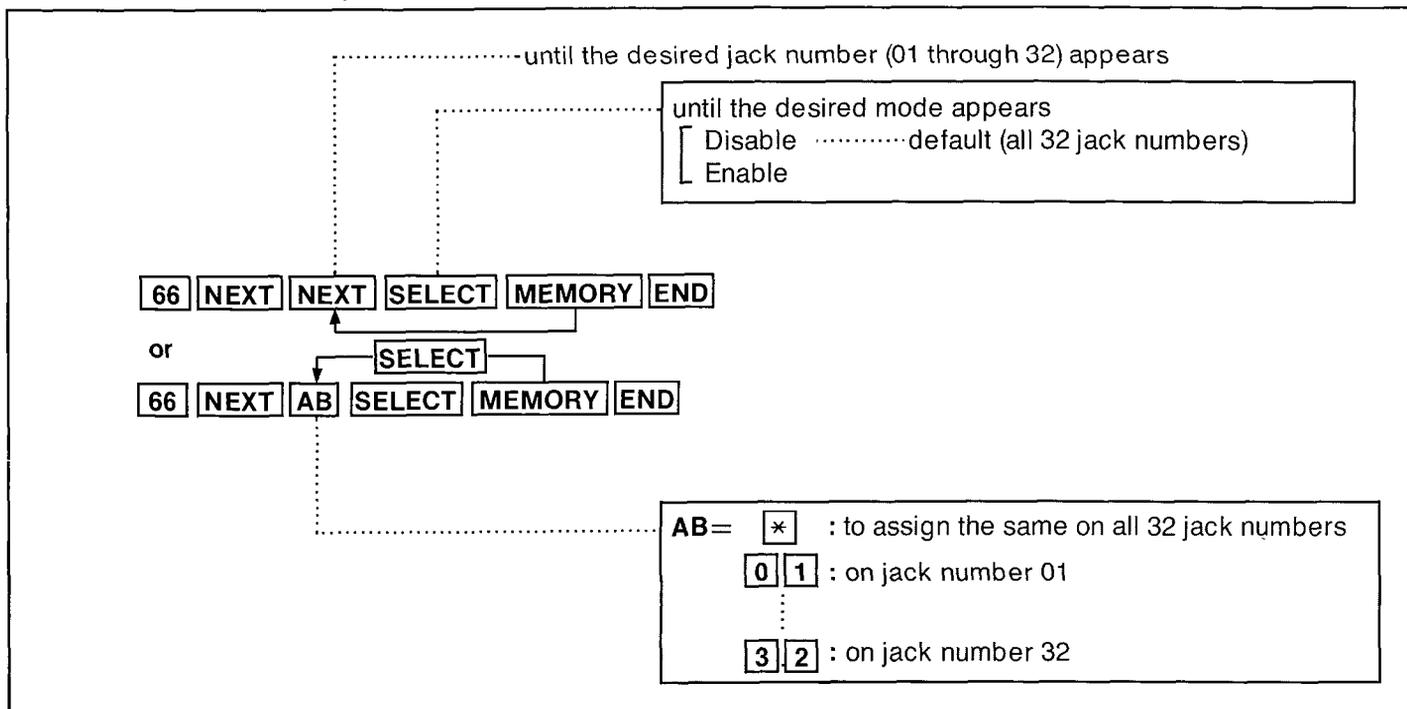

### Description

“Call Forwarding To Outside Line” (on page 4-28) can be enabled for each extension.

### Programming


1. Dial (66).  
“CO Forward” will be displayed.
2. Press the NEXT button.  
“Jack NO ? → ” will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32).  
“#01 : Disable” will be displayed and “Disable”  
↑ jack number  
will blink.
4. Press the SELECT button to alternate between “Enable” and “Disable” to select the desired mode.
5. Press the MEMORY button.  
The LCD will stop blinking.
6.
  - To advance to the next jack number, press the NEXT button.
  - To return to the previous jack number, press the PREV button.
  - To go to the desired jack number, press the SELECT button and then dial the jack number.

7. Repeat steps 4 to 6 to program the assignment of the other jack numbers.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-23.

## Executive Override

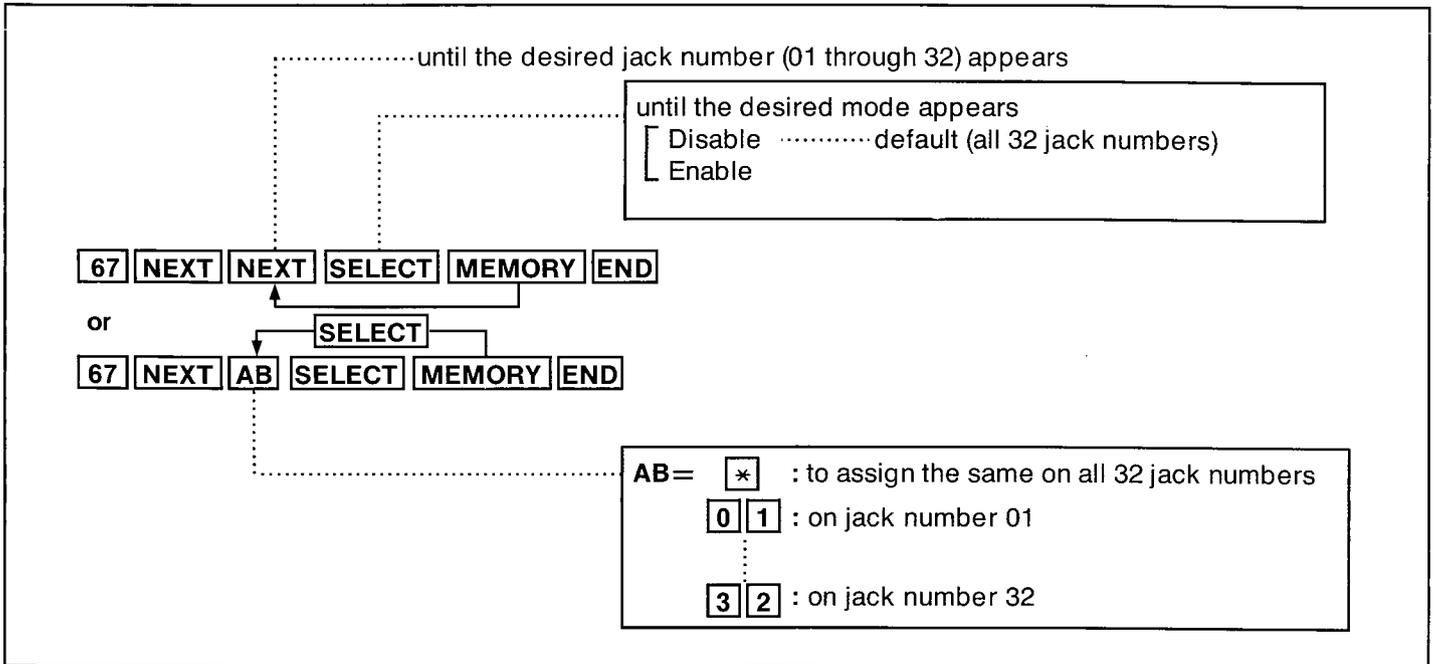

### Description

Through programming, allows an extension user to intrude into another extension that is in conversation with an outside party or inside party. Refer to "Executive Override (Barge-In) on page 4-9.

### Programming

1. Dial (67).  
"Busy Override" will be displayed.
2. Press the NEXT button.  
"Jack NO ? → " will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32 ).  
"#01 : Disable" will be displayed and "Disable" will blink.  


jack number
4. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ● To advance to the next jack number, press the NEXT button.  
 ● To return to the previous jack number, press the PREV button.  
 ● To go to the desired jack number, press the SELECT button and then dial the jack number.

7. Repeat steps 4 to 6, to program the assignment of the other jack numbers.
8. To return to the initial program mode, press the END button.

### Programming Table

See page 7-23.

## Do not Disturb Override

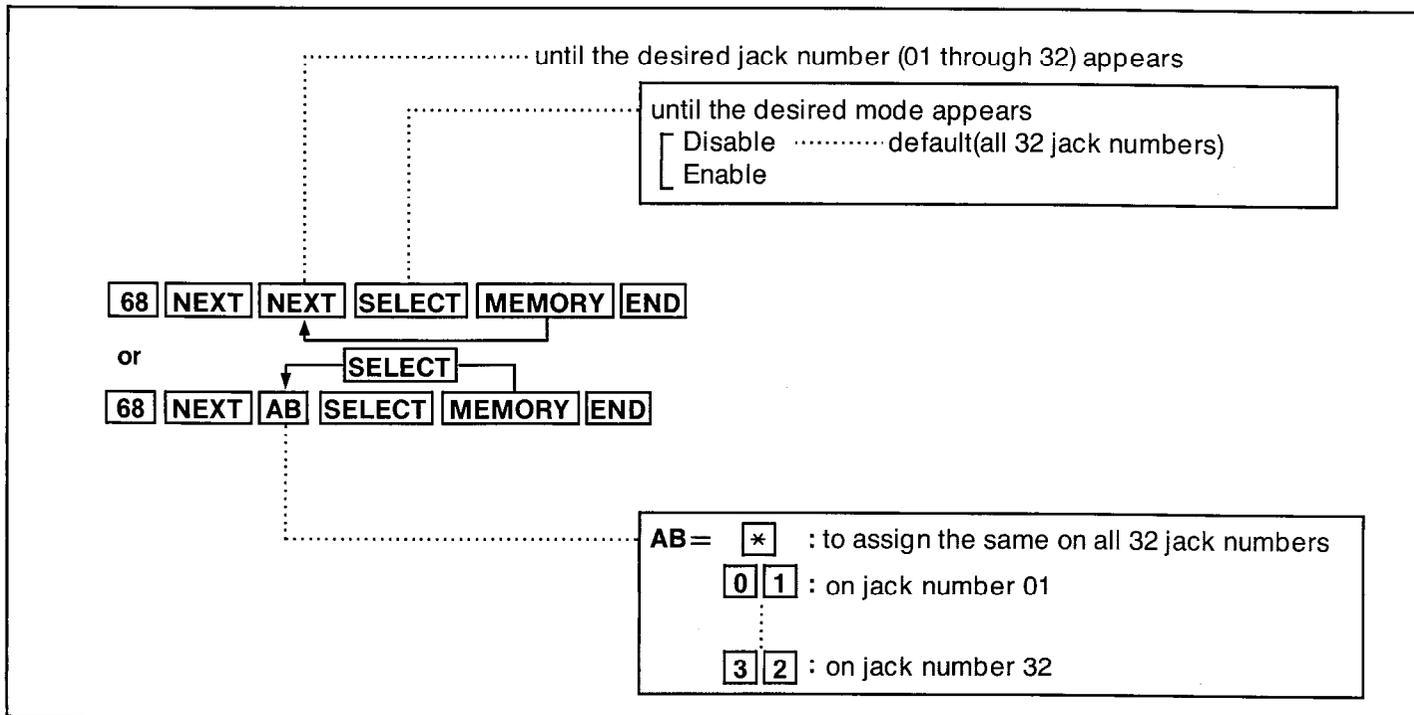

### Description

This feature can dial to the extension that is setting the Do Not Disturb by programming. Refer to "Do Not Disturb Override" on page 4-31.

### Programming

1. Dial (68).  
"DND Override" will be displayed.
2. Press the NEXT button.  
"Jack NO ? →" will be displayed.
3. Press the NEXT button or dial the jack number (01 through 32).  
"#01 : Disable" will be displayed and "Disable"  
↑ jack number  
 will blink.
4. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
5. Press the MEMORY button.  
The LCD will stop blinking.
6. ●To advance to the next jack number, press the NEXT button.  
 ●To return to the previous jack number, press the PREV button.  
 ●To go to the desired jack number, press the SELECT button and then dial the jack number.

7. Repeat steps 4 to 6, to program the assignment of the other jack numbers.
8. To return to the initial program mode, press the END button.

### Conditions

This feature allows you to ring an extension that is set for the "Do Not Disturb" mode.


### Programming Table

See page 7-24.

# Doorphone Feature

## Ringing Assignment from Doorphone

Day Mode

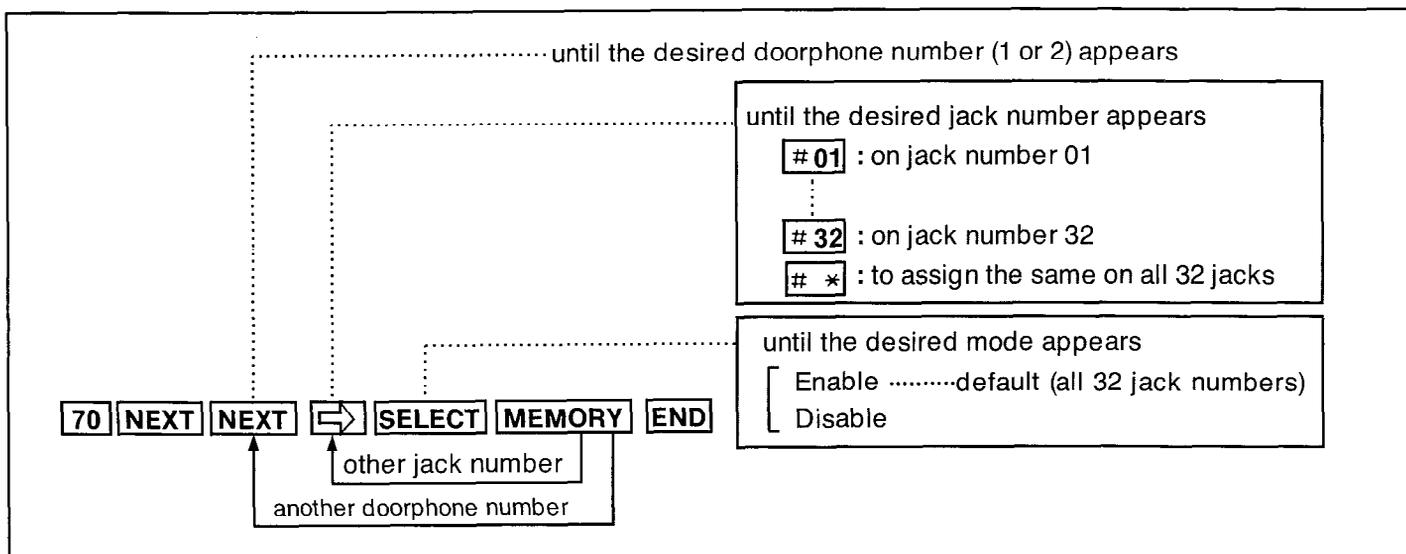

### Description

Allows each extension to be programmed for receiving calls from up to 2 doorphones during the day mode.

(Doorphone is an option.)

### Programming


1. Dial (70).  
"Day Door Phone" will be displayed.
2. Press the NEXT button.  
"Door NO ? →" will be displayed.
3. Press the NEXT button or dial the doorphone number (1 or 2).  
"DP-1: #01 : Enable" will be displayed.  

# jack number
4. Repeat pressing the → button until the desired jack number appears, or press the # button and then dial the jack number.
5. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
6. Press the MEMORY button.  
The LCD will stop blinking.
7. ● To advance to the next jack number, press the → button.  
● To return to the previous jack number, press the ← button.  
● To go to the desired jack number, press the # button and then dial the jack number.
8. Repeat steps 5 to 7, to program the assignment of the other jack numbers.
9. Repeat steps 3 to 8, to program the assignment of the another doorphone.
10. To return to the initial program mode, press the END button.

### Programming Table

See page 7-24.

## Night Mode

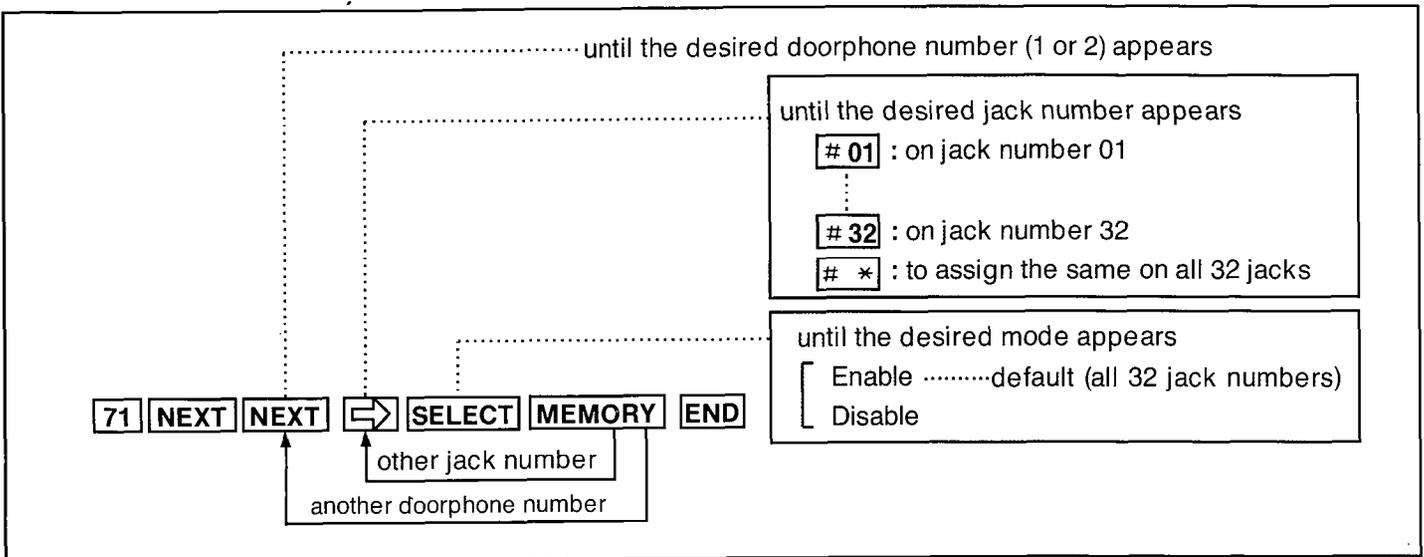

### Description

Allows each extension to be programmed for receiving calls from up to 2 doorphones during the night mode.

(Doorphone is an option.)


### Programming

1. Dial (71).  
"Night Door Phone" will be displayed.
2. Press the NEXT button.  
"Door NO ? →" will be displayed.
3. Press the NEXT button or dial the doorphone number (1 or 2).  
"DP-1 : # 01 : Enable" will be displayed.  
    ↑  
    jack number
4. Repeat pressing the  button until the desired jack number appears, or press the  button and then dial the jack number.
5. Press the SELECT button to alternate between "Enable" and "Disable" to select the desired mode.
6. Press the MEMORY button.  
The LCD will stop blinking.
7. ● To advance to the next jack number, press the  button.  
● To return to the previous jack number, press the  button.  
● To go to the desired jack number, press the  button and then dial the jack number.
8. Repeat steps 5 to 7, to program the assignment of the other jack numbers.
9. Repeat steps 3 to 8, to program the assignment of the another doorphone.
10. To return to the initial program mode, press the END button.

### Programming Table

See page 7-25.

## Call on Hold for Standard Telephone

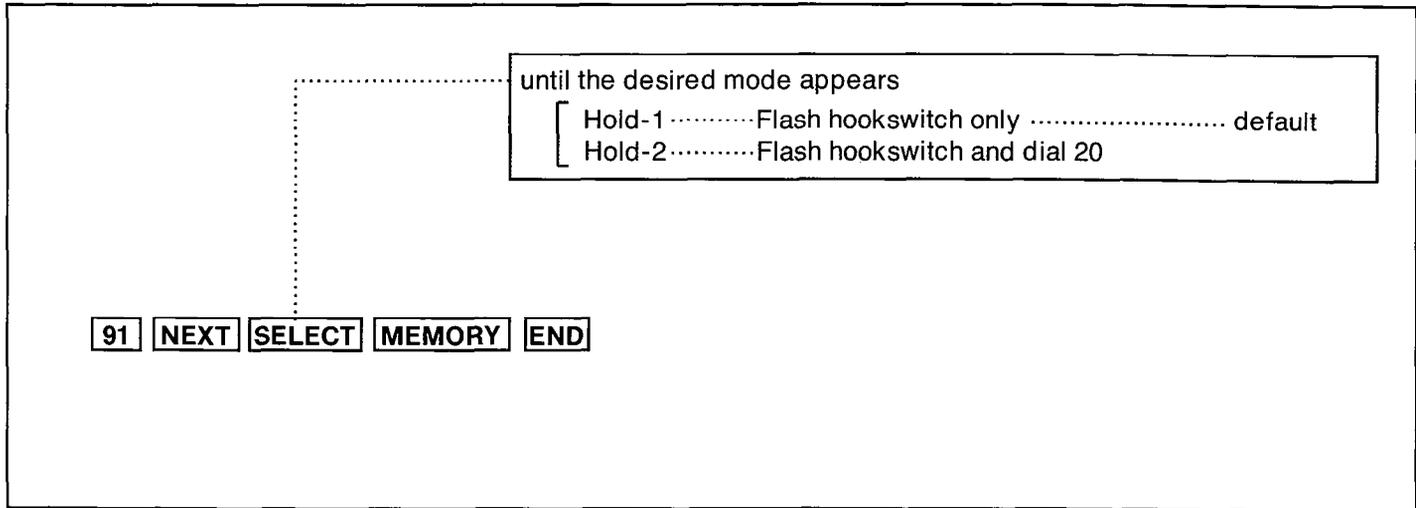

### Description

If a standard telephone at the extension ring immediately after hanging up or about 30 sec later, this programming step will eliminate the problem by requiring the extension to dial 20 after hook flashing in the Hold-2 mode.

The following operation is changed when "Hold-2" mode is set.

- Call Park (on page 5-4)
- Call on Hold (on page 5-4)
- Conference (on page 5-5)
- Call Waiting (on page 5-5)
- Call Splitting (on page 5-6)
- Call Transfer (on page 5-6)
- Paging And Transfer (on page 5-8)
- External Feature Access (on page 5-9)
- Account Code (on page 5-10)

### Programming

1. Dial (91)  
"Option" will be displayed.
2. Press the NEXT button.  
"Hold-1" will be displayed and blink.
3. Press the SELECT button to alternate between "Hold-1" and "Hold-2" to select the desired mode.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. To return to the initial program mode, press the END button.

### Programming Table

See page 7-25

## System Data Clear

- All Parameters
- System Parameter
- Speed Call

until the desired mode appears

All	Para	..... default
System	Para	
CO	Para	
EXT	Para	
DSS	Para	
Speed	Call	

99 NEXT SELECT MEMORY END

- CO Parameter (Outside)

until the CO Para appears

AB= \* : to assign the same on all 12 CO's  
 0 1 : on CO 01  
 ...  
 1 2 : on CO 12

99 NEXT SELECT MEMORY AB MEMORY END

- Extension Parameter

until the EXT Para appears

AB= \* : to assign the same on all 32 jack numbers  
 0 1 : on jack number 01  
 ...  
 3 2 : on jack number 32

99 NEXT SELECT MEMORY AB MEMORY END

- DSS Parameter

until the DSS Para appears

A= \* : to assign the same on both DSS's  
 1 : on DSS 1  
 2 : on DSS 2

99 NEXT SELECT MEMORY A MEMORY END

## Description

The system Data features are preset as the default data of the programming.

### All parameters

- System parameters
- CO parameters
- Extension parameters
- DSS parameters
- Speed call

### System parameters

- Extension Number Assignment
- Operator Assignment
- Paired Telephone Assignment for DSS Console
- Automatic CO Hold Using DSS Button
- Day/ Night Service Mode
- Call Hunting
- Toll Restriction
- Hold Time Reminder
- Hold Recall Time Set
- Transfer Recall Time
- Call Forwarding Starting Time
- Pickup Dial Delay Time
- Co-to-Co Duration Time Limit
- Station Message Detail Recording (SMDR)
- Duration Time Count Start Mode
- External Paging Access Tone
- Call on Hold for Standard Telephone
- Ringing Assignment from Doorphone

### CO parameters

- CO Connection Assignment
- Dial Mode (DTMF/ Pulse)
- Host PBX Access Codes Assignment
- Trunk Group Assignment
- Flexible Outward Dialing Assignment
- Flexible Ringing Assignment
- Delayed Ringing Assignment
- CO Direct In Line Assignment
- Pause Time Assignment
- Hookswitch Flash Timing
- Calling Party Control (CPC) Signal
- Disconnect Time

### Extension parameters

- Extension Group Assignment
- Service Class Assignment of Toll Restriction
- Extension Name
- Account Code Input Mode
- Call Transfer to Outside Line
- Call Forwarding to Outside Line
- Executive Override
- Do not Disturb Override

- One Touch Access for System Features
- CO Line Ringing Selection
- Auto CO Hunting
- Automatic Answering Selection
- Flexible CO Button
- Intercom Voice Alerting Mode
- Background Music
- Station Number Check
- F3 -One Touch Button Mode Selection
- Call waiting Tone Selection

- Call Forwarding
- Do Not Disturb
- Dial Call Pickup Deny
- Data Line Security
- Pickup Dial
- Absent Message Capability
- Call Waiting Tone Deny
- Flexible Night Service
- Executive Override Deny

### DSS parameters

- DSS button of the DSS Console
- Feature button of the DSS Console

### Speed call

Speed access codes (00 through 99) in which phone numbers are stored may be preset.

## Programming

### To set System Parameters, Speed Call or All Parameters to the default data ;

1. Dial (99).  
"System Clear" will be displayed.
2. Press the NEXT button.  
"Menu : All Para" will be displayed and  
"All Para" will blink.
3. Repeat pressing the SELECT button until the  
desired data mode is displayed.
4. Press the MEMORY button.  
The LCD will stop blinking.
5. Repeat steps 3 to 4, to clear the other system  
data.

### To set CO Parameter to the default data ;

1. Dial (99).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the  
"CO Para" is displayed.
4. Press the MEMORY button.  
"CO NO ? →" is displayed.
5. Dial the CO number (01 through 12).  
When dialing (01),  
"CO NO ? → 01" will be displayed.
6. Press the MEMORY button.  
The LCD will stop blinking.
7. Repeat steps 5 to 6, to clear the other CO  
parameter.

### To set Extension Parameter to the default data ;

1. Dial (99).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the  
"EXT Para" is displayed.
4. Press the MEMORY button.  
"Jack NO ? →" is displayed.
5. Dial the jack number. (01 through 32)  
When dialing (01),  
"Jack NO ? → 01" will be displayed.
6. Press the MEMORY button.  
The LCD will stop blinking.
7. Repeat steps 5 to 6, to clear the other extension  
parameter.

### To set DSS Parameter to the default data ;

1. Dial (99).
2. Press the NEXT button.
3. Repeat pressing the SELECT button until the  
"DSS Para" is displayed.
4. Press the MEMORY button.  
"DSS NO ? →" is displayed.
5. Dial the DSS number (1 or 2).  
When dialing (1),  
"DSS NO ? → 1" will be displayed.
6. Press the MEMORY button.  
The LCD will stop blinking.
7. Repeat steps 5 to 6, to clear the another DSS  
parameter.

### After completing clearing, and to return to the initial mode ;

1. Press the END button.

## Example of Flexible CO Button

(KX-T61631, KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820, KX-T30850)

When you connect EMSS PROPRIETARY TELEPHONE (KX-T61631, KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850) to the KX-T123210 system, change the programming of CO button or DSS button to have them operate properly.

The default of CO button or DSS button is assigned as following.

- In case of KX-T61631, KX-T61630, KX-T61620 and KX-T61650,

CO button on which "CO1" is printed	—————	CO1 Line
CO button on which "CO2" is printed	—————	CO2 Line
CO button on which "CO3" is printed	—————	CO3 Line
CO button on which "CO4" is printed	—————	CO4 Line
CO button on which "CO5" is printed	—————	CO5 Line
CO button on which "CO6" is printed	—————	CO6 Line

- In case of KX-T30830, KX-T30820 and KX-T30850,

CO button on which "CO1" is printed	—————	CO1 Line
CO button on which "CO2" is printed	—————	CO2 Line
CO button on which "CO3" is printed	—————	CO3 Line

- In case of KX-T30830 only,

DSS button on which "DSS11" is printed	—————	Extension no. of Jack no. 01
DSS button on which "DSS12" is printed	—————	Extension no. of Jack no. 02
DSS button on which "DSS13" is printed	—————	Extension no. of Jack no. 03
DSS button on which "DSS14" is printed	—————	Extension no. of Jack no. 04
DSS button on which "DSS15" is printed	—————	Extension no. of Jack no. 05
DSS button on which "DSS16" is printed	—————	Extension no. of Jack no. 06
DSS button on which "DSS17" is printed	—————	Extension no. of Jack no. 07
DSS button on which "DSS18" is printed	—————	Extension no. of Jack no. 08

Change the default of CO button or DSS button by the programming of "Flexible CO Button" or "Flexible DSS Button".

### Flexible CO Button

- "To change into other CO number" on page 4-53
- "To assign into trunk group access number" on page 4-53
- "To change into DSS button" on page 4-54
- "To change into one touch dialing button" on page 4-54
- "To change into message waiting button" on page 4-55
- "To change into other all CO numbers" on page 4-55

### Flexible DSS Button (KX-T30830 only).

- "To change into other DSS number" on page 4-57
- "To change into one touch dialing button" on page 4-57
- "To change into message waiting button" on page 4-58

## Examples

The outside lines of KX-T123210 is connected 8 CO's from Central Office (CO).  
Extension No 105 (Jack No. 05) is set up beforehand by System Programming as followings.


### System Programming

- Flexible Outward Dialing Assignment (Both Day and Night Mode) ————— CO1 through CO7 are "Enable"  
CO8 is "Disable".
- Flexible Ringing Assignment (Both Day and Night Mode) ————— CO1 through CO7 are "Enable"  
CO8 is "Disable".
- Trunk Group Assignment —————
 

Trunk Group 1	: CO1, CO2, CO3
Trunk Group 2	: CO4, CO5, CO6
Trunk Group 3	: CO7, CO8

### Case

If you connect KX-T30820 at Extension 105 (Jack No. 05) and set the CO button of KX-T30820 as shown in Fig.1, Outgoing calls and Incoming calls in Extension 105 (Jack No. 05) are operated as followings.

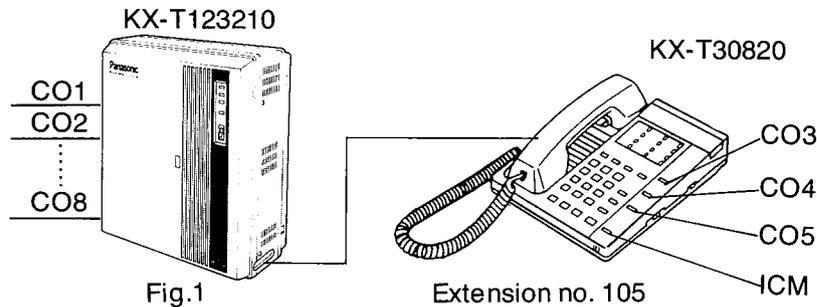

- |                                     |        |   |             |
|-------------------------------------|--------|---|-------------|
| CO Button on which "CO1" is printed | Change | → | CO3 Button. |
| CO Button on which "CO2" is printed |        | → | CO4 Button. |
| CO Button on which "CO3" is printed |        | → | CO5 Button. |

- To change into other CO Button, see page "To change into other CO number" on page 4-53.

### Outgoing calls:

- Pressing CO3 Button —————→ Access CO3 Line
- Pressing CO4 Button —————→ Access CO4 Line
- Pressing CO5 Button —————→ Access CO5 Line
- Dialing 8 1 (Trunk group 1) —————→ Access only CO3 Line
- Dialing 8 2 (Trunk group 2) —————→ Access only CO4 and CO5 Lines
- Dialing 8 3 (Trunk group 3) —————→ No access CO Line
- You cannot dial through CO1 Line, CO2 Line and CO6 Line through CO8 Line


### Incoming calls:

- The calls which reaches through the CO3 Line through CO5 Line can be received.
- The calls which reaches through the CO1 Line, CO2 Line, CO6 Line through CO8 Line can not be received.

The CO Line which is not assigned to the CO Button cannot be dialed or received.

**Case 2**

If you connect KX-T30820 at Extension 105 (Jack No. 05) and set the CO button of KX-T30820 as shown in Fig. 2, Outgoing calls and Incoming calls in Extension 105 (Jack No. 05) are operated as followings.

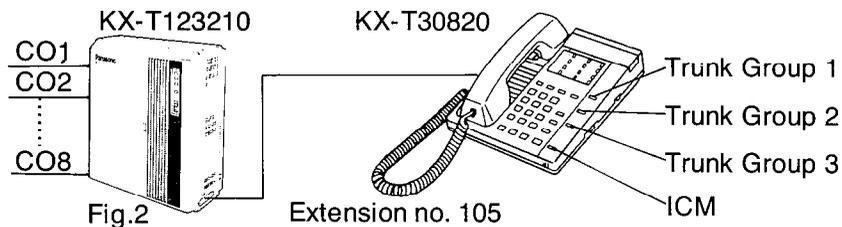

- CO Button on which "CO1" is printed  $\xrightarrow{\text{Change}}$  CO Button which can access to Trunk group 1  
 CO Button on which "CO2" is printed  $\longrightarrow$  CO Button which can access to Trunk group 2  
 CO Button on which "CO3" is printed  $\longrightarrow$  CO Button which can access to Trunk group 3  
 ● See page "To assign into trunk group access number" on page 4-53.

**Outgoing calls:**


- Pressing CO Button which can access to Trunk group 1  $\longrightarrow$  Access CO1 Line through CO3 Line
- Pressing CO Button which can access to Trunk group 2  $\longrightarrow$  Access CO4 Line through CO6 Line
- Pressing CO Button which can access to Trunk group 3  $\longrightarrow$  Access only CO7 Line
- Dialing 8 1 (Trunk Group 1)  $\longrightarrow$  Access CO1 Line through CO3 Line
- Dialing 8 2 (Trunk Group 2)  $\longrightarrow$  Access CO4 Line through CO6 Line
- Dialing 8 3 (Trunk Group 3)  $\longrightarrow$  Access only CO7 Line
- You cannot dial through CO8 Line

**Incoming calls:**

- The calls which reaches through the CO1 Line through CO7 Line can be received.
- The calls which reaches the CO8 Line can not be received.

**Case 3**

If you connect KX-T30820 at Extension 105 (Jack No. 05) and set the CO Button of KX-T30820 as shown in Fig. 3, Outgoing calls and Incoming calls in Extension 105 (Jack No. 05) are operated as followings.

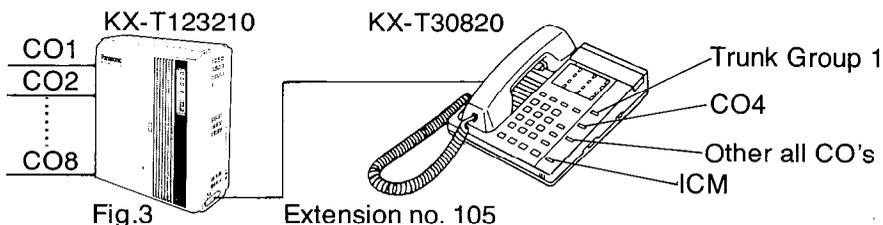

- CO Button on which "CO1" is printed  $\xrightarrow{\text{Change}}$  CO Button which can access to Trunk group 1  
 CO Button on which "CO2" is printed  $\longrightarrow$  CO4 Button  
 CO Button on which "CO3" is printed  $\longrightarrow$  CO Button which can access to other all CO Line  
 (which are not assigned to CO button)

● See page "To change into other all CO numbers" on page 4-55.

**Outgoing calls**

- Pressing CO Button which can access to Trunk group 1  $\longrightarrow$  Access CO1 Line through CO3 Line
- Pressing CO4 Button  $\longrightarrow$  Access CO4 Line
- Pressing CO Button which can access to other all CO Line  $\longrightarrow$  Access CO5 Line through CO7 Line
- Dialing 8 1 (Trunk Group 1)  $\longrightarrow$  Access CO1 Line through CO3 Line
- Dialing 8 2 (Trunk Group 2)  $\longrightarrow$  Access CO4 Line through CO6 Line
- Dialing 8 3 (Trunk Group 3)  $\longrightarrow$  Access only CO7 Line
- You cannot dial through CO8 Line

**Incoming calls:**

- The calls which reaches through the CO1 Line through CO7 Line can be received.
- The calls which reaches the CO8 Line can not be received.

# OPERATION FOR EMSS PROPRIETARY TELEPHONE

( KX-T123230, KX-T123220, KX-T123250, KX-T61631, KX-T61630, KX-T61620,  
KX-T61650, KX-T30830, KX-T30820, KX-T30850 )

To operate this system, after making program changes, set the System Program Switch located on the KX-T123210 ( Electronic Modular Switching System ) to the SET position.

## Making Calls


When the unit is unused, Liquid Crystal Display will show the month, day and the present time.

### Inter Office Calling (Intercom)

#### Using the Handset



Lift handset

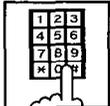

Dial extension number (100 through 199)




Talk




Hang up

#### Hands-free

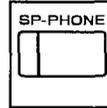


Press SP-PHONE

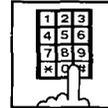

Dial extension number (100 through 199)



Talk

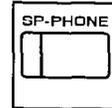


Press SP-PHONE

- You may press the ICM (Intercom) button instead of the first SP-PHONE button.

#### When changing CO button into DSS (Direct Station Selection) button ;



Lift handset or press SP-PHONE

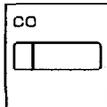

Press CO which has been changed into DSS

- For changing, see "Flexible CO Button" on page 4-54.

### Description

Station to station dialing within the KX-T123210 system.

### Operation

#### Using the handset

- Lift the handset.
- Dial the extension number (100 through 199).
- Start talking
- Hang up upon completion of the conversation.

#### Hands-free

- Press the SP-PHONE or ICM button.
- Dial the extension number (100 through 199).
- Start talking
- Press the SP-PHONE button again after completion of the conversation.

#### When changing CO button into DSS (Direct Station Selection) button ;


- Lift the handset or press the SP-PHONE button.
- Press the CO button which has been changed into DSS.

### Conditions

- The extension number is set below. Through programming, you may change the extension number to other number. See the page 3-8. Default;  
101 : is assigned to extension of jack number 01  
⋮  
132 : is assigned to extension of jack number 32
- When a called party has the KX-T123230 / KX-T61631 / KX-T61630 / KX-T30830 equipped with an LCD, the extension number of the calling party will be displayed on the LCD of the called party.
- The extension number of the calling party will be displayed on the LCD of the KX-T123230 / KX-T61630 / KX-T30830 / KX-T61631.
- The ICM indicator will be lit green while using the unit.
- The KX-T123250, KX-T61650 or KX-T30850 will not function for hands-free mode but can hear the other party's voice in the on-hook mode.

## Outward Dialing

### Automatic Line Access

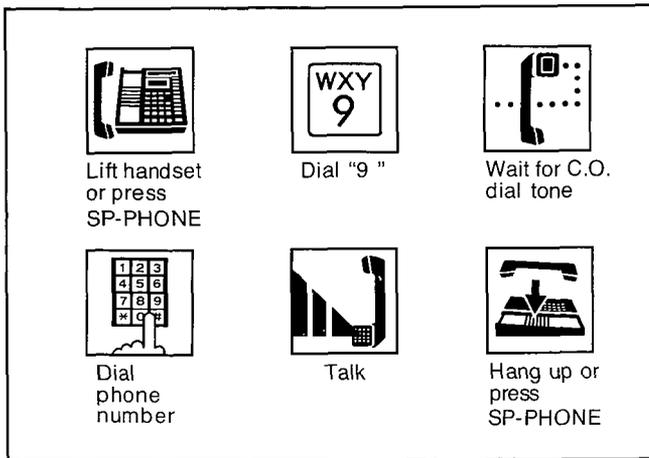

#### Description

Each extension can automatically select an idle CO (Central Office) line within the KX-T123210.


#### Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (9).  
Dial tone from CO (Central Office) will be heard.
  - The CO indicator will be lit green at your extension and lit red at other extensions.
3. Dial the phone number.
4. Start talking.
5. Hang up or press the SP-PHONE button upon completion of the conversation.

#### Conditions

- The 9 dialed, will be displayed on the LCD of the KX-T123230 / KX-T61631 / KX-T61630 / KX-T30830 and you will hear following.
- Dial tone from the CO : indicates that the CO line is captured.
- Busy tone : indicates that the all CO lines are busy.
- Reorder tone : indicates that the extension is denied access to an outside line.

### Individual Line Access

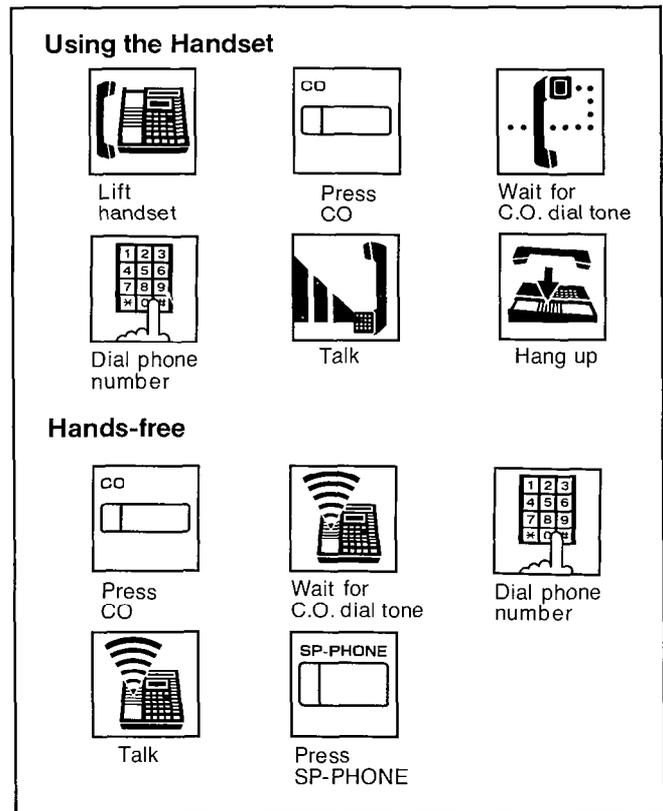

#### Description

Any of the 12 CO's may be directly selected.

#### Operation

##### Using the handset


1. Lift the handset.
2. Press the CO button.  
Dial tone from CO will be heard.
3. Dial the phone number.
4. Start talking.
5. Hang up.

##### Hands-free

1. Press the CO button.  
Dial tone from CO will be heard.
2. Dial the phone number.
3. Start talking.
4. Press the SP-PHONE button.
  - The phone number dialed will be displayed on the LCD of the KX-T123230 / KX-T61631 / KX-T61630 / KX-T30830.
  - You can not use the CO button whose indicator is lit (red) as this CO line is use.
  - The KX-T123250, KX-T61650 or KX-T30850 will not function for hands-free mode but can hear the other party's voice in the on-hook mode.

## Outward Dialing (cont.)

### Individual Trunk Group Access

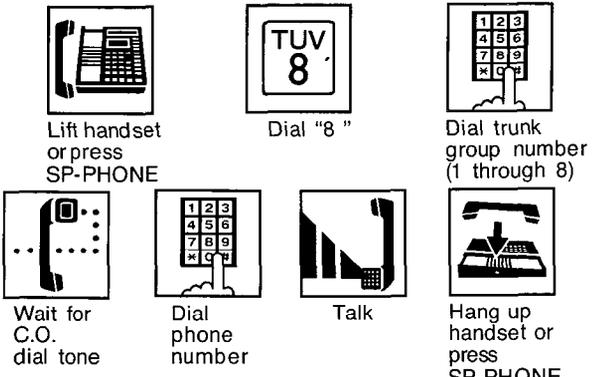

Lift handset or press SP-PHONE

Dial "8"

Dial trunk group number (1 through 8)

Wait for C.O. dial tone

Dial phone number

Talk

Hang up handset or press SP-PHONE

- You may press the CO button instead of dialing 8 and trunk group number (1 through 8). In this case, you must assign the trunk group access number to the CO button. To assign, see "Flexible CO button" on page 4-53.

#### Description

Each extension can automatically select an idle CO line within the same trunk group. Through programming, 12 CO lines can be divided up to 8 groups. See the page 3-46.

#### Operation


- Lift the handset or press the SP-PHONE button.
- Dial (8) and the trunk group number (1 through 8) or press the CO button which is changed into trunk group access number. Dial tone from the CO (Central Office) will be heard.
- Dial the phone number.
- Start talking.
- Hang up or press the SP-PHONE button.

#### Conditions

- The CO line which is not assigned to the CO Button cannot be dialed.
- The CO lines that is assigned to the trunk group are set below.  
Default;  
CO 1 is assigned to Trunk group 1.  
CO 2 is assigned to Trunk group 2.  
CO 3 is assigned to Trunk group 3.  
CO 4 is assigned to Trunk group 4.  
CO 5 is assigned to Trunk group 5.  
CO 6 is assigned to Trunk group 6.  
CO 7 is assigned to Trunk group 7.  
CO 8 through CO 12 is assigned to Trunk group 8.

### Each extension can access a new CO line without hanging up.


While having a conversation,

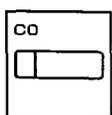

Press another CO

- The original conversation will be terminated and a new CO line will be accessed.

## Speed Dialing

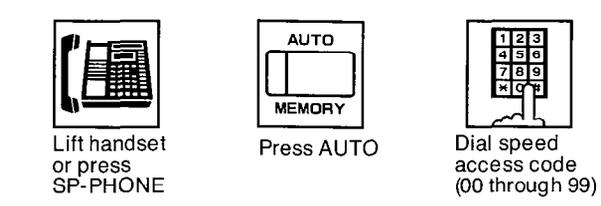

Lift handset or press SP-PHONE

Press AUTO

Dial speed access code (00 through 99)

#### Description

There are 100 memory locations of system speed dialing available. A maximum of each memory location is 32 digits. For programming, refer to "System Speed Dialing Entry" on page 3-5.

#### Operation

- Lift the handset or press the SP-PHONE button.
- Press the AUTO button.
- Dial the speed access code (00 through 99).
  - You may press the CO button to select the CO line directly after lifting the handset or press the SP-PHONE button.

#### Conditions


- The dialed number will be displayed on the LCD of the KX-T123230 / KX-T61631 / KX-T61630 / KX-T30830.
- Continuous use of speed dialing is possible. ex. [AUTO] [0] [0] [AUTO] [0] [1]  
Chaining together two or more memory locations.
- Combinations of speed dialing, one touch dialing and manual dialing is possible.

# One Touch Dialing

## Programming

- Be sure the handset is in the cradle and the SP-PHONE or MONITOR button is OFF.
- Set the MEMORY switch of the Proprietary telephone to "PROGRAM".


### Storage

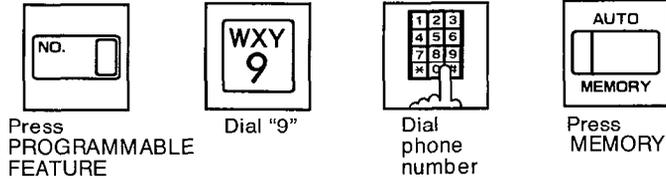

- You may dial 81 through 88 instead of 9 .  
9 - - - Each extension can automatically select an idle CO line.  
81 through 88 - - - Each extension can select a trunk group designated.

**9 or 81 through 88 must be dialed for storage.**

### To Correct an Error while Programming

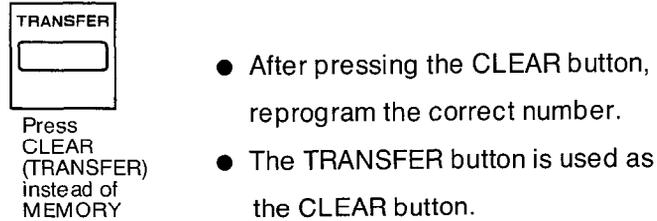

### To Change a Stored Number

Repeat "Storage" above.


### To Confirm a Stored Number

Repeat programming the same number into the same station.

When the MEMORY button is pressed, a beep will be heard.

- two beeps ..... The entry is the same as what was previously stored.
- one beep ..... The entry is different from the one that was previously stored. Repeat the procedure of programming.


### To Erase after Programming

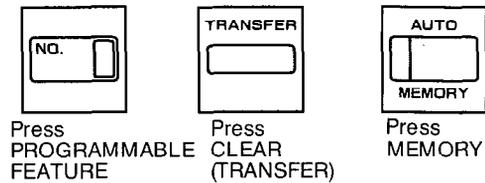

- The TRANSFER button is used as the CLEAR button.

**After programming all the numbers, return the MEMORY switch to the "SET" position.**

## Dialing

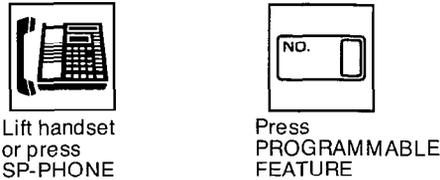

- You may press the CO button to select the CO line directly after lifting the handset or pressing the SP-PHONE button.

## Description

There are 12 memory locations for automatic dialing available. (KX-T123230, KX-T123220, KX-T61631, KX-T61630, KX-T61620, KX-T30830, KX-T30820)  
There are 3 memory locations for automatic dialing available. ( KX-T123250, KX-T61650, KX-T30850 )  
Up to 16 digits can be stored into each of the 12 or 3 memory locations. Pushing the "x", "#", "-", "FLASH", "PAUSE" or "ICM (Secret)" button counts as 1 digit.

- For your convenience, program private phone numbers into the KX-T123230, KX-T123220, KX-T123250, KX-T61631, KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850.




## Calling Doorphone

### Calling doorphone 1



Lift handset  
or press  
SP-PHONE

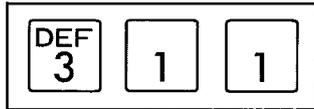


Dial "311"

### Calling doorphone 2



Lift handset  
or press  
SP-PHONE

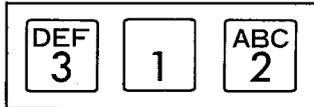

Dial "312"

### Description

Up to two doorphones (KX-T30865) can be connected to the KX-T123210.

### Operation

Dialing to the doorphones

1. Lift the handset or press the SP-PHONE button.
2. Dial (311) for calling doorphone 1.  
Dial (312) for calling doorphone 2.  
"Door Phone-1" or "Door Phone-2" will be displayed.
3. Wait for the confirmation tone and then start talking.
4. Hang up or press the SP-PHONE button upon completion of the conversation.

### Conditions

- The features, for instance, hold, transfer and so on, can not be activated by the doorphone.


## Operator Call



Lift handset  
or press  
SP-PHONE



Dial "0"

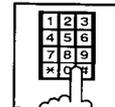

Dial "0" or "1"

"0": for Operator 1  
"1": for Operator 2

### Description

You can call the operator within the KX-T123210 system.

This feature is required to be set beforehand in the KX-T123210.

For programming, see page 3-9.

### Operation

1. Lift the handset or press the SP-PHONE button.
  2. Dial (0).
  3. Dial (0) for calling the operator 1.  
Dial (1) for calling the operator 2.
- In case one operator is programmed, you have only to dial 0.

## Distinctive Dial Tone

### Description

A distinctive dial tone will be heard from the handset if the extension user has previously activated a special feature.


### Operation

None

### Conditions


There are two types of dial tones.

Dial tone 1 : ordinary dial tone

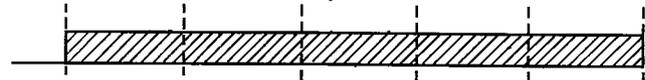





Dial tone 2 : when any of the following features are activated:

- |  |                       |
|--|-----------------------|
| Pickup Dial<br>(only a standard telephone) | Do not Disturb.       |
| Data Line Security                         | Dial Call Pickup Deny |
| Absent Message Capability                  | Call Forwarding.      |

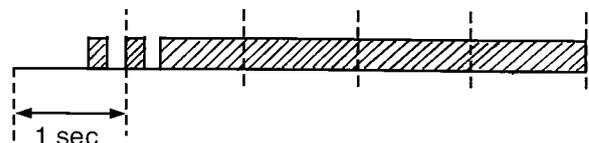

# When a Line is Busy

## Automatic Call Back Busy (Camp-on)

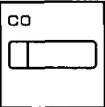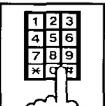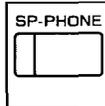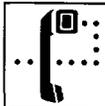Setting					When hearing a recall for camp-on	
<b>For outside (trunk) calls</b>					<b>When outside calls</b>	
						
Press CO	If you will hear a busy tone	Dial "6"	Confirmation tone of 2 beeps will be heard	Hang up or press SP-PHONE	Lift handset or press SP-PHONE	You will hear CO dial tone
<b>For intercom calls</b>					<b>When intercom calls</b>	
						
Dial extension number (100 through 199)	If you will hear a busy tone	Dial "6"	Confirmation tone of 2 beeps will be heard	Hang up or press SP-PHONE	Lift handset or press SP-PHONE	You will hear ring back tone

### Description

If the intercom extension or the outside line (CO line) you have dialed is busy, you will be automatically called back when the extension or the outside line (CO line) becomes free using this function.

This feature is also known as camp-on.

### Operation

#### Setting

1. Lift the handset or press the SP-PHONE button.
2. For intercom calls, dial the extension number. For outside calls, press the CO button or dial (9 or 81 through 88).
3. Dial (6) after a busy tone is heard.
4. Wait for the confirmation tone. "Call back CO 01" or "Call back Ext 105" will be displayed.
5. Hang up or press the SP-PHONE button.

#### When hearing a recall for camp-on ;


Lift the handset or press the SP-PHONE button.

- When using an intercom call, you will hear the ring back tone.
- When using an outside call, you will hear the CO dial tone.


### Conditions

- Lifting the handset ( or pressing the SP-PHONE button ) during the camp-on mode will cause the camp-on feature to be cancelled.
- An extension may be the recipient of more than one call back busy, the call backs will be executed in the order of their arrival.
- If a call back is not answered at the originating extension within 10 seconds, the call back will be cancelled.

Recall for camp - on

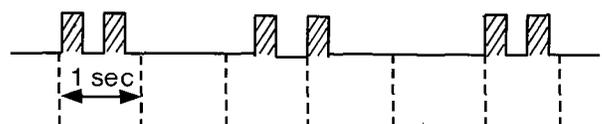

## Last Number Redial

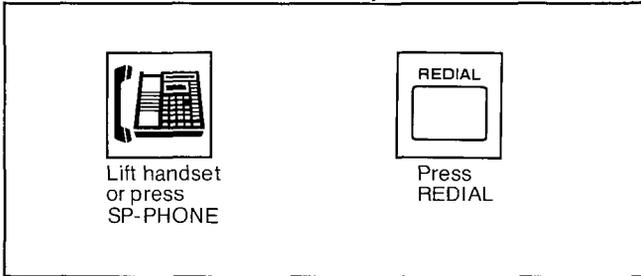

### Description

The last phone number dialed on an outgoing call (CO line) can be redialed.


### Operation

1. Lift the handset or press the SP-PHONE button.
  2. Press the REDIAL button.
- You may press the CO button to select the CO line directly after lifting the handset or pressing the SP-PHONE button.
  - You may dial 8 and the trunk group number (1 through 8) to select the trunk group directly after lifting the handset or pressing the SP-PHONE button.

### Conditions

- Up to 32 digits can be stored and redialed. Pushing the "x" "# or "PAUSE" button counts as 1 digit.
- When calling or while in the conversation mode, pressing the REDIAL button will cause the redial to operate after about 3 seconds.

## Busy Station Signaling

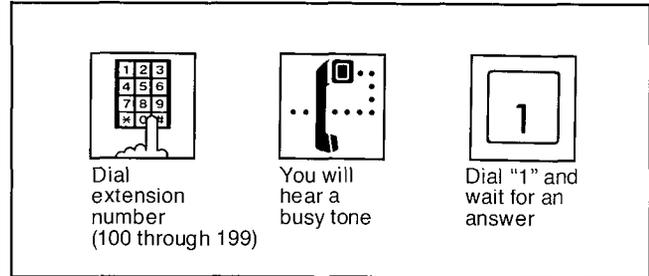

### Description

If the extension you have dialed is busy, you can inform the extension that another intercom call is waiting by three beeps.

### Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial the extension number.
3. When you will hear a busy tone, dial (1) and wait for an answer.


### Conditions

- To answer your signal, see "Call Waiting" on page 4-20.
- If the other party is setting "Call Waiting Tone-From Extension Deny" on page 4-42 or is using data equipment, you may not be able to use this feature. A reorder tone is heard after dialing 1.

## Executive Override (Barge-In)




Lift handset  
or press  
SP-PHONE

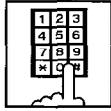

Dial  
extension  
number  
(100 through 199)



You will  
hear a busy  
tone

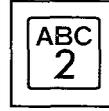

Dial "2"

A 3-party  
conference is  
now established

### Description

Allows an extension user to intrude into another extension that is in conversation with an outside or inside party.

For the use of this feature, the extension is required to be set for this feature beforehand in the KX-T123210. For programming, see page 3-73.

### Operation

1. Lift the handset or press the SP- PHONE button.
2. Dial the extension number.
3. When you hear a busy tone, dial (2).  
A 3-party conference will now be established.

#### To terminate conference

Replace the handset back on hook or press the SP-PHONE button.

- The other two parties will be directly connected together and can converse with each other. (Intercom calls and intercom to outside are OK.)

#### To terminate one caller and talk to the other caller.


- If the conference parties are one outside caller and one extension:  
To talk to the outside party, press the CO button.  
To talk to the extension party, press the ICM button.

### Conditions

- If the other party is using data equipment or is set for "Executive Override Deny" on page 4-32, you can not intrude into the other party that is in conversation. A reorder tone is heard after dialing 2.

# Receiving Calls

## Answer

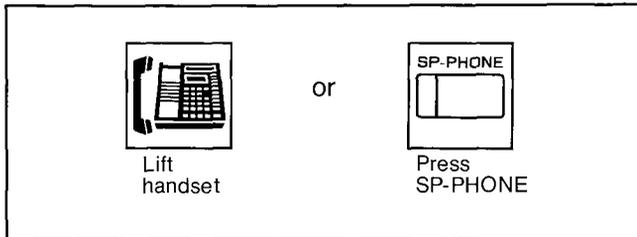

### Operation

Lift the handset or press the SP-PHONE button.


- When receiving an intercom call, you may press the ICM button whose indicator is flashing quickly and talk. (Hands-free mode)
- When receiving an outside call, you may press the CO button whose indicator is flashing red quickly and talk. (Hands-free mode)
- When the "Automatic Answering Selection" feature (on page 4-52) is selected "No Line Preference-Incoming" in the extension and outside call reaches, lift the handset and then press the CO button whose indicator is flashing (red color) quickly.
- When the "Automatic Answering Selection" feature (on page 4-51) is selected "Prime Line Preference-Incoming" in the extension and any incoming calls from the Central Office are received at the same time except preferred CO line, you must lift the handset and then press the CO button whose indicator is flashing (red color) quickly.

### Conditions

If a call is received through the CO line which is not assigned to the CO button of an extension, the extension can not receive the CO call. Therefore, if the extension user wants to receive the CO call, the CO line is required to be assigned to the CO button. To assign the CO button to the CO line, there are 3 ways as follows.

- Way to change into other CO numbers (on page 4-53)
- Way to assign to trunk group access number (on page 4-53)
- Way to change into other all CO numbers which are not assigned to CO button. (on page 4-55)

## Automatic Answer-Intercom

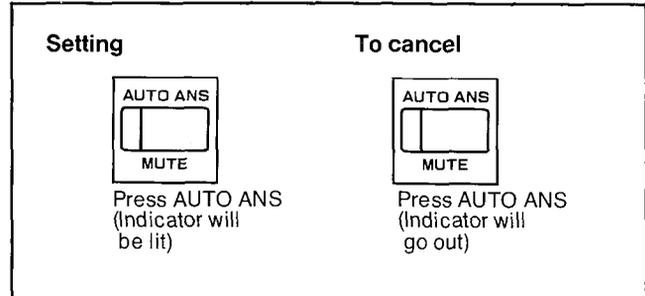

### Description

Allows an extension user to answer an intercom call in the automatic hands-free mode without any operation when receiving an intercom call.


### Operation

1. For setting, press the AUTO ANS button. The AUTO ANS indicator will be lit.
2. For cancellation, press the AUTO ANS button again. The AUTO ANS indicator will go out.

### Description

- This feature is required to be set beforehand while the unit is not in use.
- The KX-T123250, KX-T61650 or KX-T30850 will not function for Automatic Answer.

## Dial Call Pickup

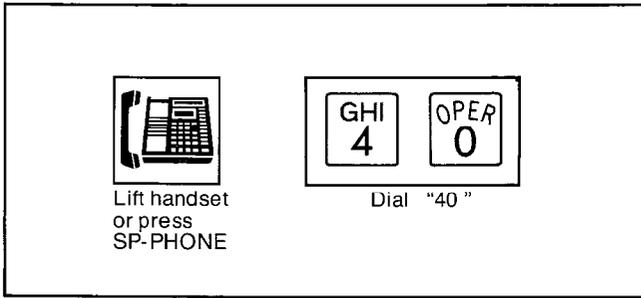

### Description

An extension user can answer any ringing extension within their own extension group.


### Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (40) and wait for the confirmation tone.
3. Start talking.

### Conditions

- Dial Call Pickup will work for incoming calls (intercom, outside and doorphone) but will not work for camp-on recall and hold recall.
- If a ringing extension is outside the extension group or is in the dial call pickup denied mode, then a reorder tone will be heard through the use of this feature.
- Refer to "Extension Group Assignment" on page 3-63.
- Dial Call Pickup can use with the present call placed on hold.

## Directed Call Pickup

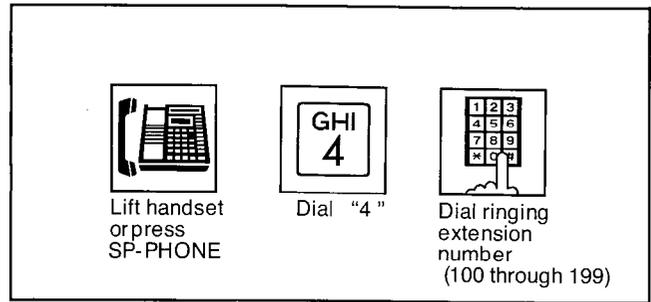

### Description

An extension may answer an incoming call that is ringing at another extension regardless of the extension group.

### Operation


1. Lift the handset or press the SP-PHONE button.
2. Dial (4) and then the extension number (100 through 199) at which call is ringing.
3. Wait for confirmation tone and then start talking.

### Conditions

- It is possible to answer calls outside your assigned extension group.
- Directed Call Pickup can be used with the present call placed on hold.


### Example:

Mr Brown's extension number is 110. He is now out of the office. Mark receives the call instead of Mr Brown with the telephone on his desk (extension 120).

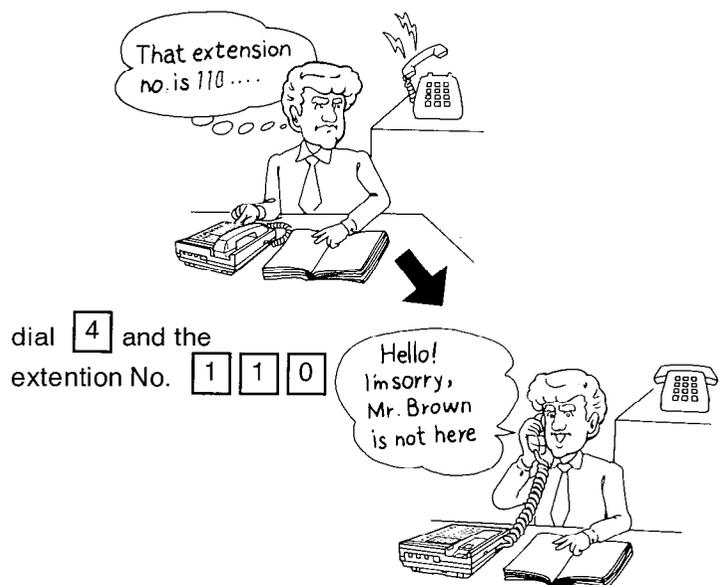


# Call Park


## To park a call

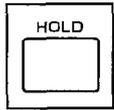


Press  
HOLD

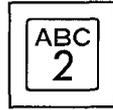

Dial "2"

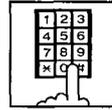

Dial parking  
station  
number  
(20 through 29)

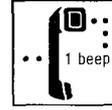

Confirmation  
tone



Hang up or  
press SP-PHONE

If a busy tone is heard after the parking station number is dialed, dial only last 1 digit of the other parking station number (0 through 9).


## To retrieve a parked call at any extension



Lift handset  
or press  
SP-PHONE



Dial "5"

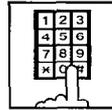

Dial parking  
station  
number  
(20 through 29)

## Description

Extension user can place up to ten calls in the park zones. Allows any extension user to retrieve a parked call (intercom or outside) on hold at any extension.

## Operation

### To park a call

1. You are in conversation with an internal or outside party.
2. Press the HOLD button.
3. Dial (2).
4. Dial the parking station number (20 through 29).
  - When dialing (20).  
"Call Prked at 20" will be displayed.
  - A confirmation tone will be heard.
  - If a busy tone is heard, dial only last 1 digit of the other parking station number (0 through 9).
5. Hang up or press the SP-PHONE button.

### To retrieve a parked call at any extension.

1. Lift the handset or press the SP-PHONE button at any extension.
2. Dial (5).
3. Dial the parking station number (20 through 29) on which the call is placed on hold.
4. Wait for the confirmation tone and then start talking.

## Conditions

- Up to ten calls can be parked.
- If a parked call is not retrieved by an extension within 3 minutes, a hold time reminder will be sounded at the extension who placed the call on hold.  
There are 9 choices ranging from 1 to 9 minutes for the hold time reminder.  
For programming, see the page 3-25.

## Example:

Mark is talking with extension 130 on his desk, and then moves to another room placing the call park.  
He resumes the conversation using another extension.




Press the HOLD button, dial **2**, dial **20** (parking station number), hang up and then go to Mr. Jay's office.



Dial **5** and the parked station number **20** at Mr. Jay's office.

## Doorphone

### Calling from Doorphone

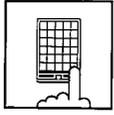

Press doorphone button 1 second



Confirmation tone




Talk

### To answer a doorphone



Lift handset

or

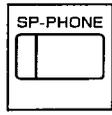

Press SP-PHONE

### Operation

Calling from the doorphone.


1. Press the doorphone button 1 second.
2. Wait for the other party's voice after hearing the confirmation tone and then start talking.

To answer a doorphone

Lift the handset or press the SP-PHONE button.

### Conditions

- If calls from doorphones are not answered within 15 seconds, the calls will be cancelled.
- Ring from doorphone.

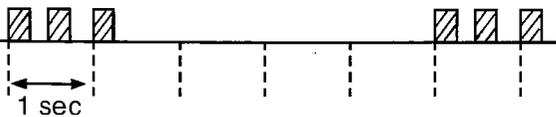

- Each extension has been programmed beforehand for receiving from doorphones. See "Ringing Assignment from Doorphone" on page 3-75.

## Distinctive Ring Tone

### Description

A different ringing pattern is used to distinguish intercom calls from incoming outside calls.

### Operation

None


### Conditions

Automatic ring back for "Camp On" feature will ring differently from the intercom, outside, and doorphone calls.


Incoming outside calls (including outside hold recall)



Intercom calls (including intercom hold recall)

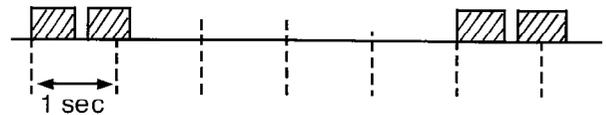


Doorphone calls

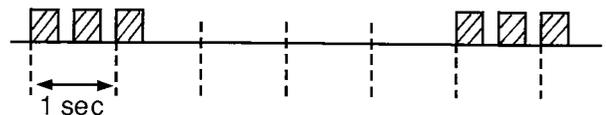


# While Having a Conversation

## Call on Hold

### To place a call on hold:

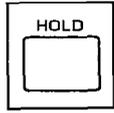

Press  
HOLD

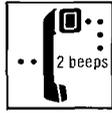


Confirmation  
tone of 2  
beeps will  
be heard

### To retrieve:

(Outside calls on hold)

- at the holding extension

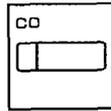


Press CO

flashing slowly  
in green

(Intercom call on hold)


- at the holding extension

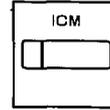

Press ICM

(flashing  
slowly)


- from another extension

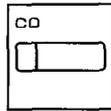


Press CO

flashing slowly  
in red

- from another extension

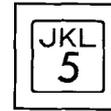

Dial "5"

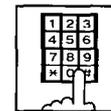

Dial holding  
extension  
number

### Description

If you wish to leave your phone unattended but want the caller you are in conversation with to wait, call hold may be used. Outside or intercom calls may be placed on hold. Calls on hold can be released by other extensions.

### Operation

1. You are in conversation with an outside or internal party.
2. Press the HOLD button.  
The indicator of CO or ICM button which is on hold will flash slowly (green color).  
The confirmation tone of 2 beeps will be heard.

**To Retrieve at the holding extension,**  
press the CO or ICM button (flashing green).

The indicator light will return to a steady green.

**To Retrieve from another extension,**

- press the CO button (flashing slowly in red).

or

- dial (5) and then the extension (100 through 199) or CO (301 through 312) number of the phone on which the call was placed on hold.

[5] [ABC]

...ABC... 100 through 199 (extension)

or

ABC...301 through 312 (CO)


- The green flashing indicator at the held extension will turn to red.

### Conditions


- An Intercom hold can be activated on one extension only.
- Outside Call holds can be activated on all CO's.
- Calls on hold will be recalled either after 30 seconds, 1 minute, 1 minute and 30 seconds or 2 minutes, once handset is replaced (or the SP- PHONE button is pressed).  
If hold recall time is set to "Disable", it will not be recalled.  
Refer to "Hold Recall Time Set" on page 3-26.
- If a call is placed on hold for more than 3 minutes, a hold time reminder will be sounded and the call will be terminated automatically after 30 minutes.  
A hold time reminder is sounded through the built-in speaker of the extension.  
There are 9 choices ranging from 1 minute to 9 minutes in the hold time reminder.  
For programming, see the page 3-25.
- The hold time reminder is activated, even if the hold recall time set is programmed to "Disable".
- When lifting the handset (or press the SP- PHONE button):  
before recalling - - - A dial tone will be heard with the call on hold.  
You may dial another phone number.  
while recalling - - Only the first call on hold will be released and entered into the conversation mode.

## Call on Exclusive Hold

### To place a call on exclusive hold:

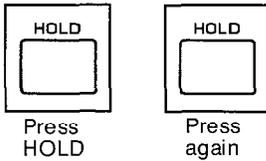

### To retrieve:

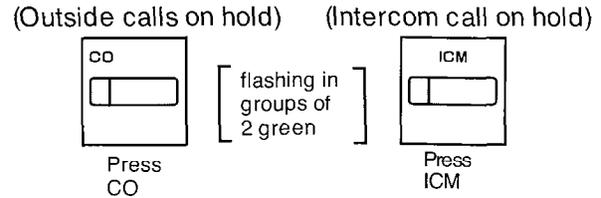

### Description

Intercom or outside calls placed on exclusive hold can not be released by any extension other than the phone which has placed the call on hold.


### Operation

1. You are in conversation with an outside or internal party.
2. Press the HOLD button.  
The indicator of CO or ICM button which is on hold will flash slowly (green color).  
A confirmation tone of 2 beeps will be heard.
3. Press the HOLD button, again.  
The indicator will flash in groups of 2 (green color).
4. To retrieve, press the ICM button or the CO button whose indicator is flashing in groups of 2 (green color).  
The indicator on the ICM or CO button will return to a steady green.

### Conditions

- An Intercom hold can be activated on one extension only.
- Outside Call holds can be activated on all CO's.
- Calls on hold will be recalled either after 30 seconds, 1 minute, 1 minute and 30 seconds or 2 minutes, once handset is replaced (or the SP- PHONE button is pressed). If hold recall time set is set to "Disable", will not be recalled. Refer to "Hold Recall Time Set" on page 3-26.
- If a call is placed on hold for more than 3 minutes, a hold time reminder will be sounded, and the call will be terminated automatically after 30 minutes.  
A hold time reminder is sounded through the built-in speaker of the extension.  
There are 9 choices ranging from 1 to 9 minutes for the hold time reminder.  
For programming, see the page 3-25.
- The hold time reminder is activated, even if the hold recall time set is programmed to "Disable".
- When lifting the handset (or press the SP-PHONE button):  
before recalling ... A dial tone will be heard with the call on hold.  
You may dial another phone number.  
while recalling ... Only the first call on hold will be released and entered into the conversation mode.

## Conference

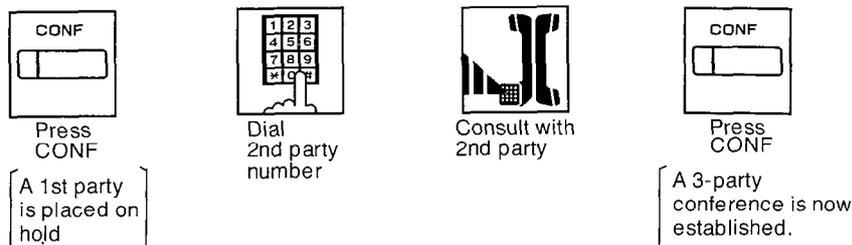

### Description

Allows for up to a three party conference, (2-outside / 1- inside) (1- outside / 2- inside) or (3-inside).

### Operation

1. Press the CONF button, to place the first party on hold.
  2. Dial the number of the second party.  
If second party does not answer, press the CO button of the outside party concerned, or the ICM button to return to the first party.
  3. Press the CONF button.  
A confirmation tone will be heard.  
3 party conference is now established.  
"Ext 102 & CO 02" will be displayed.
- You may press the HOLD button instead of the first CONF button.

#### To terminate conference

Replace the handset or press the SP-PHONE button.

- The other two parties will be directly connected together and can converse with each other. (Intercom calls and intercom to outside are OK, outside to outside is not possible.)

#### To terminate one caller and talk to the other caller.

- If both the conference parties are on an outside line:  
Press the CO button to talk to the desired party.
- If the conference parties are an outside caller and an extension caller:  
To talk to the outside party, press the CO button.  
To talk to the extension party, press the ICM button.

#### To place the other two parties on hold at the same time.

- Press the HOLD button.
- In case the other two parties are on the extension, the other two parties can not be placed on hold.


### Conditions

- Pressing a CO button which is out of conference, allows you to exit from the conference and to access an outside party and the other parties to be connected together.  
If the other parties are outside ones, they are disconnected.  
If the other parties are on the outside and extension, they are connected.
- When both the conference parties are on the extension, even if anyone of the conference parties press the ICM button, a three party conference is gone on.

## Privacy Release (Manual)

### While you are speaking on a CO line,


- Before pressing the CO button, inform another extension user to join into the conversation by word of mouth.

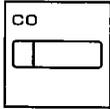

Press CO  
already in use


[ quickly flashing  
in green for  
5 seconds ]

### At another extension that want to join into the conversation;

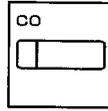

Press  
CO  
within  
5 seconds

[ quickly flashing  
in green for  
5 seconds ]

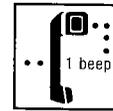

Confirmation tone  
of 1 beeps will  
be heard

[ A3-party  
conference is now  
established  
(1-outside / 2-inside) ]

### Description

Allows an extension user that is in conversation with an outside party to make a three party conference by having another extension join into the conversation.

### Operation

1. You are in conversation with an outside party.
2. Inform another extension user to join into the conversation by word of mouth.
3. Press the CO button that you are using, and the CO indicator of the other extensions will quickly flash (green color) for 5 seconds.
4. When another extension user that want to join into the conversation presses the CO button whose indicator is quickly flashing (green color) within 5 seconds, a confirmation tone will be heard at another extension.  
3 party conference is now established.  
(1-outside / 2- inside)

### To terminate conference. (1-outside/2-inside)

Replace the handset back on hook or press the SP-PHONE button.

- The other two parties will be directly connected together and can converse with each other.

### To terminate one caller and talk to the other caller.

To talk to the outside party, press the CO button.


To talk to the extension party, press the ICM button.

### Conditions


- After an extension user presses the CO button, the indicator of the other extension will flash for only 5 seconds.  
Pressing of the CO button again will add another 5 seconds.

## Call Transfer - To Extension

### To transfer a call after the other extension answers

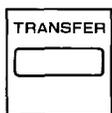

Press  
TRANSFER

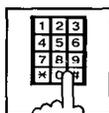

Dial  
extension  
number  
(100 through  
199)



Announce  
and wait  
for an  
answer




Hang up or  
press  
SP-PHONE

### To transfer a call without announcing to the other extension



Press  
TRANSFER

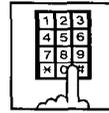

Dial  
extension  
number  
(100 through  
199)



Hang up or  
press  
SP-PHONE

### To retrieve the Call

If the other extension does not answer the transferred call within 30 seconds after the call has been transferred, the call will return to you. In this case:

While the ring back is heard,



Lift handset  
to return to the  
calling party

### Description

Outside or intercom calls may be transferred to any extension manually.

### Operation

1. You are engaged in a call (outside or intercom).
2. Press the TRANSFER button.
3. Dial number of extension (100 through 199) to which the call is transferred.
4. For Unscreened call transfer, replace the handset or press the SP-PHONE button. For Screened call transfer, wait for new party to answer and announce call, then replace the handset or press the SP-PHONE button.

### To retrieve the Call

If the other extension does not answer the transferred call within 30 seconds after the call has been transferred, the call will return to you.

In this case:

While the ring back is hearing, lift the handset to return to the calling party.

### To change the party to whom a call is transferred before hanging up


Press the CO or ICM button whose indicator is flashing slowly to retrieve the call, then repeat the procedure of Call Transfer.

### Conditions


- Upon recall to the transferring extension, if call is not answered within 30 minutes it will be terminated.
- When busy, you may access the other extension by dialing 1 (Busy station signaling) or dialing 2 (Executive Override) and hang up. Also you may return to the calling party by pressing the CO or ICM button whose indicator is flashing slowly (green color).
- The time that the call returns to you when the transferred call is not answered can be changed from 30 seconds to 15 seconds. For changing, see page 3-27.

## Call Transfer - To Outside Line


To transfer a call after the outside party answers.

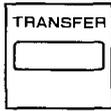

Press  
TRANSFER

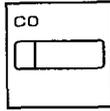

Press CO

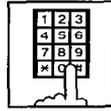

Dial phone  
number




Announce  
and wait  
for an  
answer




Hang up or  
press  
SP-PHONE


To transfer a call without announcing to the outside party.

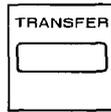

Press  
TRANSFER

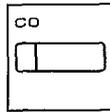

Press CO

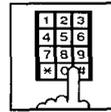

Dial phone  
number



Hang up or  
press  
SP-PHONE

### Description

Outside or intercom calls may be transferred to any outside line manually.

This feature is required to be set beforehand in the KX-T123210.

For programming, see page 3-71.

### Operation

1. You are engaged in a call (outside or intercom).
2. Press the TRANSFER button.
3. Press the CO button to which the call is transferred.
4. Dial the phone number to which the call is transferred.
5. For Unscreened call transfer, replace the handset back on hook or press the SP-PHONE button.  
For Screened call transfer, wait for new party to answer and announce call, then replace the handset back on hook or press the SP-PHONE button.

### To change the party to whom a call is transferred before hanging up

Press the CO button whose indicator is flashing slowly to retrieve the call, then repeat the procedure of Call Transfer.

### Conditions


- Even if you dial the incorrect phone number to which the call is transferred, it is possible to redial the correct phone number after pressing the FLASH button.
- If outside call is transferred to any outside line, the KX-T123210 will disconnect the call from the line after 10 minutes. For changing the time, see "CO to CO Duration Time Limit" on page 3-30.  
3 beeps tone will be heard every 5 seconds for 15 seconds before the call is disconnected from the line.
- If the outside call is transferred to another outside line through the KX-T123210, the KX-T123210 may not disconnect both lines after the calling party hangs up if the calling parties line (central office exchange) does not release a CPC (Calling Party Control) signal to the line.  
However the KX-T123210 will disconnect the line after the time that you have programmed. (See page 3-30.)

## Call Waiting

### To terminate the original call and talk to the new caller.



Will hear a call waiting tone

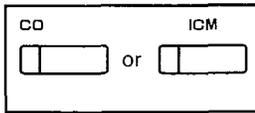

Press CO or ICM whose indicator is flashing quickly

The original call is now terminated.




Talk

### To place the original call on hold and talk to the new caller.

- If both original call and new call are intercom calls:  
(The ICM indicator will change into quickly flashing when the new call is reached.)



Will hear a call waiting tone

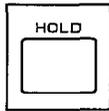


Press HOLD

Dial tone is not heard.



Consult with the new caller while the original call is on hold

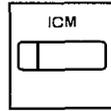


Press ICM to terminate the 2nd call and to return to the original call

- If original call is CO call, and new call is CO call or intercom call:  
or  
If original call is intercom call and new call is CO call:




Will hear a call waiting tone

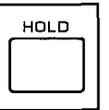

Press HOLD


The dial tone is heard.

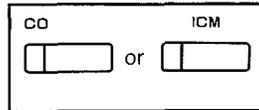

Press CO or ICM whose indicator is flashing quickly



Consult with the new caller while the original call is on hold

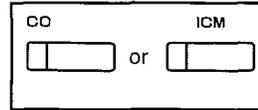

Press CO or ICM whose indicator is flashing slowly to terminate the 2nd call and to return to the original call

### Description

Call waiting tone during a conversation indicates there is a new incoming CO line call or Intercom call.

This feature has been set beforehand in the extension. See page 4-42.

There are Tone 1 and Tone 2 in the Call Waiting Tone.

For changing Tone 1 into Tone 2, see "Call Waiting Tone Selection" on page 4-61.

### Operation

#### To terminate the original call and talk to the new caller.

1. You will hear a call waiting tone (3 beeps).
2. Press the CO or ICM button whose indicator is quickly flashing. The original call is now terminated.
3. Start talking.

#### To place the original call on hold and talk to the new caller.

- If both original call and new call are intercom calls:  
(The ICM indicator will change lighting into quickly flashing when new call reaches.)

  1. You will hear a call waiting tone (3 beeps).

2. Press the HOLD button for placing a conversation on hold.
3. Consult with the new caller.
4. Press the ICM button to terminate the second call and to return to the original call.


- If original call is CO call, and new call is CO call or intercom call:  
or  
If original call is intercom call and new call is CO call:

1. You will hear a call waiting tone.
2. Press the HOLD button for placing a conversation on hold.
3. Press the CO or ICM button whose indicator is quickly flashing .
4. Consult with the new caller.
5. Press the CO or ICM button whose indicator is flashing slowly to terminate the second call and to return to the original call.

### Conditions

- If a call waiting tone is heard and the CO or ICM indicator does not flash, this tone indicates a call waiting tone by your telephone company.  
In this case, see "Call Waiting-Outside Line" on page 4-38.

## Call Splitting — Between CO and Intercom

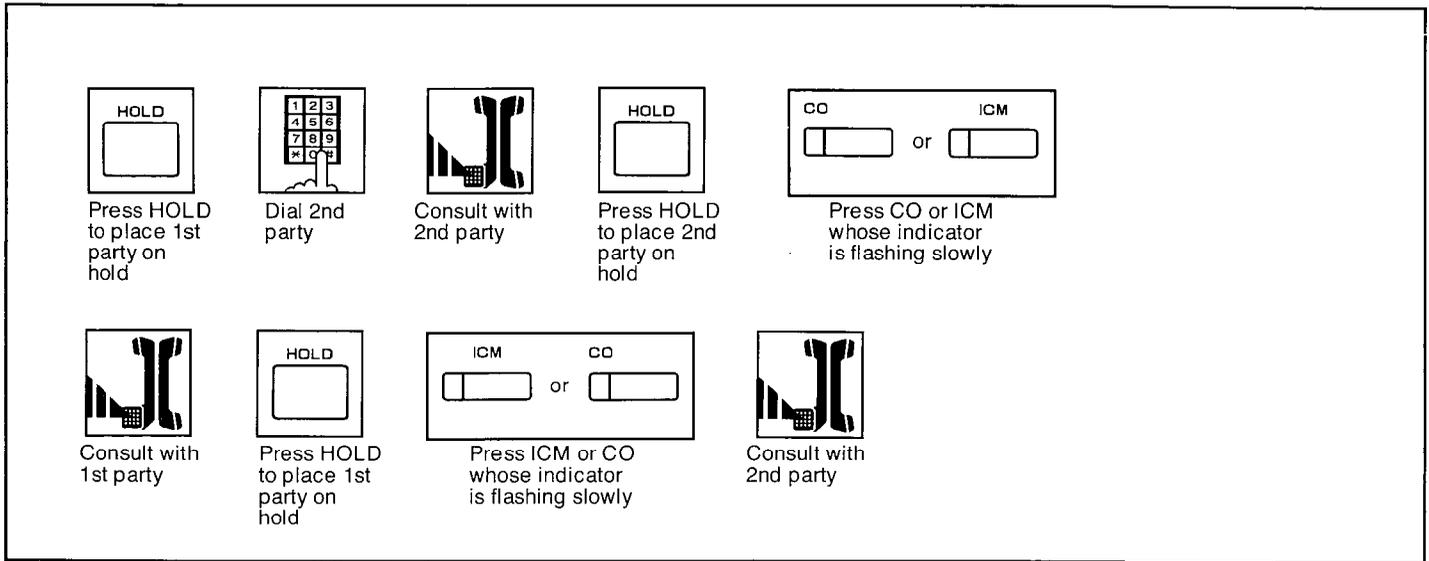

### Description

Allows an extension user to alternate between a CO party and an intercom party.

### Operation

1. Press the HOLD button to place the first party on hold.
2. Dial the second party.
3. Consult with the second party.
4. Press the HOLD button to place the second party on hold.
5. Press the CO or ICM button whose indicator is flashing slowly.
6. Consult with the first party.
7. Press the HOLD button to place the first party on hold.

8. Press the ICM or CO button whose indicator is flashing slowly.


9. Consult with the second party.

10. Repeat step 4 to 9.

### Conditions

- To release the call splitting mode, press the CO or ICM button without pressing the HOLD button. Conversation will be terminated and call on hold will be returned into conversation.

## Call Splitting — Intercom

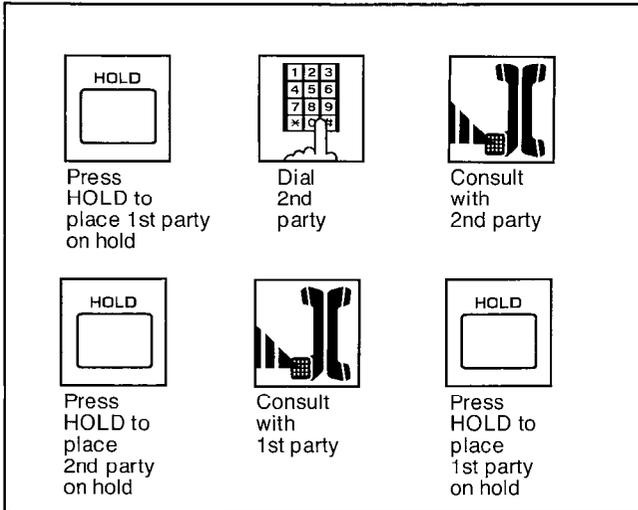

### Description

Allows an extension user to alternate between two intercom parties.

### Operation

1. Press the HOLD button to place the first party on hold.
2. Dial the second party.
3. Consult with the second party.
4. Press the HOLD button to place the second party on hold.
5. Consult with the first party.
6. Press the HOLD button to place the first party on hold.
7. Repeat step 3 to 6.


### Conditions

- To release the call splitting mode, press the ICM button instead of the HOLD button. Conversation will be terminated and call on hold will be returned into conversation.

## Mute Operation

### To enable


Be sure the SP-PHONE indicator is on.

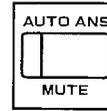

Press MUTE

- The MUTE indicator will flash.

### To cancel

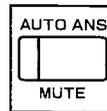

Press again

- The MUTE indicator will go out.

### Description

Use when you do not want your voice to be heard by the other party.

### Operation

#### To enable

Be sure the SP-PHONE indicator is on. Press the MUTE button.

- The MUTE indicator will flash.

#### To cancel

Press the MUTE button again.

- The MUTE indicator will go out.

### Conditions

- This feature can be activated only in the speakerphone mode.

# Paging

## Switching between Using Handset and Hands-free

### To Use the Handset

While having a conversation using speakerphone



Lift handset

### To Use the Hands-free

While having a conversation using the handset



Press SP-PHONE



Hang up handset

## Description

You may choose the handset or hands-free.

## Operation

### To use the handset

While having a conversation using speakerphone;

lift the handset.

### To use hands-free

While having a conversation using the handset;

1. Press the SP-PHONE button.
2. Hang up the handset.

- When the other party finds it difficult to hear your voice:

Lower the sound level using the SPEAKER VOLUME CONTROL or speak louder.

- Absorbing echoes:

Use in a room which has curtains or carpeting.

- To avoid lost conversations:

If some part of the conversation is lost while talking, speak alternately.

## Paging All Extensions


### To access



Lift handset or press SP-PHONE



Dial "330"

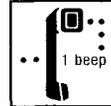

Confirmation tone of 1 beep will be heard



Page



Wait for an answer and talk

- Paging will be heard only from the built-in speaker of proprietary telephone.



## Description

Allows paging to all extensions.

The page can only be heard from either proprietary telephones (KX-T123230, KX-T123220, or KX-T123250, etc).

## Operation

### To access paging;

1. Lift the handset or press the SP-PHONE button.
2. Dial (330) and wait for confirmation tone (one beep).  
"Paging All Ext" will be displayed.
  - You may dial (33\*) instead of (330).
3. Start paging.
4. Wait for an answer and talk.

## Conditions

- When an extension is in use, that extension cannot gain access to paging.
- When any extension is using the paging (all extensions or group), you cannot access to paging.

## Paging Group


### To access



Lift handset or press SP-PHONE



Dial "33"

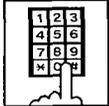

Dial extension group number (1 through 8)



Confirmation tone



Page



Wait for an answer and talk

■ Paging will be heard only from the built-in speaker of proprietary telephone.



## Paging — External


### To access



Lift handset or press SP-PHONE



Dial "32"

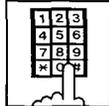

Dial external paging number




Confirmation tone



Page



Wait for answer and talk

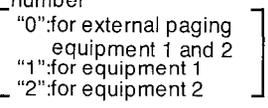

"0":for external paging equipment 1 and 2  
"1":for equipment 1  
"2":for equipment 2

■ Paging will be heard from external paging equipment (1 and / or 2).



## Description

Allows paging to one of eight extension groups. The page can only be heard from either proprietary telephones (KX-T123230, KX-T123220 or KX-T123250 etc).

## Operation

### To access paging;

1. Lift the handset or press the SP-PHONE button.
2. Dial (33).
3. Dial the extension group number (1 through 8).

A confirmation tone (one beep) will be heard.

"Paging Group 1" , "Paging Group 2",  
"Paging Group 3" , "Paging Group 4",  
"Paging Group 5" , "Paging Group 6",  
"Paging Group 7" or "Paging Group 8",

will be displayed.

4. Start paging.
5. Wait for an answer and talk.

## Conditions

- If an extension is in use, that extension will not gain access to paging.
- Refer to "Extension Group Assignment" on page 3-63.

## Description

Allows access to external paging equipment.

## Operation

### To access external paging;


1. Lift the handset or press the SP-PHONE button.
2. Dial (32).
3. Dial the external paging number (0 through 2) and wait for confirmation tone (one beep).  
0: for external paging 1 and 2  
"Extrnl Page 1 & 2" will be displayed.  
1: for external paging 1  
"Extrnl Page 1" will be displayed.  
2: for external paging 2  
"Extrnl Page 2" will be displayed.
4. Start paging.  
When the page is answered, one beep will be heard. Start talking.

## Conditions

- If external paging access tone is set to "Disable", confirmation tone from external paging equipment will not be heard after accessing the external paging. Refer to "External Paging Access Tone" on page 3-41.

## Paging And Transfer

### To transfer a call to the paged person

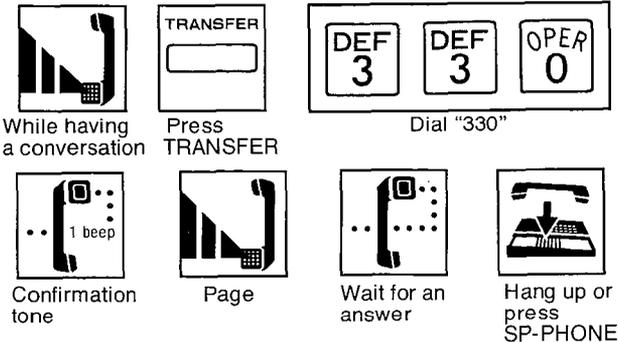

- You may dial 331 through 338 or 320 through 322 instead of 330.


### Operation

#### To transfer a call to the paged person;


- You are in conversation.
- Press the TRANSFER button.
- Dial (330) for paging all extensions.  
Dial (331) for paging extension group 1.  
Dial (332) for paging extension group 2.  
Dial (333) for paging extension group 3.  
Dial (334) for paging extension group 4.  
Dial (335) for paging extension group 5.  
Dial (336) for paging extension group 6.  
Dial (337) for paging extension group 7.  
Dial (338) for paging extension group 8.  
Dial (320) for external paging 1 and 2.  
Dial (321) for external paging 1.  
Dial (322) for external paging 2.
- Wait for confirmation tone.
- Start paging.
- Wait for an answer.
- Hang up or press the SP-PHONE button.

## Paging — Answer

### To page from built-in speaker.

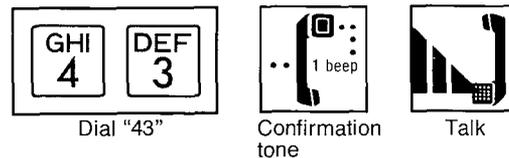

### To paging from External Equipment.

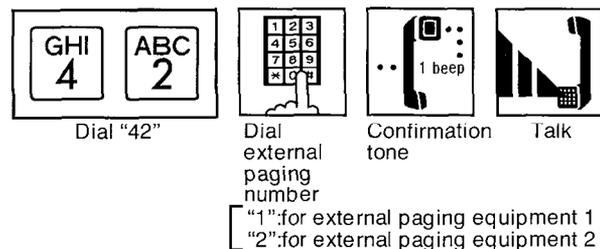

### Description

A page from the built-in speaker or external paging equipment can be answered from any extension.

### Operation

#### To answer a page through the built-in speaker;

- Lift the handset or press the SP-PHONE button.
- Dial (43) and wait for confirmation tone (one beep).
- Start talking.

#### To answer an external page

- Lift the handset or press the SP-PHONE button.
- Dial (42).
- Dial the external paging number (1 or 2) and wait for confirmation tone (one beep).  
"1":for external paging 1.  
"2":for external paging 2.

### Conditions

- If a call and CO number has been paged and transferred, you may answer by pressing the CO button whose number has been paged and indicator is flashing slowly (red color), instead of dialing 43, 421 or 422.

# Use of Other Features


## Call Forwarding — All Calls / Busy or No Answer

### Setting


#### All Calls




Lift handset or press SP-PHONE

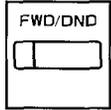


Press FWD/DND (F3)

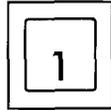

Dial "1"

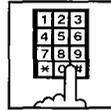

Dial extension number to whom the call is forwarded

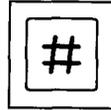

Dial "#"




Hang up or press SP-PHONE


#### Busy or No Answer




Lift handset or press SP-PHONE

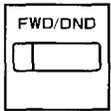


Press FWD/DND (F3)

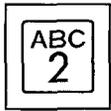

Dial "2"

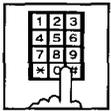

Dial extension number to whom the call is forwarded

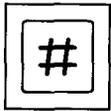

Dial "#"




Hang up or press SP-PHONE


#### To cancel




Lift handset or press SP-PHONE

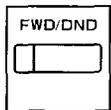

Press FWD/DND (F3)

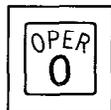

Dial "0"

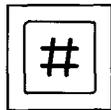

Dial "#"



Hang up or press SP-PHONE

### Description

#### All Calls

All intercom calls to your extension can be automatically forwarded to any extension within the system.

For outside calls to your extension, if your extension is set to the Direct In Line (DIL) mode, the outside calls can be automatically forwarded to any extension within the system.

For programming to the DIL mode, see page 3-54.

#### Busy or No Answer

If your extension is busy or does not answer the call within 3 rings ("Call Forwarding Starting Time" on page 3-28 can change from 3 rings to 1 ring, 2 rings or 4 rings.), intercom calls to your extension can be automatically forwarded to any extension within the system.

For outside calls to your extension, if your extension is set to the Direct In Line (DIL) mode, the outside calls can be automatically forwarded to any extension within the system.

The programmable feature (F3 only) button of the KX-T123250, KX-T61650 or KX-T30850 can also be used for "Call Forwarding" if programming is done beforehand in the extension. For programming, see page 4-60.

### Operation

#### Setting


1. Lift the handset or press the SP-PHONE button.
2. Press the FWD/DND (or F3) button.
3. To forward all calls, dial (1).  
To forward the calls when your extension is busy or do not receive, dial (2).
4. Dial the number of the extension to which the calls are to be forwarded (100 through 199).
5. Dial the (#) button.  
A confirmation tone will be heard. "FWD (All) Ext 102" or "FWD (B/NA) Ext 102" will be displayed.
6. Hang up or press the SP-PHONE button.  
The FWD/DND indicator will flash.

**To cancel**


1. Lift the handset or press the SP-PHONE button.  
The indicator light of the FWD/DND button will be off.
2. Press the FWD/DND (or F3) button.
3. Dial (0).
4. Dial the (#) button.  
A confirmation tone will be heard.  
"FWD/DND Cancel" will be displayed.
5. Hang up or press the SP-PHONE button.

**Conditions**

- Do Not Disturb is cancelled when call forwarding is established.
- Recall for camp-on and Hold recall are not forwarded.
- The tone (busy tone or do not disturb tone etc.) the caller receives depends on the condition of the forwarded extension.

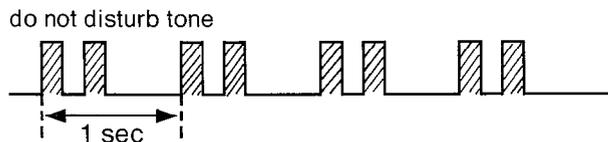


- When an intercom call to the forwarding extension is originated from the forwarded extension, the forwarded extension user will hear a reorder tone.

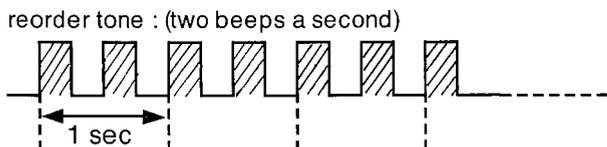


- This feature will not function in "Automatic Answer" mode on page 4-10 and "Intercom Voice Alerting" mode on page 4-56.

- An extension can not accommodate more than one forwarded extension.  
At each time of newly setting "Call Forwarding", a destination (forwarded extension code) will be renewed.  
Old entry will be canceled.



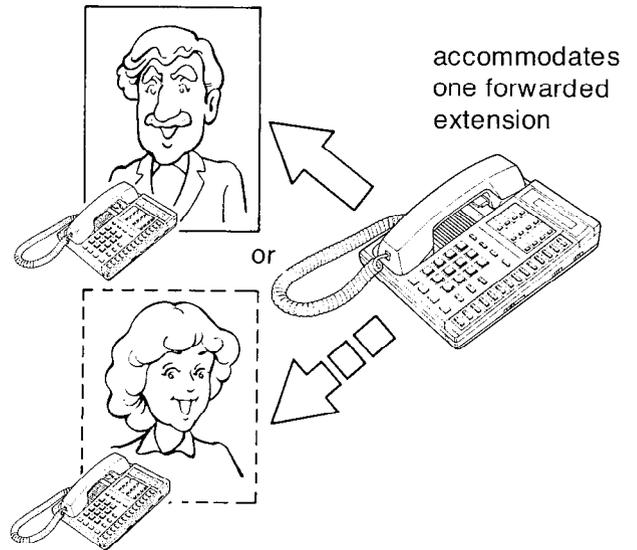


- If extension A is forwarding all calls to extension B and B is forwarding all calls to C, if any extension calls A, they will be connected to B and can not be connected to C.  
Call Forwarding can be connected to only 1st forwarded extension.

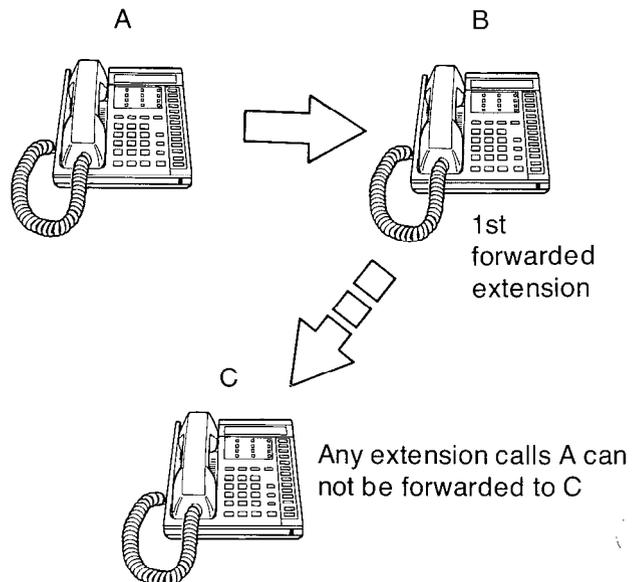


## Call Forwarding-To Outside Line

### Setting

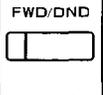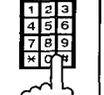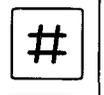 Lift handset or press SP-PHONE	 Press FWD/DND (F3)	 Dial "3"	 Dial "9"	 Dial phone number to whom the call is forwarded	 Dial "#"	 Hang up or press SP-PHONE	■ You may dial 81 through 88 instead of 9. 9 ..... Each extension can automatically select an idle CO line. 81 through 88 ..... Each extension can select a trunk group designated.
--	---	---	---	--	---	--	---

### To cancel

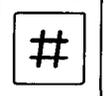 Lift handset or press SP-PHONE	 Press FWD/DND (F3)	 Dial "0"	 Dial "#"	 Hang up or press SP-PHONE
--	---	---	---	--

### Description

Intercom calls to your extension can be automatically forwarded to any outside line. For outside calls to your extension, if your extension is set to the Direct In Line (DIL) mode the outside calls can be automatically forwarded to any outside line. For programming to the DIL mode, see page 3-54. This feature is required to be set beforehand in the KX-T123210. For programming, see page 3-72. The programmable feature (F3 only) button of the KX-T123250, KX-T61650 or KX-T30850 can also be used for "Call Forwarding" if programming is done beforehand in the extension. For programming, see page 4-60.

### Operation

#### Setting

1. Lift the handset or press the SP-PHONE button.
2. Press the FWD/DND (or F3) button.
3. Dial (3).
4. Dial (9).
  - You may dial 81 through 88 instead of 9.  
 9 ..... Each extension can automatically select an idle CO line.  
 81 through 88 ..... Each extension can select a trunk group designated.
5. Dial the phone number of the outside line to which the calls are to be forwarded.
6. Dial (#).  
 A confirmation tone will be heard.  
 "FWD (All) All COs" or "FWD (All) CO G1" will be displayed.
7. Hang up or press the SP-PHONE button.  
 The FWD/DND indicator will flash.

#### To cancel

1. Lift the handset or press the SP-PHONE button.  
 The indicator light of the FWD/DND button will be off.
2. Press the FWD/DND (or F3) button.
3. Dial (0).
4. Dial (#).  
 A confirmation tone will be heard.  
 "FWD/DND Cancel" will be displayed.
5. Hang up or press the SP-PHONE button.

#### Conditions


- Do Not Disturb is cancelled when call forwarding is established.
- Recall for camp-on and Hold recall are not forwarded.
- The phone number to whom the call is forwarded is used from 0 to 9 and pause except and #. A maximum of phone number is 32 digits (Automatic line access number 9 or trunk group access number 81 through 88 is included).
- If outside call is forwarded to any outside line, the KX-T123210 will disconnect the call from the line after 10 minutes. For changing the time, "CO to CO Duration Time Limit" on page 3-30. 3 beeps tone will be heard every 5 seconds for 15 seconds before the call is disconnected from the line.
- If the outside call is forwarded to another outside line through the KX-T123210, the KX-T123210 may not disconnect both lines after the calling party hangs up if the calling parties line (central office exchange) does not release a CPC (Calling Party Control) signal to the line.  
 However the KX-T123210 will disconnect the line after the time that you have programmed. (See page 3-30.)

## Dial Call Pickup Deny

### Setting



Lift handset  
or press  
SP-PHONE

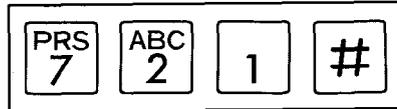

Dial "721#"




Hang up or  
press  
SP-PHONE

### To cancel



Lift handset  
or press  
SP-PHONE

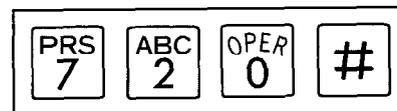

Dial "720#"



Hang up or  
press  
SP-PHONE

### Description

Allows you to prohibit any other extension user from answering calls directed to you.

### Conditions

While your extension is in the "Dial Call Pickup Deny" mode, you can place or receive outside or intercom calls.

### Operation

#### Setting

1. Lift the handset or press the SP-PHONE button.
2. Dial (721#).  
Wait for a confirmation tone.  
"C.Pickup Deny" will be displayed.
3. Hang up or press the SP-PHONE button.

#### To cancel,


1. Lift the handset or press the SP-PHONE button.
2. Dial (720 #).  
Wait for a confirmation tone.  
"C.Pickup Allow" will be displayed.
3. Hang up or press the SP-PHONE button.

## Do Not Disturb

### Setting




Lift handset  
or press  
SP-PHONE

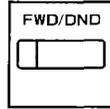

Press  
FWD/DND  
(F3)



Dial "4"

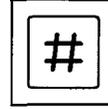

Dial "#"




Hang up or  
press  
SP-PHONE

### To cancel




Lift handset  
or press  
SP-PHONE

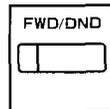

Press  
FWD/DND  
(F3)



Dial "0"

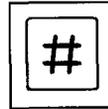

Dial "#"



Hang up or  
press  
SP-PHONE

## Description

Each extension can be individually programmed for not receiving intercom call or outside calls.

The programmable feature (F3 only) button of the KX-T123250, KX-T61650 or KX-T30850 can also be used for "Do Not Disturb" if programming is done beforehand in the extension.

For programming, see page 4-60.

## Operation

### Setting

1. Lift the handset or press the SP-PHONE button.
2. Press the FWD/DND (or F3) button.
3. Dial (4).
4. Dial (#).  
"Do Not Disturb" will be displayed.  
Wait for a confirmation tone.
5. Hang up or press the SP-PHONE button.  
The indicator of FWD/DND button will be lit.


### To cancel

1. Lift the handset or press the SP-PHONE button.  
The indicator of FWD/DND button will go out.
2. Press the FWD/DND (or F3) button.
3. Dial (0).
4. Dial (#).  
"FWD/DND Cancel" will be displayed.  
Wait for a confirmation tone.
5. Hang up or press the SP-PHONE button.

### Conditions

- When "Do Not Disturb" is entered, "Call Forwarding" will be canceled, if entered.
- "Do Not Disturb" does not prevent the extension from recalling for on-hold and camp-on.
- If calling party use the "Do Not Disturb Override" feature, the call will receive to the extension that is setting the "Do Not Disturb".  
See the "Do Not Disturb Override" on page 4-31.

## Do Not Disturb Override

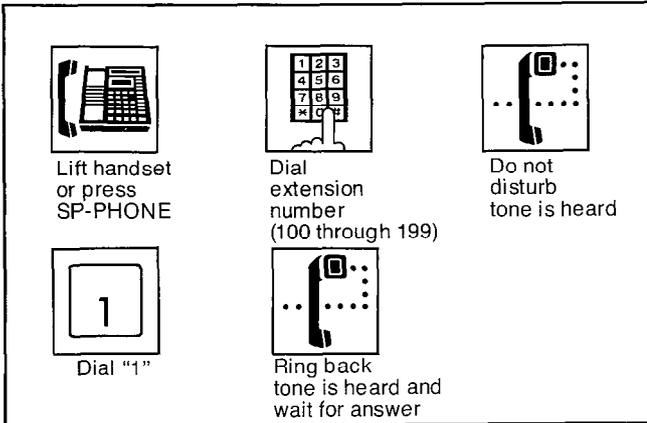

### Description

This feature can dial to the extension that is set for the Do Not Disturb.

This feature is required to be set beforehand in the KX-T123210. For programming, see page 3-74.


### Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial the extension number (100 through 199).
3. Do not disturb tone is heard.
4. Dial (1) and after a ring back tone is heard, wait for an answer.

### Conditions

- When the line is busy after dialing (1), busy tone will be heard. In this case, the extension user can use Camp-on (Automatic Call Back Busy) mode.


Do not disturb tone

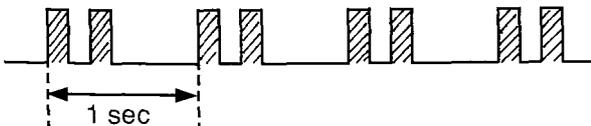


## Saved Number Redial

### Programming

When the called line is busy or while you are speaking on the CO Line;

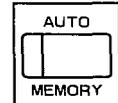

Press AUTO

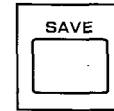


Press SAVE

### Dialing



Lift handset or press SP-PHONE

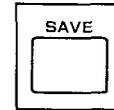

Press SAVE

### Description

The desired phone number on an outgoing call to CO line can be stored and then redialed.

### Programming

While you are speaking on the CO line or when the called party is busy.

1. Press the AUTO button.
  2. Press the SAVE button.
- The phone number can not be stored even if you press the AUTO and SAVE buttons after you hang up.

### Dialing

1. Lift the handset or press the SP-PHONE button.
2. Press the SAVE button.

You may press the CO button to select the CO line directly after lifting the handset or press the SP-PHONE button.

### Conditions


- Up to 32 digits can be stored and redialed.
- The KX-T123250, KX-T61650 or KX-T30850 will not function for Saved Number Redial.

## Executive Override Deny

### To Deny Executive Override



Lift handset  
or press  
SP-PHONE

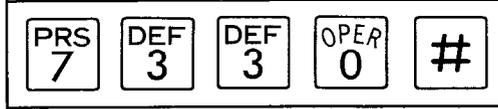

Dial "7330#"



Hang up or  
press  
SP-PHONE

### To Allow Executive Override



Lift handset  
or press  
SP-PHONE



Dial "7331#"



Hang up or  
press  
SP-PHONE

## Description

Allows you to prohibit another extension user from intruding into your conversation with an outside or inside party.  
Default is "Allow" mode .  
For programming of the intrusive extension, see "Executive Override" on page 3-73.

## To Allow Executive Override


1. Lift the handset or press the SP-PHONE button.
2. Dial (7331#).  
"Busy Ovrde Allow" will be displayed.  
A confirmation tone will be heard.
3. Hang up or press the SP-PHONE button.

## Operation

### To deny Executive Override

1. Lift the handset or press the SP-PHONE button.
2. Dial (7330#).  
"Busy Ovrde Deny" will be displayed.  
A confirmation tone will be heard.
3. Hang up or press the SP-PHONE button.

## Switching to Tone Alerting

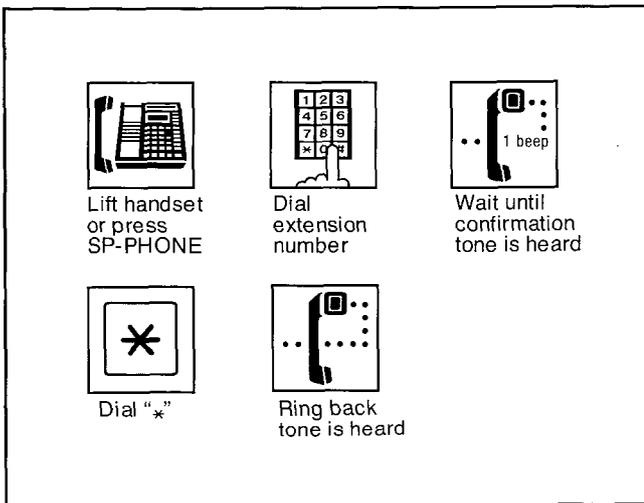

### Description

"Voice alerting" (through built-in speaker) that is established at the called party's extension, can be switched to "Tone alerting" (ringing). This feature is required to be set beforehand at the called party's extension. For programming, see page 4-56.


### Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial the extension number.
3. Wait for a confirmation tone after inter office calling.
4. Dial (\*).

The ring back tone will be heard.

Tone Ringer on the called party's extension will be ready to be activated.

## Background Music

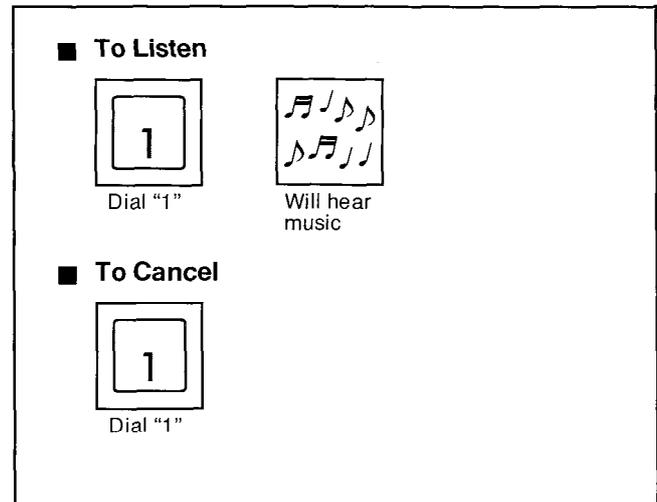

### Description

Music from an external source (e.g. radio) can be listened to on the built-in speaker of the proprietary telephone.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.

#### To listen

Dial (1).

"BGM on" will be displayed.

Music will be heard from the speaker.

#### To cancel

Dial (1).

"BGM off" will be displayed.

### Conditions

- When listening to the background music, the music will be interrupted by incoming calls, lifting handset or pressing the SP-PHONE button. After completion of the conversation replacing the handset back on the cradle or by pressing of the SP-PHONE button, will resume the background music.


# Absent Message Capability

## Setting

### Message 1. "Will Return Soon"



Lift handset or press SP-PHONE

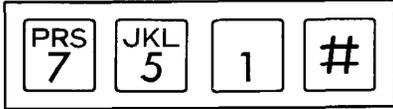

Dial "751#"




Hang up or press SP-PHONE

### Message 2. "Gone Home"



Lift handset or press SP-PHONE

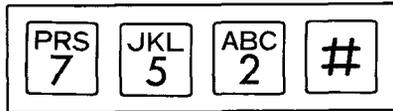

Dial "752#"




Hang up or press SP-PHONE

### Message 3. "At Ext 1 2 3"


extension number




Lift handset or press SP-PHONE

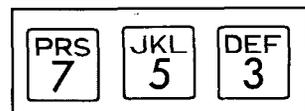

Dial "753"

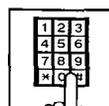

Dial extension number (100 through 199)

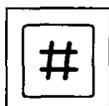


Dial "#"




Hang up or press SP-PHONE


### Message 4. "Back at 10:23 AM"

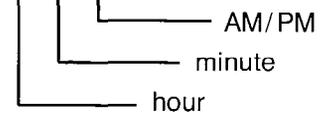


Lift handset or press SP-PHONE

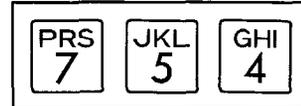


Dial "754"

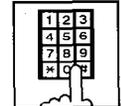


Enter hour (01 through 12)

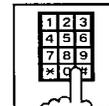

Enter minute (00 through 59)

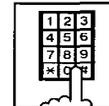

Dial "0" or "1" "0":for AM "1":for PM

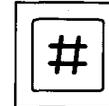


Dial "#"




Hang up or press SP-PHONE


### Message 5. "Out Until 10/23"

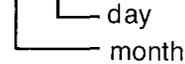


Lift handset or press SP-PHONE

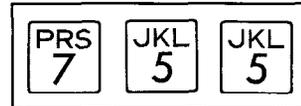


Dial "755"

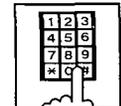

Enter month (01 though 12)

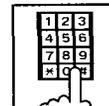

Enter day (01 though 31)

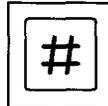

Dial "#"




Hang up or press SP-PHONE

### Message 6. "In a Meeting"



Lift handset or press SP-PHONE

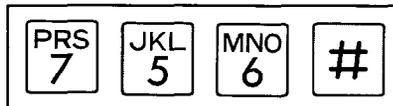

Dial "756#"




Hang up or press SP-PHONE

### To cancel the message



Lift handset  
or press  
SP-PHONE

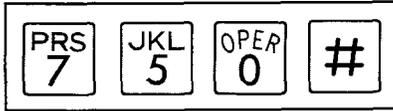

Dial "750#"



Hang up or  
press  
SP-PHONE

## Description

Absent messages (Message 1 through 6) which are programmed can be informed to calling party. Programming can be done at any telephone (either proprietary telephones or standard telephones).

When a caller using the proprietary telephone with LCD dials the extension in which the message is programmed, it will be displayed on the LCD.

## Operation

### Setting

#### Message 1. "Will Return Soon"

1. Lift the handset or press the SP-PHONE button.
2. Dial (751#)
3. Hang up or press the SP-PHONE button.

#### Message 2. "Gone Home"

1. Lift the handset or press the SP-PHONE button.
2. Dial (752#)
3. Hang up or press the SP-PHONE button.

#### Message 3. "At Ext. 123"

1. Lift the handset or press the SP-PHONE button.
2. Dial (753)
3. Dial the extension number. (100 through 199)
4. Dial (#)
5. Hang up or press the SP-PHONE button.

#### Message 4. "Back at 10:23 AM"

1. Lift the handset or press the SP-PHONE button.
2. Dial (754)
3. Enter the hour (01 though 12)
4. Enter the minute (00 though 59)
5. Dial (0) or (1).  
Dial (0) for AM.  
Dial (1) for PM.
6. Dial (#)
7. Hang up or press the SP-PHONE button.

#### Message 5. "Out Until 10/23"

1. Lift the handset or press the SP-PHONE button.
2. Dial (755)
3. Enter the month. (01 though 12)
4. Enter the day. (01 though 31)
5. Dial (#)
6. Hang up or press the SP-PHONE button.

#### Message 6. "In a Meeting"

1. Lift the handset or press the SP-PHONE button.
  2. Dial (756#)
  3. Hang up or press the SP-PHONE button.
- Those Absent Messages will be displayed on the LCD of the calling party.

### To cancel

1. Lift the handset or press the SP-PHONE button.
2. Dial (750#)  
"Message Cancel" will be displayed.
3. Hang up or press the SP-PHONE button.

## Conditions


- When a calling party dials an extension that is programmed for absent Message by using the proprietary telephone with an LCD, if the extension is idle, a ring back tone will be heard and the absent message will be displayed on the LCD of the calling party. If the extension is busy, a busy tone will be heard and the absent message will be displayed on the LCD of the calling party. If the extension is set the do not disturb, a do not disturb tone will be heard and the absent message will be displayed on the LCD of the calling party.

## Message Waiting


### Setting (operator only)




Lift handset  
or press  
SP-PHONE

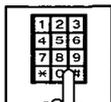

Dial  
extension  
number  
(100 Through 199)

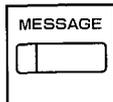

Press  
MESSAGE

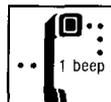

Confirmation  
tone




Hang up or  
press  
SP-PHONE

### To call the operator from the extension where the message is left.



Lift handset  
or press  
SP-PHONE

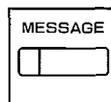

Press  
MESSAGE




Talk

### To cancel the message at the extension where the message is left.



Lift handset  
or press  
SP-PHONE

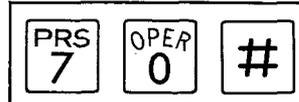

Dial "70#"




Hang up or  
press  
SP-PHONE


### To cancel the message which is left at the extension from the operator.




Lift handset  
or press  
SP-PHONE

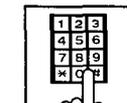


Dial  
extension  
number  
(100 Through 199)

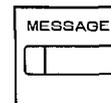

Press  
MESSAGE

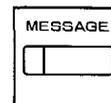

Press  
again

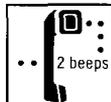

Confirmation  
tone



Hang up or  
press  
SP-PHONE

## Description

If the intercom extension operator has dialed is busy or does not answer, operator can inform the called extension that there is a message which have to be informed. It will be indicated by the MESSAGE indicator. Only the operator can leave the message to each extension.

If the called extension is not provided with the MESSAGE button, the operator can not leave the message. To change the CO, or DSS button into the message waiting button, see page 4-55 or 4-58.

## Operation

### Setting

1. Lift the handset or press the SP-PHONE button.
2. Dial the extension number (100 through 199).
3. Press the MESSAGE button.  
A confirmation tone (one beep) will be heard.  
The MESSAGE Indicator of the called party will be lit.
4. Hang up or press the SP-PHONE button.

### To call the operator from the extension where the message is left.

1. Lift the handset or press the SP-PHONE button
2. Press the MESSAGE button.  
The MESSAGE Indicator will go out.
3. Start talking

### To cancel the message at the extension where the message is left.

1. Lift the handset or press the SP-PHONE button
2. Dial (70#)  
The MESSAGE Indicator will go out.
3. Hang up or press the SP-PHONE button.

### To cancel the message which is left at the extension from the operator.

1. Lift the handset or press the SP-PHONE button.
2. Dial the extension number (100 through 199).
3. Press the MESSAGE button.
4. Press the MESSAGE button, again.  
A confirmation tone (two beeps) will be heard.  
The MESSAGE Indicator of the called extension will go out.
5. Hang up or press the SP-PHONE button.

### Conditions

- This feature will not function with use of a standard telephone.
- Each extension can be received up to two messages.
- If the MESSAGE Indicator does not go out after calling the operator, it means that another message is left from another operator.


## Flexible Night Service

(Extension jack number 01 only)

**To enable night service:** (To disable day service)



Lift handset  
or press  
SP-PHONE

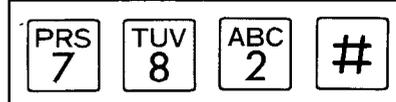

Dial "782#"




Hang up or  
press  
SP-PHONE

**To disable night service:** (To disable night service)



Lift handset  
or press  
SP-PHONE

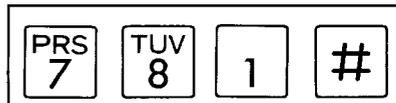

Dial "781#"



Hang up or  
press  
SP-PHONE

### Description

Normal system operation is set for day time mode. Night service allows for outward dialing and incoming ringing assignments etc. to be rearranged via programming. Night service is enabled or disabled through extension jack number 01 using this feature, at any time. Without activating this feature, the day/night services are automatically switched at predetermined time (9:00 AM and 5:00 PM for default time) by the internal clock if the "Switching of Service Mode" in Day/ Night Service Mode is selected to the "AUTO" mode in the KX-T123210. Refer to "Switching of Service Mode" on page 3-12 and "Starting Time" on page 3-13 in Day/ Night Service Mode. The following features will be switched "Day Mode" or "Night Mode".

- "Day Mode" on page 3-47 and "Night Mode" on page 3-48 Flexible Outward Dialing Assignment.
- "Day Mode" on page 3-49 and "Night Mode" on page 3-51 Flexible Ringing Assignment.
- "Day Mode" on page 3-54 and "Night Mode" on page 3-57 CO Direct In Line Assignment.
- "Day Mode" on page 3-52 and "Night Mode" on page 3-53 Delayed Ringing Assignment.
- "Day Mode" on page 3-64 and "Night Mode" on page 3-66 Service Class Assignment of Toll Restriction.
- "Day Mode" on page 3-75 and "Night Mode" on page 3-76 Ringing Assignment from Doorphone.

### Operation

1. Lift the handset or press the SP-PHONE button of extension of jack number 01.
2. Dial (782 #) and wait for a confirmation tone. Night service is enabled. "Night Mode" will be displayed.
3. To return to day service, dial (781#) and wait for a confirmation tone. "Day Mode" will be displayed.
4. Hang up or press the SP-PHONE button.


When the unit is not use, the present mode selected will be shown by pressing the "#" button.

## External Feature Access

### Call Waiting - Outside Line




Will hear a call waiting tone

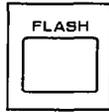

Press FLASH



Consult with new caller while original call is on hold

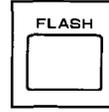

Press FLASH



Consult with original caller while 2nd call is on hold

[ If the calling party on hold hangs up, the line is terminated. ]

### Description

Allows an extension user to access features of the central office or host PBX. (example: call waiting feature can be supplied by central office.)

The external feature (e.g. call waiting feature) can only be accessed when engaged on an outside call.

### Operation

The following example shows you one of the procedures.

#### Call Waiting - Outside Line

1. While having a conversation, another party calls and a call waiting tone is heard.
2. Press the FLASH button.
  - The original call is placed on hold and the new call can be answered.
3. Press the FLASH button again.
  - The original caller can be spoken to again and the new call is placed on hold.
  - If the calling party on hold hangs up, the line is terminated.

### Condition

- "Flash" can be stored into memory in the same way as "Storage" on page 4-4.
- You may access some features of host PBX using the Flash button. If KX-T123210 is connected to host PBX and flash operation is required, follow the procedure of flash operation which is required in the host PBX.


## Account Code

### Forced Mode

#### Making a Call




Lift handset  
or press  
SP-PHONE

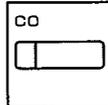

Press CO




Press  
FWD/DND  
(F3)

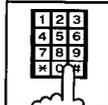


Dial  
account  
code

[ Account  
code is  
4 digits. ]

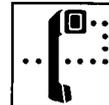

Wait for  
C.O. dial  
tone

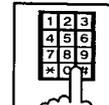


Dial  
phone  
number


#### Receiving a Call

If you want to record a calling party's account code in the SMDR, follow the below - mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation,

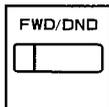

Press  
FWD/DND  
(F3)

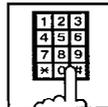

Dial  
account  
code


- Dialing the account code must be done before hanging up.

### Option Mode


#### ■ Making or Receiving a Call

If you want to record a calling or called party's account code in the SMDR, follow the below - mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation,

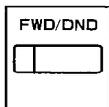

Press  
FWD/DND  
(F3)

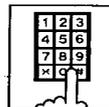

Dial  
account  
code

[ Account  
code is  
4 digits. ]

- Dialing the account code must be done before hanging up.

## Description

This feature gives each message of the SMDR an account code of the called or calling party.

Station Message Detail Recording (SMDR) is cost saving feature that records all incoming and outgoing calls through the CO line.

This feature has two modes "Forced" and "Option".

In the "Forced" mode, the account code must be entered every time the extension user dials. In the "Option" mode, the account code may be entered when a record of the account code is needed.

When setting to the "Forced" mode, see page 3-70.

The programmable feature (F3 only) button of the KX-T123250, KX-T61650 or KX-T30850 can also be used for "Account Code" if programming is done beforehand in the extension.

For programming, see page 4-60.

## Operation

### Forced mode

#### ■ Making a Call

1. Lift the handset or press the SP-PHONE button.
  2. Press the CO button.  
The FWD/DND Indicator will flash.
  3. Press the FWD/DND (or F3) button.  
"Enter ACCNT Code" will be displayed.  
The FWD/DND Indicator will light.  
Intermittent tone is heard.
  4. Dial the account code.  
Account code must be 4 digits.  
CO dial tone will be heard.
  5. Dial the phone number.
- You may dial 9 or 81 through 88 instead of pressing the CO button.

#### ■ Receiving a call

If you want to record a calling party's account code in the SMDR, follow the below-mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation, The FWD/DND Indicator will flash.

1. Press the FWD/DND (or F3) button.  
"Enter ACCNT Code" will be displayed.  
The FWD/DND Indicator will light.
2. Dial the account code.  
Account code must be 4 digits.
  - Dialing the account code must be done before hanging up.

### Option Mode

#### ■ Making or Receiving a Call


If you want to record a calling or called party's account code in the SMDR, follow the below-mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation,

1. Press the FWD/DND (or F3) button.  
"Enter ACCNT Code" will be displayed.  
The FWD/DND Indicator will light.
2. Dial the account code.  
Account code must be 4 digits.
  - Dialing the account code must be done before hanging up.

### Conditions

- Account code must be 4 numerical digits except for the "#" and "\*" button.
- If you enter the wrong account code, press the FWD/DND button and enter the correct code.
- If account codes are programmed with telephone numbers for one touch dialing or system speed dialing, you need not to dial an account code when making a call.  
Program as follows.

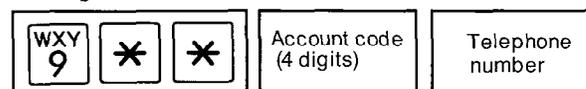


## Data Line Security

### Setting



Lift handset  
or press  
SP-PHONE

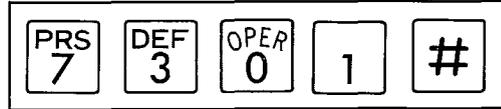

Dial "7301#"




Hang up or  
press  
SP-PHONE

### To Cancel



Lift handset  
or press  
SP-PHONE

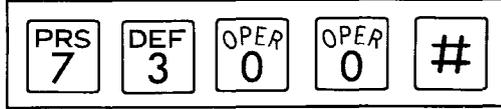

Dial "7300#"



Hang up or  
press  
SP-PHONE

### Description

This feature provides security when transmitting data through an extension of the KX-T123210. Executive override, call waiting tone and hold time reminder tone from the KX-T123210 are prohibited in this mode.

### Conditions

- The parallel connection of the proprietary telephone and a data terminal equipment is impossible.

### Operation



#### Setting

1. Lift the handset or press the SP-PHONE button.
2. Dial (7301#)  
"Data Mode On" will be displayed.  
A confirmation tone will be heard.
3. Hang up or press the SP-PHONE button.

#### To cancel

1. Lift the handset or press the SP-PHONE button.
2. Dial(7300#).  
"Data Mode Off" will displayed.  
A confirmation tone will be heard.
3. Hang up or press the SP-PHONE button.

## Call Waiting Tone — From CO / Extension Deny
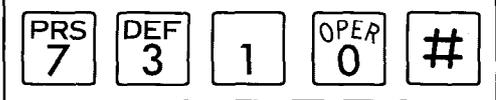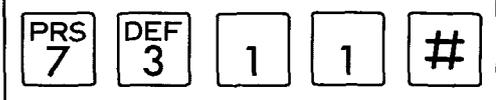
<b>To deny CO call waiting tone</b>	 Lift handset or press SP-PHONE	 Dial "7310#"	 Hang up or press SP-PHONE
<b>To allow CO call waiting tone</b>	 Lift handset or press SP-PHONE	 Dial "7311#"	 Hang up or press SP-PHONE
<b>To deny extension call waiting tone</b>	 Lift handset or press SP-PHONE	 Dial "7320#"	 Hang up or press SP-PHONE
<b>To allow extension call waiting tone</b>	 Lift handset or press SP-PHONE	 Dial "7321#"	 Hang up or press SP-PHONE

### Description

During a conversation, a call waiting tone will be heard when a third party on an outside line or intercom calls you. Call waiting tone can be removed at customer's request.

Default is "Allow" mode.

Refer to "Call Waiting" on page 4-20.

### Operation

#### To deny CO call waiting tone

1. Lift the handset or press the SP-PHONE button.
2. Dial (7310 #).  
"CW (CO) Off" will be displayed.  
A confirmation tone will be heard.
3. Hang up or press the SP-PHONE button.

#### To allow CO call waiting tone

1. Lift the handset or press the SP-PHONE button.

2. Dial (7311 #).

"CW (CO) On" will be displayed.

A confirmation tone will be heard.

3. Hang up or press the SP-PHONE button.

#### To deny extension call waiting tone

1. Lift the handset or press the SP-PHONE button.
2. Dial (7320 #).  
"CW (EXT) Off" will be displayed.  
A confirmation tone will be heard.
3. Hang up or press the SP-PHONE button.

#### To allow extension call waiting tone

1. Lift the handset or press the SP-PHONE button.
2. Dial (7321 #).  
"CW (EXT) On" will be displayed.  
A confirmation tone will be heard.
3. Hang up or press the SP-PHONE button.

# DSS Console(KX-T123240 or KX-T61640)

## DSS(Direct Station Select)Button


### Inter Office Calling(Intercom)

[Pair telephone]



Lift handset or press SP-PHONE

[Console]

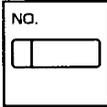

Press DSS

[Pair telephone]



Talk

[Pair telephone]




Hang up or press SP-PHONE

### Transfer of Outside Calls to any Extension



While having a conversation

[Console]

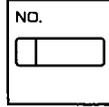

Press DSS

[Pair telephone]



Announce and wait for an answer

[Pair telephone]



Hang up or press SP-PHONE

## Programmable Feature Button


### Programming

- Be sure the handset is in the cradle and the SP-PHONE button is OFF.
- Set the MEMORY switch of a pair telephone (Proprietary telephone) to "PROGRAM".

### Storage


## One Touch Dialing

[Console]

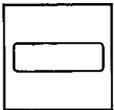


Press PROGRAMMABLE FEATURE

[Pair telephone]

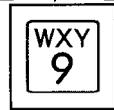


Dial "9"

[Pair telephone]

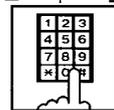

Dial phone number

[Pair telephone]

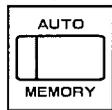

Press MEMORY

- You may dial 81 through 88 instead of 9.
  - 9 ..... The extension can automatically select an idle CO line.
  - 81 through 88 ... The extension can select a trunk group designated.


9 or 81 through 88 must be dialed for storage.

## One Touch Access for System Features

### Example:


Paging All Extensions (Dial 330).

[Console]

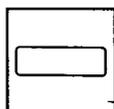


Press PROGRAMMABLE FEATURE

[Pair telephone]

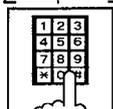

Dial "330"

[Pair telephone]

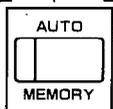

Press MEMORY

### To Correct an Error while Programming



Press CLEAR(TRANSFER) instead of MEMORY


- After pressing the CLEAR button, reprogram the correct number.
- The TRANSFER button is used as the CLEAR button.

### To Change a Stored Number

Repeat "Storage" left side.


### To Erase after Programming

[Console]

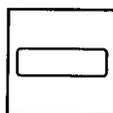


Press PROGRAMMABLE FEATURE

[Pair telephone]

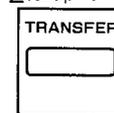

Press CLEAR (TRANSFER)

[Pair telephone]

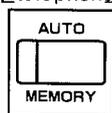

Press MEMORY

- The TRANSFER button is used as the CLEAR button.

After programming all the numbers,return the MEMORY switch to "SET".


### Dialing

[Pair telephone]



Lift handset or press SP-PHONE

[Console]

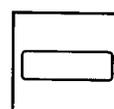

Press PROGRAMMABLE FEATURE

## Description

- **DSS (Direct Station Select) Button:**  
makes the dialing to the extensions very easy.  
You can reach the extension party by simply pushing the DSS Button.
- **Programmable Feature Button:**  
let you access various features of KX-T123210 and speed dialing using the CO line in addition to the numbers programmed into the KX-T123210's memory.

## Operation

### DSS (Direct Station Select) Button

#### Inter office Calling (Intercom)

1. Lift the handset or press the SP-PHONE button of pair telephone.
2. Press the DSS button of Console.
3. Start talking.
4. Hang up or press the SP-PHONE button upon completion of the conversation.

#### Transfer of Outside Calls to any Extension

1. You are in conversation.
2. Press the DSS button (Console) to which the call is transferred.
3. Wait for Intercom party to answer and announce call, then replace the handset or press the SP-PHONE button.

### Programmable Feature Button

## Programming

- Be sure the handset is in the cradle and the SP-PHONE button is OFF.
- Set the MEMORY switch of a pair telephone (Proprietary telephone) to "PROGRAM".

### One Touch Dialing

1. Press a programmable feature button of Console.

2. Enter the line access number.  
9:automatic line access number.  
81: access number of trunk group 1  
⋮  
88: access number of trunk group 8
3. Enter the phone number.
4. Press the MEMORY button.
5. Repeat steps 1 to 4, to program on other programmable feature button.

#### ■ To Confirm a Stored Number

Repeat programming the same number into the same station.

When the MEMORY button is pressed, a beep will be heard.

- two beeps ... The entry is the same as what was previously stored.
- one beep ... The entry is different from the one that was previously stored.  
Repeat the procedure of programming.

### One Touch Access for System Features

#### Example:

Paging All Extensions (Dial 330)

1. Press a programmable feature button of Console.
2. Dial (330).
3. Press the MEMORY button of pair telephone.

**After programming all the numbers, return the MEMORY switch to "SET".**


## Dialing

1. Lift the handset or press the SP-PHONE button of pair telephone.
2. Press the programmable feature button of Console.

## Conditions

Refer to "One Touch Dialing" page 4-4 and "One Touch Access for System Features" page 4-48.

## Pulse/Tone Conversion

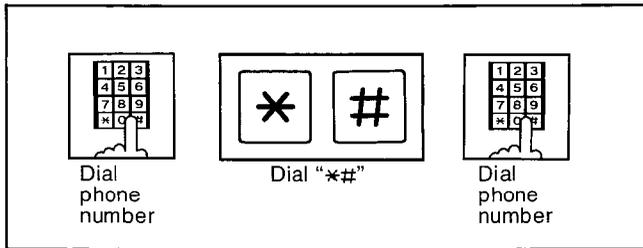

### Description

When the dialing mode is required to change a pulse mode to a tone mode in one dialing sequence, this feature is used.

(e.g. computer-accessed long distance service)

### Operation


1. Dial the phone number. (pulse mode)
2. Dial (\*#)
3. Dial the phone number. (tone mode)

### Conditions


- When you dial using this feature, you must use the line set to a pulse mode. Phone number after dialing "\* #" will change to tone mode.

**Example:** Computer - accessed long distance service

- Local access telephone number of the alternate long distance service company 765 - 4321, Authorization no. 0123456. Long distance no. 543 - 210 - 9876
- Pulse mode is required by local access telephone number of the alternate long distance service company.
- Service of MCI, SPRINT, METRO or other systems is used.

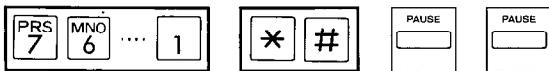


Long distance service company no.

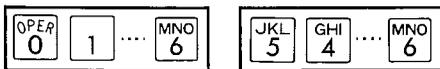

Authorization no.

Long distance no.

## Station Feature Clear

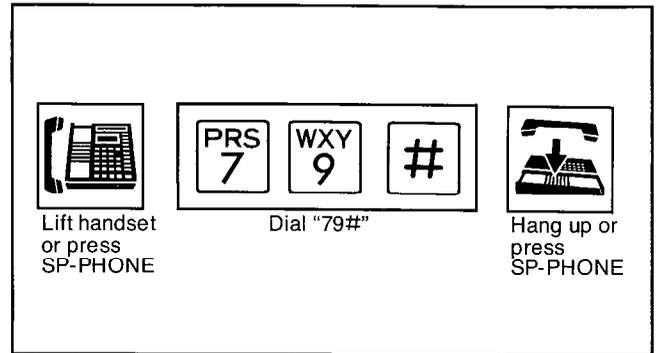

### Description

Dialing (79#) will reset the following station features on an extension to the default data.

- Absent Message Capability
- Call Forwarding
- Data Line Security
- Dial Call Pickup Deny
- Do Not Disturb
- Call Waiting Tone Deny
- Background Music
- Executive Override Deny
- Message Waiting

### Operation

1. Lift the handset or press the SP-PHONE button.
2. Dial (79#) and wait for a confirmation tone. "Ext Data Clear" will be displayed.
3. Hang up or press the SP-PHONE button.

## Busy Lamp Field

### Description

Lamp indicators corresponding to the status of the CO (Central Office), the ICM (Intercom) and DSS (Direct Station Selection) buttons.

### Explanation

- ICM indicator light

Light	Status
off	idle
on	<ul style="list-style-type: none"> <li>● in use for intercom</li> <li>● in use for CO line to which the CO line number is not assigned.</li> </ul>
slow flashing	on hold
flashing in groups of 2	on exclusive hold
quick flashing	<ul style="list-style-type: none"> <li>● receiving an incoming intercom call</li> </ul>

- Indicator of CO button which has been changed into DSS button.

Light	Status (another extension)
off	idle
on (red color)	in use

- CO indicator light

Light	Status
off	idle
on (green color)	in use
slow flashing (green color)	on hold
slow flashing in groups of 2 (green color)	on exclusive hold
quick flashing (green color)	privacy release
on (red color)	in use at another extension
slow flashing (red color)	on hold at another extension
quick flashing (red color)	receiving an incoming outside call

- DSS Console (KX-T123240, KX-T61640) indicator light

Light	Status
off	idle
on	in use
flashing in groups of 2	in setting Do Not Disturb
slow flashing	in setting Call Forwarding

## Power Failure Transfer

### Description

In the event of a power failure each CO will be connected to assigned extension.

- CO1 will be assigned to extension of jack number 01.
- CO2 will be assigned to extension of jack number 02.
- CO5 will be assigned to extension of jack number 09.
- CO6 will be assigned to extension of jack number 10.
- CO9 will be assigned to extension of jack number 17.
- CO10 will be assigned to extension of jack number 18.

### Operation

- If extension of jack number 01, 02, 09, 10, 17 and 18 is connected with a KX-T123230, KX-T61631, KX-T61630 or KX-T30830, the Power failure switch on the KX-T123230, KX-T61631, KX-T61630 or KX-T30830 must be set to the "ON" position. If dialing cannot be done, set the Dialing mode switch to other position (TONE or PULSE).

### Conditions

- During power failure, all features are lost except for incoming and outgoing CO calls from extensions of jack number 01, 02, 09, 10, 17 and 18.
- If extensions of jack number 01, 02, 09, 10, 17 and 18 are connected with a KX-T123220, KX-T123250, KX-T61620, KX-T61650, KX-T30820 or KX-T30850, disconnect the KX-T123220, KX-T123250, KX-T61620, KX-T61650, KX-T30820 or KX-T30850 and connect a KX-T123230, KX-T61631, KX-T61630, KX-T30830 or a standard telephone.
- There is no memory loss except for the camp-on, saved number redial, the last number redial, Call park and Message Waiting during power failure, memory is protected by 21 day rechargeable battery. Rechargeable battery is good for 5 years.
- Automobile type batteries which are customer supplied is available as a back up power supply to the KX-T123210 to operate all the features in the event of power failure. Refer to page 2-17.

Automobile type batteries

[ Consisting of two 12 VDC (24 VDC)  
16 amp / hour maximum rating ]

## Duration Time of Call Display

### Description

The elapsed time (from dialing to replacing the handset) on originating an outside call will be displayed.

### Operation

None

### Conditions

- When intercom calls, the duration time of conversation is not displayed.
- Refer to "Duration Time Count Start Mode" on page 3-40.

## Lockout

### Description

If a handset remains off hook or is disconnected at the other end, a reorder tone will be heard. When "Calling Party Control (CPC) Signal" mode is set to "Disable", the reorder tone will not be heard. (see page 3-61)

### Operation

None

### Conditions

- The party whose handset remains off-hook will hear a reorder tone to indicate that the call is disconnected.

## Mixed Station Dialing

### Description

Any telephone instrument, whether (KX-T123230, KX-T123220, KX-T123250, KX-T61631, KX-T61630, KX-T61620, KX-T61650, KX-T30820, KX-T30830, KX-T30850 for exclusive use), standard rotary phone (10 pps, 20pps), or standard touch tone phone, may be used as an extension of the KX-T123210.

### Operation

None

# Station Programming


## One Touch Access for System Features

### To Program


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

#### Example:


Paging All Extensions (Dial 330).

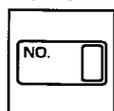

Press  
PROGRAMMABLE  
FEATURE

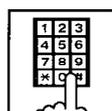

Dial "330"

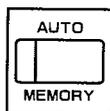


Press  
MEMORY

After programming all the system features, return the MEMORY switch to the “SET” position.


### To Access



Lift handset  
or press  
SP-PHONE

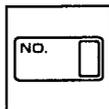

Press  
PROGRAMMABLE  
FEATURE

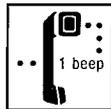

Confirmation  
tone of 1 beep  
will be heard



Page

## Description

Features that can be accessed by using the dialing button also can be programmed into memory.

(e.g. Paging All Extensions.)

## Operation

### To Program

Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

“PITS-PGM NO ?→” will be displayed.

#### Example:

Paging All Extensions (Dial 330).

1. Press the PROGRAMMABLE FEATURE button.

2. Dial (330).

3. Press MEMORY button.

- System feature described in the table on page 6-5 can be programmed into memory.

After programming all the numbers, return the MEMORY switch to the “SET” position.

### To Access


1. Lift the handset or press the “SP-PHONE” button.
2. Press the PROGRAMMABLE FEATURE button and wait for confirmation tone (one beep).
3. Start paging.

# Auto CO Hunting


## Prime Line Preference-Outgoing

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.


### Setting

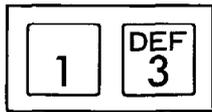

Dial “13”

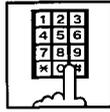


Dial  
CO number  
(01 through 12)

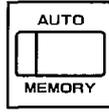


Press  
MEMORY

### To cancel

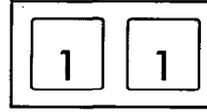

Dial “11”

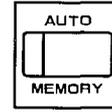

Press  
MEMORY

- After programming “Prime Line Preference-Outgoing” mode, return the MEMORY switch to the “SET” position.


### Dialing through CO line



Lift handset  
or press  
SP-PHONE



Wait for  
CO. dial tone

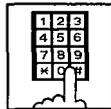

Dial  
phone  
number

## Description

You can access the prime CO line directly by picking up the handset or pressing the SP-PHONE button.

## Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

### Setting

1. Dial (13).  
“Pref. Out : CO-” will be displayed.
2. Dial the CO number (01 through 12).
3. Press the MEMORY button.

### To cancel

1. Dial (11).  
“Pref. Out : No” will be displayed.
2. Press the MEMORY button.

- After programming, return the MEMORY switch to the “SET” position.

## Dialing through CO line

1. Lift the handset or press the SP-PHONE button.  
The CO indicator will be lit green.  
Dial tone from CO will be heard.
2. Dial the phone number.
  - When you access an extension in the Auto CO Hunting mode, press the ICM button and then dial the extension number.

## Conditions


This feature will not function with use of a standard telephone.

## Auto CO Hunting (cont)


### Idle Line Preference-Outgoing

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

#### Setting

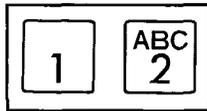


Dial “12”

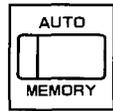


Press  
MEMORY

#### To cancel

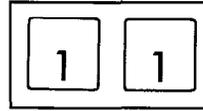

Dial “11”

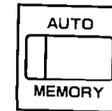


Press  
MEMORY

- After programming “Idle Line Preference-Outgoing” mode, return the MEMORY switch to the “SET” position.


#### Dialing through CO line



Lift handset  
or press  
SP-PHONE

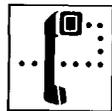

Wait for  
CO. dial tone

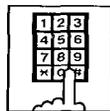

Dial phone  
number

### Description

You can access any CO line which is not in use directly by picking up the handset or pressing the SP-PHONE button.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

#### Setting

1. Dial (12).  
“Pref. Out : Idle” will be displayed.
2. Press the MEMORY button.

#### To cancel

1. Dial (11).  
“Pref. Out : No” will be displayed.
2. Press the MEMORY button.

- After programming, return the MEMORY switch to the “SET” position.

### Dialing through CO line

1. Lift the handset or press the SP-PHONE button.  
The CO indicator will be lit green.  
Dial tone from CO will be heard.
2. Dial the phone number.
  - When you access an extension in the Auto CO Hunting mode, press the ICM button and then dial the extension number.

### Conditions


This feature will not function with use of a standard telephone.

## Automatic Answering Selection


### Prime Line Preference-Incoming

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".


#### Setting

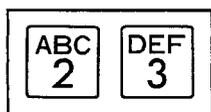

Dial "23"

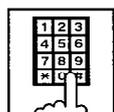


Dial  
CO number  
(01 through 12)

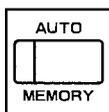


Press  
MEMORY

#### To cancel

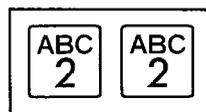

Dial "22"

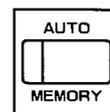

Press  
MEMORY

- After programming "Prime Line Preference-Incoming" mode, return the MEMORY switch to the "SET" position.

#### To answer



Lift handset  
or press  
SP-PHONE

### Description

When incoming calls from the Central Office are received at the same time, you can receive the call on the preferred CO line first by only lifting the handset or pressing the SP-PHONE button.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".

#### Setting

1. Dial (23).  
"Pref. In : CO-" will be displayed.
2. Dial the CO number (01 through 12).
3. Press the MEMORY button.

#### To cancel

1. Dial (22).  
"Pref. In : Ring" will be displayed.
  2. Press the MEMORY button.
- After programming, return the MEMORY switch to the "SET" position.

#### To answer

Lift the handset or press the SP-PHONE button.

- If any incoming calls from the Central Office are received at the same time except for the preferred CO line, you must lift the handset or press the SP-PHONE button and then press the CO button whose indicator is quickly flashing (red color).

### Conditions


This feature will not function with use of a standard telephone.

## Automatic Answering Selection (cont.)


### No Line Preference-Incoming

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

#### Setting

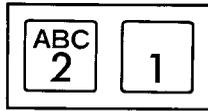


Dial "21"

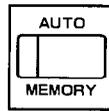


Press  
MEMORY

#### To cancel

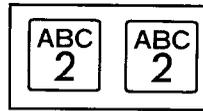

Dial "22"

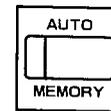


Press  
MEMORY

- After programming “No Line Preference-Incoming”, return the MEMORY switch to the “SET” position.

#### To answer



Lift handset  
or press  
SP-PHONE

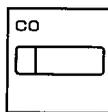

Press  
CO whose  
indicator is  
quickly flashing

### Description

If programmed for the No Line Preference-Incoming mode, the extension user must lift the handset or press the SP-PHONE button and then press the flashing CO button.

#### To answer

1. Lift the handset or press the SP-PHONE button.
2. Press the CO button whose indicator is quickly flashing.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

#### Setting

1. Dial (21).  
“Pref. In : No” will be displayed.
2. Press the MEMORY button.

#### To cancel

1. Dial (22).  
“Pref. In : Ring” will be displayed.
  2. Press the MEMORY button.
- After programming, return the MEMORY switch to the “SET” position.


### Conditions

This feature will not function with use of a standard telephone.

## Flexible CO Button

### To Change into Other CO Number


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.

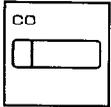


Press CO which you want to change into different CO number



Dial "0"

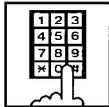

Dial CO number which is set newly (01 through 12)

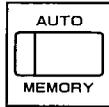


Press MEMORY


- After programming all CO buttons, return the MEMORY switch to the **"SET"** position.

### To Assign into Trunk Group Access Number


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.

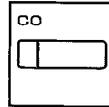


Press CO which you want to change into trunk group number

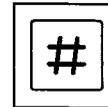

Dial "#"

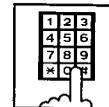

Dial trunk group number (1 through 8)

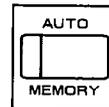

Press MEMORY

- After programming all CO buttons, return the MEMORY switch to the **"SET"** position.

### Description

Allows each CO button to change into CO number which is different from printed CO number.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.
1. Press CO button which you want to change into different CO number.  
When pressing CO 1 button, "CO-01" will be displayed.
  2. Dial (0).  
"CO- " will be displayed.
  3. Dial the CO number which is set newly (01 through 12).  
When dialing (02), "CO-02" will be displayed.
  4. Press the MEMORY button.
- After programming all CO buttons, return the MEMORY switch to the **"SET"** position.

### Description

Allows each CO button to change into the trunk group access number (81 through 88).

### Operation


- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.
1. Press the CO button which you want to change into trunk group access number.
  2. Dial (#).
  3. Dial the trunk group number (1 through 8).
  4. Press the MEMORY button.
- After programming all CO buttons, return the MEMORY switch to the **"SET"** position.

## Flexible CO Button (cont.)


### To Change into DSS Button

#### Setting


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".

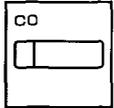


Press CO which you want to change into DSS button

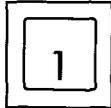

Dial "1"

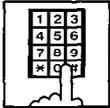

Dial extension number (100 through 199)

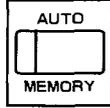


Press MEMORY

- After programming all CO buttons, return the MEMORY switch to the "SET" position.

#### Dialing (Inter Office Calling)



Lift handset or press SP-PHONE

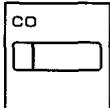

Press CO which has been changed into DSS

#### Description

Allows each CO button to change into the DSS (Direct Station Selection) button. DSS button can be used instead of dialing an extension number.

#### Operation

##### Setting


- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone to "PROGRAM".
1. Press the CO button which you want to change into DSS button. When pressing CO 1 button, "CO-01" will be displayed.
  2. Dial (1). "EXT- " will be displayed.
  3. Dial the extension number (100 through 199). When dialing (120), "EXT-120" will be displayed.
  4. Press the MEMORY button.
- After programming all CO buttons, return the MEMORY switch to the "SET" position.

##### Dialing (Inter Office Calling)


1. Lift the handset or press the SP-PHONE button.
2. Press the CO button which has been changed into DSS.

### To Change into One Touch Dialing Button


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".

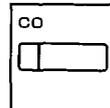


Press CO which you want to change into one touch dialing

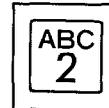


Dial "2"

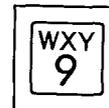

Dial "9"

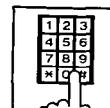

Dial phone number

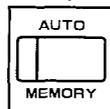

Press MEMORY

- You may dial 81 through 88 instead of 9.

- After programming all CO buttons, return the MEMORY switch to the "SET" position.

#### Description

Allows each CO button to change into the one touch dialing button. Up to 16 digits can be stored into each of the 12 CO buttons.


#### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone to "PROGRAM".
1. Press the CO button which you want to change into one touch dialing. When pressing CO 1 button, "CO-01" will be displayed.
  2. Dial (2).
  3. Dial (9).
- You may dial 81 through 88 instead of 9.
    - 9... Each extension can automatically select an idle CO line.
    - 81 through 88... Each extension can select a trunk group designated.
4. Dial the phone number.
  5. Press the MEMORY button.
- After programming all CO buttons, return the MEMORY switch to the "SET" position.
  - For dialing, refer to "One Touch Dialing" on page 4-4.


## Flexible CO Button (cont)

### To Change into Other All CO Numbers


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".

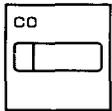

Press CO which you want to change into other all CO numbers

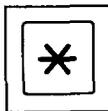

Dial \*

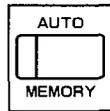


Press MEMORY


- After programming all CO buttons, return the MEMORY switch to the "SET" position.

### To Change into Message Waiting Button


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".

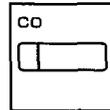

Press CO 1

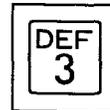

Dial "3"

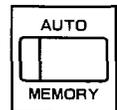

Press MEMORY

- After programming CO 1 button, return the MEMORY switch to the "SET" position.

### Description

Allows CO button to change into all CO numbers which are not assigned to CO button.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone to "PROGRAM".
1. Press the CO button which you want to change into other all CO numbers.  
When pressing CO 1 button, "CO-01" will be displayed.
  2. Dial (\*).  
"Other CO key" will be displayed.
  3. Press the MEMORY button.
- After programming all CO buttons, return the MEMORY switch to the "SET" position.

### Description

Allows only CO 1 button to change into the message waiting button except the KX-T123230, KX-T123220, KX-T123250 and KX-T30830.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone to "PROGRAM".
1. Press CO 1 button.
  2. Dial (3).
  3. Press the MEMORY button.
- After programming CO 1 button, return the MEMORY switch to the "SET" position.
  - For operation, refer to "Message Waiting" on page 4-36.


## Intercom Voice Alerting Mode

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

### Setting (Voice Alerting Mode)




Dial “42”

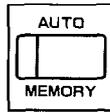


Press  
MEMORY

### To cancel (Setting Tone Alerting Mode)

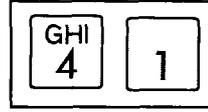

Dial “41”

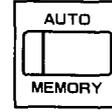

Press  
MEMORY

- After programming “Intercom Voice Alerting Mode”, return the MEMORY switch to the “SET” position.

### To answer

When an intercom call reaches



Voice  
alerting  
is heard



Lift handset  
or press  
SP-PHONE



Talk

## Description

The intercom alerting mode (tone/voice) at a receiving extension can be selected through programming.

VOICE...Voice alerting instead of Tone alerting is heard through the speaker on the receiving extension.

TONE ... Tone alerting (ringing) sound at the receiving extension.

## Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to “PROGRAM”.

### Setting (Voice Alerting Mode)

1. Dial (42).  
“Voice Call” will be displayed.
2. Press the MEMORY button.

### To cancel (Setting Tone Alerting Mode)

1. Dial (41).  
“Tone Call” will be displayed.
  2. Press the MEMORY button.
- After programming, return the MEMORY switch to the “SET” position.

### To answer

1. When an intercom call reaches, voice alerting is heard.
2. Lift the handset or press the SP-PHONE button.
3. Start talking.


## Conditions

This feature will not function with use of a standard telephone.


## Flexible DSS Button

### To Change into Other DSS Number


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone paired with the DSS console or KX-T30830 to **"PROGRAM"**.

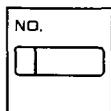


Press DSS which you want to change into different extension number

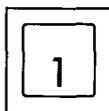

Dial "1"

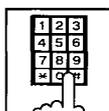

Dial extension number which is set newly (100 through 199)

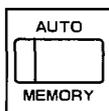

Press MEMORY

- After programming all DSS buttons, return the MEMORY switch to the **"SET"** position.

### Description

Allows each DSS button to change into extension number which is different from default extension number.

KX-T30830, KX-T123240 or KX-T61640 only is available.


### Operation

#### Setting


- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone paired with the DSS console or KX-T30830 to **"PROGRAM"**.
1. Press DSS button which you want to change into different extension number.
  2. Dial (1).
  3. Dial the extension number which is set newly (100 through 199).
  4. Press the MEMORY button.
- After programming all DSS buttons, return the MEMORY switch to the **"SET"** position.

### To Change into One Touch Dialing Button


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone paired with the DSS console or KX-T30830 to **"PROGRAM"**.

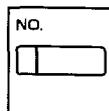


Press DSS which you want to change into one touch dialing

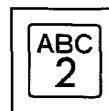


Dial "2"

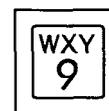

Dial "9"

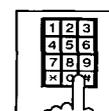

Dial phone number

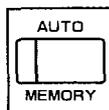

Press MEMORY

- You may dial 81 through 88 instead of 9.

- After programming all DSS buttons, return the MEMORY switch to the **"SET"** position.

### Description

Allows each DSS button to change into the one touch dialing button.

Up to 16 digits KX-T30830, KX-T123240 or KX-T61640 only is available.


### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone paired with the DSS console or KX-T30830 to **"PROGRAM"**.
1. Press the DSS button which you want to change into one touch dialing.
  2. Dial (2).
  3. Dial (9).
- You may dial 81 through 88 instead of 9.
    - 9... Each extension can automatically select an idle CO line.
    - 81 through 88... Each extension can select a trunk group designated.
4. Dial the phone number.
  5. Press the MEMORY button.
- After programming all DSS buttons, return the MEMORY switch to the **"SET"** position.
  - For dialing, refer to "One Touch Dialing" on page 4-4.


## Flexible DSS Button (cont.)

### To Change into Message Waiting Button


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T30830 to "PROGRAM".

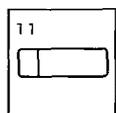

Press  
DSS 11

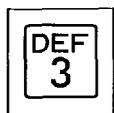

Dial "3"

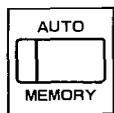

Press  
MEMORY

- After programming DSS 11 button, return the MEMORY switch to the "SET" position.

### Description

Allows only DSS 11 button of the KX-T30830 to change into the message waiting button. The KX-T30830 only is available.

### Operation


- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the KX-T30830 to "PROGRAM".
1. Press the DSS 11 button of the KX-T30830.
  2. Dial (3).
  3. Press the MEMORY button.
- After programming DSS 11 button, return the MEMORY switch to the "SET" position.
  - For operation, refer to "Message Waiting" on page 4-36.

## CO Line Ringing Selection


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".



Dial "3"

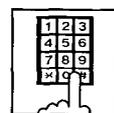

Dial  
CO numbers  
which you  
want to ring  
(01 through 12)

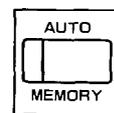

Press  
MEMORY

- After programming "CO Line Ringing Selection", return the MEMORY switch to the "SET" position.

### Description

Through programming the CO numbers, you can select whether the extension ring or not when an outside call reaches through the CO line.

Program the CO numbers which you want to ring. "Flexible Ringing Assignment" on page 3-49 should be set to "Enable".

### Operation


- Be sure the handset is in the cradle and the SP-PHONE button is off.
  - Set the MEMORY switch of the proprietary telephone to "PROGRAM".
1. Dial (3).
  2. Dial the CO numbers want to ring (01 through 12).
  3. Press the MEMORY button.
- After programming "CO Line Ringing Selection", return the MEMORY switch to the "SET" position.

### Conditions

- As all programmed CO numbers are not displayed, press the "→" (FWD/DND) or ← (CONF) button for scrolling the Display.
- When an outside call reaches through the CO line not to ring, the CO indicator will flash. If you want to answer the outside call, press the flashing CO button.

## Date and Time Setting (extension of jack number 01 only)

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".

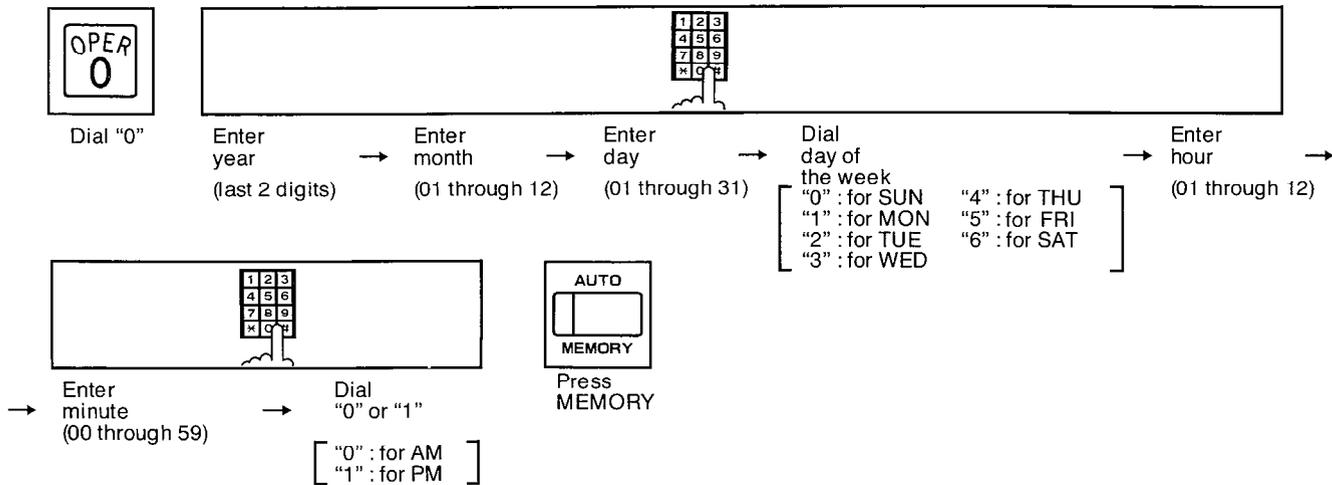

After setting "Date and Time Setting", return the MEMORY switch to the "SET" position.

### Description

When the present time is out of order, you can adjust by following procedure.

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T123230 to "PROGRAM".

1. Dial (0).
2. Enter the year (last 2 digits).
3. Enter the month with 2 digits (01 through 12).
4. Enter the day with 2 digits (01 through 31).

5. Dial the day of the week (0 through 6).

- 0 : for Sunday
- 1 : for Monday
- 2 : for Tuesday
- 3 : for Wednesday
- 4 : for Thursday
- 5 : for Friday
- 6 : for Saturday

6. Enter the hour with 2 digits (01 through 12).
7. Enter the minute (00 through 59).
8. Dial the "0" or "1".

- 0 : for AM
- 1 : for PM

9. Press the MEMORY button.

- After setting, return the MEMORY switch to the "SET" position.

## Station Number Check

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".



Dial "6"

- The LCD will show your extension number and jack number.

- After confirming, return the MEMORY switch to the "SET" position.

### Description

You can confirm your extension number and jack number by the LCD .

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".

1. Dial (6)

- The LC Display will show your extension number and jack number.
- After confirming, return the MEMORY switch to the "SET" position.

### Conditions

- This feature can be used only by proprietary telephone equipped with an LCD.


## F3-One Touch Button Mode Selection

(for KX-T30850, KX-T61650, KX-T123250)


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone (KX-T123250, KX-T61650 or KX-T30850) to "PROGRAM".



Dial "7"

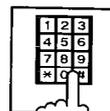

Dial "1" or "2"

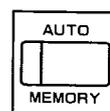

Press MEMORY

[ "1": for Programmable feature  
"2": for DND/FWD/ Account code ]

- After programming the F3 button, return the MEMORY switch to the "SET" position

### Description

3 programmable feature (F1, F2, F3) buttons are provided with the proprietary telephones, KX-T123250, KX-T61650 and KX-T30850, and only "F3" button can be changed from programmable feature button to call forwarding (see page 4-26 for operation)/do not disturb (see page 4-30)/account code (see page 4-39) button.

dial 1 mode .....

programmable feature function

dial 2 mode .....

call forwarding / do not disturb /  
account code function

### Programming


- Be sure the handset is in the cradle and the SP-PHONE button is OFF.
- Set the MEMORY switch of the proprietary telephone (KX-T123250, KX-T61650 or KX-T30850) to "PROGRAM".

1. Dial (7).
2. Dial (1) for programmable feature function or dial (2) for call forwarding / do not disturb / account code function.
3. Press the MEMORY button.


- After programming the F3 button, return the MEMORY Switch to the "SET" position.

## Call Waiting Tone Selection

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.

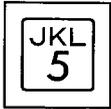


Dial "5"

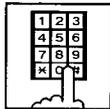

Dial "1"  
or "2"

[ "1" : for Tone 1  
"2" : for Tone 2 ]

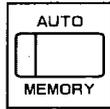


Press  
MEMORY

- After programming the "Call Waiting Tone Selection", return the MEMORY switch to the **"SET"** position.

### Description

You can change the call waiting tone from Tone 1 to Tone 2 shown below to prevent the user from missing the tone. Tone 2 feature will not function for a standard telephone.

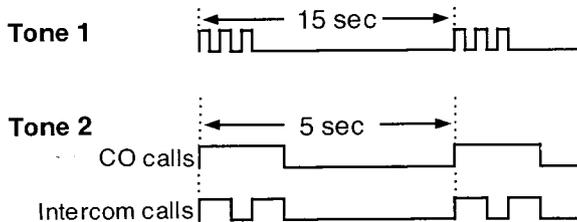


### Operation


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.
  1. Dial (5).
  2. Dial "1" or "2".
    - "1" : for Call Waiting Tone 1.
    - "2" : for Call Waiting Tone 2.
  3. Press the MEMORY button.
- After programming, return the MEMORY switch to the **"SET"** position.

## Station Program Clear


- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.

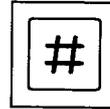

Dial "#"

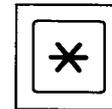

Dial "\*"

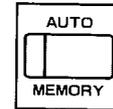

Press MEMORY

- After clearing, return the MEMORY switch to the **"SET"** position.

### Description

- Pressing (# \* MEMORY) will reset station programs on an extension to the default data.
  - Auto CO Hunting
    - Prime Line Preference-Outgoing
    - Idle Line Preference-Outgoing
  - Automatic Answering Selection
    - Prime Line Preference-Incoming
    - No Line Preference-Incoming
  - Intercom Voice Alerting Mode
  - CO Line Ringing Selection
  - Call Waiting Tone Selection
  - F3-One Touch Button Mode Selection

### Operation

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to **"PROGRAM"**.
  1. Dial (#).
  2. Dial (\*).
  3. Press the MEMORY button.
- After clearing, return the MEMORY switch to the **"SET"** position.

# OPERATION FOR A STANDARD TELEPHONE (rotary and touch tone phones)

## Making Calls

### Inter Office Calling (Intercom) (see page 4-1)


#### Description

Station to station dialing within the KX-T123210 system.

#### Operation



Lift handset

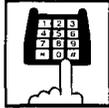

Dial extension number (100 through 199)

### Outward Dialing (see page 4-2)

#### Automatic Line Access


#### Description

Each extension can automatically select an idle CO (Central Office) line within the KX-T123210.


#### Operation




Lift handset

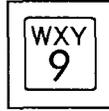

Dial "9"

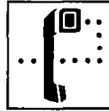

Wait for C.O. dial tone

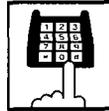

Dial phone number

#### Individual Trunk Group Access


#### Description

Each extension can automatically select an idle CO line within the same trunk group. Through programming, 12 CO lines can be divided up to 8 groups. See the page 3-46.


#### Operation




Lift handset

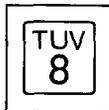


Dial "8"

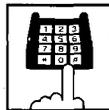

Dial trunk group number (1 through 8)

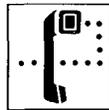

Wait for C.O. dial tone

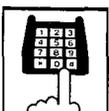

Dial phone number

### Speed Dialing (see page 4-3)


#### Description

There are 100 memory locations of system speed dialing available.


#### Operation



Lift handset

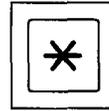

Dial "\*"

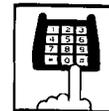

Dial speed access code (00 through 99)

- There is no need to access a CO line.
- A rotary phone will not function for speed dialing.
- Continuous use of speed dialing is impossible.

### Calling Doorphone (see page 4-6)

#### Description


Up to two doorphones (KX-T30865) can be connected to the KX-T123210.

#### Operation

##### Doorphone 1



Lift handset

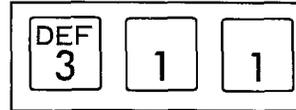


Dial "311"

##### Doorphone 2



Lift handset

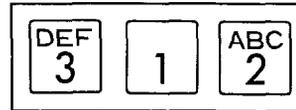

Dial "312"

### Operator Call (see page 4-6)

#### Description

You can call the operator within the KX-T123210 system.


This feature is required to be set beforehand in the KX-T123210. For programming, see page 3-9.



Lift handset



Dial "0"

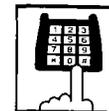

Dial "0" or "1"

"0": for Operator 1  
"1": for Operator 2

- In case one operator is programmed, you have only to dial 0.

# When a Line is Busy

## Automatic Call Back Busy

(Camp-on) (see page 4-7)


### Description

If the intercom extension or the outside line (CO line) you have dialed is busy, you will be automatically called back when the extension or the outside line becomes free using this function.


This feature is also known as camp-on.

### Operation

#### For Outside Calls

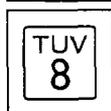

Dial "8"

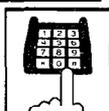


Dial trunk group number (1 through 8)



You will Hear a busy tone



Dial "6"

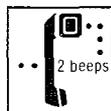


Confirmation tone




Hang up

#### For Intercom Calls

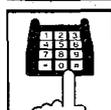

Dial extension number (100 through 199)

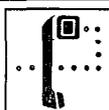

You will hear a busy tone



Dial "6"



Confirmation tone



Hang up

#### When hearing a ring back



Lift handset

- When using an intercom call, you will hear a ring back tone.
- When using an outside call, you will hear the dial tone from the CO.

- A call back busy cannot be activated on an extension which has a call on hold.

## Busy Station Signaling

(see page 4-8)


### Description

If the extension you have dialed is busy, you can inform the extension that another intercom call is reaching by three beeps.


### Operation



Dial extension number (100 through 199)

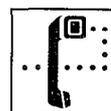

You will hear a busy tone

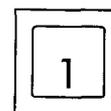

Dial "1" and wait for an answer

- To answer your signal, see "Call Waiting" on page 5-5.
- While the other party is set for "Call Waiting Tone-From Extension Deny" on page 5-15 or is using a data terminal equipment, you may not be able to use this feature. (A reorder tone is heard after dialing 1.)

## Last Number Redial

(see page 4-8)


### Description

The last phone number dialed on an outside line (CO line) can be redialed.

### Operation



Lift handset

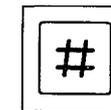

Dial "#"

- You may dial "80" instead of pressing the "#" button.

## When a Line is Busy (cont.)

### Executive Override (Barge-In) (see page 4-9)


#### Description

Allows an extension user to intrude into another extension that is in conversation with an outside or inside party. This feature is required to be set beforehand in the KX-T123210. For programming see page 3-73 .

#### Operation




Lift handset

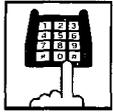

Dial extension number (100 through 199)



You will hear a busy tone

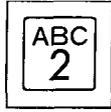

Dial "2"  
A 3-party Conference is now established

- If the other party is using data equipment or is set for "Executive Override Deny" on page 5-15, you can not intrude into the other party that is in conversation. (A reorder tone is heard after dialing 2.)

## Receiving Calls

### Answer (see page 4-10)

#### Operation



Lift handset

### Dial Call Pickup (see page 4-11)


#### Description

An extension user can answer any ringing extension within their own extension group.

#### Operation



Lift handset

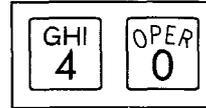

Dial "40"

### Directed Call Pickup (see page 4-11)

#### Description

An extension may answer an incoming call that is ringing at another extension regardless of the extension group.


#### Operation



Lift handset



Dial "4"

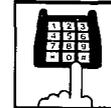

Dial ringing extension number (100 through 199)

## Receiving Calls (cont.)


### Call Park (see page 4-12)

#### Description


Extension user can place up to ten calls in the park zones.  
Allows any extension user to retrieve a parked call (intercom or outside) at any extension.

#### Operation


##### To Park a Call

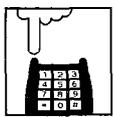


Flash hookswitch

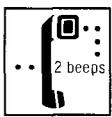


Confirmation tone

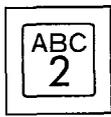

Dial "2"

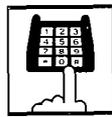

Dial parking station number (20 through 29)

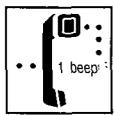

Confirmation tone



Hang up


- If a busy tone is heard after the parking station number is dialed, dial only last 1 digit of the other parking station number (0 through 9).
- Do not depress the hookswitch for more than one second, or party will be disconnected.

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the party will be disconnected.


##### To Retrieve a Parked Call at Any Other Extension



Lift handset

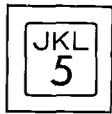

Dial "5"

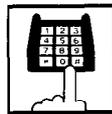

Dial parking station number (20 through 29)

### Doorphone (see page 4-13)

#### Operation



Lift handset

- This feature is required to be set beforehand in the KX-T123210. For programming, see page 3-75.

## While Having a Conversation


### Call on Hold (see page 4-14)

#### Description

If you wish to leave your phone unattended but want the caller you are in conversation with to wait, call on hold may be used. Intercom or outside calls may be placed on hold.

#### Operation

##### To Place a Call on Hold

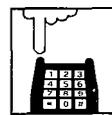

Flash hookswitch




Confirmation tone of 2 beeps will be heard

- Do not depress the hookswitch for more than one second, or the party will be disconnected.

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after flashing the hookswitch. If the number except "20" is dialed, the party will be disconnected.

##### To Cancel

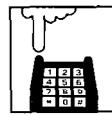


Flash hookswitch


##### To Retrieve a Call on Hold from Another Extension



Lift handset

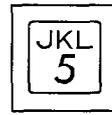

Dial "5"

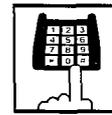

Dial holding extension number (100 through 199)

- In case held call is outside call, you may dial "53" and then held CO line number (01 through 12).

## While Having a conversation (cont.)

### Conference (see page 4-16)


#### Description

Allows for up to a three party conference, (2-outside/ 1-inside) (1-outside/ 2-inside) or (3-inside).

#### Operation




Flash hookswitch places 1st party on hold

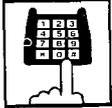

Dial 2nd party number



Consult with 2nd Party

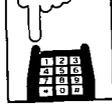

Flash hookswitch




Dial "3"

3-party conference is now established.

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after the first flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the first party will be disconnected.

#### To Place one Caller on Hold and Talk to the Other Caller

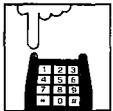

Flash hookswitch



2nd party on hold 1st party in consultation


### Call Waiting (see page 4-20)

#### Description


Call Waiting tones during a conversation indicates there is a new incoming outside call or Intercom call.

This feature has been set beforehand in the extension.

#### Operation

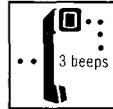

Will hear a call waiting tone

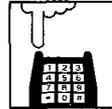

Flash hookswitch places 1st party on hold



Hang up



Lift handset



Consult with new caller while 1st party is on hold

- If you use the hold button of a standard telephone, the above-mentioned feature will not function.
- To terminate the original call and return to the 2nd call, hang up and then lift the handset. (You need not flash the hookswitch.)

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the first party will be disconnected.


# While Having a Conversation (cont.)

## Call Splitting (see page 4-21)

### Description

Allows the station user to alternate between two parties, either intercom or outside.

### Operation

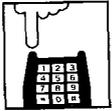


Flash hookswitch



Dial second party



Consult with 2nd party while 1st party is on hold

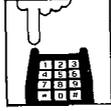

Flash hookswitch



2nd party on hold 1st party in consultation



Flash hookswitch



1st party on hold 2nd party in consultation

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after the first flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the first party will be disconnected.


## Call Transfer (see page 4-18)

### Description


Outside or intercom calls may be transferred to any extension manually. A call can not be transferred to outside line.

### Operation

#### To Transfer After the Other Extension Answers

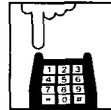

Flash hookswitch

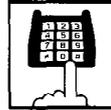

Dial extension number




Announce and wait for an answer




Hang up

#### To Transfer without Announcing the Other Extension

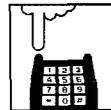

Flash hookswitch

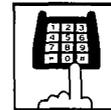

Dial extension number



Hang up

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the party will be disconnected.

### To Retrieve the Call

If the other extension did not answer the transferred call within 30 seconds after the call has been transferred, the call will return to you. In this case:


While the ring back is hearing,




Lift handset

- The time that the call returns to you when the transferred call is not answered can be changed from 30 seconds to 15 seconds. For changing, see page 3-27.


### To change the party to whom a call is transferred before hanging up

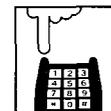

Flash hookswitch to retrieve call

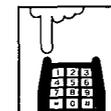

Flash hookswitch

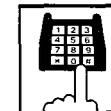

Dial extension number

# Paging

## Paging All Extensions (see page 4-23)

### Description


Allows paging to all extensions.

### Operation


#### To Access



Lift handset

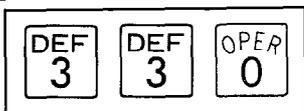

Dial "330"

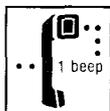

Confirmation tone of 1 beep will be heard



Page



Wait for an answer and talk

- Paging will be heard only from the built-in speaker of KX-T123230, KX-T123220, KX-T123250, KX-T61631, KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850. It will not be heard from the built-in speaker of a standard telephone.



## Paging-External (see page 4-24)

### Description


Allows access to external paging equipment.

### Operation


#### To Access




Lift handset

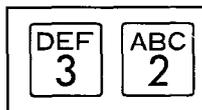

Dial "32"

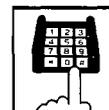

Dial external paging number

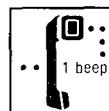

Confirmation tone



Page



Wait for an answer and talk

- External paging number  
 "0": for external paging equipments 1 and 2.  
 "1": for equipment 1.  
 "2": for equipment 2.
- Paging will be heard from external paging equipment.
- Up to two external paging equipment can be connected to the KX-T123210.



## Paging Group (see page 4-24)

### Description


Allows paging to one of eight extension groups.

### Operation

#### To Access




Lift handset

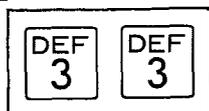

Dial "33"



Dial extension group number (1 through 8)

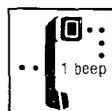

Confirmation tone



Page



Wait for an answer and talk


# Paging (cont.)

## Paging And Transfer

(see page 4-25)

### Operation

#### To Transfer a Call to the Paged Person

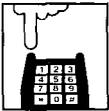

Flash hookswitch to place a call on hold



Dial "330"



Confirmation tone



Page



Wait for an answer and hang up

- You may dial 331 through 338 or 320 through 332 instead of 330.

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the party will be disconnected.

## Paging-Answer (see page 4-25)

### Description


A page from the built-in speaker or external paging equipment can be answered from any extension.

### Operation


#### To Paging from Built-in Speaker



Lift handset

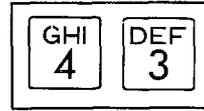

Dial "43"

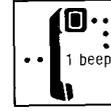

Confirmation tone of 1 beep will be heard



Talk


#### To Paging from External Equipment




Lift handset



Dial "42"

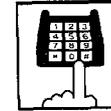

Dial external paging number

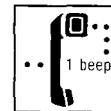

Confirmation tone



Talk

- External paging number  
 "1": for external paging 1.  
 "2": for external paging 2.

# Use of Other Features

## Do Not Disturb Override

(see page 4-31)


### Description

Allow you to dial to the extension on which is set the Do Not Disturb.

This feature is required to be set beforehand in the KX-T123210. For programming, see page 3-74.




Lift handset

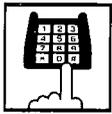

Dial extension number (100 through 199)



Do not disturb tone is heard

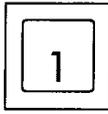

Dial "1"



Ring back tone is heard and wait for answer

## Switching to Tone Alerting

(see page 4-33)

### Description

"Voice alerting" (through built-in speaker) that is established at the called party's extension, can be switched to "Tone alerting" (ringing).


- This feature is required to be set beforehand at the called party's extension. For programming, see page 4-56.
- A rotary phone will not function.

### Operation

#### Switching to Tone Alerting



Wait until a confirmation tone is heard

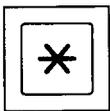

Press "\*"



Ring back tone

- You should press "\*" button within 10 seconds after the dialing.

## External Feature Access

(see page 4-38)

### Description

Allows extension user to access features of the central office or host PBX. (example: call waiting feature can be supplied by the central office.)


- The external feature (call waiting) can only be accessed when engaged on an outside call.
- The following example shows you one of the procedures.

### Operation


#### Call Waiting-Outside Line



While in conversation

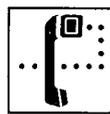

Will hear a call waiting tone

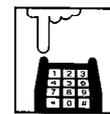


Flash hookswitch



Dial "6"



Consult with new caller while original call is placed on hold

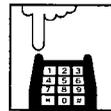

Flash hookswitch



Dial "6"



Consult with original caller while 2nd call is placed on hold

If the calling party on hold hangs up, the line is terminated.

- Flashing the hookswitch and dialing "6" means flash operation.
- If the KX-T123210 is connected to a host PBX and a flash operation is required, follow the procedure of flash operation which is required for the host PBX.

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after the first flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the original call will be disconnected.

# Use of Other Features (cont.)

## Account Code (see page 4-39)

### Description

This feature gives each message of the SMDR an account code of the called or calling party.

Station Message Detail Recording (SMDR) is a cost saving feature that records all incoming and outgoing calls through the CO line.

This feature has two modes "Forced" and "Option". In the "Forced" mode, the account code must be entered every time the extension user dials. In the "Option" mode, account code may be entered when a record of the account code is needed. When setting to the "Forced" mode, see page 3-70.


### Operation

#### Forced Mode


##### ■ Making a Call




Lift handset

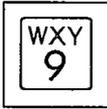

Dial "9"

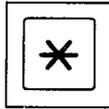

Dial "\*"

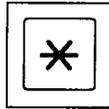

Again

Intermittent tone is heard.



Dial account code



Wait for C.O. dial tone



Dial telephone number


Account code is 4 digits.

- You may dial 81 through 88 instead of dialing 9.


##### ■ Receiving a Call

If you want to record a calling party's account code in the SMDR, follow the below-mentioned procedure.


Within 30 seconds after calling party hangs up,

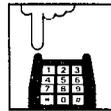


Flash hookswitch

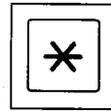

Dial "\*"

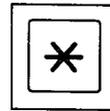

Again

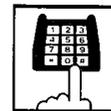

Dial account code

- Dialing the account code must be done before hanging up.


When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the party will be disconnected.

#### Option Mode


##### ■ Making or Receiving a Call

If you want to record a calling or called party's account code in the SMDR, follow the below-mentioned procedure.


Within 30 seconds after calling or called party hangs up,

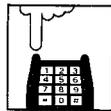


Flash hookswitch

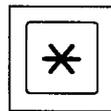

Dial "\*"

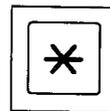

Again

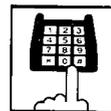

Dial account code  
Account code is 4 digits.

- Dialing the account code must be done before hanging up.

When the "Call on Hold for Standard Telephone" on page 3-77 is selected to the "Hold-2" mode, dial "20" after flashing the hookswitch in addition to the above procedure. If the number except "20" is dialed, the party will be disconnected.

- You may dial 49 instead of pressing the "\*" "\*" button.
- Account code must be 4 numerical digits except for the "#" and "\*" buttons.
- If you enter a wrong account code, press the "\*" "\*" button and enter the correct code.

# Use of Other Features (cont.)

■ You may dial "0" instead of pressing the "#" button.

## Do Not Disturb (see page 4-30)

### Description


Each extension can be individually prohibited from receiving intercom and outside calls.

### Operation

#### Setting



Lift handset

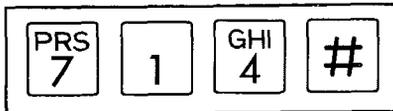

Dial "714#"




Hang up

#### To Cancel



Lift handset

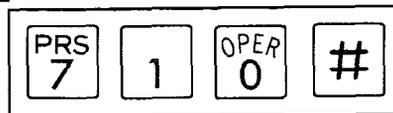

Dial "710#"



Hang up

## Dial Call Pickup Deny

(see page 4-29)

### Description


Allows you to prohibit any other extension user from answering calls directed to you.

### Operation

#### Setting



Lift handset

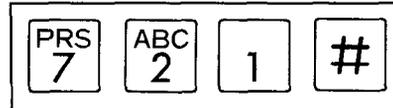

Dial "721#"




Hang up

#### To Cancel



Lift handset

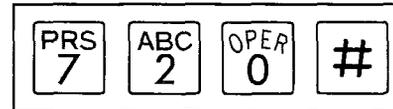

Dial "720#"



Hang up

# Use of Other Features (cont.)

## Call Forwarding-All Calls

(see page 4-26)

### Description

All intercom calls to your extension can be automatically forwarded to any extension within the system.

For outside calls to your extension, if your extension is programmed to the Direct In Line (DIL) mode, the outside calls can be automatically forwarded to any extension within the system.


For programming to the DIL mode, see page 3-54.

### Operation


#### Setting




Lift handset

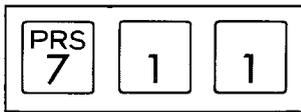

Dial "711"

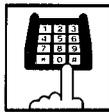

Dial extension number (100 through 199)

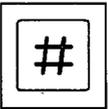

Dial "#"




Hang up

#### To Cancel



Lift handset

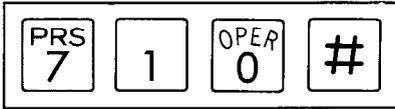

Dial "710#"



Hang up

## Call Forwarding-Busy/No Answer

(see page 4-26)

### Description

If your extension is busy or do not answer a call within 3 rings, all intercom calls to your extension can be automatically forwarded to any extension within the system.

For outside calls to your extension, if your extension is programmed to the Direct In Line (DIL) mode, the outside calls can be automatically forwarded to any extension within the system.

For programming to the DIL mode, see page 3-54.


The 3 rings may be changed to 1 ring, 2 rings or 4 rings by programming (see page 3-28).

### Operation

#### Setting




Lift handset

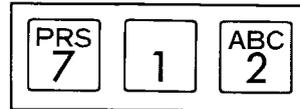

Dial "712"



Dial extension number

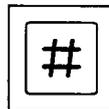

Dial "#"




Hang up

#### To Cancel



Lift handset

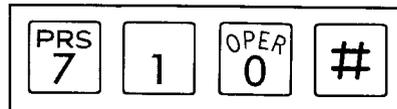

Dial "710#"



Hang up

## Use of Other Features (cont.)

### Call Forwarding-To Outside Line (see page 4-28)

#### Description

Intercom calls to your extension can be automatically forwarded to any outside line. For outside calls to your extension, if your extension is programmed to the Direct In Line (DIL) mode, the outside calls can be automatically forwarded to any outside line. For programming to the DIL mode, see page 3-54.


This feature is required to be set beforehand in the KX-T123210. For programming, see page 3-72.

#### Operation


##### Setting




Lift handset

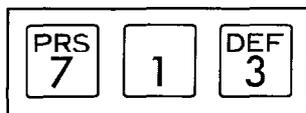


Dial "713"

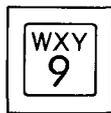

Dial "9"

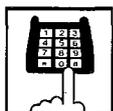

Dial phone number

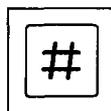

Dial "#"




Hang up

- You may dial 81 through 88 instead of 9:  
9: Each extension can automatically select an idle CO line.  
81 through 88: Each extension can select a trunk group designated.
- You can not dial "0" instead of pressing the "#" button.

##### To Cancel



Lift handset

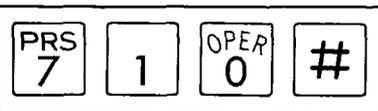

Dial "710#"



Hang up

If outside call is forwarded to any outside line, the KX-T123210 will disconnect the call from the line after 10 minutes. For changing the time, see "CO to CO Duration Time Limit" on page 3-30.

3 beeps tone will be heard every 5 seconds for 15 seconds before the call is disconnected from the line.

### Absent Message Capability (see page 4-34)

#### Description

Absent message (Message 1 through 6) which are programmed can be informed to calling party.

Programming can be done at any telephone (either proprietary telephones or standard telephones).

When a caller using the proprietary telephone with LCD dials the extension in which the message is programmed, it will be displayed on the LCD.


#### Operation

##### Setting


##### ■ Message 1. "Will Return Soon"



Lift handset

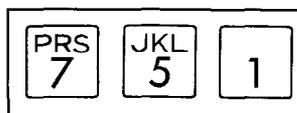

Dial "751"

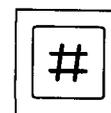

Dial "#"




Hang up


##### ■ Message 2. "Gone Home"



Lift handset

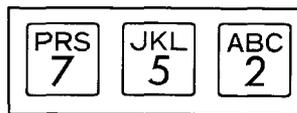

Dial "752"

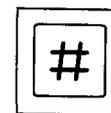

Dial "#"



Hang up

# Use of Other Features (cont.)

## Absent Message Capability (cont.)

☐ Message 3. "At Ext. 123"

↑  
extension number




Lift handset

PRS 7	JKL 5	DEF 3
----------	----------	----------

Dial "753"



Dial extension number

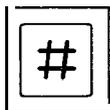

Dial "#"



Hang up

☐ Message 5. "Out Until 10/23"

┌ day  
└ month



Lift handset

PRS 7	JKL 5	JKL 5
----------	----------	----------


Dial "755"



Enter month  
(01 through 12)



Enter day  
(01 through 31)

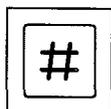

Dial "#"



Hang up

■ Message 4. "Back at 10:23 AM"


┌ AM/ PM  
└ minute  
hour




Lift handset

PRS 7	JKL 5	GHI 4
----------	----------	----------


Dial "754"

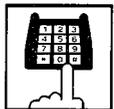


Enter hour  
(01 through 12)

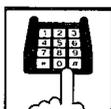

Enter minute  
(00 through 59)

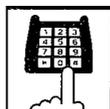

Dial "0" or "1"

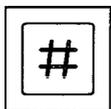

Dial "#"



Hang up

["0": for AM  
"1": for PM]


■ Message 6. "In a Meeting"



Lift handset

PRS 7	JKL 5	MNO 6
----------	----------	----------

Dial "756"

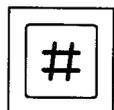

Dial "#"



Hang up


To Cancel the message



Lift handset

PRS 7	JKL 5	OPER 0
----------	----------	-----------

Dial "7.50"

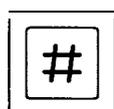

Dial "#"



Hang up

## Use of Other Features (cont.)

### Call Waiting Tone-From CO/ Extension Deny (see page 4-42)



#### Description

During a conversation, a call waiting tone will be heard when a third party on an outside line or intercom calls you. Call waiting tone can be removed at customer's request.



Default is "Allow".

#### Operation



##### To Deny CO Call Waiting Tone

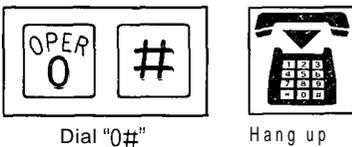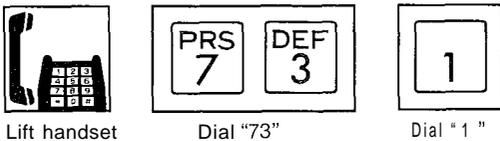



##### To Allow CO Call Waiting Tone

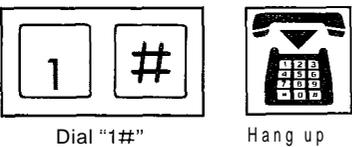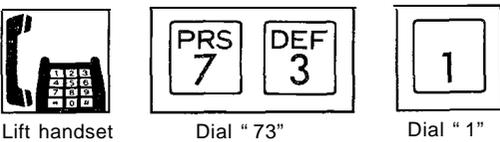

##### To Deny Extension Call Waiting Tone

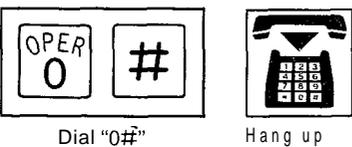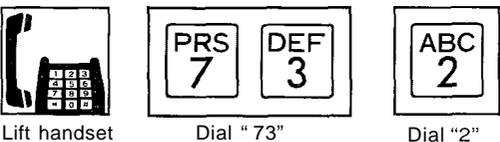

##### To Allow Extension Call Waiting Tone

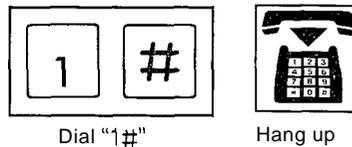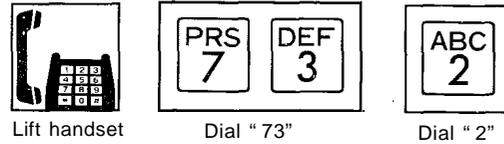

### Executive Override Deny (see page 4-32)

#### Description


Allows you to prohibit another extension user from intruding into your conversation with an outside or inside party.

For programming of the intrusive extension, see "Executive Override" on page 3-73.



Default is "Allow".

#### Operation

##### To Deny Executive Override

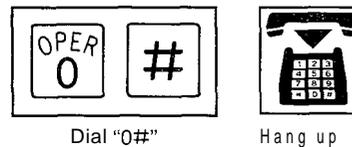

##### To Allow Executive Override

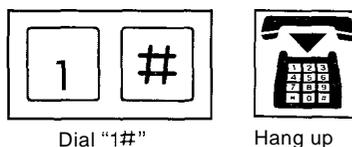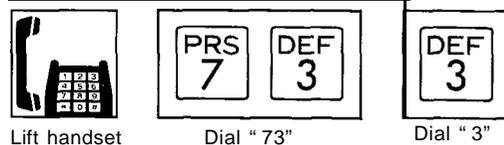

# Use of Other Features (cont.)

## Data Line Security

(see page 4-41)

### Description

This feature provides security when transmitting data through an extension of the KX-T123210.


Executive override, Call waiting tone and Hold time reminder tone from the KX-T123210 are prohibited in this mode.

### Operation


#### Setting




Lift handset

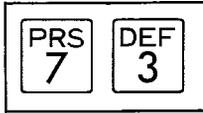

Dial "73"

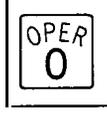

Dial "0"

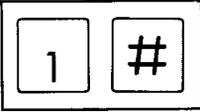

Dial "1#"



Hang up

#### To Cancel




Lift handset



Dial "73"



Dial "0"

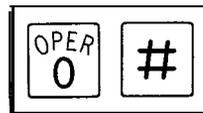

Dial "0#"



Hang up

## Station Feature Clear

(see page 4-45)

### Description


Dialing (79#) will clear the following station Features on an extension to default data.

- Call Forwarding
- Data Line Security
- Dial Call Pickup Deny
- Do not Disturb
- Call Waiting Tone From CO / Extension Deny
- Pick up Dial
- Absent Message Capability
- Executive Override Deny

### Operation




Lift handset

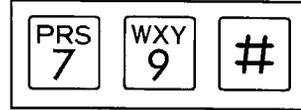

Dial "79#"



Hang up

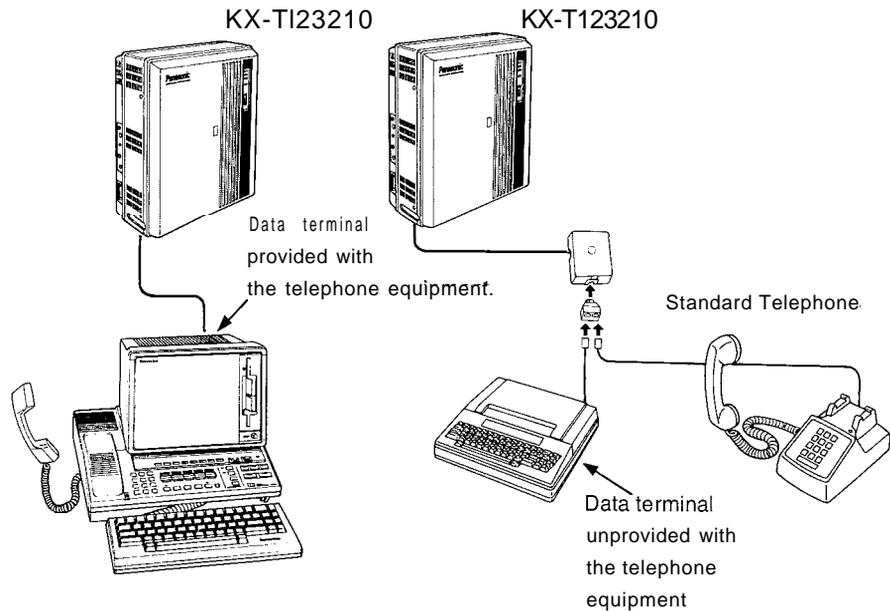

- This mode cannot prevent external call waiting tone from coming into KX-T123210 system. We recommend that this mode is established on a line which has no special telephone company services.

## Use of Other Features (cont)

### Pickup Dial

#### Description

Picking up the handset automatically dials a programmed phone number.

#### Operation


##### To Program




Lift handset



Dial "742"

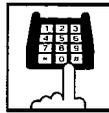

Dial extension number

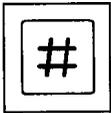

Dial "#"



Hang up


- You may dial 9 or 81 through 88 and phone number instead of extension number.

##### To Enable or Disable

##### To enable pickup dial



Lift handset

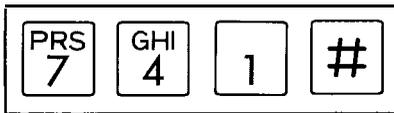


Dial "741#"

##### To disable pickup dial



Lift handset

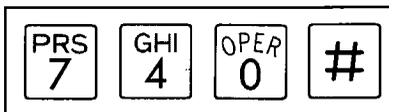

Dial "740#"

##### To Dial



Pickup handset for 3-seconds

If the "Pickup Dial" feature did not work, hang up for 2 seconds, and lift the handset again.

- The 3 seconds may be changed to 1 second, 2 seconds or 4 seconds by programming. (See page 3-29)
- A rotary phone will not function for Pickup Dial.
- Dialing (speed dialing and manual dialing) is possible within 3 (1, 2 or 4) seconds. When you program for an outside call, enter the line access number, @] [\*], account code), and then the desired number.
- The pickup dial will not be activated by picking up the handset during a hold or when receiving a call.
- You can not dial "0" instead of pressing the "#" button.
- Up to 32 digits can be stored.
- The "\*" button is used as the PAUSE.

# TROUBLESHOOTING

## During Installation

PROBLEM	PROBABLE CAUSE	POSSIBLE SOLUTION
Extension does not operate.	<p>Bad printed circuit board (LC-Card)</p> <p>Bad connection between the system and extension</p> <p>A telephone with an A-AI relay is connected.</p> <p>Bad extension</p>	<p>Exchange printed circuit board for another printed circuit board.</p> <p>Take that extension and plug it into the same extension port using a short telephone cord. If telephone does not work, connection between the system and the extension must be repaired.</p> <p>Use a 2 wires cord. Set the A-AI relay switch of the telephone to "OUT" or "OFF" position.</p> <p>Take that extension and plug it into another extension port that is working. If the telephone does not work, replace the phone.</p>
Improper reset operation		Press the Reset Button.
Noise in external paging	Induced noise on the wire between the System and the Amplifier.	Use a shielded cable as the connection wire between the System and Amplifier. A short shielded cable is recommended.
Volume distortion from external music source	Excessive input level from external music source	Decrease the Output level of the external music source by using the Volume Control on the music source.
Speed dialing or One Touch Dialing dose not function.	Bad programming	Enter the line access code (9) or trunk group access code (81 through 88) into programming.
A dial tone (short tone continuously) was heard and telephone line hung up at once when accessing an outsi' de during the speakerphone mode.	The host PBX may have caused the line to hang up when the KX-T123210 was connected to it.	Use the handset instead of the speakerphone.

## During Connection

### 1. Connection between the Central Office and the KX-T123210

PROBLEM	CAUSE	SOLUTION
Cannot make or receive calls on the CO lines.	CO lines are connected to the D1/D2. <div style="text-align: center; margin-top: 10px;"> </div>	Reconnect the CO lines to the T/R of the telephone jack using 2-conductor wiring.

### 2. Connection between the KX-T123210 and the extensions. ( KX-T123230, KX-1123220, KX-T61630, KX-T61631, KX-T61620, KX-T30820 and KX-130830)

PROBLEM	CAUSE	SOLUTION
Cannot make calls when the SP- Phone button on the KX-T123230 (or KX-T123220, KX-T61620, KX-T61630, KX-T61631, KX-T30820, KX-T30830) is pressed. The SP-Phone indicator does not light.	The T/R is connected to the D1/D2. <div style="text-align: center; margin-top: 10px;"> </div>	Use the correct cord (inner 2 wires are for T/R and the outer 2 wires are for D1/ D2).

### 3. Connection between the KX-T123210 and a standard telephone (with no polarity)

-PROBLEM	CAUSE	SOLUTION
When the handset is lifted nothing is heard.	The T/R is connected to the D1/D2. <div style="text-align: center; margin-top: 10px;"> </div>	Use the correct cord (inner 2 wires are for T/R). If a telephone equipped with an A-AI relay is connected to the KX-T123210, set the A-AI relay switch of the telephone to OFF.

### 4. Connection between the KX-T123210 and a standard telephone that is polarity sensitive

PROBLEM	CAUSE	SOLUTION
Dial tone cannot be heard when the handset is lifted.	The "T" is connected to the "R". <div style="text-align: center; margin-top: 10px;"> </div>	Reverse the connections of the T/R.

## During Operation

PROBLEM	PROBABLE CAUSE	POSSIBLE SOLUTION
Extension does not operate.	The Power failure switch of the KX-TI23230, KX-T61631, KX-T61630 or KX-T30830 is set to ON.	Set the Power failure switch to OFF.
When using the speakerphone mode, nothing is heard.	The HANDSET/HEADSET selector of the KX-TI23230, KX-T61631, KX-T61630 or KX-T30830 is set to the "HEADSET" position.	When the headset is not used, set the HANDSET/HEADSET selector to the "HANDSET" position.
The unit does not ring.	<ul style="list-style-type: none"> <li>● Ringer Volume Selector is set to "OFF" .</li> <li>● The CO numbers are not programmed.</li> </ul>	<ul style="list-style-type: none"> <li>● Set to "HIGH" or "LOW" .</li> <li>● See "CO Line Ringing Selection" on page 4-58.</li> </ul>
During a power interruption, extensions connected to jack number 1, 2, 9, 10, 17 and 18 do not operate.	<ul style="list-style-type: none"> <li>● The Power failure switch of the KX-TI23230, KX-T61631, KX-T61630 or KX-T30830 is set to OFF.</li> <li>● The dialing mode (tone or pulse) is improper.</li> <li>● KX-T123220, KX-T123250, KX-T61620, KX-T61650, KX-T30820 or KX-T30850 is connected.</li> </ul>	<ul style="list-style-type: none"> <li>● Set the Power failure switch to ON.</li> <li>● Set the Tone/Pulse switch to the other position.</li> <li>● Disconnect KX-TI23220, KX-TI23250, KX-T61620, KX-T61650, KX-T30820 or KX-T30850 and connect the KX-TI23230, KX-T61631, KX-T61630, KX-T30830 or a standard telephone.</li> </ul>

## Reset Button

If the system is not operating properly, use the Reset Button.

- Before using the Reset Button, try the system feature again which does not work several times to confirm there definitely is a problem.
- Pressing the Reset button will cause the followings.
  1. Camp-on to be cleared.
  2. Last number redial to be cleared.
  3. Saved number redial to be cleared.
  4. Calls on hold are terminated.
  5. Calls on exclusive hold are terminated.
  6. Calls in progress are terminated.
  7. Call park to be cleared.
  8. Message Waiting to be cleared.

Data that are stored in memory other than above mentioned will not be cleared by use of the Reset Button.

### Note

If the system does not operate properly, push the Reset Button.


If there still is no difference, switch the power off and on again after 5 minutes. If the system still does not work, switch the power off.

The following extensions will be directly connected to each of the central office lines (C.O.).

Extension connected to jack number01 . . . CO 1  
 Extension connected to jack number02 . . . CO 2  
 Extension connected to jack number09 . . . . . CO 5  
 Extension connected to jack number10 . . . . . CO 6  
 Extension connected to jack number17 . . CO 9  
 Extension connected to jack number18 . . . . . CO1 0

If the automobile type battery is connected to the system, disconnect it.

## DTMF Receiver Check

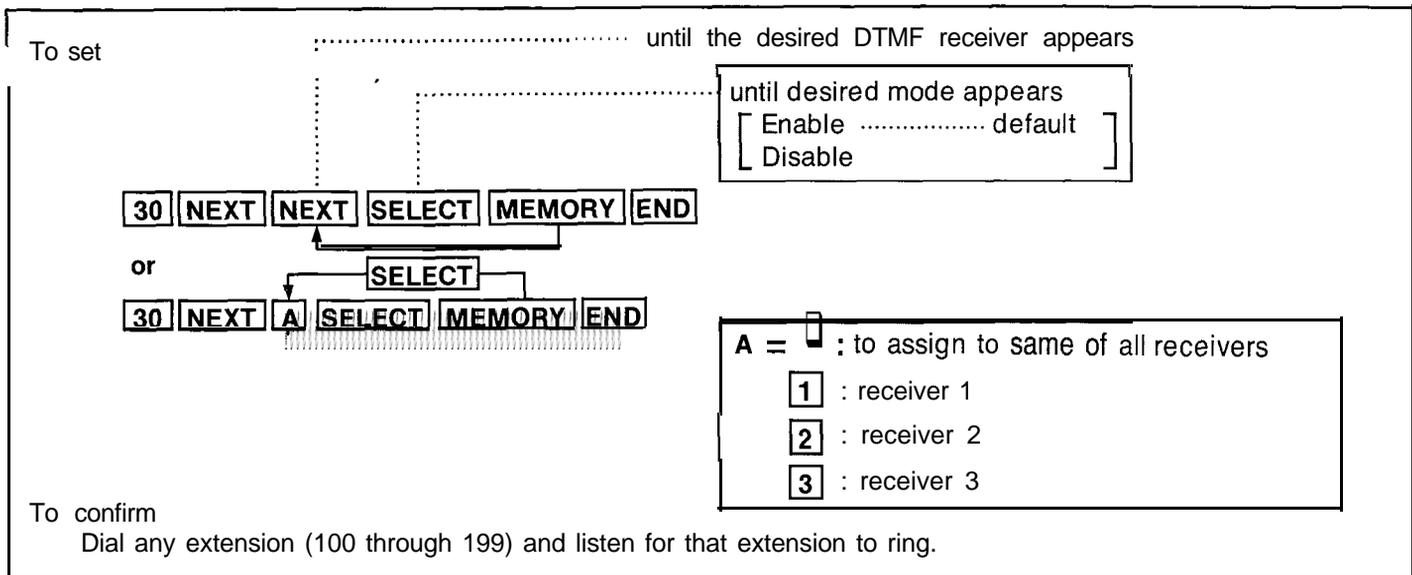

### Description

DTMF (Dual Tone Multi Frequency) Receiver enables tone telephones to dial within the system. To check the DTMF Receivers, activate the DTMF Receivers one at a time and confirm if the receiver can receive tone signals.

### Operation at Extension Connected to Jack Number 1.

#### To Remove DTMF Receive 2 and 3:

1. Set-the System Program Switch on the KX-I123210 to the "PITS" position.
2. Dial (30) to enter the DTMF mode.  
"DTM F Receiver" will be displayed.
3. Press the NEXT button.  
"DTMF-R NO?→" will be displayed.
4. Press the NEXT button, twice, or dial (2).  
"DTMF-R2 : Enable" will be displayed.
5. Press the SELECT button to change to "Disable".  
"DTMF-R2 : Disable" will be displayed.
6. Press the MEMORY button.
7. Press the NEXT button, or press the SELECT button and then dial (3).  
"DTMF-R3 : Enable" will be displayed.
8. Press the SELECT button to change to "Disable".
9. Press the MEMORY button.

10. Press the END button to return to the initial program mode.

11. Set the System Program Switch to the "SET" position.

#### Confirmation of DTMF Receiver 1:

1. Set the DIALING MODE (located on the rear of KX-T123230) switch to the TONE position.
2. Set the POWER FAILURE (located on the rear of KX-T123230) switch to the ON position.
3. Dial the extension number (100 through 199).
4. If DTM F Receiver is bad, do the following procedure for removing the DTMF Receiver after the next step on this section.
5. Set the POWER FAILURE Switch to the OFF position.
  - To check DTMF Receiver 2, remove DTMF Receiver 1 and confirm that DTMF Receiver 2 is good by the procedures of "To Remove DTMF Receiver 1 and 3" and "Confirmation of DTMF Receiver 2".
  - To check DTMF Receiver 3, remove DTMF Receiver 1 and confirm that DTMF Receiver 3 is good by the procedures of "To Remove DTMF Receiver 1 and 2" and "Confirmation of DTMF Receiver 3".


# Table of System Features

The following system features can be programmed into memory.

Dial Plan Code	System Features	Dial Plan Code	System Features
Extension no. (100 through 199)	Individual Inter Office Calling	PRS 7 1 GHI 4 #	Do Not Disturb
1	Busy Station Signaling	PRS 7 ABC 2 OPER 0 #	Cancelling Dial Call Pickup Deny
DEF 3 1 Doorphone number (1 or 2)	Calling Doorphone 1 or 2	7 2 1 #	Dial Call Pickup Deny
DEF 3 ABC 2 OPER 0	Paging-External Equipments 1 and 2	PRS 7 DEF 3 OPER 0 1 #	Data line Security
DEF 3 ABC 2 1	Paging-External Equipment 1	PRS 7 DEF 3 OPER 0 OPER 0 #	Cancelling Data line Security
DEF 3 ABC 2 ABC 2	Paging-External Equipment 2	PRS 7 DEF 3 DEF 3 OPER 0 #	Executive Override Deny
DEF 3 DEF 3 Group no. (1 through 8)	Paging Group	PRS 7 DEF 3 DEF 3 1 #	Cancelling Executive Override Deny
DEF 3 DEF 3 OPER 0	Paging All Extensions	PRS 7 JKL 5 OPER 0 #	Cancelling Absent Message
GHI 4 ABC 2 External paging no. (1 or 2)	Paging Answer-External Equipment 1 or 2	PRS 7 JKL 5 1 #	Message "Will Return Soon"
GHI 4 DEF 3	Paging Answer-Group-All Extensions	PRS 7 JKL 5 ABC 2 #	Message "Gone Home"
GHI 4 OPER 0	Dial Call Pickup	PRS 7 JKL 5 DEF 3	Message "At Ext. 101" └ extension no.
JKL 5 Parking Station no. (20 through 29)	Call Park Retrieve	Extension no. #	
MNO 6	Camp-on	PRS 7 JKL 5 GHI 4 Hour (01 through 12)	Message "Back at 10:00 AM."
PRS 7 OPER 0 #	Cancelling Message Waiting	Minute (00 through 59) 0: for AM or 1: for PM #	
PRS 7 1 OPER 0 #	Cancelling Call Forwarding or Do Not Disturb	PRS 7 JKL 5 JKL 5 Month (01 through 12)	Message "Out Until 10/23"
PRS 7 1 1 Extension no. (100 through 199) #	Call Forwarding-All Calls	Day (01 through 31) #	
PRS 7 1 ABC 2 Extension no. (100 through 199) #	Call Forwarding-Busy or No Answer	PRS 7 JKL 5 MNO 6 #	Message "In a Meeting"
PRS 7 1 DEF 3 WXY 9 Phone no. #	Call Forwarding-To Outside Line	PRS 7 TUV 8 1 #	Flexible Night Service-Day Mode
		PRS 7 TUV 8 ABC 2 #	Flexible Night Service-Night Mode
		PRS 7 WXY 9 #	Station Program Clear


## LIST OF TONES

---

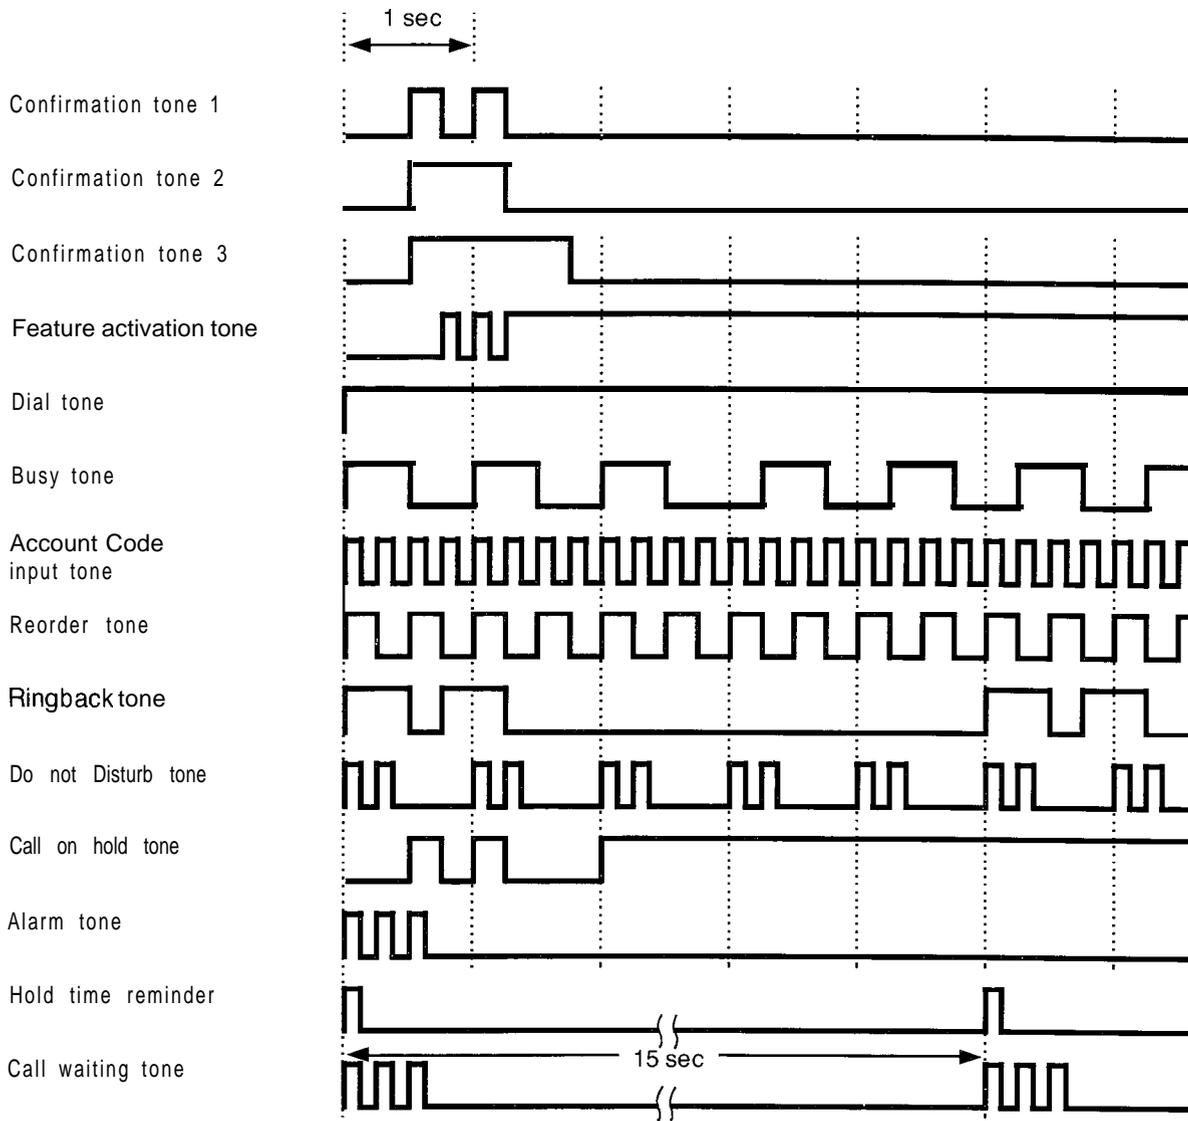

## LIST OF RING TONES

---

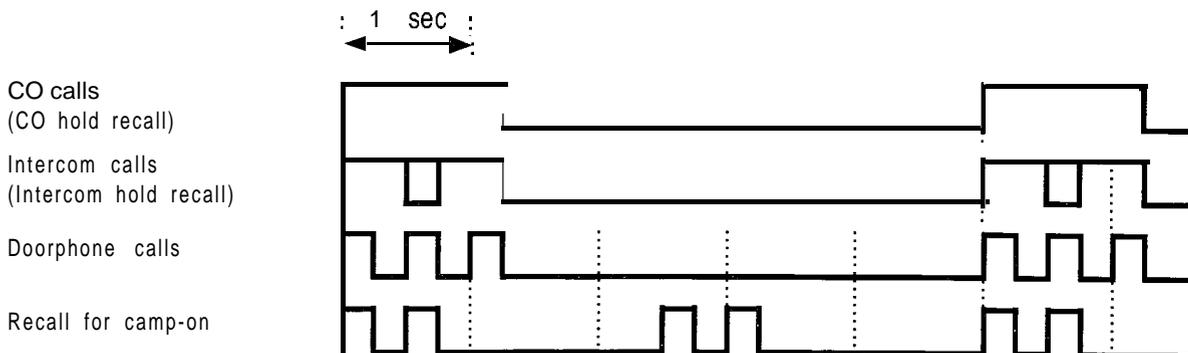

# SPECIFICATION

---

## General Description

1. Capacity.....	Outsides(CO) Stations	Max 12 Max 32
2. Control Method.....	Stored Program CPU: 8 bits CPU Control ROM: 192 KB, Control RAM : 64KB	
3. Switching.....	Space Division CMOS Crosspoint Switch	
4. Power Supplies.....	Primary Secondary	AC 120V 60Hz Station Supply Volt : 26V Circuit Volt : +5V, +12V, -14V, -16V, ±7V
	Power Failure	<ul style="list-style-type: none"> <li>● Max 6 outsides assigned to stations . . . . .power failure transfer</li> <li>● System operation for several hours by recommended battery (car type batteries - consisting of two 12 VDC, 16 amp / hour maximum rating).</li> </ul>
5. Dialing.....	Outward  Internal  Mode Conversion	Dial Pulse 10PPS, 20PPS Tone Dial Dial Pulse 10PPS, 20PPS Tone Dial DP-DTMF, DTMF-DP
6. Intercom paths.....	5	
7. Outside (CO)-Outside (CO) paths.....	2	
8. Connector.....	Outsid(CO) Station Paging Output External Music Input	Modular Jack (RJ-11) Amphenol Connector Pin Jack (RCA JACK) two-conductors Jack (MINIJACK 9/64 inch diameter)
9. EXT Connection .....	Cable	1 pair wire (Standard Telephone) 2 pair wire (KX-T123230/ KX-T123220/ KX-T123250/ KX-T61630/ KX-T61620/ KX-T61631/ KX-T61650/ KX-T30830/ KX-T30820/ KX-T30850)
10. SMDR.....	Interface	RS-232C
[ Station Message ]	Output Equipment	Printer, Data Terminal
[ Detail Recording ]	Detail Recording	Data, Time, Ext. Number, CO Number, Calling Number, Calling Time, Account Code

## Characteristics

1. Station Loop Limit.....	KX-T123230/ KX-T123220/ KX-T123250/ KX-T61630/ KX-T61620/ KX-T61650/ KX-T61631/ KX-T30830/ KX-T30820/ KX-T30850	40 ohms Standard Telephone 600 ohms including set Door phone 20 ohms
2. Minimum Leak Resistance.....	1 5,000 ohms	
3. Maximum Number of Station Instruments per Line.....	1 (KX-T123230, KX-T123220, KX-T123250, KX-T61630, KX-T61631, KX-T61620, KX-T61650, KX-T30830, KX-T30820, KX-T30850 or Standard telephone)	
4. Ring Voltage.....	70 Vrms at 20 Hz depends on Ringing Load	
5. Primary Power.....	120Va60 Hz, 1.4 A maximum	
6. Central Office Loop Limit.....	1600 ohms maximum	
7. Environmental Requirements.....	0-40 C, 10%-90%	
8. Hookswitch Flash Timing Range.....	204-1000 msec	

# TELEPHONE COMPANY and F.C.C. REQUIREMENTS AND RESPONSIBILITIES

---

In compliance with the requirements of Part 68 of the F.C.C. Rules and Regulations for connection of terminal system (this device is classified as terminal system ) to the telephone network and for your convenience, the following information is presented :

## 1. Notification to the Telephone Company

Customers, before connecting terminal equipment to the telephone network, shall upon request of the Telephone Company, inform the Telephone Company of the particular line(s) to which such connection is made, the F.C.C. registration number and (see label on side of unit. ) ringer equivalence number of the registered terminal equipment. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0 ). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

## 2. Direct connection to A Party-line or Coin-operated Telephone Line is Prohibited

## 3. Incidence of Harm to The Telephone lines

Should Terminal Equipment cause harm to the Telephone Network, the Telephone Company shall, where practical, notify the customer that temporary discontinuance of service may be required. However, where prior notice is not practical, the Telephone Company may temporarily discontinue service forthwith, if such action is reasonable in the circumstances. In case of such unnotified temporary discontinuance of service, the Telephone Company shall:

- (a) Promptly notify the customer of such temporary discontinuance of service.
- (b) Afford the customer the opportunity to correct the situation which gave rise to the temporary discontinuance.
- (c) Inform the customer of the right to bring a complaint to the Commission pursuant to the procedures set out in Subpart E of Part 68 of FCC Telephone Equipment Rules.

## 4. Compatibility of The Telephone Network and Terminal Equipment

### (a) Availability of telephone interface information.

Technical information concerning interface parameters and specifications not specified in FCC Rules, including the number of Ringers which may be connected to a particular telephone line, which is needed to permit Terminal Equipment to operate in a manner compatible with Telephone Company communications facilities, shall be provided by the Telephone Company upon customer's request.

### (b) Changes in Telephone Company Communications Facilities, Equipment, Operations and Procedures.

The Telephone Company may make changes in its communications facilities, equipment, operations or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68 of the FCC Rules and Regulations. If such changes can be reasonably expected to render any customer Terminal Equipment incompatible with Telephone Company Communications Facilities, or require modification or alteration of such Terminal Equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

## OTHERS

---

- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps, motors and television. These noise sources can interfere with the performance of the EASA-PHONE.
- This unit should be kept free of dust, moisture, high temperature and vibration, and should not be exposed to direct sunlight.
- Never attempt to insert wires, pins, etc . into the vents or other holes of this unit
- If there is trouble, disconnect the unit from the telephone line. Plug the telephone directly into the telephone line. If the telephone operates properly, do not reconnect the unit to the line until the trouble has been repaired by an authorized Panasonic Factory Service Center. If the telephone does not operate properly, chances are that the trouble is in the telephone system, and not in the unit.
- Do not use benzine, thinner, or similar solvents. Do not use abrasive powder to clean the cabinet. Wipe it with a soft cloth.

“WARNING -This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.”

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

# LIMITED WARRANTY

---

Panasonic Company, PHI or PSC will repair this product with new or rebuilt parts, free of charge, in the U.S.A. or Puerto Rico for one ( 1 ) year from the date of original purchase in the event of a defect in materials or workmanship.

**Batteries** ( if included ) — New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days from the date of original purchase. Non-rechargeable batteries are not warranted.

Carry-in or mail-in service in the continental U.S.A. can be obtained during the warranty period from a Matsushita Services Company (MSC ) Factory Servicenter listed in the Servicenter Directory. Or call 1-800-447-4700, toll free, to locate an authorized MSC Servicenter. Carry-in or mail-in service in Puerto Rico or Hawaii can be obtained during the warranty period by calling the telephone numbers listed in the Servicenter Directory (see page 6-11 ) .

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty performance is rendered.

This warranty only covers failures due to defects in materials or workmanship which occur during normal use. It does not cover damage which occurs in shipment or failures which are caused by products not supplied by Panasonic Company, PHI or PSC or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, modification, or service by anyone other than a MSC Factory Servicenter or authorized MSC Servicenter or damage that is attributable to acts of God.

## LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

PANASONIC COMPANY, PHI AND PSC SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Division at the company address indicated on the back cover.

# SERVICENTER LIST

To locate an Authorized Servicenter in Your Area within the Continental U.S.A.

PARTS

**DIAL TOLL FREE : 1-800-447-4700'**

**24 Hours a Day, 7 Days a Week**

INFO. - 922-0028

Requests for assistance in obtaining repairs or technical information...contact any one of the following Service Administration offices:

**EASTERN**

2250 Cabot Boulevard  
West Lang home, PA1 9047  
215-741-0676

**MIDWEST**

425 East Algonquin Road  
Arlington Heights, IL 60005  
312-981-4842

**WESTERN**

6550 Katella Avenue  
Cypress, CA90630  
714-895-7438

**SOUTHERN**

1854 Shackelford Court  
Norcross, GA30093  
404-925-6860

1-714-373-7438  
1-714-373-7440

Correspondence requesting product information should be sent to :

Panasonic Consumer Affairs, Matsushita Services Company, Division of Matsushita Electric Corporation of America, 50 Meadowland Parkway, Secaucus, NJ 07094

Service in Puerto Rico

**MATSUSHITA ELECTRIC OF  
PUERTO RICO, INC.**

Panasonic Sales Company

Factory Servicenter

Calle Rosarito, Edif D

Ceramica Industrial Park

Carolina, Puerto Rico 00630

809-750-5135.809-750-5235

Service in Hawaii

**PANASONIC HAWAII, INC.**

91-238 Kauhi Street, Ewa Beach

P.O. Box 774

Honolulu, Hawaii 96808-0774

808-682-1521

Service in the Continental

U.S.A.... Factory Servicenters

1575 NORTHSIDE DRIVE SUITE 325

ATLANTA, GA 30318

(404) 351-8978

**MATSUSHITASERVICESCAMPANY**

Division of Matsushita Electric Corporation of  
America 50 Meadowland Parkway, Secaucus, New  
Jersey 07094

# Phone Number Directory

## ► TELEPHONE NUMBER ◀

CO	TEL NO. ,	CO	TEL NO.	c o	TEL NO.	c o	TEL NO.
1		4		7		10	
2		5		8		11	
3		6		9		12	

## ► EXTENSION NUMBER ◀

JACK NO.	EXTENSION NUMBER	NAME	JACK NO.	EXTENSION NUMBER	NAME
1			17		
2			18		
3			19		
4			20		
5			21		
6			22		
7			23		
8			24		
9			25		
10			26		
11			27		
12			28		
13			29		
14			30		
15			31		
16			32		

## ► SPEED DIALING ◀

CODE	NAME	TEL NO.	CODE	NAME	TEL NO.
00			12		
01			13		
02			14		
03			15		
04			16		
05			17		
06			18		
07			19		
08			20		
09			21		
10			22		
11			23		

► SPEED DIALING ◀

CODE	NAME	TEL NO.	CODE	NAME	TEL NO.
24			62		
25			63		
26			64		
27			65		
28			66		
29			67		
30			68		
31			69		
32			70		
33			71		
34			72		
35			73		
36			74		
37			75		
38			76		
39			77		
40			78		
41			79		
42			80		
43			81		
44			82		
45			83		
46			84		
47			85		
48			86		
49			87		
50			88		
51			89		
52			90		
53			91		
54			92		
55			93		
56			94		
57			95		
58			96		
59			97		
60			98		
61			99		

# PROGRAMMING TABLE

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																						
Date and Time Setting	<b>00</b>	<p style="text-align: center;"> <b>NEXT</b> <b>AB</b> <b>⇒</b> <b>SELECT</b> <b>⇒</b> <b>CD</b> <b>⇒</b> <b>SELECT</b> <b>⇒</b> <b>EF</b> <b>⇒</b> <b>GH</b> <b>⇒</b> <b>SELECT</b> <b>MEMORY</b> <b>END</b> </p> <p style="text-align: center;">           ...year    ...month    ...day    ... day of the week    ...hour    ...minute    ...AM / PM         </p>																																																																																																						
System Speed Dialing Entry	<b>01</b> OR <b>AUTO</b>	<p style="text-align: center;"> <b>SELECT</b>  <b>NEXT</b> <b>AB</b> <b>CD</b> <b>phone number</b> <b>MEMORY</b> <b>END</b> </p> <p style="text-align: center;">           ...<b>9</b> automatic line access number            ...<b>8</b> through <b>  </b> : access number of Trunk Group            .....Speed access code (00 through 99)         </p> <p>● There is the phone number directory on page 7-1.</p>																																																																																																						
Extension Number Assignment	<b>02</b>	<p style="text-align: center;"> <b>NEXT</b> <b>NEXT</b> <b>CDE</b> <b>MEMORY</b> <b>END</b> </p> <p style="text-align: center;">           .....dial the extension number (100 through 199)            .....until the desired jack number (01 through 32) appears         </p> <table border="1" style="width: 100%; text-align: center; border-collapse: collapse;"> <tr> <td>Jack NO</td> <td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td> </tr> <tr> <td>EXT NO (default)</td> <td>101</td><td>102</td><td>103</td><td>104</td><td>105</td><td>106</td><td>107</td><td>108</td><td>109</td><td>110</td><td>111</td><td>112</td><td>113</td><td>114</td><td>115</td><td>116</td> </tr> <tr> <td>EXT NO (change)</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table> <table border="1" style="width: 100%; text-align: center; border-collapse: collapse;"> <tr> <td>Jack NO</td> <td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td> </tr> <tr> <td>EXT NO (default)</td> <td>117</td><td>118</td><td>119</td><td>120</td><td>121</td><td>122</td><td>123</td><td>124</td><td>125</td><td>126</td><td>127</td><td>128</td><td>129</td><td>130</td><td>131</td><td>132</td> </tr> <tr> <td>EXT NO (change)</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>	Jack NO	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	EXT NO (default)	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	EXT NO (change)																	Jack NO	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	EXT NO (default)	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	EXT NO (change)																
Jack NO	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16																																																																																								
EXT NO (default)	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116																																																																																								
EXT NO (change)																																																																																																								
Jack NO	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																																																																								
EXT NO (default)	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132																																																																																								
EXT NO (change)																																																																																																								
Operator Assignment	<b>03</b>	<p style="text-align: center;"> <b>NEXT</b> <b>NEXT</b> <b>AB</b> <b>MEMORY</b> <b>END</b> </p> <p style="text-align: center;">           .....dial the jack number set operator (01 through 32)            .....until the desired operator number (1 or 2) appears         </p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"></td> <td style="text-align: center;">Jack number set operator</td> </tr> <tr> <td>Operator 1</td> <td></td> </tr> <tr> <td style="width: 30%;"></td> <td style="text-align: center;">Jack number set operator</td> </tr> <tr> <td>Operator 2</td> <td></td> </tr> </table>		Jack number set operator	Operator 1			Jack number set operator	Operator 2																																																																																															
	Jack number set operator																																																																																																							
Operator 1																																																																																																								
	Jack number set operator																																																																																																							
Operator 2																																																																																																								
Paired Telephone Assignment for DSS Console	<b>04</b>	<p style="text-align: center;"> <b>NEXT</b> <b>NEXT</b> <b>AB</b> <b>MEMORY</b> <b>NEXT</b> <b>CD</b> <b>MEMORY</b> <b>END</b> </p> <p style="text-align: center;">           .....dial the jack number paired with console 2 (01 through 32)            .....dial the jack number paired with console 1 (01 through 32)         </p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">Jack number paired with Console 1</td> </tr> <tr> <td>Default</td> <td style="text-align: center;">01</td> </tr> <tr> <td>To make program change</td> <td></td> </tr> <tr> <td colspan="2" style="text-align: center;">Jack number paired with Console 2</td> </tr> <tr> <td>Default</td> <td style="text-align: center;">07</td> </tr> <tr> <td>To make program change</td> <td></td> </tr> </table>	Jack number paired with Console 1		Default	01	To make program change		Jack number paired with Console 2		Default	07	To make program change																																																																																											
Jack number paired with Console 1																																																																																																								
Default	01																																																																																																							
To make program change																																																																																																								
Jack number paired with Console 2																																																																																																								
Default	07																																																																																																							
To make program change																																																																																																								
Automatic CO Hold Using DSS Button	<b>05</b>	<p style="text-align: center;"> <b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>END</b> </p> <p style="text-align: center;">           ..... With Transfer / Without Transfer         </p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"></td> <td style="text-align: center;">Default</td> <td style="text-align: center;">To make program change</td> </tr> <tr> <td>With Transfer</td> <td style="text-align: center;">X</td> <td></td> </tr> <tr> <td>Without Transfer</td> <td></td> <td></td> </tr> </table>		Default	To make program change	With Transfer	X		Without Transfer																																																																																															
	Default	To make program change																																																																																																						
With Transfer	X																																																																																																							
Without Transfer																																																																																																								

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																
Day/Night Service Mode  Switching of Service Mode	<b>06</b>	<p><b>NEXT SELECT MEMORY END</b>            ..... Manual / Automatic</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Manual</td> <td>X</td> <td></td> </tr> <tr> <td>Automatic</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	Manual	X		Automatic																																									
	Default	To make program change																																																
Manual	X																																																	
Automatic																																																		
Starting Time	<b>07</b>	<p><b>NEXT AB =&gt; CD =&gt; SELECT MEMORY NEXT EF =&gt; GH =&gt; SELECT MEMORY END</b>            .....minute ..... AM / PM            ..... starting time for day service (hour) .....starting time for night service (hour)</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Day Service</td> <td>9:00 AM</td> <td></td> </tr> <tr> <td>Night Service</td> <td>5:00 PM</td> <td></td> </tr> </tbody> </table>		Default	To make program change	Day Service	9:00 AM		Night Service	5:00 PM																																								
	Default	To make program change																																																
Day Service	9:00 AM																																																	
Night Service	5:00 PM																																																	
Call Hunting Setting	<b>08</b>	<p><b>NEXT NEXT SELECT MEMORY END</b>            ..... Disable / Enable            ..... until the desired extension group number (1 through 8) appears</p> <table border="1"> <thead> <tr> <th rowspan="2"></th> <th rowspan="2">Default</th> <th colspan="8">To make program change</th> </tr> <tr> <th colspan="8">Extension group</th> </tr> <tr> <th></th> <th>all 8 extension groups</th> <th>group 1</th> <th>group 2</th> <th>group 3</th> <th>group 4</th> <th>group 5</th> <th>group 6</th> <th>group 7</th> <th>group 8</th> </tr> </thead> <tbody> <tr> <td>Disable</td> <td>X</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>Enable</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change								Extension group									all 8 extension groups	group 1	group 2	group 3	group 4	group 5	group 6	group 7	group 8	Disable	X									Enable									
	Default	To make program change																																																
		Extension group																																																
	all 8 extension groups	group 1	group 2	group 3	group 4	group 5	group 6	group 7	group 8																																									
Disable	X																																																	
Enable																																																		
Hunting Type	<b>09</b>	<p><b>NEXT NEXT SELECT MEMORY END</b>            ..... Terminate / Circular            ..... until the desired extension group number (1 through 8) appears</p> <table border="1"> <thead> <tr> <th rowspan="2"></th> <th rowspan="2">Default</th> <th colspan="8">To make program change</th> </tr> <tr> <th colspan="8">Extension group</th> </tr> <tr> <th></th> <th>all 8 extension groups</th> <th>group 1</th> <th>group 2</th> <th>group 3</th> <th>group 4</th> <th>group 5</th> <th>group 6</th> <th>group 7</th> <th>group 8</th> </tr> </thead> <tbody> <tr> <td>Terminate</td> <td>X</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>Circular</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change								Extension group									all 8 extension groups	group 1	group 2	group 3	group 4	group 5	group 6	group 7	group 8	Terminate	X									Circular									
	Default	To make program change																																																
		Extension group																																																
	all 8 extension groups	group 1	group 2	group 3	group 4	group 5	group 6	group 7	group 8																																									
Terminate	X																																																	
Circular																																																		
Toll Restriction  Area Type Selection	<b>10</b>	<p><b>NEXT SELECT MEMORY END</b>            ..... Type A / Type B / Type C</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Type A</td> <td>X</td> <td></td> </tr> <tr> <td>Type B</td> <td></td> <td></td> </tr> <tr> <td>Type C</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	Type A	X		Type B			Type C																																						
	Default	To make program change																																																
Type A	X																																																	
Type B																																																		
Type C																																																		
CO Operator Call-Boundary Class	<b>11</b>	<p><b>NEXT A MEMORY END</b>            ..... dial the boundary class number (1 through 8)</p> <table border="1"> <thead> <tr> <th></th> <th>Class 1</th> <th>Class 2</th> <th>Class 3</th> <th>Class 4</th> <th>Class 5</th> <th>Class 6</th> <th>Class 7</th> <th>Class 8</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>X</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Class 1	Class 2	Class 3	Class 4	Class 5	Class 6	Class 7	Class 8	Default	X								To make program change																													
	Class 1	Class 2	Class 3	Class 4	Class 5	Class 6	Class 7	Class 8																																										
Default	X																																																	
To make program change																																																		



TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																													
Toll Restriction (cont.) Toll Restriction of Speed Dialing	<b>12</b>	<p> <b>NEXT SELECT MEMORY END</b>            :..... Restriction / No restriction         </p> <table border="1" data-bbox="404 372 1189 463"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Restriction</td> <td>X</td> <td></td> </tr> <tr> <td>No restriction</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	Restriction	X		No restriction																																																																						
	Default	To make program change																																																																													
Restriction	X																																																																														
No restriction																																																																															
Exchange Code Selection	<b>13</b>	<p> <b>NEXT NEXT CDE MEMORY I END</b>            :.....exchange code with 3 digits            . . . . . until the desired memory code number (01 through 20) appears         </p> <table border="1" data-bbox="404 655 1417 851"> <thead> <tr> <th colspan="2"></th> <th colspan="10">Memory code number</th> </tr> <tr> <th colspan="2"></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th></th><th></th> </tr> </thead> <tbody> <tr> <td>exchange code entry</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <th colspan="2"></th> <th colspan="10">Memory code number</th> </tr> <tr> <th colspan="2"></th> <th>09</th><th>10</th><th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th> </tr> <tr> <td></td><td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>			Memory code number												01	02	03	04	05	06	07	08			exchange code entry														Memory code number												09	10	11	12	13	14	15	16	17	18	19	20															
		Memory code number																																																																													
		01	02	03	04	05	06	07	08																																																																						
exchange code entry																																																																															
		Memory code number																																																																													
		09	10	11	12	13	14	15	16	17	18	19	20																																																																		
Area Code Entry for class 3	<b>14</b>	<p> <b>NEXT NEXT CDE MEMORY I END</b>            :..... area code with 3 digits            !..... until the desired memory code number (01 through 20) appears         </p> <table border="1" data-bbox="404 1068 1417 1264"> <thead> <tr> <th colspan="2"></th> <th colspan="10">Memory code number</th> </tr> <tr> <th colspan="2"></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th></th><th></th> </tr> </thead> <tbody> <tr> <td>Area code entry</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <th colspan="2"></th> <th colspan="10">Memory code number</th> </tr> <tr> <th colspan="2"></th> <th>09</th><th>10</th><th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th> </tr> <tr> <td></td><td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>			Memory code number												01	02	03	04	05	06	07	08			Area code entry															Memory code number												09	10	11	12	13	14	15	16	17	18	19	20														
		Memory code number																																																																													
		01	02	03	04	05	06	07	08																																																																						
Area code entry																																																																															
		Memory code number																																																																													
		09	10	11	12	13	14	15	16	17	18	19	20																																																																		
Exchange Code Entry for Class 5	<b>15</b>	<p> <b>NEXT NEXT CDE MEMORY I END</b>            :..... exchange code with 3 digits            !..... until the desired memory code number (01 through 20) appears         </p> <table border="1" data-bbox="404 1513 1417 1708"> <thead> <tr> <th colspan="2"></th> <th colspan="10">Memory code number</th> </tr> <tr> <th colspan="2"></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th></th><th></th> </tr> </thead> <tbody> <tr> <td>exchange code entry</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <th colspan="2"></th> <th colspan="10">Memory code number</th> </tr> <tr> <th colspan="2"></th> <th>09</th><th>10</th><th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th><th>17</th><th>18</th><th>19</th><th>20</th> </tr> <tr> <td></td><td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>			Memory code number												01	02	03	04	05	06	07	08			exchange code entry															Memory code number												09	10	11	12	13	14	15	16	17	18	19	20														
		Memory code number																																																																													
		01	02	03	04	05	06	07	08																																																																						
exchange code entry																																																																															
		Memory code number																																																																													
		09	10	11	12	13	14	15	16	17	18	19	20																																																																		

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																		
Toll Restriction (cont)  Exchange Code Entry for Class 7	<b>16</b>	<p> <b>NEXT NEXT CDE MEMORY END</b>            .....exchange code with 3 digits            ..... until the desired memory number (01 through 20) appears         </p> <table border="1" data-bbox="423 434 1414 646"> <tr> <td colspan="2" rowspan="2"></td> <td colspan="8">Memory code number</td> </tr> <tr> <td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td> </tr> <tr> <td colspan="2">Exchange code entry</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td colspan="2"></td> <td colspan="8">Memory code number</td> </tr> <tr> <td>09</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td> </tr> </table>			Memory code number								01	02	03	04	05	06	07	08	Exchange code entry												Memory code number								09	10	11	12	13	14	15	16	17	18	19	20
		Memory code number																																																		
		01	02	03	04	05	06	07	08																																											
Exchange code entry																																																				
		Memory code number																																																		
09	10	11	12	13	14	15	16	17	18	19	20																																									
Hold Time Reminder	<b>17</b>	<p> <b>NEXT A MEMORY END</b>            ..... dial the time (1 minute through 9 minutes)         </p> <table border="1" data-bbox="423 772 1268 895"> <tr> <td colspan="2" rowspan="2"></td> <td colspan="9">minutes</td> </tr> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td> </tr> <tr> <td colspan="2">Default</td> <td></td><td></td><td>X</td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td colspan="2">To make program change</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>			minutes									1	2	3	4	5	6	7	8	9	Default				X							To make program change																		
		minutes																																																		
		1	2	3	4	5	6	7	8	9																																										
Default				X																																																
To make program change																																																				
Hold Recall Time Set	<b>18</b>	<p> <b>NEXT SELECT MEMORY END</b>            .....30 sec / 1 min / 1.5 min / 2 min / Disable         </p> <table border="1" data-bbox="423 1023 1344 1140"> <tr> <td colspan="2" rowspan="2"></td> <td>30seconds</td> <td>1 minute</td> <td>1 minute 30 seconds</td> <td>2 minutes</td> <td>disable</td> </tr> <tr> <td></td><td>X</td><td></td><td></td><td></td> </tr> <tr> <td colspan="2">Default</td> <td></td><td>X</td><td></td><td></td><td></td> </tr> <tr> <td colspan="2">To make program change</td> <td></td><td></td><td></td><td></td><td></td> </tr> </table>			30seconds	1 minute	1 minute 30 seconds	2 minutes	disable		X				Default			X				To make program change																														
		30seconds			1 minute	1 minute 30 seconds	2 minutes	disable																																												
			X																																																	
Default			X																																																	
To make program change																																																				
Transfer Recall Time	<b>19</b>	<p> <b>NEXT SELECT MEMORY END</b>            .....30 sec / 15 sec         </p> <table border="1" data-bbox="423 1278 1190 1370"> <tr> <td colspan="2" rowspan="2"></td> <td>Default</td> <td>To make program change</td> </tr> <tr> <td>X</td><td></td> </tr> <tr> <td>30 sec</td> <td></td> <td></td><td></td> </tr> <tr> <td>15 sec</td> <td></td> <td></td><td></td> </tr> </table>			Default	To make program change	X		30 sec				15 sec																																							
		Default			To make program change																																															
		X																																																		
30 sec																																																				
15 sec																																																				
Call Forwarding Starting Time	<b>20</b>	<p> <b>NEXT SELECT MEMORY END</b>            .....1 ring delay / 2 rings delay / 3 rings delay / 4 rings delay         </p> <table border="1" data-bbox="423 1502 1190 1655"> <tr> <td colspan="2" rowspan="2"></td> <td>Default</td> <td>To make program change</td> </tr> <tr> <td></td><td></td> </tr> <tr> <td>1 ring delay</td> <td></td> <td></td><td></td> </tr> <tr> <td>2 rings delay</td> <td></td> <td></td><td></td> </tr> <tr> <td>3 rings delay</td> <td></td> <td>X</td><td></td> </tr> <tr> <td>4 rings delay</td> <td></td> <td></td><td></td> </tr> </table>			Default	To make program change			1 ring delay				2 rings delay				3 rings delay		X		4 rings delay																															
		Default			To make program change																																															
1 ring delay																																																				
2 rings delay																																																				
3 rings delay		X																																																		
4 rings delay																																																				
Pickup Dial Delay Time	<b>21</b>	<p> <b>NEXT SELECT MEMORY END</b>            .....1 sec / 2 sec / 3 sec / 4 sec         </p> <table border="1" data-bbox="423 1789 1190 1942"> <tr> <td colspan="2" rowspan="2"></td> <td>Default</td> <td>To make program change</td> </tr> <tr> <td></td><td></td> </tr> <tr> <td>1 sec</td> <td></td> <td></td><td></td> </tr> <tr> <td>2 sec</td> <td></td> <td></td><td></td> </tr> <tr> <td>3 sec</td> <td></td> <td>X</td><td></td> </tr> <tr> <td>4 sec</td> <td></td> <td></td><td></td> </tr> </table>			Default	To make program change			1 sec				2 sec				3 sec		X		4 sec																															
		Default			To make program change																																															
1 sec																																																				
2 sec																																																				
3 sec		X																																																		
4 sec																																																				

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																								
CO-to-CO Duration Time Limit	22	<p><b>NEXT</b> <b>AB</b> <b>MEMORY</b> <b>END</b>            ..... dial the time (1 minute through 32 minutes)</p> <table border="1" data-bbox="414 367 1185 430"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>minute</td> <td>10</td> <td></td> </tr> </tbody> </table>		Default	To make program change	minute	10																																																																			
	Default	To make program change																																																																								
minute	10																																																																									
SMDR  RS-232C Communication Parameters	23	<p>(Carriage return for a new line)  <b>NEXT</b> <b>SELECT</b> <b>MEMORY</b>            .....CR +LF / CR</p> <table border="1" data-bbox="414 661 1185 766"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>CR +LF</td> <td>X</td> <td></td> </tr> <tr> <td>CR</td> <td></td> <td></td> </tr> </tbody> </table> <p>(Baud rate)  <b>NEXT</b> <b>SELECT</b> <b>MEMORY</b>            .....110B / 150B / 300B / 600B / 1200B / 2400B / 4800B / 9600B</p> <table border="1" data-bbox="414 913 1396 1008"> <thead> <tr> <th></th> <th>110B</th> <th>150B</th> <th>300B</th> <th>600B</th> <th>1200B</th> <th>2400B</th> <th>4800B</th> <th>9600B</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>X</td> <td></td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>(Word length)  <b>NEXT</b> <b>SELECT</b> <b>MEMORY</b>            .....7 bits / 8 bits</p> <table border="1" data-bbox="414 1144 1185 1249"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>7 bits</td> <td>X</td> <td></td> </tr> <tr> <td>8 bits</td> <td></td> <td></td> </tr> </tbody> </table> <p>(Parity)  <b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>END</b>            "" " None/ Mark / Space / Even / Odd</p> <table border="1" data-bbox="414 1396 1347 1491"> <thead> <tr> <th></th> <th>None</th> <th>Mark</th> <th>Space</th> <th>Even</th> <th>Odd</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td></td> <td>X</td> <td></td> <td></td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>(Stop bit length)  <b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>END</b>            .....1 bit / 2 bits</p> <table border="1" data-bbox="414 1638 1185 1743"> <thead> <tr> <th></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>1 bit</td> <td>X</td> <td></td> </tr> <tr> <td>2 bits</td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change	CR +LF	X		CR				110B	150B	300B	600B	1200B	2400B	4800B	9600B	Default						X			To make program change										Default	To make program change	7 bits	X		8 bits				None	Mark	Space	Even	Odd	Default		X				To make program change							Default	To make program change	1 bit	X		2 bits		
	Default	To make program change																																																																								
CR +LF	X																																																																									
CR																																																																										
	110B	150B	300B	600B	1200B	2400B	4800B	9600B																																																																		
Default						X																																																																				
To make program change																																																																										
	Default	To make program change																																																																								
7 bits	X																																																																									
8 bits																																																																										
	None	Mark	Space	Even	Odd																																																																					
Default		X																																																																								
To make program change																																																																										
	Default	To make program change																																																																								
1 bit	X																																																																									
2 bits																																																																										

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																				
SM DR (cont.)  SMDR Parameters	24	<p>(Page length)</p> <p><b>NEXT</b> <b>AB</b> <b>MEMORY</b></p> <p>..... 4 through 99 lines</p> <table border="1" data-bbox="434 389 1219 449"> <tr> <td></td> <td>Default</td> <td>To make program change</td> </tr> <tr> <td>Lines per page</td> <td>66</td> <td></td> </tr> </table> <p>(Skip perforation)</p> <p><b>NEXT</b> <b>AB</b> <b>MEMORY</b> <b>END</b></p> <p>..... 0 through 95 lines</p> <table border="1" data-bbox="434 583 1219 642"> <tr> <td></td> <td>Default</td> <td>To make program change</td> </tr> <tr> <td>Skipping lines</td> <td>0</td> <td></td> </tr> </table>		Default	To make program change	Lines per page	66			Default	To make program change	Skipping lines	0									
	Default	To make program change																				
Lines per page	66																					
	Default	To make program change																				
Skipping lines	0																					
Incoming/Outgoing Call Selection for printing	25	<p><b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>END</b></p> <p>..... " " Outgoing : On/Off ..... Incoming : On/Off</p> <table border="1" data-bbox="434 785 1252 910"> <tr> <td></td> <td colspan="2">Outgoing</td> <td colspan="2">Incoming</td> </tr> <tr> <td></td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>Default</td> <td>X</td> <td></td> <td>X</td> <td></td> </tr> <tr> <td>To make program change</td> <td></td> <td></td> <td></td> <td></td> </tr> </table>		Outgoing		Incoming			ON	OFF	ON	OFF	Default	X		X		To make program change				
	Outgoing		Incoming																			
	ON	OFF	ON	OFF																		
Default	X		X																			
To make program change																						
Secret Speed Dial / One Touch Dial Printing	26	<p><b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>END</b></p> <p>..... No Printing / Printing</p> <table border="1" data-bbox="434 1055 1219 1144"> <tr> <td></td> <td>Default</td> <td>To make program change</td> </tr> <tr> <td>No Printing</td> <td>X</td> <td></td> </tr> <tr> <td>Printing</td> <td></td> <td></td> </tr> </table>		Default	To make program change	No Printing	X		Printing													
	Default	To make program change																				
No Printing	X																					
Printing																						
System Data Dump	27	<ul style="list-style-type: none"> <li>• All Parameters</li> <li>• System Parameter</li> <li>• Speed Call</li> <li>• stop output</li> </ul> <p><b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>END</b></p> <p>..... All Para / System Para / CO Para / EXT Para / DSS Para / Speed Call / Stop Output</p> <ul style="list-style-type: none"> <li>• CO Parameter</li> </ul> <p><b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>AB</b> <b>MEMORY</b> <b>END</b></p> <p>..... dial the CO number (01 through 12)</p> <p>..... until the CO Para appears</p> <ul style="list-style-type: none"> <li>• Extension Parameter</li> </ul> <p><b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>AB</b> <b>MEMORY</b> <b>END</b></p> <p>..... dial jack number (01 through 32)</p> <p>..... until the EXT Para appears</p> <ul style="list-style-type: none"> <li>• DSS Parameter</li> </ul> <p><b>NEXT</b> <b>SELECT</b> <b>MEMORY</b> <b>A</b> <b>MEMORY</b> <b>END</b></p> <p>..... dial DSS number (1 or 2)</p> <p>..... until the DSS Para appears</p>																				

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																							
Duration Time Count Start Mode	28	<p><b>NEXT SELECT MEMORY END</b></p> <p>..... Instantly / 5s after dial / 10s after dial / 15s after dial</p> <table border="1"> <thead> <tr> <th></th> <th>Default</th> <th colspan="4">To make program change</th> </tr> </thead> <tbody> <tr> <td>Instantly</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>5s after dial</td> <td>X</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>10s after dial</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>15s after dial</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change				Instantly						5s after dial	X					10s after dial						15s after dial																																														
	Default	To make program change																																																																							
Instantly																																																																									
5s after dial	X																																																																								
10s after dial																																																																									
15s after dial																																																																									
External Paging Access Tone	29	<p><b>NEXT NEXT SELECT MEMORY END</b></p> <p>..... Enable / Disable</p> <p>..... until the desired external paging equipment number (1 or 2) appears</p> <table border="1"> <thead> <tr> <th rowspan="2"></th> <th>Default</th> <th colspan="2">To make program change</th> </tr> <tr> <th>External paging 1 and 2</th> <th>External paging equipment 1</th> <th>External paging equipment 2</th> </tr> </thead> <tbody> <tr> <td>Enable</td> <td>X</td> <td></td> <td></td> </tr> <tr> <td>Disable</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		Default	To make program change		External paging 1 and 2	External paging equipment 1	External paging equipment 2	Enable	X			Disable																																																											
	Default	To make program change																																																																							
	External paging 1 and 2	External paging equipment 1	External paging equipment 2																																																																						
Enable	X																																																																								
Disable																																																																									
CO Connection Assignment	40	<p><b>NEXT NEXT SELECT MEMORY END</b></p> <p>..... Connect / Not Connect</p> <p>..... until the desired CO number (01 through 12) appears</p> <table border="1"> <thead> <tr> <th rowspan="3"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th rowspan="2">all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th>01</th> <th>02</th> <th>03</th> <th>04</th> <th>05</th> <th>06</th> <th>07</th> <th>08</th> <th>09</th> <th>10</th> <th>11</th> <th>12</th> </tr> </thead> <tbody> <tr> <td>Connect</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Not connect</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number												01	02	03	04	05	06	07	08	09	10	11	12	Connect	X															Not connect															
	Default	To make program change																																																																							
	all CO's	CO number																																																																							
		01	02	03	04	05	06	07	08	09	10	11	12																																																												
Connect	X																																																																								
Not connect																																																																									
Dial Mode (DTMF/ Pulse) Selection	41	<p><b>NEXT NEXT SELECT MEMORY END</b></p> <p>..... DTMF Mode / Pulse Mode</p> <p>..... until the desired CO number (01 through 12) appears</p> <table border="1"> <thead> <tr> <th rowspan="3"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th rowspan="2">all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th>01</th> <th>02</th> <th>03</th> <th>04</th> <th>05</th> <th>06</th> <th>07</th> <th>08</th> <th>09</th> <th>10</th> <th>11</th> <th>12</th> </tr> </thead> <tbody> <tr> <td>Tone (DTMF) Mode</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Pulse Mode</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number												01	02	03	04	05	06	07	08	09	10	11	12	Tone (DTMF) Mode	X															Pulse Mode															
	Default	To make program change																																																																							
	all CO's	CO number																																																																							
		01	02	03	04	05	06	07	08	09	10	11	12																																																												
Tone (DTMF) Mode	X																																																																								
Pulse Mode																																																																									
Pulse Speed Selection	42	<p><b>NEXT NEXT SELECT MEMORY END</b></p> <p>..... Low Speed / High Speed</p> <p>..... until the desired CO number (01 through 12) appears</p> <table border="1"> <thead> <tr> <th rowspan="3"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th rowspan="2">all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th>01</th> <th>02</th> <th>03</th> <th>04</th> <th>05</th> <th>06</th> <th>07</th> <th>08</th> <th>09</th> <th>10</th> <th>11</th> <th>12</th> </tr> </thead> <tbody> <tr> <td>Low Speed</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>High Speed</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number												01	02	03	04	05	06	07	08	09	10	11	12	Low Speed	X															High Speed															
	Default	To make program change																																																																							
	all CO's	CO number																																																																							
		01	02	03	04	05	06	07	08	09	10	11	12																																																												
Low Speed	X																																																																								
High Speed																																																																									

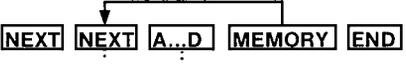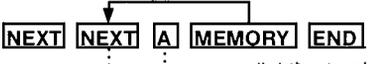TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																																																																																																																																																																										
Host PBX Access Codes Assignment	43	<p>  </p> <p>           ..... up to 8 outside access codes each with a maximum of 2 digits            ..... until the desired CO number (01 through 12) appears         </p> <table border="1" data-bbox="430 425 1437 819"> <thead> <tr> <th>CO</th> <th colspan="12">Outside access codes of the host PBX</th> </tr> </thead> <tbody> <tr><td>01</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>02</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>03</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>04</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>05</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>06</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>07</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>08</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>09</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>10</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>11</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>12</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>	CO	Outside access codes of the host PBX												01														02														03														04														05														06														07														08														09														10														11														12																																																																																																																																		
CO	Outside access codes of the host PBX																																																																																																																																																																																																																																																																																																											
01																																																																																																																																																																																																																																																																																																												
02																																																																																																																																																																																																																																																																																																												
03																																																																																																																																																																																																																																																																																																												
04																																																																																																																																																																																																																																																																																																												
05																																																																																																																																																																																																																																																																																																												
06																																																																																																																																																																																																																																																																																																												
07																																																																																																																																																																																																																																																																																																												
08																																																																																																																																																																																																																																																																																																												
09																																																																																																																																																																																																																																																																																																												
10																																																																																																																																																																																																																																																																																																												
11																																																																																																																																																																																																																																																																																																												
12																																																																																																																																																																																																																																																																																																												
Trunk Group Assignment	44	<p>  </p> <p>           ..... dial the trunk group number (1 through 8)            ..... until the desired CO number (01 through 12) appears         </p> <table border="1" data-bbox="430 989 1364 1319"> <thead> <tr> <th rowspan="3"></th> <th colspan="12">Default</th> </tr> <tr> <th colspan="12">CO number</th> </tr> <tr> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr><td>Trunk group 1</td><td>×</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 2</td><td></td><td>×</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 3</td><td></td><td></td><td>×</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 4</td><td></td><td></td><td></td><td>×</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 5</td><td></td><td></td><td></td><td></td><td>×</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 6</td><td></td><td></td><td></td><td></td><td></td><td>×</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 7</td><td></td><td></td><td></td><td></td><td></td><td></td><td>×</td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 8</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>×</td><td>×</td><td>×</td><td>×</td><td>×</td><td>×</td></tr> </tbody> </table> <table border="1" data-bbox="430 1351 1364 1670"> <thead> <tr> <th rowspan="3"></th> <th colspan="12">To make program change</th> </tr> <tr> <th colspan="12">CO number</th> </tr> <tr> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr><td>Trunk group 1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 2</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 3</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 4</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 5</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 6</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 7</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>Trunk group 8</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>		Default												CO number												01	02	03	04	05	06	07	08	09	10	11	12	Trunk group 1	×													Trunk group 2		×												Trunk group 3			×											Trunk group 4				×										Trunk group 5					×									Trunk group 6						×								Trunk group 7							×							Trunk group 8								×	×	×	×	×	×		To make program change												CO number												01	02	03	04	05	06	07	08	09	10	11	12	Trunk group 1														Trunk group 2														Trunk group 3														Trunk group 4														Trunk group 5														Trunk group 6														Trunk group 7														Trunk group 8													
	Default																																																																																																																																																																																																																																																																																																											
	CO number																																																																																																																																																																																																																																																																																																											
	01	02	03	04	05	06	07	08	09	10	11	12																																																																																																																																																																																																																																																																																																
Trunk group 1	×																																																																																																																																																																																																																																																																																																											
Trunk group 2		×																																																																																																																																																																																																																																																																																																										
Trunk group 3			×																																																																																																																																																																																																																																																																																																									
Trunk group 4				×																																																																																																																																																																																																																																																																																																								
Trunk group 5					×																																																																																																																																																																																																																																																																																																							
Trunk group 6						×																																																																																																																																																																																																																																																																																																						
Trunk group 7							×																																																																																																																																																																																																																																																																																																					
Trunk group 8								×	×	×	×	×	×																																																																																																																																																																																																																																																																																															
	To make program change																																																																																																																																																																																																																																																																																																											
	CO number																																																																																																																																																																																																																																																																																																											
	01	02	03	04	05	06	07	08	09	10	11	12																																																																																																																																																																																																																																																																																																
Trunk group 1																																																																																																																																																																																																																																																																																																												
Trunk group 2																																																																																																																																																																																																																																																																																																												
Trunk group 3																																																																																																																																																																																																																																																																																																												
Trunk group 4																																																																																																																																																																																																																																																																																																												
Trunk group 5																																																																																																																																																																																																																																																																																																												
Trunk group 6																																																																																																																																																																																																																																																																																																												
Trunk group 7																																																																																																																																																																																																																																																																																																												
Trunk group 8																																																																																																																																																																																																																																																																																																												



**TO SET**


PROGRAM ADDRESS

**STEPS REQUIRED TO CHANGE PROGRAM**

Flexible  
Outward Dialing  
Assignment  
(cont.)

**46**

Night Mode

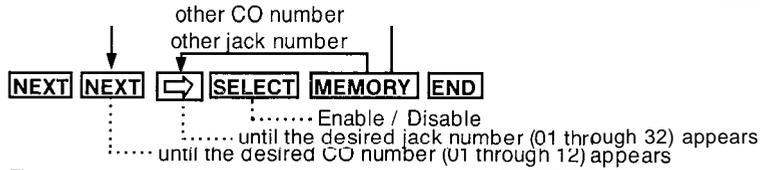


		Default	To make program change																
			all jack numbers	Jack number															
				01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
CO 1	Enable	x																	
	Disable																		
CO 2	Enable	x																	
	Disable																		
CO 3	Enable	x																	
	Disable																		
CO 4	Enable	x																	
	Disable																		
CO 5	Enable	x																	
	Disable																		
CO 6	Enable	x																	
	Disable																		
CO 7	Enable	x																	
	Disable																		
CO 8	Enable	x																	
	Disable																		
CO 9	Enable	x																	
	Disable																		
CO 10	Enable	x																	
	Disable																		
CO 11	Enable	x																	
	Disable																		
CO 12	Enable	x																	
	Disable																		

		Default	To make program change																
			all jack numbers	Jack number															
				17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
CO 1	Enable																		
	Disable																		
CO 2	Enable																		
	Disable																		
CO 3	Enable																		
	Disable																		
CO 4	Enable																		
	Disable																		
CO 5	Enable																		
	Disable																		
CO 6	Enable																		
	Disable																		
CO 7	Enable																		
	Disable																		
CO 8	Enable																		
	Disable																		
CO 9	Enable																		
	Disable																		
CO 10	Enable																		
	Disable																		
CO 11	Enable																		
	Disable																		
CO 12	Enable																		
	Disable																		

**TO SET**      PROGRAM ADDRESS      **STEPS REQUIRED TO CHANGE PROGRAM**

Flexible Ringing Assignment  
Day Mode

47

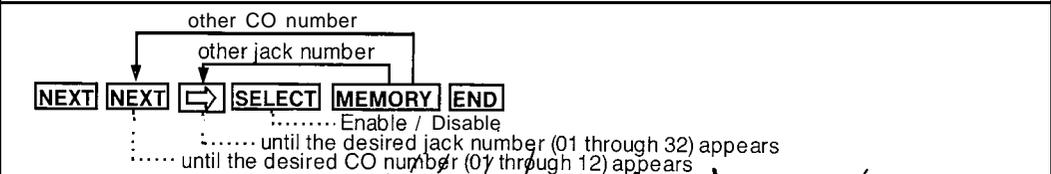

101  
102  
103


		Default all jack numbers	To make program change Jack number															
			01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
CO 1	Enable	X																
	Disable																	
CO 2	Enable	X																
	Disable																	
CO 3	Enable	X																
	Disable																	
CO 4	Enable	X																
	Disable																	
CO 5	Enable	X																
	Disable																	
CO 6	Enable	X																
	Disable																	
CO 7	Enable	X																
	Disable																	
CO 8	Enable	X																
	Disable																	
CO 9	Enable	X																
	Disable																	
CO 10	Enable	X																
	Disable																	
CO 11	Enable	X																
	Disable																	
CO 12	Enable	X																
	Disable																	

		To make program change Jack number															
		17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
CO 1	Enable																
	Disable																
CO 2	Enable																
	Disable																
CO 3	Enable																
	Disable																
CO 4	Enable																
	Disable																
CO 5	Enable																
	Disable																
CO 6	Enable																
	Disable																
CO 7	Enable																
	Disable																
CO 8	Enable																
	Disable																
CO 9	Enable																
	Disable																
CO 10	Enable																
	Disable																
CO 11	Enable																
	Disable																
CO 12	Enable																
	Disable																

**TO SET**      **PROGRAM ADDRESS**      **STEPS REQUIRED TO CHANGE PROGRAM**

Flexible Ringing Assignment (cont.)  
Night Mode

**48**

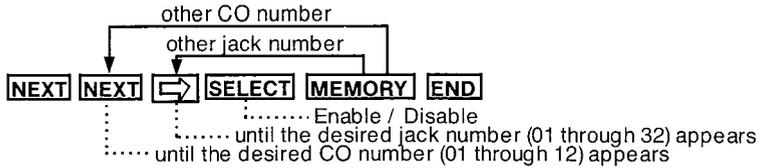

		Default all jack numbers	To make program change															
			Jack number															
			01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
CO 1	Enable	×																
	Disable																	
CO 2	Enable	×																
	Disable																	
CO 3	Enable	×																
	Disable																	
CO 4	Enable	×																
	Disable																	
CO 5	Enable	×																
	Disable																	
CO 6	Enable	×																
	Disable																	
CO 7	Enable	×																
	Disable																	
CO 8	Enable	×																
	Disable																	
CO 9	Enable	×																
	Disable																	
CO10	Enable	×																
	Disable																	
CO11	Enable	×																
	Disable																	
CO12	Enable	×																
	Disable																	


		To make program change															
		Jack number															
		17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
CO 1	Enable																
	Disable																
CO 2	Enable																
	Disable																
CO 3	Enable																
	Disable																
CO 4	Enable																
	Disable																
CO 5	Enable																
	Disable																
CO 6	Enable																
	Disable																
CO 7	Enable																
	Disable																
CO 8	Enable																
	Disable																
CO 9	Enable																
	Disable																
CO 10	Enable																
	Disable																
CO 11	Enable																
	Disable																
CO 12	Enable																
	Disable																

<b>TO SET</b>	PROGRAM ADDRESS	<b>STEPS REQUIRED TO CHANGE PROGRAM</b>
---------------	-----------------	---

Delayed Ringing Assignment

Day Mode

49

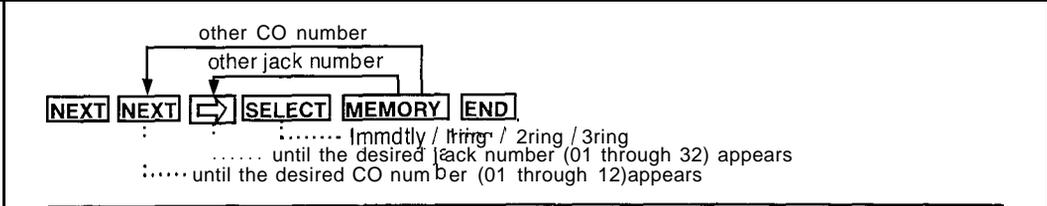

		Default all jack numbers	To make program change															
			Jack number															
			01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
CO 1	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 2	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 3	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 4	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 5	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 6	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 7	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 8	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 9	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 10	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 11	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	
CO 12	Immdtly	×																
	1ring																	
	2ring																	
	3ring																	


TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																		
Delayed Ringing Assignment  Day Mode (cont.)		To make program change																		
			Jack number																	
			17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32		
	CO 1	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 2	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 3	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 4	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 5	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 6	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 7	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 8	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 9	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 10	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 11	Immdtly																		
		1ring																		
		2ring																		
		3ring																		
	CO 12	Immdtly																		
1ring																				
2ring																				
3ring																				

<b>TO SET</b>	PROGRAM ADDRESS	<b>STEPS REQUIRED TO CHANGE PROGRAM</b>
---------------	-----------------	---

Delayed Ringing Assignment (cont.)

**50**

Night Mode

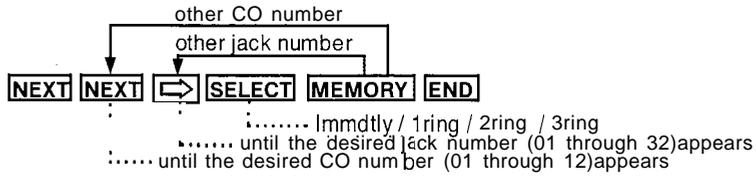

		Default	To make program change																
			all jack numbers	Jack number															
				01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
CO 1	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 2	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 3	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 4	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 5	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 6	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 7	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 8	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 9	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 10	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 11	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		
CO 12	Immdtly	×																	
	1ring																		
	2ring																		
	3ring																		

**TO SET**

ROGRAM  
DORESS

**STEPS REQUIRED TO CHANGE PROGRAM**

Delayed Ringing  
Assignment

Night Mode  
(cont.)

		To make program change															
		Jack number															
		17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
CO 1	Immdtly																
	1 ring																
	2ring																
	3ring																
CO 2	Immdtly																
	1ring																
	2ring																
	3ring																
CO 3	Immdtly																
	1 ring																
	2ring																
	3ring																
CO 4	Immdtly																
	1ring																
	2ring																
	3ring																
CO 5	Immdtly																
	1ring																
	2ring																
	3ring																
CO 6	Immdtly																
	1ring																
	2ring																
	3ring																
CO 7	Immdtly																
	1ring																
	2ring																
	3ring																
CO 8	Immdtly																
	1ring																
	2ring																
	3ring																
CO 9	Immdtly																
	1ring																
	2ring																
	3ring																
CO 10	Immdtly																
	1ring																
	2ring																
	3ring																
CO 11	Immdtly																
	1ring																
	2ring																
	3ring																
CO 12	Immdtly																
	1ring																
	2ring																
	3ring																

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																												
CO Direct In Line Assignment  Day Mode	<b>51</b>	<ul style="list-style-type: none"> <li>           Selecting the "Normal" mode            ↓  <b>NEXT NEXT SELECT MEMORY END</b>            .....Normal            .....until the desired CO number (01 through 12) appears         </li> <li>           Selecting the "DIL" mode            ↓  <b>NEXT NEXT SELECT CD MEMORY END</b>            .....DIL ..... Dial jack number (01 through 32)            .....until the desired CO number (01 through 12) appears         </li> </ul> <table border="1" data-bbox="407 646 1446 800"> <thead> <tr> <th rowspan="2"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th>all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th></th> <th></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>Normal</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>DIL</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <p>When "DIL" mode</p> <table border="1" data-bbox="407 878 1446 1002"> <thead> <tr> <th></th> <th colspan="12">CO number</th> </tr> <tr> <th></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>Jack number</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number														01	02	03	04	05	06	07	08	09	10	11	12	Normal	×													DIL															CO number													01	02	03	04	05	06	07	08	09	10	11	12	Jack number												
	Default	To make program change																																																																																																												
	all CO's	CO number																																																																																																												
		01	02	03	04	05	06	07	08	09	10	11	12																																																																																																	
Normal	×																																																																																																													
DIL																																																																																																														
	CO number																																																																																																													
	01	02	03	04	05	06	07	08	09	10	11	12																																																																																																		
Jack number																																																																																																														
Night Mode	<b>52</b>	<ul style="list-style-type: none"> <li>           Selecting the "Normal" mode            ↓  <b>NEXT NEXT SELECT MEMORY END</b>            .....Normal            .....until the desired CO number (01 through 12) appears         </li> <li>           Selecting the "DIL" mode            ↓  <b>NEXT NEXT SELECT CD MEMORY END</b>            .....DIL ..... Dial jack number (01 through 32)            .....until the desired CO number (01 through 12) appears         </li> </ul> <table border="1" data-bbox="407 1438 1446 1591"> <thead> <tr> <th rowspan="2"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th>all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th></th> <th></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>Normal</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>DIL</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <p>When "DIL" mode</p> <table border="1" data-bbox="407 1670 1446 1793"> <thead> <tr> <th></th> <th colspan="12">CO number</th> </tr> <tr> <th></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>Jack number</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number														01	02	03	04	05	06	07	08	09	10	11	12	Normal	×													DIL															CO number													01	02	03	04	05	06	07	08	09	10	11	12	Jack number												
	Default	To make program change																																																																																																												
	all CO's	CO number																																																																																																												
		01	02	03	04	05	06	07	08	09	10	11	12																																																																																																	
Normal	×																																																																																																													
DIL																																																																																																														
	CO number																																																																																																													
	01	02	03	04	05	06	07	08	09	10	11	12																																																																																																		
Jack number																																																																																																														

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																															
Pause Time Assignment	53	<p> </p> <table border="1"> <thead> <tr> <th rowspan="3"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th rowspan="2">all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>1.5sec</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>2.5sec</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>3.5sec</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>4.5sec</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number												01	02	03	04	05	06	07	08	09	10	11	12	1.5sec														2.5sec														3.5sec	X													4.5sec													
	Default	To make program change																																																																																															
	all CO's	CO number																																																																																															
		01	02	03	04	05	06	07	08	09	10	11	12																																																																																				
1.5sec																																																																																																	
2.5sec																																																																																																	
3.5sec	X																																																																																																
4.5sec																																																																																																	
Hookswitch Flash Timing	54	<p> </p> <table border="1"> <thead> <tr> <th rowspan="3"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th rowspan="2">all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>300ms</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>600ms</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>900ms</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>1200ms</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number												01	02	03	04	05	06	07	08	09	10	11	12	300ms														600ms	X													900ms														1200ms													
	Default	To make program change																																																																																															
	all CO's	CO number																																																																																															
		01	02	03	04	05	06	07	08	09	10	11	12																																																																																				
300ms																																																																																																	
600ms	X																																																																																																
900ms																																																																																																	
1200ms																																																																																																	
Calling Party Control (CPC) Signal	55	<p> </p> <table border="1"> <thead> <tr> <th rowspan="3"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th rowspan="2">all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>Disable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>6.5ms</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>400ms</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number												01	02	03	04	05	06	07	08	09	10	11	12	Disable														6.5ms														400ms	X																										
	Default	To make program change																																																																																															
	all CO's	CO number																																																																																															
		01	02	03	04	05	06	07	08	09	10	11	12																																																																																				
Disable																																																																																																	
6.5ms																																																																																																	
400ms	X																																																																																																
Disconnect Time	56	<p> </p> <table border="1"> <thead> <tr> <th rowspan="3"></th> <th>Default</th> <th colspan="12">To make program change</th> </tr> <tr> <th rowspan="2">all CO's</th> <th colspan="12">CO number</th> </tr> <tr> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th> </tr> </thead> <tbody> <tr> <td>1.5 sec</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>4.0 sec</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change												all CO's	CO number												01	02	03	04	05	06	07	08	09	10	11	12	1.5 sec	X													4.0 sec																																									
	Default	To make program change																																																																																															
	all CO's	CO number																																																																																															
		01	02	03	04	05	06	07	08	09	10	11	12																																																																																				
1.5 sec	X																																																																																																
4.0 sec																																																																																																	

<b>TO SET</b>	PROGRAM ADDRESS	<b>STEPS REQUIRED TO CHANGE PROGRAM</b>
---------------	-----------------	---

Extension Group Assignment

**60**

NEXT NEXT A MEMORY END

..... dial the extension group number (1 through 8)  
 .....until the desired jack number (01 through 32) appears

	Default	To make program change															
	all jack numbers	Jack number															
		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
EXT GRP-1	×																
EXT GRP-2																	
EXT GRP-3																	
EXT GRP-4																	
EXT GRP-5																	
EXT GRP-6																	
EXT GRP-7																	
EXT GRP-8																	

	To make program change															
	Jack number															
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
EXT GRP-1																
EXT GRP-2																
EXT GRP-3																
EXT GRP-4																
EXT GRP-5																
EXT GRP-6																
EXT GRP-7																
EXT GRP-8																

Service Class Assignment of Toll Restriction Day Mode

**61**

NEXT NEXT C MEMORY END

..... dial the service class number (1 through 8)  
 .....until the desired jack number (01 through 32) appears


	Default	To make program change															
	all jack numbers	Jack number															
		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
Class 1	×																
Class 2																	
Class 3																	
Class 4																	
Class 5																	
Class 6																	
Class 7																	
Class 8																	

	To make program change															
	Jack number															
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Class 1																
Class 2																
Class 3																
Class 4																
Class 5																
Class 6																
Class 7																
Class 8																

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM
--------	-----------------	----------------------------------

Service Class Assignment of Toll Restriction cont.)  
  
Night Mode

**62**

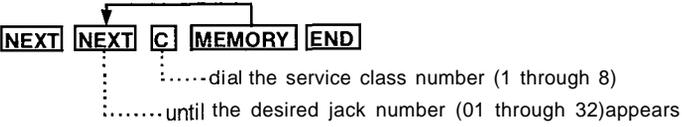


	Default	To make program change															
		Jack number															
	all jack numbers	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
Class 1	X																
Class 2																	
Class 3																	
Class 4																	
Class 5																	
Class 6																	
Class 7																	
Class 8																	

	To make program change															
	Jack number															
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Class 1																
Class 2																
Class 3																
Class 4																
Class 5																
Class 6																
Class 7																
Class 8																


Extension Name

**63**

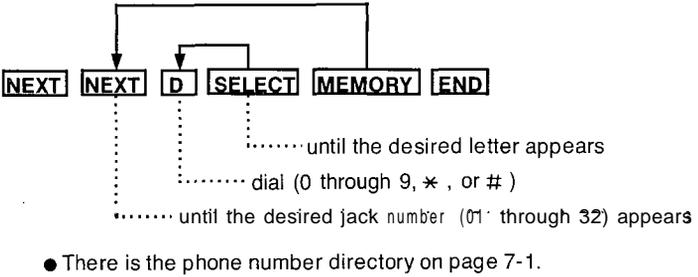


Account Code Input Mode

**64**

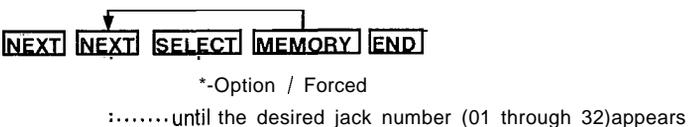

	Default	To make program change															
		Jack number															
	all jack numbers	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
Option	X																
Forced																	

	To make program change															
	Jack number															
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Option																
Forced																

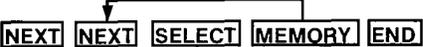TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																																													
Call Transfer to Outside Line	65	<p style="text-align: center;">  </p> <p style="text-align: center;">       .. Enable / Disable        :.....until the desired jack number (01 through 32) appears     </p> <table border="1" data-bbox="418 421 1312 570"> <tr> <td rowspan="2"></td> <td>Default</td> <td colspan="16">To make program change</td> </tr> <tr> <td>all jack numbers</td> <td colspan="16">Jack number</td> </tr> <tr> <td></td> <td></td> <td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td> </tr> <tr> <td>Enable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table> <table border="1" data-bbox="418 604 1188 753"> <tr> <td rowspan="2"></td> <td colspan="16">To make program change</td> </tr> <tr> <td colspan="16">Jack number</td> </tr> <tr> <td></td> <td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td> </tr> <tr> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>		Default	To make program change																all jack numbers	Jack number																		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	Enable																		Disable	×																		To make program change																Jack number																	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	Enable																	Disable																
	Default	To make program change																																																																																																																																																																													
	all jack numbers	Jack number																																																																																																																																																																													
		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16																																																																																																																																																														
Enable																																																																																																																																																																															
Disable	×																																																																																																																																																																														
	To make program change																																																																																																																																																																														
	Jack number																																																																																																																																																																														
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																																																																																																																																															
Enable																																																																																																																																																																															
Disable																																																																																																																																																																															
Call Forwarding to Outside Line	66	<p style="text-align: center;">  </p> <p style="text-align: center;">       .. Enable / Disable        :.....until the desired jack number (01 through 32) appears     </p> <table border="1" data-bbox="418 938 1312 1087"> <tr> <td rowspan="2"></td> <td>Default</td> <td colspan="16">To make program change</td> </tr> <tr> <td>all jack numbers</td> <td colspan="16">Jack number</td> </tr> <tr> <td></td> <td></td> <td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td> </tr> <tr> <td>Enable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table> <table border="1" data-bbox="418 1121 1188 1270"> <tr> <td rowspan="2"></td> <td colspan="16">To make program change</td> </tr> <tr> <td colspan="16">Jack number</td> </tr> <tr> <td></td> <td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td> </tr> <tr> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>		Default	To make program change																all jack numbers	Jack number																		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	Enable																		Disable	×																		To make program change																Jack number																	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	Enable																	Disable																
	Default	To make program change																																																																																																																																																																													
	all jack numbers	Jack number																																																																																																																																																																													
		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16																																																																																																																																																														
Enable																																																																																																																																																																															
Disable	×																																																																																																																																																																														
	To make program change																																																																																																																																																																														
	Jack number																																																																																																																																																																														
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																																																																																																																																															
Enable																																																																																																																																																																															
Disable																																																																																																																																																																															
Executive Override	67	<p style="text-align: center;">  </p> <p style="text-align: center;">       .. Enable / Disable        :.....until the desired jack number (01 through 32) appears     </p> <table border="1" data-bbox="418 1457 1312 1606"> <tr> <td rowspan="2"></td> <td>Default</td> <td colspan="16">To make program change</td> </tr> <tr> <td>all jack numbers</td> <td colspan="16">Jack number</td> </tr> <tr> <td></td> <td></td> <td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td> </tr> <tr> <td>Enable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td>×</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table> <table border="1" data-bbox="418 1640 1188 1789"> <tr> <td rowspan="2"></td> <td colspan="16">To make program change</td> </tr> <tr> <td colspan="16">Jack number</td> </tr> <tr> <td></td> <td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td> </tr> <tr> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>		Default	To make program change																all jack numbers	Jack number																		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	Enable																		Disable	×																		To make program change																Jack number																	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	Enable																	Disable																
	Default	To make program change																																																																																																																																																																													
	all jack numbers	Jack number																																																																																																																																																																													
		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16																																																																																																																																																														
Enable																																																																																																																																																																															
Disable	×																																																																																																																																																																														
	To make program change																																																																																																																																																																														
	Jack number																																																																																																																																																																														
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																																																																																																																																															
Enable																																																																																																																																																																															
Disable																																																																																																																																																																															

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																																																																																																															
Do not Disturb Override	68	<p> </p> <table border="1" data-bbox="427 442 1317 587"> <thead> <tr> <th rowspan="2"></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>all jack numbers</th> <th colspan="16">Jack number</th> </tr> <tr> <th></th> <th></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th> </tr> </thead> <tbody> <tr> <td>Enable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <table border="1" data-bbox="427 608 1192 753"> <thead> <tr> <th rowspan="2"></th> <th colspan="16">To make program change</th> </tr> <tr> <th colspan="16">Jack number</th> </tr> <tr> <th></th> <th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th><th>27</th><th>28</th><th>29</th><th>30</th><th>31</th><th>32</th> </tr> </thead> <tbody> <tr> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																all jack numbers	Jack number																		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	Enable																		Disable	X																		To make program change																Jack number																	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	Enable																	Disable																																																																																		
	Default	To make program change																																																																																																																																																																																																																																															
	all jack numbers	Jack number																																																																																																																																																																																																																																															
		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16																																																																																																																																																																																																																																
Enable																																																																																																																																																																																																																																																	
Disable	X																																																																																																																																																																																																																																																
	To make program change																																																																																																																																																																																																																																																
	Jack number																																																																																																																																																																																																																																																
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																																																																																																																																																																																																																	
Enable																																																																																																																																																																																																																																																	
Disable																																																																																																																																																																																																																																																	
Ringing Assignment from Doorphone  Day Mode	70	<p> </p> <table border="1" data-bbox="427 1017 1422 1221"> <thead> <tr> <th rowspan="2"></th> <th>Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th>all jack numbers</th> <th colspan="16">Jack number</th> </tr> <tr> <th></th> <th></th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Doorphone 1</td> <td>Enable</td> <td>X</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td rowspan="2">Doorphone 2</td> <td>Enable</td> <td>X</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <table border="1" data-bbox="427 1251 1297 1455"> <thead> <tr> <th rowspan="2"></th> <th colspan="16">To make program change</th> </tr> <tr> <th colspan="16">Jack number</th> </tr> <tr> <th></th> <th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th><th>27</th><th>28</th><th>29</th><th>30</th><th>31</th><th>32</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Doorphone 1</td> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td rowspan="2">Doorphone 2</td> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>		Default	To make program change																all jack numbers	Jack number																		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	Doorphone 1	Enable	X																Disable																	Doorphone 2	Enable	X																Disable																		To make program change																Jack number																	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	Doorphone 1	Enable																Disable																Doorphone 2	Enable																Disable															
	Default	To make program change																																																																																																																																																																																																																																															
	all jack numbers	Jack number																																																																																																																																																																																																																																															
		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16																																																																																																																																																																																																																																
Doorphone 1	Enable	X																																																																																																																																																																																																																																															
	Disable																																																																																																																																																																																																																																																
Doorphone 2	Enable	X																																																																																																																																																																																																																																															
	Disable																																																																																																																																																																																																																																																
	To make program change																																																																																																																																																																																																																																																
	Jack number																																																																																																																																																																																																																																																
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																																																																																																																																																																																																																	
Doorphone 1	Enable																																																																																																																																																																																																																																																
	Disable																																																																																																																																																																																																																																																
Doorphone 2	Enable																																																																																																																																																																																																																																																
	Disable																																																																																																																																																																																																																																																

TO SET	PROGRAM ADDRESS	STEPS REQUIRED TO CHANGE PROGRAM																																																																																																																																																																																																																																																										
Ringing Assignment from Doorphone (cont.)  Night Mode	<b>71</b>	<p>             another doorphone number              other jack number  <b>NEXT NEXT → SELECT MEMORY END</b>              ..... Enable / Disable              ..... until the desired jack number (01 through 32) appears              ..... until the desired doorphone number (1 or 2) appears           </p> <table border="1" data-bbox="412 470 1419 674"> <thead> <tr> <th colspan="2" rowspan="2"></th> <th rowspan="2">Default</th> <th colspan="16">To make program change</th> </tr> <tr> <th colspan="16">Jack number</th> </tr> <tr> <th colspan="2"></th> <th>all jack numbers</th> <th>01</th><th>02</th><th>03</th><th>04</th><th>05</th><th>06</th><th>07</th><th>08</th><th>09</th><th>10</th><th>11</th><th>12</th><th>13</th><th>14</th><th>15</th><th>16</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Doorphone 1</td> <td>Enable</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td rowspan="2">Doorphone 2</td> <td>Enable</td> <td>X</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <table border="1" data-bbox="412 701 1289 905"> <thead> <tr> <th colspan="2" rowspan="2"></th> <th colspan="16">To make program change</th> </tr> <tr> <th colspan="16">Jack number</th> </tr> <tr> <th colspan="2"></th> <th>17</th><th>18</th><th>19</th><th>20</th><th>21</th><th>22</th><th>23</th><th>24</th><th>25</th><th>26</th><th>27</th><th>28</th><th>29</th><th>30</th><th>31</th><th>32</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Doorphone 1</td> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td rowspan="2">Doorphone 2</td> <td>Enable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>Disable</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table>			Default	To make program change																Jack number																		all jack numbers	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	Doorphone 1	Enable	X																	Disable																		Doorphone 2	Enable	X																	Disable																				To make program change																Jack number																		17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	Doorphone 1	Enable																	Disable																	Doorphone 2	Enable																	Disable																
		Default				To make program change																																																																																																																																																																																																																																																						
			Jack number																																																																																																																																																																																																																																																									
		all jack numbers	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16																																																																																																																																																																																																																																										
Doorphone 1	Enable	X																																																																																																																																																																																																																																																										
	Disable																																																																																																																																																																																																																																																											
Doorphone 2	Enable	X																																																																																																																																																																																																																																																										
	Disable																																																																																																																																																																																																																																																											
		To make program change																																																																																																																																																																																																																																																										
		Jack number																																																																																																																																																																																																																																																										
		17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																																																																																																																																																																																																																											
Doorphone 1	Enable																																																																																																																																																																																																																																																											
	Disable																																																																																																																																																																																																																																																											
Doorphone 2	Enable																																																																																																																																																																																																																																																											
	Disable																																																																																																																																																																																																																																																											
Call on Hold for Standard Telephone	<b>91</b>	<p> <b>NEXT SELECT MEMORY END</b>              ..... Hold-1/Hold-2           </p> <table border="1" data-bbox="412 1052 1019 1150"> <thead> <tr> <th colspan="2"></th> <th>Default</th> <th>To make program change</th> </tr> </thead> <tbody> <tr> <td>Hold-1</td> <td></td> <td>X</td> <td></td> </tr> <tr> <td>Hold-2</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>			Default	To make program change	Hold-1		X		Hold-2																																																																																																																																																																																																																																																	
		Default	To make program change																																																																																																																																																																																																																																																									
Hold-1		X																																																																																																																																																																																																																																																										
Hold-2																																																																																																																																																																																																																																																												
System Data Clear	<b>99</b>	<ul style="list-style-type: none"> <li>All Parameters</li> <li>System Parameter</li> <li>Speed Call</li> </ul> <p> <b>NEXT SELECT MEMORY END</b>              ..... All Para / System Para / CO Para / EXT Para / DSS Para / Speed Call           </p> <ul style="list-style-type: none"> <li>CO Parameter</li> </ul> <p> <b>NEXT SELECT MEMORY AB MEMORY END</b>              .....dial CO number (01 through 12)              ..... until the CO Para appears           </p> <ul style="list-style-type: none"> <li>Extension Parameter</li> </ul> <p> <b>NEXT SELECT MEMORY AB MEMORY END</b>              .....dial jack number (01 through 32)              .....until the EXT Para appears           </p> <ul style="list-style-type: none"> <li>DSS Parameter</li> </ul> <p> <b>NEXT SELECT MEMORY A MEMORY END</b>              .....dial DSS number (1 or 2)              ..... until the DSS Para appears           </p>																																																																																																																																																																																																																																																										

KTS



A to Z KELLATRONICS, Inc.

Tel: 800/663-2225  
 email: info@kellatronics.com Fax: 818/733-8899

# INDEX

Programming	Page	
<b>A.</b> Account Code Input Mode .....	3-70	<b>E.</b> Exchange Code Selection .....
Area Code Entry For Class 3 .....	3-22	Exchange Code Entry For Class 5 .....
Area Type Selection .....	3-18	Exchange Code Entry For Class 7 .....
Automatic CO Hold Using DSS Button .....	3-11	Executive Override .....
<b>C.</b> Call Forwarding Starting Time .....	3-28	Extension Name .....
Call Forwarding To Outside Line .....	3-7 2	Extension Number Assignment .....
Call Hunting .....	3-15	Extension Group Assignment .....
Call on Hold for Standard Telephone .....	3-77	External Paging Access Tone .....
Call Transfer To Outside line .....	3-71	<b>H.</b> Hold Recall Time Set .....
Calling Party Control (CPC) Signal .....	3-6 1	Hold Time Reminder .....
CO Connection Assignment .....	3-42	Hookswitch Flash Timing .....
CO Direct In Line (Day Mode) .....	3-54	Host PBX Access Codes Assignment .....
CO Direct In Line (Night Mode) .....	3-57	Hunting Type .....
CO Operator Call-Boundary Class .....	3-19	<b>I.</b> Incoming / Outgoing Call Selection For Printing .....
CO-to-CO Duration Time Limit .....	3-30	<b>O.</b> Operator Assignment .....
<b>D.</b> Date and Time Setting .....	3-4	Outward Dialing Assignment (Day Mode) .....
Day/ Night Service (Switching Mode) .....	3-12	Outward Dialing Assignment (Night Mode) .....
Day / Night Service (Starting Time) .....	3-13	<b>P.</b> Paired Telephone Assignment For DSS Console .....
Delayed Ringing Assignment (Day Mode) .....	3-5 2	Pause Time Assignment .....
Delayed Ringing Assignment (Night Mode) .....	3-5 3	Pickup Dial Delay Time .....
Dial Mode (DTMF/ Pulse) Selection .....	3-4 3	Pulse Speed Selection .....
Direct In Line (Day Mode) .....	3-54	<b>R.</b> Ringing Assignment (Day Mode) .....
Direct In Line (Night Mode) .....	3-57	Ringing Assignment (Night Mode) .....
Disconnect Time .....	3-62	RS-232C Communication Parameters .....
Do Not Disturb Override .....	3-74	<b>S.</b> Secret Speed Dial / One Touch Dial Printing .....
Doorphone (Day Mode) .....	3-75	SMDR Parameters .....
Doorphone (Night Mode) .....	3-76	Starting Time (Day/ Night Service) .....
DSS Console (Paired Telephone Assignment) .....	3-10	Station Message Detail Recording (SMDR) .....
Duration Time Count Start Mode .....	3-40	System Data Clear .....
		System Data Dump .....
		System Speed Dialing Entry .....
		Switching of Day/ Night Service Mode .....
		<b>T.</b> Toll Restriction .....
		Toll Restriction-Class Assignment (Day Mode) .....
		Toll Restriction-Class Assignment (Night Mode) .....
		Toll Restriction of Speed Dialing .....
		Transfer Recall Time .....
		Trunk Group Assignment .....

## Operation for EMSS Proprietary Telephone

<b>A.</b> Absent Message Capability .....	4-34	<b>D.</b> Data Line Security .....	4-41
Account Code .....	4-39	Date and Time Setting .....	4-59
Answer .....	4-10	Dial Call Pickup .....	4-11
Auto CO Hunting		Dial Call Pickup Deny .....	4-29
(Idle Line Preference-Outgoing) .....	4-50	Dial Tone .....	4-6
(Prime Line Preference-Outgoing) .....	4-49	Directed Call Pickup .....	4-11
Automatic Answer-Intercom .....	4-10	Do Not Disturb .....	4-30
Automatic Answering Selection		Do Not Disturb Override .....	4-31
(No Line preference-Incoming) .....	4-52	Doorphone (Calling) .....	4-6
(Prime Line preference-Incoming) .....	4-51	Doorphone (Receiving Call) .....	4-13
Automatic Call Back Busy (Camp-On) .....	4-7	DSS Button	
<b>B.</b> Background Music .....	4-33	(To change into message waiting button) .....	4-58
Barge-In .....	4-9	(To change into one touch dialing button) .....	4-57
Busy Lamp Field .....	4-46	(To change into other DSS numbers) .....	4-57
Busy Station <b>Signaling</b> .....	4-8	DSS Console .....	4-43
<b>C.</b> Call Forwarding-All Calls/ Busy or No Answer .....	4-26	Duration Time of Call Display .....	4-47
Call Forwarding-To Outside Line .....	4-28	<b>E.</b> Executive Override .....	4-9
Call on Exclusive Hold .....	4-15	Executive Override <b>Deny</b> .....	4-32
Call on Hold .....	4-14	External Feature Access .....	4-38
Call Park .....	4-12	<b>F.</b> F3-One Touch Button Mode Selection .....	4-60
Call Splitting-Between CO and Intercom .....	4-21	<b>I.</b> Inter Office Calling (Intercom) .....	4-1
Call Splitting-Intercom .....	4-22	Intercom Voice Alerting Mode .....	4-56
Call Transfer-To Extension .....	4-18	<b>L.</b> Last Number Redial .....	4-8
Call Transfer-To Outside Line .....	4-19	Lockout .....	4-47
Call <b>Waiting</b> .....	4-20	<b>M.</b> Message Waiting .....	4-36
Call Waiting Tone Deny .....	4-42	Mixed Station Dialing .....	4-47
Call Waiting Tone Selection .....	4-61	Mute Operation .....	4-22
Calling Doorphone .....	4-6	<b>N.</b> Night Service .....	4-37
Camp-on (Automatic Call Back Busy) .....	4-7		
CO Button			
(To assign into trunk group access number) .....	4-53		
(To change into DSS button) .....	4-54		
(To change into message waiting button) .....	4-55		
(To change into one touch dialing button) .....	4-54		
(To change into other all CO numbers) .....	4-55		
(To change into other CO numbers) .....	4-53		
CO Line Ringing Selection .....	4-58		
Conference .....	4-16		

## Operation for a Standard Telephone

<b>O.</b> One Touch Access for System Features.. .....	4-48	<b>A.</b> Absent Message Capability .. .....	5-13
One Touch Button (F3) Mode Selection .....	4-60	Account Code .. .....	5-10
One Touch Dialing. ....	4-4	Answer .. .....	5-3
Operator Call .. .....	4-6	Automatic Call Back Busy (Camp-on). ....	5-2
Outward Dialing (Automatic Line Access). ....	4-2	<b>B.</b> Busy Station Signaling .. .....	5-2
Outward Dialing (Individual Line Access).....	4-2	<b>C.</b> Call Forwarding-All Calls .. .....	5-12
Outward Dialing		Call Forwarding-Busy / No Answer .. .....	5-12
(Individual Trunk Group Access).....	4-3	Call Forwarding-To Outside Line .. .....	5-13
<b>P.</b> Paging All Extensions .. .....	4-23	Call on Hold .. .....	5-4
Paging and Transfer .. .....	4-25	Call Park .. .....	5-4
Paging-Answer .. .....	4-25	Call Splitting ... .. .....	5-6
Paging-External .. .....	4-24	Call Transfer .. .. .....	5-6
Paging Group .. .....	4-24	Call Waiting.. .. .....	5-5
Power Failure Transfer .. .....	4-47	Call Waiting Tone Deny.. .. .....	5-15
Privacy Release .. .....	4-17	Camp-on (Automatic Call Back Busy) .. .....	5-2
Pulse / Tone Conversion .. .....	4-45	Conference.. .. .....	5-5
<b>R.</b> Ring Tone.. .. .....	4-13	<b>D.</b> Data Line Security.....	5-16
Ring Selection .. .....	4-58	Dial Call Pickup .. .. .....	5-3
<b>S.</b> Saved Number Redial .. .....	4-31	Dial Call Pickup Deny .. .. .....	5-11
Speed Dialing .. .....	4-3	Directed Call Pickup .. .. .....	5-3
Station Number Check .. .. .....	4-60	Do Not Disturb .. .. .....	5-11
Station Feature Clear .. .. .....	4-45	Do Not Disturb Override .. .. .....	5-9
Station Program Clear .. .. .....	4-61	Doorphone (Receiving Call) .. .. .....	5-4
Switching between Using Handset and		Doorphone (Calling). .. .. .....	5-1
Hands-free .. .. .....	4-23	<b>E.</b> Executive Override (Barge-In) .. .. .....	5-3
Switching to Tone Alerting .. .. .....	4-33	Executive Override Deny.. .. .....	5-15
<b>T.</b> Tone Alerting .. .. .....	4-33	External Feature Access .. .. .....	5-9
<b>V.</b> Voice Alerting Mode .. .. .....	4-56	<b>I.</b> Inter Office Calling (Intercom).....	5-1
		<b>L.</b> Last Number Redial .. .. .....	5-2
		<b>O.</b> Operator Call .. .. .....	5-1
		Outward Dialing (Automatic Line Access) .. .....	5-1
		Outward Dialing	
		(Individual Trunk Group Access).....	5-1
		<b>P.</b> Paging All Extensions .. .. .....	5-7
		Paging and Transfer .. .. .....	5-8
		Paging-Answer .. .. .....	5-8
		Paging-External .. .. .....	5-7
		Paging Group .. .. .....	5-7
		Pickup Dial .. .. .....	5-17
		<b>S.</b> Speed Dialing .. .. .....	5-1
		Station Feature Clear .. .. .....	5-16
		Switching to Tone Alerting.. .. .....	5-9