
ELECTRONIC MODULAR SWITCHING SYSTEM KX-T30810

Installation and Operation Manual for Added and Changed Features

Please read this Manual first and then another Installation Manual for programming.

This manual is available for KX-T30810 which has the mark 3 on the plate as shown below.

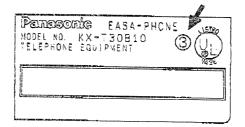


Note:


- 1. For KX-T7020, 7030, 7050 and 7130, press the "STORE" key instead of "MEMORY" key.
- 2. For KX-T7020, 7030, 7050 and 7130, press the "AUTO ANSWER" key instead of "AUTO ANS" key.
- 3. For the Features of Flexible keys, refer to this manual.
- 4. Extension 11 should be connected to KX-T30830, 7030 and 7130 for programming system data.
- 5. All the programming procedures described in the Installation Manual have been modified. Delete step 2 "Press the NEXT button" from every feature of the programming in another Installation Manual. For further detail, see page 3 of this manual. This manual describes the revised procedures from which step 2 has already been deleted.

When the System Program Switch on the KX-T30810 is set to the PROGRAM position, the operation of the KX-T7030 and the KX-T7130 connected to extension 11 will change as follows.


KX-T7030

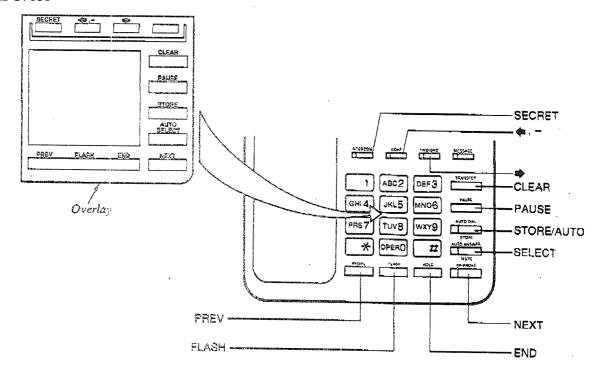

KX-T7130

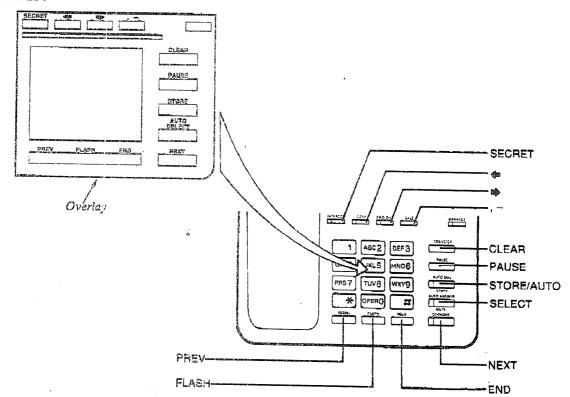

Automatic Designatell CO Lime Access

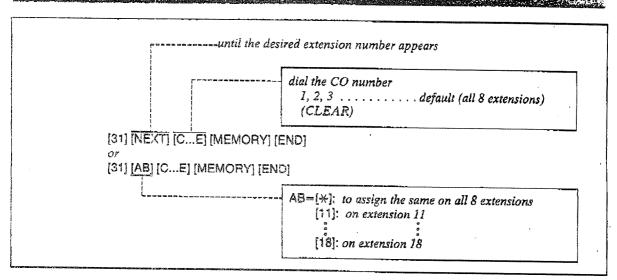

Description

Through programming, you can select which CO Line is accessed automatically when you dial 9 to use the "Automatic Line Access" feature or you use the "Auto CO Hunting" feature.

Programming

- 1. Dial (31).
 "ENTER EXT NO" will be displayed.
- 2. Press the NEXT button.
 "11:CO 1, 2, 3" will be displayed and "1, 2, 3" will blink.
- 3. Dial the CO numbers to be entered.

 To cancel the entered CO Number, press the CLEAR button.
- 4. Press the MEMORY button. The LCD will stop blinking.
- 5. Repeat steps 2 to 4, to program the assignment of the other extensions.
- 6. To return to the initial programming mode, press the END button.

Conditions


- When you start the programming from step 1, you may dial the desired extension number instead of NEXT button at step 2.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.

Operation

The programmed CO line will be selected after dialing 9 automatically.

Programming Table See page 38.

Standard Telephone Connection with Brogniziany Weleyhone

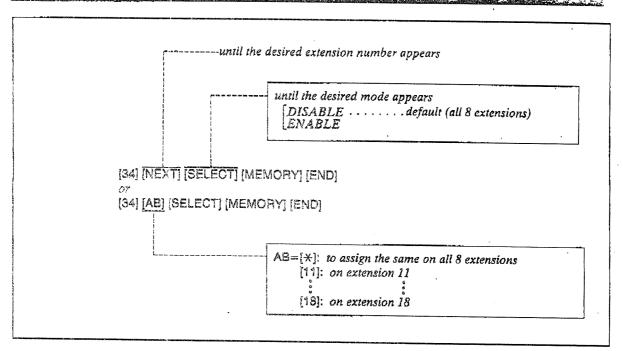

Description

You can select whether the standard telephone which is connected in parallel with the proprietary telephone works or not.

ENABLE The standard telephone works

DISABLE....The standard telephone does not work

Programming

- Dial (34).
 "ENTER EXT NO" will be displayed.
- Press the NEXT button until the desired extension number appears.
 "11:DISABLE" will be displayed and "DISABLE" will blink.
- 3. Press the SELECT button to alternate between ENABLE and DISABLE and select the desired mode.
- 4. Press the MEMORY button. The LCD will stop blinking.
- 5. Repeat steps 2 to 4, to program the assignment of the other extensions.


6. To return to the initial programming mode, press the END button.

Conditions

- *If you start the programming from step 1, you may dial the desired extension number instead of NEXT button at step 2.
- The PREV button allows you to return to the previous extension.
- When a call reaches to a KX-T30830, two types of ring will sound. This is normal and we recommend you to select DISABLE by programming if you do not use the standard telephone that is connected in parallel.

Programming Table

See page 38.

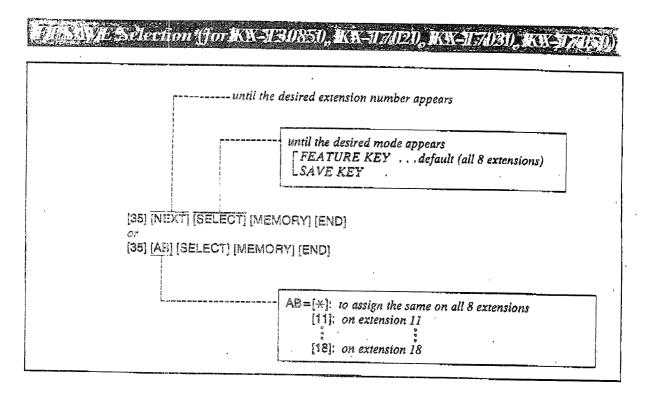

Description

The SAVE button is not provided with KX-T30850, KX-T7020, KX-T7030 and KX-T7050. F1 button can be changed from programmable feature button to SAVE button.

"FEATURE KEY" mode ...

programmable feature function
"SAVE KEY" mode ...

SAVE function

Programming

- Dial (35).
 "ENTER EXT NO" will be displayed.
- 2. Press the NEXT button.
 "11: FEATURE KEY" is displayed and the
 "FEATURE KEY" will blink.
- 3. Press the SELECT button to alternate between FEATURE KEY and SAVE KEY and select the desired mode.

- 4. Press the MEMORY button.
- 5. Repeat steps 2 to 4, to program SAVE button of the other extensions.
- 6. To return to the initial programming mode, press the END button.


Conditions

- *You may dial the desired extension number which needs SAVE button instead of NEXT button at siep 2.
- The PREV button allows you to go the previous extension for displaying the F1/SAVE selection.

Programmable Table

See page 38.

🏅 🖟 Andomatic Redial

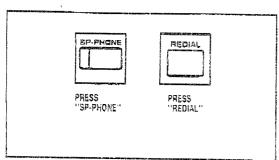

Description

The last phone number dialed on an outgoing call to CO line can be redialed up to 15 times. This feature is available for only KX-T7020, KX-T7030, KX-T7050 and KX-T7130.

Operation


- 1. Press the SP-PHONE button.
- 2. Press the REDIAL buston,

You may press the CO button to select the CO line directly after pressing the SP-PHONE button.

Conditions

- To cancel automatic redialing, press the FLASH button.
- Pressing the REDIAL or SAVE button allows you to:
- -Redial once when using the handset.
- -Redial up to 15 times within 10 minutes when using the Redial feature with the SP-PHONE button.

Flexible CO Button

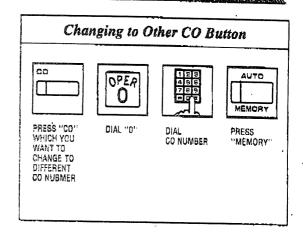

Description

Allows each CO button number to be changed to a different CO number.

Operation

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".
- I. Press the CO button which you want to change to different CO number.

 When pressing CO I button, "CO I" will be displayed.
- 2. Dial (0).
 "CO" will be displayed.
- 3. Dial the new CO number (1 through 3). When dialing (2), "CO 2" will be displayed.
- 4. Press the MEMORY button.
- *After programming, return the MEMORY switch to the "SET" position.


Conditions

If you program the same CO number as another CO button, the original one will be cleared.

Initial assignment (default) for the flexible buttons is as follows:

CO1 button...CO1 CO7 button...DSS13
CO2 button...CO2 CO8 button...DSS14
CO3 button...CO3 CO9 button...DSS15
CO4 button...not stored
CO5 button...DSS11 CO11 button...DSS17
CO6 button...DSS12 CO12 button...DSS18

Flexible CO Button (cont.)

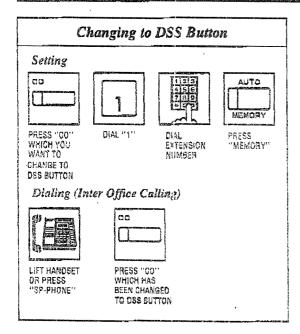

Description

Allows each CO button to change to a DSS (Direct Station Selection) button, DSS button can be used instead of dialing an extension number.

Operation

Setting

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".
- 1. Press the CO button which you want to change to a DSS button.


 When pressing the CO 1, "CO 1" will be displayed.
- 2. Dial (I).
 "EXT" will be displayed.
- 3. Dial the extension number (11 through 18). When dialing (11), "EXT 11" will be displayed.
- 4. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

Dialing (Inter Office Calling)

- 1. Lift the handset or press the SP-PHONE but-
- 2. Press the CO button which has been changed to DSS button.

Condition

If you program the same extension number as another CO or DSS button, the original one will be cleared.

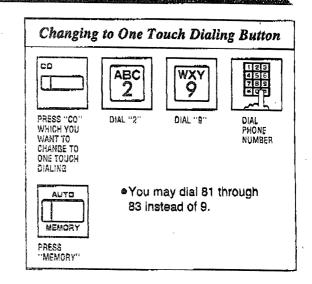


Description

Allows each CO button to be used as a one touch dialing memory location. Up to 16 digits can be stored in each of the CO buttons.

Operation

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".
- Press the CO button which you want to use as a one touch dialing memory location.
 When pressing CO 1 button, "CO 1" will be displayed.
- 2. Dial (2).
- 3. Dial (9).
 - Vou may dial 81 through 83 instead of 9 to select the desired trunk.
- 4. Dial the phone number.
- 5. Press the MEMORY button.
 - *After programming, return the MEMORY switch to the "SET" position.

Flexible DSS Button (for KX-T30830)

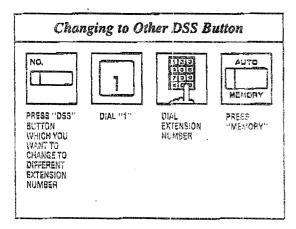

Description

Allows each DSS button to change to an extension number which is different from the default extension number.


Operation

Semine

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- •Set the MEMORY switch to "PROGRAM".
- 1. Press the DSS button which you want to change to a different extension number.
- 2. Dial (1).
- 3. Dial the new extension number (11 through 18).
- 4. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

Condition

If you program the same extension number as another CO or DSS button, the original one will be cleared.

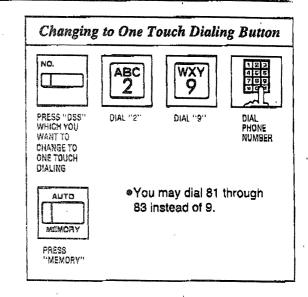

Description

Allows each DSS button to be used as a one touch dialing memory location. Up to 16 digits can be stored in each DSS button.

Operation


- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch to "PROGRAM",
- 1. Press the DSS button which you want to use as a one touch dialing memory location.
- 2. Dial (2).
- 3. Dial (9).
 - You may dial 81 through 83 instead of 9 to select the desired trunk.
- 4. Dial the phone number.
- 5. Press the MEMORY button.
 - *After programming, return the MEMORY switch to the "SET" position.

Auto CO Humbing

Setting



LIFT HANDSET OR PRESS "SELPHONE"

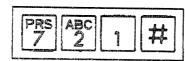

DIAL "721#"




HANG UP OR PRESS "SP-PHONE"

To cance!



PALISS "ICM"

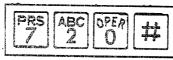

DIAL "720#"



PRESS

Dialing through CO line



Lift the Handset Or Press "5">PHONE"



WAIT FOR THE



DIAL THE PHONE

Description

Allows an extension user to access any CO line which is not in use directly by picking up the handset or the speakerphone on and tells the user which is the accessed line by lighting the CO line indicator.

Operation

Setting

- 1. Lift the handset or press the SP-PHONE button.
- 2. Dial (721#).

 Wait for confirmation tone.

 "AUTO CO HUNT ON" will be displayed.
- 3. Hang up or press the SP-PHONE button.

To cancel

- I. Press the INTERCOM button.
- 2. Dial (720#).
 Wait for confirmation tone.
 "AUTO CO HUNT OFF" will be displayed.

3. Press the SP-PHONE button.

Dialing through CO line

- I. Lift the handset or press the SP-PHONE button. Dial tone from CO will be heard.
- 2. Dial the phone number.
- When you access an extension in the Auto CO Hunting, press the ICM button after lifting the handset or pressing the SP-PHONE button.

Condition

Standard telephone is not available.

Note:

To operate features after setting "Auto CO Hunting", press the ICM button instead of lifting the handset at step 1 in the procedures described in the Installation Manual or this manual and then proceed to step 2. The reason to press the ICM button instead of lifting the handset is because lifting the handset causes the line to be connected to a CO line.

System Speed Calling Entry (See page 2-5 in another Installation Manual)

The number of speed calling entry is changed to 80 phone numbers each with up to 32 digits.


Programming Secret Auto Dial (See page 2-37 in another Installation Manual)

The program address number [30] is changed to [29].

One Touch Dialing (See page 3-4 in another Installation Manual)

Storage for one touch dialing is changed from "Up to 32 digits" to "Up to 16 digits".

Hold Recall Time Set

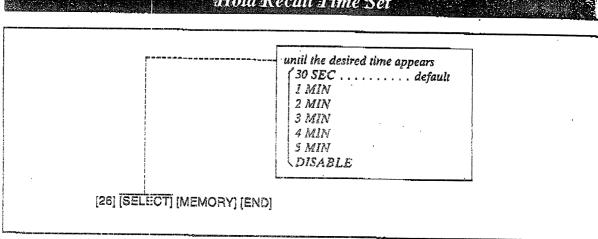

Description

This will inform you that you keep holding the line by ringing, after the time passes.

Programming

- I. Dial (26).
 - "TIME: 30 SEC" will be displayed and "30 SEC" will blink.
- 2. Keep pressing the SELECT button until the desired time is displayed.
- 3. Press the MEMORY button.
- 4. To return to the initial programming mode, press the END button.

Example:

2 minutes=[26] [SELECT] [SELECT] [MEMORY] [END]

Programming Table

See page 37.

PROGRAMMING TABLE

| TO SET | PROGRAM ADDRESS | STEPS REQUIRED TO CHANGE PROGRAM | | | | | | | |
|---|-----------------------------|---|--|--|--|--|--|--|--|
| Date and Time | [00] | [A] [\iff] [SELECT] [\iff] [B] [\iff] [SELECT] [\iff] [C] [\iff] [D] [\iff] [SELECT] [MEMORY] [END] L-year L-month L-day L-minute LAM/PM day of the week | | | | | | | |
| System Speed Calling Entry | [31] <i>or</i> [AUTO] | [AB] [CD] [phone number] [MEMORY] [8]: automatic line access number [81] through [83]: outside line access number [00] through [79]: speed access code *To advance to the next code. [SELECT] [AB] [CD] [phone number] [MEMORY] *To exit the speed calling entry, press [END]. | | | | | | | |
| Sysiem Speed Calling —Class Assignment | (03) | SELECT [MEMORY] [END] until the desired boundary class appears Default | | | | | | | |
| Dial Mode (Tone/Pulse) Selection | [03] | [NEXT] [SELECT] [MEMORY] [END] | | | | | | | |
| Switching Mode (Day/Night Service) | [04] | [SELECT] [MEMORY] [END] | | | | | | | |
| Starting Time (Day/Time) | [05] | [A] [B] [B] [SELECT] [MEMORY] [NEXT] [O] [D] [D] [SELECT] [MEMORY] [END —— minute ———————————————————————————————————— | | | | | | | |
| Flexible Day Outward Dialing Assignment | [06] | NEXT] [CE] [MEMORY] [END] | | | | | | | |
| Flexible Night Outward Diciling Assignment | [07] | NEXT] [CE] [MEMORY] [END] Le | | | | | | | |

PROGRAMMING TABLE (cont.)

| TO SET | PROGRAM ADDIESS | STEPS | REQU | IRED 7 | ro | CH | AΝ | GE | P | RO | GR | AN |
|---|--------------------|--|--|-------------------------------|---|--|--|--------------|----------|----------|--------------|--|
| Flexible Day Ringing | [03] | [NEXT] [CE] [MEMO | RYI (ENDI | | | | | | | | | |
| Assignment | | CO numberuntil the desired extension number appears | | | | | | | | | | |
| | | ===uniii ine aesire | ed extension | | pears | | | | - | | | |
| | | F | | Default | - | | | ke pro | | _ | _ | |
| | | Extensions CO I | a | ll extensions × | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |
| | | CO 2 | | × | + | | | | | - | | |
| | | CO 3 | | × | | | | | | | | |
| Flexible Night Ringing Assignmen! | [03] | [NEXT] [CE] [MEMO | number | | | | ************************************** | | | | | |
| | | until the desire | ed extension | number app | pears | | | | | | | |
| | | | | Default | | · | To ma | ke pro | gram. | chang | e | |
| | | Extensions | a | ll extensions | 11 | 13 | 13 | 14 | 15 | 16 | 17 | 18 |
| | | CO 2 | <u>}</u> | × | - | | | | ļ | - | | ļ |
| | | CO3 | | × | +- | | | | | - | ├ | - |
| Toll Restriction—Class | [10] | [NEXT] [SELECT] [ME | SACONIE | L : P-1 | *************************************** | - | - | | | <u> </u> | | |
| Assignment | (10) | until the desire | ASS 1/2/3 | | pears | | | | | | | |
| | | | | Default | I | *** | To ma | ke pro | eram : | chang | | |
| | | Extensions | 0 | li extensions | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |
| | | Class I Ciass 2 | | × | ļ | | | | <u> </u> | | | |
| | | Class 3 | | | + | - | | | | | - | <u> </u> |
| Toll Restriction—Denied | tens | | A FRIA LEL | | <u> </u> | | | | <u> </u> | | | |
| Code Assignment | | NEXT] [C] [MEMORY Lphone nu | mber with | 7 digits location nun | ahar a | nnaa | 76 | | | | | , |
| | - | | | | iemory | | | | | | | |
| | | THE PERSON NAMED IN COLUMN TWO PARTY OF PERSON NAMED IN | Øΰ | 01 | Embry | 02 02 | on nui | | 03 | | 04 | |
| | i | 1 | | PARTY NAME OF TAXABLE PARTY. | | | | | | | - 77 | |
| | | | | İ | | - | | ************ | | | | |
| | | | | | | The sale of the sa | | N | | | | |
| | | | os | 06 | | 07 | | | 08 | | 09 | : |
| | | Phone number | 05 | 06 | | | | | 08 | | 09 | ······································ |
| | | Phone number entry | | | | 07 | | | 08 | | 09 | : |
| | | | 05 | 06 | | | | | 08 | | 09 | |
| | | | | | | 07 | | | | | | |
| | | | 10 | | | 07 | | | 13 | | 14 | |
| | | | | | | 07 | | | | | | |
| | | | 10 | | | 07 | | | 13 | | 14 | |
| | | entry | 10 | | | 07 | | | 13 | | 14 | |
| | [12] | entry [NEXT] [C] [MEMORY | 10 15 | 11 | | 07 | | | 13 | | 14 | |
| Exceptional Code | [12] | Entry [NEXT] [CI [MEMORY] 1 | 10 15 [END] | 11 16 16 7 dieits | bara | 07 13 | | | 13 | | 14 | |
| Exceptional Code | [12] | entry [NEXT] [C] [MEMORY | 10 15 [END] | 16 16 7 digits location num | | 17 17 | | | 13 | | 14 | |
| Toll Restriction— Exceptional Code Assignment | [12] | Entry [NEXT] [CI [MEMORY] 1 | 10 15 [END] | 16 16 7 digits location num | iber a | 07 12 17 17 17 10cati | | nber | 13 | | 14 | |
| Exceptional Code | [12] | Entry [NEXT] [CI [MEMORY] 1 | 10 15 [IEND] mber with 1 d memory | 16 16 7 digits location num | | 17 17 | | nber | 13 | | 14 | |
| Exceptional Code | [12] | Entry [NEXT] [CI [MEMORY] 1 | 10 15 [IEND] mber with 1 d memory | 16 16 7 digits location num | | 07 12 17 17 17 10cati | | nber | 13 | | 14 | |
| xceptional Code | [12] | Entry [NEXT] [CI [MEMORY] 1 | 10 15 [IEND] mber with 1 d memory | 16 16 7 digits location num | | 07 12 17 17 17 10cati | | nber | 13. | | 14 | |
| Exceptional Code | (12) | [NEXT] [C] [MEMORY Lphone nu | 10 15 [END] mber with 7 d memory | 7 digits location num | | 07 13 17 17 ppearlicati | | nber | 13 | | 14 | |
| Exceptional Code | 1121 | Entry [NEXT] [CI [MEMORY] 1 | 10 15 [END] mber with 7 d memory | 7 digits location num | | 07 13 17 17 ppearlicati | | nber | 13. | | 14 | |
| Exceptional Code | [12] | [NEXT] [C] [MEMORY L-phone null the desire Phone number | 10 15 [END] mber with 7 d memory | 7 digits location num | | 07 13 17 17 ppearlicati | | nber | 13. | | 14 | |
| Exceptional Code | [12] | [NEXT] [C] [MEMORY L-phone null the desire Phone number | IS [END] mber with 7 d memory 00 | 7 digits location num M 01 | | 07 12 17 17 17 18 18 18 18 19 19 19 19 19 19 19 19 19 19 19 19 19 | | nber | 13. | | 14 | |
| Exceptional Code | [12] | [NEXT] [C] [MEMORY L-phone null the desire Phone number | IS [END] mber with 7 d memory 00 05 | 7 digits location num M 01 06 | | 07 12 17 17 17 18 18 18 18 19 19 19 19 19 19 19 19 19 19 19 19 19 | | nber | 13. | | 14 | |
| Exceptional Code | [12] | [NEXT] [C] [MEMORY L-phone null the desire Phone number | IS [END] mber with 7 d memory 00 | 7 digits location num M 01 | | 07 12 17 17 17 18 18 18 18 19 19 19 19 19 19 19 19 19 19 19 19 19 | | nber | 13. | | 14 | |

| TO SET | PROGRAM ADDRESS | STEPS REQUIRED TO CHANGE PROGRAM | | | | | | | | | | |
|--|--------------------|---|---|-----------|--------------------------------|--------------------------------|--|--|--|--|--|--|
| HOST PBX Access Codes Assignment | [13] | [NEXT] [AD] [MEMORY] [END] Up to four outside access codes each with a maximum of 2 digitsuntil the desired CO numbers appears | | | | | | | | | | |
| | | CO Outside access codes of the host PBX | | | | | | | | | | |
| | | 2 | | | | | | | | | | |
| | | 3 | - | | | | | | | | | |
| Ausomatic Answering (Automatic/Manual) Selection | [14] | [NEXT] [SELECT] [MEMORY] [END] AUTO ANSWER/MAN ANSWER until the desired extension number appears | | | | | | | | | | |
| | | Default To make program change | ļ | | | | | | | | | |
| | | Extensions all satensions 11 12 13 14 15 16 17 18 | | | | | | | | | | |
| | | Automatic X Manual | .] | | | | | | | | | |
| | - | Lean year and the state of the | | | | | | | | | | |
| Preferred Line Assignment | [15] | [NEXT] [SELECT] [MEMORY] [END] | | | | | | | | | | |
| | | Default To make program change | | | | | | | | | | |
| | 1 | Extensions all extensions 11 12 13 14 15 16 17 18 | | | | | | | | | | |
| | | CO i | j | | | | | | | | | |
| | | COS | 1 | | | | | | | | | |
| | | CO3 | . [| | | | | | | | | |
| Programmable Call Waiting | [16] | [NEXT] [SELECT] [MEMORY] [END] LENABLE [DISABLE Luntil the desired extension number appears Defautt To make program change | | | | | | | | | | |
| | | i | Default To make program change Extensions 11 12 13 14 15 16 17 18 | | | | | | | | | |
| | | Disable × | | | | | | | | | | |
| | | Enable | | | | | | | | | | |
| Duration Time Count Start Mode | [17] | [SELECT] [MEMORY] [END] L INSTANTLYISS AFTER DIAL/10S AFTER DIAL | | | | | | | | | | |
| | | | | 4 | Default To make program change | | | | | | | |
| | | | | | | | | | | | | |
| | | SS after dial × 10S after dial | | | | | | | | | | |
| Hookswitch Flash Timing | [18] | [NEXT] [SELECT] [MEMORY] [END] | | | | | | | | | | |
| | | | | | | Default To make program change | | | | | | |
| | | CO (s) all CO's 1 2 3 | | | | | | | | | | |
| | | 600 msec × | | | | | | | | | | |
| | - | 500 mscc | İ | | | | | | | | | |
| Disconnect Time | [19] | [NEXT] [SELECT] [MEMORY] [END] 1.5 SECI4.0 SECuntil the desired CO number appears | | | | | | | | | | |
| | | Default CO (s) all CO's | | | | | | | | | | |
| | | | | • | | | | | | | | |
| | | | | 1.3 ces X | | | | | | | | |
| Calling Party Control (CPC) Signal | [20] | [NEXT] [SELECT] [MEMORY] [END] ENABLE DISABLE Lond London Lon | 4 | | | | | | | | | |
| , | | | | | | | | | | | | |
| | | CO (s) | | | | | | | | | | |
| | | Disable | | | | | | | | | | |
| | | | | | | | | | | | | |

PROGRAMMING TABLE (cont.)

| . TO SET | PROGRAM ADDRESS | STEPS RE | QUIRED | TO | CH | AN | GE | PI | RO | GR | AN | |
|--|--------------------|--|--|---------------|--|----------------------------|----------|--------------|-------------|----------|--|--|
| Intercom Alerting Mode | [21] | [NEXT] [SELECT] [MEMORY] [END] TONE CALL/VOICE CALLuntil the desired extension number appears | | | | | | | | | | |
| | | Comment of the second of the | Control of the Contro | | | | | | | | | |
| | | | Default | | | To mak | - | | | | | |
| | | Extensions | all extension | <u>is 11</u> | 12 | 13 | 14 | 15 | 16 | 17 | 18 | |
| | | Tone call | <u> </u> | | | | | | | | | |
| | 1 | Voice call | | | | <u> </u> | <u> </u> | | | | | |
| Programmable Doorphone | (2 2) | NEXT] [SELECT] [MEMORY] [END] D-PHONE 1, 2/1/2/+++ (deny the ringing) until the desired extension number appears | | | | | | | | | | |
| | | | Default | | | To mak | e pros | ram e | change | c . | | |
| | 1 | Extensions | all extension | ts 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | |
| | | Doorphone l | × | | 1 | | | | | - | | |
| | | Doorphone 2 | × | | | 1 | | - | | | — | |
| | İ | deny the ringing | 1 | | | + | | | - | - | | |
| | | Geny the Tinging | | | | 1 1 | | | L | | | |
| Dial Call Pickup Group Assignment | [23] | INEXT] [SELECT] [MEMOR LPICKUP]until the desired exte | -G:1/2/1, 2/· · | | | roup) | | | | | | |
| | | | Default | | | To mal | | | change | ٢ | | |
| | | Extensions | all extension | 15 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | |
| | 1 | Pickup Group 1 | × | | | | | | | | | |
| | - | Pickup Group 2 | | | | | | | | | | |
| | | out of the group | 1 | | _ | 1 | | | | | | |
| Busy Tone Selection | [24] | [SELECT] [MEMORY] [END | | | | | | | | | | |
| | | Tone 1 | × | | To make program change | | | | | | | |
| | | Tone 2 | | | ********** | | | | | | | |
| 4 | - | | | | | | | | | | | |
| | - | | 1 | | | | | | | | | |
| Door Opener Assignment | [25] | INEXT] [SELECT] [MEMOR | VER 1, 2/1/2/v ension number | | | | | , | | | | |
| Door Opener Assignment | [25] | until the desired ext | VER 1, 2/1/2/• ension number Default | appear. | 5 | To ma | | | ~~~ | 7 | T | |
| Door Opener Assignment | [25] | until the desired extensions | VER 1, 2/1/2/v ension number | appear. | 5 | To ma | ke pro | g ram | chang 16 | re 17 | 18 | |
| Door Opener Assignment | [25] | Until the desired extensions not assigned | VER 1, 2/11/2/- ension number <u>Default</u> all extensio | appear. | 5 | To ma | | | ~~~ | 7 | 18 | |
| Door Opener Assignment | [25] | Extensions not assigned Door opener I | VER 1, 2/1/2/+ ension number Default all extensio | appear. | 5 | To ma | | | ~~~ | 7 | 18 | |
| Door Opener Assignment | [25] | Until the desired extensions not assigned | VER 1, 2/11/2/- ension number <u>Default</u> all extensio | appear. | 5 | To ma | | | ~~~ | 7 | 18 | |
| Door Opener Assignment Hold Recall Time Set | [2:5] | Extensions not assigned Door opener I | VER 1, 2/11/2/vension number Default all extensio X X MIN/3 MIN/4 | ms 1 | s 1 12 MINIL | To ma 13 | 14 LE | | ~~~ | 7 | 18 | |
| | | Extensions not assigned Door opener I Door opener Z [SELECT] [MEMORY] [END | VER 1, 211/2/vension number Default all extensio | ms II | 1 12 MINIL | To ma 13 DISAB 3 min | 14 LE | nin- | 16 S mi | 17 n· | | |
| | | Extensions not assigned Door opener I Door opener 2 [SELECT] [MEMORY] [END | VER 1, 211/2/vension number Default all extensio X X MIN/3 MIN/4 30 sec- onds | ms 1 | s 1 12 MINIL | To ma 13 | 14 LE | 15 | 16 | 17 n· | 18 | |
| | | Eztensions not assigned Deor opener I Door opener 2 [SELECT] [MEMORY] [END Default | VER 1, 2/11/2/vension number Default all extensio | ms II | 1 12 MINIL | To ma 13 DISAB 3 min | 14 LE | nin- | 16 S mi | 17 n· | | |
| | | Extensions not assigned Door opener I Door opener 2 [SELECT] [MEMORY] [END | VER 1, 2/11/2/vension number Default all extensio | ms II | 1 12 MINIL | To ma 13 DISAB 3 min | 14 LE | nin- | 16 S mi | 17 n· | | |
| | | Eztensions not assigned Deor opener I Door opener 2 [SELECT] [MEMORY] [END Default | VER 1, 211/2/vension number Default all extensio | ms II | 1 12 MINIL | To ma 13 DISAB 3 min | 14 LE | nin- | 16 S mi | 17 n· | | |
| Hold Recall Time Set Programmable External | [2:5] | Extensions not assigned Dear opener I Door opener 2 [SELECT] [MEMORY] [END Default To make program change | NER 1, 211/2/v Ension number Default all extensio | ms II | 1 12 MINIL | To ma 13 DISAB 3 min utes | LE | min- | 5 mi | 17 | | |
| Hold Recall Time Set Programmable External | [2:5] | Extensions not assigned Dear opener 1 Door opener 2 [SELECT] [MEMORY] [END 30SEC/1 MIN/2 1 Default To make program change [SELECT] [MEMORY] [END | NER 1, 211/2/vension number Default all extensio | ms II | 1 12 MINIL | To ma 13 DISAB 3 min | LE | min- | 5 mi | 17 | | |
| Hold Recall Time Set Programmable External | [2:5] | Extensions not assigned Dear opener I Door opener 2 [SELECT] [MEMORY] [END 30SEC/I MIN/2 I Default To make program change [SELECT] [MEMORY] [END ENABLE/DISA. Enable | NER 1, 211/2/v Ension number Default all extensio | ms II | 1 12 MINIL | To ma 13 DISAB 3 min utes | LE | min- | 5 mi | 17 | | |
| Hold Recall Time Set Programmable External | [2:5] | Extensions not assigned Dear opener 1 Door opener 2 [SELECT] [MEMORY] [END 30SEC/1 MIN/2 1 Default To make program change [SELECT] [MEMORY] [END | VER 1, 211/2/vension number Default all extensio X X MIN/3 MIN/4 30 sec- onds X BLE Default X RY] [END] E/DISABLE | ms 11 MIN/S I | 1 12 MINIL | To ma 13 DISAB 3 min utes | 1d | min- | 5 mi | 17 | | |
| Hold Recall Time Set Programmable External Paging Access Tone | [2:5] | Extensions not assigned Dear opener I Door opener 2 [SELECT] [MEMORY] [END Default To make program change [SELECT] [MEMORY] [END Default To make program change [SELECT] [MEMORY] [END Default To make program change [SELECT] [MEMORY] [END Disable [NEXT] [SELECT] [MEMORY] | VER 1, 2/11/2/vension number Default all extensio X X S MIN/3 M[N/4 30 sec- onds vec onds X E Default X Y [END] E/DISABLE TMF receiver a | ms 11 MIN/S I | 1 12 MINIL | To ma | LE di | nin- wies | 5 mi ute | 17 17 d | | |
| Hold Recall Time Set Programmable External Paging Access Tone | [2:5] | Extensions not assigned Dear opener I Door opener 2 [SELECT] [MEMORY] [END Default To make program change [SELECT] [MEMORY] [END Enable Disable [NEXT] [SELECT] [MEMORY Length [MEMORY] [END Length [MEMORY] [MEMORY] [END Length [MEMORY] [| VER 1, 211/2/vension number Default all extensio X X S MIN/3 MIN/4 30 sec- onds X E Default X A P LEDISABLE TMF receiver a Default | ms 11 MIN/S I | 1 12 MINIL | To ma | LE di | nin- wies | 5 mi ute | 17 di | | |
| Hold Recall Time Set Programmable External Paging Access Tone | [2:5] | Extensions not assigned Dear opener I Door opener 2 [SELECT] [MEMORY] [END Default To make program change [SELECT] [MEMORY] [END Default To make program change [SELECT] [MEMORY] [END Disable [NEXT] [SELECT] [MEMOR Disable [NEXT] [SELECT] [MEMOR DIMARKANIA [SELECT] [MEMOR DISABLE [NEXT] [SELECT] [MEMOR DISABLE [NEXT] [SELECT] [MEMOR DISABLE [NEXT] [SELECT] [MEMOR | VER 1, 2/11/2/vension number Default all extensio X X S MIN/3 MIN/4 30 sec- onds X E Default X A P BLE Default X A T T T T T T T T T T T T | ms 11 MIN/S I | 1 12 MINIL 2 min. | To ma | LE di | nin- wies | 5 mi ute | 17 die | | |
| Hold Recall Time Set Programmable External Paging Access Tone | [2:5] | Extensions not assigned Dear opener I Door opener 2 [SELECT] [MEMORY] [END Default To make program change [SELECT] [MEMORY] [END Enable Disable [NEXT] [SELECT] [MEMORY Length [MEMORY] [END Length [MEMORY] [MEMORY] [END Length [MEMORY] [| VER 1, 211/2/vension number Default all extensio X X S MIN/3 MIN/4 30 sec- onds X E Default X A P LEDISABLE TMF receiver a Default | ms 11 MIN/S I | 1 12 MINIL 2 min. | To ma | LE di | nin- wies | 5 mi ute | 17 di | | |

| TO SET | PROGRAM ADURESS | STEPS R | STEPS REQUIRED TO CHANGE PROGRAM | | | | | | | | | |
|---|----------------------------------|--|----------------------------------|------------|----------|-------------|-------------|----------|-------------|------------|----|--|
| Programmable Secret Auto Dial | [89] | | | | | | | | | | | **** |
| | | | Default | Т— | | To mo | . / | | | ********** | | ٠ |
| | | No secret | × | - | | LO MU | ixe pre | gram | cnan | ge | | ' |
| | | Secret | | - | | | | | | | | 1 |
| Transfer Recall Time | [30] | [SELECT] [MEMORY] [EN | סן | | | | | | | | | |
| | | | Defautt | T | | To ma | ke pre | Prem | chan | 7.0 | | 1 |
| | | 30 86C | × | 1 | | | | A. C | | - | | 1 |
| | | 2 min | | | | | | | | | | 1 |
| Automatic Designated CO Line Access | [31] | [NEXT] [CE] [MEMORY] LCO numbe until the desired ex | r . | | | | | | | | | 4 |
| | | Will the Mean ex | | pears | | | | | | | | |
| | | F., | Default | | , | Го та | ke pro | gram | chans | e | |] |
| | | Extensions | all extensions | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |] |
| | | CO 1 | × | - | ļ | | | | | | |] |
| | | CO3 | x | 4 | <u> </u> | | <u> </u> | <u> </u> | | | |] |
| 7) | - | | × | <u></u> | <u> </u> | | <u> </u> | <u> </u> | | <u></u> | | } |
| Programmable Call Walting Tone | (32) | NEXT SELECT MEMO | T/TONE 2 | oears | | | | | | | | ***** |
| | | **** | Default | | 7 | To ma | ke pro | gram. | hone | | | 1 |
| | | Extensions | all extensions | 11 | 12 | 13 | 14 | 15 | 16 | | 18 | 1 |
| | | Tane i | × | | | | | - 61/ | 10 | 11 | 10 | |
| | | Tone 2 | | | | | | _ | | + | + | |
| | | Expensions Enable Disable | Default all extensions | ears 11 | 12 | ro mai | ke pro | grám (| hang 16 | e 17 | 18 | |
| A | | Disable | × | Щ | I | | | | | | | |
| Standard Telephone Connection with Proprietary Telephone | [34] | [NEXT] [SELECT] [MEMOR | E/DISARI F | ears | 7 | o mak | se npo | | heno | 0 | | |
| | | Extensions | ali extensions | 17 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | |
| | | Disable | X | | | | | | | | 10 | |
| | - | Enable | | | | | | | | | | |
| FI/SAVE Selection (for KX-T30850, KX-T7020, KX-T7030, KX-T7050) | [35] | Extensions | RE KEYISAVE KE | EY ears | | e mak 13 | e prog | ram c | hange 16 | 17 | 10 | |
| ĺ | - | Feature key | × | | | | | | •• | | 18 | |
| | | Savê key | | | | | | | | | - | |
| Carrier Codes Assignmen: | [37] | [NEXT] [C] [MEMORY] [EN | th up to 10 divite | ırs | | | | | | | , | 9- |
| | | location number | carr | ler cod | g | | | | | | | |
| | - | 00 | | - | - | *** | | | | | | |
| | | | | | | - | - | | | | | |
| | | | + | | | | 1 | | | | | |
| | | 02 | | | | | $\neg \neg$ | | | | | |
| . , | programma objects — # - adolytos | 92 63 | | | | | | | | .* | | |
| System Clear | | 02 | | | | | | | | ** | | |