

Panasonic

Integrated Telephone System

Model No. **KX-TS5-B**
KX-TS5-W

Pulse-or-tone dialing capability

Operating Instructions



KX-TS5-B

PLEASE READ BEFORE USE AND SAVE.

Contents by Section

- | | |
|--------------------------|-------------------------------|
| 1 Getting Started | 4 Things You Should Know |
| 2 Making/Answering Calls | 5 Referencia rápida (Spanish) |
| 3 Special Features | |

Attach your purchase receipt here.

For your future reference

Serial No. _____ Date of purchase _____
(found on the bottom of the unit)

Name and address of dealer _____

For product service

- Call 1-800-211-PANA(7262) or 1-800-833-9626 for the location of an authorized servicer.

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom _____


- Send the unit to an authorized servicer, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way, Secaucus, New Jersey 07094


Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park
Carolina, Puerto Rico 00985

1-A Accessories

Handset one

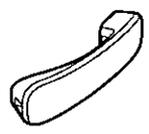

Handset Cord one

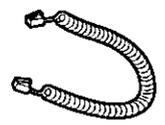


Telephone Line Cord one




•To order accessories, call
1-800-211-PANA(7262).


1-B Location of Controls

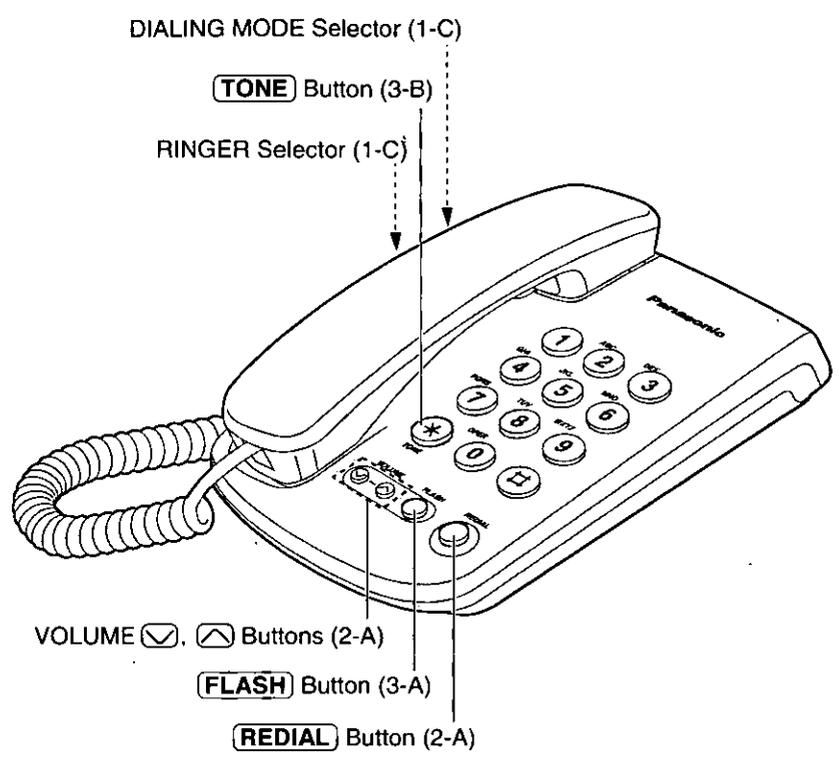


1-C Settings

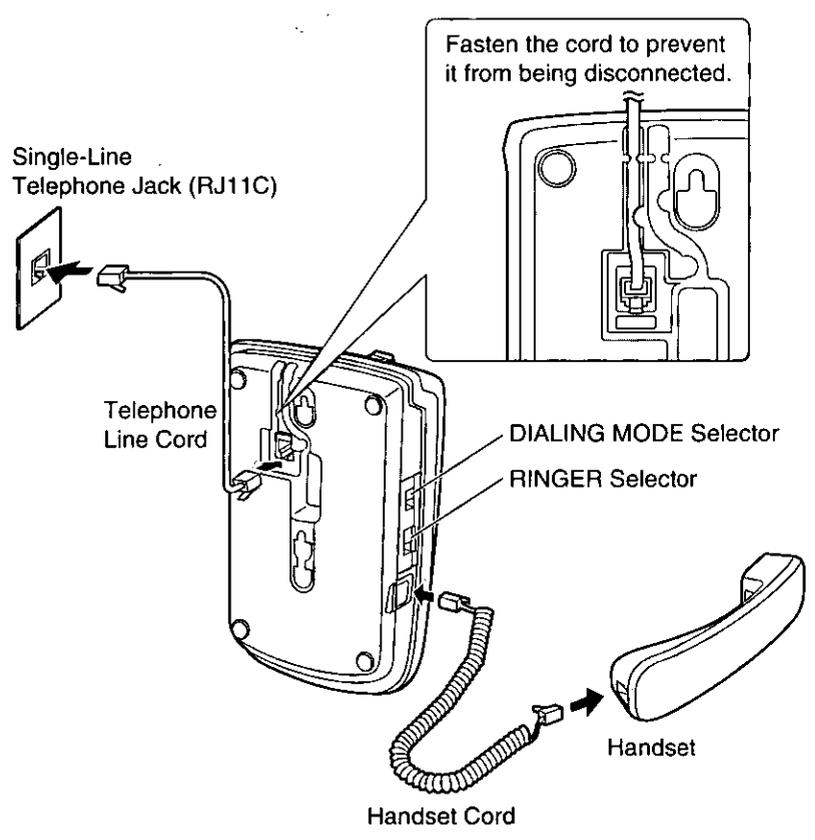


- 1 Connect the handset cord.
- 2 Connect the telephone line cord, then lift the handset to confirm the dial tone.
- 3 Set the DIALING MODE selector to TONE.
 - If you cannot dial, set to PULSE.

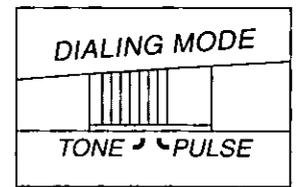

- 4 Set the RINGER selector to HIGH, LOW or OFF.
 - When set to OFF, the unit will not ring.

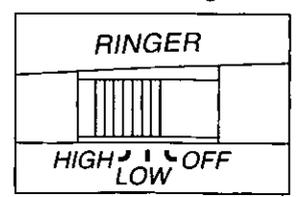

2-A Making Calls

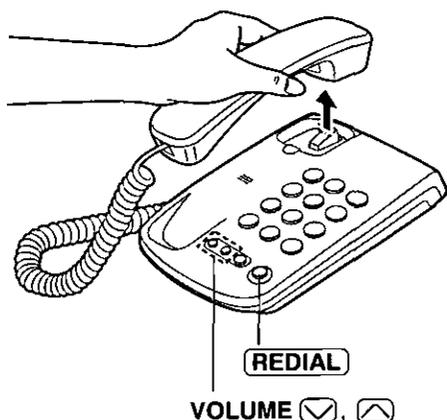

- 1 Lift the handset.
- 2 Dial a telephone number.
 - If you misdial, hang up and start from step 1.
- 3 When finished talking, hang up.

To redial the last number

Lift the handset. ➡ Press **REDIAL**.

To select the receiver volume (6 levels) while talking

To increase the volume, press **VOLUME** .

To decrease, press **VOLUME** .

- Each time you press the button, the volume level will change.
- After hanging up, the volume will return to middle volume.

2-B Answering Calls

- 1 When the unit rings, lift the handset.
- 2 When finished talking, hang up.

3 Special Features

3-A For Call Waiting Service Users


Press **FLASH** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **FLASH** again.

3-B Temporary Tone Dialing (For Rotary or Pulse Service Users)


Press **TONE** before entering access numbers which require tone dialing.

- The dialing mode changes to tone. You can enter numbers to access answering services, electronic banking services, etc. When you hang up, the mode will return to pulse.
- Access numbers entered after pressing **TONE** will not be included when redialing.

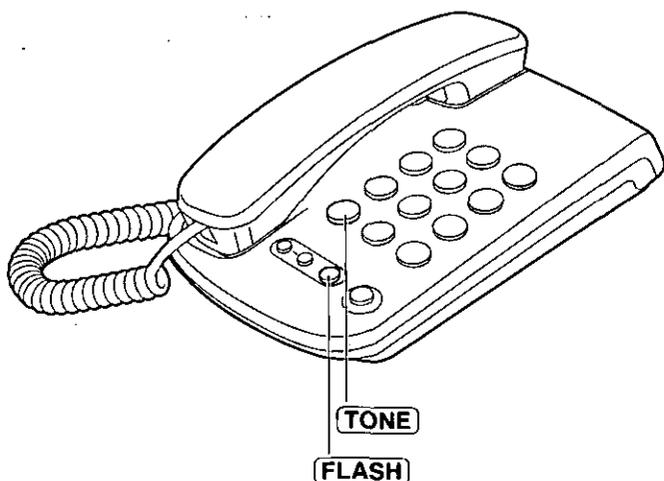


4-A Wall Mounting


The unit can be mounted on a wall phone plate.

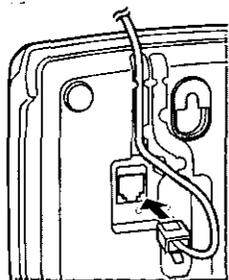

1 Connect the telephone line cord to the unit.

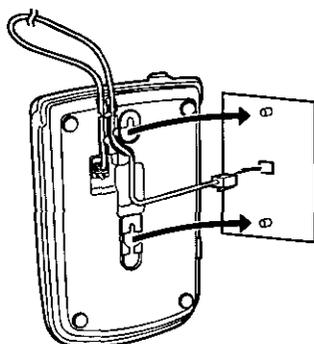

2 Connect the telephone line cord to Single-Line Telephone Jack. Mount the unit, then slide down.

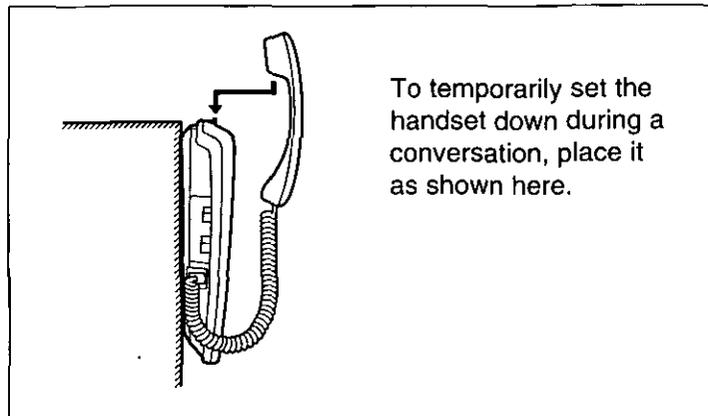

To temporarily set the handset down during a conversation, place it as shown here.

4-B Before Requesting Help


Problem	Remedy
The unit does not work.	•Check the settings (1-C).
The call cannot be connected even you dialed correctly.	•Check whether the DIALING MODE selector setting is correct or not (1-C).
The unit does not ring.	•The RINGER selector is set to OFF. Set to HIGH or LOW (1-C).

If you cannot solve your problem. Call our customer call center at 1-800-211-PANA(7262).

4-C Helpful Information

- Environment**—do not place the unit in room where the temperature is less than 5°C (41°F) or greater than 40°C (104°F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
- Routine care**—wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder.
- If there is any trouble**—disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Service Centers. If the known working phone does not operate properly, consult with your telephone company.

5-A Colocación

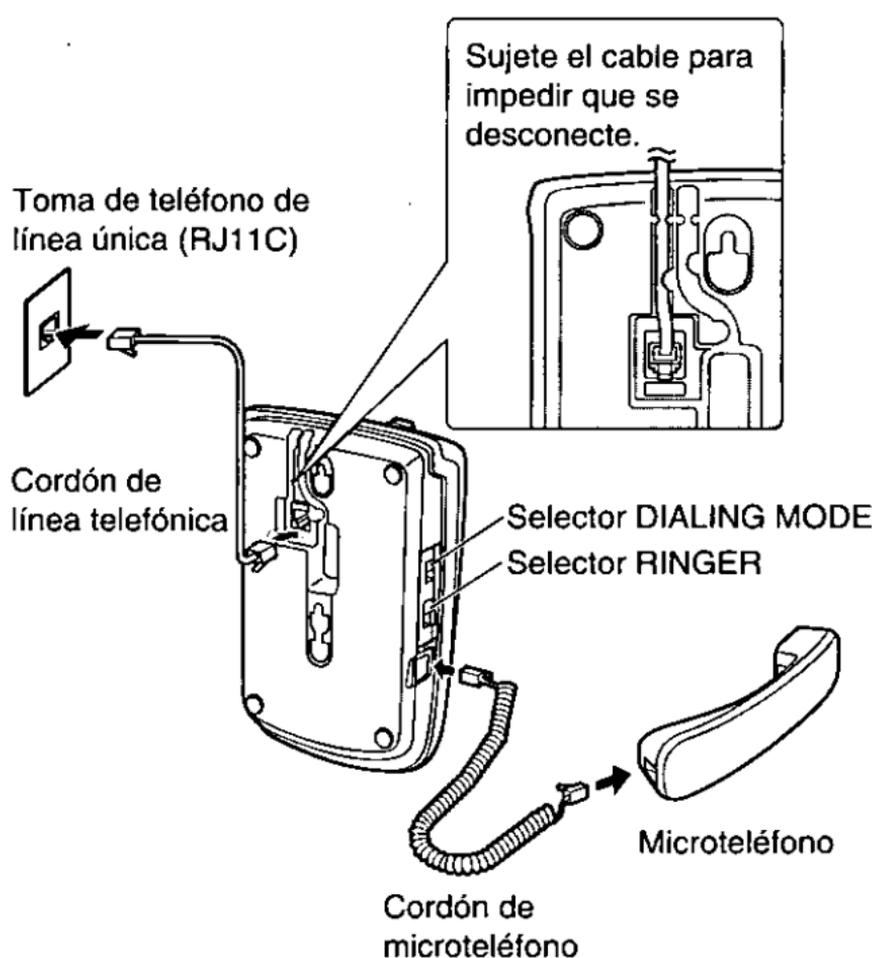

- 1 Conecte el cordón del micrófono.
- 2 Conecte el cordón de línea telefónica, y luego levante el micrófono para confirmar el tono de discado.
- 3 Ponga el selector DIALING MODE en TONE.
 - Si no puede discar, póngalo en PULSE.
- 4 Ponga el selector RINGER en HIGH, LOW u OFF.
 - Cuando lo ponga en OFF, la unidad no sonará.

5-B Para hacer llamadas

- 1 Levante el micrófono.
- 2 Disque un número telefónico.
- 3 Cuelgue cuando termine de conversar.

5-C Para contestar llamadas

- 1 Cuando suene la unidad, levante el micrófono.
- 2 Cuelgue cuando termine de conversar.