



# 816 PLUS

## TECHNICAL MANUAL

INCLUDES:

GENERAL DESCRIPTION SECTION

USER INSTRUCTIONS SECTION

INSTALLATION SECTION

PROGRAMMING SECTION

REMOTE ACCESS SECTION

BULLETINS SECTION

Every effort has been made to eliminate errors and ambiguities in the information contained in this manual. Any questions concerning information presented here should be directed to SAMSUNG TELECOMMUNICATIONS AMERICA, INC., 1350 East Newport Center Drive, Suite 110, Deerfield Beach, Florida 33442, telephone (305) 426-4100. SAMSUNG TELECOMMUNICATIONS AMERICA, INC. disclaims all liabilities for damages arising from the erroneous interpretation or use of information presented in this manual.



# TABLE OF CONTENTS

PART	DESCRIPTION	PAGE
<b>1</b>	<b>SYSTEM OVERVIEW</b>	
1.1	System Operation .....	1-2
1.2	System Configuration .....	1-2
<b>2</b>	<b>SYSTEM HARDWARE</b>	
2.1	Key Service Unit (KSU) .....	2-1
2.2	Expansion Cards .....	2-1
2.3	Serial I/O Card (SMDR/Remote Programming) .....	2-4
2.4	Door Phone/Room Monitor .....	2-4
2.5	Keysets .....	2-5
2.6	PROSTAR 800 and 816 Keypad Layouts .....	2-8
2.7	Conventional Telephones .....	2-10
<b>3</b>	<b>SYSTEM SPECIFICATIONS</b>	
3.1	System Capacity .....	3-1
3.2	Power Specifications .....	3-1
3.3	Environmental Limits .....	3-1
3.4	Cable Requirements .....	3-1
3.5	Physical Dimensions and Weights .....	3-1
3.6	Optional Equipment .....	3-2
3.7	System Indicators .....	3-2
<b>4</b>	<b>FEATURES</b>	
4.1	System Features .....	4-1
4.2	Station Features .....	4-11
4.3	Display Features .....	4-16
4.4	Sample Displays .....	4-19
4.5	Single Line Station Capabilities .....	4-20
4.6	Sample SMDR Report .....	4-21
4.7	Starmail Features .....	4-22
<b>5</b>	<b>USER INFORMATION</b>	
5.1	Radio Frequency Interference .....	5-1
5.2	FCC Requirements .....	5-1
5.3	Telephone Company Requirements .....	5-1
5.4	Music on Hold Warning .....	5-3
5.5	DISA Warning .....	5-3
5.6	Safety Tests .....	5-3

# PROSTAR 816 PLUS GENERAL SYSTEM DIAGRAM

