

POSTED 6-27-'04

This manual is for reference and historical purposes, all rights reserved.

This page is copyright © by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual.

This may take 3 full minutes for this PDF document to download.

The main page is located at www.butkus.org/chinon

If you find this manual useful, how about a donation of \$3 to:

M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701

and send your e-mail address so I can thank you.

Most other places would charge you \$7.50 for a electronic copy or

\$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

If you use Pay Pal or wish to use your credit card, use the Pay Pal Link on my page.

 
If you found this page from any other location (other then a link)

please notify me at mike@butkus.org

... and for showing your slides of course a Voigtländer projector. Whether semi-automatic or fully-automatic with remote control, all miniature slide projectors of the Voigtländer Perkeo-Series live up perfectly to the quality and handling ease of the Voigtländer cameras.




bessy k


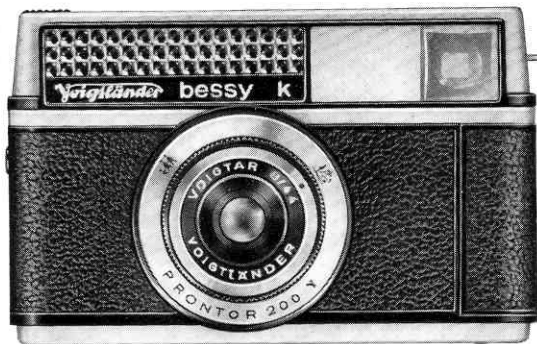


Voigtländer**bessy k**

 miniature-camera
for
Kodapak-Cassettes
28 x 28 mm

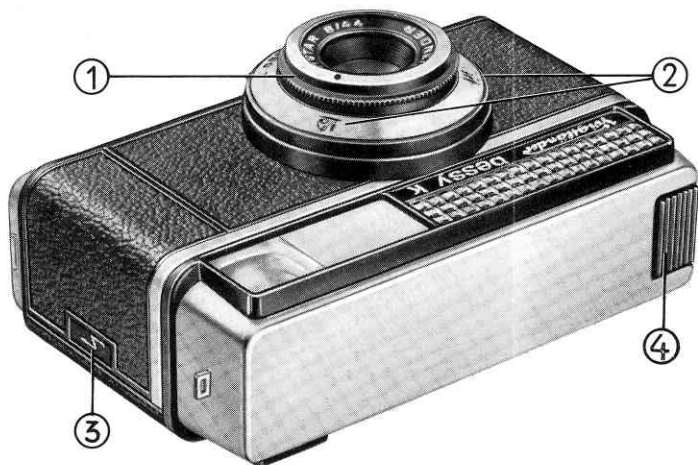

- 1 **Setting ring**
for subject distance
- 2 **Symbol-Pointer**
for distance setting
- 3 **Flash-Reflector**
Push on flash (f) symbol to
swing out reflector
- 4 **Shutter release**
for exposure
- 5 **Bright-line finder**
- 6 **Film Advance Wheel**
- 7 **Viewing-window**
for film counter and type
of film
- 8 **Arrow-marking**
to disengage bottom-plate
- 9 **Tripod-bush**
- 10 **Socket**
for selftimer and
cable release
- 11 **Lock**
for opening camera back
- 12 **Ejector**
for flash-bulbs

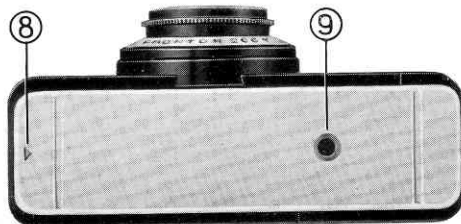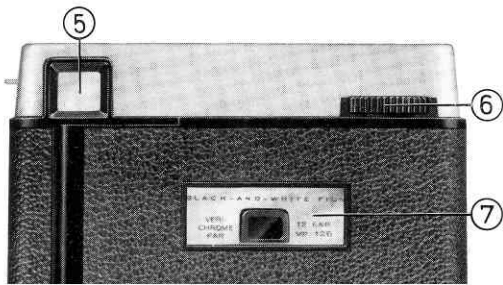  


FOR INSTANT
LOADING OF FILM . . .

www.orphancameras.com

PHOTOGRAPHY IS SO SIMPLE
WITH THE **bessy k**


Open camera back

 Press up lock (11), and the back will open.

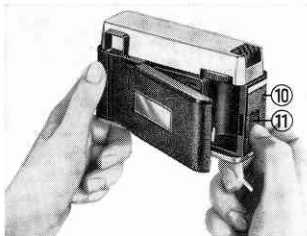


Loading of film cartridge

 . . . as shown in the illustration. Then close camera back until it clicks into position.

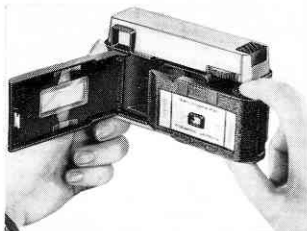

Turn Film Advance Wheel (6)

 until the number "1" appears in the viewing-window (7). Now the film can be exposed. Advance film one full stroke after every shot by turning the advance wheel.

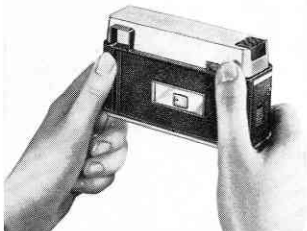



When the last picture has been taken . . .

Move advance wheel (6) until the yellow end of the film strip has passed by the viewing-window (7). Now open camera to take out film cartridge.

 
Important: Partly exposed film should be taken out only in a darkroom.

Distance

Two focus settings: for quick setting on close-ups, groups and flash turn the setting ring (1) to the  symbol; for distant shots (landscapes etc.) to the  symbol.

Bright-line finder

The bright-line frame in the viewfinder (5) clearly indicates what you will get on the picture. The four short markings in the finder are for parallax correction on close-ups, group, and flash pictures. Don't go closer than 3.5 feet to your subject.

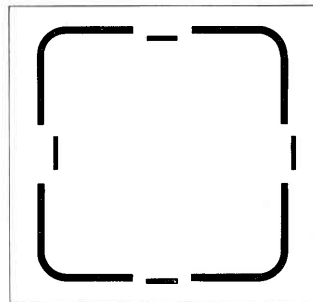


Outside Shots in Sunlight

Press release (4), but don't jerk it, and the picture is already taken. Exposure at 1/200 of a second with an f/8 aperture.


A useful hint: When the flash-reflector swings out (see next page), the shutter is automatically set to 1/30 of a second. This exposure compensation is also recommended for outside shots on hazy days.

FOR INSTANT LOADING OF FILM . . .

 
Open camera back
Press up lock (11), and the back will open.

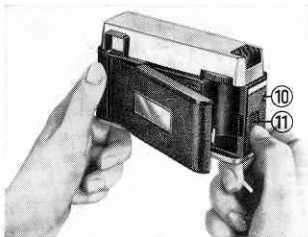

 Loading of film cartridge
. . . as shown in the illustration. Then close camera back until it clicks into position.

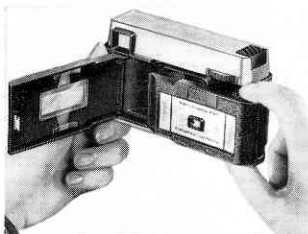

 Turn Film Advance Wheel (6)
until the number "1" appears in the viewing-window (7). Now the film can be exposed. Advance film one full stroke after every shot by turning the advance wheel.

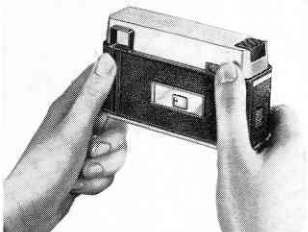



When the last picture has been taken . . .

Move advance wheel (6) until the yellow end of the film strip has passed by the viewing-window (7). Now open camera to take out film cartridge.

Important: Partly exposed film should be taken out only in a darkroom.

 
PHOTOGRAPHY IS SO SIMPLE WITH THE **bessy k**

Distance

Two focus settings: for quick setting on close-ups, groups and flash turn the setting ring (1) to the  symbol; for distant shots (landscapes etc.) to the  symbol.

Bright-line finder

The bright-line frame in the viewfinder (5) clearly indicates what you will get on the picture. The four short markings in the finder are for parallax correction on close-ups, group, and flash pictures. Don't go closer than 3.5 feet to your subject.

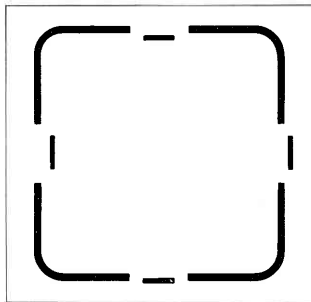

Outside Shots in Sunlight

 
Press release (4), but don't jerk it, and the picture is already taken. Exposure at 1/200 of a second with an f/8 aperture.

A useful hint: When the flash-reflector swings out (see next page), the shutter is automatically set to 1/30 of a second. This exposure compensation is also recommended for outside shots on hazy days.


Flash-Shots

The bessy k has a built-in capacitor type flash unit for AG-1 bulbs. You will be able to take "lively" snapshots in the home or at parties.

The flash capacitor operates on a battery-capacitor ignition, fed by a 15 volt battery, inserted as follows: Press arrow marking (8) sideways against the bottom-plate and lift up on the alternate side. The battery must be fitted with the + pole inwards (see marking in illustration).

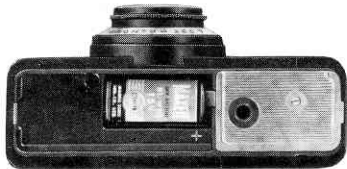

 By pressing the flash-symbol (3), the reflector swings out, automatically setting the shutter speed to 1/30 of a second. Favorable flash range: From about 9 to 18 feet with black-and-white film, with color film from about 6 to 10½ feet.

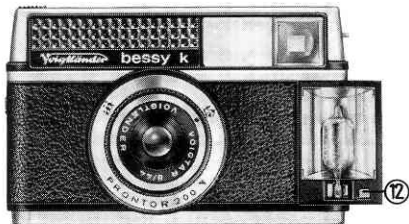

The flashbulb is inserted by pushing it into the socket in the reflector, after the flash guard has been removed first. However, you should always put the guard back on when shooting a picture! Dispose of the used flashbulb by pressing the button (12) after the flash guard has again been removed.

Guarantee

In common with all other Voigtlander products, a guarantee certificate is enclosed with this camera. Please check that your dealer duly fills in and stamps this certificate. Only then will you be sure that if the camera needs attention within the duration of the guarantee – as shown on the certificate – that this will be given free of charge by one of our appointed service agents or by the factory itself.

Keep the guarantee certificate even after the expiry date. In case of loss you will need to refer to the camera and lens numbers registered on the certificate.