

**Robin Industrial Engines®**

# **SERVICE MANUAL**

**Models**

**EH63V, EH65V  
Engines**

PUB-ES1347  
Rev. 4/99

**Robin**  
SUBARU

# CONTENTS

| <i>Section</i> | <i>Title</i>  | <i>Page</i> |
|----------------|---|-------------|
| <b>1.</b>      | <b>SPECIFICATIONS .....</b>                           | <b>1</b>    |
| <b>2.</b>      | <b>PERFORMANCE .....</b>                              | <b>2</b>    |
| 2-1            | MAXIMUM OUTPUT .....                                  | 2           |
| 2-2            | MAXIMUM TORQUE .....                                  | 2           |
| 2-3            | PERFORMANCE CURVES .....                              | 3           |
| <b>3.</b>      | <b>FEATURES .....</b>                                 | <b>5</b>    |
| <b>4.</b>      | <b>GENERAL DESCRIPTION OF ENGINE COMPONENTS .....</b> | <b>6</b>    |
| 4-1            | CYLINDER AND CRANKCASE .....                          | 6           |
| 4-2            | MAIN BEARING COVER .....                              | 6           |
| 4-3            | CRANKSHAFT .....                                      | 6           |
| 4-4            | CONNECTING ROD AND PISTON .....                       | 7           |
| 4-5            | PISTON RINGS .....                                    | 7           |
| 4-6            | CAMSHAFT .....  | 7           |
| 4-7            | CYLINDER HEAD .....                                   | 8           |
| 4-8            | VALVE ARRANGEMENT .....                               | 8           |
| 4-9            | GOVERNOR SYSTEM .....                                 | 8           |
| 4-10           | COOLING SYSTEM .....                                  | 9           |
| 4-11           | LUBRICATION SYSTEM .....                              | 9           |
| 4-12           | IGNITION SYSTEM .....                                 | 9           |
| 4-13           | CHARGING SYSTEM .....                                 | 9           |
| 4-14           | CARBURETOR .....                                      | 10          |
| 4-15           | AIR CLEANER .....                                     | 10          |
| 4-16           | FUEL PUMP .....                                       | 10          |
| 4-17           | SECTIONAL VIEW OF ENGINE .....                        | 11          |
| <b>5.</b>      | <b>DISASSEMBLY AND REASSEMBLY .....</b>               | <b>13</b>   |
| 5-1            | PREPARATIONS AND SUGGESTIONS .....                    | 13          |
| 5-2            | SPECIAL TOOLS .....                                   | 13          |
| 5-3            | DISASSEMBLY PROCEDURES .....                          | 14          |
| 5-4            | REASSEMBLY PROCEDURES .....                           | 27          |
| 5-5            | BREAK-IN OPERATION .....                              | 43          |
| <b>6.</b>      | <b>MAGNETO .....</b>                                  | <b>44</b>   |
| 6-1            | OPERATION AND FUNCTION .....                          | 44          |
| <b>7.</b>      | <b>LUBRICATION SYSTEM .....</b>                       | <b>46</b>   |
| 7-1            | OPERATION AND FUNCTION .....                          | 46          |

| <i>Section</i> | <i>Title</i>                                     | <i>Page</i> |
|----------------|--|-------------|
| <b>8.</b>      | <b>CARBURETOR .....</b>                          | <b>47</b>   |
|                | 8-1 OPERATION AND FUNCTION .....                 | 47          |
|                | 8-2 COMPORNENT PARTS .....                       | 49          |
| <b>9.</b>      | <b>ELECTRIC STARTER .....</b>                    | <b>50</b>   |
|                | 9-1 OPERATION AND FUNCTION .....                 | 50          |
|                | 9-2 COMPORNENT PARTS .....                       | 51          |
| <b>10.</b>     | <b>TROUBLESHOOTING .....</b>                     | <b>52</b>   |
|                | 10-1. NO ENGINE OPERATION .....                  | 52          |
|                | 10-2. STARTING DIFFICULTIES .....                | 53          |
|                | 10-3. INSUFFICIENT OUTPUT .....                  | 54          |
|                | 10-4. OVERHEAT .....                             | 54          |
|                | 10-5. ROUGH IDLING .....                         | 55          |
|                | 10-6. HIGH ENGINE OIL CONSUMPTION .....          | 55          |
|                | 10-7. HIGH FUEL CONSUMPTION .....                | 56          |
|                | 10-8. DETONATION .....                           | 56          |
|                | 10-9. ENGINE MISFIRE .....                       | 57          |
| <b>11.</b>     | <b>INSTALLATION .....</b>                        | <b>58</b>   |
|                | 11-1 INSTALLING .....                            | 58          |
|                | 11-2 VENTILATION .....                           | 58          |
|                | 11-3 EXHAUST GAS DISCHARGE .....                 | 58          |
|                | 11-4 POWER TRANSMISSION TO DRIVEN MACHINES ..... | 58          |
| <b>12.</b>     | <b>SERVICE DATA .....</b>                        | <b>59</b>   |
|                | 12-1 CLEARANCE DATA AND LIMITS .....             | 59          |
|                | 12-2 TORQUE SPECIFICATIONS .....                 | 65          |
|                | 12-3 OIL GRADE CHART .....                       | 66          |
| <b>13.</b>     | <b>MAINTENANCE AND STORAGE .....</b>             | <b>67</b>   |
|                | 13-1 DAILY MAINTENANCE .....                     | 67          |
|                | 13-2 PERIODIC MAINTENANCE SCHEDULE .....         | 67          |
|                | 13-3 ENGINE STORAGE .....                        | 69          |

# 1. SPECIFICATIONS

| MODEL                  | EH63V  | EH65V                               |
|------------------------|--|-------------------------------------|
| Type                   | Air-Cooled, 4-Cycle, V-Twin Cylinder, Vertical P.T.O. Shaft, OHV Gasoline Engine |                                     |
| Bore x Stroke          | 2-80 mm x 65 mm (3.15 x 2.56 in.)  |                                     |
| Piston Displacement    | 653 cm <sup>3</sup> (39.8 cu.in.)  |                                     |
| Compression Ratio      | 8.3  |                                     |
| Maximum Output         | 13.4 kW (18.0 HP) /3600 r.p.m.   | 16.4 kW (22.0 HP) /3600 r.p.m.      |
| Max. Torque            | 43.3 N·m(4.41 kgf · m) /2000 r.p.m.  | 45.6 N·m(4.65 kgf · m) /2500 r.p.m. |
| Direction of Rotation  | Counterclockwise as viewed from P.T.O. shaft side                                |                                     |
| Cooling system         | Forced Air Cooling   |                                     |
| Valve Arrangement      | Overhead Valve (OHV)   |                                     |
| Lubrication            | Forced Lubrication with Trochoid Pump  |                                     |
| Lubricant              | Automobile Engine Oil SAE #20, #30 or 10W-30 ; Class SE or higher                |                                     |
| Capacity of Lubricant  | 2.0 liters (0.53 U.S. gal.)  |                                     |
| Carburetor             | Horizontal Draft, Float Type   |                                     |
| Fuel                   | Automobile Unleaded Gasoline   |                                     |
| Fuel Feed System       | Diaphragm Pump   |                                     |
| Ignition System        | Flywheel Magneto (Solid State)   |                                     |
| Spark Plug             | NGK BP6ES  |                                     |
| Charging Capacity      | 12V-15A  |                                     |
| Starting System        | Electric Starter   |                                     |
| Governor System        | Centrifugal Flyweight Type   |                                     |
| Air Cleaner            | Double Element Type  |                                     |
| Dry Weight             | 44.0 kg (97.0 lb.)   |                                     |
| Dimensions (L x W x H) | 475 mm x 469 mm x 353 mm (18.7 in. x 18.5 in. x 13.9 in.)                        |                                     |

Specifications are subject to change without notice.

## **2. PERFORMANCE**

### **2-1 MAXIMUM OUTPUT**

The maximum output is the output of an engine with its throttle valve fully opened under the condition that all the moving parts are properly broken in after the initial break-in period.

A new engine may not produce full maximum output while its moving parts are still not broken-in.

#### **NOTE :**


Power curves shown in the following charts are made in conformity with SAE internal combustion engine standard test code J1349

### **2-2 MAXIMUM TORQUE**


The maximum torque is the torque at the output shaft when the engine is producing maximum output at certain revolution.

## 2-3 PERFORMANCE CURVES

EH63V

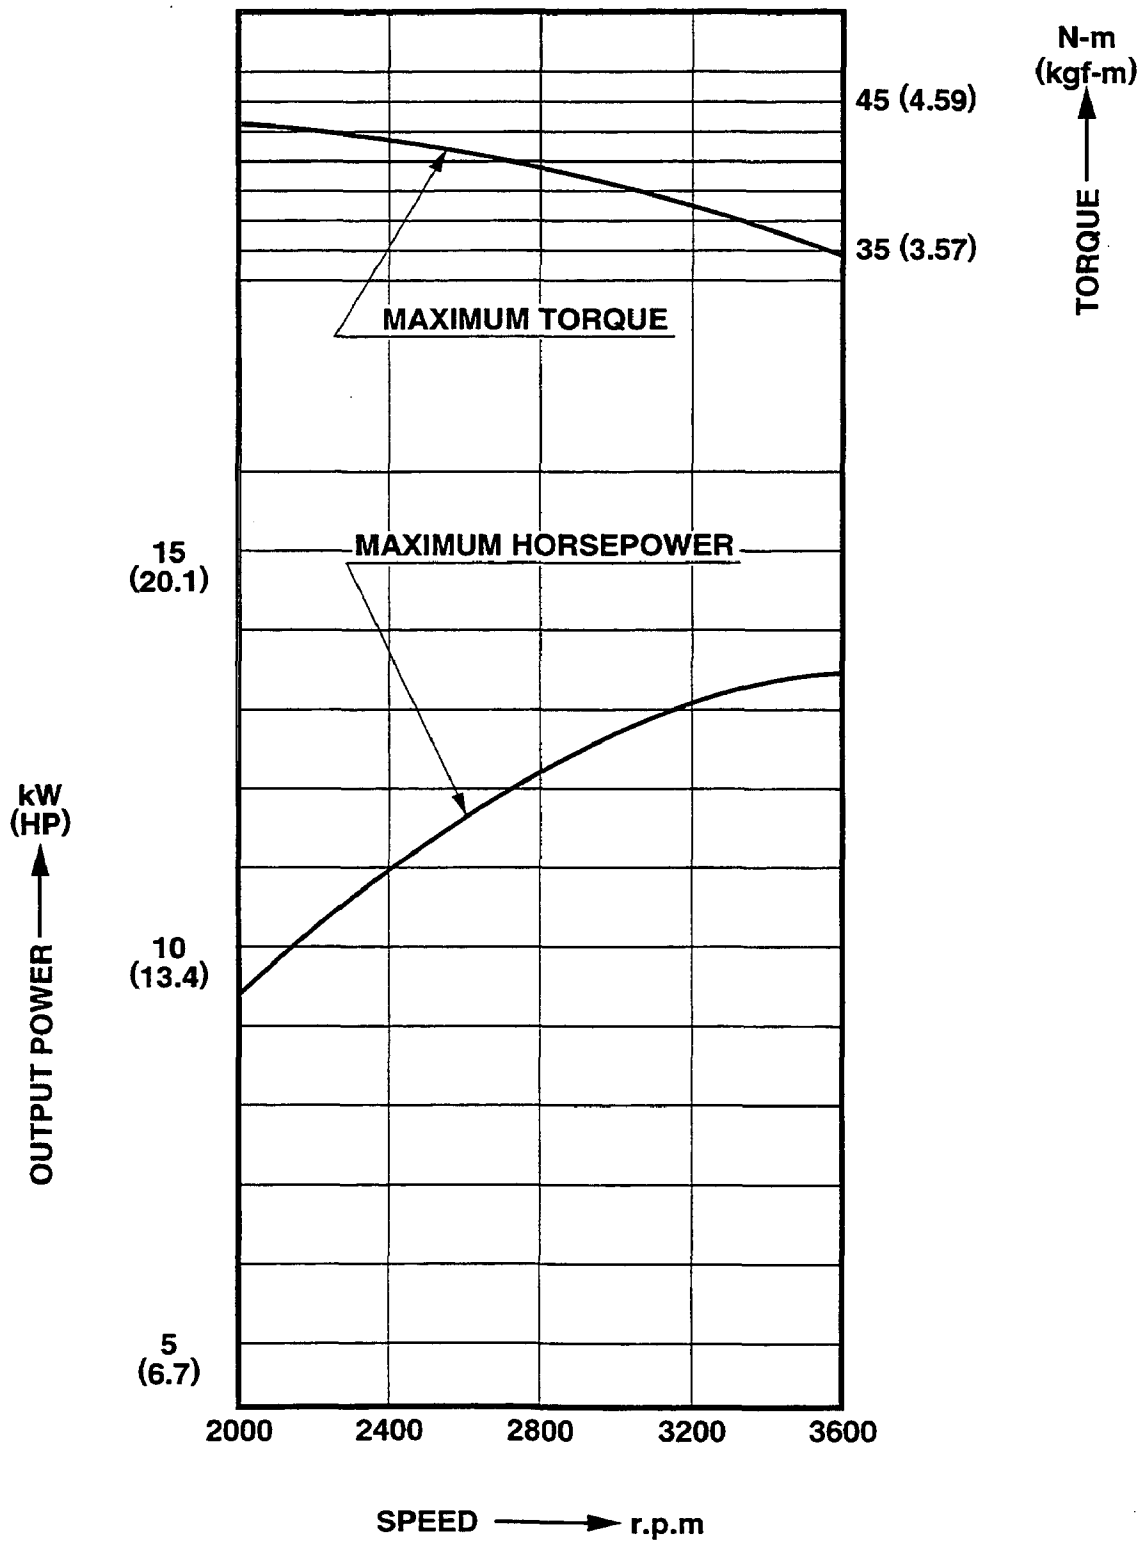

**EH65V**

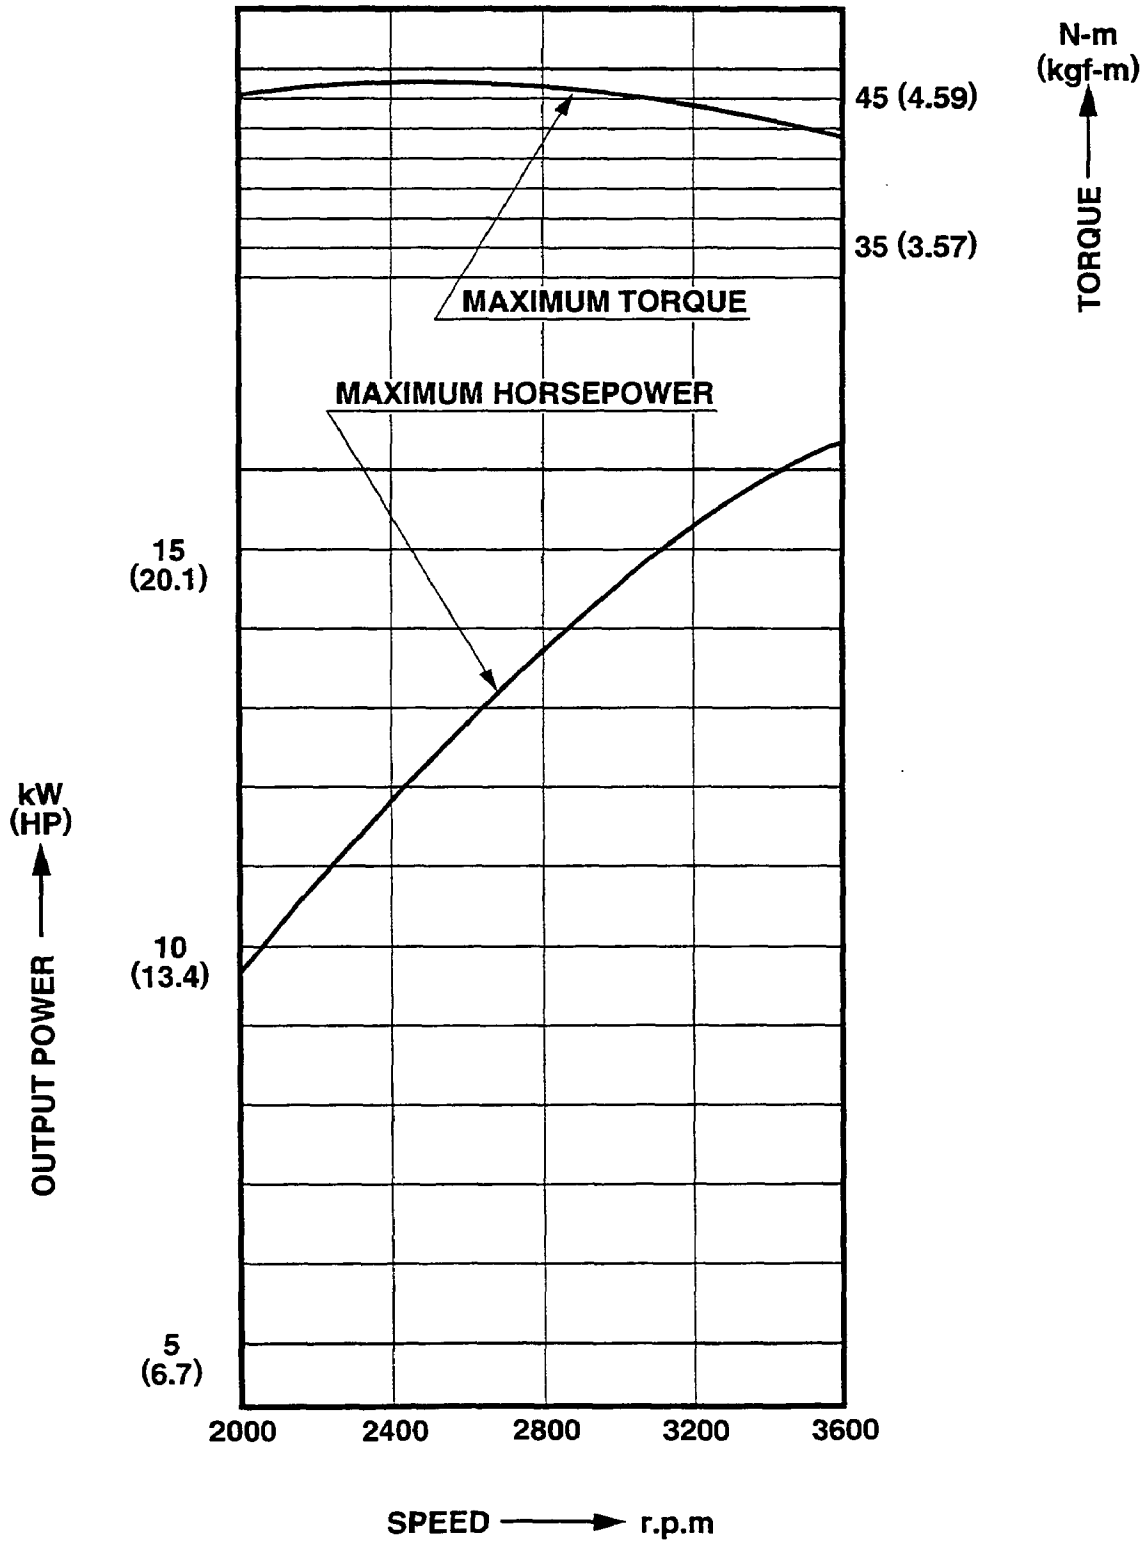

### **3. FEATURES**

The overhead valve arrangement is adopted for ensuring high power, low fuel consumption and low oil consumption.

The adoption of twin-cylinder in the angle of 90 degree (V arrangement) and crankcase in one piece, plastic blower housing etc. offers a compactness and light weight, making the arrangements for installing the engine much easier for various powered equipments.

The forged steel crankshaft and high loading direct supporting aluminum bearing offer high durability, and full pressure lubrication system with trochoid type oil pump and large capacity air cleaner with dual elements enhance the reliability.

The effective combustion chamber shape and the precisely tuned intake and exhaust valve system enhance the low exhaust emission and ensure the engine characteristics of high torque at low speed.

The carburetor with fuel cut valve, 12V-15A alternator and pulse type fuel pump are employed as standard features so that the engine can be utilized for many usage.



## 4. GENERAL DESCRIPTION OF ENGINE COMPONENTS

ROBIN EH63V/ 65V series engine is air-cooled, 4-stroke, twin-cylinder, OHV arrangement gasoline engine. The twin-cylinder is located in the angle of 90 degree; #1 cylinder is in the RH side and #2 cylinder in LH side as viewed from flywheel (cooling fan) side.

### 4-1 CYLINDER AND CRANKCASE

The twin-cylinder and crankcase is single piece aluminum die-casting.

The cylinder liner, made of special cast iron, is molded into the aluminum casting.

The crankcase has a mounting surface on the output shaft side, where the main bearing cover is attached.

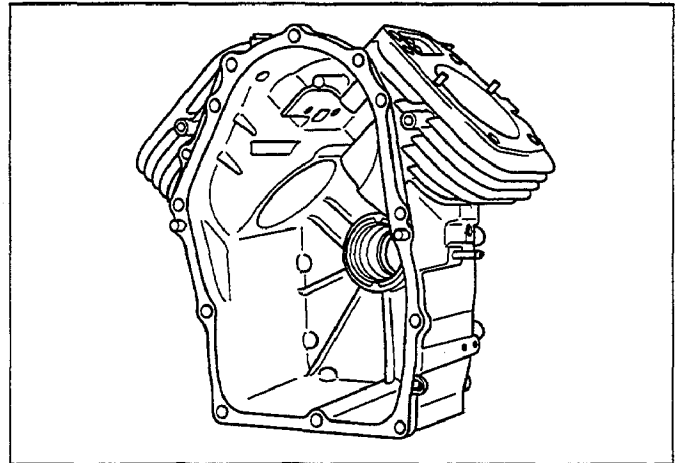


Fig. 4-1

### 4-2 MAIN BEARING COVER

The main bearing cover is an aluminum die-casting, which is mounted on the output shaft side of the crankcase.

It is easy to inspect inside of the engine, after removing the main bearing cover.

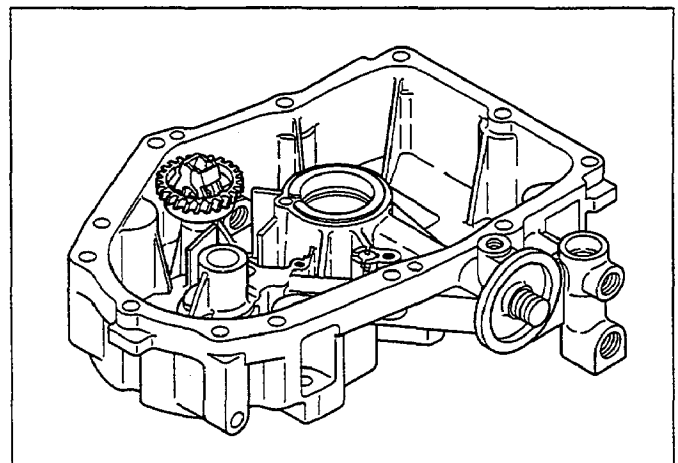


Fig. 4-2

### 4-3 CRANKSHAFT

The crankshaft is forged carbon steel, and the crank pin is induction-hardened.

The output end of the shaft has a crankshaft gear pressed into position.

Engine oil passages are provided onto the journal and pin portions of crankshaft for lubrication.

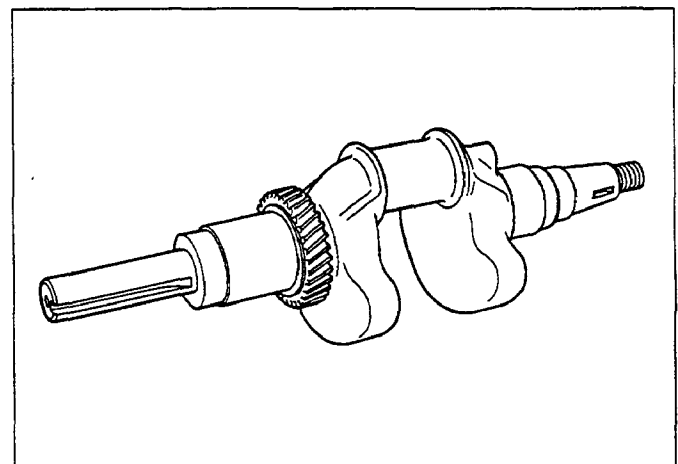


Fig. 4-3

#### 4-4 CONNECTING ROD AND PISTON

The connecting rod is forged aluminum alloy, and its large and small ends function as bearings.

The piston is an aluminum alloy casting, and carries two compression rings and one oil ring.

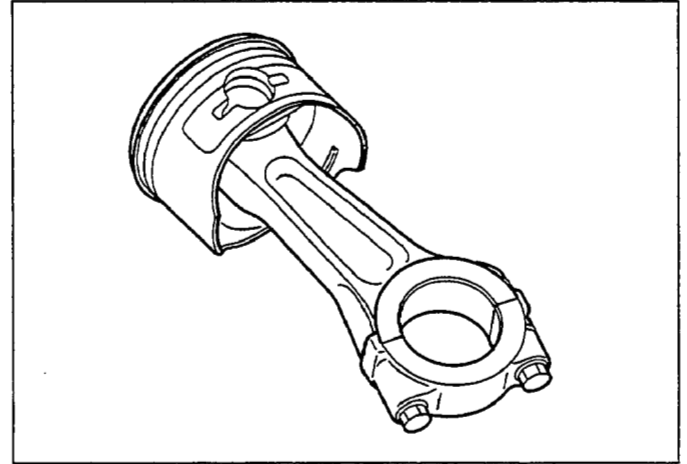


Fig. 4-4

#### 4-5 PISTON RINGS

The piston rings are made of special cast iron.

The profile of the top ring is barrel face and the second ring has a tapered face.

The oil ring is designed for better sealing and less oil consumption, in combination with 3 pieces.

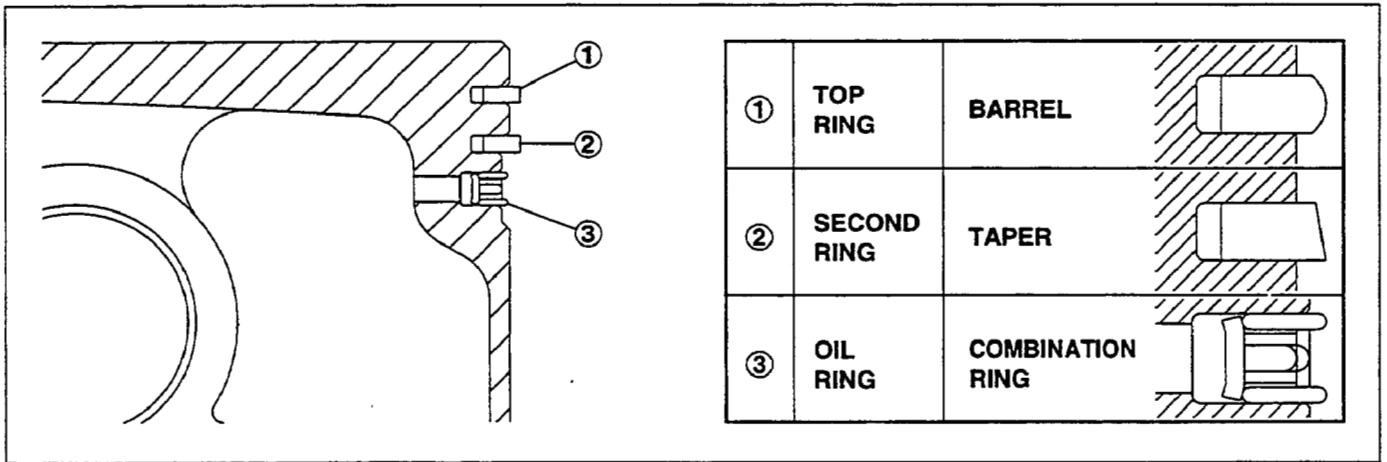


Fig. 4-5

#### 4-6 CAMSHAFT

The camshaft is made of special cast iron and camshaft gears are casted together in one piece.

Each 2 cam robs are provided for intake and exhaust valves correspondingly.

Both sides of the shaft fit into the plane bearings on the crankcase and main bearing cover.

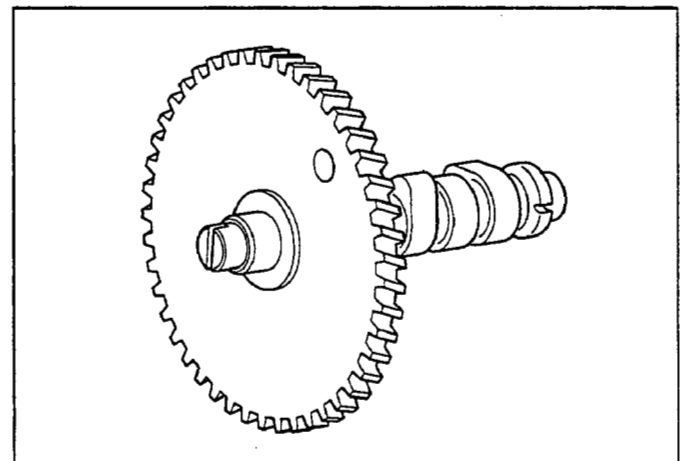


Fig. 4-6

## 4-7 CYLINDER HEAD

The cylinder head is an aluminum die-casting which utilizes semi-spherical type combustion chamber for the high combustion efficiency.

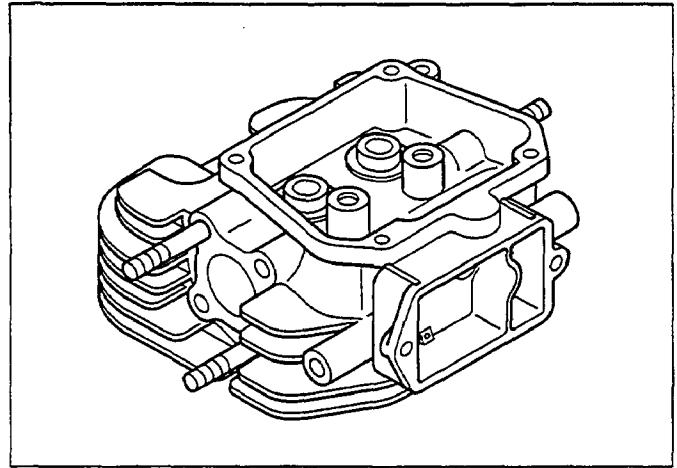


Fig. 4-7

## 4-8 VALVE ARRANGEMENT

The intake valve is located on flywheel side of the cylinder head.

The cooling fins and passages design lead cooling air to the exhaust valve area for the optimum cooling.

Hard alloy valve seats are molded in the cylinder head and stellite is fused to the exhaust valve face.

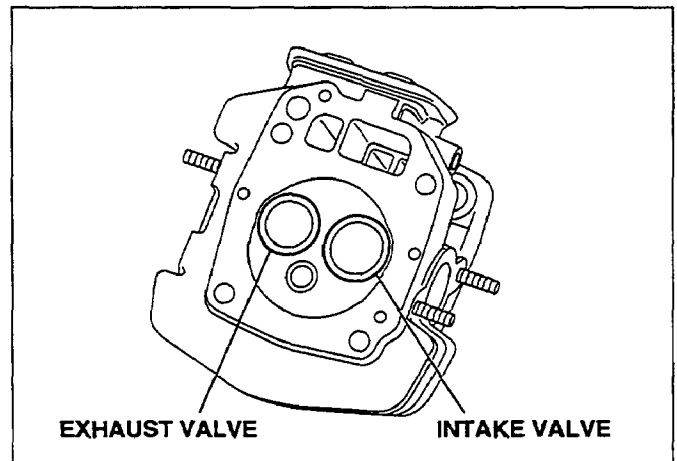


Fig. 4-8

## 4-9 GOVERNOR SYSTEM

The governor is a centrifugal flyweight type which ensures constant operation at the selected speed against load variations.

The governor gear with governor weights is installed inside of main bearing cover and driven by the crankshaft.

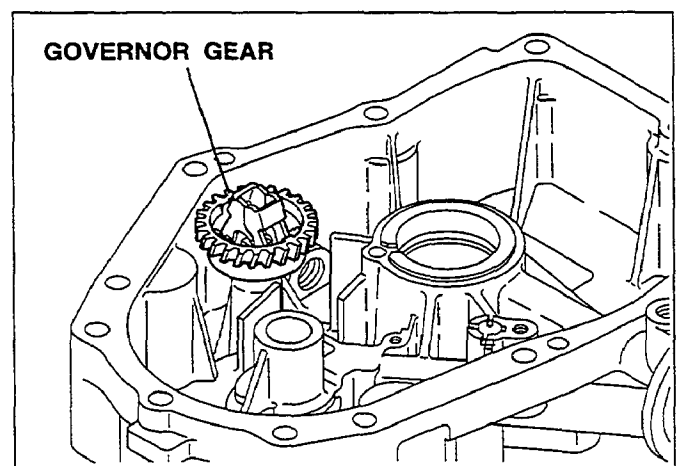


Fig. 4-9

## 4-10 COOLING SYSTEM

The large fins on the flywheel provide sufficient cooling air capacity for cylinder and cylinder head.

The cylinder baffle helps the cooling air flow efficiently.

## 4-11 LUBRICATION SYSTEM

The engine is furnished with full pressure lubrication system.

The trochoid type oil pump is driven by crankshaft and delivers pressurized engine oil through the full-flow type oil filter to the journal and pin portions of crankshaft and camshaft.

## 4-12 IGNITION SYSTEM

The ignition system is a transistor controlled magneto system which consists of a flywheel and an ignition coil with a built-in transistor installed onto the crankcase.

This system has an automatic ignition timing advance characteristic for easy starting.

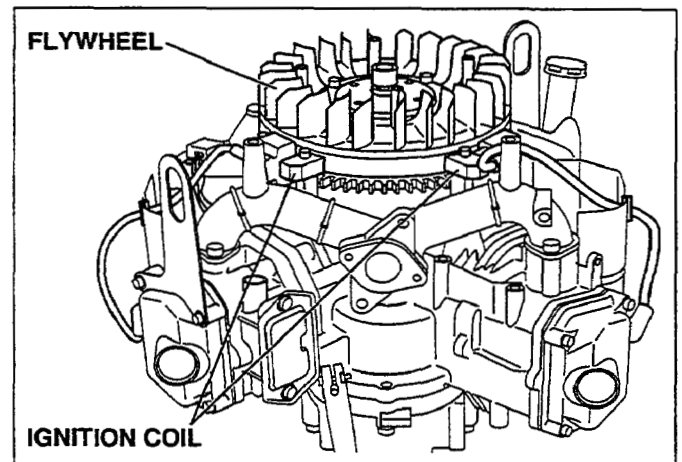


Fig. 4-10

## 4-13 CHARGING SYSTEM

Multipolar charging coil is provided inside of flywheel. Charging capacity is 12V-15A.

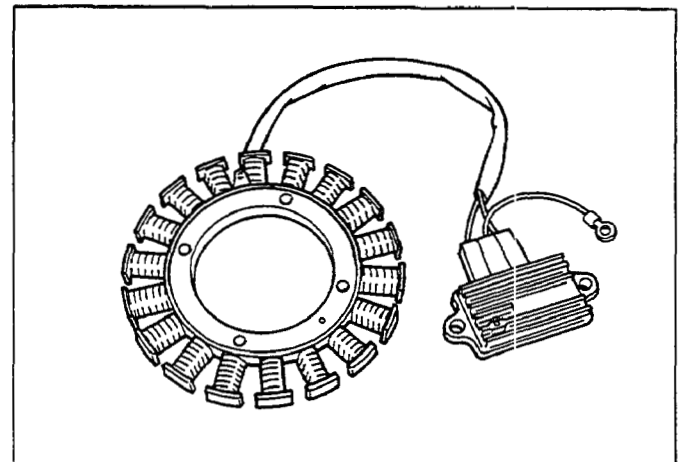


Fig. 4-11

#### 4-14 CARBURETOR

The engine is equipped with a horizontal draft carburetor that has a float controlled fuel system and a fixed main jet.

The carburetors are calibrated carefully for sure starting, good acceleration, less fuel consumption and sufficient output.

Fuel cut solenoid valve is provided to prevent engine running on when the key switch is turned to off.

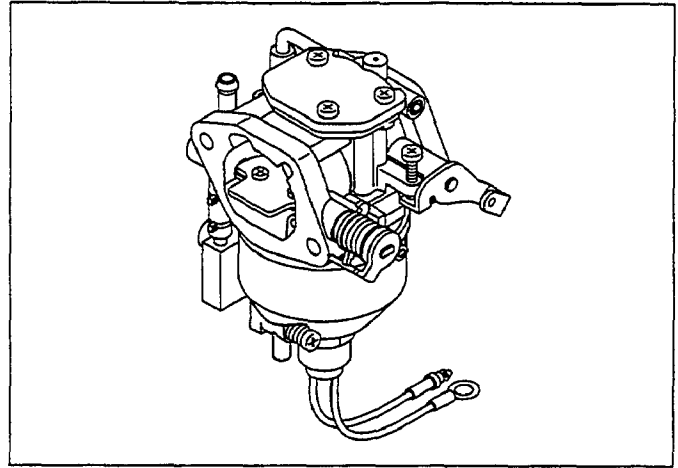


Fig. 4-12

#### 4-15 AIR CLEANER

Air-cleaner is a heavy-duty type with a dual element system ; the primary one is an urethane foam (semi-wet) and secondary one is a dry type paper element.

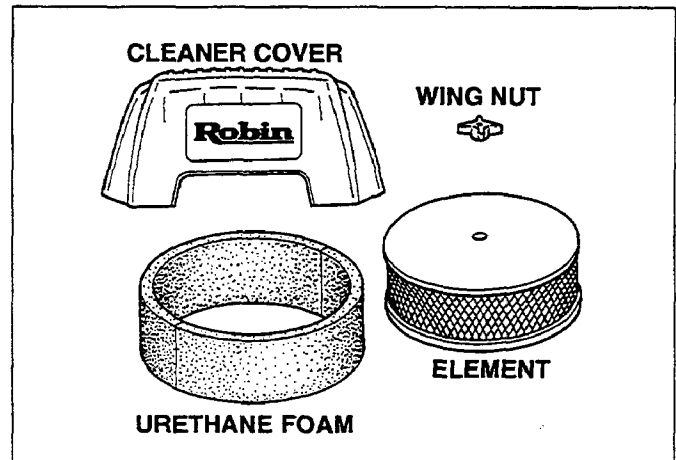


Fig. 4-13

#### 4-16 FUEL PUMP

The engine is equipped with a diaphragm type fuel pump which is operated by the crankcase inside vacuum pressure.

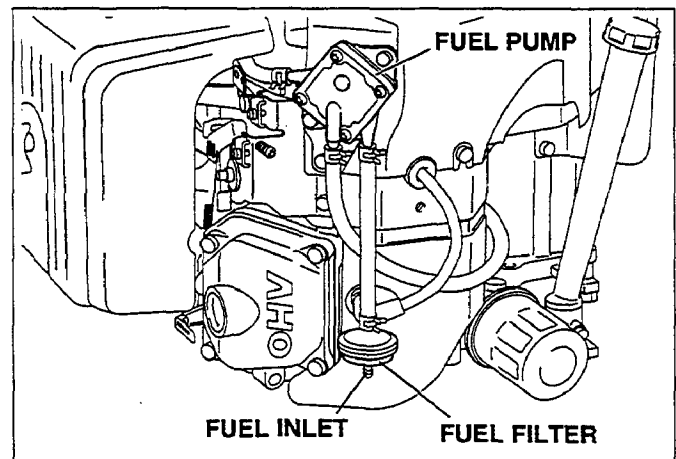


Fig. 4-14

# 4-17 SECTIONAL VIEW OF ENGINE

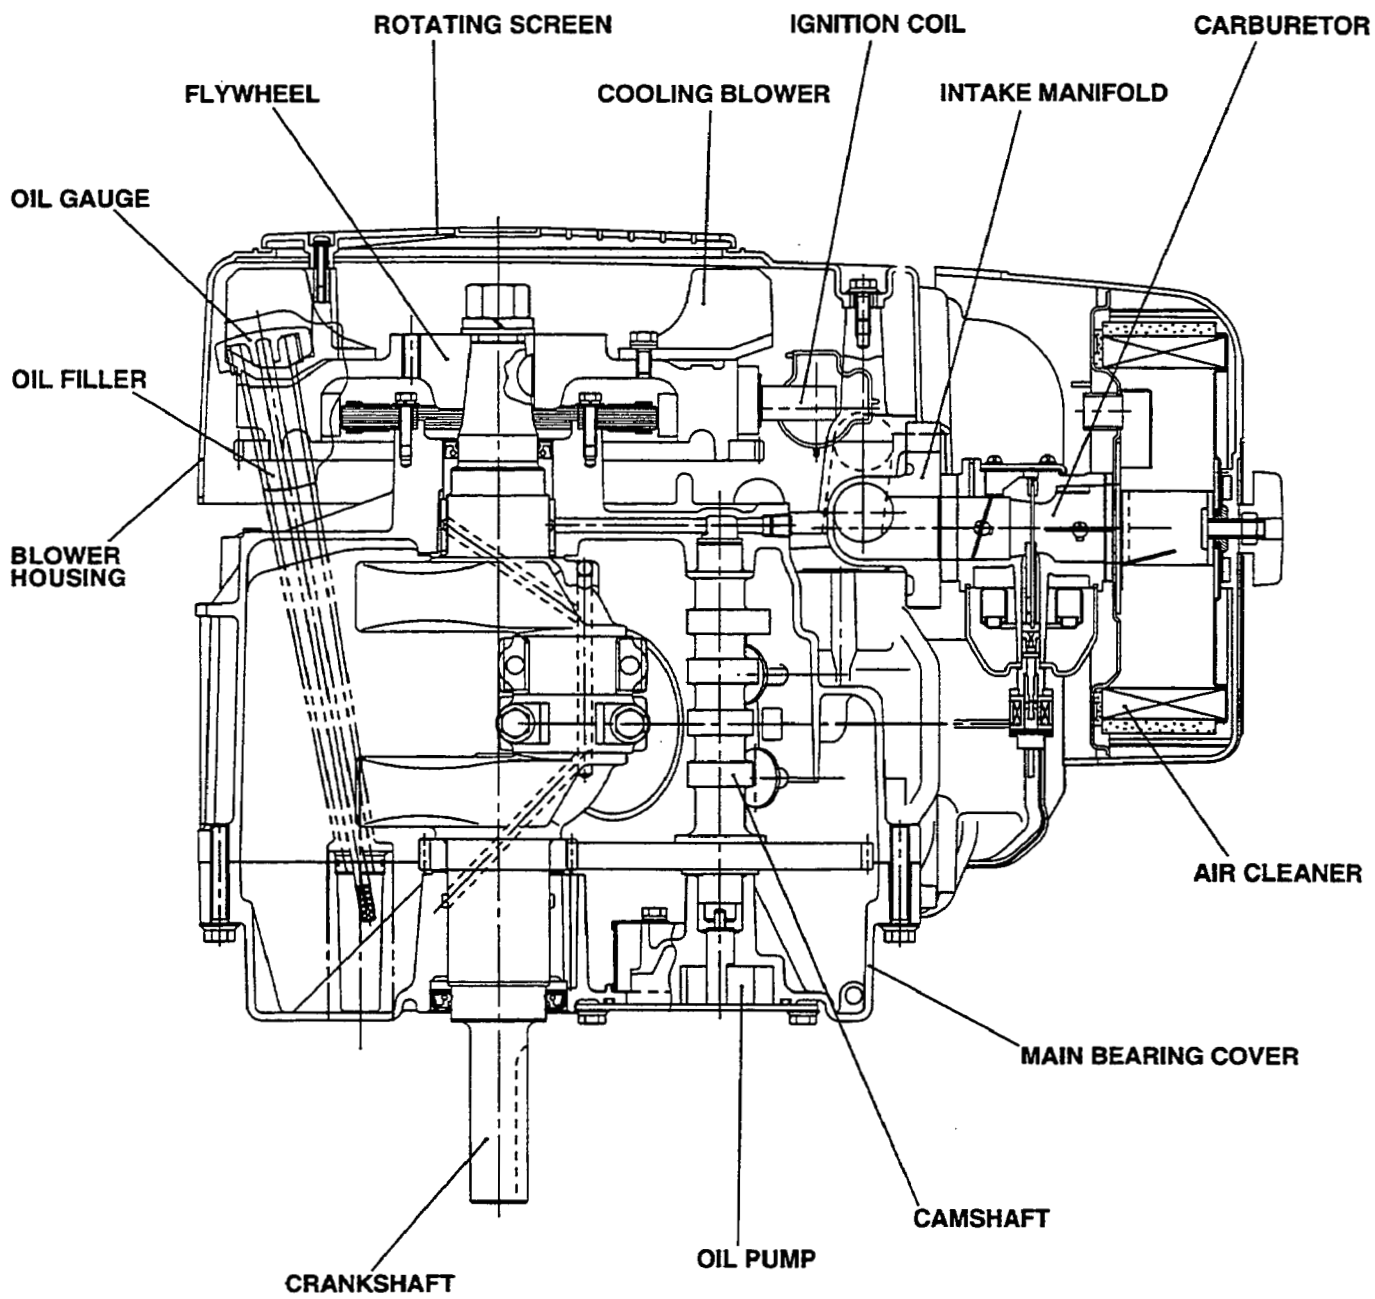


Fig. 4-15

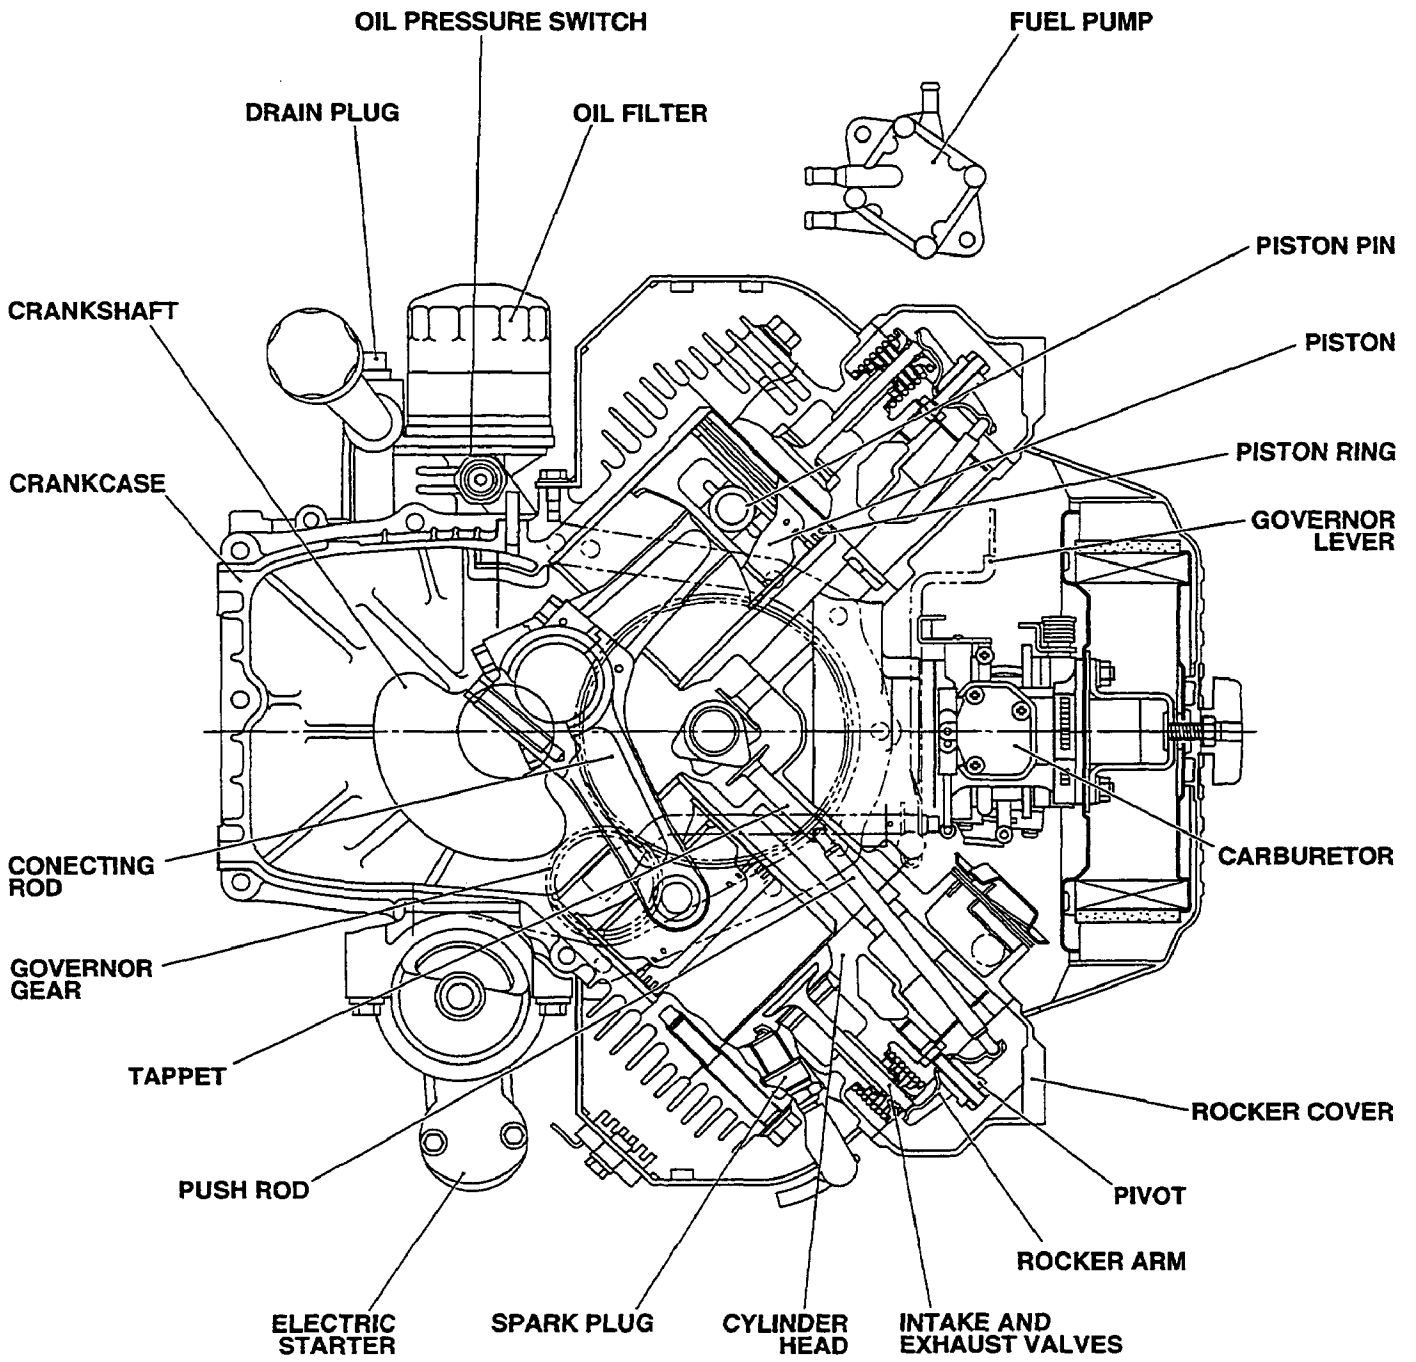


Fig. 4-16

## 5. DISASSEMBLY AND REASSEMBLY

### 5-1 PREPARATIONS AND SUGGESTIONS

When disassembling the engine, memorize the locations of individual parts so that they can be reassembled correctly. If you are uncertain of identifying some parts, it is suggested that tags be attached to them.

Have boxes ready to keep disassembled parts by group.

To prevent losing and misplacing, temporarily assemble each group of disassembled parts.


Carefully handle disassembled parts, and clean them with washing oil if necessary.

Use the correct tools in the correct way.

### 5-2 SPECIAL TOOLS

No Special Tool is needed for disassembling and reassembling the engine.

For pulling off the flywheel, universal type puller being popular in the market place as shown in the illustration is needed.

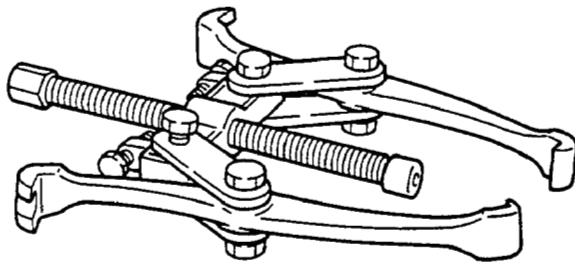

FLYWHEEL PULLER

*Fig. 5-1*



### 5-3 DISASSEMBLY PROCEDURES

| Step | Parts to remove  | Remarks and procedures   | Fasteners |
|------|------------------|--|-----------|
| 1    | Engine oil drain | Drain engine oil by removing plugs located on both sides of crankcase. |           |

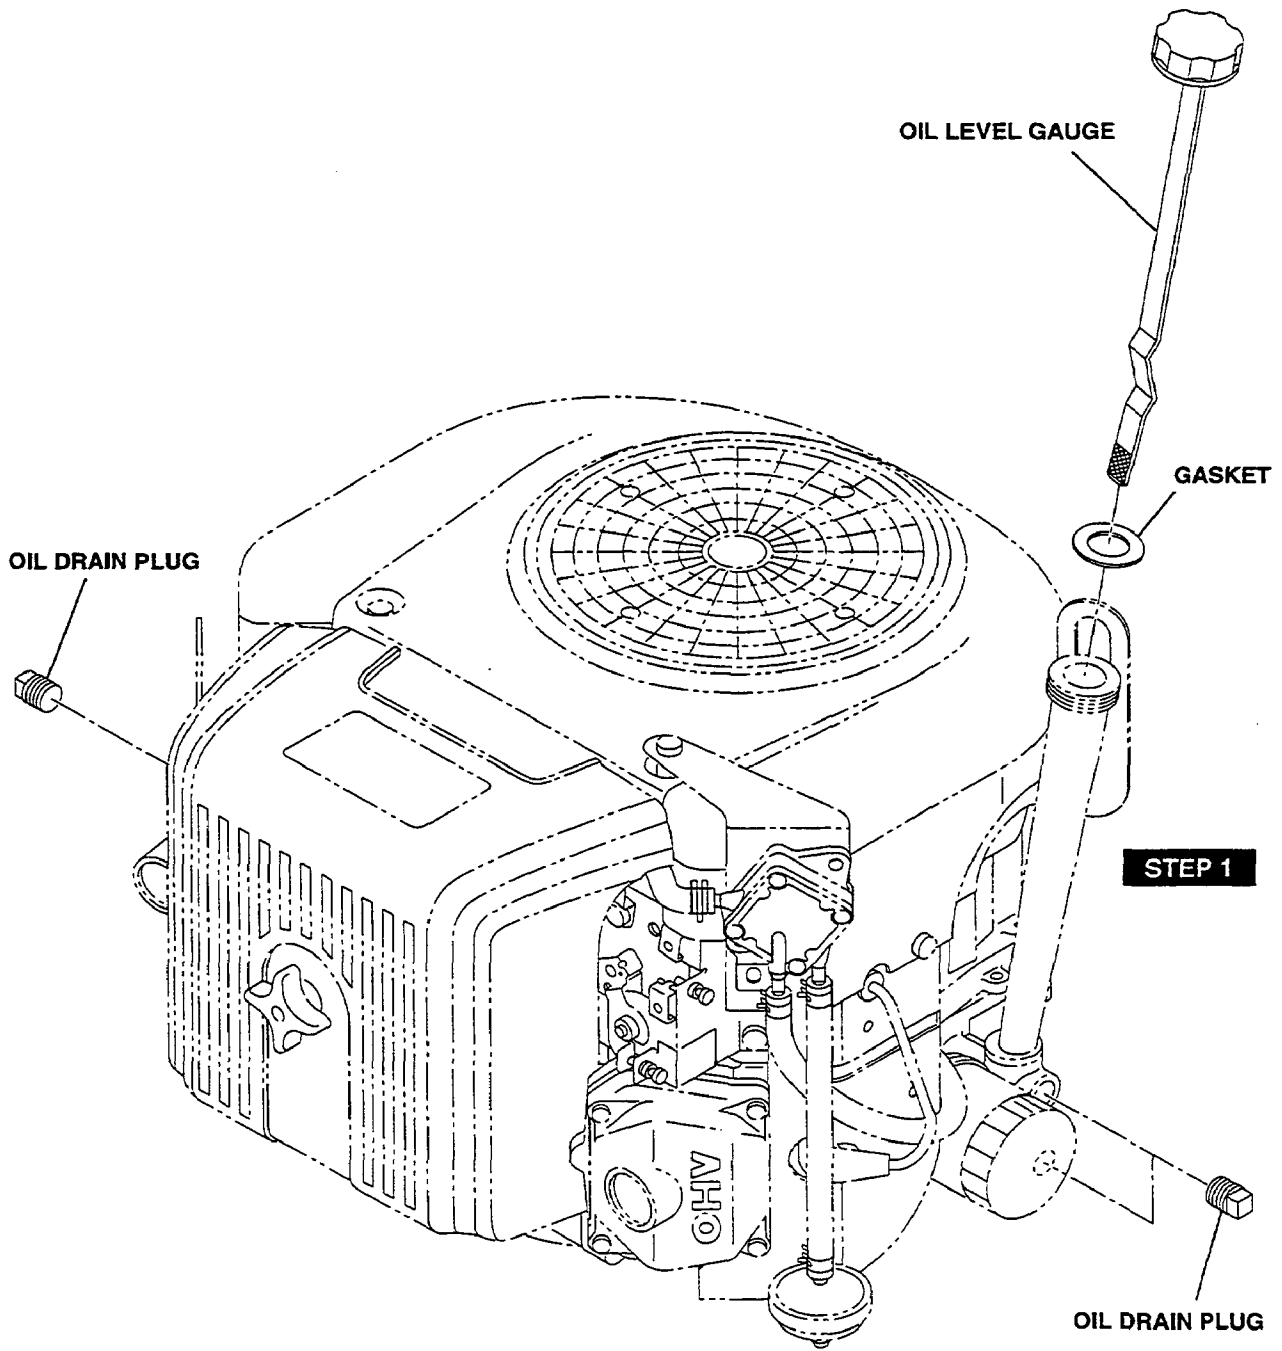


Fig. 5-2

| Step | Parts to remove                | Remarks and procedures                      | Fasteners       |
|------|--------------------------------|---|-----------------|
| 2    | Air cleaner cover and elements |   |                 |
| 3    | Air cleaner base               | Remove breather pipe from #1 cylinder head. | M6 nut ; 2 pcs. |

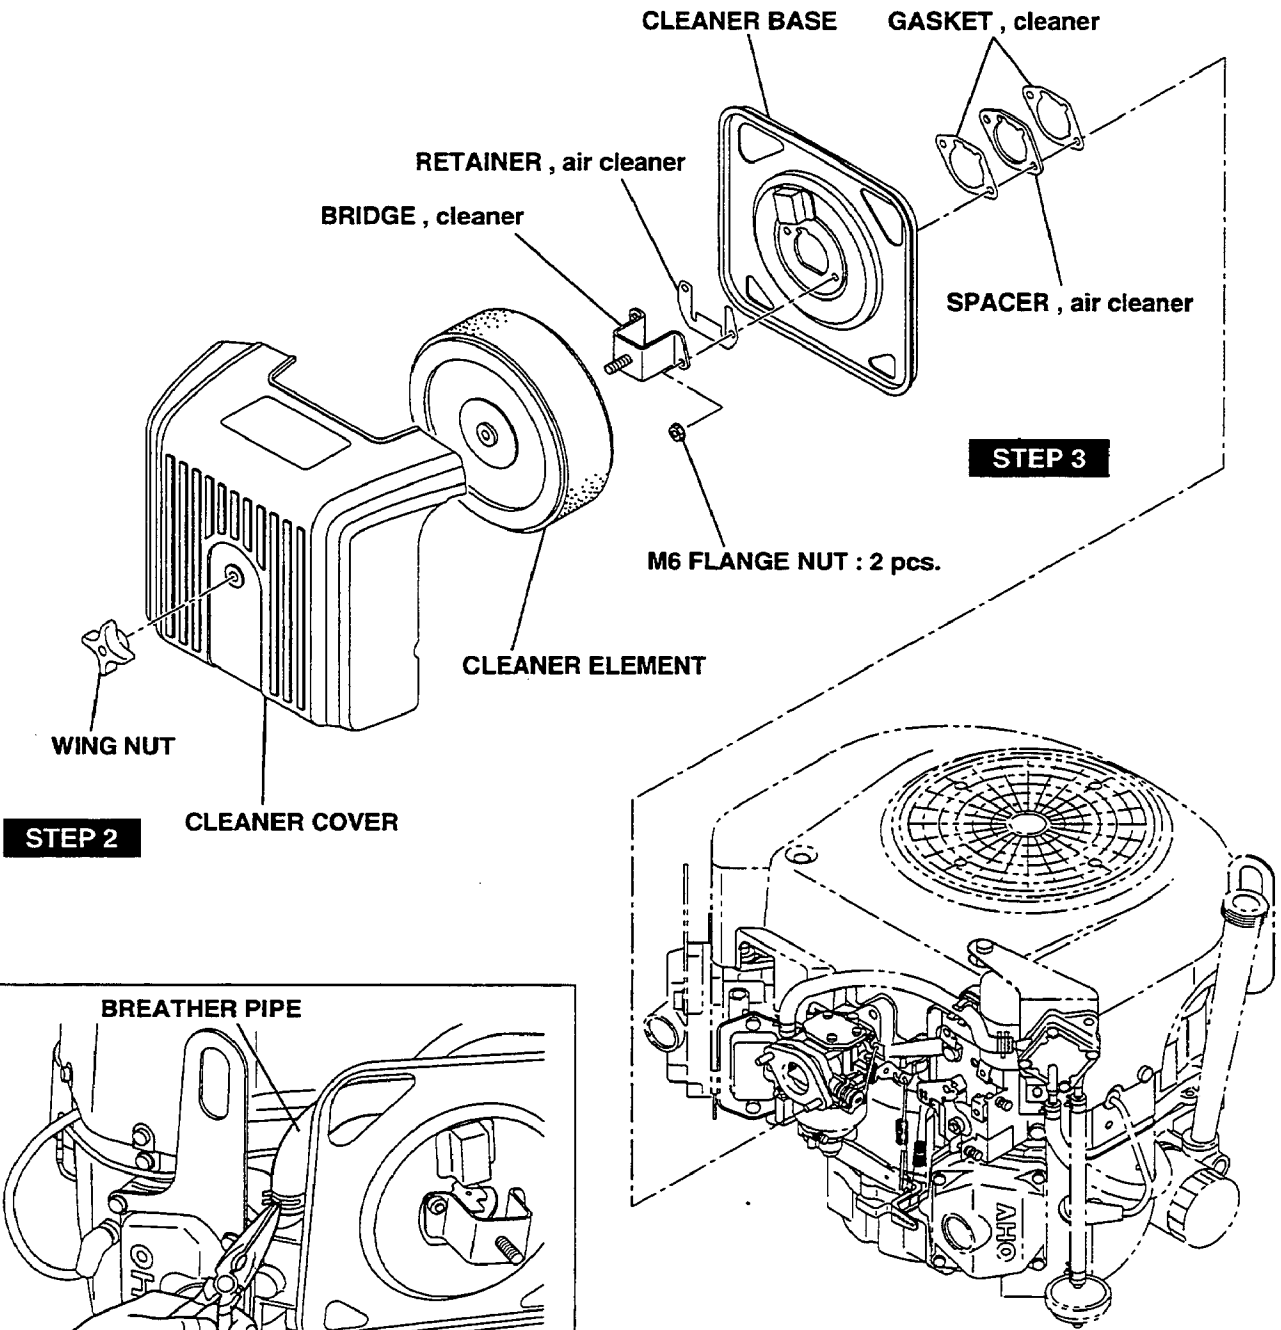


Fig. 5-4

Fig. 5-3

| Step | Parts to remove                    | Remarks and procedures           | Fasteners                        |
|------|------------------------------------|----------------------------------|----------------------------------|
| 4    | Fuel pump bracket                  | Remove pulse pipe and fuel pipe. | M6x14 ; 1 pce.<br>M6x28 ; 1 pce. |
| 5    | Rotating screen and Blower housing |                                  | M4x20 ; 4 pcs.<br>M6x14 ; 6 pcs. |

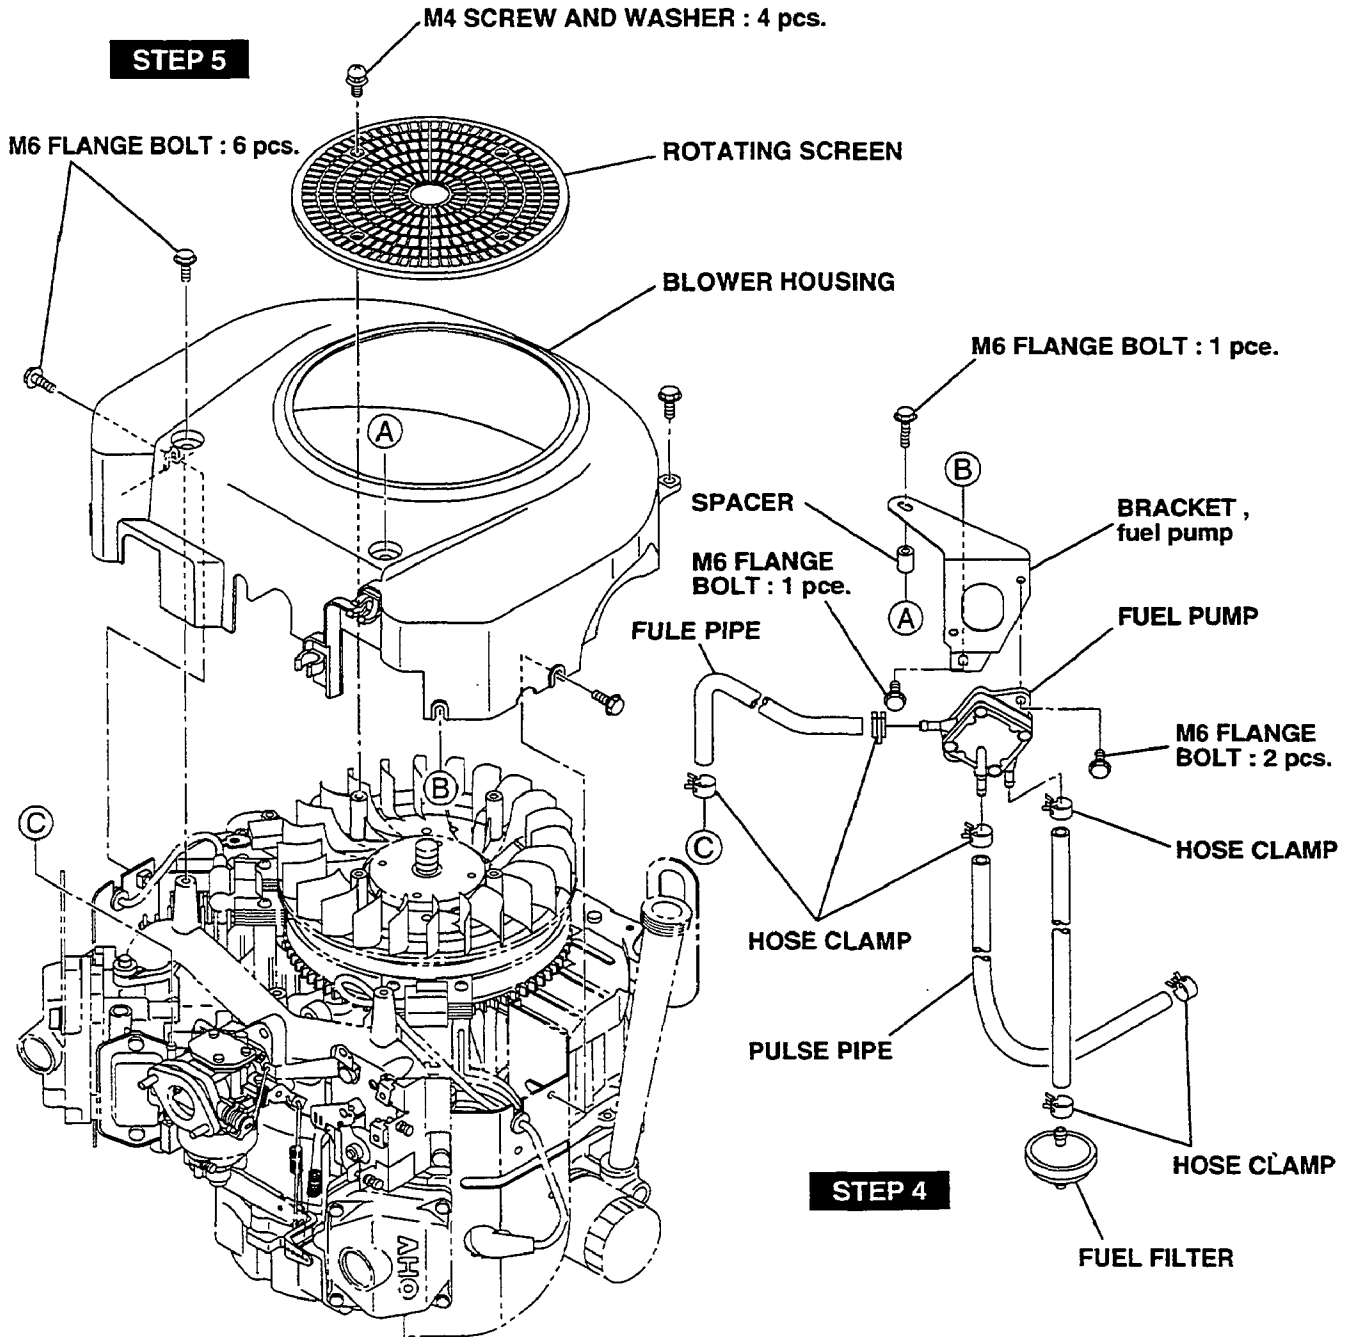


Fig. 5-5

| Step | Parts to remove                          | Remarks and procedures   | Fasteners |
|------|--|--|-----------|
| 6    | Carburetor                               | Take out carburetor along with governor rod, rod spring and choke control rod. |           |
| 7    | Governor lever and speed control bracket |  |           |

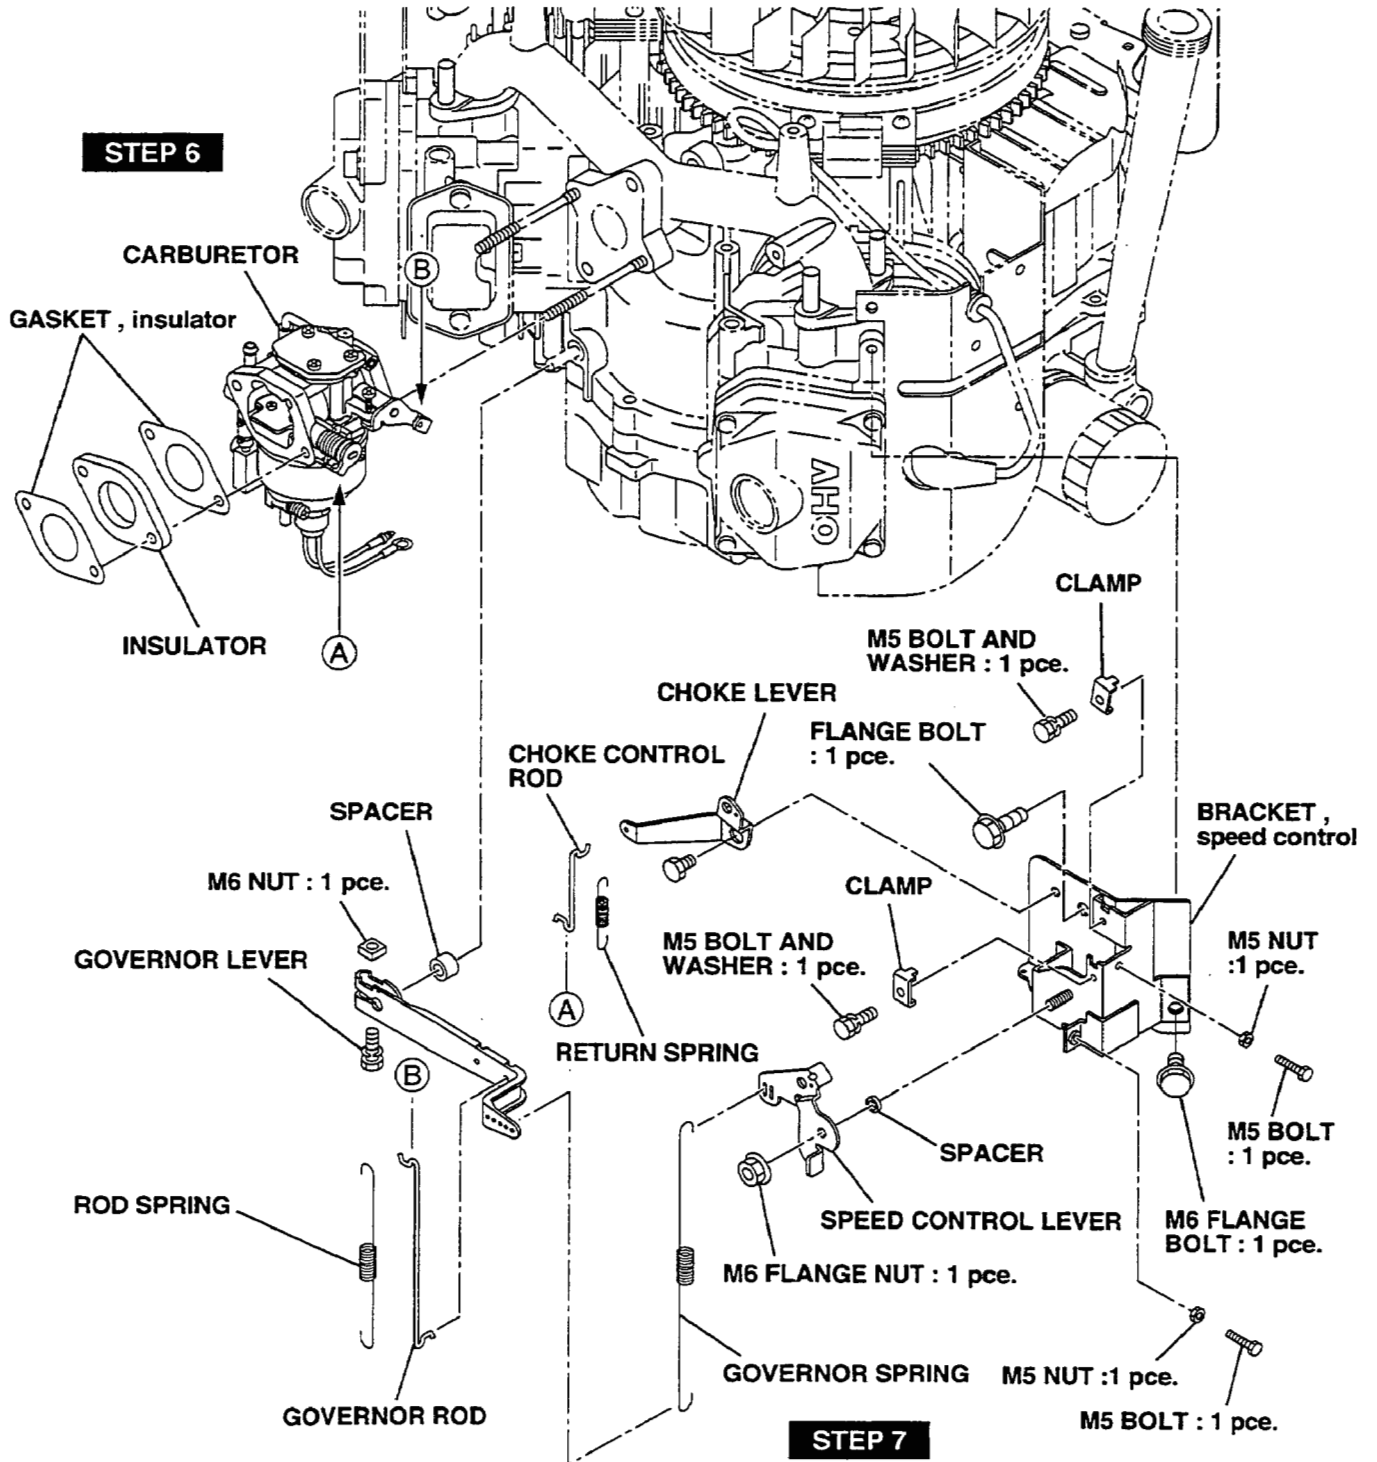


Fig. 5-6

| Step | Parts to remove | Remarks and procedures  | Fasteners                         |
|------|-----------------|---|-----------------------------------|
| 8    | Ignition coil   | 1. Take out plug cap.<br>2. Remove ignition coil.<br>3. Cut out stop wire fixing bands.<br>4. Disconnect stop wires from ignition coil. | M6x30 bolt & washer ; 4 pcs.      |
| 9    | Intake manifold |   | M8 flange nut ;<br>4 pcs.         |
| 10   | Flywheel        | Remove flywheel from crankshaft by using puller.  | M18 nut, washer,<br>spring washer |

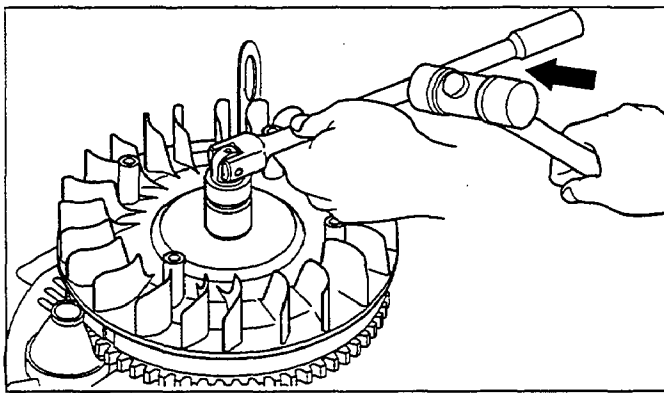


Fig. 5-8

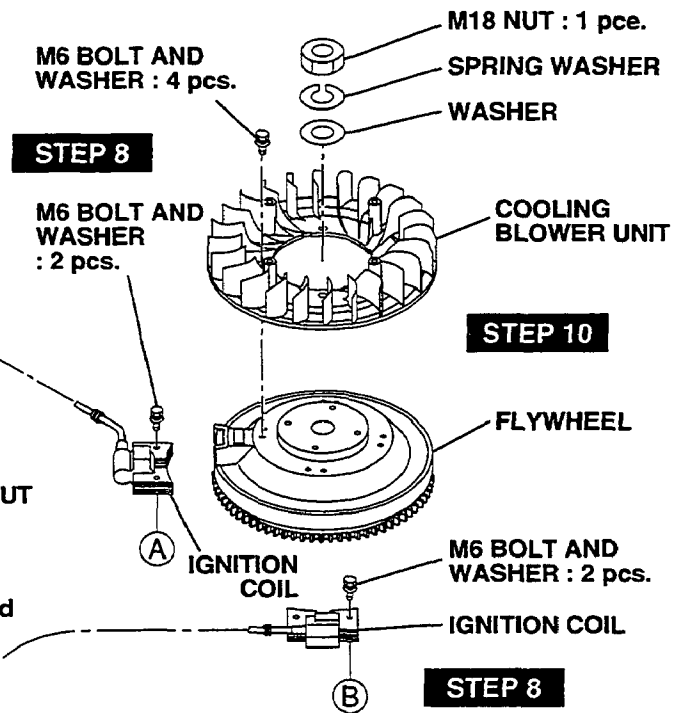


Fig. 5-9


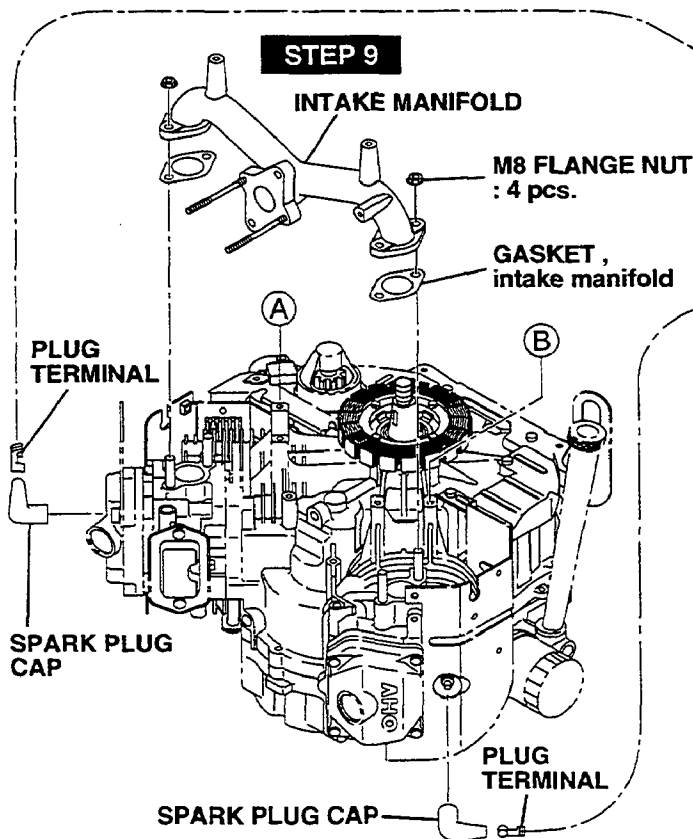


Fig. 5-7

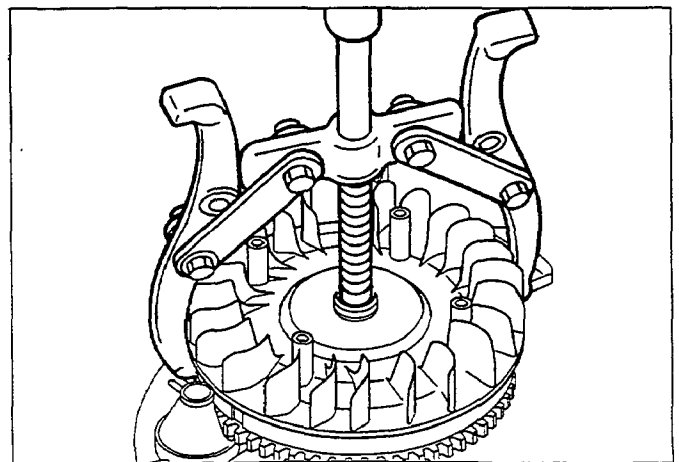

| Step | Parts to remove                   | Remarks and procedures | Fasteners      |
|------|-----------------------------------|------------------------|----------------|
| 11   | Regulator                         |                        | M6x18 ; 2 pcs. |
| 12   | Cylinder baffles (#1, #2, #3, #4) |                        | M6x12 ; 6 pcs. |

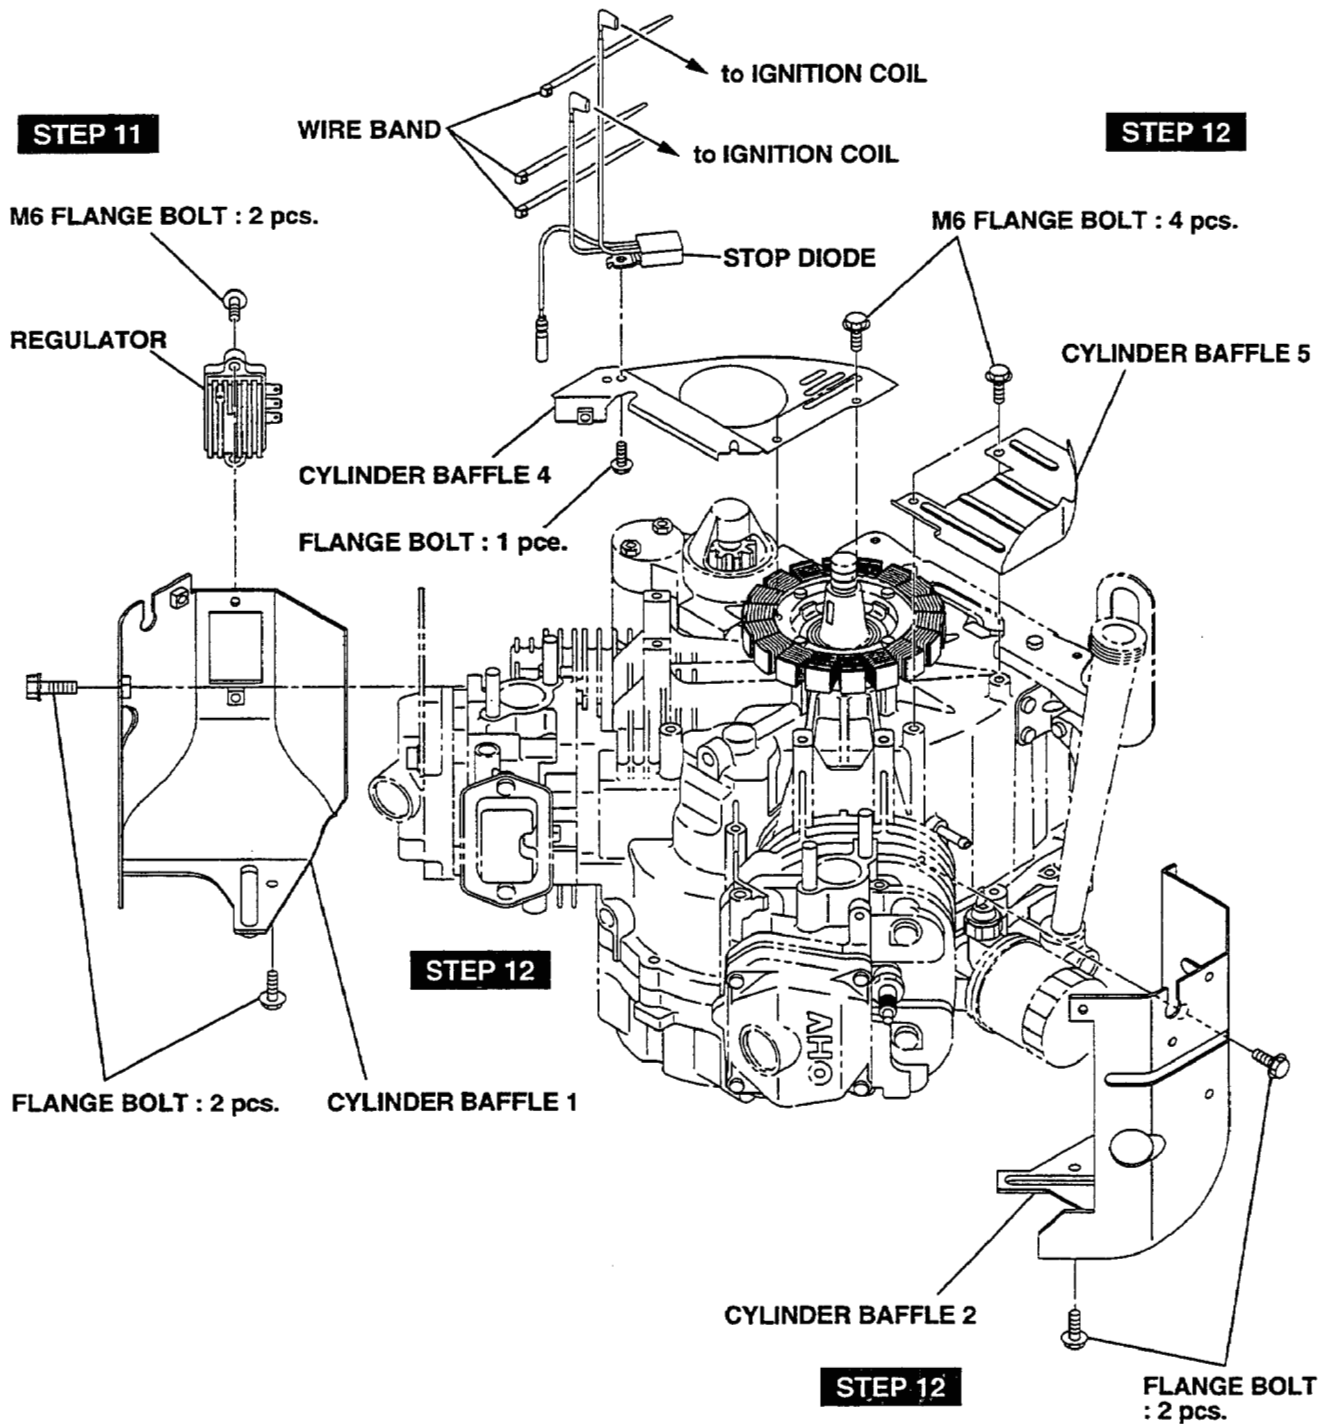


Fig. 5-10

| Step | Parts to remove  | Remarks and procedures | Fasteners        |
|------|------------------|------------------------|------------------|
| 13   | Electric starter |                        | M8x65 ; 2 pcs.   |
| 14   | Charge coil      |                        | M5 x 20 ; 4 pcs. |
| 15   | Spark plug       | NGK : BP6ES or BPR6ES  |                  |

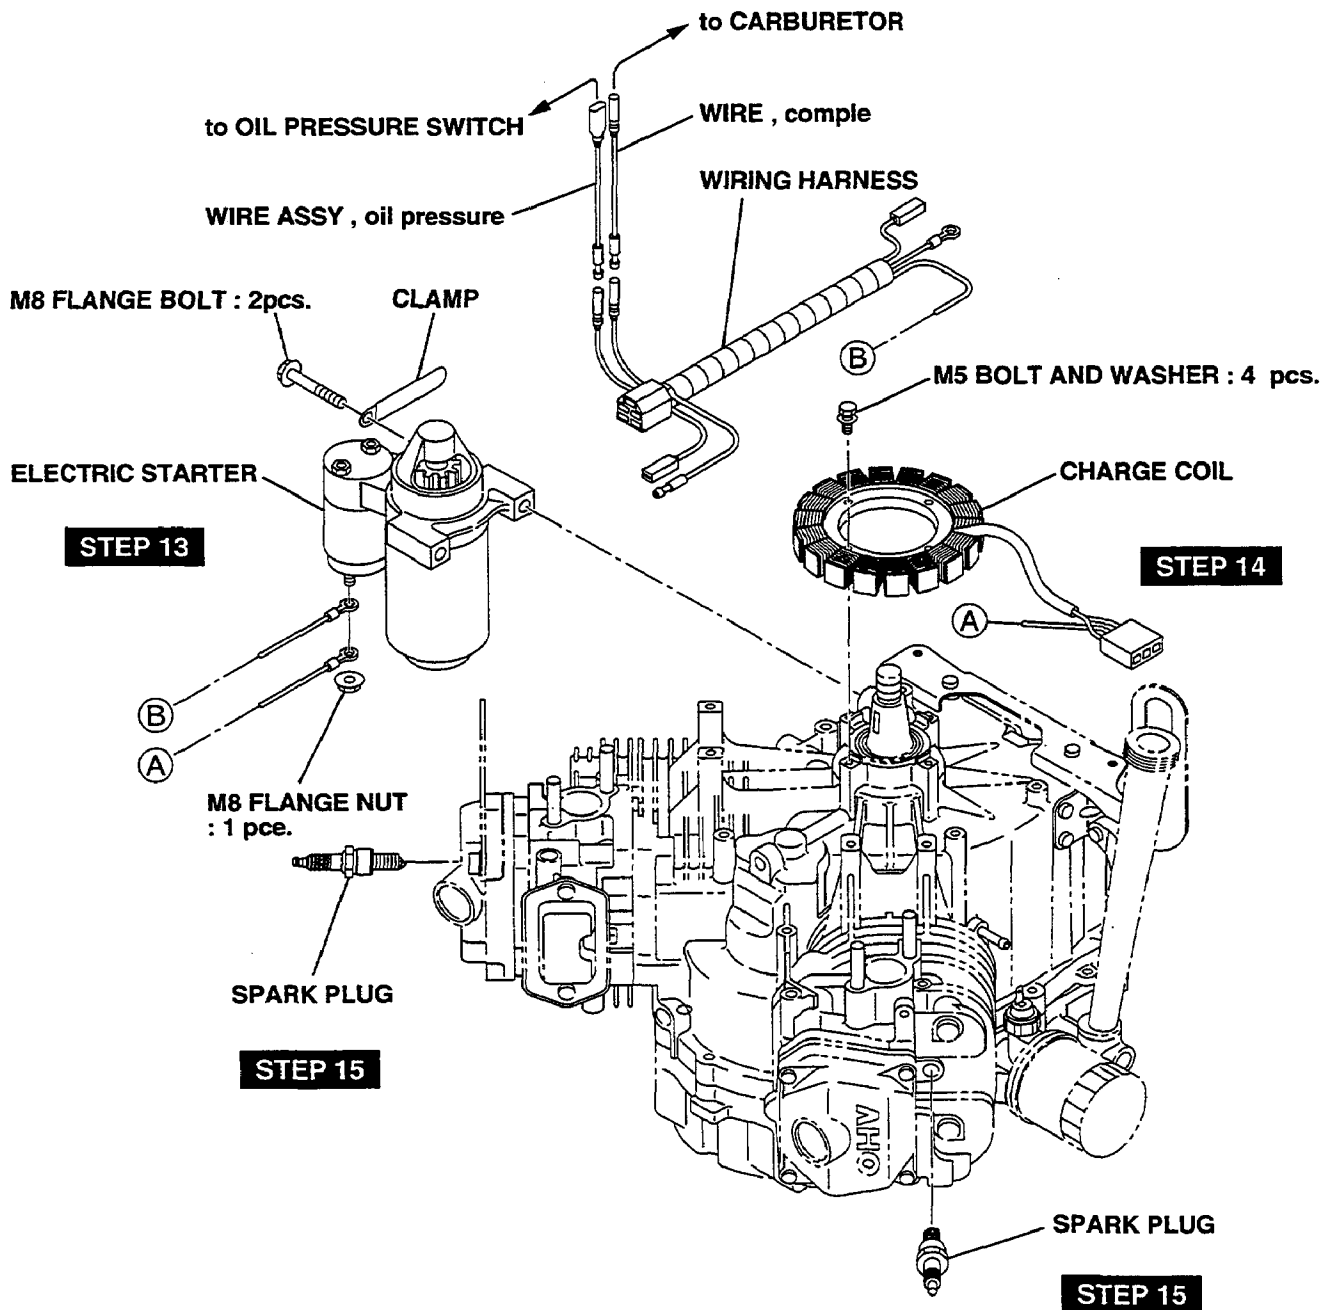


Fig. 5-11

| Step | Parts to remove                                    | Remarks and procedures  | Fasteners       |
|------|--|---|-----------------|
| 16   | Rocker cover                                       |   | M6x12 ; 4 pcs.  |
| 17   | Cylinder head, Push rod, Rocker arm and oil filler | Temporarily fit the flywheel, when removing rocker arm, turn and adjust flywheel at TDC with the marking "T" faced to "1" or "2" on each cylinder head. | M10x65 ; 8 pcs. |

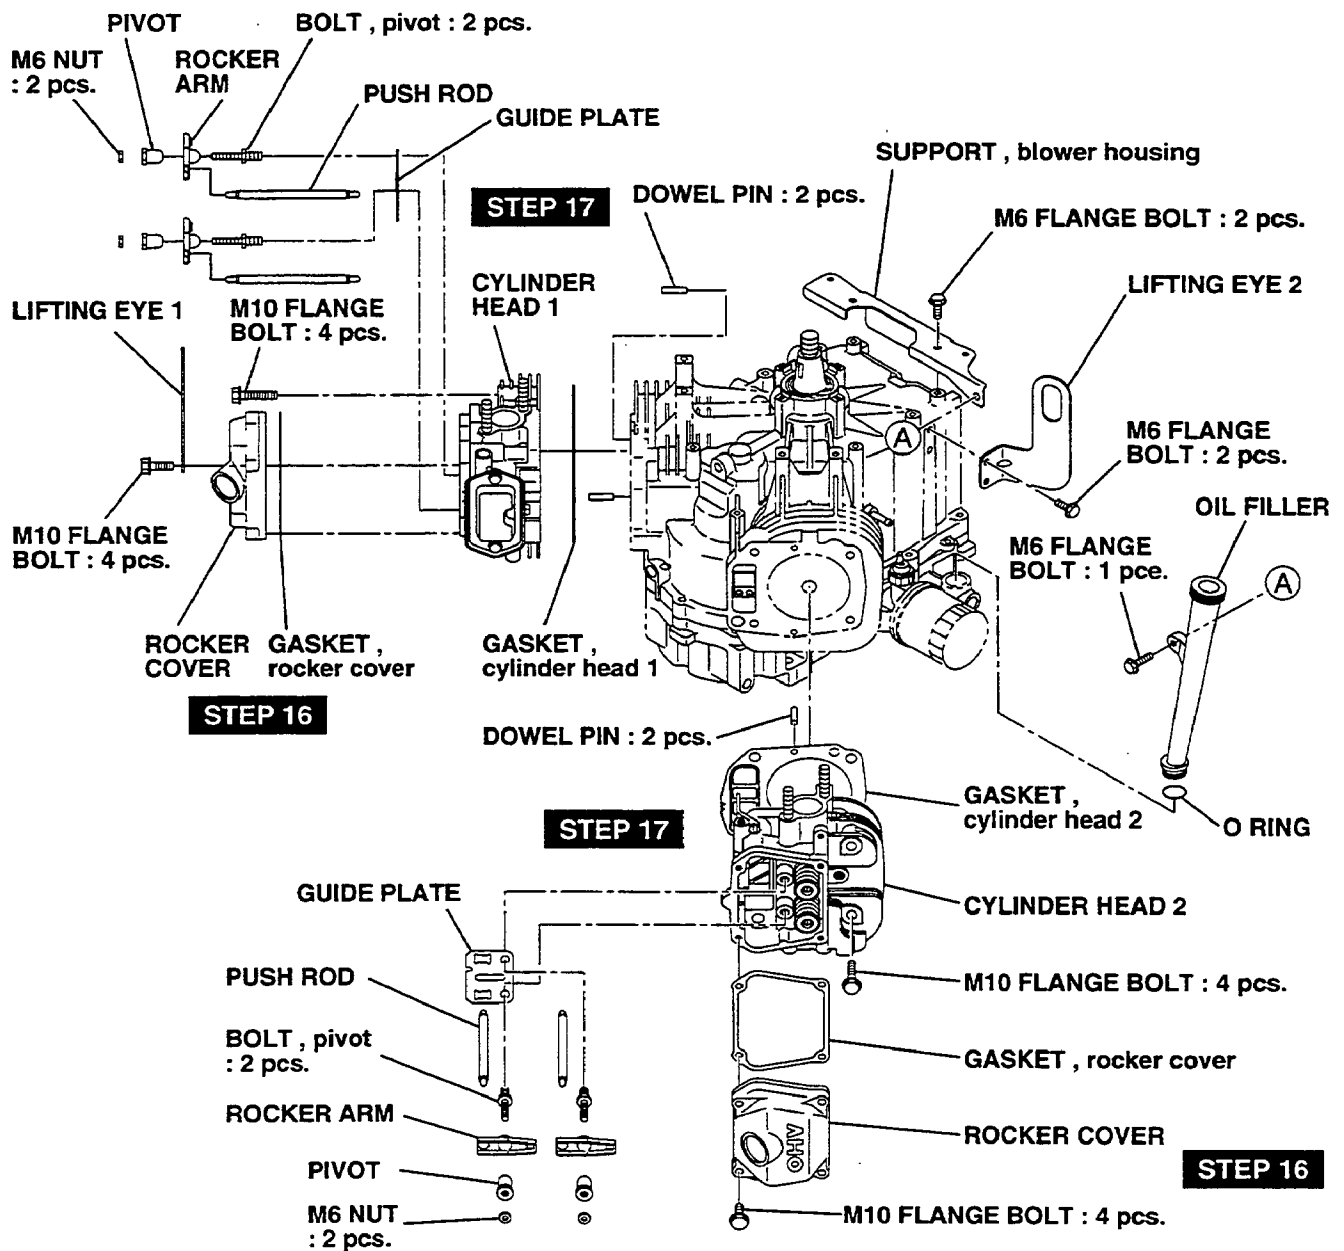


Fig. 5-12



| Step | Parts to remove   | Remarks and procedures | Fasteners |
|------|---|------------------------|-----------|
| 18   | Intake & exhaust valves<br>Breather cover<br>Breather plate |                        |           |

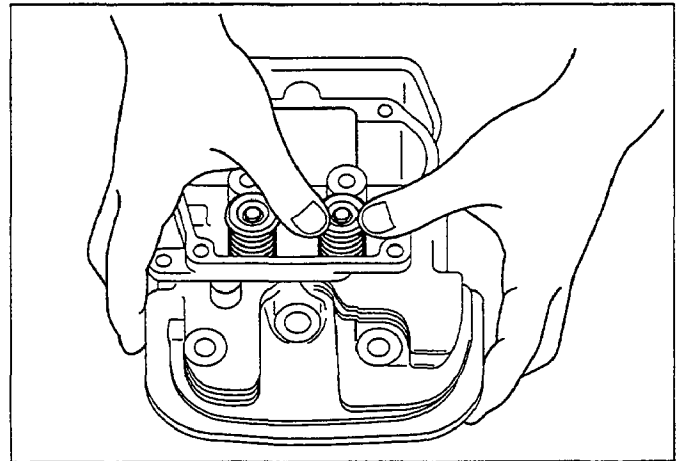


Fig. 5-14

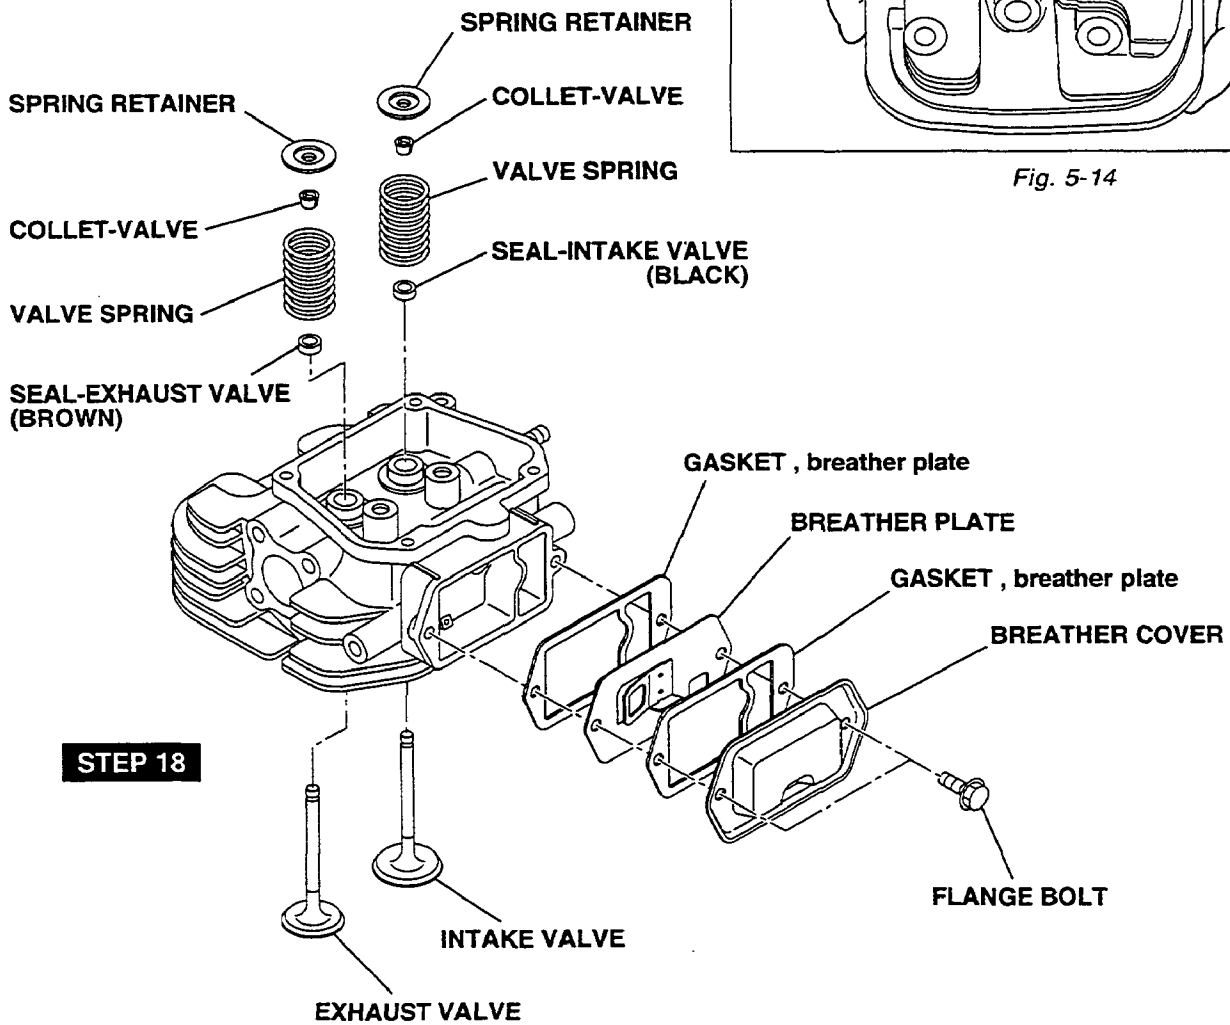


Fig. 5-13

| Step | Parts to remove   | Remarks and procedures  | Fasteners                        |
|------|---|---|----------------------------------|
| 19   | Main bearing cover<br>*Oil pump<br>*Oil filter<br>*Oil pressure switch<br>*Oil relief spring & ball | Take out key from PTO shaft.<br>Wrap PTO shaft with polyvinyl tape not to damage oil seal by key groove edge. | M8x44 ; 7 pcs.<br>M8x75 ; 3 pcs. |

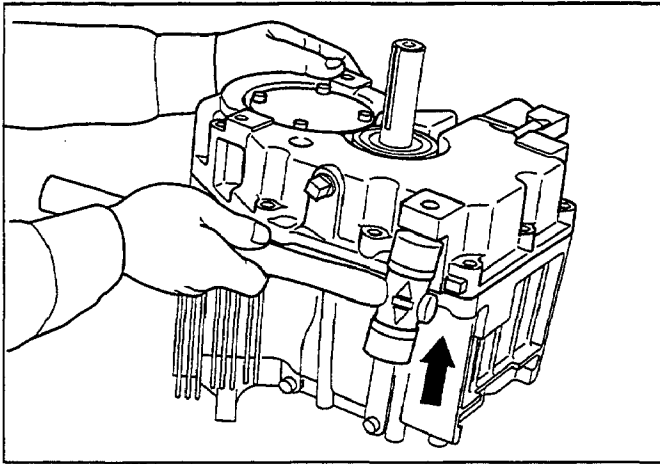


Fig. 5-16

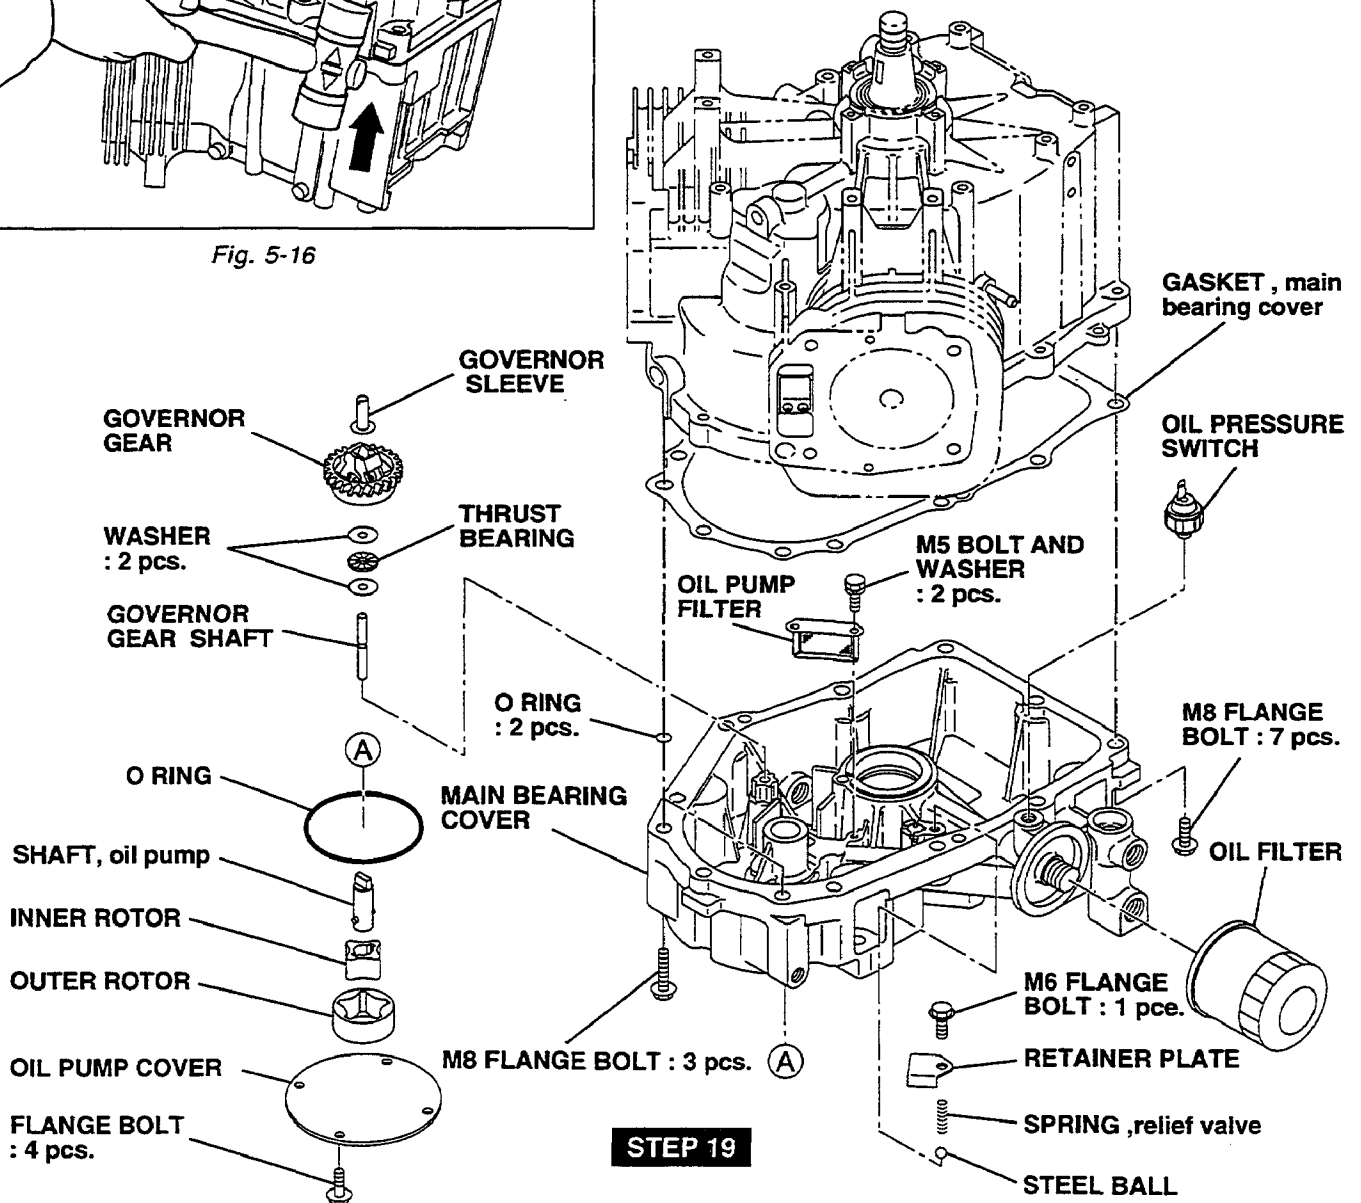


Fig. 5-15

| Step | Parts to remove     | Remarks and procedures  | Fasteners |
|------|---------------------|---|-----------|
| 20   | Camshaft and tappet | Mate the markings both on crankshaft gear and camshaft gear and then take out camshaft. |           |



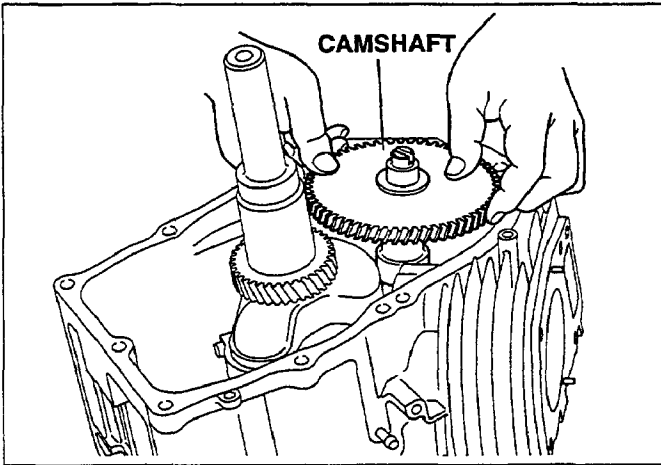


Fig. 5-18

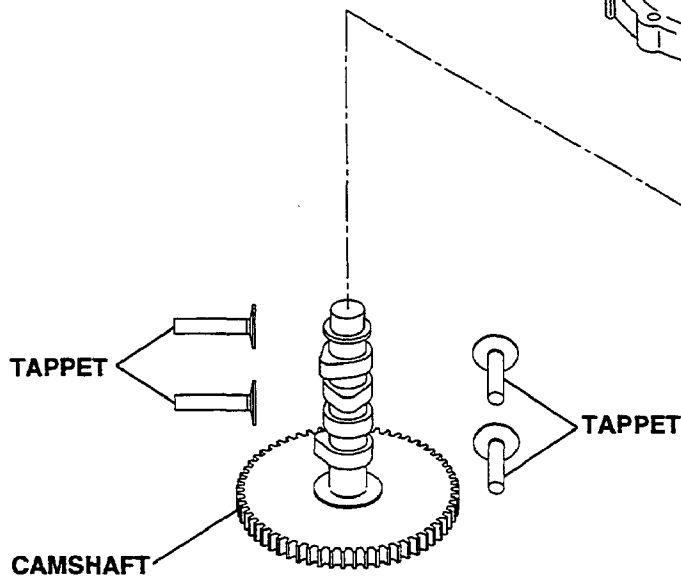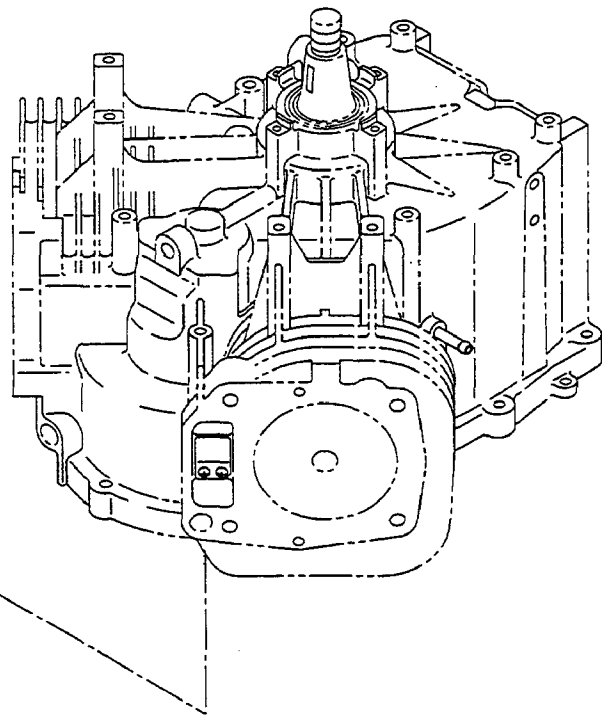

**STEP 20**

Fig. 5-17

| Step | Parts to remove  | Remarks and procedures  | Fasteners   |
|------|--|---|-------------|
| 21   | Piston and Connecting rod<br>*Piston pin clips<br>*Piston pin<br>*Piston rings | 1. Remove connecting rod bolts.<br>2. Take out connecting rod cap.<br>3. Push the connecting rod upwards and take out along with piston.<br><br>Put the marking of original position onto each piston, ring, clip, piston pin, connecting rod and cap for reassembly. | M8 ; 4 pcs. |
| 22   | Crankshaft   | 1. Remove key from crankshaft.<br>2. Remove crankshaft tapping at the flywheel end using plastic hammer.  |             |

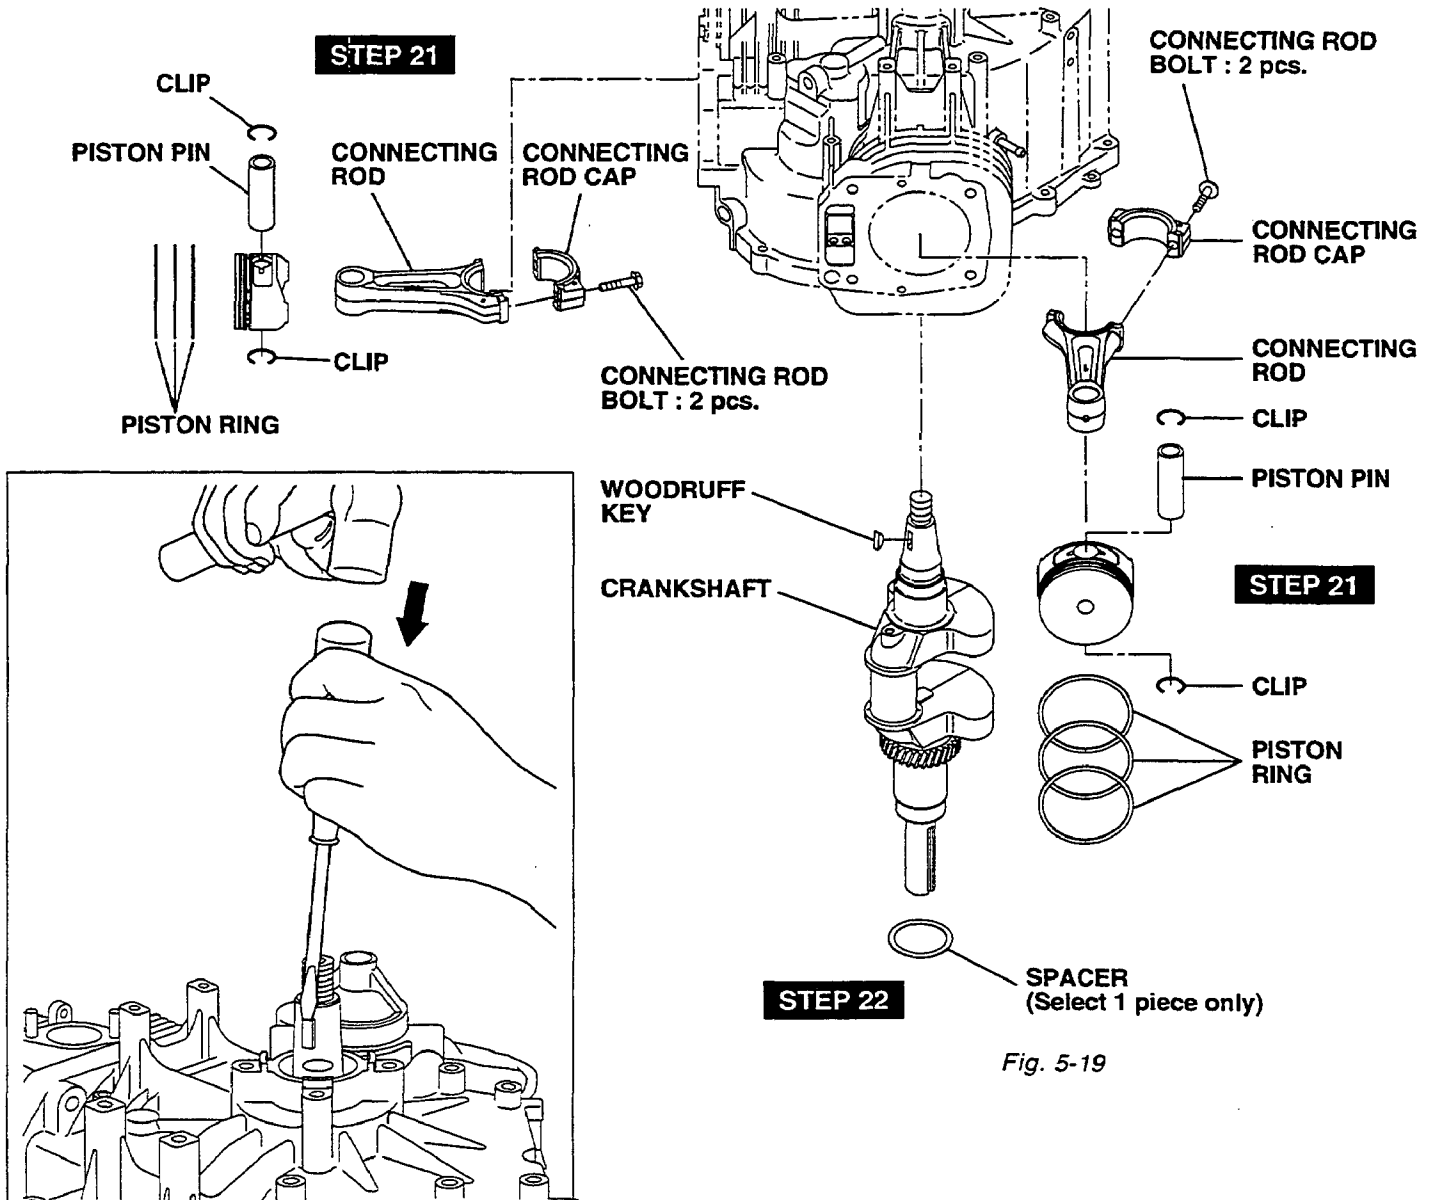


Fig. 5-20

Fig. 5-19

| Step | Parts to remove                                   | Remarks and procedures | Fasteners |
|------|---|------------------------|-----------|
| 23   | Crankcase<br>*Governor lever shaft<br>*Leaf valve |                        |           |

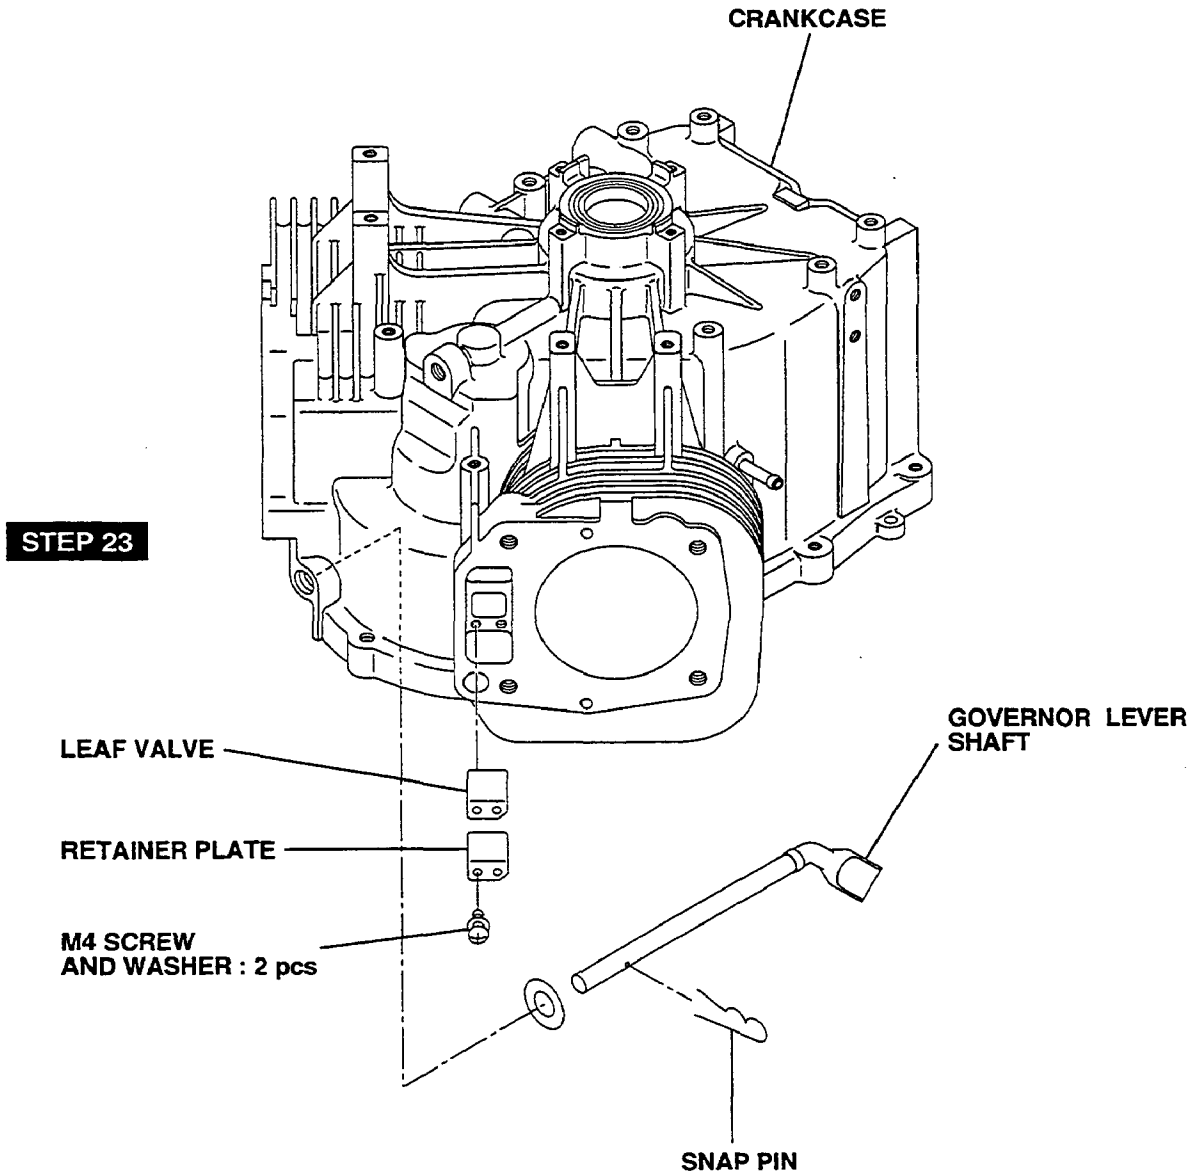


Fig. 5-21

## 5-4 REASSEMBLY PROCEDURES

### 5-4-1 PRECAUTIONS FOR REASSEMBLY

1) Clean parts thoroughly before reassembly.

Pay most attention to cleanliness of piston, cylinder, crankshaft, connecting rod and bearings.

2) Scrape off all carbon deposits from cylinder head, piston top and piston ring grooves.

3) Check lip of oil seals. Replace oil seal if the lip is damaged. Apply oil to the lip before reassembly.

4) Replace all the gaskets with new ones.

5) Replace keys, pins, bolts, nuts, etc., if necessary.

6) Torque bolts and nuts to specification referring to the "TORQUE SPECIFICATIONS".

7) Apply oil to rotating and sliding portions.

8) Check and adjust clearances and end plays where specified in this manual.

### 5-4-2 Pre-assembly

#### A. CRANKCASE

(1) Fit governor lever shaft with snap pin.

(2) Attach leaf valve to crankcase.

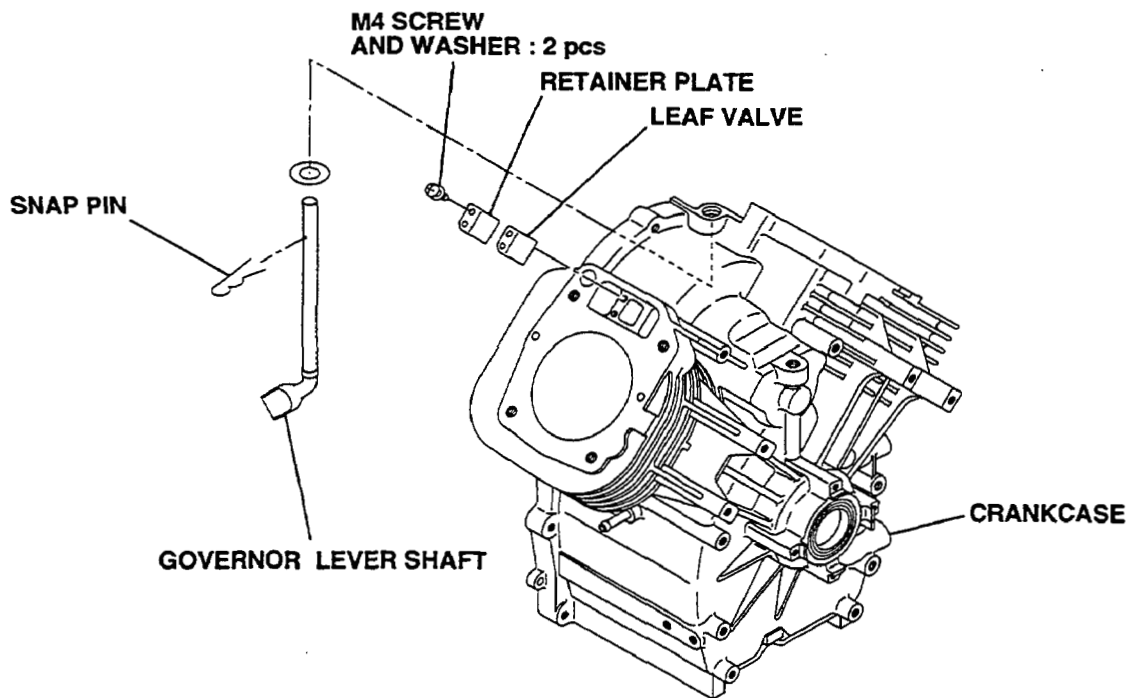


Fig. 5-22

## B. CYLINDER HEAD, VALVES and ROCKER ARM

### NOTE ;

- Clean valves and wash cylinder head thoroughly.
- Remove carbon and gum deposits from the valves, seats, ports and guides.
- Inspect valves, valve seats and valve guides.
- \* Replace valves that are badly burned, pitted or warped.
- Valve guides should be replaced when valve stem clearance exceeds specifications.  
(Refer to SERVICE DATA for clearance specifications. )

If exceeds, draw valve guides out and press new guides in.

After replacing valves and guides, lap valves in place until a uniform ring shows around the face of the valve.

(1) Attach oil seal both onto intake and exhaust valve guide.

(2) Apply oil to valve spring and valve stem.

Place cylinder head on flat table and install valve spring, valve and spring retainer.

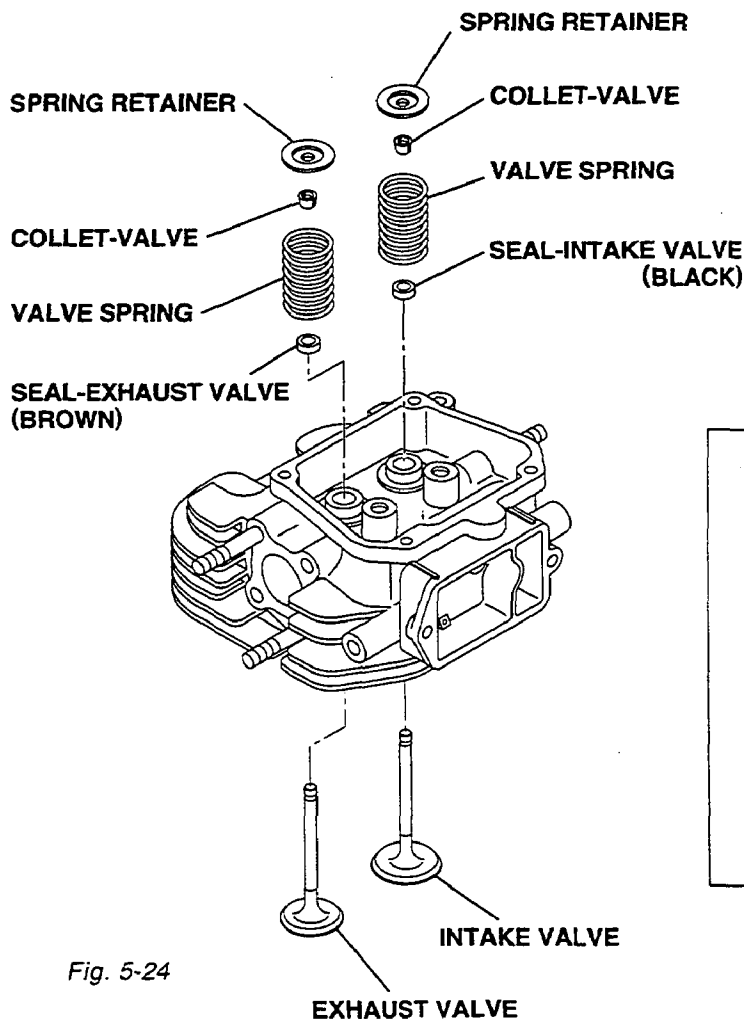


Fig. 5-24

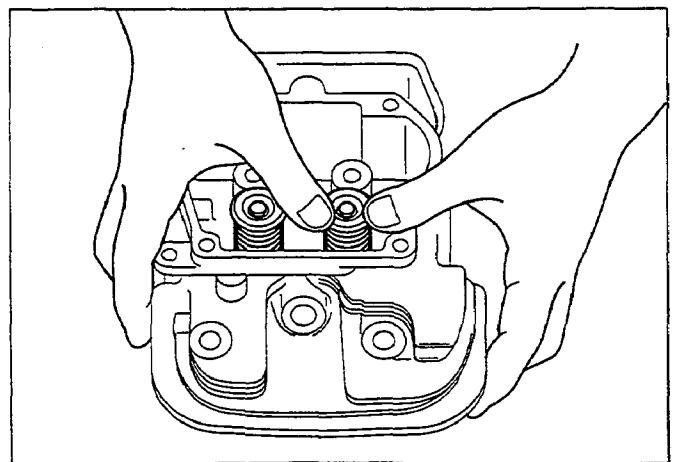


Fig. 5-23

**C. PISTON and CONNECTING ROD**


(1) Install oil ring first, then second ring and top ring. Spread ring only far enough to slip over piston and into correct groove. Use care not to distort ring.

**NOTE ;**

- \* Install second ring with punched mark beside the gap face upward.
- \* Top ring can be fit either way.
- \* As for oil ring, rails should be placed on and below the expander.

(2) Apply enough oil to small end of connecting rod and piston pin, and fix connecting rod to piston with piston pin.

(3) Use clips on the both side of the piston pin to secure piston pin in position.

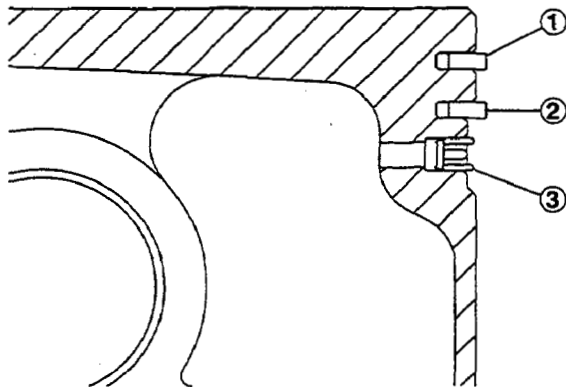

|   |             |                  |  |
|---|-------------|------------------|--|
| ① | TOP RING    | BARREL           |  |
| ② | SECOND RING | TAPER            |  |
| ③ | OIL RING    | COMBINATION RING |  |

Fig. 5-25



#### D. Main bearing cover and governor gear

- (1) Insert washer into governor gear shaft.
- (2) Insert governor gear along with sleeve into governor gear shaft.
- (3) Insert ball and spring into the oil relief valve hole and tighten bolt by the specified torque.

**Tightening Torque : 6.9 - 8.8 N · m (70 - 90 kg · cm, 5.1 - 6.5 ft · lb.)**

- (4) Tighten oil drain plugs on both side of main bearing cover.

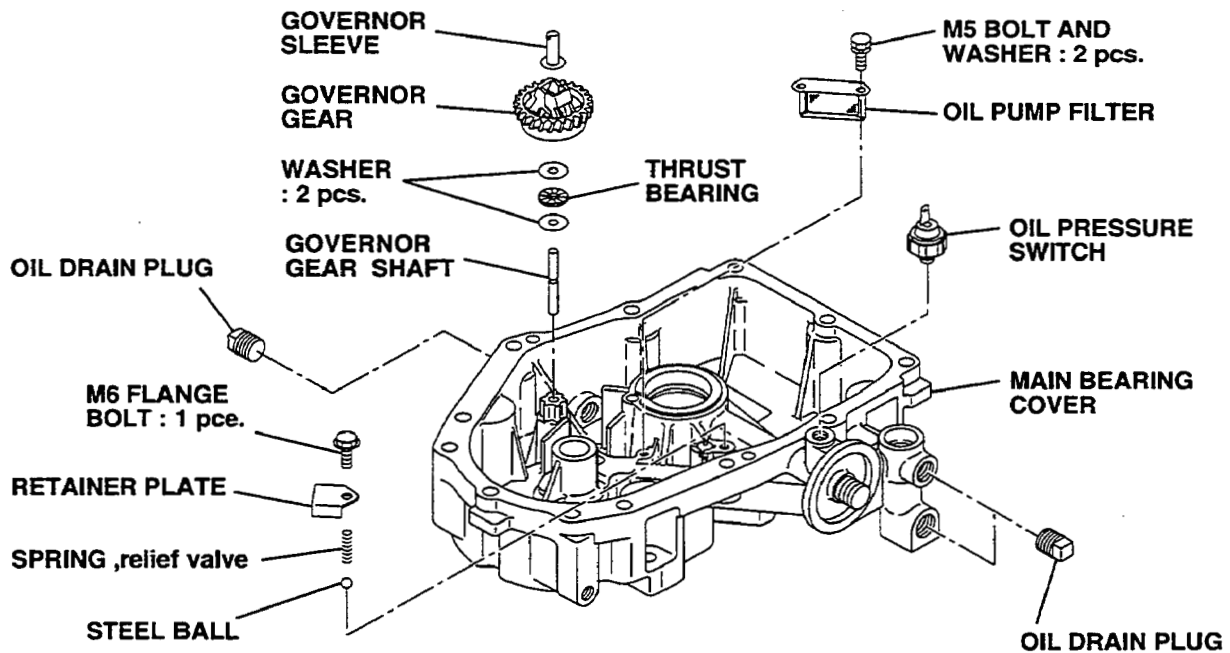


Fig. 5-26

#### 5-4-3 Re-assembly

##### 1) CRANKSHAFT

- (1) Install crankshaft on crankcase wrapping the key-way with polyvinyl tape to avoid damage to oil seal.

**Note:**

**Apply enough oil to bearing portion of crankcase. For easy installation, put crankcase on box or wood blocks.**

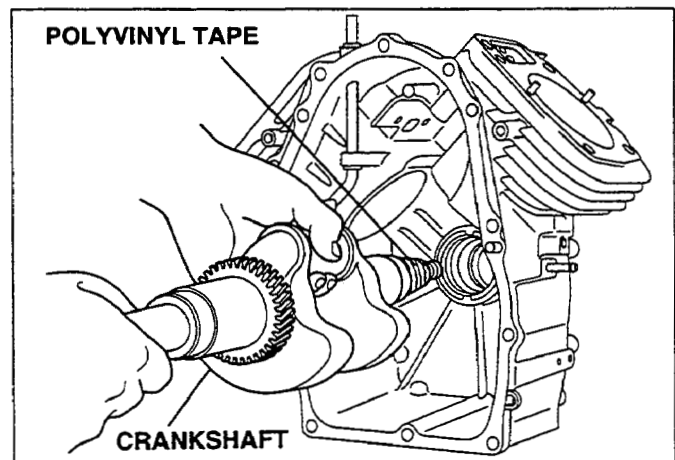


Fig. 5-27

- (2) Install woodruff key for flywheel on crankshaft.

## 2) PISTON and CONNECTING ROD

- (1) Install piston and connecting rod assembly into cylinder by using a piston ring compressor to hold piston rings.

### Note:

- The "1" mark of the connecting rod for #1 cylinder and "2" mark for #2 cylinder should be faced to the main bearing cover side when assembled.
- Apply enough oil to piston rings, connecting rod bearings (large end) and cylinder bore before assembly.
- \* Set gaps of piston rings as shown in the illustration.

- (2) Temporary fit flywheel and turn crankshaft to BTDC (bottom dead center). Lightly tap the top of piston until large end of the rod meet the pin portion of crankshaft.

- (3) Set connecting rod cap to connecting rod with the alignment marks mated and the clinching portion clinched. Tighten bolts by the specified torque.

**Tightening Torque : 22.1 - 27.0 N-m  
(225 - 275 kg-cm)  
(16.3 - 19.9 ft-lb.)**

- (4) Check for free movement of piston and connecting rod by turning crankshaft slowly.

## 3) TAPPET and CAMSHAFT

- (1) Apply oil to tappets and install in their original position. Push in fully to avoid damage during camshaft installation.
- (2) Lubricate bearing surfaces of camshaft. Install camshaft into the crankcase with the timing mark on both crankshaft gear and camshaft aligned.

### CAUTION :

**Incorrect alignment will cause malfunction of the engine.**

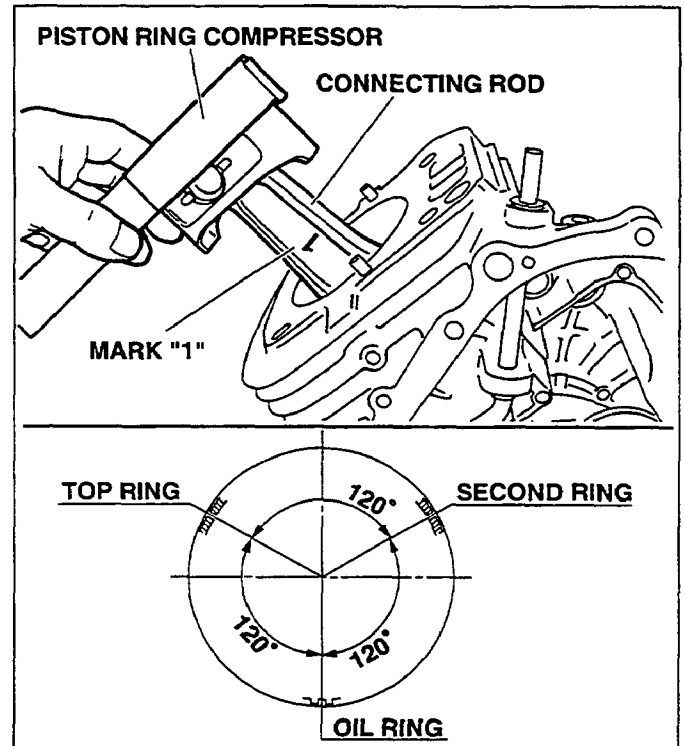


Fig. 5-28

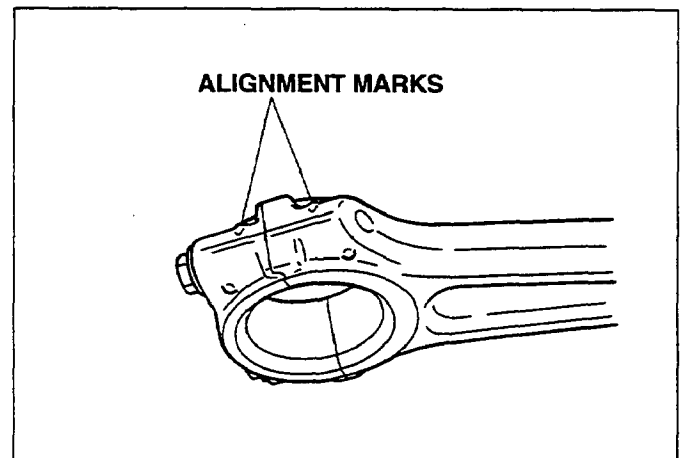


Fig. 5-29

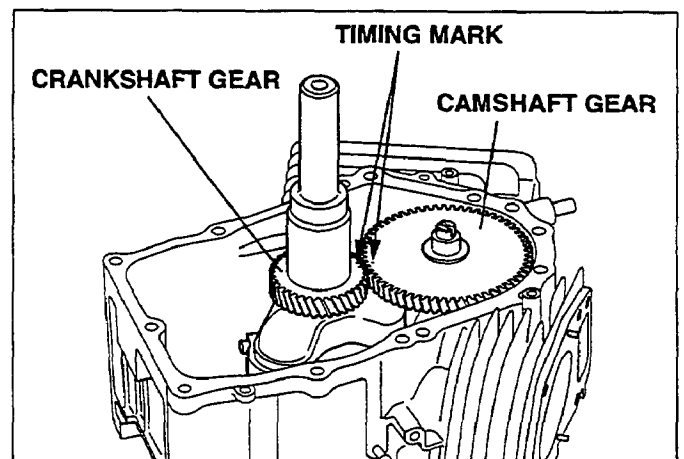


Fig. 5-30

4) Adjust crankshaft end play

(1) Adjust end play to the specified values using the proper spacer.

The proper spacer may be determined following manner.

- i) Measure the depth "A" (From the mating surface to the boss.)
- ii) Measure the height "B" (From the mating surface to the crank gear.) . . . . . (B= ① - ②)

$(A+0.36)-B=$  SIDE CLEARANCE (mm)

$(\text{SIDE CLEARANCE})-0.2 \text{ mm} =$  THICKNESS OF CRANKSHAFT SHIM (mm)

$(A+0.014)-B=$  SIDE CLEARANCE (in.)

$(\text{SIDE CLEARANCE})-0.008 \text{ in.} =$  THICKNESS OF CRANKSHAFT SHIM (in.)

Following are available spacer shims.

|              | CRANKSHAFT            |
|--------------|-----------------------|
| SPACER SHIMS | T= 0.6 mm (0.024 in.) |
|              | T= 0.8 mm (0.031 in.) |
|              | T= 1.0 mm (0.039 in.) |

Table. 5-1

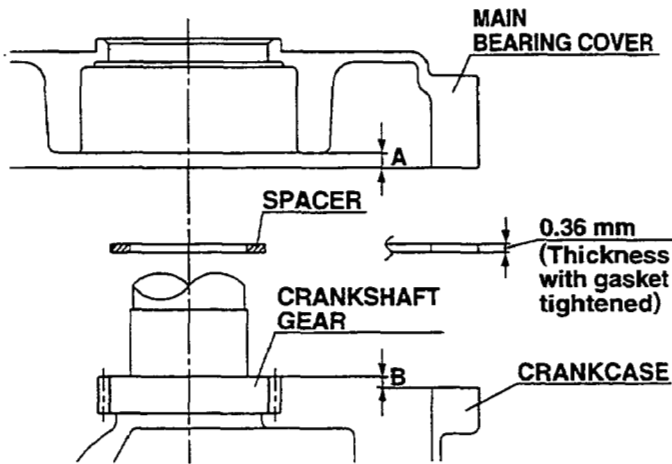


Fig. 5-31

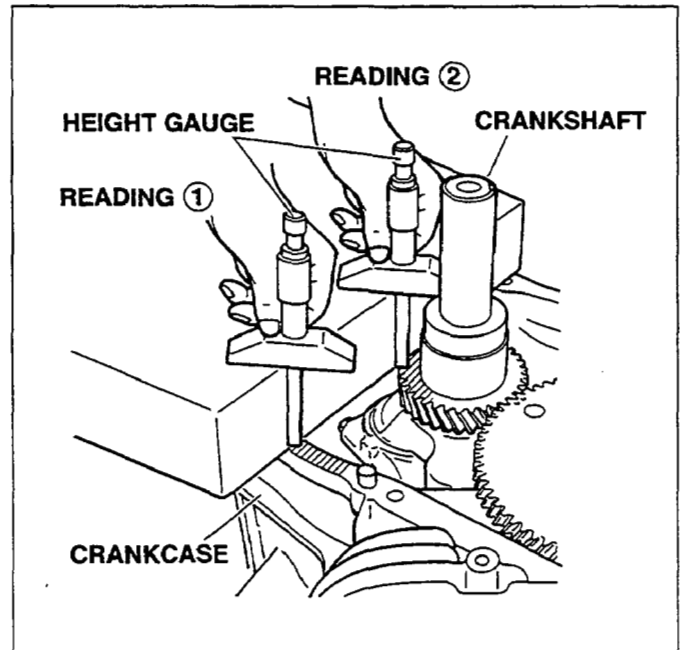


Fig. 5-32

## 5) MAIN BEARING COVER

- (1) Put a oil seal guide onto PTO shaft portion to avoid damaging the main bearing cover oil seal.
- (2) Place gasket onto the mating surface of crankcase.
- (3) Lubricate oil seal lip portion and bearing surfaces, and install main bearing cover.

Tighten bolts evenly to the specified torque.

**Tightening Torque : 16.7 - 18.6 N-m (170 - 190 kg-cm, 12.3 - 13.7 ft-lb.)**

### NOTE ;

- Before installing main bearing cover, be sure to check the installation of governor lever shaft, oil relief valve and oil pump filter in position.
- Tap cover with a soft hammer until tatching the crankcase mating surface, engaging with governor gear and camshaft gear properly.
- Rotate crankshaft slowly to check for smooth operation and side clearance.

## 6) OIL PUMP and COVER

- (1) Apply oil to inner and outer rotors of oil pump and attach them in position.
- (2) Set O-ring in position.
- (3) Install oil pump cover.

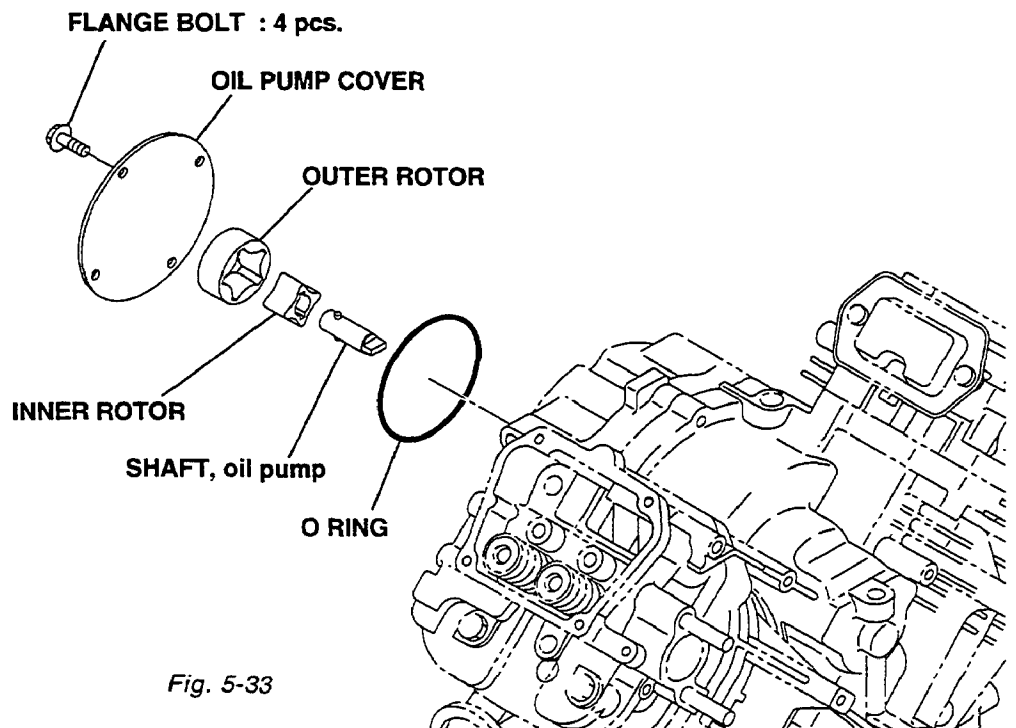


Fig. 5-33

## 7) CYLINDER HEAD

### NOTE ;

Be sure to check dowel pin, and replace with new one if damaged.

- (1) Place new head gasket onto crankcase.
- (2) Install #1 and #2 cylinder heads. Tighten bolts evenly in three steps by the specified torque.

| Tightening torque                            |  |  |
|--|--|--|
| 1 st step                                    | 2 nd step                                      | Final Step   |
| 9.8 N · m<br>(100 kg · cm)<br>(7.2 ft · lb.) | 19.6 N · m<br>(200 kg · cm)<br>(14.5 ft · lb.) | 33.3-41.2 N · m<br>(340-420 kg · cm)<br>(24.6-30.4 ft · lb.) |

## 8) ROCKER ARMS AND PUSH RODS

- (1) Insert push rods into crankcase. Put push rod tip in the hollow of tappet top.
- (2) Apply oil to rocker arms and assemble them to cylinder head using pivot and nut.

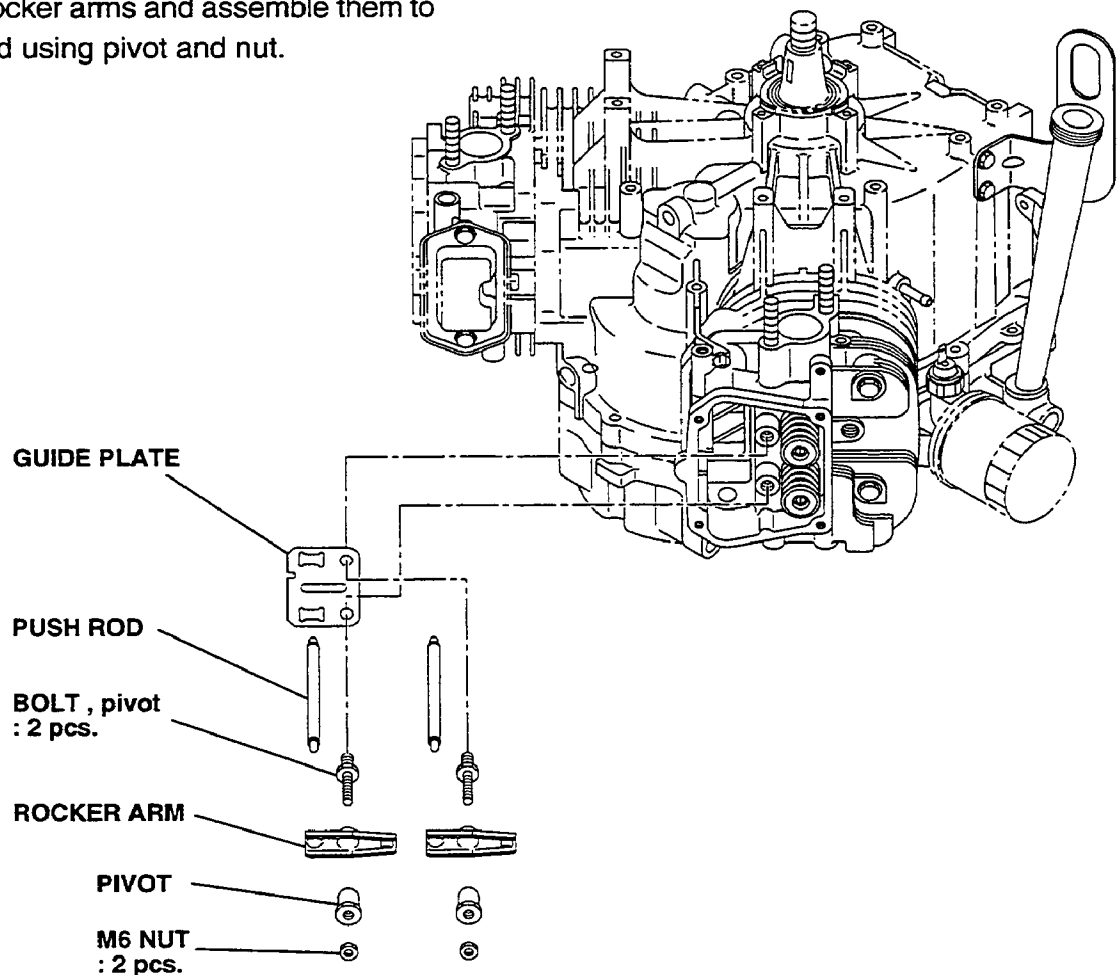


Fig. 5-34

## 9) VALVE CLEARANCE ADJUSTMENT

NOTE : Temporally fit the flywheel in position for easy operation.

- (1) Rotate crankshaft clockwise to the TDC (top dead center) of compression stroke by matching the mark "T" of flywheel with the mark "1" of #1 cylinder head.
- (2) Loosen the nut on rocker arm and turn the pivot to adjust the clearance between rocker arm and valve stem end, and then tighten the nut by the specified torque.

**Valve Clearance : 0.085 - 0.115 mm (Cold condition)**  
**(0.0033 - 0.0045 in.)**

**Tightening Torque : 7.8 - 9.8 N-m**  
**(80 - 100 kg-cm)**  
**(5.8 - 7.2 ft-lb.)**

- (3) Adjust valve clearance of #2 cylinder side in the same manner.
- (4) Rotate crankshaft several times and be sure to check valve clearance again. Adjust valve clearance if necessary.

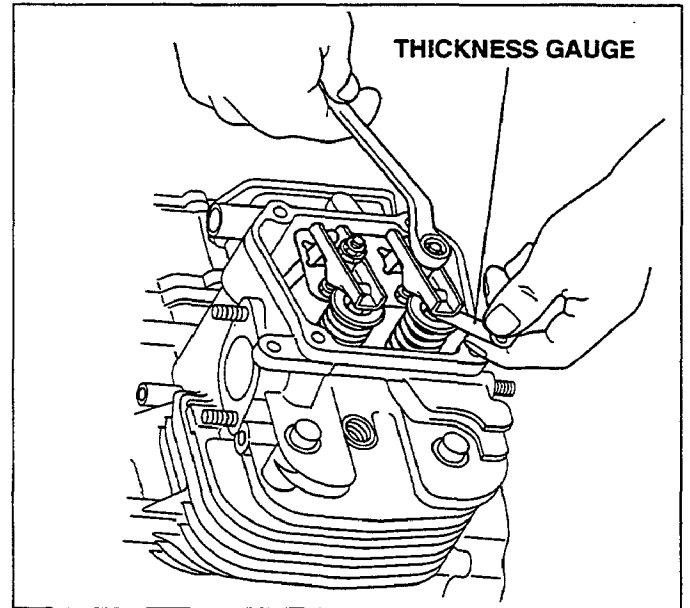


Fig. 5-35

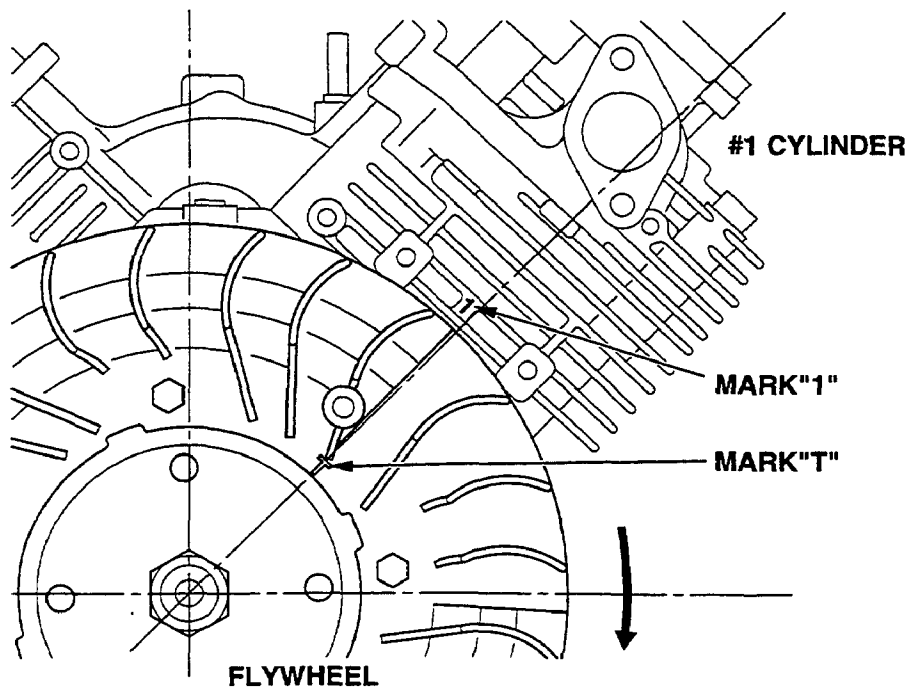


Fig. 5-36

## 10) ROCKER COVER

Install rocker cover with new gasket.

**Tightening Torque : 6.9 - 8.8 N · m**  
**(70 - 90 kg · cm)**  
**(5.1 - 6.5 ft · lb.)**

## 11) BREATHER PIPE and COVER

Attach breather plate (breather valve) and breather cover to crankcase using proper gaskets.

Put breather plate in such position as its reed valve opens outside.

**Tightening Torque : 2.9 - 4.9 N · m**  
**(30 - 50 kg · cm)**  
**(2.2 - 3.6 ft · lb.)**

### Note:

Never tighten the bolts over the specified torque, or gasket is damaged and cut. Replace gaskets with new ones if they are torn or damaged.

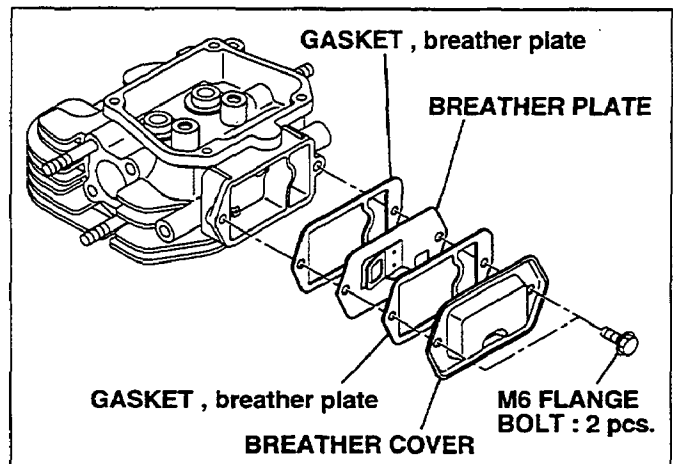


Fig. 5-37

## 12) SPARK PLUG

Install spark plug to each cylinder head.

**Spark plug : NGK - BP6ES or BPR6ES**

**Tightening Torque :**  
**New plug - 11.8 - 14.7 N · m (120 - 150 kg · cm, 8.7 - 10.8 ft · lb.)**  
**Current plug - 22.5 - 26.5 N · m (230 - 270 kg · cm, 16.6 - 19.5 ft · lb.)**

### 13) CHARGE COIL

Install charge coil with the wiring located at 5-o'clock position.

**Tightening Torque : 1.5 - 3.4 N · m**  
**(15 - 35 kg · cm)**  
**(1.1 - 2.5 ft · lb.)**

### 14) ELECTRIC STARTER

Install electric starter.

**Tightening Torque : 16.7 - 18.6 N · m**  
**(170 - 190 kg · cm)**  
**(12.3 - 13.7 ft · lb.)**

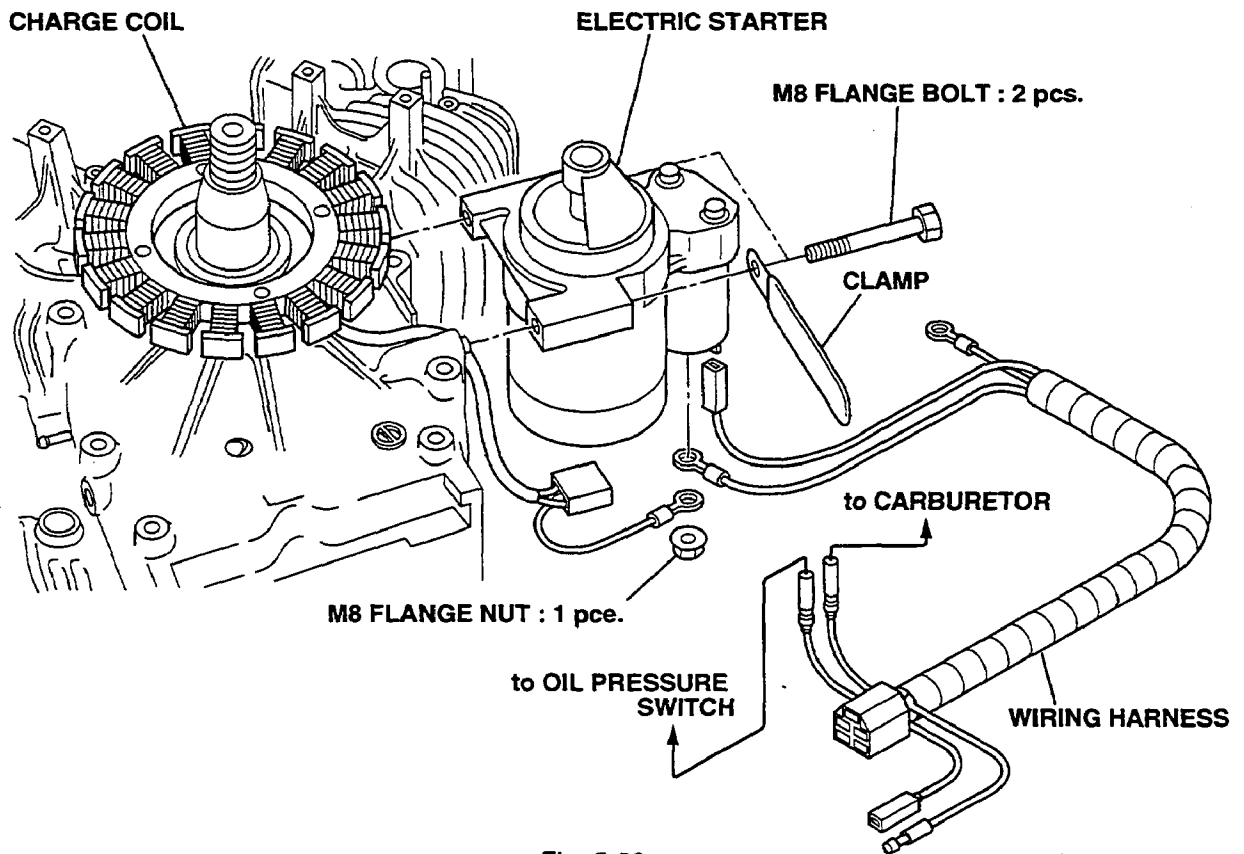


Fig. 5-38



15) OIL FILLER and SUPPORT (BLOWER HOUSING)

Install oil filler and support (blower housing)

16) CYLINDER BAFFLE

Attach cylinder baffle #1, #2, #3 and #4.

17) REGULATOR

Attach regulator to cylinder baffle.

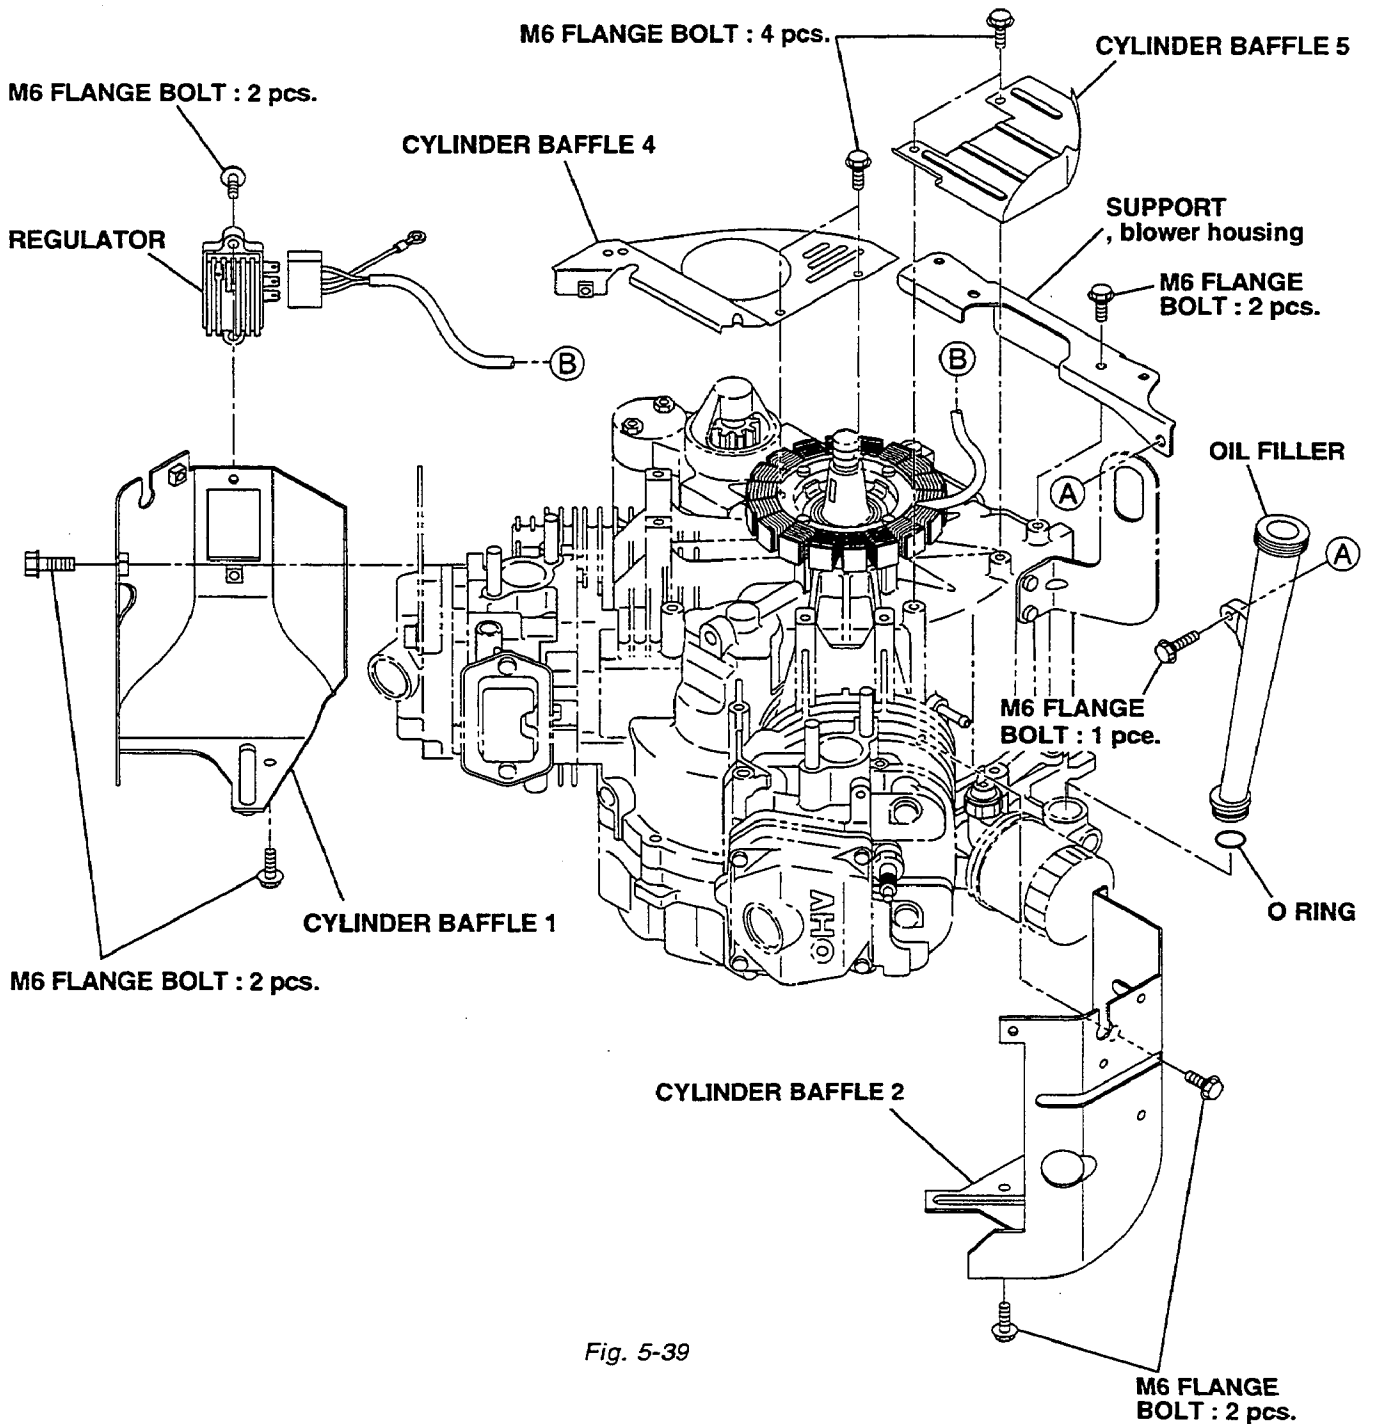


Fig. 5-39

## 18) FLYWHEEL

- (1) Wipe off oil and grease thoroughly from tapered portion of crankshaft and flywheel center hole.
- (2) Install flywheel to crankshaft and tighten flywheel nut with spring washer and washer.

**Tightening Torque : 83.3 - 93.1 N · m**  
**(850 - 950 kg · cm)**  
**(61.5 - 68.7 ft · lb.)**

## 19) INTAKE MANIFOLD

Set gasket (special paper) onto both #1 and #2 cylinder head and install intake manifold.

**Tightening Torque : 16.7 - 18.6 N · m**  
**(170 - 190 kg · cm)**  
**(12.3 - 13.7 ft · lb.)**

## 20) IGNITION COIL

Temporarily fit ignition coil to crankcase.

Adjust air gap between ignition coil and flywheel using a thickness gauge and tighten bolts.

**Ignition coil air gap : 0.3 - 0.5 mm**  
**(0.012 - 0.020 in.)**

**Tightening Torque : 6.9 - 8.8 N · m**  
**(70 - 90 kg · cm)**  
**(5.1 - 6.5 ft · lb.)**

Connect wiring from stop diode to the primary terminal of ignition coil.

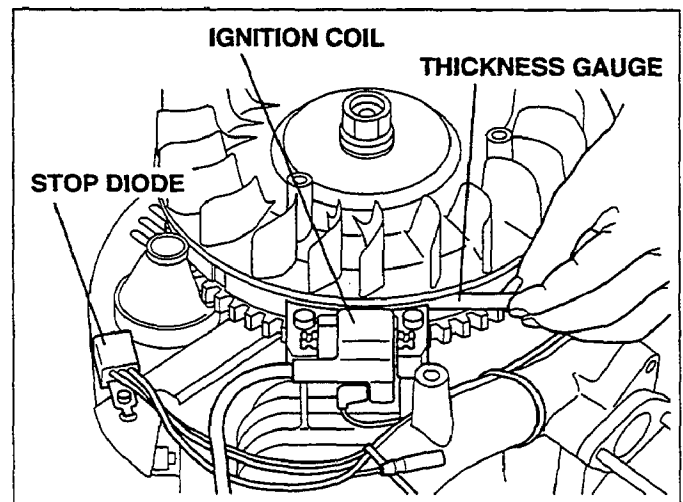


Fig. 5-40

## 21) CARBURETOR

Set gasket onto intake manifold and install carburetor.

**Tightening Torque : 6.9 - 8.8 N · m**  
**(70 - 90 kg · cm)**  
**(5.1 - 6.5 ft · lb.)**

## 22) GOVERNOR LEVER

Attach governor rod and rod spring between governor lever and carburetor throttle lever, and insert the governor lever to governor shaft. Tighten locking bolt temporarily.

## 23) SPEED CONTROL LEVER and CHOKE LEVER

Attach governor spring between governor lever and speed control lever as shown in the illustration. Attach choke control rod between carburetor choke lever and choke control lever.

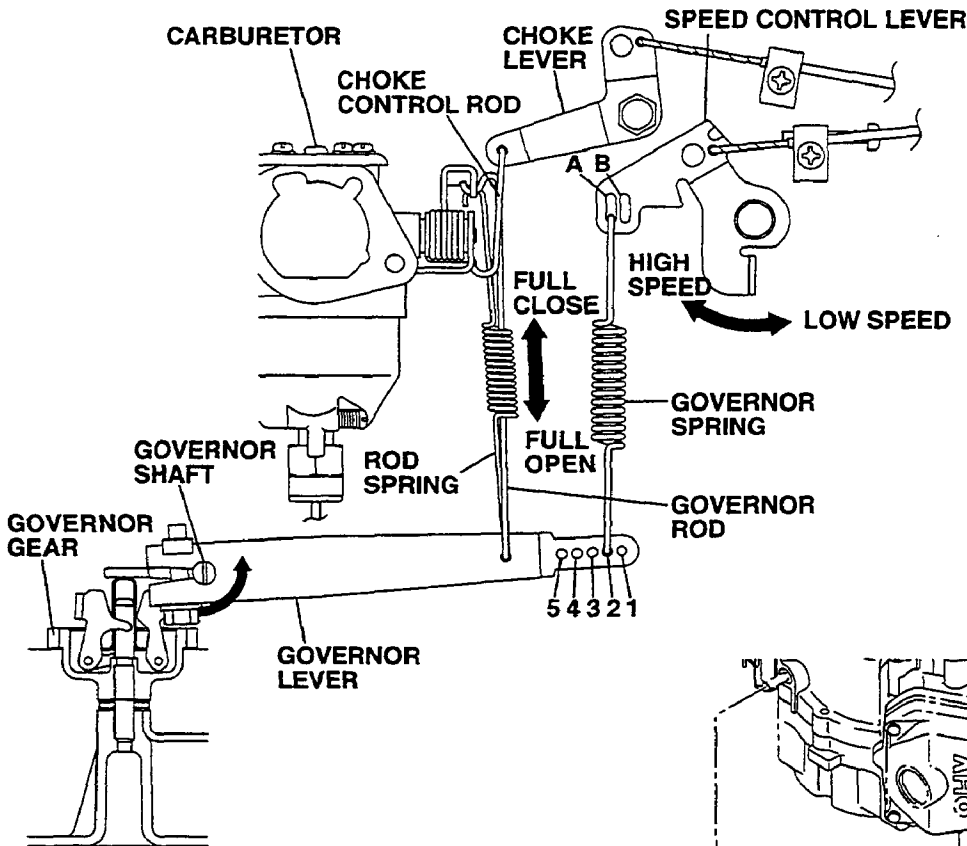


Fig. 5-41

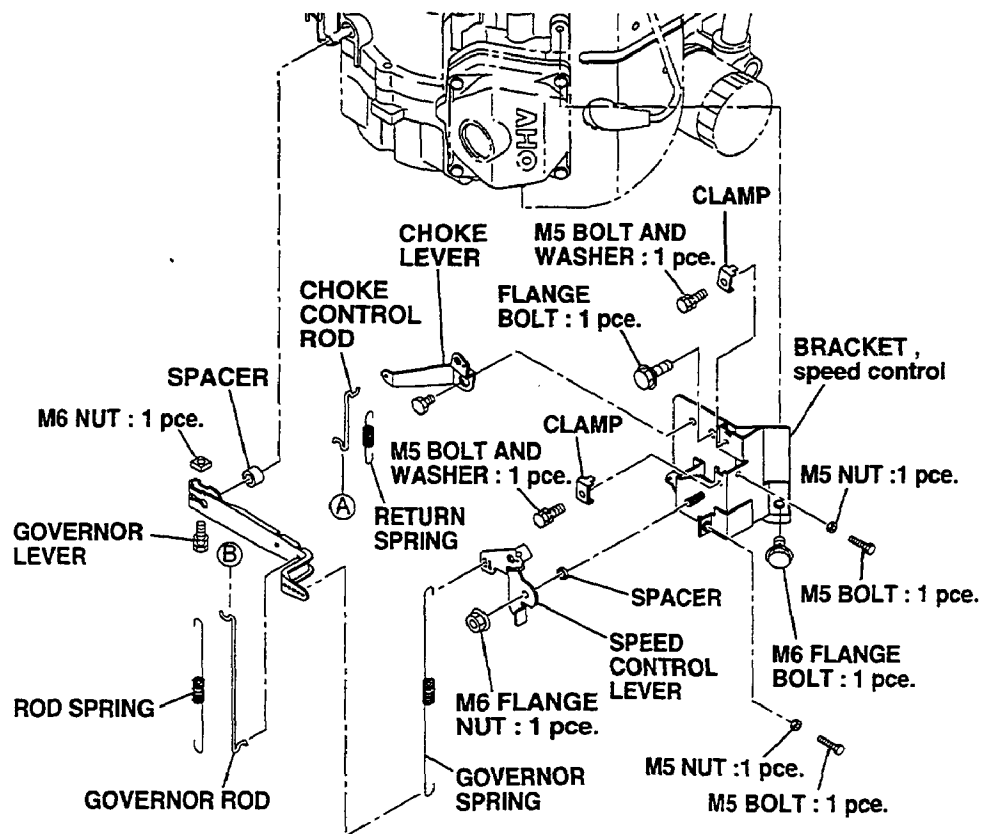


Fig. 5-42

## 24) ADJUST GOVERNOR SYSTEM

- (1) Turn the speed control lever all the way toward the high speed position and fix it by tightening nut.
- (2) Check that governor lever is pulled by governor spring and carburetor throttle valve is fully open.
- (3) Turn governor shaft counterclockwise all the way and tighten lock bolt to secure the lever on the shaft.
- (4) Loosen the nut to allow the speed control lever to move freely.

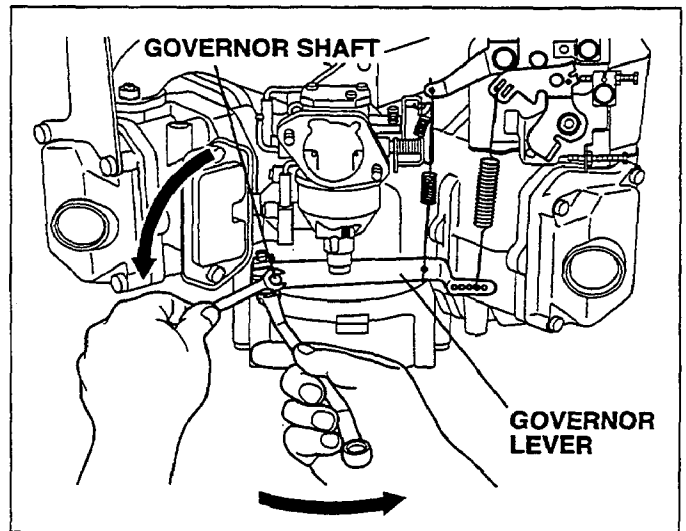


Fig. 5-43

## 25) BLOWER HOUSING

Attach blower housing to crankcase.

## 26) FUEL PUMP

Install fuel pump onto #2 cylinder baffle. Connect fuel pipe between carburetor and fuel pump.

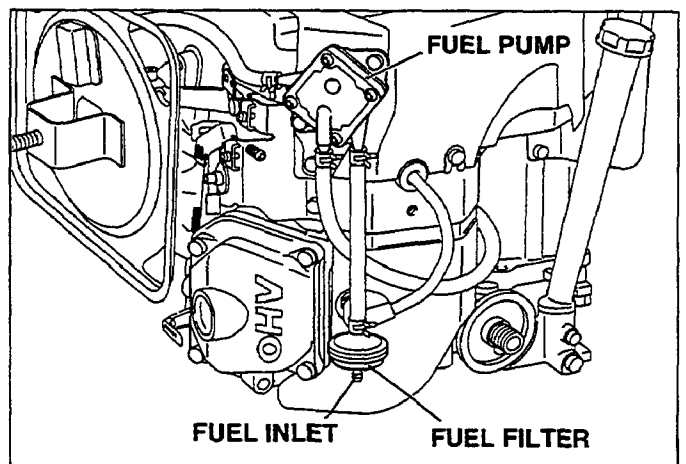


Fig. 5-44

## 27) AIR CLEANER

- (1) Connect breather pipe to air cleaner base.
- (2) Fit air cleaner base onto carburetor.
- (3) Connect breather pipe to #1 cylinder head.
- (4) Set air cleaner element along with urethane foam onto base.
- (5) Install air cleaner cover with knob.

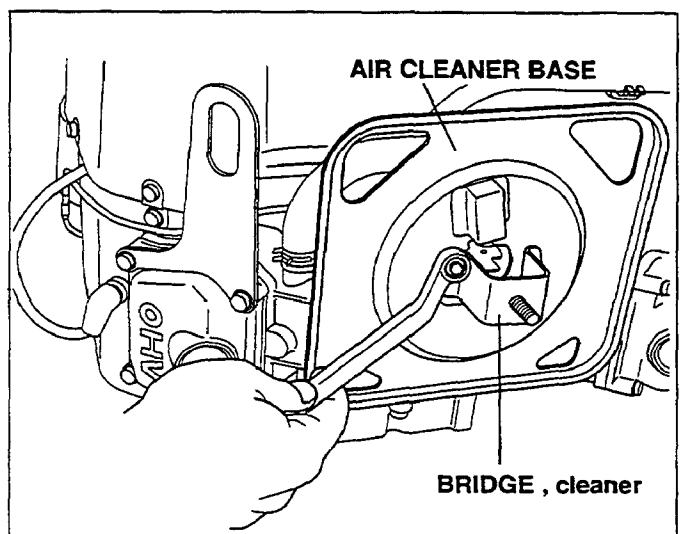


Fig. 5-45

### 28) OIL PRESSURE SWITCH

Install oil pressure switch onto main bearing cover.

**Tightening Torque : 5.9 - 9.8 N · m  
(60 - 100 kg · cm)  
(4.3 - 7.2 ft · lb.)**

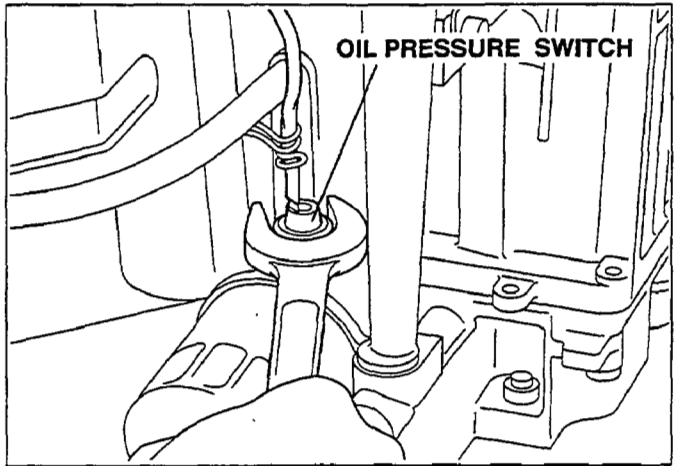


Fig. 5-46

### 29) OIL FILTER

Apply oil to O-ring and install oil filter by tightening about 3/4 turns after attaching main bearing cover surface.

**Tightening Torque : About 12.3 N · m  
(About 125 kg · cm)  
(About 9.0 ft · lb.)**

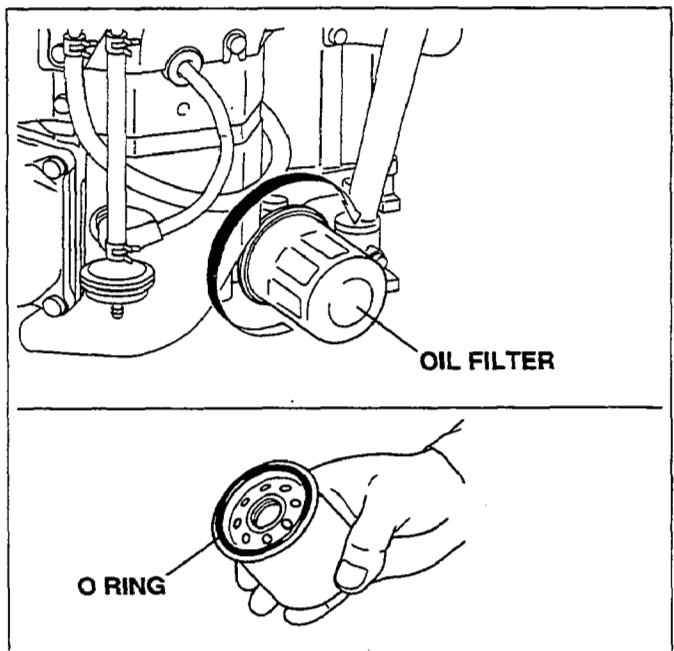


Fig. 5-47

### 30) FUEL PUMP PLUSE PIPE

Connect fuel pipe between fuel pump and crank-case nipple.

### 31) FINAL CHECK

Be sure to check loosen bolts and nuts, and also electric wiring connections.

### 32) ENGINE OIL

Refill engine oil and start the engine. Engine oil will be lubricated oil passages and oil filter. Check the engine oil level and refill again to the upper level of oil level gauge.

**Note:**

- \* Total engine oil capacity is about 2.0 L.
- \* Use "SE" (API classification) or higher grade engine oil.

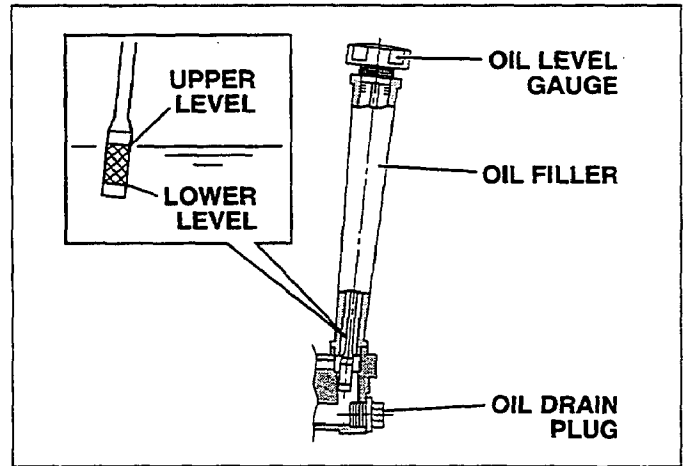


Fig. 5-48

### 5-5 BREAK-IN OPERATION

\* An engine that has been completely overhauled by being fitted with a new piston, rings, valves and connecting rod should be thoroughly RUN-IN before being put back into service. Good bearing surfaces and running clearances between the various parts can only be established by operating the engine under reduced speed and loads for a short period of time.

| Step   | Load                 |                    | Engine Speed | Time    |
|--------|----------------------|--------------------|--------------|---------|
|        | EH63V                | EH65V              |              |         |
| Step 1 | No Load              |                    | 2,500 rpm    | 10 min. |
| Step 2 | No Load              |                    | 3,000 rpm    | 10 min. |
| Step 3 | No Load              |                    | 3,600 rpm    | 10 min. |
| Step 4 | 5.4 kW<br>(7.3 HP)   | 6.3 kW<br>(8.5 HP) | 3,600 rpm    | 30 min. |
| Step 5 | 10.8 kW<br>(14.5 HP) | 12.7 kW<br>(17 HP) | 3,600 rpm    | 30 min. |

Table. 5-2

- \* While the engine is being tested, check for oil leaks.
- \* Make final carburetor adjustment and regulate the engine operating speed.

# 6. MAGNETO

## 6-1 OPERATION AND FUNCTION

The ignition system is a pointless flywheel magneto with automatic advancing characteristic.

Being different from the breaker point type ignition system, this system is completely free from such troubles as starting-up failure due to dirty, burnt or corroded point surface.

The electronic automatic advancing ensures extremely easy starts and stable high performance at operating speed by advancing the ignition timing to the most suitable point.

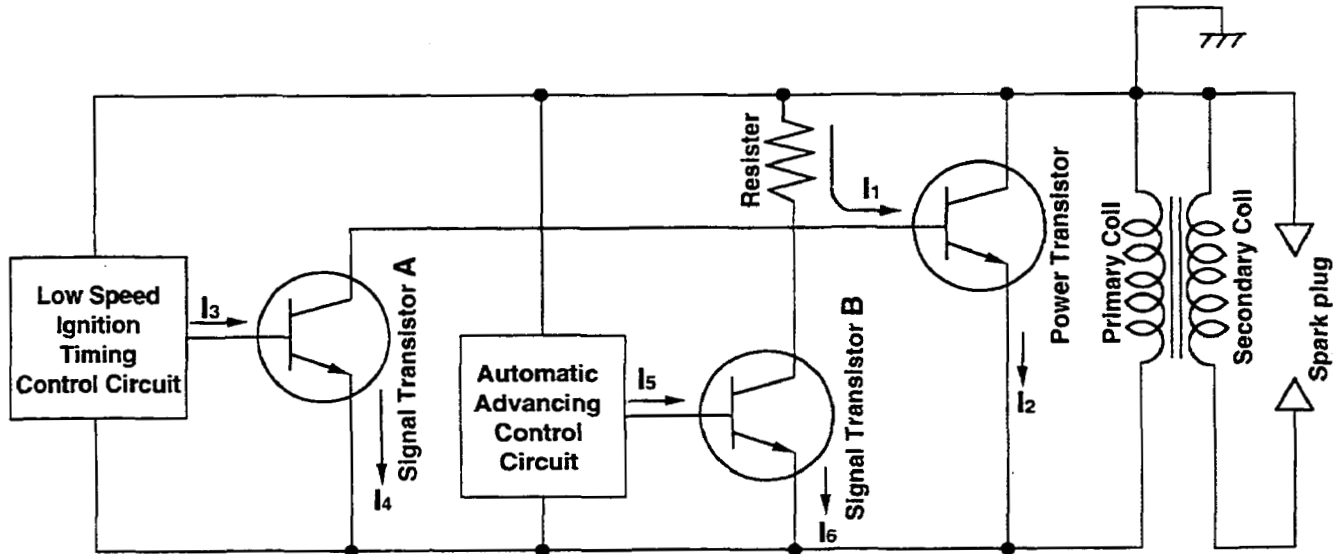


Fig. 6-1 (a)

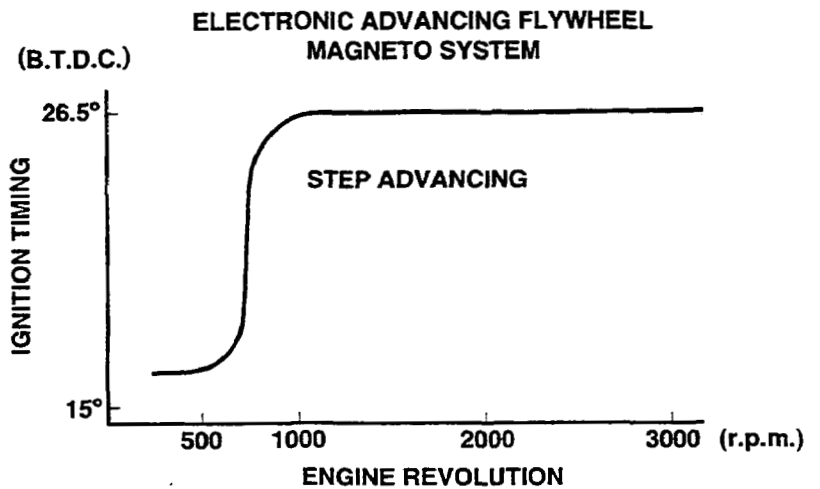


Fig. 6-1 (b)

### \* BASIC THEORY

- (1) Revolution of the flywheel generates electricity on the primary side of the ignition coil, and the base current  $I_1$  flows to the power transistor. Current  $I_1$  turns the power transistor "ON" and the electric current  $I_2$  flows.

(2) At lower engine revolution, when the flywheel reached the ignition point the low speed ignition timing control circuit operates to run the base current  $I_3$  to turn the signal transistor A "ON" allowing the current  $I_1$  to bypass as current  $I_4$ .

At this moment the power transistor turns "OFF" and the current  $I_2$  is abruptly shut resulting in the high voltage generated in the secondary coil which produces sparks at the spark plug.

(3) At higher engine revolution, the advancing control circuit operates at the ignition timing to run the base current  $I_5$  to turn the signal transistor B "ON" allowing the current  $I_1$  to bypass as current  $I_6$ .

At this moment the power transistor turns "OFF" and the current  $I_2$  is abruptly shut resulting in the high voltage generated in the secondary coil which produces sparks at the spark plug.

The operating timing of the advancing control circuit advances in accordance with the increase of engine speed resulting in the advancing of ignition timing.

**\* WIRING DIAGRAM**

Connect key switch, magnetic switch and battery with wirings of proper gauge as shown by the dotted lines in the wiring diagram.

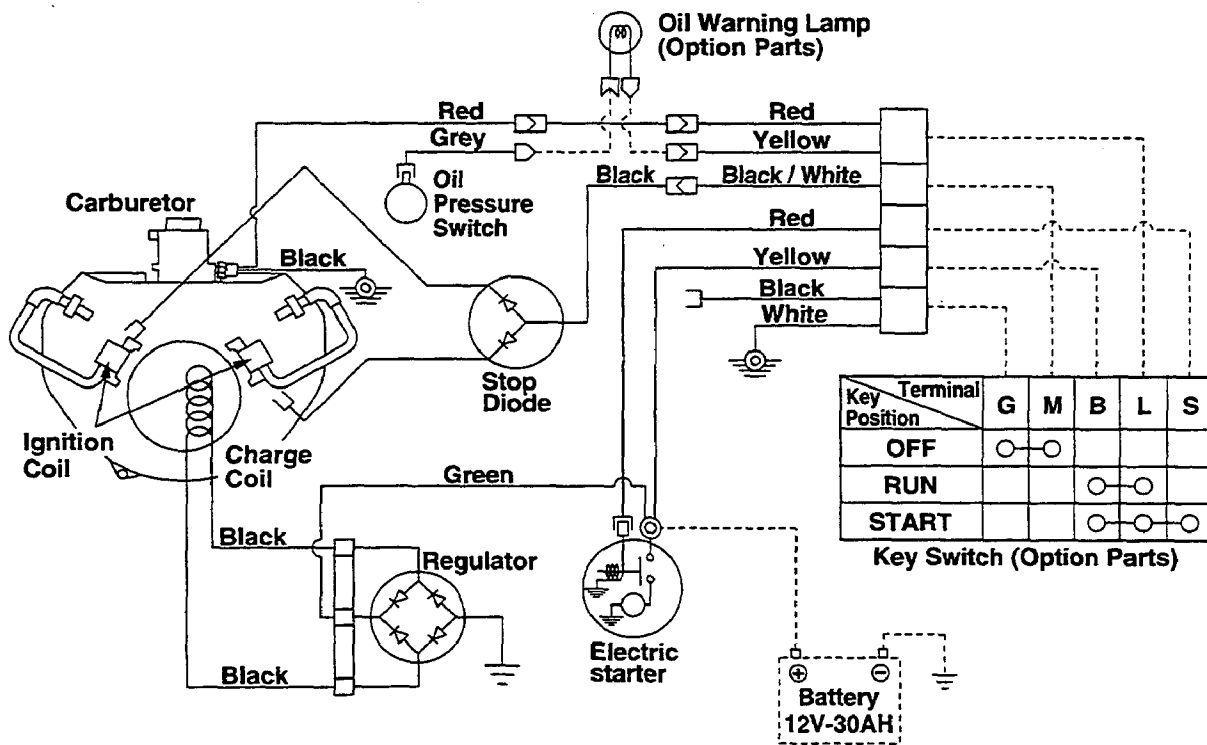


Fig. 6-2



# 7. LUBRICATION SYSTEM

## 7-1 OPERATION AND FUNCTION

- \* Full lubrication system is adopted, in combination with trochoid oil pump and cartridge type oil filter.
- \* The trochoid type oil pump is driven by camshaft, and delivers pressurized engine oil to the journal and pin portions of crankshaft, camshaft etc.
- \* The engine oil in the oil pan is fed through the oil pump filter into oil pump and the engine oil pressure is adjusted by the relief valve after discharging from oil pump. Through the cartridge type oil filter, the engine oil is provided onto the rotating portions such as journal and pin portion of crankshaft and camshaft. The splashed engine oil is provided to the cylinder, piston, cylinder head valve system.
- \* The by-pass valve is incorporated into the cartridge type oil filter. In case that the oil filter element is clogged, the engine oil is fed through the by-pass valve into the crankcase oil passage.


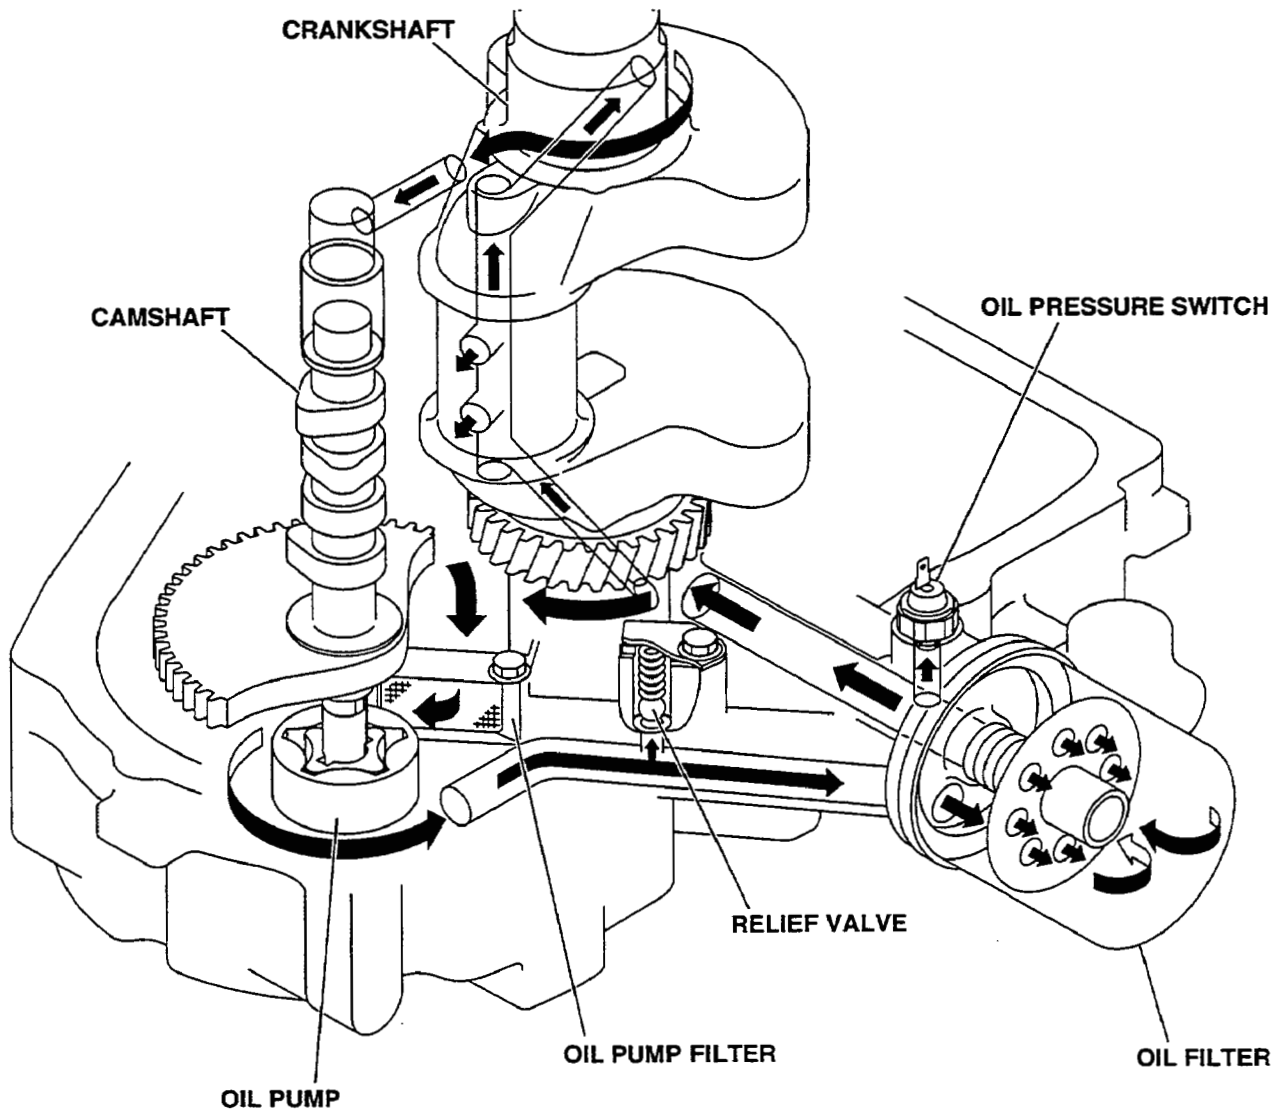


Fig. 7-1

# 8. CARBURETOR

## 8-1 OPERATION AND FUNCTION

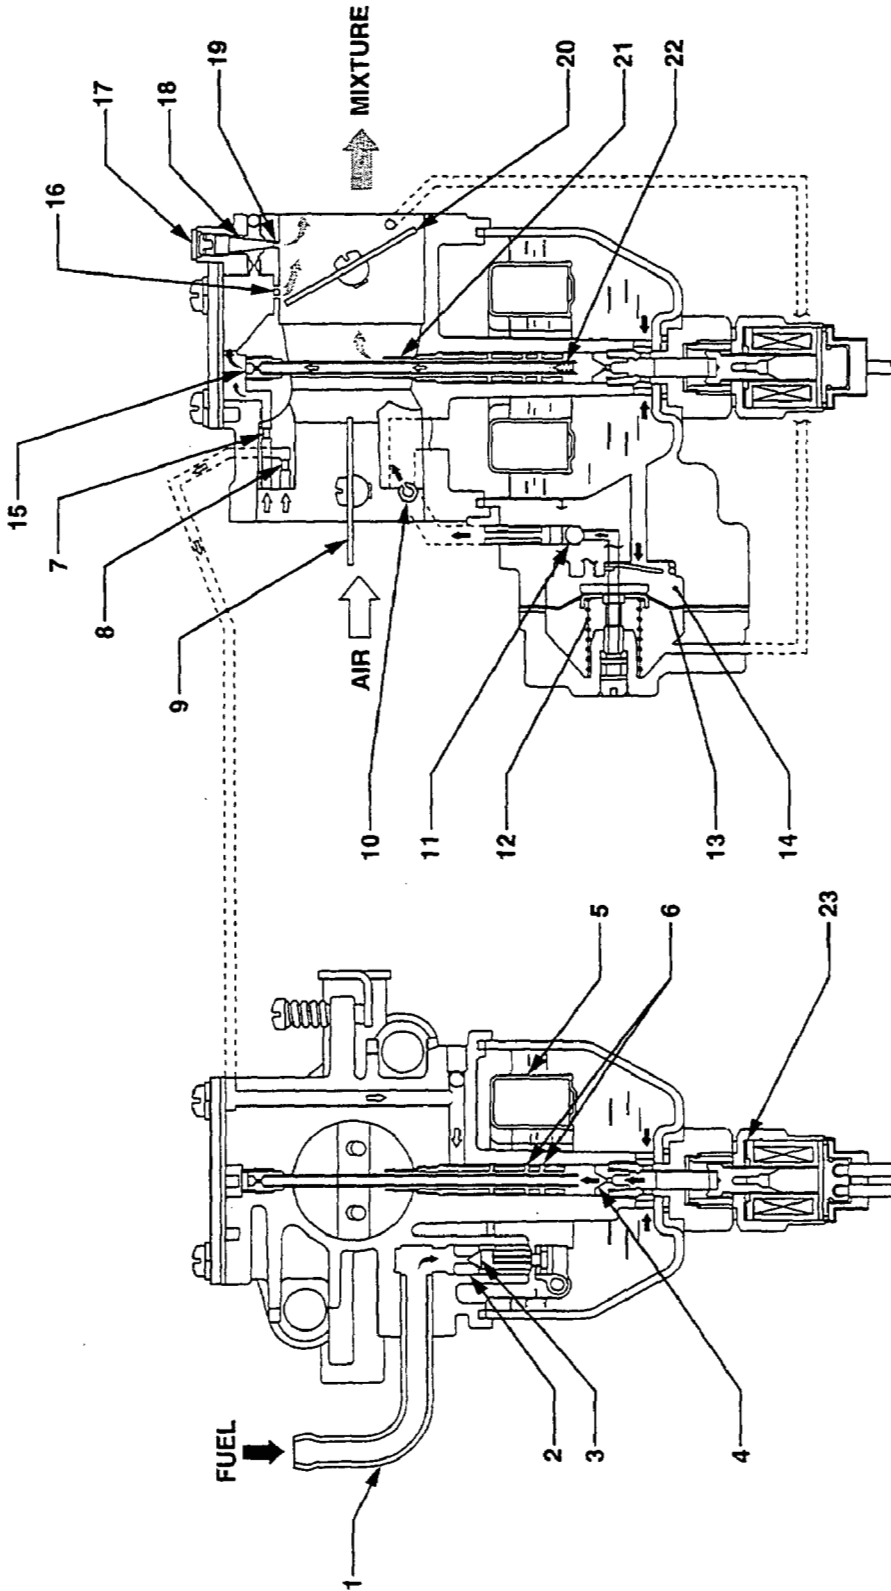

- |                             |                        |                       |
|-----------------------------|------------------------|-----------------------|
| 1. Fuel inlet               | 11. Outlet check valve | 21. Main nozzle       |
| 2. Float valve seat         | 12. Diaphragm spring   | 22. Slow passage pipe |
| 3. Float valve              | 13. Pump diaphragm     | 23. Fuel cut valve    |
| 4. Main jet                 | 14. Pump chamber       |                       |
| 5. Float                    | 15. Pilot jet          |                       |
| 6. Main emulsion hole       | 16. Slow port          |                       |
| 7. Pilot air jet            | 17. Tamper cap         |                       |
| 8. Main air jet             | 18. Idle adjust screw  |                       |
| 9. Choke valve              | 19. Idle port          |                       |
| 10. Accelerator-pump nozzle | 20. Throttle valve     |                       |

Fig. 8-1

### 8-1-1 FLOAT SYSTEM

The float system consists of a float and a float valve, and maintains a constant fuel level during engine operation.

The fuel flows from the fuel tank into the float chamber through float valve.

When the fuel rises to a specific level, the float rises, and when its buoyancy and fuel pressure are balanced, the float valve closes to shut off the fuel, thereby keeping the fuel at the predetermined level.

### 8-1-2 PILOT SYSTEM

The pilot system feeds the fuel to the engine during idling and low-speed operation.

The fuel is fed through the main jet to the pilot jet, where it is metered, and mixed with the air metered by the pilot air jet.

The fuel-air mixture is fed into the combustion chamber through the idle port and the slow port.

At idling speed, the fuel is mainly fed from the idle port.

### 8-1-3 MAIN SYSTEM

The main system feeds the fuel to the engine at medium-and high-speed operation.

The fuel is metered by the main jet and fed to the main nozzle. The air metered by the main air jet is mixed with the fuel through the emulsion hole, and the mixture is atomized out of the main bore. It is mixed again with the air taken through the air cleaner into an optimum fuel-air mixture, which is supplied to the combustion chamber.

### 8-1-4 CHOKE

The choke is used for easy start when engine is cold.

When the starter is operated with a choke valve fully closed, the negative pressure applied to the main nozzle increases and draws much fuel accordingly; thus easily start up the engine.

### 8-1-5 ACCELERATOR-PUMP SYSTEM

When the throttle is opened rapidly for acceleration, air flow and manifold vacuum change almost instantaneously. Because fuel is heavy and lags behind air flow, a momentary leanness results. The accelerator-pump supplies extra fuel for smooth operation during this condition.

At constant load condition, a vacuum passage in the carburetor applies manifold vacuum to the pump diaphragm and the pump diaphragm is held to pull position.

When the throttle is opened rapidly for acceleration, the manifold vacuum is dropped, the pump diaphragm moves by the diaphragm spring, the fuel in the pump chamber push out by the pump diaphragm and the fuel gush out from the accelerator-pump nozzle.

### 8-1-6 FUEL CUT VALVE

Fuel cut valve, operated with starter key switch, is equipped with main system of carburetor for preventing engine running on and after burning.

When the key switch is on, the valve is activated and the plunger is pulled in to open the main jet.

When the key switch is off, the power source to the valve is off. The plunger is pushed out by the return spring and stop the fuel flow of main jet.

## 8-2 COMPORNENT PARTS

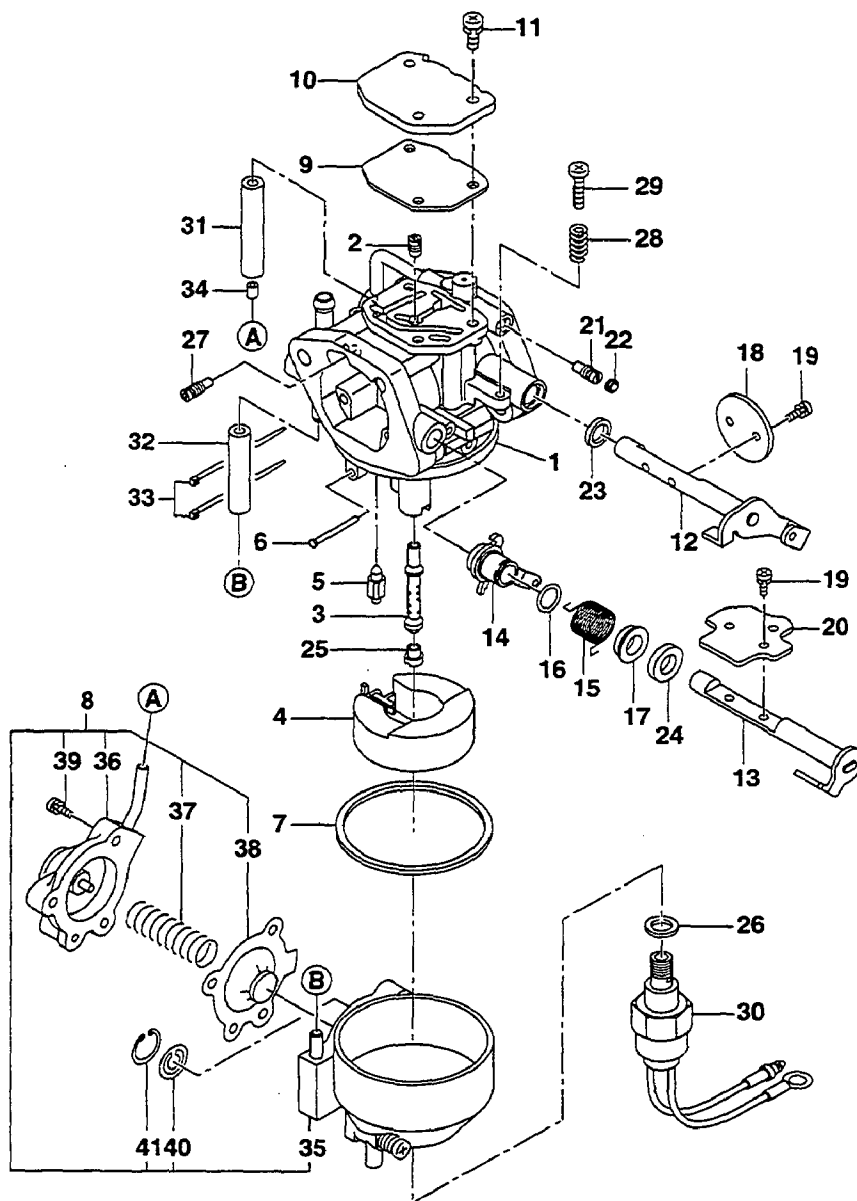


Fig. 8-2

- |                          |                                   |                          |
|--------------------------|-----------------------------------|--------------------------|
| 1. Carburetor Ass'y      | 15. Choke arm return spring       | 29. Round machine screw  |
| 2. Slow jet Ass'y        | 16. Choke lever ring              | 30. Solenoid valve Ass'y |
| 3. Main nozzle           | 17. Choke collar                  | 31. Vaccum hose          |
| 4. Float                 | 18. Throttle valve                | 32. Fuel hose            |
| 5. Float valve           | 19. Screw, valve set              | 33. Nylon band           |
| 6. Float pin             | 20. Choke valve                   | 34. Jet                  |
| 7. Float chamber gasket  | 21. Needle compl.                 | 35. Float chamber Ass'y  |
| 8. Float chamber compl.  | 22. Expansion plug                | 36. Cover compl.         |
| 9. Passage cover gasket  | 23. Air filter                    | 37. Spring               |
| 10. Passage cover        | 24. Filter, choke shaft           | 38. Diaphragm Ass'y      |
| 11. Screw                | 25. Main jet                      | 39. Screw                |
| 12. Throttle shaft Ass'y | 26. Gasket                        | 40. Choke valve          |
| 13. Choke shaft Ass'y    | 27. Slow air bleed jet            | 41. C-ring               |
| 14. Choke lever Ass'y    | 28. Spring, throttle adjust screw |                          |

# 9. ELECTRIC STARTER

**NOTE ;**

For Electric starter operation, electric wiring should be connected among electric starter, key switch and battery as shown in the diagram.

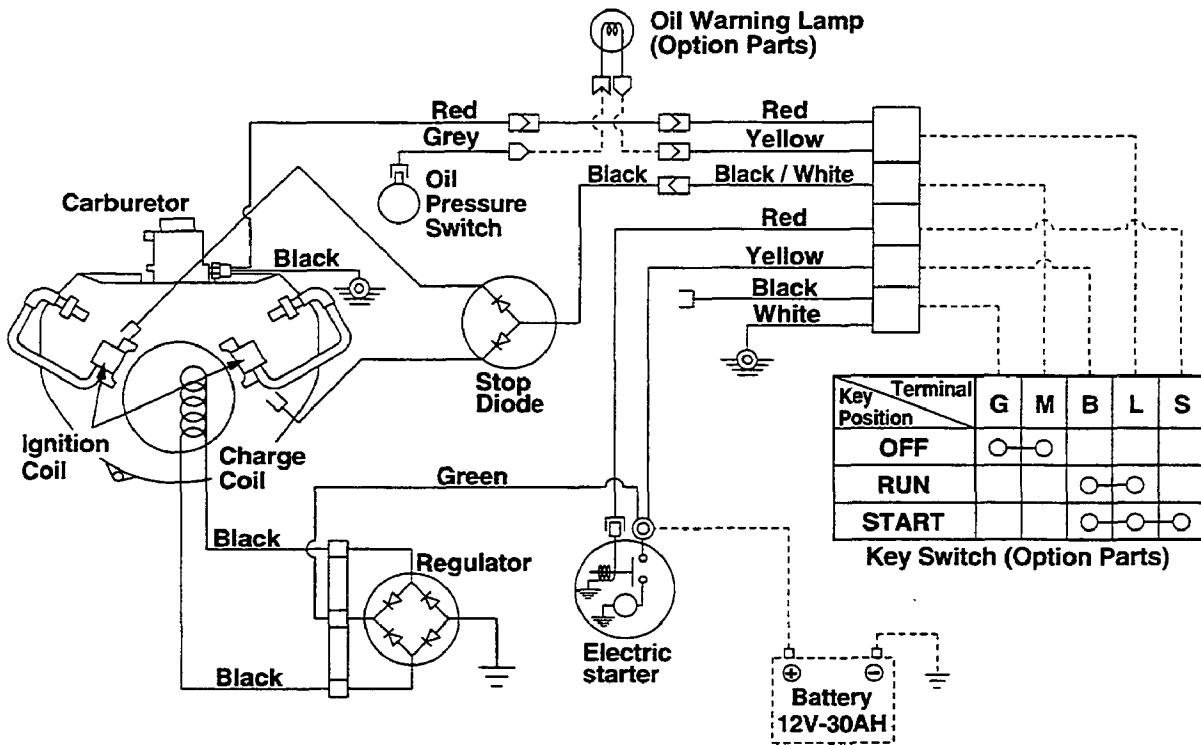


Fig. 9-1

## 9-1 OPERATION AND FUNCTION

When key switch is turned ON, lower electric current (M →) flows through coil of magnetic switch and the coil is excited. The plunger is pulled and higher current (S →) flows through electric starter.

When electric starter is operated, pinion gear is pushed out by the shift lever. The pinion gear is engaged with ring gear and flywheel and crankshaft are rotated.

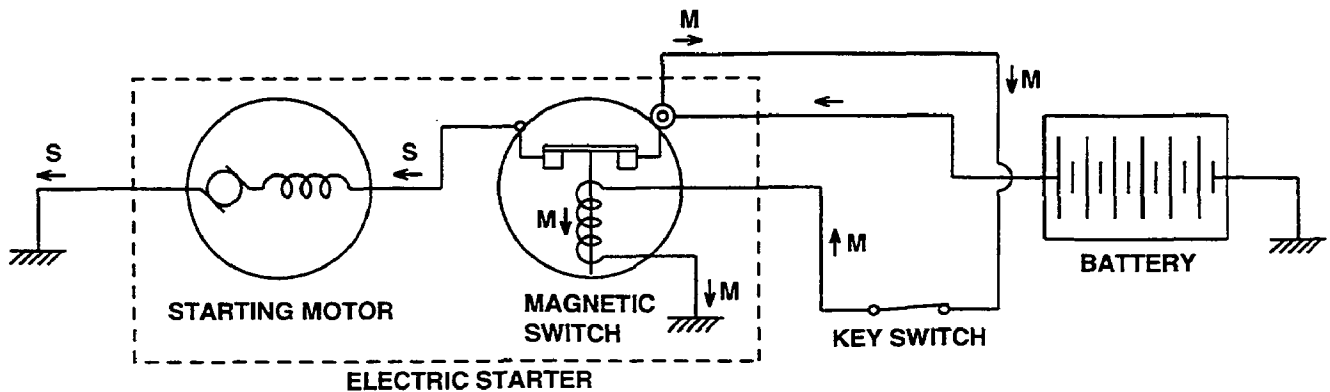


Fig. 9-2

## 9-2 COMPONENT PARTS

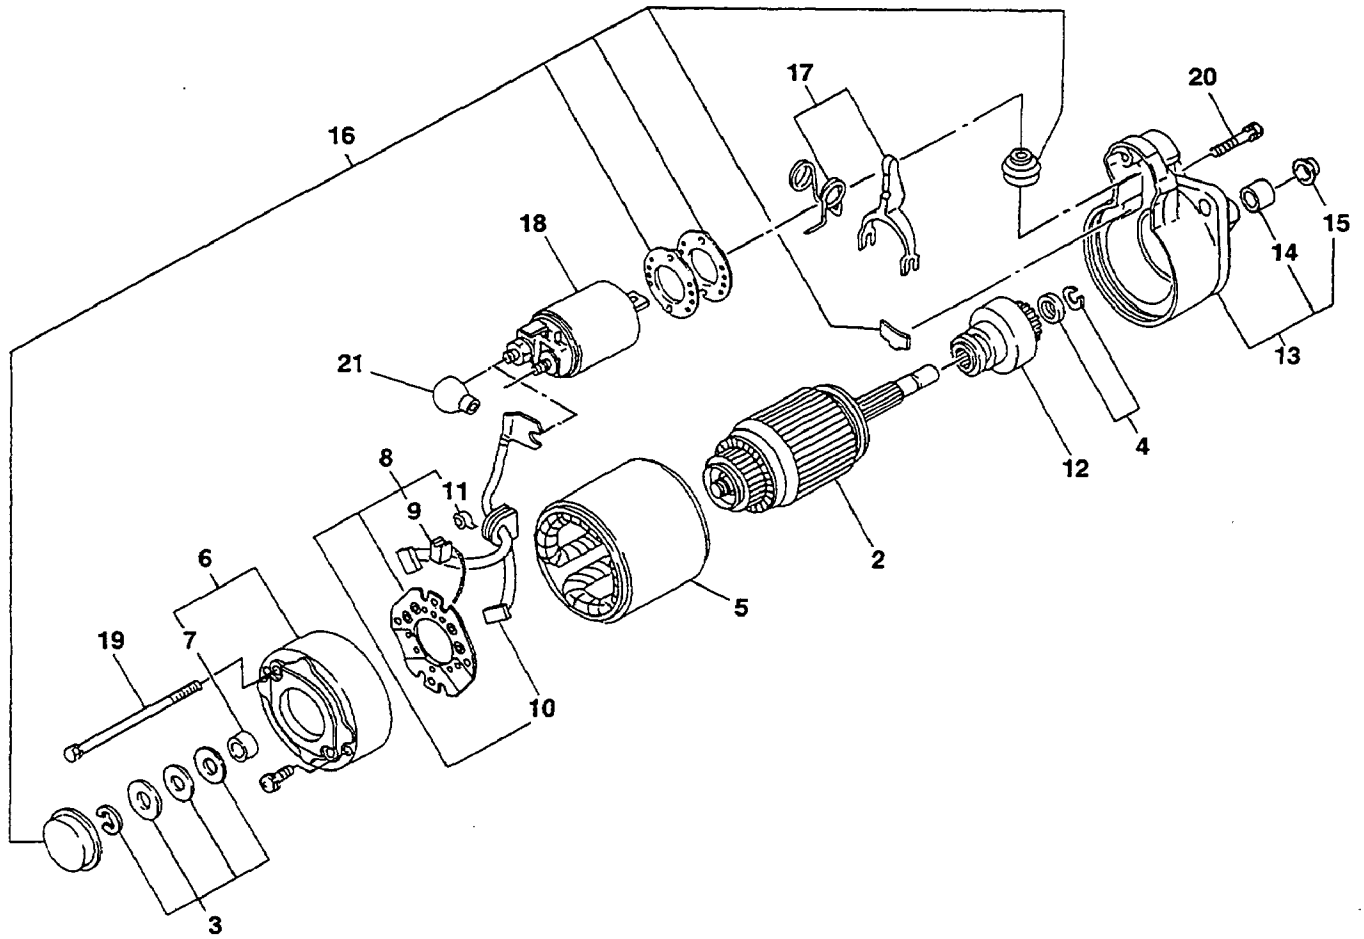


Fig. 9-3

- |                         |                           |
|-------------------------|---------------------------|
| 1. Starting motor Ass'y | 15. Gear case metal cover |
| 2. Armature Ass'y       | 16. Dust cover kit        |
| 3. Thrust washer kit    | 17. Shift lever kit       |
| 4. Pinion stopper set   | 18. Magnetic switch Ass'y |
| 5. Yoke Ass'y           | 19. Through bolt          |
| 6. Rear cover Ass'y     | 20. Bolt                  |
| 7. Starter metal        | 21. M terminal cover      |
| 8. Brush holder Ass'y   |                           |
| 9. Brush (-)            |                           |
| 10. Brush set           |                           |
| 11. Brush spring        |                           |
| 12. Pinion Ass'y        |                           |
| 13. Gear case Ass'y     |                           |
| 14. Starter metal       |                           |

## 10. TROUBLESHOOTING

The following three conditions must be fulfilled for satisfactory engine start.

- (1) The cylinder filled with a proper fuel-air mixture.
- (2) Good compression in the cylinder.
- (3) Good spark, properly timed, to ignite the mixture.

The engine cannot be started unless these three conditions are met.

There are also other factors which make engine start difficult, e.g., a heavy load on the engine when it is about to start at low speed, and a high back pressure due to a long exhaust pipe.

The most common causes of engine troubles are given below:

### 10-1 NO ENGINE OPERATION

| Phenomenon  | Possible causes  | Remedy                          |
|---|--|---------------------------------|
| 1.<br>Electric starter does not operate.                    | 1) Poor connection of key switch wiring                        | Check, repair or replace        |
|   | 2) Wiring discontinuity between key switch and starter motor   | Replace                         |
|   | 3) Wiring discontinuity between battery and starter motor      | Replace                         |
|   | 4) Improper battery (low capacity) or discharged battery       | Charge or replace battery       |
|   | 5) Poor connection of battery terminal                         | Check, clean or replace         |
|   | 6) Starter magnetic switch faulty                              | Check, clean, repair or replace |
|   | 7) Starter motor faulty  | Repair or replace               |
|   | 8) Crankshaft seizure  | Check, repair or replace        |
|   | 9) Seizure between piston and cylinder                         | Check, repair or replace        |
| 2.<br>Electric starter operates, but engine does not start. | 1) No fuel   | Refill                          |
|   | 2) Poor connection or discontinuity of ignition system wirings | Check, repair or replace        |
|   | 3) Electric starter faulty                                     | Repair or replace               |

## 10-2 STARTING DIFFICULTIES

| Phenomenon                            | Possible causes  | Remedy  |
|---------------------------------------|--|---|
| 1. Low engine speed at starting       | 1) Battery discharged  | Charge battery                                      |
|                                       | 2) Poor connection between battery and starter motor   | Clean or repair                                     |
|                                       | 3) Poor connection between battery and ground  | Clean or repair                                     |
|                                       | 4) Electric starter faulty   | Repair or replace                                   |
|                                       | 5) Improper engine oil   | Replace with recommended engine oil                 |
| 2. Ignition system malfunction        | Spark plug<br><ul style="list-style-type: none"> <li>* Improper spark plug gap</li> <li>* No insulation</li> <li>* Carbon deposits</li> </ul>                    | Adjust gap 0.7 mm to 0.8 mm<br>Replace<br>Clean     |
|                                       | Ignition coil<br><ul style="list-style-type: none"> <li>* No insulation or discontinuity</li> <li>* Poor connection or discontinuity of ignition code</li> </ul> | Replace<br>Repair or replace                        |
|                                       | Improper air gap between ignition coil and flywheel  | Adjust  |
| 3. Fuel system malfunction            | 1) No fuel in fuel tank  | Refill  |
|                                       | 2) Fuel pump clogged   | Clean   |
|                                       | 3) Fuel hose clogged or pinched  | Clean or replace                                    |
|                                       | 4) Air mixing into fuel lines  | Check and adjust connecting portion                 |
|                                       | 5) Improper gasoline or water infiltration   | Replace   |
|                                       | 6) Carburetor<br><ul style="list-style-type: none"> <li>* Overflow</li> <li>* Clogged or damaged</li> <li>* Improper operation of throttle valve</li> </ul>      | Adjust<br>Disassembly and clean<br>Check and adjust |
|                                       | 7) Poor connection of fuel cut valve wiring  | Check and repair                                    |
| 4. Engine core components malfunction | 1) Insufficient tightening of cylinder head bolts  | Check and retighten                                 |
|                                       | 2) Wear of piston, piston ring and/or cylinder   | Repair or replace                                   |
|                                       | 3) Improper contact of valve and seat  | Repair  |
|                                       | 4) Valve seizure   | Repair  |
|                                       | 5) Improper valve clearance  | Adjust  |
|                                       | 6) Intake manifold gasket leakage  | Retighten intake manifold bolts or replace gasket   |
|                                       | 7) Carburetor gasket leakage   | Retighten carburetor bolts or replace gasket        |
|                                       | 8) Insufficient tightening of spark plug   | Retighten   |



### 10-3. INSUFFICIENT OUTPUT

| Phenomenon                     | Possible causes  | Remedy                              |
|--------------------------------|--|-------------------------------------|
| 1. Low compression             | 1) Loosen spark plug                                   | Retighten or replace gasket         |
|                                | 2) Cylinder head gasket leakage                        | Retighten or replace gasket         |
|                                | 3) Piston ring(s) seizure or wear                      | Replace                             |
|                                | 4) Piston or cylinder wear                             | Repair or replace                   |
|                                | 5) Incorrect valve and seat contact                    | Repair or replace                   |
|                                | 6) Valve stem seizure                                  | Repair or replace                   |
|                                | 7) Improper valve clearance                            | Adjust                              |
| 2. Ignition system malfunction | 1) Spark plug faulty                                   | Replace                             |
|                                | 2) Ignition coil faulty                                | Replace                             |
|                                | 3) Improper air gap between ignition coil and flywheel | Adjust                              |
|                                | 4) Magneto demagnetization                             | Replace                             |
| 3. Fuel system malfunction     | 1) Carburetor clogged                                  | Disassembly and clean               |
|                                | 2) Improper fuel pump operation                        | Disassembly and clean               |
|                                | 3) Fuel strainer or fuel hose clogged                  | Clean or replace                    |
|                                | 4) Air mixing into fuel lines                          | Check and adjust connecting portion |
|                                | 5) Improper gasoline or water infiltration             | Replace                             |
| 4. Low intake air volume       | 1) Air cleaner clogged                                 | Clean or replace                    |
|                                | 2) Throttle valve faulty                               | Repair or replace                   |

### 10-4. OVERHEAT

| Phenomenon  | Possible causes  | Remedy                      |
|-------------|--|-----------------------------|
| Overheating | 1) Cooling air flow obstructed at inlet or cylinder baffle portion | Clean                       |
|             | 2) Improper engine oil   | Replace                     |
|             | 3) Lean air/fuel mixture   | Check and adjust carburetor |
|             | 4) Excessive back pressure of exhaust system                       | Check, clean or replace     |
|             | 5) Over-load   | Change to rated load        |

## 10-5. ROUGH IDLING

| Phenomenon         | Possible causes  | Remedy                            |
|--------------------|--|-----------------------------------|
| 1. Carburetor      | 1) Low idling speed  | Adjust                            |
|                    | 2) Carburetor slow system passage clogged                  | Check and clean                   |
| 2. Intake system   | 1) Air mixing from connecting portion of air intake system | Check , tighten or replace gasket |
| 3. Cylinder head   | 1) Cylinder head gasket faulty (blow-by)                   | Replace                           |
| 4. Valve system    | 1) Improper valve clearance                                | Adjust                            |
|                    | 2) Leakage from valve seat                                 | Adjust valve seat contact         |
|                    | 3) Excessive clearance between valve stem and guide        | Replace                           |
| 5. Ignition system | 1) Weak ignition spark                                     | Check and replace spark plug      |

## 10-6. HIGH ENGINE OIL CONSUMPTION

| Phenomenon      | Possible causes                               | Remedy            |
|-----------------|---|-------------------|
| 1. Oil leakage  | 1) Loosen drain plug                          | Tighten           |
|                 | 2) Drain plug gasket damaged                  | Replace           |
|                 | 3) Incorrect oil filter fitting               | Repair            |
|                 | 4) Loosen main bearing cover bolts            | Tighten           |
|                 | 5) Main bearing cover gasket damaged          | Replace           |
|                 | 6) Crankshaft oil seal damaged                | Replace           |
| 2. Oil dilution | 1) Piston oil ring faulty                     | Replace           |
|                 | 2) Piston rings seizure, wear or poor contact | Replace           |
|                 | 3) Excessive wear of piston and cylinder      | Replace           |
|                 | 4) Excessive wear of valve stem               | Replace           |
|                 | 5) High oil level                             | Adjust oil level  |
|                 | 6) Breather faulty                            | Repair or replace |

## 10-7. HIGH FUEL CONSUMPTION

| Phenomenon                | Possible causes  | Remedy                                    |
|---------------------------|--|---|
| 1. Fuel system            | 1) Over-size main jet  | Replace                                   |
|                           | 2) Needle valve faulty and/or high fuel level in float chamber | Adjust or replace                         |
|                           | 3) Chock valve does not open fully.                            | Repair or replace                         |
| 2. Engine core components | 1) Low compression   | Check or repair                           |
|                           | 2) Over cooling  | Check and adjust load and/or engine speed |

## 10-8. DETONATION

| Phenomenon                     | Possible causes  | Remedy                             |
|--------------------------------|--|------------------------------------|
| 1. Ignition system malfunction | 1) Poor connection of ignition system wirings              | Check and connect properly         |
|                                | 2) Improper or damaged spark plug                          | Clean or replace                   |
| 2. Fuel system malfunction     | 1) Lean or rich air/fuel mixture                           | Clean, adjust or replace           |
|                                | 2) Carburetor damaged                                      | Disassembly and clean              |
|                                | 3) Fuel lines clogged or damaged                           | Clean or replace                   |
|                                | 4) Air mixing from connecting portion of air intake system | Connect properly or replace gasket |
| 3. Cylinder head               | 1) Carbon deposit in combustion chamber                    | Remove and clean                   |
|                                | 2) Cylinder head gasket faulty (blow-by)                   | Replace                            |
| 4. Valve system                | 1) Improper valve clearance                                | Adjust                             |
|                                | 2) Valve heat deterioration                                | Replace                            |
|                                | 3) Valve spring deterioration                              | Replace                            |
|                                | 4) Improper valve timing                                   | Adjust                             |

## 10-9. ENGINE MISFIRE

| Phenomenon                | Possible causes  | Remedy                     |
|---------------------------|--|----------------------------|
| 1. Ignition system        | 1) Imprpper spark plug gap or damaged electrode          | Clean, adjust or replace   |
|                           | 2) ignition coil faulty                                  | Replace                    |
|                           | 3) Damaged ignition system wirings                       | Replace                    |
|                           | 4) Poor connection of ignition system wirings            | Check and connect property |
| 2. Fuel system            | 1) Lean or rich air/fuel mixture                         | Disassembly and repair     |
|                           | 2) Carburetor clogged                                    | Disassembly and repair     |
|                           | 3) Improper idling adjustment of carburetor              | Adjust                     |
|                           | 4) Improper gasoline or water infiltration               | Replace                    |
| 3. Engine core components | 1) Valve heat deterioration or improper valve adjustment | Adjust or replace          |
|                           | 2) Valve spring deterioration                            | Replace                    |
|                           | 3) Low compression                                       | Check, adjust or replace   |

# 11. INSTALLATION

Engine life, ease of maintenance and inspection, frequency of checks and repairs, and operating cost all depend on the way in which the engine is installed. Review the following instructions carefully for installing the engine.

## 11-1 INSTALLING

When mounting the engine, carefully examine its position, the method of connecting it to a machine, the foundation, and the method of supporting the engine.

When determining its mounting position, in particular, make sure that gasoline and oil can easily be supplied and checked, the spark plug can easily be checked, the air cleaner can easily be serviced, and that the oil can easily be discharged.

## 11-2 VENTILATION

Fresh air is necessary for cooling the engine and burning the fuel.

In the case the engine is operated under a hood or in a small room, temperature rise in the engine room can cause vapor lock, oil deterioration, increased oil consumption, loss of power, piston seizure, shorter engine life, etc., making it impossible to operate the engine properly. It is necessary, therefore, to provide a duct or baffle to guide cooling air to the engine to prevent recirculation of the hot air used for engine cooling, and temperature rise of the machine.

Keep the engine room temperature below 50 °C even in the hottest period of the year.

## 11-3 EXHAUST GAS DISCHARGE

Exhaust gas is noxious. When operating the engine indoors, be sure to discharge the exhaust gas outdoors. If a long exhaust pipe is used in such a case, the internal resistance increases causing loss of engine power. Thus pipe inside diameter must be increased in proportion to exhaust pipe length.

Exhaust pipe :      Less than 3 m long --- pipe inside diameter 30 mm  
                                 Less than 5m long --- pipe inside diameter 33 mm.

## 11-4 POWER TRANSMISSION TO DRIVEN MACHINES

### 11-4-1 BELT DRIVE

Take the following notes into consideration.

- \* V-belts are preferable to flat belts.
- \* The driving shaft of the engine must be parallel to the driven shaft of the machine.
- \* The driving pulley of the engine must be in line with the driven pulley of the machine.
- \* Install the engine pulley as close to the engine as possible.
- \* Disengage the load when starting the engine.

If no clutch is used, use a belt tension pulley or the like.




### 11-4-2 FLEXIBLE COUPLING



When using a flexible coupling, run out and misalignment between the driven shaft and engine shaft must be minimized. Run out and misalignment tolerance are specified by the coupling manufacturer.






# 12. SERVICE DATA

## 12-1 CLEARANCE DATA AND LIMITS








Unit : mm (in)



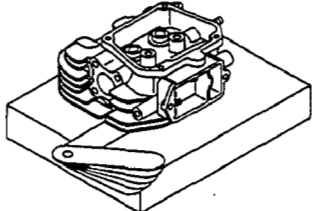
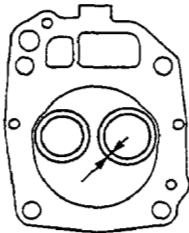
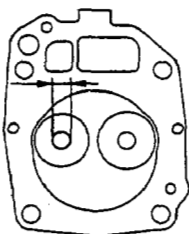
| ITEM   | EH63V / 65V |                                    |                 |
|--|-------------|------------------------------------|-----------------|
|  | STD         | Limit                              |                 |
| CYLINDER HEAD<br>* Flatness<br> |             | 0.05 or less<br>(0.002 or less)    | 0.1<br>(0.004)  |
| * Valve seat contact width<br>  | IN. EX.     | 0.7 - 1.0<br>(0.028 - 0.039)       | 2.0<br>(0.079)  |
| * Valve guide inside dia.<br>  |             | 6.035 - 6.053<br>(0.2376 - 0.2383) | 6.15<br>(0.242) |




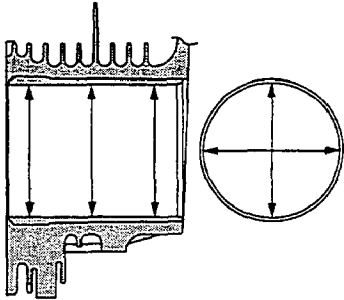
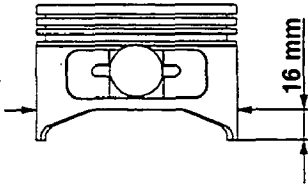
| ITEM   | EH63V / 65V   |                                      |   |
|--|---------------|--------------------------------------|---|
|  | STD           | Limit                                |   |
| <b>CYLINDER</b><br>* Inside dia.<br>                                | STD           | 80.000 - 80.019<br>(3.1496 - 3.1504) | To be rebored when the difference between max. and min. of diameter reached to 0.1 (0.004). |
|  | 1 st reboring | 80.250 - 80.269<br>(3.159 - 3.160)   | Ditto   |
|  | 2 st reboring | 80.500 - 80.519<br>(3.169 - 3.170)   | —   |
|  |               | 0.01<br>(0.004)                      | —   |
|  |               | 0.015<br>(0.0006)                    | —   |
| * Roundness after reboring.<br><br>* Cylindricity after reboring.  |               |                                      |   |
| <b>PISTON</b><br>* Piston size (At skirt in thrust direction)<br> | STD           | 79.968 - 79.988<br>(3.148 - 3.149)   | 79.878<br>(3.145)   |
|  | 1 st o / s    | 80.218 - 80.238<br>(3.158 - 3.159)   | 80.128<br>(3.155)   |
|  | 2nd o / s     | 80.468 - 80.488<br>(3.168 - 3.169)   | 80.378<br>(3.164)   |
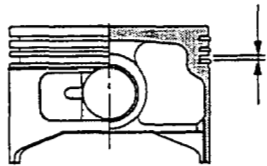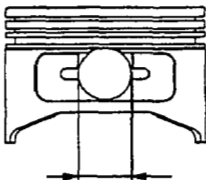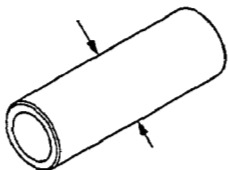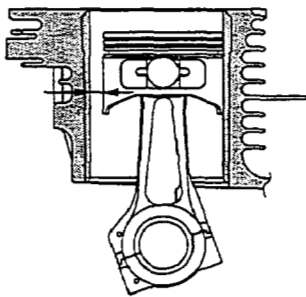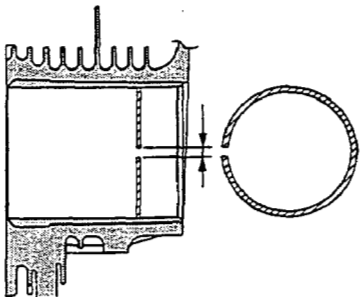
| ITEM   | EH63V / 65V |                                      |                    |
|--|-------------|--------------------------------------|--------------------|
|  | STD         | Limit                                |                    |
| <b>PISTON</b><br>* Ring groove side clearance<br><br>* Piston pin hole<br><br>* Piston pin outside dia.<br><br>* Clearance between piston and cylinder at skirt area.<br><br>* Piston ring end gap<br> | Top         | 0.05 - 0.09<br>(0.0002 - 0.0035)     | 0.15<br>(0.006)    |
|  | 2nd         | 0.03 - 0.07<br>(0.0012 - 0.0028)     | 0.15<br>(0.006)    |
|  | Oil ring    | 0.057 - 0.175<br>(0.0022 - 0.0069)   | 0.15<br>(0.006)    |
|  |             | 20.989 - 21.002<br>(0.8263 - 0.8269) | 21.035<br>(0.8281) |
|  |             | 20.991 - 21.000<br>(0.8264 - 0.8268) | 20.960<br>(0.8251) |
|  |             | 0.012 - 0.051<br>(0.0005 - 0.0020)   | 0.25<br>(0.0098)   |
|  | Top<br>2nd  | 0.2 - 0.4<br>(0.0079 - 0.0157)       | 1.5<br>(0.0591)    |
|  | Oil ring    | 0.2 - 0.7<br>(0.0079 - 0.0276)       | 1.5<br>(0.0591)    |

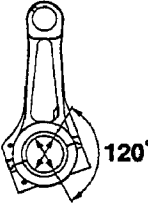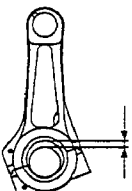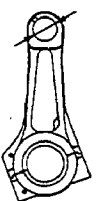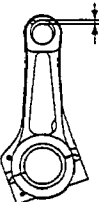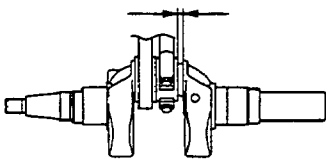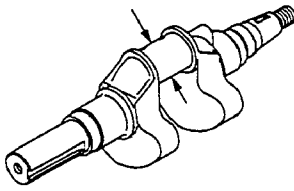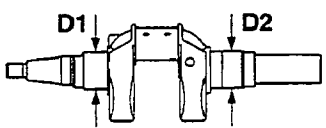

| ITEM  | EH63V / 65V   |  |                    |
|---|---|--|--------------------|
|   | STD   | Limit  |                    |
| <b>CONNECTING ROD</b><br>* Big end inside dia.<br><br>• Clearance between big end and crankpin<br><br>* Small end inside dia.<br><br>* Clearance between small end and piston pin<br><br>* Big end side clearance |    | 39.000 - 39.016<br>(1.5354 - 1.5361)   | 39.100<br>(1.5394) |
|   |    | 0.030 - 0.060<br>(0.0012 - 0.0024)   | 0.2<br>(0.0079)    |
|   |    | 21.010 - 21.023<br>(0.8272 - 0.8277)   | 21.080<br>(0.8299) |
|   |   | 0.010 - 0.032<br>(0.0004 - 0.0013)   | 0.12<br>(0.0047)   |
|   |  | 0.1 - 0.4<br>(0.0039 - 0.0157)   | 1.0<br>(0.0394)    |
| <b>CRANKSHAFT</b><br>* Crankpin outside dia.  |  | 38.956 - 38.970<br>(1.5337 - 1.5343)   | 38.90<br>(1.5315)  |
| * Journal dia.  |  | D1 :<br>44.984 - 45.000<br>(1.77102 - 1.77165)<br><br>D2 :<br>44.984 - 45.000<br>(1.77102 - 1.77165) | —                  |
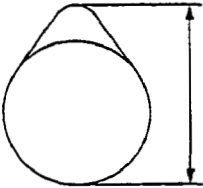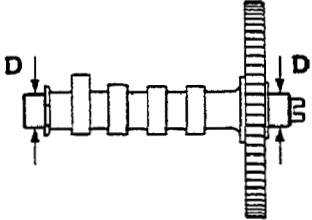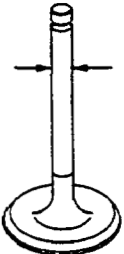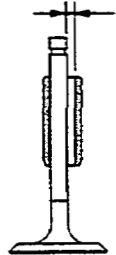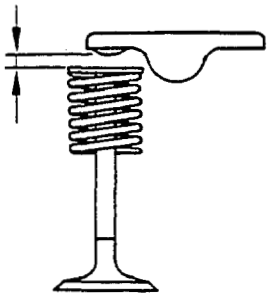
| ITEM  | EH63V / 65V         |                                      |                    |
|---|---------------------|--------------------------------------|--------------------|
|   | STD                 | Limit                                |                    |
| <b>CAMSHAFT</b><br>* Cam height (IN. and EX.)<br>  |                     | 36.1 - 36.3<br>(1.4213 - 1.4291)     | 35.95<br>(1.4154)  |
| * Journal outside dia.<br>"D" type<br>   |                     | 19.967 - 19.980<br>(0.7861 - 0.7866) | 19.950<br>(0.7854) |
| <b>VALVE</b><br>* Valve stem outside dia.<br><br><br>*Clearance between valve stem dia. and valve guide.<br><br><br>* Valve clearance<br> | IN.                 | 5.970 - 5.985<br>(0.2350 - 0.2356)   | 5.85<br>(0.2303)   |
|   | EX.                 | 5.960 - 5.975<br>(0.2346 - 0.2352)   | 5.85<br>(0.2303)   |
|   | IN.                 | 0.050 - 0.083<br>(0.0022 - 0.0033)   | 0.30<br>(0.0118)   |
|   | EX.                 | 0.060 - 0.093<br>(0.0024 - 0.0037)   | 0.30<br>(0.0118)   |
|   | IN. / EX.<br>(cold) | 0.085 - 0.115<br>(0.0034 - 0.0045)   |                    |
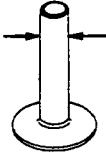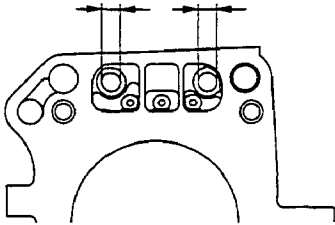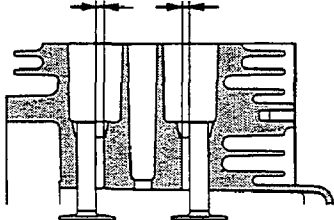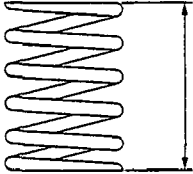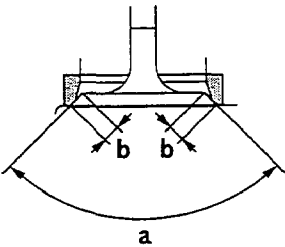
| ITEM  | EH63V/65V                                   |                  |
|---|---|------------------|
|   | STD   | Limit            |
| <b>TAPPET</b><br>* Stem outside dia.<br>   | 8.960 - 8.975<br>(0.3528 - 0.3533)          | 8.93<br>(0.3516) |
| * Guide inside dia<br>   | 9.00 - 9.015<br>(0.3543 - 0.3549)           | 9.08<br>(0.3575) |
| * Tappet guide clearance<br>  | 0.025 - 0.055<br>(0.0010 - 0.0022)          | 0.15<br>(0.0059) |
| <b>VALVE SPRING FREE LENGTH</b><br>  | 39.5<br>(1.5551)                            | —                |
| <b>VALVE SEAT ANGLE (IN. and EX.)</b><br>* Valve cutter angle (a)<br>* Valve contact width (b)<br> | a : 90°<br>b : 0.7 - 1.0<br>(0.028 - 0.039) | 2.0<br>(0.079)   |


## 12-2 TORQUE SPECIFICATIONS

| ITEMS                    |             | Tightening Torque |           |             |
|--------------------------|-------------|-------------------|-----------|-------------|
|                          |             | N-m               | Kg-cm     | ft-lb.      |
| Breather cover           |             | 2.9 - 4.9         | 30 - 50   | 2.2 - 3.6   |
| Carburetor bolts         |             | 6.9 - 8.8         | 70 - 90   | 5.1 - 6.5   |
| Charge coil              |             | 1.5 - 3.4         | 15 - 35   | 1.1 - 2.5   |
| Connecting rod cap bolts |             | 22.1 - 27.0       | 225 - 275 | 16.3 - 19.9 |
| Cylinder head bolts      |             | 33.3 - 41.2       | 340 - 420 | 24.6 - 30.4 |
| Flywheel nut             |             | 83.3 - 93.1       | 850 - 950 | 61.5 - 68.7 |
| Ignition coil            |             | 6.9 - 8.8         | 70 - 90   | 5.1 - 6.5   |
| Intake manifold bolts    |             | 16.7 - 18.6       | 170 - 190 | 12.3 - 13.7 |
| Main bearing cover bolts |             | 16.7 - 18.6       | 170 - 190 | 12.3 - 13.7 |
| Oil filter               |             | 12.3              | 100 - 150 | 9           |
| Oil pressure switch      |             | 5.9 - 9.8         | 60 - 100  | 4.3 - 7.2   |
| Rocker arm nut           | Lock nut    | 7.8 - 9.8         | 80 - 100  | 5.8 - 7.2   |
|                          | Pivot bolt  | 18.6 - 20.6       | 190 - 210 | 13.8 - 15.2 |
| Rocker cover             |             | 6.9 - 8.8         | 70 - 90   | 5.1 - 6.5   |
| Spark plug               | New one     | 11.8 - 14.7       | 120 - 150 | 8.7 - 10.9  |
|                          | Current one | 22.5 - 26.5       | 225 - 275 | 16.6 - 19.5 |
| Starter motor bolts      |             | 16.7 - 18.6       | 170 - 190 | 12.3 - 13.7 |

### 12-3 OIL GRADE CHART

Use oil classified as SE or higher.

Multi-grade oil tends to increase its consumption at high ambient temperature.

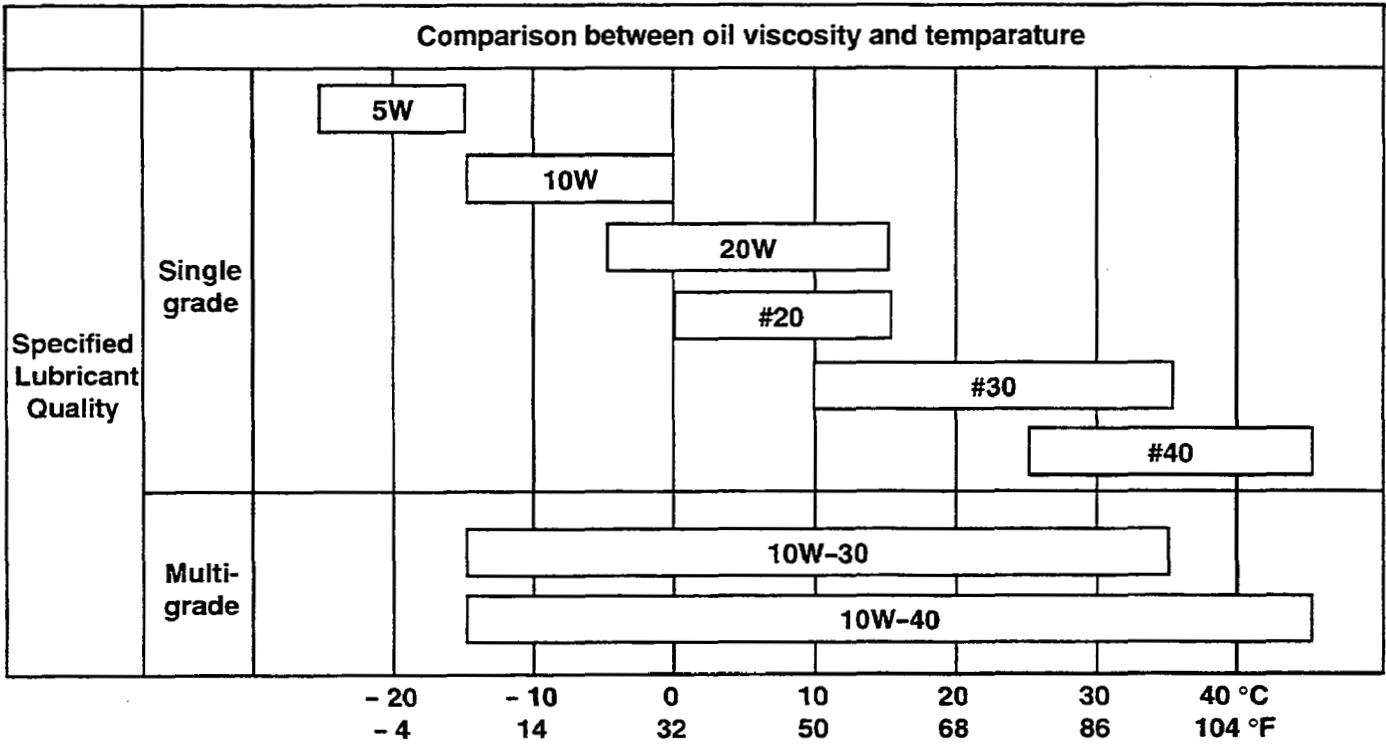

# 13. MAINTENANCE AND STORAGE

## 13-1 DAILY MAINTENANCE

Every day before operating engine, check the following items;

| MAINTENANCE ITEMS   | REMARKS  |
|---|--|
| 1) Clean away dust and chaff from engine.   | Governor linkage is especially sensitive to dust.                        |
| 2) Check fuel leakage from fuel system. If any, retighten fasteners or replace necessary parts. |  |
| 3) Inspect for loose hardware and retighten if necessary.                                       | Loose bolts and nuts may come off and result in breakage of other parts. |
| 4) Check oil level and add to full level.   |  |

## 13-2 PERIODIC MAINTENANCE SCHEDULE

Periodic maintenance is vital to safe and efficient operation of engine.

Check the table below for periodic maintenance intervals.

It is also necessary to conduct the maintenance and adjustments on the emission-related parts listed below to keep the emission control system effective;

- (1) Carburetor and internal parts
- (2) Choke system
- (3) Fuel strainer
- (4) Air cleaner elements
- (5) Intake pipe
- (6) Spark plug
- (7) Magneto
- (8) Fuel hoses, clamps and sealing gaskets

The following maintenance schedule is based on the normal engine operation.

Should the engine be operated in extremely dusty condition or in heavier loading condition, the maintenance interval must be shortened depending on the contamination of oil, clogging of filter elements, wear of parts, and so on.

| Maintenance Items                          | Every 8 hours (daily)           | Every 50 hours | Every 200 hours | Every 500 hours | Every 1,000 hours |
|--|---------------------------------|----------------|-----------------|-----------------|-------------------|
| Clean engine and check bolts and nuts      | X (Daily)                       |                |                 |                 |                   |
| Check and refill engine oil                | X (Refill daily to full level.) |                |                 |                 |                   |
| Change engine oil (*Note 1)                |                                 | X              |                 |                 |                   |
| Check battery electrolyte fluid level      |                                 | X              |                 |                 |                   |
| Clean spark plug                           |                                 | X              |                 |                 |                   |
| Clean air cleaner                          |                                 | X              |                 |                 |                   |
| Clean fuel strainer                        |                                 |                | X               |                 |                   |
| Replace air cleaner element                |                                 |                | X               |                 |                   |
| Clean and adjust spark plug and electrodes |                                 |                | X               |                 |                   |
| Replace engine oil filter (*Note 1)        |                                 |                | X               |                 |                   |
| Clean carburetor                           |                                 |                |                 | X               |                   |
| Clean cylinder head                        |                                 |                |                 | X               |                   |
| Clean engine base (oil pan)                |                                 |                |                 | X               |                   |
| Check and adjust valve seats               |                                 |                |                 | X               |                   |
| Adjust valve clearance                     |                                 |                |                 | X               |                   |
| Replace spark plug                         |                                 |                |                 | X               |                   |
| Replace fuel lines                         |                                 |                |                 |                 | X                 |
| Overhaul engine (*Note 2)                  |                                 |                |                 |                 | X                 |

**\*Note 1 :** Initial oil change and oil filter replacement should be performed after 20 hours of operation. Thereafter change oil every 50 hours and replace oil filter every 200 hours. Before changing oil, check for a suitable way to dispose of old oil. Do not pour it down into sewage drains, onto garden soil or into open streams. Your local zoning or environmental regulations will give you more detailed instructions on proper disposal.

**2 :** As to the procedures, please refer to the Service Manual or consult your nearest ROBIN service dealer.

### **13-3 ENGINE STORAGE**

- (1) Change the engine oil and perform the daily maintenance items above mentioned.
- (2) Drain fuel from carburetor float chamber.
- (3) To prevent rust in the cylinder bore, apply oil through the spark plug hole and turn the crankshaft several turns by hand. Reinstall the plug.
- (4) Turn the crankshaft by hand and leave it where the resistance is the heaviest.
- (5) Clean outside of the engine with oiled cloth.
- (6) Put a plastic cover or the like over the engine and store the engine in dry place.





# **Robin**

## **SUBARU**

### **Industrial Engines**

## **Robin America, Inc.**

940 Lively Blvd. • Wood Dale, IL 60191 • Phone: 630-350-8200 • Fax: 630-350-8212  
e-mail: [sales@robinamerica.com](mailto:sales@robinamerica.com) • [www.robinamerica.com](http://www.robinamerica.com)

PRINTED IN THE USA

# **Robin America, Inc.**