



**NUMBER:** 08-008-03

**GROUP:** Electrical

**DATE:** Apr. 11, 2003

*This bulletin is supplied as technical information only and is not an authorization for repair. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise, without written permission of DaimlerChrysler Corporation.*

**SUBJECT:**

Compact Disc (CD) Loading & Ejecting for 6 Disc Radio (Sales Code RBQ)

**MODELS:**

2003 - 2004	(AN)	Dakota
2003	(DN)	Durango
2003 - 2004	(DR)	Ram Truck
2003 - 2004	(KJ)	Liberty
2003 - 2004	(PT)	PT Cruiser
2004	(RS)	Town & Country/Caravan/Voyager
2003 - 2004	(ZB)	Viper

**NOTE: THIS BULLETIN APPLIES TO VEHICLES EQUIPPED WITH A 6 DISC CD CHANGER WITHIN THE RADIO (SALES CODE RBQ).**

**NOTE: THIS INFORMATION SHOULD BE REVIEWED WITH THE CUSTOMER AT THE TIME OF VEHICLE DELIVERY.**

**CAUTION: THIS CD PLAYER WILL ACCEPT 120MM (4 3/4 IN.) DISCS ONLY. THE USE OF OTHER SIZED DISCS MAY DAMAGE THE CD PLAYER MECHANISM.**

**DISCUSSION:**

**LOADING/EJECTING CD'S**

**LOADING A CD**


Press the LOAD/EJT button and the preset button (1 through 6) corresponding to the position number where the CD is to be loaded (Fig. 1). After the radio displays "load" insert the CD into the CD slot.

Radio display will show "loading" while the CD is being loaded.

**EJECTING A CD**

Press the LOAD/EJT button and the preset button (1 through 6) corresponding to the position number where the CD is loaded and the CD will unload and move to the CD slot for easy removal (Fig. 1).

Radio display will show "ejecting" while it is being ejected.

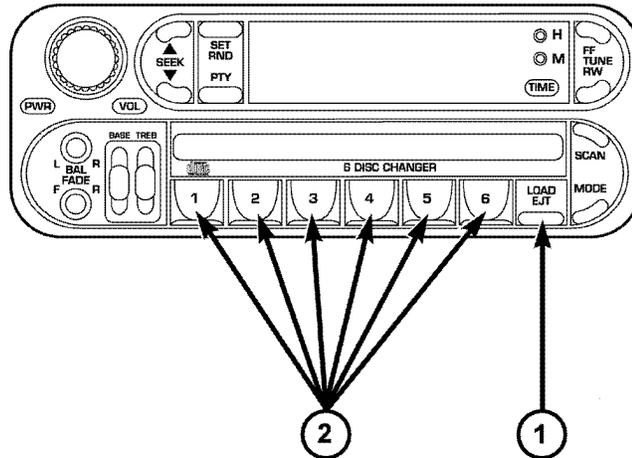

811ba5a2

**Fig. 1 RBQ RADIO FACEPLATE**

1 - LOAD/EJT BUTTON

2 - PRESET BUTTONS 1 THROUGH 6

### **ADDITIONAL INFORMATION**

You may either load or eject CD's with the radio and ignition OFF using the procedure above.

If the CD player is empty, while the ignition is in the ACCY. or RUN position, if a CD is inserted into the CD slot it will automatically be loaded into one of the 6 positions. This will only occur for the first CD loaded into an empty CD player.

If you load a CD with the ignition ON and the radio OFF, the display will show the time of day. If you load a CD with the ignition OFF, the display will show the time of day for about 5 seconds, then go out.

If you load a CD with the ignition ON and the radio ON, the unit will switch from radio mode to CD mode and begin to play the CD being loaded. The display will show the CD number, the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

If you have ejected a CD and have not removed it from the CD slot within 15 seconds, it will be reloaded. If the CD is reloaded, the radio will begin to play the reloaded CD. If the CD is removed from the CD slot and there are other CD's in the radio, the radio will play the next CD. If the CD is removed and there are no other CD's in the radio, the radio will return to AM or FM mode whichever was previously in use.

### **POLICY:**

Information Only.