



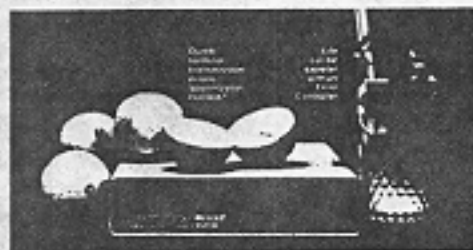

MICOM Instamux470
 MULTIPLEXING LINE DRIVER
 MODELS M474 and M478
 USER'S MANUAL


Stock Number 800-1108

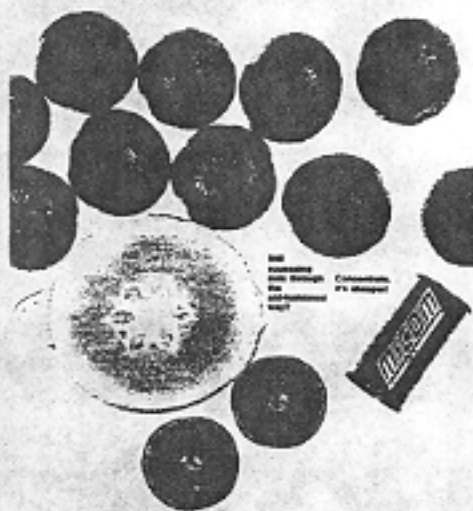

MICOM

MICOM Instamux470
MULTIPLEXING LINE DRIVER
MODELS M474 and M478
USER'S MANUAL

Stock Number 800-1108

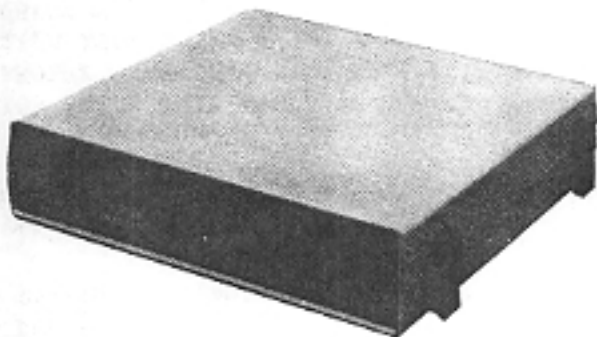

WARNING

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

If radio frequency interference is encountered after installation of the equipment, necessary corrective measures are required to reduce this interference. Information about recommendations for such measures can be obtained from the manufacturer. Contact MICOM Corporate Headquarters for assistance.

October 1982

Table of Contents

Topic	Page
INTRODUCTION	HOW TO USE THIS MANUAL Intro-1 INTRODUCING THE Instamux470 Intro-1 LOCAL DATA COMMUNICATION Intro-2 APPLICATION Intro-3
SECTION 1	DO-IT-YOURSELF INSTALLATION AND OPERATION 1-1 GETTING READY TO USE SECTION 1 1-1 UNPACKING AND INSPECTING FOR DAMAGE 1-3 Your Unit Should Arrive in Good Condition 1-3 In Case of Damage 1-3 SELECTING A LOCATION FOR YOUR Instamux470 1-4 GETTING TO THE HEART OF YOUR Instamux470 1-5 For Standalone Units 1-5 For Rack-Mount Units 1-6 SETTING CONFIGURATION SWITCHES 1-8 YOUR Instamux470 POWER SUPPLY 1-12 CONNECTING YOUR Instamux470 AND CHECKING FOR PROPER OPERATION 1-13 INDICATOR INTERPRETATION 1-18
SECTION 2	SYSTEM TESTING AND CONFIGURATION DETAILS 2-1 HOW TO DETECT AND ISOLATE FAULTS 2-1 Use of the Loopback Switch 2-1 Problem Checklist 2-3 8-CHANNEL CONFIGURATION 2-4 FIELD UPGRADE PROCEDURE (4- TO 8-CHANNEL) 2-5 TRANSMISSION RANGES 2-8 YOUR MICOM EQUIPMENT COMES WITH A WARRANTY 2-9 HOW TO GET YOUR EQUIPMENT FIXED BY MICOM CUSTOMER SERVICE 2-9
APPENDIXES	A CABLE WIRING A-1 B TECHNICAL SPECIFICATIONS B-1 C SYSTEM WIRING CONSIDERATIONS C-1
INDEX	SUBJECT INDEX Index-1

List of Figures

Number		Page
Intro-1	Models M474 and M478 Application	Intro-3
1-1	Instamux470 Dimensions	1-4
1-2	Standalone Unit	1-5
1-3	Rack-Mount Kit Installation, Steps 1 and 2	1-6
1-4	Rack-Mount Kit Installation, Steps 3 and 4	1-7
1-5	Instamux470 Switch Group Locations	1-8
1-6	Power Supply on Instamux470 Base Module	1-12
1-7	External Loopback Connection	1-14
1-8	End View of 4-Wire Non-Twisted Pair Cable	1-15
1-9	Back-To-Back Instamux470 Connection	1-16
1-10	Instamux470 Terminal Block Connection to Communications Line	1-16
1-11	Location of Indicators on Instamux470 Base Module	1-18
2-1	Location of Test Switch	2-1
2-2	Aggregate Digital Loopback Data Flow	2-2
2-3	8-Channel Configuration	2-4
2-4	Installing LED Strip into LED Block	2-5
2-5	Expansion Module Connections and Screw Locations	2-6
2-6	8-Channel Model M478 Rear View	2-7
A-1	DTE Extension Cable	A-1
A-2	Communication Line	A-1
B-1	Control Input/Output Diagram	B-2
C-1	Exchange Cable	C-1

List of Tables

Number		Page
1-1	Installation Questions	1-1
1-2	Installation Preparation Checklist	1-2
1-3	Instamux470 Switch Settings	1-9
1-4	Initial Display	1-13
1-5	Back-To-Back Connection Display	1-17
1-6	Indicator Interpretation	1-19
2-1	Cabling and Performance Specifications	2-8